


## Operating the CD Changer (Optional for SE)

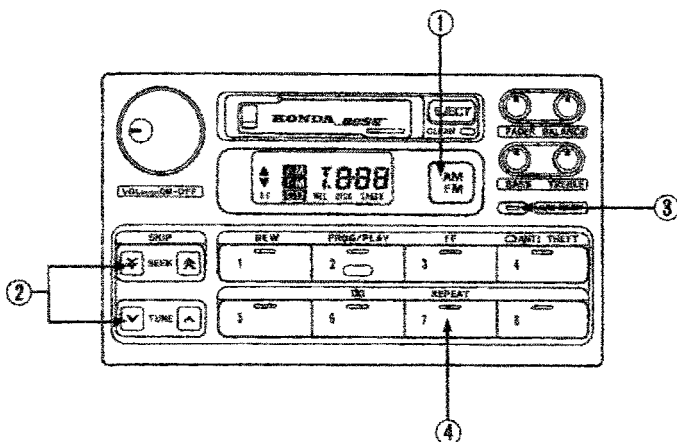

A trunk-mounted Compact Disc changer is available for your car. It holds up to six discs, providing several hours of continuous programming. You operate the CD changer with the same controls used for the radio and cassette player.

Load the desired CD's in the magazine and load the magazine in the changer according to the instructions that came with the unit.

To operate the CD changer, the ignition key must be in the ACCESSORY (I) or ON (II) position.

If you are listening to a cassette tape, eject it before playing a CD.

### ① AM/FM Button


Press the AM/FM button until "CD" appears on the display. Once in the CD mode, the system will start to play the first track of the first disc in the magazine.

When that disc ends, the next disc in the magazine is loaded and played.

After disc 6 has completed, the system will return to disc 1. To make your own disc selection, push one of the first six preset buttons. Your selection will appear in the display and start playing.

(cont'd)

# Stereo Sound System (cont'd)

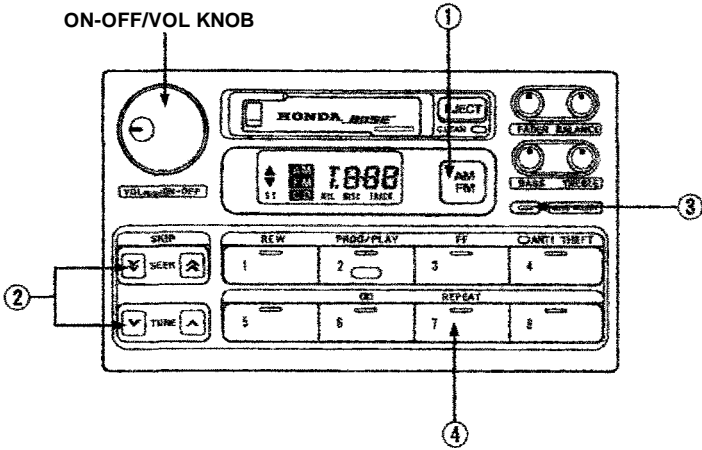

## ② SEEK/TUNE Bar

You can use the SEEK bar or TUNE bar while a disc is playing to select passages and change tracks.

To move rapidly within a track, press and hold the  $\wedge$  side of the TUNE bar to move forward or the  $\vee$  side to move backward. This continues until you release the bar.

Each time you press the  $\wedge$  side of the SEEK bar, the system skips forward to the beginning of the next track on that CD. Press the  $\vee$  side to skip backward to the beginning of the current track.

If you press  $\vee$  again, the system skips backward to the beginning of the previous track.

## ③ Auto Select Button

You can get the CD player to randomly select tracks by pressing the AUTO SELECT button. The indicator in the button lights as a reminder. With this active, the system selects and plays the tracks randomly, rather than sequentially, on each disc. When the system has played all the tracks on that disc, it loads the next disc and starts to play it randomly. The system continues to select and play tracks randomly on each of the six discs until you press the AUTO SELECT button again.

---

#### ④ Repeat Button (REPEAT)

If you push the REPEAT button, the system will continuously play the track you are listening to. The light in the button stays on as a reminder.

- If you change modes to radio or tape while a CD is playing, then change back to CD mode, the same disc and track will play.
- If you turn off the system while a CD is playing, either with the ON-OFF/VOL knob or by turning off the ignition, the system will begin at the same disc and track when you turn it back on.
- If you try to select an empty slot in the magazine, the system will select and play the first track of the next disc in the magazine.

To return to the radio function, press the AM/FM button.

(cont'd)

## Stereo Sound System (cont'd)

---

### CD Error Indications

If you see an error indication on the display, find the cause in the chart to the right. If you cannot clear the error indication, take the car to your Honda dealer.

Indication	Cause	Solution
E-01	Disc-changer malfunction.	Consult Honda dealer.
E-02	Disc is in changer mechanism.	Press the magazine eject button, and insert an empty magazine.
E-03 E-04 E-05	Disc-changer malfunction.	If the code disappears within a few seconds, unit is OK. If it does not, consult your Honda dealer.
E-06	Disc-changer malfunction.	Press the magazine eject button and pull out the magazine, check for error indication. Insert the magazine again. If the magazine can not be pulled out, consult your Honda dealer.
E-07	CD Magazine ejection impossible.	Press the magazine eject button. If the magazine does not eject, consult your Honda dealer.
---H	High temperature.	Will disappear when the temperature returns to normal.
E-EE	Misconnection or disconnection of CD changer.	See your Honda dealer.
---	No CD magazine in the CD changer.	Insert CD magazine.

---

## **Entering the Security Code for the Anti-theft Radio (US: EX/SE, Canada: EX-R/SE)**

The Honda anti-theft radio will not operate if the radio is stolen. Even if the radio is electrically reconnected, it will be inoperable unless a five-digit security code is entered.

The code for your radio is printed on each of the two cards that came with your radio. Keep these cards in a secure place away from the car. The radio cannot be reprogrammed without the code.

- Enter the five-digit code using the preset station selector buttons. The radio must be on and the word "Code" must be in the display.
- When entering the five-digit code, be sure to complete the number sequence even if an error was made. For instance if the code number is 43215 and 42 was mistakenly entered for the first two numbers instead of 43, continue entering 215. A beep will sound after five digits are entered.
- The word "Code" will appear in the display.
- Re-enter the correct code number sequence. The word "Code" will no longer appear, and the radio should resume normal operation.
- If the correct code is not entered in three successive tries, the radio will not accept entry at this time. You must wait one hour with the radio ON to re-enter the correct code.

If the voltage supply is interrupted and reconnected, the word "Code" will appear in the radio's display and the radio will not work. When your car requires electrical repairs, the code number must be re-entered for radio operation.