

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold.

This owner's manual is for vehicles sold in the United States.

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Contents

➤ Safe Driving P. 4

Safety Labels P. 4

➤ Instrument Panel P. 6

Indicators P. 6

Gauges and Displays P. 9

➤ Driving P. 10

Before Driving P. 10

When Driving P. 11

Refueling P. 16

➤ Maintenance P. 19

Maintaining the Fuel System P. 19

Maintenance Minder™ P. 20

Maintenance Under the Hood P. 22

Replacing Light Bulbs P. 23

➤ Handling the Unexpected P. 25

Tools P. 25

If a Tire Goes Flat P. 26

Fuel Leaks P. 37

Indicator, Coming On/Blinking P. 38

Fuses P. 39

➤ Information P. 42

Specifications P. 42

Fuel System P. 44

Authorized Manuals P. 45

Safe Driving P. 4

Instrument Panel P. 6

Driving P. 10

Maintenance P. 19

Handling the Unexpected P. 25

Information P. 42

Introduction

Your vehicle runs on compressed natural gas (CNG), a highly pressurized version of the same clean-burning natural gas used in many homes and businesses.

Your vehicle operates and performs like a gasoline-powered vehicle. However, there are a few differences you should be aware of. In addition to reading your vehicle's owner's manual, please read this supplement carefully to understand the operation and unique features of your vehicle.

You will find important safety information in this supplement and in the owner's manual. This information alerts you to potential hazards that could hurt you or others. Please read it carefully.

CNG (Compressed Natural Gas), Your Vehicle's Fuel

The main component of CNG (Compressed Natural Gas) is methane. It is a highly flammable colorless gas that is used in home appliances such as kitchen stoves and water heaters.

The CNG in your vehicle is stored under high pressure. The system is designed to hold gas at the maximum of 3,600 psi/24,800 kPa, and you should never smell gas or hear a hissing sound unless you are refueling. If you smell gas or hear a hissing sound at any other time, shut down the CNG system immediately.

If a Fuel Leak is Detected P.37

Safety Standards of the Fuel Tank

Your vehicle's fuel tank meets the safety standards of NGV-2/NFPA-52/DOT NHTSA FMVSS 304.

Fuel Quality and Home Refueling

In order to insure that your Civic Natural Gas vehicle receives CNG fuel with quality equal to or above the NFPA-52 and SAE J1616 fuel standards, Honda only recommends that your vehicle be refueled at a public commercial-grade CNG refueling station. Public stations offer an approximately five minute refueling time, and the assurance of natural gas quality meeting NFPA and SAE standards.

Public refueling stations use commercial quality filtering and drying equipment that helps to assure your vehicle will only be refueled with automotive grade CNG, meeting the NFPA and SAE standards. Due to the nature of home natural gas supplies from gas companies, even with filtering and drying equipment, it is possible to introduce moisture into your vehicle's CNG tank and fueling system, possibly resulting in damage to the system. Moisture damage can require inconvenient and costly repairs.

Due to the wide variation of natural gas quality for home use, Honda does not recommend the use of home refueling at this time. If you choose to use a home refueling device, you should consult with the equipment manufacturer and the local natural gas contractor that installs the equipment. Ask them to evaluate the quality of the natural gas at the location the refueling equipment will be installed. They may recommend additional filtering and drying equipment, and a schedule for maintaining

this equipment to insure delivery of natural gas that meets the NFPA and SAE standards of fuel quality. It is important to understand the quality of fuel not just when it is evaluated, but the range of quality, particularly moisture content, from the natural gas provider.

The choice to use a slow fill or home refueling equipment, evaluation of the suitability of using this equipment, installation and proper maintenance of the equipment, and any damage associated with the use of this equipment, is the sole responsibility of you, the owner.

If your vehicle needs repairs, is examined by an authorized Honda Civic Natural Gas automobile dealer, and is found to have contamination in the fuel system or damage to the fuel system as a result of using sub standard natural gas, your warranty claim for repairs may be denied.

CNG Label Locations

These labels are in the locations shown. They give instructions and warnings on the CNG fuel system. If a label comes off or becomes hard to read, contact a dealer for a replacement.

Hood

⚠ WARNING

THIS VEHICLE IS FUELED BY COMPRESSED NATURAL GAS STORED AT HIGH PRESSURE. DO NOT ATTEMPT TO SERVICE FUEL SYSTEM WITHOUT PROPER SYSTEM DEPRESSURIZATION. TO AVOID RISK OF INJURY, THIS VEHICLE SHOULD ONLY BE SERVICED BY A QUALIFIED TECHNICIAN. CNG TANK PRESSURE RELIEF DEVICE WILL VENT AT 103.0 (217°F). DO NOT PARK OR SERVICE VEHICLE NEAR ANY SOURCE OF EXCESSIVE HEAT OR OPEN FLAME. DO NOT USE PAINT OVEN FOR ANY PAINT REPAIRS.

SYSTEM SERVICE PRESSURE : 24.8MPa (3600PSIG)
 BUILT BY : HONDA MFG. OF INDIANA, LLC
 CNG TANK EXPIRATION DATE :
 TOTAL WATER VOLUME OF CNG TANK: 26.4 GAL. (100 L)
 INSPECT BY OR 36K MI. AND EVERY 3 YR. OR 36K MI. THEREAFTER.

First Inspection
CNG Tank Expiration Date

CNG Tank

THIS CONTAINER SHOULD BE VISUALLY INSPECTED AFTER A MOTOR VEHICLE ACCIDENT OR FIRE AND AT LEAST EVERY 36 MONTHS OR 36,000 MILES, WHICHEVER COMES FIRST, FOR DAMAGE AND DETERIORATION.	NGVFUEL TANKS 3600PSIG/70" F AL1847-0004 P/W 122325 01-2012 -40° F TO 180° F NGV2-00 DOT 4F QPR 571_304 TYPE 3 CONTAINER	CNG ONLY - DO NOT USE AFTER 01/2027 IF THERE IS A QUESTION ABOUT THE PROPER USE, INSTALLATION, OR MAINTENANCE OF THIS CONTAINER, CONTACT: STRUCTURAL COMPOSITES INDUSTRIES, 325 ENTERPRISE PL., POMONA, CA 91768 TEL: (909) 594-7777, SERVICE PRESSURE 24.8MPa (3600PSIG) MANUFACTURED IN [] DOT FMVSS 304 FOR USE ONLY WITH [] CONTAINER MANUFACTURER'S APPROVED PRESSURE RELIEF DEVICES VALVES.
---	--	---

CNG Tank Production Date

Fuel Receptacle Lid

⚠ WARNING

Do not fast fill this tank if outside temperature is below -4°F(-20°C). Resulting damage may cause CNG leaks.

CNG FUELED VEHICLE
 SERVICE PRESSURE 24.800 KPA(3600PSIG)
 CNG TANK EXPIRATION DATE :

INSPECT BY OR 36K MI. AND EVERY 3 YR. OR 36K MI. THEREAFTER.
 SEE INSTRUCTIONS ON FUEL CONTAINER FOR INSPECTION AND SERVICE LIFE.

First Inspection
CNG Tank Expiration Date

Trunk Lid

⚠ DANGER

THIS CYLINDER CONTAINS FLAMMABLE NATURAL GAS UNDER EXTREMELY HIGH PRESSURE. DEATH OR SERIOUS INJURY CAN RESULT FROM IMPROPER INSTALLATION, LACK OF INSPECTION AND MAINTENANCE, OVER-FILLING, FORTUITOUS OR DAMAGE.

1. This cylinder is intended for use on this vehicle to store compressed natural gas under fuel. Do not use for other purposes.
2. Do not attempt to remove this cylinder from the vehicle, or to service, vent, or restrain this cylinder or any attached parts unless you are specifically trained to do so. The cylinder contains natural gas stored under a high or extremely high pressure and may cause a violent release of energy which could injure the user or bystanders. Removal, servicing, venting and disposal should only be done by a qualified technician.
3. The maximum service pressure for this cylinder is 3,600 psi (24.8 MPa) compressed to 20 °F (-7 °C). However, to ensure that the maximum filling pressure exceed 4,500 psi.
4. Do not attempt to use the cylinder until it has been inspected by a qualified technician. If you must use the cylinder or any part of the fuel system in a leaking, do not use the cylinder to go into an enclosed area such as a garage. Immediately have the vehicle serviced by a qualified technician.
5. If this vehicle is involved in an accident, fire, or if physical damage is observed in this cylinder or its attachments, do not park the vehicle in an enclosed area such as a garage. Immediately have the vehicle serviced by a qualified technician. Do not fill the cylinder until the vehicle has been serviced.
6. Do not expose cylinder to temperatures in excess of 180 Degree Fahrenheit.
7. Do not expose cylinder to corrosive fluids such as acids and bases.
8. THIS CYLINDER MUST BE INSTALLED AND SERVICED BY ASE-CERTIFIED TECHNICIAN OR ASSOCIATE WITH NATIONAL FIRE PROTECTION ASSOCIATION STANDARD 62 FOR COMPRESSED NATURAL GAS VEHICLE FUEL SYSTEMS AND ALL APPLICABLE FEDERAL, STATE AND LOCAL REGULATIONS, TESTS AND APPROVED VALVES AND SAFETY RELIEF DEVICES ARE REQUIRED.
9. See other warnings prominently affixed to this vehicle.
10. Do not remove or paint over this label.
11. This cylinder must be inspected by a qualified technician every three years.

127488

CNG Label

■ **CNG tank expiration and production dates:**

Are indicated on the labels. Have an authorized dealer or certified NGV technician inspect the fuel tank every three years, or 36,000 miles, whichever comes first, and replace it 15 years from its production date. Do not use an expired tank or reuse the old tank for other purposes.

After a Collision

Have the fuel tank inspected by an authorized dealer or certified NGV technician.

Indicators

Indicator	Name	On/Blinking	Explanation	Message
	<p>Malfunction Indicator Lamp</p>	<ul style="list-style-type: none"> • Comes on when you turn the ignition switch to ON II, and goes off either when the engine starts or after several seconds if the engine did not start. If "readiness codes" have not been set, it blinks five times before it goes off. • Comes on if there is a problem with the emissions control system. • Comes on if there is a problem with the fuel system. • Blinks when a misfire in the engine's cylinders is detected. 	<ul style="list-style-type: none"> • Readiness codes are part of the on board diagnostics for the emissions control systems. <ul style="list-style-type: none"> ➤ Testing of Readiness Codes - refer to your Owner's Manual Information Section • Comes on while driving - Have your vehicle checked by an authorized Honda Civic Natural Gas dealer as soon as possible. • Blinks while driving - Stop in a safe place where there are no flammable objects. Stop the engine for 10 minutes or more, and wait for it to cool down. Then, take the vehicle to a dealer. <ul style="list-style-type: none"> ➤ If the Malfunction Indicator Lamp Comes On or Blinks P.38 	
	<p>Shift Lever Position Indicator</p>	<ul style="list-style-type: none"> • Indicates the current shift lever position. 	<ul style="list-style-type: none"> ➤ Shifting P. 14 	<p>—</p>

Indicator	Name	On/Blinking	Explanation	Message
	<p>Low Fuel Indicator</p>	<ul style="list-style-type: none"> • Comes on when you turn the ignition switch to ON [II], and goes off when the engine starts. • Comes on when the fuel reserve is running low. • Blinks if there is a problem with the fuel gauge. 	<ul style="list-style-type: none"> • Comes on - Refuel your vehicle as soon as possible. <ul style="list-style-type: none"> ▶ When the outside air gets very cold [below 25°F (- 4°C)], the pressure of the natural gas inside the tank goes down, and the fuel gauge may indicate that you have less fuel than what actually remains in the tank. Keep this in mind if the low fuel indicator comes on while you are driving in cold weather. • Blinks - Have your vehicle checked by an authorized Civic Natural Gas dealer as soon as possible. 	


intelligent Multi-Information Display (i-MID) Warning and Information Messages

The following messages appear only on the i-MID. Press the  (display/information) button to see the message again with the system message indicator on.

Message	Condition	Explanation
	<ul style="list-style-type: none"> Appears when the fuel receptacle lid is open. 	<p> Fuel Gauge P. 9</p>

Gauges

Fuel Gauge

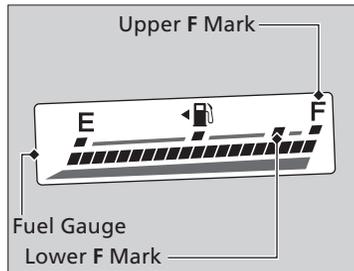

Displays the amount of fuel left in the fuel tank.

The lower **F** mark indicates a full tank at a fill pressure of 3,000 psi.

The upper **F** mark indicates a full tank at a fill pressure of 3,600 psi.



If the fuel receptacle lid is open, the fuel gauge blinks when you turn the ignition switch to ON **II**.

► It stops blinking when you close the lid.

➤ **How to Refuel** P. 16

Fuel Gauge

The quantity of fuel remaining in the tank is calculated based on the pressure and temperature of the natural gas in the fuel tank.

The gauge, average fuel, range, and instant fuel economy show more or less than the actual amount. The tank temperature, fill method, and ambient conditions may affect the pressure and temperature of the natural gas.

You can choose when to reset the average fuel economy.

➤ **Customized Features** P. 90, Owner's Manual

Refueling a small amount of gas may not trigger trip A and the average fuel economy to reset.


Storing Cargo in the Trunk

Do not put large, heavy or pointed objects in the trunk. When storing items, properly secure them so that they do not move around while driving. The fuel tank is located in the trunk, and although a partition separates the tank from the cargo space, large items or loose items can damage the fuel tank and fuel system components.

Towing a Trailer

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

Starting the Engine

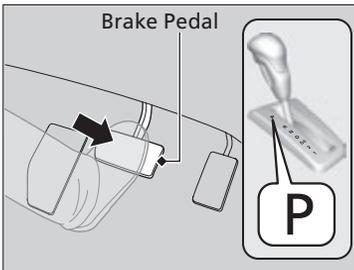

1. Make sure the parking brake is applied.

2. Check that the shift lever is in **P**, then depress the brake pedal.

▶ Although it is possible to start the vehicle in **N**, it is safer to start it in **P**.

Starting the Engine


Keep your foot firmly on the brake pedal when starting the engine.

The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 meters).

When starting the engine in cold weather, turn off all electrical accessories (the lights, heating and cooling system, and rear defogger) in order to reduce battery drain.

If you live in a region where winter is extremely cold, an engine block heater will improve starting and warming of the engine. If temperatures consistently below -22°F (-30°C) are expected, the coolant mixture should be changed to a higher concentration to prevent freezing. Consult a dealer for details.

If the exhaust system sounds abnormal or you can smell exhaust gas inside the vehicle, have your vehicle checked by a dealer. There may be a problem with the engine or exhaust system.

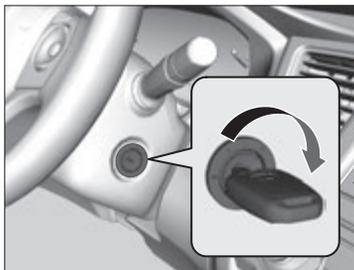

3. Turn the ignition switch to ON **II** without depressing the accelerator pedal.
 - ▶ You may hear a click from the in-tank fuel shut-off valve.
4. Turn the ignition switch to START **III** without depressing the accelerator pedal.

Starting the Engine

Do not hold the key in START **III** for more than 15 seconds.

- If the engine does not start right away, wait for at least 10 seconds before trying again.
- If the engine starts, but then immediately stops, wait at least 10 seconds before repeating step 4 while gently depressing the accelerator pedal. Release the accelerator pedal once the engine starts.

The immobilizer system protects your vehicle from theft. If an improperly coded key (or other device) is used, the engine's fuel system is disabled.

Immobilizer System P. 125, Owner's Manual

After extended storage: If you ever parked your vehicle for an extended period, open the trunk for several minutes before starting the engine to allow any natural gas vapors that may have accumulated to dissipate.

Automatic Transmission

■ Creeping

The engine runs at a higher idle speed and creeping increases.
Keep the brake pedal firmly depressed when stopped.

■ Kickdown

Quickly depressing the accelerator pedal while driving uphill may cause the transmission to drop to a lower gear, unexpectedly increasing vehicle speed.
Depress the accelerator pedal carefully, especially on slippery roads and curves.

Shifting

Change the shift position in accordance with your driving needs.

■ Shift lever positions

Release Button




- P** **Park**
Used when parking or starting the engine
- R** **Reverse**
Used when reversing
- N** **Neutral**
Used when idling
- D** **Drive**
Used for normal driving (gears change between 1st and 5th automatically)
- D3** **Drive (D3)**
Used when going up or down hills
- 2** **Second**
Used to increase engine braking (the transmission is locked in 2nd gear)
- 1** **First**
Used to further increase engine braking (the transmission is locked in 1st gear)

⊗ Shifting

You cannot turn the ignition switch to LOCK **0** and remove the key unless the shift lever is in **P**.

The vehicle may move forward very slightly even in **N** while the engine is cold. Depress the brake pedal firmly and, when necessary, apply the parking brake.

Shift Lever Operation

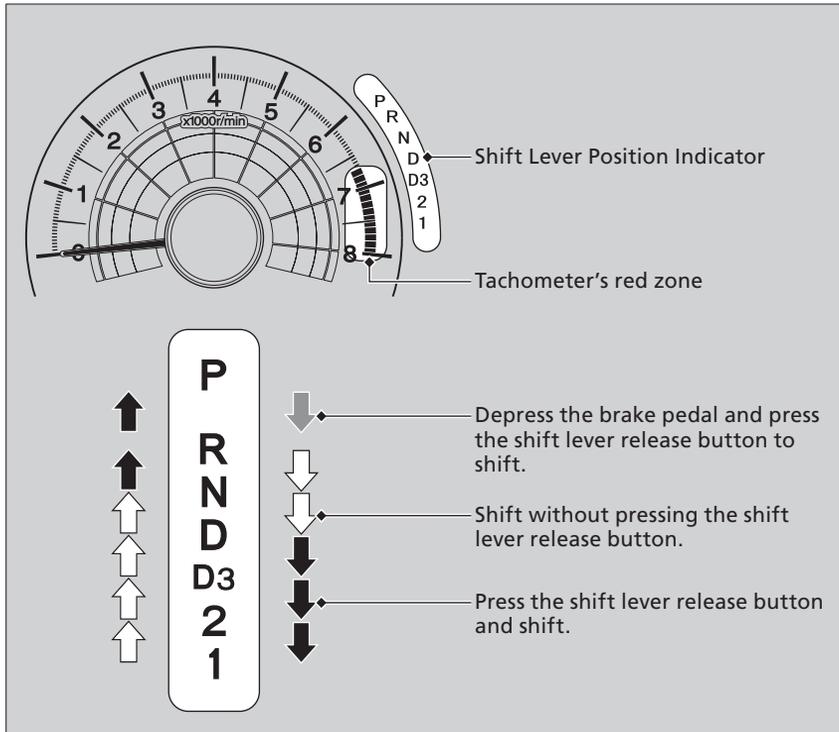

Shift Lever Operation

NOTICE

When you change the shift lever from **D** to **R** and vice versa, come to a complete stop and keep the brake pedal depressed.

Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Use the shift lever position indicator to check the lever position before pulling away.

Whichever position the shift lever is in when driving, a blinking **D** indicator indicates a transmission problem.

Avoid sudden acceleration and have the transmission checked by a dealer as soon as possible.

The fuel supply may be cut off if you drive at engine speeds in or over the tachometer's red zone (engine speed limit). If this happens, you may experience a slight jolt.

It may not be possible to operate the shift lever if the brake pedal is applied while the shift lever release button is held down. Depress the brake pedal first.

Fuel Information

■ Only fuels that can be used

NFPA-52 and SAE J1616 standards

Use of a fuel that does not meet these standards can cause a decrease in engine power and damage the emission controls.

■ Fuel tank capacity:

Slow filling

6.96 gasoline gallon equivalent (3,000 psi)

7.77 gasoline gallon equivalent (3,600 psi)

Fast filling

5.84 gasoline gallon equivalent (3,000 psi)

6.51 gasoline gallon equivalent (3,600 psi)

How to Refuel

There are two methods of refueling:

■ Fast filling

It takes about three to five minutes to fill up the fuel tank. This method is usually available at stations designed to refuel natural gas vehicles.

During fast filling, the natural gas is warmed, causing the pressure in the tank to rise and reduces the amount of fuel you can put in.

■ Slow filling

It takes about an hour and a half per GGE (Gasoline Gallon Equivalent) to fill up the fuel tank. This method can be done using a vehicle refueling appliance.

➤ **Fuel Quality and Home Refueling** P. 3

☒ Fuel Information

For information on the locations of the CNG fuel stations:

49 States: Visit either http://www.afdc.energy.gov/afdc/fuels/natural_gas_locations.html, or www.cngprices.com.

Or call Gas Vehicle Coalition at (202) 824-7360.

California: Visit www.cngvc.org.

The location of the CNG pump can vary from station to station, may not be clearly marked, or be readily accessible during certain hours. It is recommended that you call the station (the number should be displayed with the address information) to verify the location and availability of the CNG pump before you arrive.




☒ How to Refuel

⚠ WARNING

Compressed natural gas is flammable and highly explosive. You could be killed or seriously injured if leaking natural gas is ignited.

If you suspect a leak, have your vehicle immediately inspected and repaired by an authorized Honda Civic Natural Gas dealer.

Refueling Procedure Example

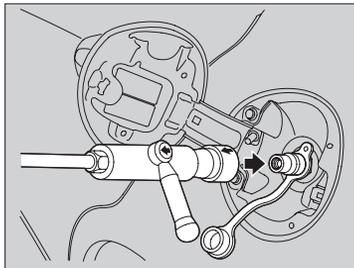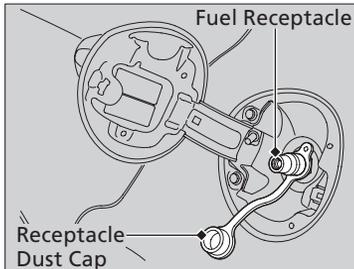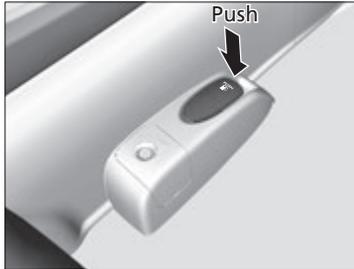

1. Stop your vehicle with the service station pump on the left side of the vehicle in the rear.
2. Turn off the engine.
3. Push on the fuel receptacle lid release handle at the foot of the driver's seat.
 - ▶ The fuel receptacle lid opens.
4. Remove the receptacle dust cap from the fuel receptacle.
 - ▶ Clean off any dirt or debris around the fuel receptacle.
5. Securely connect the CNG fill nozzle to the fuel receptacle.

How to Refuel

NOTICE

Using fast fill equipment at temperature below -4°F (-20°C) may damage the fuel system, potentially causing a leak.


Always observe all safety recommendations and operating instructions on the refueling equipment.

Use a fuel filler nozzle that complies with ANSI/AGA NGV-1-2008 standards.

The CNG filler nozzle mechanism may vary by service station. Each nozzle standard has different maximum pressure:

- P24 — 2,400 psi (16,500 kPa)
- P30 — 3,000 psi (20,700 kPa)
- P36 — 3,600 psi (24,800 kPa)

The refueling steps shown in this manual are the typical fast fill refueling procedure. You may need to go through different steps at a station with slow fill equipment or other types of equipment. Always follow the instructions provided on site.

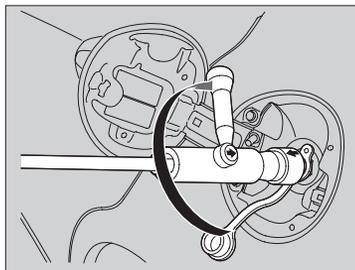

6. Turn the lever until the arrows on the nozzle point to each other, then follow the instructions on the refueling station to begin refueling.
 - While refueling, you may hear a chattering sound. This is normal.
7. Refueling will stop automatically when the tank is full. Follow the instructions on the refueling station to turn it off.
8. Disconnect the CNG fill nozzle from the fuel receptacle by slowly turning the lever on the nozzle 180 degrees.
 - You may hear a brief hissing sound as a small amount of gas escapes, and may detect a slight gas odor. This is normal.
9. After filling, replace the receptacle dust cap on the fuel receptacle securely.
 - Shut the fuel receptacle lid by hand.

☒ How to Refuel

If you hear or see fuel/vapor leaking from the nozzle-receptacle connection, stop refueling immediately. Turn off the refueling station, remove the nozzle, reconnect it to the receptacle, and begin refueling again. Dirt or debris adhered to the inside of the fuel receptacle can cause a gas leak. Remove dirt or debris from the CNG filler nozzle with a clean, dry rag.

If it continues to leak, have an authorized CNG dealer inspect the sealing O-ring in the fuel receptacle. It may be missing, damaged, or worn.

If you are not sure how to operate the refueling station, ask for assistance.

Maintaining the Fuel System

Your vehicle's fuel system must be maintained and repaired by an authorized Civic Natural Gas dealer or a certified NGV technician. The fuel system has no user-serviceable parts, and its components must not be modified.

See instructions on fuel container for inspection and service life.

Service Pressure: 3,600 psi (24,800 kPa)

➤ **CNG Label Locations** [P. 4](#)

Indoor Vehicle Storage

If you store your vehicle indoors, make sure there is adequate ventilation. We recommend that you also install a natural gas leak detector.

» Maintaining the Fuel System


WARNING

Tampering with, or improperly maintaining the high-pressure fuel system can cause a dangerous condition in which you can be seriously hurt or killed.

Never attempt to modify the fuel system, and always have fuel system maintenance performed by an authorized Honda Civic Natural Gas dealer, or a qualified NGV technician.

Your vehicle displays engine oil life and maintenance service items on the intelligent multi-information display (i-MID) to show you when you should have a dealer do engine oil replacement and indicated maintenance service.

Refer to the important safety precautions and instructions in the Owner's Manual.

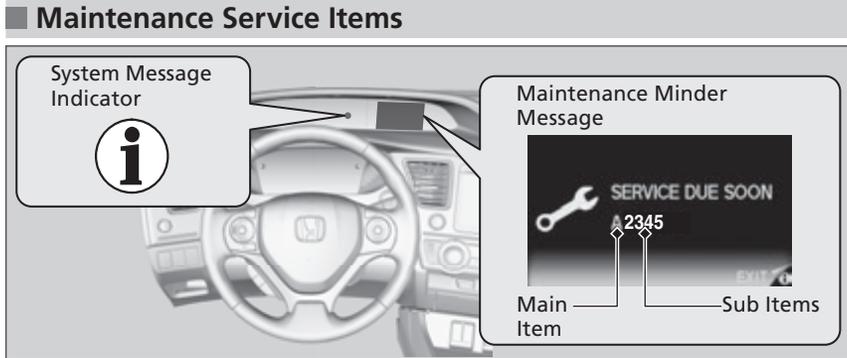

- ☒ Maintenance Service Items
- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
 - Inspect idle speed every 160,000 miles (256,000 km).
 - Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

CODE	Maintenance Main Items
A	<ul style="list-style-type: none"> • Replace engine oil^{*1}
B	<ul style="list-style-type: none"> • Replace engine oil^{*1} and oil filter • Replace fuel filter element (low pressure) • Drain fuel filter (high pressure) • Inspect front and rear brakes/service as necessary • Check parking brake adjustment • Inspect tie rod ends, steering gearbox, and boots • Inspect suspension components • Inspect driveshaft boots • Inspect brake hoses and lines (Including ABS/VSA) • Inspect all fluid levels and condition of fluids • Inspect exhaust system[#] • Inspect fuel lines and connections[#] • Check the expiration date for TRK bottle^{*2}

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"> • Rotate tires
2	<ul style="list-style-type: none"> • Replace air cleaner element^{*3} • Replace dust and pollen filter^{*4} • Replace fuel filter element (high pressure) • Inspect drive belt • Inspect valve clearance • Inspect fuel tank^{*5}
3	<ul style="list-style-type: none"> • Replace transmission fluid
4	<ul style="list-style-type: none"> • Replace spark plugs
5	<ul style="list-style-type: none"> • Replace engine coolant

*1: If a message **SERVICE** does not appear more than 12 months after the display is reset, change the engine oil every year.

*2: Models with tire repair kit

: See information on maintenance and emissions warranty.

*3: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*4: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

*5: If sub item 2 does not appear more than 36 months after the display is reset, inspect the fuel tank every three years.


See **CNG tank expiration and production dates** on page 5 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured.

Transmission Fluid

Automatic Transmission Fluid

Specified fluid: Honda ATF DW-1 (automatic transmission fluid)

Check the fluid level when the engine is at normal operating temperature.

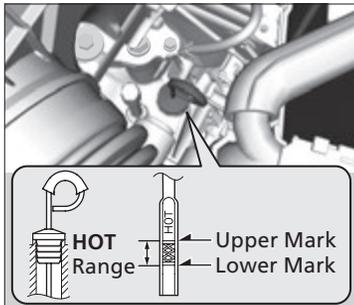

1. Park on level ground, and start the engine.
2. Wait until the radiator fan starts and then turn off the engine.
 - ▶ Perform step 3 after waiting for about 60 seconds (less than 90 seconds).
3. Remove the dipstick (yellow loop) from the transmission and wipe it with a clean cloth.
4. Insert the dipstick all the way back into the transmission securely, as shown in the image.
5. Remove the dipstick and check the fluid level.
 - ▶ It should be between the upper and lower marks in the **HOT** range.
6. If the level is below the lower mark, add fluid into the dipstick hole to bring it to the level between the upper and lower marks, and have your vehicle checked by a dealer immediately.

Automatic Transmission Fluid

NOTICE

Do not mix Honda ATF DW-1 with other transmission fluids.

Using a transmission fluid other than Honda ATF DW-1 may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission.

Any damage caused by using a transmission fluid that is not equivalent to Honda ATF DW-1 is not covered by Honda's new vehicle warranty.

NOTICE


Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Replacing Light Bulbs

High-Mount Brake Light Bulb

When replacing, use the following bulb.


High-Mount Brake Light: 21W

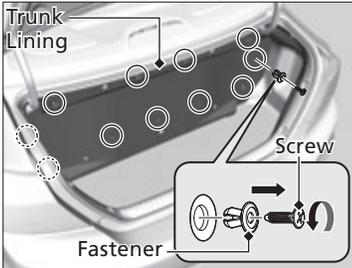

1. Open the trunk.
2. Remove the screw from the center of each trunk lining fastener, then remove the fasteners.




3. Pull the upper edge of the trunk lining down.

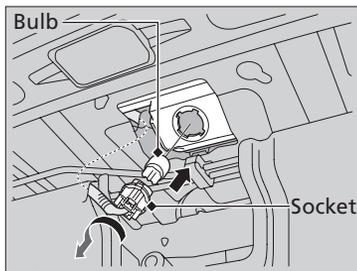

4. Turn the socket to the left and remove it.
5. Remove the old bulb and insert a new bulb.

Models with compact spare tire

Type of Tools

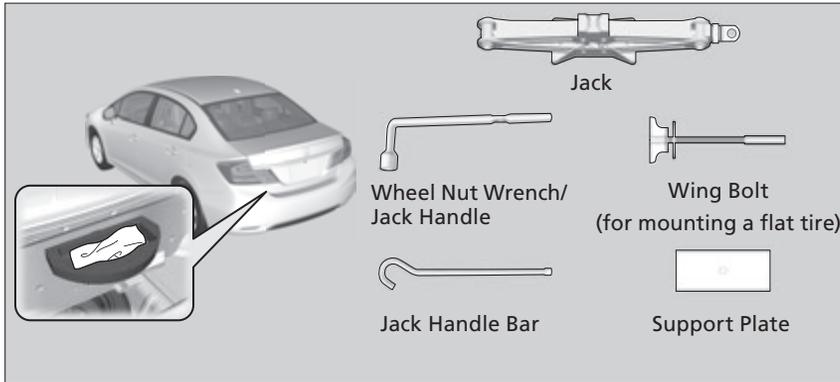

» Type of Tools

The tools are stored in the trunk.

If a Tire Goes Flat


Models with compact spare tire

Changing a Flat Tire


To change a flat tire, follow the instructions in the Owner's Manual.

To remove the spare tire, tools and the jack from the trunk and to store the flat tire, follow the instructions in this section.


Removing the Spare Tire, Tools and the Jack

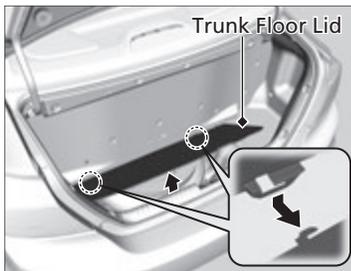


1. Open the trunk.
2. Remove the trunk floor lid.

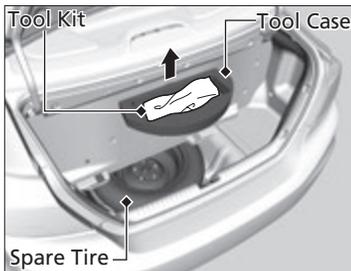



3. Take the tool case out of the spare tire.

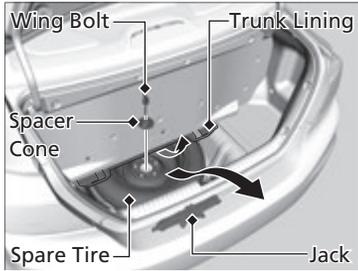

4. Unscrew the wing bolt and remove the spacer cone.
5. Take the spare tire out of its well.
 - ▶ Bend the lower part of the trunk lining upward to enlarge the opening.
6. Turn the jack's end counterclockwise to loosen it, then remove the jack.

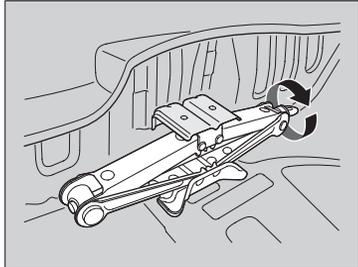

Storing a Flat Tire

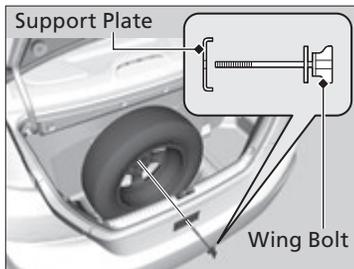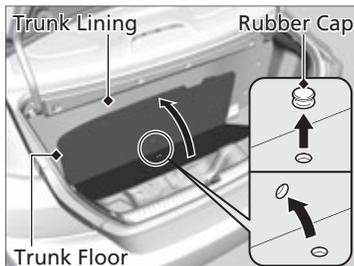

1. Open the trunk.
2. Raise the trunk floor and the lower part of the trunk lining.
3. Remove the rubber caps from the holes in the trunk floor and the trunk lining, then align both holes.
4. Place the flat tire straight up in the trunk, with the outside of the wheel facing forward.
5. Take the support plate and the wing bolt out of the tool kit. Put the plate on the wing bolt.
6. Insert the wing bolt through the hole in the center of the wheel and the trunk lining, then tighten the bolt.
7. Store the spacer cone and the spare tire wing bolt in the tool kit.

Storing a Flat Tire

⚠ WARNING

Loose items can fly around the interior in a crash and can seriously injure the occupants.

Store the wheel, jack, and tools securely before driving.

Models with tire repair kit


Temporarily Repairing a Flat Tire

This vehicle is not equipped with a spare tire. If the tire has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tire only has a small puncture, from a nail for instance, you can use the temporary tire repair kit so that you can drive to the nearest service station for a more permanent repair.

If a tire goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then stop in a safe place.

1. Park the vehicle on firm, level, and non-slippery surface and apply the parking brake.
2. Put the shift lever in **P**.
3. Turn on the hazard warning lights and turn the ignition switch to LOCK **0**.
 - ▶ When towing a trailer, unhitch the trailer.

Getting Ready to Temporarily Repair the Flat Tire

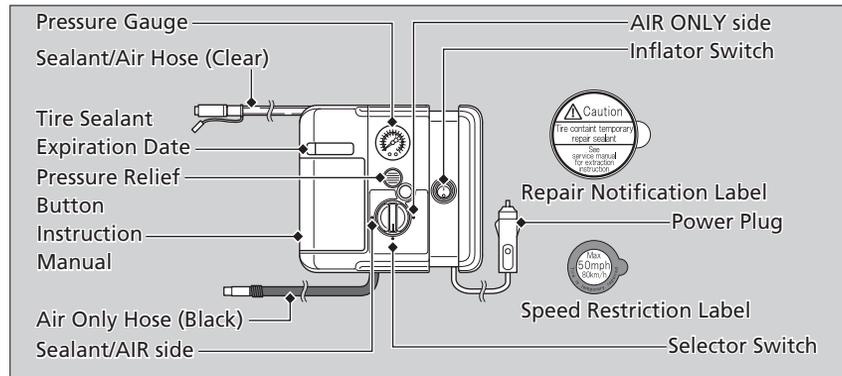

Temporarily Repairing a Flat Tire

The kit should not be used in the following situations. Instead, contact a dealer or a roadside assistant to have the vehicle towed.


- The tire sealant has expired.
- More than two tires are punctured.
- The puncture or cut is larger than 3/16 inch (4 mm).
- The tire side wall is damaged or the puncture is outside the tire contact area.

	When the puncture is:	Kit Use
	Smaller than 3/16 inch (4 mm)	Yes
Larger than 3/16 inch (4 mm)	No	

- Damage has been caused by driving with the tire extremely under inflated.
- The tire bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tire. If you remove it from the tire, you may not be able to repair the puncture using the kit.

Continued

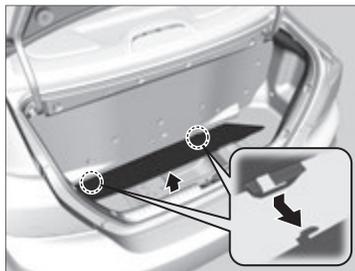

1. Remove the trunk floor lid.



2. Take the kit out of the case.


- Place the kit face up, on flat ground near the flat tire, and away from traffic. Do not place the kit on its side.

⊗ Getting Ready to Temporarily Repair the Flat Tire


When making a temporary repair, carefully read the instruction manual provided with the kit.

In cold temperatures, the sealant may not flow easily. In this situation, warm it up for five minutes before using.


Injecting Sealant and Air

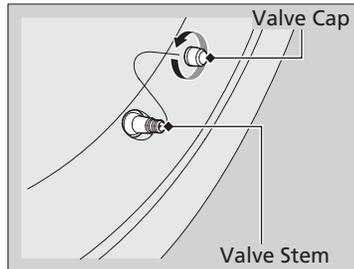

1. Remove the valve cap from the tire valve stem.

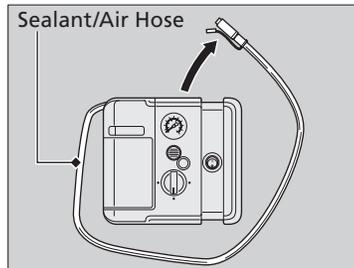

2. Remove the sealant/air hose from the packaging.

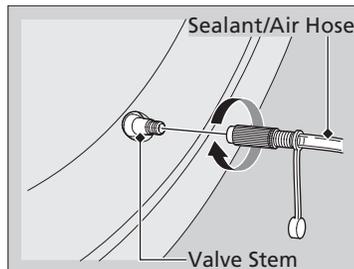

3. Attach the sealant/air hose onto the tire valve stem. Screw it until it is tight.

Injecting Sealant and Air




⚠ WARNING

Tire sealant contains substances that are harmful and can be fatal if swallowed.

If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately. For skin or eye contact, flush with cool water and get medical attention if necessary.

In cold temperatures, the sealant may not flow easily. In this situation, warm it up for five minutes before using.

The sealant can permanently stain clothing and other materials. Be careful during handling and wipe away any spills immediately.

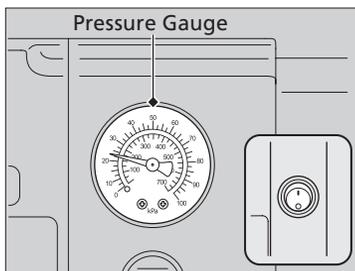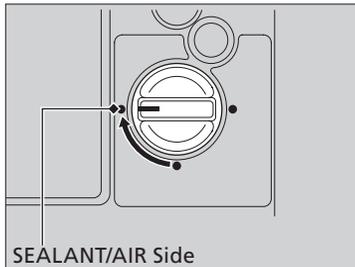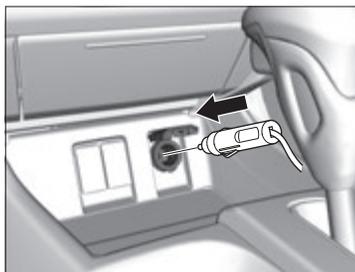

4. Plug in the compressor to the accessory power socket.
 - Be careful not to pinch the cord in a door or window.
5. Start the engine.
 - Keep the engine running while injecting sealant and air.
6. Turn the selector switch to **SEALANT/AIR**.

ⓘ **Carbon Monoxide Gas** P. 64, Owner's Manual

7. Press the inflator switch to turn on the compressor.
 - The compressor starts injecting sealant and air into the tire.
8. When the sealant injection is complete, continue to add air.
9. After the air pressure reaches 30 psi (210 kPa), turn off the kit.
 - To check the pressure, occasionally turn off the compressor and read the gauge.

ⓘ Injecting Sealant and Air

⚠ WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.



Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

NOTICE


Do not operate the tire repair kit compressor for more than 15 minutes. The accessory power socket and compressor can overheat and become permanently damaged.

Until the sealant injection is complete, the pressure shown on the pressure gauge will appear higher than actual. After the sealant injection is complete the pressure will drop and then begin to rise again as the tire is inflated with air. This is normal. To accurately measure the air pressure using the gauge, turn the air compressor off only after the sealant injection is complete.

If the required air pressure is not reached within 10 minutes, the tire may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.

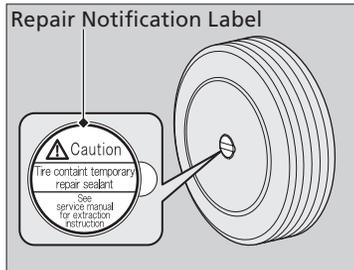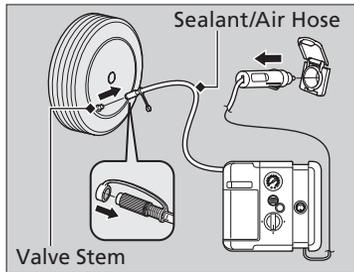

Distributing the Sealant in the Tire

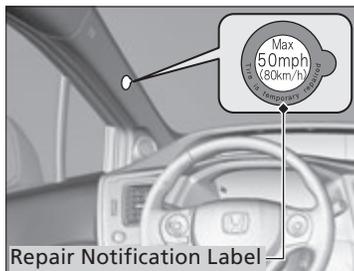

10. Unplug the power plug from the accessory power socket.
11. Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
12. Press the pressure relief button until the gauge returns 0 psi (0 kPa).
13. Apply the repair notification label to the flat surface of the wheel.
 - ▶ The wheel surface must be clean to ensure the label adheres properly.


1. Apply the speed restriction label to the location as shown.
2. Drive the vehicle for about 10 minutes.
 - ▶ Do not exceed 50 mph (80 km/h).
3. Stop the vehicle in a safe place.

Injecting Sealant and Air

See a Honda dealer for a replacement sealant bottle and proper disposal of an empty bottle.

Distributing the Sealant in the Tire

Stop and recheck the air pressure after every 10 minutes of driving as necessary until you reach the nearest service station where you are able to have the tire permanently repaired or replaced.

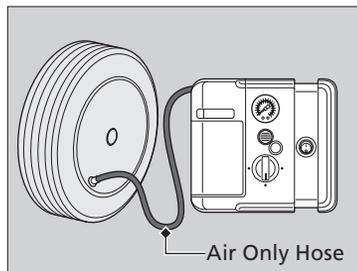

4. Attach the air only hose onto the tire valve stem. Screw it until it is tight.
 5. Turn the selector switch to **AIR ONLY**.
 - Do not turn the air compressor on to check the pressure.
- ✎ **Inflating An Under-inflated Tire** P. 35
6. If the air pressure is:
 - Less than 19 psi (130 kPa):
Do not add air or continue driving. The leak is too severe. Call for help and have your vehicle towed.
 - ✎ **Emergency Towing** P. 442, Owner's Manual
 - 30 psi (210 kPa) or more:
Continue driving for another 10 minutes or until you reach the nearest service station. Do not exceed 50 mph (80 km/h).
 - If the air does not go down after the 10 minute drive, you do not need to check the pressure any more.
 - Greater than 19 psi (130 kPa), but less than 30 psi (210 kPa):
Turn the air compressor on to inflate the tire until the tire pressure reaches 30 psi (210 kPa).
Then drive carefully for 10 more minutes or until you reach the nearest service station. Do not exceed 50 mph (80 km/h).
 - You should repeat this procedure as long as the air pressure is within this range.
 7. Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
 8. Repackage and properly stow the kit.

✎ Distributing the Sealant in the Tire




⚠ WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

■ Inflating An Under-inflated Tire

You can use the kit to inflate a non-punctured under-inflated tire.

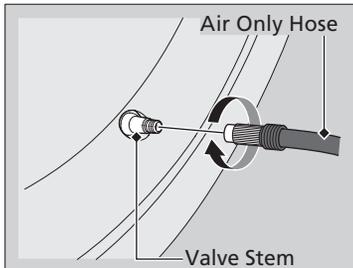
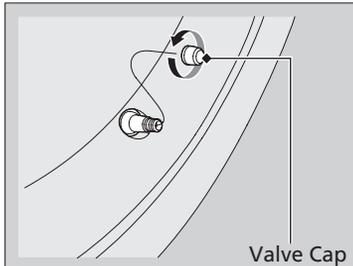
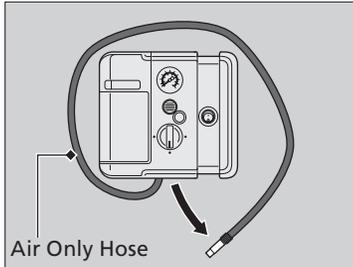


1. Remove the trunk floor lid.
 - ▶ **Getting Ready to Temporarily Repair the Flat Tire** P. 29
2. Remove the kit from the case.
 - ▶ Place the kit on flat ground near the tire to be inflated, away from traffic.
3. Place the kit, face up, on flat ground near the flat tire, away from traffic. Do not place the kit on its side.
4. Remove the air only hose from the kit.
5. Remove the valve cap.
6. Attach the air only hose onto the tire valve stem. Screw it until it is tight.

» Inflating An Under-inflated Tire

NOTICE

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The accessory power socket and compressor can overheat and become permanently damaged.

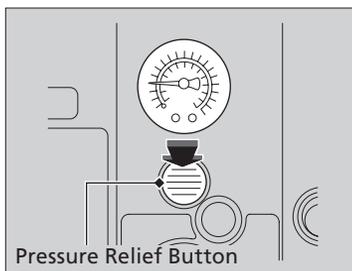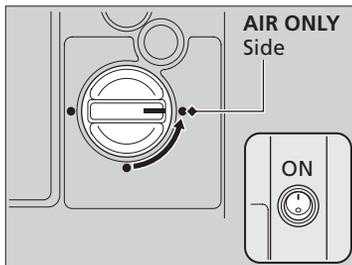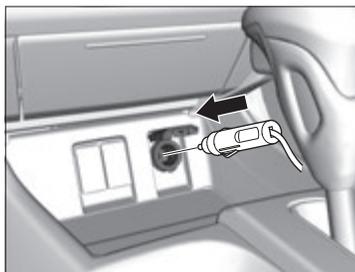

7. Plug in the kit to the accessory power socket.
 - Be careful not to pinch the cord in a door or window.
8. Start the engine.
 - Keep the engine running while injecting air.
- ☒ **Carbon Monoxide Gas** P. 64, Owner's Manual
9. Turn the selector switch to **AIR ONLY**.
10. Press the inflator switch to turn on the kit.
 - The compressor starts to inject air into the tire.
11. Inflate the tire to the specified air pressure.
12. Turn off the kit.
 - Check the pressure gauge on the air compressor.
 - If overinflated, press the pressure relief button.
13. Unplug the kit from the accessory power socket.
14. Unscrew the air only hose from the tire valve stem. Reinstall the valve cap.
15. Press the pressure relief button until the gauge returns 0 psi (0 kPa).
16. Repackage and properly stow the kit.

☒ Inflating An Under-inflated Tire

⚠ WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.


Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

If a Fuel Leak is Detected

If you smell natural gas or hear a hissing sound, except when refueling, the fuel system may have a leak.

Turning Off the Manual Shut-Off Valve

1. Park your vehicle outside in a well-ventilated area. Set the parking brake.
 - ▶ Keep away from heat, sparks, and flame.
2. Open all the windows and trunk for ventilation.
3. Turn the ignition switch to LOCK **0**.

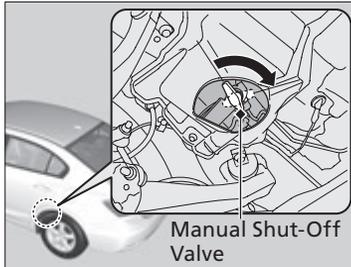

4. Turn the manual shut-off valve one-quarter turn clockwise (located as shown).
 - ▶ The valve is turned to OFF.
 5. Call a professional towing service.
 - ▶ You cannot continue driving. Have the vehicle towed to an authorized Civic Natural Gas dealer.
- **Emergency Towing** P. 442, Owner's Manual

⌘ If a Fuel Leak is Detected

WARNING

Compressed natural gas is flammable and highly explosive. You could be killed or seriously injured if leaking natural gas is ignited.

If you suspect a leak, have your vehicle immediately inspected and repaired by an authorized Honda Civic Natural Gas dealer.

Do not jump start your vehicle if you suspect a gas leak.

⌘ Turning Off the Manual Shut-Off Valve

We recommend that you locate the valve before driving so that you can turn it off quickly if necessary.

Turn off the valve if you ever suspect a fuel leak or are involved in an accident.

Turn the manual shut-off valve to OFF also when you are storing your vehicle for an extended period.

If the Malfunction Indicator Lamp Comes On or Blinks



■ Reasons for the indicator lamp to come on or blink

- Comes on when there is a problem with the engine emissions control system, or the fuel system.
- Blinks when engine misfiring is detected.

■ What to do when the indicator lamp comes on

Avoid high speeds and immediately get your vehicle inspected at an authorized Civic Natural Gas dealer.

■ What to do when the indicator lamp blinks

Park the vehicle in a safe place with no flammable items and wait at least ten minutes or more with the engine stopped until it cools.

☞ If the Malfunction Indicator Lamp Comes On or Blinks

NOTICE

If you drive with the malfunction indicator lamp on, the emissions control system and the engine could be damaged.

If the malfunction indicator lamp blinks again when restarting the engine, drive to the nearest dealer at 31 mph (50 km/h) or less for an inspection.

To check and replace fuses, follow the instructions in the Owner's Manual. Since your vehicle's fuses are different from the standard gasoline model's fuses, determine from the chart or the diagram on the fuse box label, which fuse or fuses control that device.

Current (Amps) ratings in brackets indicate a fuse in that location for a device that may not be equipped on your vehicle.


Fuse Locations

If any electrical devices are not working, turn the ignition switch to LOCK **0** and check to see if any applicable fuse is blown.

■ Engine Compartment Fuse Box

Located near the brake fluid reservoir. Push the tabs to open the box.

Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number.

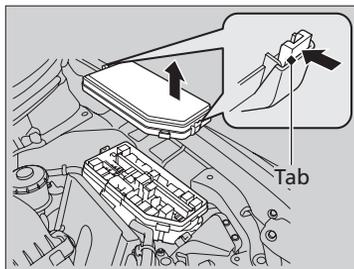

Handling the Unexpected


■ Circuit protected and fuse rating

	Circuit Protected	Amps
1	EPS	70 A
	–	(40 A)
	ABS/VSA Motor	30 A
	ABS/VSA FSR	30 A
	–	(30 A)
	Main Fuse	100 A
2	IG Main	50 A
	Fuse Box Main	60 A
	Fuse Box Main 2	60 A
	Headlight Main	30 A
	–	(30 A)
	Rear Defogger	30 A
	–	(30 A)
	Blower	40 A
	–	(30 A)
	Sub Fan Motor	20 A
Main Fan Motor	20 A	
3	–	–
4	Left Headlight Low Beam	15 A
5	ST MG	7.5 A
6	Right Headlight Low Beam	15 A
7	–	–
8	–	–
9	–	–
10	–	–

	Circuit Protected	Amps
11	Oil Level	7.5 A
12	Fog Lights*	(20 A)
13	Driver's Power Seat (Sliding)*	(20 A)
14	Hazard	10 A
15	FI Sub	15 A
16	IG Coil	15 A
17	Stop	15 A
18	Horn	10 A
19	Premium Amp*	(20 A)
20	INJ	(15 A)
21	IGP	15 A
22	DBW	15 A
23	H/L LO	20 A
24	Driver's Power Seat (Reclining)*	(20 A)
25	MG Clutch	7.5 A
26	–	–
27	SMALL	20 A
28	Interior Lights	7.5 A
29	Back Up	10 A

Interior Fuse Box

Located under the dashboard.

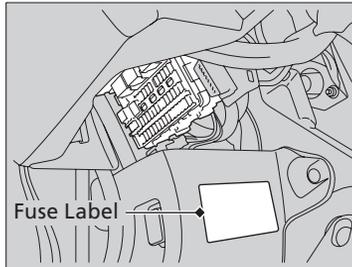

Fuse locations are shown on the label on the side panel.

Locate the fuse in question by the fuse number and label number.

■ Circuit protected and fuse rating

	Circuit Protected	Amps
1	HAC Option*	(20 A)
2	ACG	10 A
3	SRS	10 A
4	Fuel Pump	15 A
5	Meter	7.5 A
6	Power Window	7.5 A
7	VB SOL	(15 A)
8	Door Lock Motor 2 (Unlock)	15 A

	Circuit Protected	Amps
9	Door Lock Motor 1 (Unlock)	15 A
10	–	–
11	Moonroof*	(20 A)
12	Accessory Power Socket (Center Console)*	(20 A)
13	–	–
14	Seat Heaters*	(15 A)
15	Driver's Door Lock Motor (Unlock)	(10 A)
16	–	–
17	–	–
18	–	–
19	ACC	7.5 A
20	ACC Key Lock	7.5 A
21	Daytime Running Lights	7.5 A
22	HAC	7.5 A
23	HAC*	(7.5 A)
24	ABS/VSA	7.5 A
25	ACC*	(7.5 A)
26	–	–
27	Accessory Power Socket (Front)	20 A
28	Washer	(15 A)
29	ODS	7.5 A
30	Driver's Door Lock Motor (Lock)	(10 A)

	Circuit Protected	Amps
31	SMART*	(10 A)
32	Door Lock Motor 2 (Lock)	15 A
33	Door Lock Motor 1 (Lock)	15 A
34	Small Lights	7.5 A
35	Illumination	7.5 A
36	–	–
37	–	–
38	Left Headlight High Beam	10 A
39	Right Headlight High Beam	10 A
40	TPMS	(7.5 A)
41	Door Lock	20 A
42	Driver's Power Window	20 A
43	Rear Passenger's Side Power Window	(20 A)
44	Front Passenger's Side Power Window	20 A
45	Rear Driver's Side Power Window	(20 A)
46	Wiper	(30 A)
–	STS*	(7.5 A)

* Not available on all models

Vehicle Specifications

Model	Honda Civic 4-Door Natural Gas
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle Weight Rating	3,870 lbs (1,755 kg)
Gross Axle Weight Rating (Front)	2,007 lbs (910 kg)
Gross Axle Weight Rating (Rear)	1,863 lbs (845 kg)
Air Conditioning:	
Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	13.2 – 15.0 oz (375 – 425 g)
Lubricant Type	SP-10

Engine Specifications

Displacement	110 cu-in (1,798 cm ³)
Spark Plugs	NGK SILKR8B8DS

Fuel

Fuel Tank Service Pressure	3,600 psi (24,800 kPa) at 70°F (21°C)
Fuel Tank Capacity	3,000 psi:
	Slow filling 6.96 GGE
	Fast filling 5.84 GGE
	3,600 psi:
	Slow filling 7.77 GGE
	Fast filling 6.51 GGE

Washer Fluid

Tank Capacity	2.6 US qt (2.5 ℓ)
---------------	-------------------

Light Bulbs

Headlights (Low Beam)	51W (HB4)
Headlights (High Beam)	60W (HB3)
Front Turn Signal/Parking/Side Marker Lights	28/8W (Amber)
Brake/Taillights	21/5W
Rear Turn Signal Lights	21W (Amber)
Rear Side Marker Lights	LED
Back-Up Lights	16W
Taillights	3CP
High-Mount Brake Light	21W
Rear License Plate Lights	5W
Trunk Light	5W
Interior Lights	
Map Lights	8W
Ceiling Light	8W

■ Brake Fluid

Specified	Honda Heavy Duty Brake Fluid DOT 3
-----------	------------------------------------

■ Automatic Transmission Fluid

Specified	Honda ATF DW-1 (automatic transmission fluid)
Capacity	Change 2.5 US qt (2.4 ℓ)

■ Engine Oil

Recommended	<ul style="list-style-type: none"> • Genuine Honda Motor Oil 0W-20 • API Premium-grade 0W-20 detergent oil 	
	Change	3.7 US qt (3.5 ℓ)
Capacity	Change including filter	3.9 US qt (3.7 ℓ)

■ Engine Coolant


Specified	Honda Long-Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	1.45 US gal (5.50 ℓ) (change including the remaining 0.125 US gal (0.475 ℓ) in the reserve tank)

■ Tire

Regular	Size	P195/65R15 89H
	Pressure psi (kPa[kgf/cm ²])	30 (210 [2.1])
Compact Spare ^{*1}	Size	T135/80D15 99M
	Pressure psi (kPa[kgf/cm ²])	60 (420 [4.2])
Wheel Size	Regular	15 x 6J
	Compact Spare ^{*1}	15 x 4T

*1: Models with compact spare tire

System Components

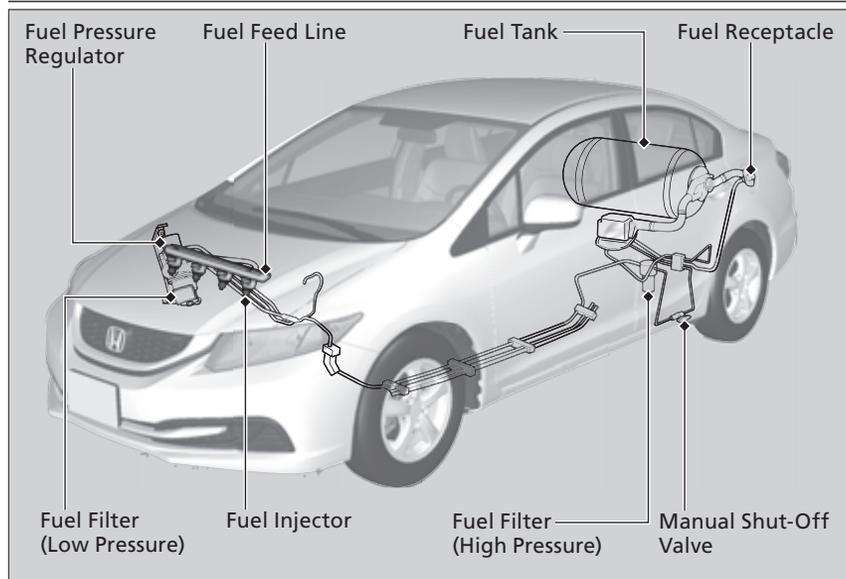

System Components

Your vehicle's fuel system includes a fuel tank, a fuel pressure regulator, a manual shut-off valve, high pressure fuel lines, and other components that comply with NFPA-52 standards.

The system in your vehicle, including the tank and hoses, has been designed to hold gas at this pressure. It has also been tested for safety. You should never smell gas or hear a hissing sound unless you are refueling.

Never modify or replace any original components or parts with those specified for a gasoline vehicle.

Improper parts or components can damage your vehicle's fuel system and affect your vehicle's safety performance.

Unlike some gasoline models, your vehicle's rear seat-back cannot be folded down.

■ Service Express

For electronic copies of service publications, you can purchase a subscription to Service Express. Visit www.techinfo.honda.com for pricing and options.

■ Manuals in print

Manuals can be purchased from Helm Incorporated. You can order a manual by phone at (800) 782-4356 (credit card orders only), or online at www.helminc.com.