

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

#### **Accessories Precautions**

The GPS antenna is located in the dashboard. Metallic front or side window tinting can seriously degrade or obstruct GPS reception.

Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

#### **Important Safety Information**



### **WARNING**

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Enter information before you begin driving or when stopped. As you drive, listen to the audible instructions and use voice commands when possible. Pull to the side of the road if you need more time to look at the screen or operate the controls.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.

The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.

 **System Limitations** P. 354

# Contents

**Quick Reference Guide** P.2

**System Setup** P.21

**Navigation** P.89

**Audio** P.143

**Bluetooth® HandsFreeLink®** P.225

**AcuraLink®** P.271

**Rear Entertainment System** P.281

**Other Features** P.303

**Troubleshooting** P.335

**Reference Information** P.351

**Voice Commands** P.367

**Index** P.373

## **System Setup P. 21**

Start-up 22	Voice Control System 24	Interface Settings 28	Personal Information 40
Routing 55	Guidance 63	Map 70	Data Reset 86
On Demand Multi-Use Display™ 87			

## **Navigation P. 89**

Entering a Destination 90	Calculating the Route 114	Driving to Your Destination 116	Map Menu 122
Changing Your Route 129	Changing Your Destination 138	Resuming Your Trip 141	

## **Audio P. 143**

Audio System 144	Audio Remote Controls 151	Audio Settings 152	Playing FM/AM Radio 156
Playing SiriusXM® Radio 162	Playing a Disc 180	Playing Hard Disc Drive (HDD) Audio 187	
Playing an iPod® 199	Playing Internet Radio 211	Playing a USB Flash Drive 216	Playing <i>Bluetooth®</i> Audio 222

## **Bluetooth® HandsFreeLink® P. 225**

<i>Bluetooth®</i> HandsFreeLink® 226	Text/E-mail Message 258
--------------------------------------	-------------------------

## **AcuraLink® P. 271**

AcuraLink® 272

## **Rear Entertainment System P. 281**

Rear Entertainment System 282	Rear Control Panel Operation 285	Front Control Panel Operation 296	Wireless Headphones 300
-------------------------------	----------------------------------	-----------------------------------	-------------------------

## **Other Features P. 303**

Trip Computer 304	Calendar 305	Information Functions 306	Multi-view Rear Camera* 308
-------------------	--------------	---------------------------	-----------------------------

## **Troubleshooting P. 335**

Troubleshooting 336	Error Messages 342
---------------------	--------------------

## **Reference Information P. 351**

System Initialization 352	System Limitations 354	Client Assistance 356	Legal Information 359
---------------------------	------------------------	-----------------------	-----------------------

## **Voice Commands P. 367**

Voice Commands 368

# Overview—Functions at a Glance

## Navigation

You can select any place/landmark as a destination by using voice control or the Interface Dial. The navigation system gives you turn-by-turn driving directions to your destination.



### Store home address ➡ P. 48

Register **1** home address.

### Store contacts ➡ P. 41

Store up to **200** contacts in **2** address books.

### Enter destination ➡ P. 90

Select your destination using **12** methods.

### Select route ➡ P. 115

Set route preferences and select one of **3** routes.

### Track route ➡ P. 116

Follow your route in real-time with voice guidance.

#### Traffic Information\* ➡ P. 127

View and avoid congestion and traffic incidents.


\*: Available only in certain areas.

### Avoid certain areas ➡ P. 137

Set streets and areas to detour around.

### Add waypoints ➡ P. 131

Add up to **4** “pit stops” along your route.

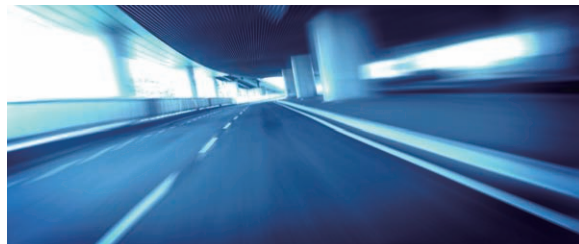

## Audio

The advanced audio system provides clear, well-defined sound and makes the most of your music. Enjoy listening to a variety of audio sources, such as:



**FM/AM Radio** ➡ P. 156

**SiriusXM® Radio** ➡ P. 162

**Compact Disc** ➡ P. 180

**Hard Disk Drive (HDD)** ➡ P. 187

**iPod®** ➡ P. 199

**Internet Radio** ➡ P. 211


**USB Flash Drive** ➡ P. 216

**Bluetooth® Audio** ➡ P. 222



**AcuraLink®** ➡ P. 272

AcuraLink® provides you with important information and messages between your vehicle and Acura.

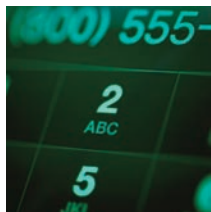

**Voice Control** ➡ P. 24

Use voice commands for safer system control while driving. You can operate all key functions of the navigation, audio, *Bluetooth®* HandsFreeLink®, and climate control systems.

**Bluetooth® HandsFreeLink®** ➡ P. 226

Pair a compatible cell phone to receive incoming and make outgoing calls. You can operate the phone features without ever taking your hands off the wheel.

## Rear Entertainment System ➡ P. 281

Rear seat passengers can enjoy a completely separate entertainment source than front passengers, including movies, games, and other audio choices.



# System Controls

1 **PHONE Button** ➔ P. 228

2 **(Power) Button**

3 **Volume Knob**

4 **NAV Button**

Models with Surround View Camera System

5 **CAMERA Button**

6 **BACK Button**

7 **(Display Mode) Button** ➔ P. 75

8 **Interface Dial/ENTER Button** ➔ P. 7

9 **INFO Button**

10 **MENU Button**

11 **SETTINGS Button**

Models with RES

12 **FRONT AUDIO Button**

13 **REAR AUDIO Button** ➔ P. 296

14 **REAR (Power) Button**


On Demand Multi-Use Display™

Audio/Information Screen

15 **(Eject) Button**



16 **Microphone** ➔ P. 24

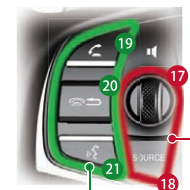

17 **Left Selector Wheel** ➔ P. 151

18 **SOURCE Button** ➔ P. 151

19 **(Pick-Up) Button** ➔ P. 226

20 **(Hang-Up/Back) Button** ➔ P. 226

21 **(Talk) Button** ➔ P. 6

Models without RES

22 **AUDIO Button** ➔ P. 144

Navigation

Rear Entertainment System

Voice Control  
Bluetooth® HandsFreeLink®  
Audio

# On Demand Multi-Use Display™ Basic Operation

## Source

Select to change an audio source.




You can change the position of icons.



## Shortcuts


Places **P.46**

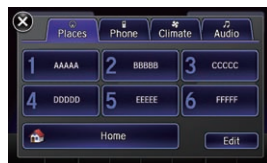

Phone **P.238**



Audio **P.149**

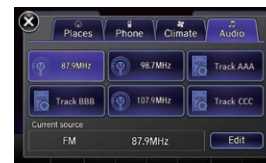

\* For detail informations about **Climate**, see your owner's manual.

Select **Tune**.



Select **Presets**.



Select and hold a desired number you want to store the station. Select to listen a preset station.

### • AM, FM, SiriusXM®, Pandora®, Aha™



: Select the preset station (AM/FM/Pandora®/Aha™) or category (SiriusXM®). Select and hold to search that station on preset screen. (AM/FM/SiriusXM®)





: Select to search the selected band for a station with a strong signal. (AM/FM) Select a song (Pandora®) or a contents (Aha™).



: Select the channel. In channel mode, select and hold to change the channel rapidly. (SiriusXM®)

### • CD, HDD, USB flash drive, Bluetooth® Audio



: Select  to skip to the next folder, and  to skip to the beginning of the previous folder.



: Select to change tracks. Select and hold to move rapidly within a track.

### • iPod®

Album bar : Select an album.



: Select to change tracks. Select and hold to move rapidly within a track.

 
## More


Select to display the menu items.





# Voice Control Operation

## Voice Portal Screen


 


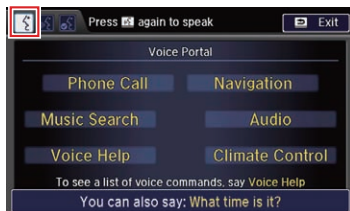

- 1 Press and release the  (Talk) button on the top screen of any mode.

The system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt.



- The system beeps when ready for a command. Press the  (Hang-Up/Back) button to cancel.
- Available voice commands are highlighted on the screen.

- 2 Say a voice command.  
After that, follow the voice prompt and say a voice command.

- The audio system is muted during voice control mode.
- You can use other voice commands on the **Voice Portal** screen.  
The system recognizes only certain commands.  
Available navigation voice commands  
 **P. 368**
- Say  "Voice Help" to enter supported commands for the current screen. A voice help tutorial is also available.  
**Voice Help**  **P. 16**
- During the voice control mode, press and hold the  (Hang-Up/Back) button to return to the **Voice Portal** screen.
- Set **Voice Prompt** to **Off** to bypass the voice prompt.  
**Voice Recognition Settings**  **P. 26**
- Carefully read the usage note for the voice control.  
**Voice Control System**  **P. 24**

# Interface Dial/ENTER Button Operation

## Rotate dial

### Changes scale

Map screens




### Highlights menu options

Menu screens



You will see these icons in each chapter.

They represent how you can operate the Interface Dial.

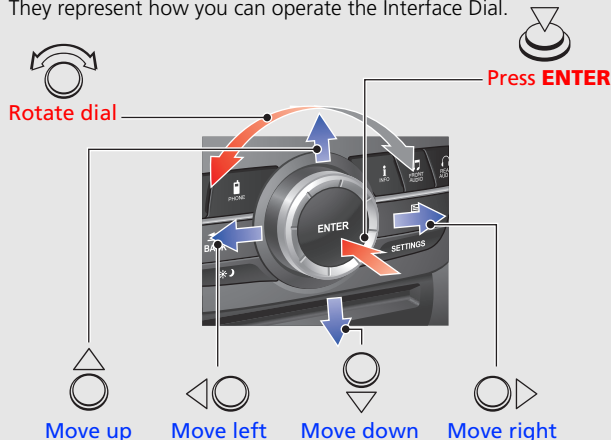


## Move

 up  down  left  right

### Scrolls map (8 directions)

Map screens

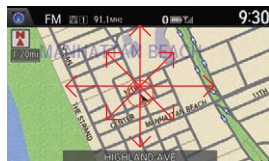

### Selects labeled function

Menu screens



## Press ENTER

### Selects function Selects map icon

Map screens



Selecting Icon

### Selects highlighted option


Menu screens


 





# How to Enter Information



You can enter information (e.g., city names, street names, personal names, and business names comprising letters, numbers, and symbols) when prompted on input screens.


## Using the Interface Dial

Rotate  to highlight a character.

- Select  to display upper/lower case characters.
- Select  to display symbols and accented characters.
- Select  (or move ) to edit the entered characters.

Press  to enter the highlighted character.

- Move  to select **Space** to enter a space character.
- Move  to select **Delete** to remove the last entered character.

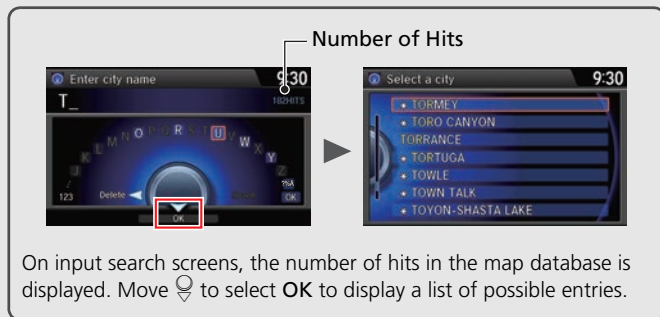

- You can also use the touch screen to enter information.

Scrolling through lists or tabs is limited while the vehicle is moving.

**Certain screen functions are limited or inoperable while the vehicle is moving. For these functions, use available voice commands or pull over to proceed.**

## Quick Reference Guide






# During Route Guidance

During route guidance, route information is displayed on the map screen and guidance screen. Press the NAV button to toggle between the map and guidance screen.

## Map Screen




## Guidance Screen

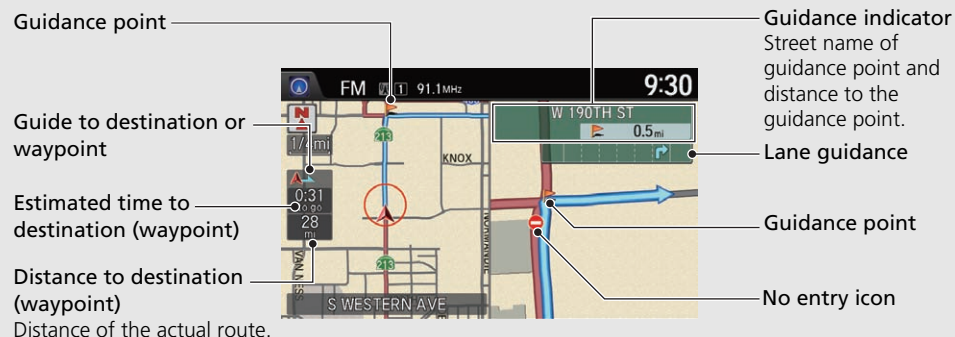

## Day or Night Mode


Press the (Display mode) button to manually switch between day and night mode.

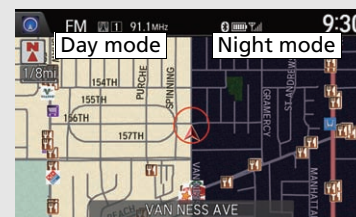

## Multi-information Display

### Turn-by-Turn Directions

The next guidance point appears on the multi-information display.

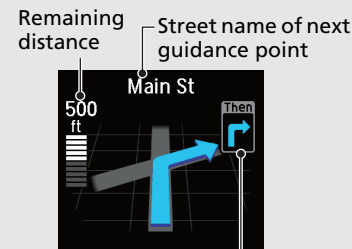

Next driving maneuver is approaching

# Navigation—Home Addresses and Going Home

The “Home” feature automatically routes you to your home address from any location simply by selecting **Go Home**.

## Storing Your Home Address

- 1 Press the **SETTINGS** button.




- 2 Rotate to select **Navi Settings**. Press .



- 3 Rotate to select **Edit Go Home**. Press .

- 4 Rotate to select **Name**. Press .

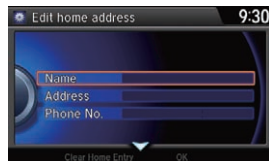

- 5 Enter a name.



- 6 Rotate to select **Address**. Press .

- 7 Enter an address.

- 8 Rotate to select **Phone No.** Press .

- 9 Enter a phone number.



- 10 Move and rotate to select **OK**. Press .

## Going Home

- 1 From the map screen, press the **MENU** button.



- 2 Rotate to select **Go Home**. Press .



- 3 Rotate to select **Set as Destination**. Press .



# Navigation—Entering a Destination

Enter your destination using one of several methods, then follow route guidance on the map or guidance screen to your destination.

- 1 From the map screen, press the **MENU** button.



- 2 Rotate the dial to select **Address**. Press the **OK** button.



- 3 Rotate the dial to select **Street**. Press the **OK** button.



- 4 Enter the name of your destination street.



- 5 Rotate the dial to select your destination street from the list. Press the **OK** button.



- 6 Enter the street number. Move the dial to select **OK** when finished.




- 7 If there is more than one city with the specified street, a list of cities is displayed. Rotate the dial to select the desired city from the list. Press the **OK** button.



- 8 Rotate the dial to select **Set as Destination**. Press the **OK** button.


Route guidance to the destination begins.

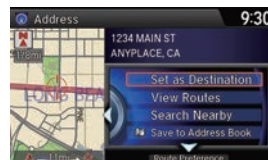

- **View Routes:** Choose one of three routes.



- **Route Preference:** Choose Max or Min for the five settings.

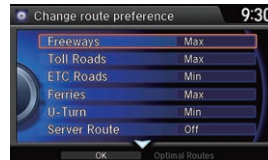

# Navigation—Changing Route or Destination

You can alter your route by adding waypoints to visit, adding streets to avoid, or changing your destination during route guidance.

## Adding a Waypoint ("Pit Stop")

You can add up to four waypoints along your route. ➡ P.131

- 1 From the map screen, press the **MENU** button.
- 2 Move to select **Route Option**.
- 3 Rotate to select **Destination List**. Press .
- 4 Rotate to select **Add New Destination**. Press .
- 5 Rotate to select **Find Along Route**. Press .

- 6 Rotate to select location and search method. Press .



- **Search Around:** Search around a location.
- **Search Along:** Search between two locations.

- 7 Select the icon category and location to add to the Destination List when prompted. Edit the order of destinations if necessary.

- 8 Move and rotate to select **Start Route**. Press .

## Changing Your Destination

There are several methods you can use to specify a new destination during route guidance.

- Selecting an icon on the map ➡ P.139  
Scroll the map to position the cursor over a place/landmark icon or a new area on the map. Press twice.
- Entering a new destination ➡ P.140  
Press the **MENU** button. Move to select **Destination** and enter a new destination.

## Canceling Your Route

- 1 Press the **MENU** button.


- 2 Rotate to select **Cancel Route**. Press .



# AcuraLink<sup>®</sup>

## AcuraLink<sup>®</sup> Messages

AcuraLink<sup>®</sup> provides a direct communication link between you and Acura. It sends and receives several kinds of messages through the Acura server.

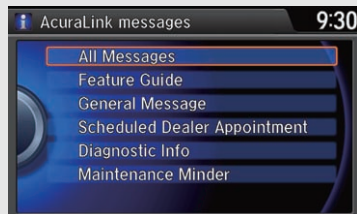

The following features are available:


- Vehicle feature guide
- Operating quick tips
- Safety and maintenance information
- Diagnostic information
- Dealer appointment and maintenance reminders

# Rear Entertainment System

The rear passengers can enjoy a wide array of audio/visual sources with the Rear Entertainment System (RES). The rear passengers can use wireless headphones and operate the system with the rear control panel.

## Overhead Screen and Rear Control Panel

### RES

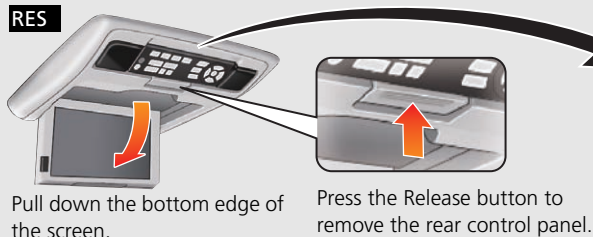


Select the audio source.



Press the buttons to select items.


### Ultrawide RES

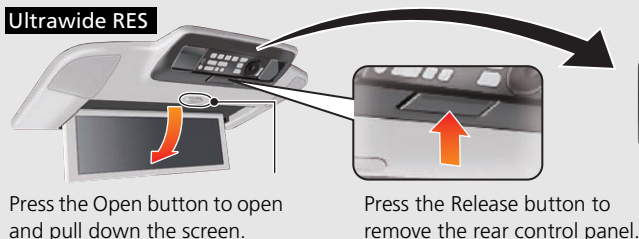


Select the audio source.



Rotate the Interface Dial to select items.


 **(Power) Button**  
Turn the system on or off  
(when rear power is turned on).

 **(Light-up) Button**  
Illuminate the buttons on the  
rear control panel.

**CH/FOLDER Bar**  
Select a channel (Radio) or a  
folder (Disc/USB).

**TUNE/SKIP Bar**  
Find stations (FM/AM). Skip to  
start/end of tracks, or press  
and hold to fast reverse/fast  
forward (Disc/USB/DVD).


**CATEGORY Bar**  
Select a category (SiriusXM®).

 **(Play/Pause) Button**  
Play or pause the playback.

**TITLE SCROLL Bar**  
Display track title, artist, and  
other text information.

## Basic Operation

**1** Open the overhead screen.

**2** Press the **REAR**   
(Power) button on  
the front control  
panel.



**3** Select the audio source.

• **RES:** Press the desired button on  
the rear control panel.




• **Ultrawide RES:** Press the **SOURCE**  
button and rotate the Interface  
Dial on the rear control panel to  
select an audio source. Press the  
**ENTER** button.

# Voice Help

 
This navigation system comes with voice help, which shows you what command to say when using the voice command functions.


## Command Help

- 1 Press and release the  (Talk) button.


- 2 Say  "Voice Help."




The voice help screen is displayed.  
The  "Voice Help" command is available on most screens.

- 3 Say one of the options for a list of available commands by category (e.g.,  "Navigation commands").






- 4 Say one of the options for a list of available commands by category (e.g.,  "Find Place commands").




- 5 The system displays a list of all available commands for the category. Press  to hear the list read aloud.




## Getting Started Tutorial




- 1 Move  and rotate  to select **Getting Started** on the voice help screen. Press .



For "Voice Settings" and "All Commands."  P.367

 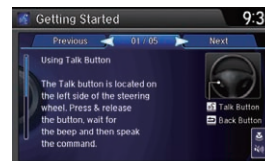- 2 The system reads the tips for the voice control.



- Rotate  to read the tips.
- Move  or  to display the previous/next page.

# Troubleshooting

For more Information ➞ P. 335

Q

Why does the vehicle position icon on the map “lag” a short distance behind my actual position, especially at intersections?

A

This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal.

Q

Why does the “time to destination” display sometimes increase even though I am getting closer to my destination?

A

The “time to destination” is based on your actual road speed and traffic conditions to give you a better estimate of arrival time.

Q

How do I specify a destination when an entered city or street could not be found?



A

Try entering the street first. Some cities are lumped in with a major metro area. In rural “unverified” areas or new subdivisions, streets may be missing or only partially numbered.

Q

How do I turn on the navigation system voice guidance?


A

On the map screen, press  to display the Map Menu. Rotate  to select **Guidance Volume**. Adjust the preferred volume level.

Q

My battery was disconnected or went dead, and the navigation system is asking for a code. Where do I find it?

A

In most cases, you do not need to enter a code. Simply press and hold the  (Power) button for two seconds; the system should reactivate.

➞ **System Initialization** P. 352

# How to Use This Manual


This section explains different methods on how you can easily find information in this manual.



## Searching the Table of Contents

➔ P.1

Two types of Tables of Contents help you find your desired information.

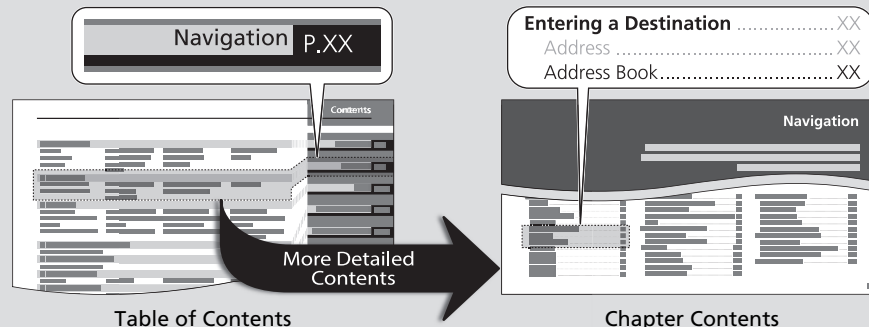

First, find the general chapter related to what you are looking for (e.g., entering a destination from the Address Book). Then, go to that chapter to view a more specific table of contents.


This more detailed table of contents shows you exactly what information is listed by section and title.



## Searching the Index

➔ P.373

Menu items displayed on the audio/information screen (e.g., Address Book) can be found individually in the Index.

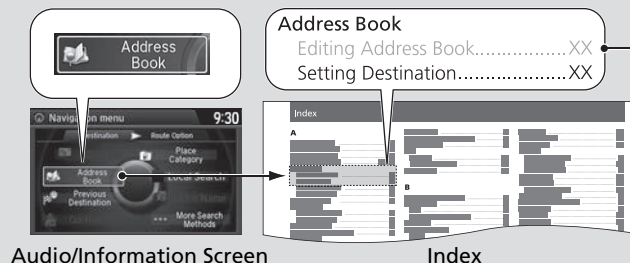

The Index consists of main terms and sub-entries. The sub-entries help you get to the desired page depending on what you are looking for.


Go to the  
Next Page





►► Entering a Destination ►► Address Book

### Address Book


**MENU button ► Address Book**

  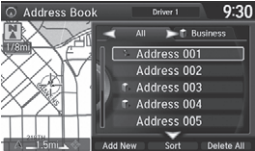Select an address stored in your address book to use as the destination.





1. Rotate  to select your destination from the list. Press .
2. Set the route to your destination.
  - **Calculating the Route** P. 114
  - Move  or  to display only the entries in the categories you have created.
  - **Selecting an Address Book Category** P. 44

**Address Book**

 If you have PIN-protected your address book, enter your PIN when prompted. Press  to select OK. PINs are optional.

  ► **PIN Numbers** P. 49

Move  and rotate  to select the following items:

- **Add New Address:** Adds an entry to the address book.
- **Adding an Address Book Entry** P. 41
- **Sort:** Selects Sort by Name or Sort by Distance.
- **Delete All:** Deletes all entries in the address book.

After following the menu tree, step-by-step instructions explain how to achieve the desired result.




## Menu Tree

The menu tree helps guide you through the system's menu options. To get to your desired function, follow the menu tree in order of the steps shown.

### NOTE:

All menu options can also be activated with voice commands.

### MENU button ► Address Book

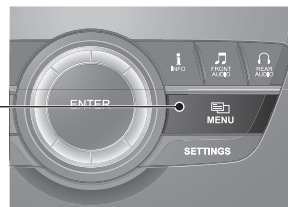

Press the hard button on the system control panel.

Press the **MENU** button.



Select the menu option with the Interface Dial.

Rotate  to select **Address Book**. Press .

Sample pages and images in this section may differ from the actual ones.







# System Setup


This section describes the start-up procedure and the navigation and setup functions.




<b>Start-up</b> .....	22	Edit POI Search Radius Along Route .....	60	<b>Data Reset</b> .....	86
<b>Voice Control System</b> .....	24	Avoided Area .....	61	Defaulting All the Settings .....	86
Command Input .....	24	<b>Guidance</b> .....	63	<b>On Demand Multi-Use Display™</b> .....	87
Voice Recognition .....	25	Guidance Mode .....	64	Changing the Screen Settings .....	87
Voice Recognition Settings .....	26	Street Name Guidance .....	66		
Siri Eyes Free .....	27	Non-map screens .....	67		
<b>Interface Settings</b> .....	28	Guidance Point .....	68		
<b>Personal Information</b> .....	40	Estimated Time .....	69		
Address Book .....	41	<b>Map</b> .....	70		
Home Address .....	48	Showing Icons on Map .....	72		
PIN Numbers .....	49	Color .....	74		
Previous Destination .....	50	View (Map Orientation) .....	77		
Category History .....	51	3D Angle Adjustment .....	78		
Download POI .....	52	Straight Line Guide .....	78		
<b>Routing</b> .....	55	Current Location .....	79		
Route Preference .....	56	Map Legend .....	80		
Unverified Routing .....	57	Display Tracking .....	84		
Traffic Rerouting .....	59	Correct Vehicle Position .....	85		

The navigation system starts automatically when you set the power mode to ACCESSORY or ON. At start-up, the following Confirmation screen is displayed.

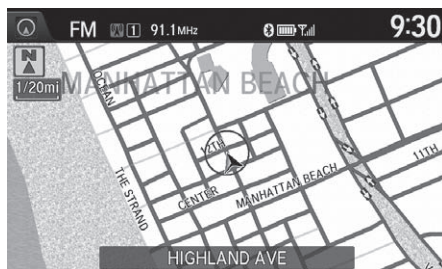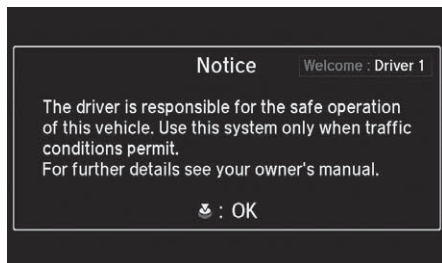

1. Press  to select **OK**.
  - ▶ If you do not select **OK**, the map screen is displayed after a certain period of time.
  - ▶ Your current position is displayed on the map screen.
2. Press the **NAV** button if a different mode is selected.
  - ▶ Your current position is displayed on the map screen.

## Start-up

If the navigation system loses power at any time, you may need to press and hold the  (Power) button for more than two seconds, or you may be prompted for the five-digit security code.

▶ **System Initialization** P. 352

At start-up, the driver's keyless access remote is automatically detected and the address book settings, setup preferences, wallpapers, and audio settings for that driver (e.g., Driver 1) are loaded.

"OK" on the Confirmation screen cannot be selected by using a voice command.

## ■ Limitations for Manual Operation





Disabled option

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option using the Interface Dial until the vehicle is stopped.

Voice commands are still operable while the vehicle is in motion.

Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions.

The voice control system uses the  (Talk) and  (Hang-Up/Back) buttons on the steering wheel and a microphone near the map lights on the ceiling.

A “Getting Started” feature provides a tutorial that explains how to use the voice control system.


 **Getting Started Tutorial** P. 16

## Command Input

If the system does not understand a command or you wait too long to give a command, the system asks you to repeat the command.



When you give a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. However, listening to the feedback will help familiarize you with the way the system expects commands to be phrased.

If the system cannot perform a command or the command is not appropriate for the screen you are on, the system beeps.

You can find out which voice commands are available for a particular screen using the  “Voice Help” command. The system will display and read the list of available commands to you.

 **Voice Help** P. 16

### (Talk) Button

When you press the  (Talk) button, the system prompts you to say a voice command and gives examples. Press and release the  (Talk) button again to bypass this prompt and give a command.

### Command Input

The audio system is muted while using the voice control system.

## Voice Recognition

To achieve optimum voice recognition when using the navigation voice control system:

- Make sure the correct screen is displayed for the voice command that you are using.

The system recognizes only certain commands. Available navigation voice command.

 **Voice Commands** P. 368

- Close the windows and moonroof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a clear, natural speaking voice without pausing between words.
- Reduce any background noise and the climate controls fan speed if possible. The system may misinterpret your command if more than one person is speaking at the same time.
- Refer to the Voice Help feature.

 **Voice Help** P. 16

### Voice Recognition

The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.





## Voice Recognition Settings

 **SETTINGS** button ▶ **System Settings** ▶ **Voice Reco**



Rotate  to select an item. Press .

The following items are available:

 
 

- **Voice Prompt:** Turns the voice prompt on or off.  
**On** (factory default): Provides the voice prompts.  
**Off:** Disable the feature.
- **Song by Voice:** Turns the Song By Voice™ on or off.  
 **Song By Voice™ (SBV)** P. 206
- **Song by Voice Phonetic Modification:** Modifies a voice command of music stored in the HDD or an iPod®.  
 **Phonetic Modification** P. 208
- **Phonebook Phonetic Modification:** Modifies a voice command for the phonebook.  
 **Phonebook Phonetic Modification** P. 241
- **Guidance Volume:** Adjusts the voice prompt volume level.  
 **Sound and Beep Settings** P. 29

## Siri Eyes Free

When your iPhone is paired and linked to the system via *Bluetooth®*, you can say Siri-related commands. Make sure Siri on your iPhone is turned on.

### ▶ Pairing a Phone P. 228



1. Press and hold the  (Talk) button for more than two seconds until you hear the Siri tone.
2. Talk to Siri.
  - ▶ When you hear the Siri tone, you can continue to respond without pressing any button. If the Siri tone times out, you have to press and hold the  (Talk) button again to reactivate Siri Eyes Free.
  - ▶ Press the  (Hang-Up/Back) button to cancel Siri Eyes Free.

### ▶ Siri Eyes Free

iPhone and Siri are trademarks of Apple, Inc.

Siri Eyes Free is available only on iPhone with iOS 6.0 and above.

Some commands work only on specific phone features or apps.

Some features may not be available for all countries or all areas. For details about Siri, refer to <http://www.apple.com>.

We recommend against using Siri other than in Eyes Free mode while operating a vehicle.

On Siri Eyes Free, the display remains the same and no feedback or commands appear.

While using Siri, you cannot operate the system with the built-in voice recognition.



## Display Settings

 **SETTINGS** button ► **System Settings** ► **Display**

Adjusts the screen's preferences.



The following items are available:

- **Sync Display Brightness:** Selects whether the display brightness synchronizes with the instrument panel brightness.
- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.


### Display Settings

You can set separate daytime and nighttime settings for **Brightness**, **Contrast**, and **Black Level**. Adjust each setting when the display is in either daytime or nighttime mode.

## Sound and Beep Settings

 **SETTINGS** button ► **System Settings** ► **Sound/Beep**

Changes the system sound and beep settings.

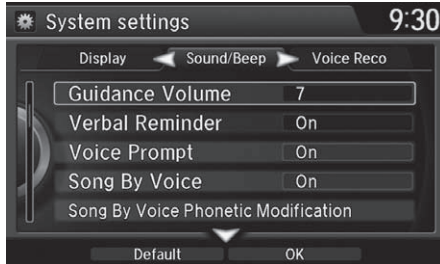

Rotate  to select an item. Press .

The following items are available:

- **Guidance Volume:** Adjusts the navigation system volume level.
- **Verbal Reminder:** Turns the verbal reminders on and off.  
On: Sets the verbal reminders.  
Off: Disables the feature.

### Sound and Beep Settings

#### Guidance Volume

If you set **Guidance Volume** to 0, you will not hear route guidance or voice command confirmations.


You can also adjust **Guidance Volume** by rotating the volume knob while the route guidance or voice command confirmations is announced.

If you then select **Voice** in the Map Menu, you will hear route guidance at the default volume.

## Clock Adjustment



 **SETTINGS** button ► **System Settings** ► **Clock**

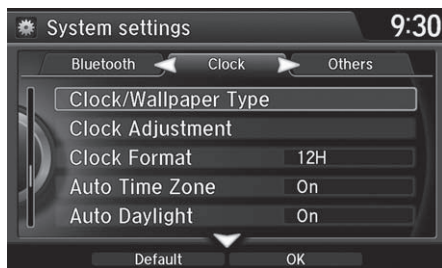Set the automatic adjustment of the system clock for daylight saving and international time zones.



Rotate  to select an item. Press .

The following items are available:

- **Clock/Wallpaper Type:** Changes the clock display type and the wallpaper type.  
 **Setting the Clock Type** P. 31
- **Clock Adjustment:** Adjust the current time manually.  
 **Setting the Clock** P. 31
- **Clock Format:** Sets the time notation to either 12-hour clock (12H, factory default) or 24-hour clock (24H).
- **Auto Time Zone:** The navigation system automatically adjusts the clock when driving through different time zones.  
**On** (factory default): Adjusts the clock automatically.  
**Off:** Disables the feature.
- **Auto Daylight:** The navigation system automatically adjusts the clock ("spring ahead" or "fall back" by one hour) when a daylight saving time change occurs.  
**On** (factory default): Adjusts the clock automatically.  
**Off:** Disables the feature.
- **Clock Reset:** Resets the settings of all items in the **Clock** group.

### Clock Adjustment

#### **Auto Time Zone**

If you live and work in two different time zones, you may want to turn **Auto Time Zone** to **OFF**. When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.

#### **Auto Daylight**

This function is not activated in areas that have not adopted daylight saving time, even if you have set **Auto Daylight** to **ON**.





You can turn the clock display in the audio/information screen on and off.

 **Header Clock Display** P. 39

## Setting the Clock Type


 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock/Wallpaper Type** ▶ **Clock**







1. Rotate  to select an option to change the design. Press .
2. Move  to select **OK**. Press .
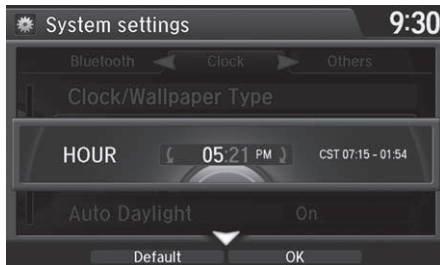
## Setting the Clock

 **SETTINGS** button ▶ **System Settings** ▶ **Clock** ▶ **Clock Adjustment**




1. Rotate  to select an item. Press .
2. Rotate  to select a minute. Press .

## Wallpaper Settings

Select, delete, and import wallpaper pictures for display on the screen.

### ■ Import wallpaper

🔧 **SETTINGS** button ► **System Settings** ► **Clock** ► **Clock/Wallpaper Type**

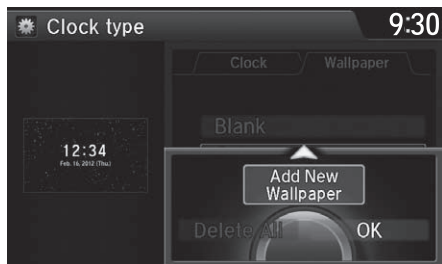

1. Connect the USB flash drive to the USB port.

2. Move to select **Wallpaper**.

► The screen will change to the wallpaper list.

3. Move and rotate to select **Add New Wallpaper**. Press .

4. Rotate to select a desired picture. Press .

► The preview is displayed on the left side on the screen.

5. Move and rotate to select **Start Import**. Press .


► The confirmation message will appear. Then the display will return to the wallpaper list.



### ■ Wallpaper Settings

- When importing wallpaper files, the image must be in the USB flash drive's root directory. Images in a folder cannot be imported.
- The file name must be fewer than 255 characters.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpg).
- The individual file size limit is 10 MB.
- The maximum image size is 5,800 x 5,800 pixels.
- Up to 10 files can be saved for each driver (Driver1 and Driver2).
- If the USB flash drive does not have any pictures, the No files detected message appears.


## Select wallpaper

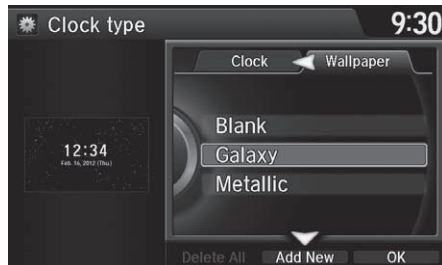

SETTINGS button ► **System Settings** ► **Clock** ► **Clock/Wallpaper Type** ► **Wallpaper**



1. Rotate  to select a desired wallpaper. Press .

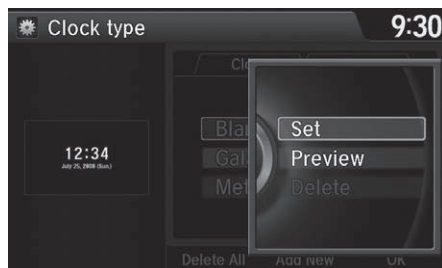- The preview is displayed on the left side on the screen.
- The pop-up menu appears on the screen.



2. Rotate  to select **Set**. Press .

- The display will return to the wallpaper list.

## Select wallpaper


From the pop-up menu, rotate to select **Preview** and press to see a preview at full-size screen.



To go back to the previous screen, press to select **OK**, or press the **BACK** button.

When the file size is large, it takes a while to be previewed.

## Delete wallpaper

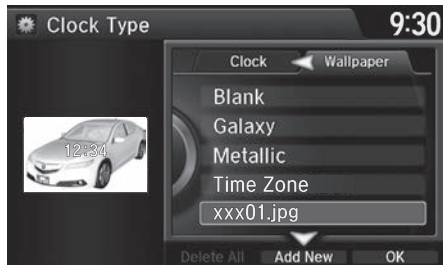
 **SETTINGS** button ► **System Settings** ► **Clock** ► **Clock/Wallpaper Type** ► **Wallpaper**





1. Rotate  to select a wallpaper that you want to delete. Press .


► The preview is displayed on the left side on the screen.

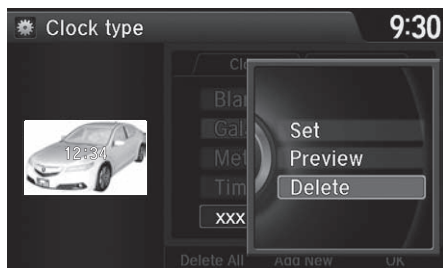► The pop-up menu appears on the screen.



2. Rotate  to select **Delete**. Press .

► The confirmation message will appear.

3. Rotate  to select **Yes**. Press .



► The display will return to the wallpaper list.

## Unit Settings

 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Units**

Sets the map units to either miles (factory default) or kilometers (km).



Rotate  to select the map unit.  
Press .





## Language Settings

 **SETTINGS** button ► **System Settings** ► **Others** ► **Language**

Set the system language used on all screens. You can choose from three languages: **English**, **Français** (French), **Español** (Spanish).



Rotate  to select the system language. Press .

### Language Settings


Voice confirmation of cities and streets only occurs when **English** is the system language.



When **Français** or **Español** is selected, some messages continue to be displayed in English.

## Operation Restriction Tips

 **SETTINGS** button ► **System Settings** ► **Others** ► **Operation Restriction Tips**

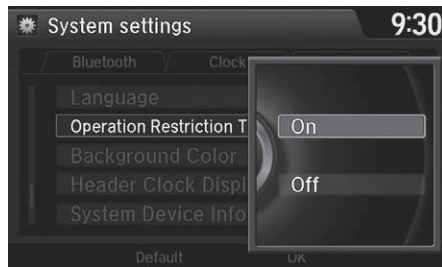Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.



Rotate  to select the map unit.  
Press .

The following items are available:



- **On** (factory default): Displays a message.
- **Off**: Disables the message.

## Background Color

 **SETTINGS** button ► **System Settings** ► **Others** ► **Background Color**

Changes the background color of the audio/information screen and the On Demand Multi-Use Display™.






Rotate  to select a desired color.  
Press .

## Header Clock Display

 **SETTINGS** button ▶ **System Settings** ▶ **Others** ▶ **Header Clock Display**

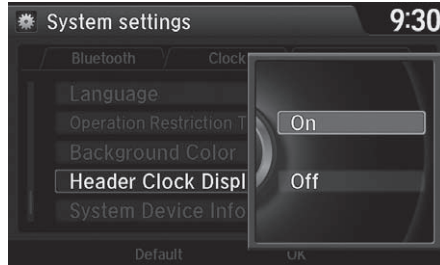Selects whether the clock display comes on.




Rotate  to select an option. Press .

The following options are available:

- **On** (factory default): The system displays the clock in the audio/information screen.
- **Off**: Disables the feature.





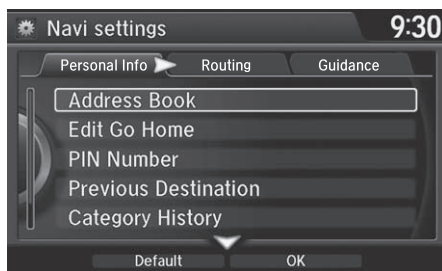

## **SETTINGS** button ► **Navi Settings** ► **Personal Info**

Use the personal information menu to select and set your address books, home address, and PINs. You can also delete unwanted destinations from the list of previously routed destinations.



Rotate  to select an item. Press .

The following items are available:

- **Address Book:** Stores new addresses or edits your address book.  
 **Address Book** P. 41
- **Edit Go Home:** Sets or edits your home address.  
 **Home Address** P. 48
- **PIN Number:** Sets or changes your PIN.  
 **PIN Numbers** P. 49
- **Previous Destination:** Deletes the destination history.  
 **Previous Destination** P. 50
- **Category History:** Deletes the place categories you recently used.  
 **Category History** P. 51
- **Download POI:** Edits and deletes the Imported POI categories.  
 **Editing POI Categories** P. 53


## Personal Information

Personal information cannot be backed up or moved to another navigation system.

## Address Book

**SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

Store up to 200 address entries in two address books (Driver 1 and Driver 2). You can add, edit, and delete information in the address books.

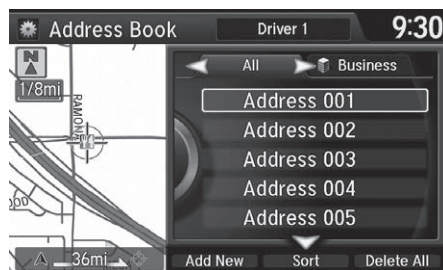

Move ◀ or ▶ to display only the addresses in the selected category.

Move to change the user address book (DRIVER 1 or DRIVER 2).

### ■ Adding an Address Book Entry

**SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Address Book**

This section explains how to enter the name and address.



1. Move and rotate to select **Add New Address**. Press .

### ▣ Address Book

Up to 200 addresses can be stored to each address book of Driver 1 and Driver 2 separately.

If you have PIN-protected your address book, enter your PIN when prompted. Press to select **OK**. PINs are optional.


▣ **PIN Numbers** P. 49



Any address book categories you create are also displayed.

▣ **Selecting an Address Book Category** P. 44

### ▣ Adding an Address Book Entry

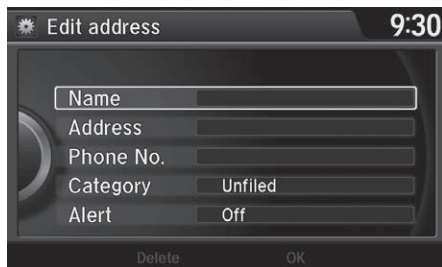If you do not give the address a name, one is automatically assigned (e.g., Address 001). You can re-enter, edit, or make changes to any entry. "Address" is the only required field.










2. Rotate  to select an item. Press .

The following items are available:

- **Name:** Edits the name of the entry.
- **Address:** Edits the address of the entry.
- **Phone No.:** Edits the phone number of the entry.
- **Category:** Specifies the category of the entry.
- **Alert:** Alerts you when you approach the address entry.  
**On:** Beeps and displays a message when your vehicle gets near the entry.  
**Off** (factory default): Disables the feature.



3. Rotate  to select **Name**. Press .
4. Enter a name or title. Move  to select **OK**.
5. Rotate  to select **Address**. Press .
6. Rotate  to select an item for specifying the address. Press .

The following items are available:

- **Current Position:** Select your current location.  
➤ **Address** P. 92
- **Previous Destinations:** Select a previous destination.  
➤ **Previous Destination** P. 99
- **Place Name:** Enter the name of a place/landmark.  
➤ **Place Name** P. 104
- **Local Search:** Sets a destination by using Local Search.  
➤ **Local Search** P. 102
- **Place Category:** Select a category to search for a place/landmark (e.g., Banking, Lodging).  
➤ **Place Category** P. 100
- **More Search Methods:** Displays additional search method entries.  
➤ **Entering a Destination** P. 90

#### ➤ Adding an Address Book Entry

When you use **Place Name** or **Place Category**, the phone number is automatically entered.


You can also add a phone number and category.

#### ➤ Editing an Address Book Entry

The entered contents are displayed on the Edit address screen.

### ■ Editing an Address Book Entry

🔧 **SETTINGS** button ► **Navi Settings** ► **Personal Info** ► **Address Book**

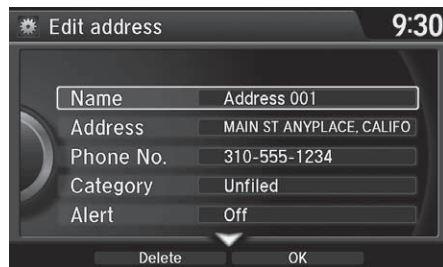


1. Rotate to select the address to edit. Press .
2. Enter the name, address, phone number, and category fields.  
➤ **Adding an Address Book Entry** P. 41
3. Move and rotate to select OK. Press .

Continued



## ■ Selecting an Address Book Category

🔍 **SETTINGS** button ► **Navi Settings** ► **Personal Info** ► **Address Book**

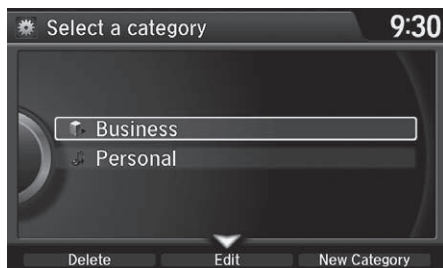

1. Rotate 🔄 to select an address. Press 🗑️.
2. Rotate 🔄 to select **Category**. Press 🗑️.
3. Rotate 🔄 to select a category. Press 🗑️.

► Create a category in advance.

📄 **Creating a New Category**

P. 44

## ■ Creating a New Category

1. Move 📍 and rotate 🔄 to select **New Category**. Press 🗑️.
2. Enter a name and select an icon when prompted.
  - The created category is displayed in the list of categories.

## ■ Deleting or Editing a Category

1. Move 📍 and rotate 🔄 to select **Delete** or **Edit**. Press 🗑️.
2. Delete an existing category, or change the name and icon.
  - The selected category to delete is indicated with a trash icon. Move 📍 and rotate 🔄 to select **OK**.


## ■ Selecting an Address Book Category

Up to 100 categories (including "Unfiled") can be stored to each address book of Driver 1 and Driver 2 separately.

If you delete a category that is used by other addresses, the category type for those addresses changes to "Unfiled."

## ■ Deleting an Address Book Entry

📍 **SETTINGS** button ► **Navi Settings** ► **Personal Info** ► **Address Book**

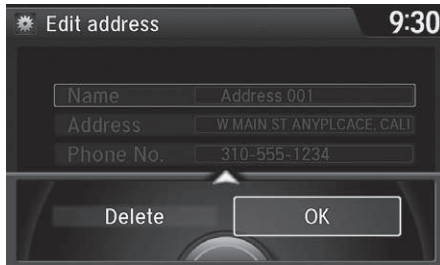

1. Rotate 🔄 to select the address to delete. Press 📍.
2. Move 📍 and rotate 🔄 to select **Delete**. Press 📍.
3. Rotate 🔄 to select **Yes**. Press 📍 to delete the address.

## ▣ Deleting an Address Book Entry



When you transfer the vehicle to a third party, delete all address book entries.

*Continued*


## Setting Place Shortcuts

You can store up to six addresses previously stored in your Address Book, and a home address for your preset destinations.

### ■ Storing an address on the Shortcut

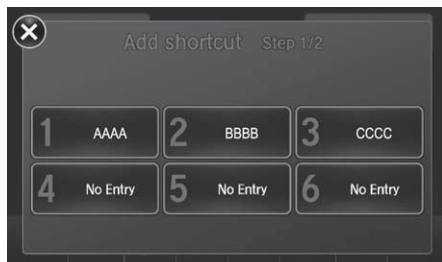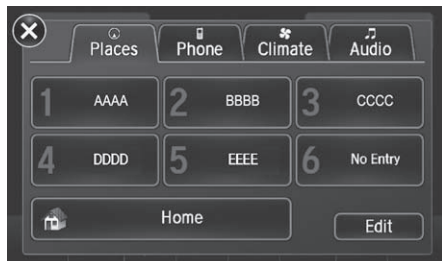

1. Select **Shortcuts**.
2. Select **Places**.
3. Select **Edit** or **No Entry**.
  - If you select No Entry, go to step 6.
4. Select **Add**.
  - All six preset icons appear.
5. Select the preset number to which you want to store an address.
  - The screen changes to a list of addresses stored in your address book.

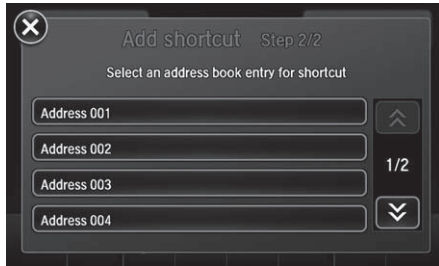

6. Select an address you want to store as a preset.

#### ■ Deleting a preset address

1. Select Shortcuts.
2. Select Places.
3. Select Edit.
4. Select Delete.
5. Select the preset number with the destination you want to delete.

## Home Address




 **SETTINGS** button ► **Navi Settings** ► **Personal Info** ► **Edit Go Home**

Set a home address that you frequently use.





1. Edit the name, address, and phone number the same way as an address in the address book.



 **Adding an Address Book Entry**  
P. 41






2. Move  and rotate  to select **OK**. Press .

### Home Addresses

If you have PIN-protected your home addresses, enter your PIN when prompted. Press  to select **OK**. PINs are optional.

 **PIN Numbers** P. 49

If your home street is not in the system database, park on the nearest verified street to your home. When entering the "Address" field, rotate  to select **Current Position** to use your current location as the home address and press .

You can delete a home address if necessary. Move  and rotate  to select **Clear Home Entry**. Press . Rotate  to select **Yes**. Press .


When you transfer the vehicle to a third party, delete all home addresses.



The home icon is shown on the map screen on the 1/20 and 1/8 mile scales.

## PIN Numbers

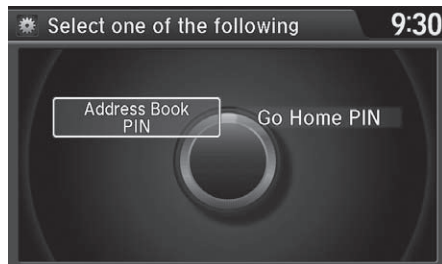


 **SETTINGS** button ► **Navi Settings** ► **Personal Info** ► **PIN Number**

Set a four-digit PIN for protecting personal addresses and your home address. Once you set a PIN, you are prompted to enter it whenever you access a personal address or a home address.



1. Rotate  to select the PIN to create. Press .



2. Rotate  to select a digit to enter. Press  to select **OK**. Repeat to enter a new four-digit PIN.
3. Re-enter the new PIN, when prompted, to confirm the number you just entered. Press  to select **OK**.



► If you have not entered the same number both times, an "INCORRECT PIN" message is displayed. Enter your PIN again.

### PIN Numbers

#### **PIN**

Personal Identification Number (PIN) is a password used to access personal data.

PINs are optional. If you choose to use a PIN, keep a note of the number in a secure location. If you forget your PIN, a dealer will have to reset the navigation system and all of your stored information will be erased. The factory default is no PIN.

If you want to stop using a PIN, move  to select **Turn off PIN entry**. Press .

## Previous Destination

📍 **SETTINGS** button ► **Navi Settings** ► **Personal Info** ► **Previous Destination**

The navigation system maintains a list of your previously routed destinations as a shortcut for entering the same destination in the future. You can delete some or all of your previous destinations from the list.



1. Rotate 🔄 to select the destination to delete. Press 🗑️.

► Repeat the procedure as necessary.

► Items to be deleted are indicated with a trash icon.



Trash icon

2. Move 📍 and rotate 🔄 to select **OK** to delete the selected destinations.

### Previous Destinations



Up to 50 destinations can be stored.

To cancel the selection of a previous destination, rotate 🔄 to highlight the destination again. Press 🗑️ to de-select it.

## Category History

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Category History**

The navigation system maintains a list of your recently used place categories as a shortcut for selecting the same categories in the future. You can delete some or all of your recently used categories from the list.

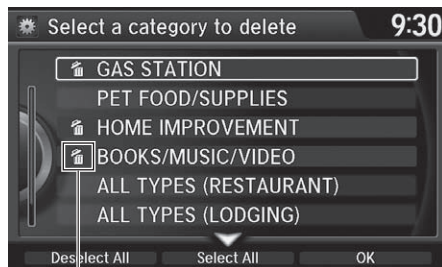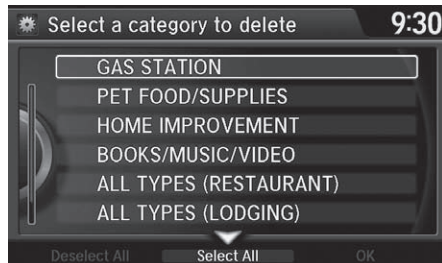



Trash icon

1. Rotate  to select the category to delete. Press .



▶ Repeat the procedure as necessary.

▶ Items to be deleted are indicated with a trash icon.

2. Move  and rotate  to select **OK** to delete the selected categories.

### Category History


Up to 50 categories can be stored.

To cancel the selection of a category, rotate  to highlight the category again. Press  to de-select it.



## Download POI

Import custom Points of Interest (POI) into the navigation system and set the POI as a destination. You can also add, edit, and delete POIs.

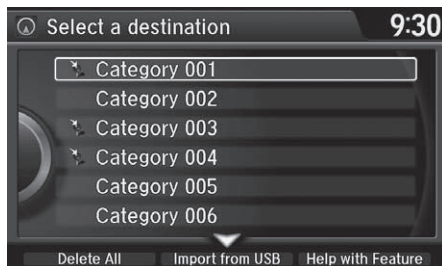

### Importing POI Categories

**MENU** button (on map) ► **More Search Methods** ► **Download POI**



1. Connect a USB flash drive with stored POI data to the USB connector.
2. Move and rotate to select **Import from USB**. Press .

### Importing POI Data

For more information about connecting a USB flash drive.


**Connecting a USB Flash Drive** P. 216



POI data in csv and kml formats can be imported.

You can download POI data from various POI websites.

If you select **From AcuraLink**, you can download POI data from the AcuraLink® server.

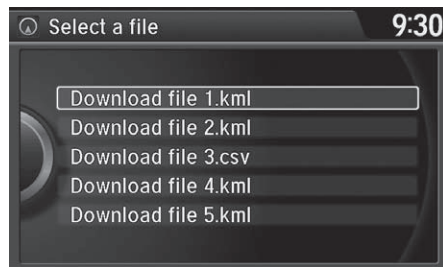
**AcuraLink®** P. 272


 


3. Rotate  to select a category to import. Press .

## ■ Editing POI Categories

 **SETTINGS** button ▶ **Navi Settings** ▶ **Personal Info** ▶ **Download POI**

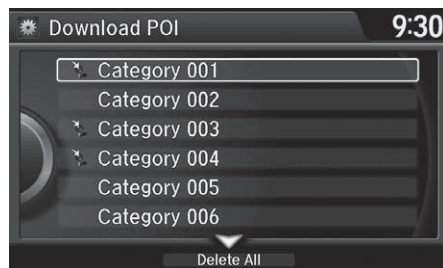



1. Rotate  to select the downloaded POI category to edit. Press .

### ✕ Editing POI Categories

If you select **From AcuraLink**, you can edit Alert only.




2. Rotate  to select an item. Press .

The following items are available:

- **Alert Setting:** Alerts you when you approach the places/landmarks in the category.  
**On:** Beeps and displays a message when your vehicle gets near the places/landmarks in the category.  
**Off** (factory default): Disables the feature.
- **Delete Category:** Deletes all places/landmarks and icon in the selected category.
- **Edit Icon:** Changes the category icon.



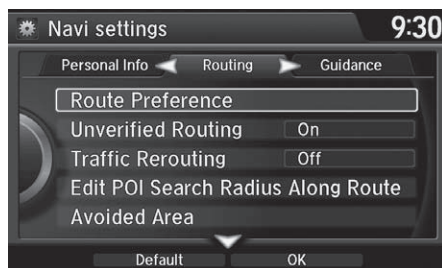


## **SETTINGS** button ► **Navi Settings** ► **Routing**

Choose various settings that determine the navigation system functionality during route calculation.



Rotate  to select an item. Press .


The following items are available:







- **Route Preference:** Changes the route preferences (calculating method).  
 **Route Preference** P. 56
- **Unverified Routing:** Sets whether you use the route guidance in unverified areas.  
 **Unverified Routing** P. 57
- **Traffic Rerouting:** Sets whether you use automatic recalculation based on traffic information.  
 **Traffic Rerouting** P. 59
- **Edit POI Search Radius Along Route:** Sets the distance from the route to find waypoints.  
 **Edit POI Search Radius Along Route** P. 60
- **Avoided Area:** Specifies areas to avoid when calculating a route.  
 **Avoided Area** P. 61
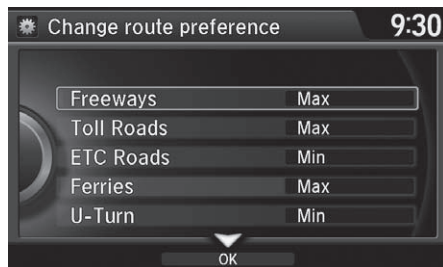
## Route Preference

 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Route Preference**

Change the route preference by selecting minimum or maximum driving methods.



1. Rotate  to select an item. Press .
2. Rotate  to select **Min** or **Max**. Press .  
► Repeat step 1 and 2 as necessary.
3. Move  to select **OK**. Press .

### Route Preference

The calculated route may be the shortest route or the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- Shortcuts through residential areas are avoided.
- Right turns are favored over left turns or U-turns.
- Time-restricted turns (turns prohibited at certain times of the day) are not used.

Check the ferry schedule when the calculated route includes ferry route.

ETC is short for the Electronic Toll Collection system.

# Unverified Routing

⚙️ **SETTINGS** button ▶ **Navi Settings** ▶ **Routing** ▶ **Unverified Routing**

Receive turn-by-turn map and voice guidance in unverified areas.



Rotate to select **On** or **Off**. Press .


Differences	Off	On (factory default)
On or Off?	The driver wishes to manually navigate using the navigation map and choose the streets that lead to the destination.	The driver chooses to let the navigation system suggest possible routing, knowing that the guidance may not be accurate.
Route calculation	Route is usually longer, using verified roads whenever possible.	Route is shorter, but uses unverified (purple) streets that may not be accurate.
Route line	The route line uses verified streets only (when possible). If <b>Straight Line Guide</b> is set to <b>On</b> , a pink vector line is displayed on the map that continually points to your destination. <b>Straight Line Guide</b> P. 78	A blue-pink route line highlights suggested unverified streets on the map while traveling to your destination.

## Unverified Routing


Unverified roads are found in rural areas, and typically include residential streets away from the center of a town. They may not be accurate, and can contain errors in location, naming, and address range.

Unverified roads are shown only when viewing the map in the 1/20, 1/8, 1/4, 1/2, 1 and 2 mile map scales.

### Straight line guide

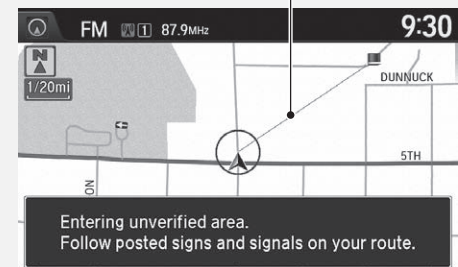

### Blue-pink route line

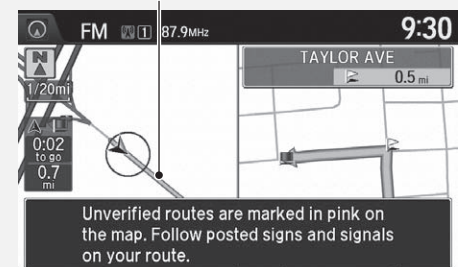

Continued


Differences	Off	On (factory default)
Cautionary messages	Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions when starting route guidance, approaching an unverified area, and entering an unverified street.	Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions when entering an unverified street.
Guidance (map/voice)	There is no turn-by-turn map or voice guidance.	Voice guidance commands end with the phrase "if possible" to remind you to verify all traffic restrictions.
Directions list	A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road.	A direction list is provided showing street names and turn symbols in pink.



## Traffic Rerouting

 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Traffic Rerouting**

A faster route can be calculated based on continuously updated traffic information.

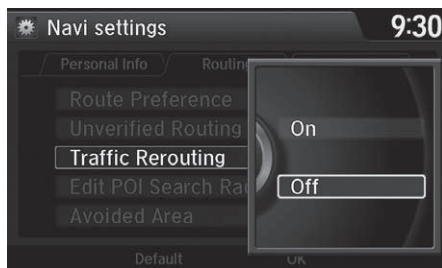 **Traffic Rerouting™** P. 127



Rotate  to select an option. Press .

The following options are available:

- **On:** The system reroutes automatically based on traffic information.
- **Off** (factory default): Disables the feature.

### Traffic Rerouting

You must be in or near a traffic-enabled city to receive coverage for that area. Traffic information is available in certain areas in the lower 48 states, Hawaii, and some cities in Canada.

 **Traffic Information** P. 358

Automatic traffic rerouting may not provide a detour route depending on circumstances.




## Edit POI Search Radius Along Route





 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Edit POI Search Radius Along Route**

Select the distance from your highlighted route line (on either side of your route) that the system will search for a waypoint.

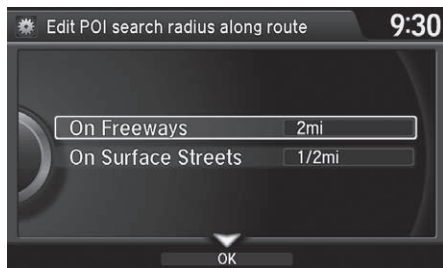➔ **Adding Waypoints** P. 131

You can specify a different search distance for freeways and surface streets.



1. Rotate  to select an item. Press .
2. Rotate  to select a search distance. Press .

The following items are available:




- **On Freeways:** 1, 2, 5, or 10 miles can be set. Factory default is 2 miles.
- **On Surface Streets:** 1/2, 1, 2, or 5 miles can be set. Factory default is 1/2 mile.



# Avoided Area


 **SETTINGS** button ► **Navi Settings** ► **Routing** ► **Avoided Area**



Specify up to five areas to avoid (e.g., road construction, closures), if possible, when the system calculates routes to your destination.



1. Move  and rotate  to select **New Area**, or rotate  to select an existing area to edit.

2. Rotate  to select **Name** to label the area to avoid. Press .

3. Enter a name or title. Move  to select **OK**.

4. Rotate  to select **Area** to define the area to avoid. Press .

The following options are available (after an area is set):

- **View Area:** Displays the selected avoid area on the map.
- **Delete:** Deletes the selected avoid area.

## ✕ Avoided Area

The maximum size of an "avoid area" is approximately 1/2 mile.

If your selected area contains a freeway, you are asked "Do you want to avoid freeways?" Answering "No" allows you to use a route through an avoid area on a freeway without any pop-up messages.


You can select areas to avoid, however you cannot select roads or areas that you want the system to use for routing.

You can enter up to 25 characters for the name.



The following options are available:

- **Address:** Specify the general area by entering an address.  
 ➤ **Address** P. 92
- **Map Input:** Specify the general area by map input.  
 ➤ **Map Input** P. 111

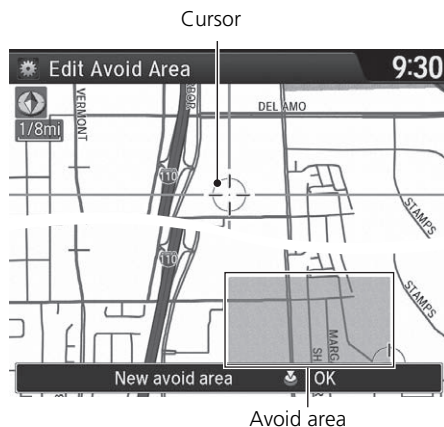

5. Rotate to select a method for specifying the area. Press .

#### ▣ Avoided Area

Avoid area can be set in the 1/20, 1/8, or 1/4 mile map scales.

6. If you select **Map Input**, scroll the map to position the cursor over your desired start point, adjusting the map scale as necessary. Press to mark the start point.  
 ► To redo the area selection, press the **BACK** button.
7. Scroll the map to “draw” the area. Press to mark the end point.
8. Press to select **OK**.  
 ► The area you specify is displayed in the list of areas to avoid.






## **SETTINGS** button ► **Navi Settings** ► **Guidance**

Choose various settings that determine the navigation system functionality during route guidance.




Rotate  to select an item. Press .


The following items are available:



- **Guidance Mode:** Sets whether to display only the map screen or a split map-guidance screen.  
 **Guidance Mode** P. 64
- **Street Name Guidance:** Sets whether to read out the street names during voice guidance.  
 **Street Name Guidance** P. 66
- **Non-map screens:** Sets whether the guidance screen interrupts the screen display.  
 **Non-map screens** P. 67
- **Guidance Point:** Sets whether to display the guidance information to the destination or the next waypoint.  
 **Guidance Point** P. 68
- **Estimated Time:** Sets whether to display the remaining time or arrival time to the guidance point.  
 **Estimated Time** P. 69

## Guidance Mode

 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Guidance mode**

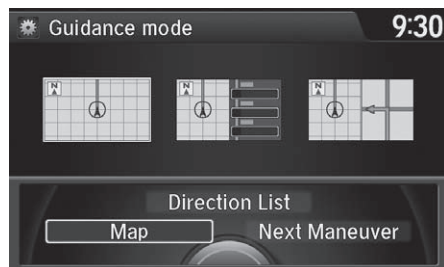Select the display mode for the map and guidance screens.



Rotate  to select an option. Press .

The following options are available:

- **Map** (factory default): Displays only the map screen. When you approach a guidance point, the next guidance point appears.



Map screen

Near the next guidance point



Next Maneuver screen

Next guidance point

### Guidance Mode

The guidance mode can also be selected from the map menu.


 **Map Menu** P. 122

Press the **NAV** button to switch between the map, next guidance direction, and a list of guidance directions.

### **Turn-by-Turn Directions**


The next guidance point appears on the multi-information display.

 **Turn-by-Turn Directions** P. 10

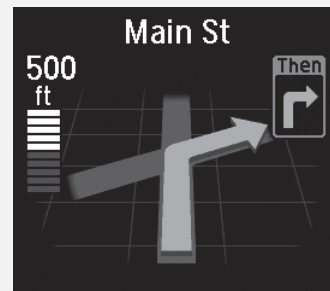


You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions.

- **Direction List:** Displays the map and direction list simultaneously on the map screen. When you approach a guidance point, the next guidance point appears.

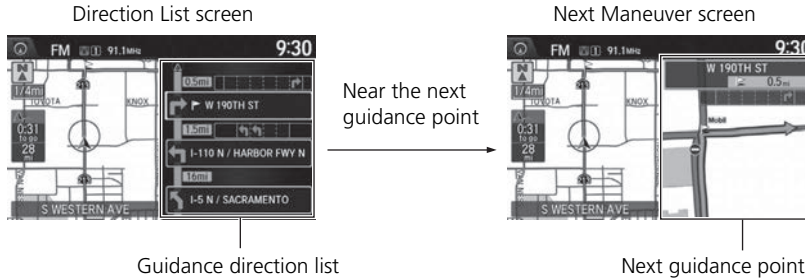

- **Next Maneuver:** Displays the map and next guidance point simultaneously on the map screen.

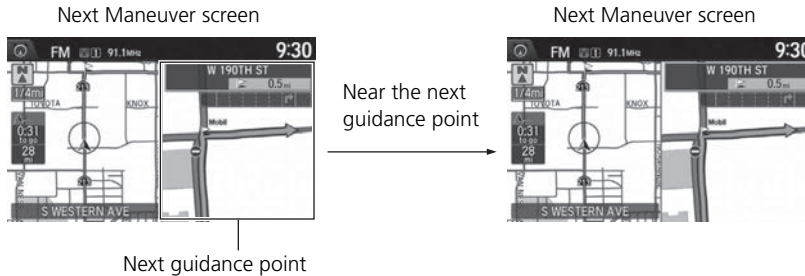



## Street Name Guidance

 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Street Name Guidance**

The navigation system includes the street names during voice guidance (e.g., “Turn right on Main Street”).



Rotate  to select an option. Press .

The following options are available:

- **On** (factory default): Voice guidance includes the street names.
- **Off**: Disables the feature.

### Street Name Guidance


This feature is only available when the system language is set to **English**.



This feature may not be available in non-English speaking areas.

## Non-map screens

 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Non-map screens**

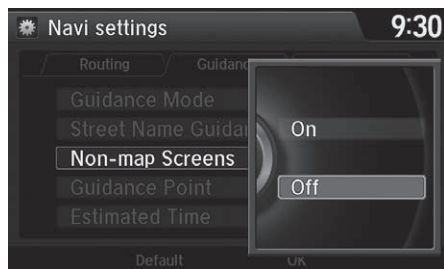The navigation system temporarily interrupts the screen display to view the guidance screen as you approach a guidance point.



Rotate  to select an option. Press .

The following options are available:

- **On:** The guidance screen interrupts other mode screens (e.g., audio, phone, etc, except the rear view camera mode).
- **Off** (factory default): Disables the feature.





## Guidance Point

 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Guidance Point**

Set the guidance point to display on the map screen.



Rotate  to select an option. Press .

The following options are available:

- **Destination** (factory default): Displays the remaining/arrival time and distance to the destination.
- **Next Point**: Displays the remaining/arrival time and distance to the next waypoint.

## Estimated Time

🔧 **SETTINGS** button ► **Navi Settings** ► **Guidance** ► **Estimated Time**

Select the estimated time to display on the screen.




Rotate 🔄 to select an option. Press 🏠.

The following options are available:

- **Arrival:** Displays the arrival time to the destination or the next waypoint.
- **Remaining** (factory default): Displays the remaining time to the destination or the next waypoint.

## 📍 **SETTINGS** button ► **Navi Settings** ► **Map**



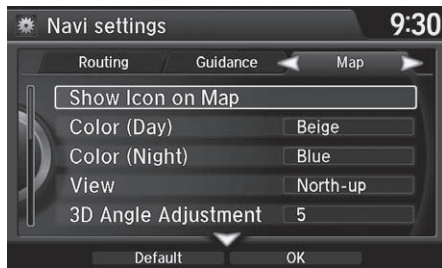




Select the landmark icons to display on the map, change the orientation of the map, display your current location, and learn the meaning of the icons, colors, and symbols displayed on the map.



Rotate 🔄 to select an item. Press ⏹.

The following items are available:

- **Show Icon on Map:** Selects the icons to display on the map.  
 🗚 **Showing Icons on Map** P. 72
- **Color (Day):** Selects the color of the map for the Day mode.  
 🗚 **Color** P. 74
- **Color (Night):** Selects the color of the map for the Night mode.  
 🗚 **Color** P. 74
- **View:** Selects the map orientation (North-up, Heading-up, or 3D map).  
 🗚 **View (Map Orientation)** P. 77
- **3D Angle Adjustment:** Adjusts the viewing angle for the 3D map.  
 🗚 **3D Angle Adjustment** P. 78
- **Straight Line Guide:** Sets whether to display a straight guideline to the destination or waypoint.  
 🗚 **Straight Line Guide** P. 78

- **Current Location:** Displays and saves your current location.  
 **Current Location** P. 79
- **Map Legend:** Displays an overview of the map features.  
 **Map Legend** P. 80
- **Display Tracking:** Sets whether to display the tracking dots on the map.  
 **Display Tracking** P. 84
- **Delete Tracking:** Deletes the tracking dots on the map.  
 **Deleting Tracking Dots** P. 84
- **Correct Vehicle Position:** Adjusts the position of the vehicle on the map.  
 **Correct Vehicle Position** P. 85
- **System Device Information:** Views database, software, device, and vehicle identification information.  
 **System Device Information** P. 306
- **Map Data Update:** Checks the map data update status when updating the map database.  
 **Map Data Update** P. 306



## Showing Icons on Map



 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Show Icon on Map**



Select the icons that are displayed on the map.



The following options are available:

- **All On:** Displays the landmark icons.  
 **Map Screen Legend** P. 9
- **Customize:** Fine-tunes the icon display.  
 **Fine-tuning the Icons** P. 73
- **Off:** Hides the landmark icons.


1. Rotate  to select an item. Press .

2. Rotate  to select an option. Press .

► Repeat step 1 and 2 as necessary.

3. Move  to select OK. Press .

### Showing Icons on Map



If you have PIN-protected your address book, enter your PIN when prompted. Move  to select OK. PINs are optional.


 **PIN Numbers** P. 49

## Fine-tuning the Icons


Icons in some categories can be fine-tuned to display or hide.






1. Rotate  to select the icons to display on the map. Press .

► Pressing  toggles the icon display on or off.

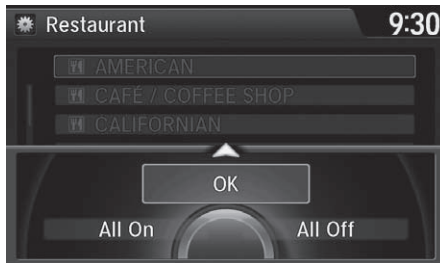► Repeat the procedure as necessary.




2. Move  and rotate  to select OK. Press .



## Color

Set separate map colors for Day and Night modes.

### Color (Day)

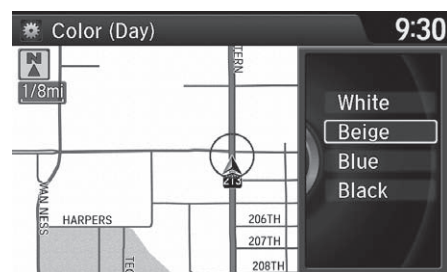
SETTINGS button ► Navi Settings ► Map ► Color (Day)



Rotate  to select a color for the Day mode. Press .

### Color (Night)

SETTINGS button ► Navi Settings ► Map ► Color (Night)

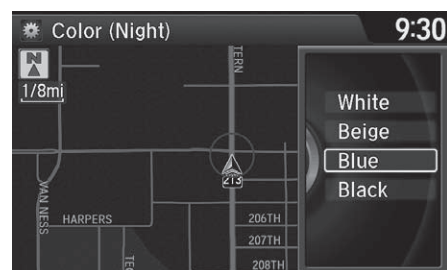

Rotate  to select a color for the Night mode. Press .


### Color (Day)

The factory default is set to **Beige**.


### Color (Night)

The factory default is set to **Blue**.

## ■ Switching Display Mode Manually

Set the screen brightness separately for Day and Night modes. Press the  (Display mode) button to cycle through the display modes (Day to Night to Off).



1. Press the  button.

► The Brightness bar is displayed for a few seconds.

► Rotate  to adjust the brightness. Press .

2. Press the  button again.




► Repeat the procedure to switch the display modes.

## ▣ Switching Display Mode Manually

A visual guide helps you see the difference between Day and Night modes.

► **Day or Night Mode** P. 10



Illumination control	Priority	Operation
 button	1	Selects Day, Night, or Off display mode. This button has the highest priority and overrides all other display control adjustments listed below. <b>Remember:</b> Once you press this button, you assume full manual control of the display mode until the power mode is set to VEHICLE OFF (LOCK).
Sunlight sensor (see your Owner's Manual for location)	2	If the sunlight sensor detects daylight and the headlights are turned on, the system automatically overrides the Night display and displays the Day display mode. <b>Remember:</b> If desired, use the  button to override this automatic choice.
Dash illumination adjustment buttons (see your Owner's Manual for location)	3	When headlights are turned on, and you wish to have the Day display mode, adjust the illumination to the full brightness setting (beeps). <b>Remember:</b> Adjust the dash brightness back to mid-range to allow auto switching by sensing the headlights are on or off.
Headlights (Auto/On/Off)	4	When turned on, the display changes to Night display mode. The previous three controls listed above can "cancel" this function. <b>Remember:</b> Use the  button, or adjust the dash illumination to full brightness, to set the display to your desired choice.
Screen color choice	N/A	The user can select the color of the screen that will be displayed for the Day and Night display modes described above. <b>Remember:</b> For best contrast, ensure that the map color is white for Day and black for Night.

## View (Map Orientation)

📍 **SETTINGS** button ▶ **Navi Settings** ▶ **Map** ▶ **View**

Select the map orientation.



Rotate 🔄 to select an option. Press 📍.

The following options are available:

- **North-Up:** Displays the map with North always pointing up.
- **Heading-Up:** Displays the map so that the direction you are traveling is always pointing up.
- **3D Map:** Displays the bird's eye view map.

### ☑ View (Map Orientation)

The red arrow in the symbol always points North.

Heading-up and 3D map view switch to the North-up view on the maximum map scale.

The bird's eye view map switches to the Heading-up map while scrolling the map.


The viewing angle for the bird's eye view can be adjusted.



🔍 **3D Angle Adjustment** P. 78

## 3D Angle Adjustment

📍 **SETTINGS** button ► **Navi Settings** ► **Map** ► **3D Angle Adjustment**

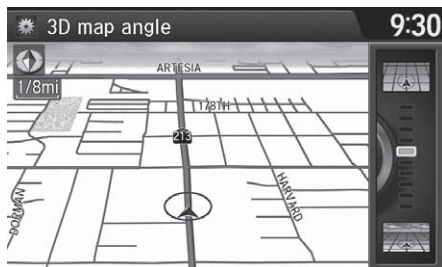Adjust the viewing angle.






Rotate  to adjust the angle. Press .

## Straight Line Guide

📍 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Straight Line Guide**

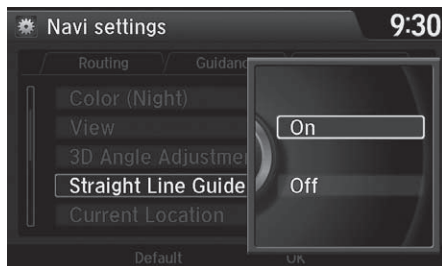Set whether to display a straight guideline to the destination or waypoint



Rotate  to select an option. Press .

The following options are available:



- **On** (factory default): Displays the straight guideline on the map.
- **Off**: Disables the feature.

## Current Location


 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Current Location**

Display and save your current location for future use as a destination. The address, latitude, longitude, and elevation of your current location are displayed.

■ To save your current location in the address book:

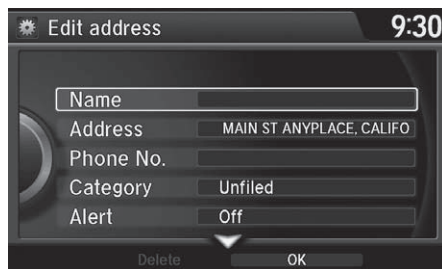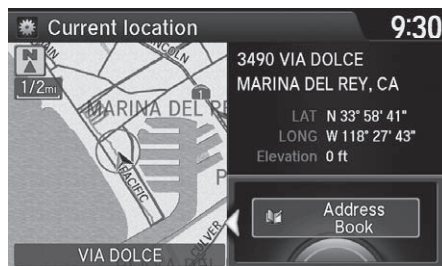




1. Press  to select **Address Book**.


► Move  to scroll the map as necessary.

2. Edit the name, phone number, and category.

 **Address Book** P. 41

3. Move  and rotate  to select **OK**. Press .

### Current Location

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select **OK**. PINs are optional.

 **PIN Numbers** P. 49

The elevation is not displayed if the system is receiving insufficient GPS information. When elevation is displayed, it may differ with roadside elevation signs by  $\pm 100$  feet or more.

Saving your current location does not change or cancel your current route.

## Map Legend

 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Map Legend**

See an overview of the map lines, areas, routes, traffic information, and navigation icons.



Move ◀○ or ○▶ select an item.

► The system displays the map legend.

### Map Legend

A visual guide helps you see the map legend.

➤ **Map Screen Legend** P. 9

➤ **Traffic Rerouting™** P. 127

## Map Scale and Functions

The functions that are available from the map screen depend on the map scale.

Function	page	Map Scale (top: mile, bottom: metric)											
		1/20	1/8	1/4	1/2	1	2	5	15	50	150	350	1000
		80	200	400	800	1.6	3.2	8	24	80	240	560	1600
Icon display													
Landmark icon	9	✓	✓										
Exit info.	9			✓	✓	✓							
One-way traffic	9	✓											
Waypoint “flag”	10	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Traffic incident	9	✓	✓	✓	✓	✓	✓	✓					
Map orientation													
Heading-up	77	✓	✓	✓	✓	✓							
North-up	77	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
3D map	77	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Others													
Tracking dots	119	✓	✓	✓	✓								
Unverified road	9	✓	✓	✓	✓	✓	✓						
Map features	9	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Avoid areas	61	✓	✓	✓									
Traffic speed	9	✓	✓	✓	✓	✓	✓	✓					

## Map Scale and Functions

You can change between miles or kilometers.

▶ **Unit Settings** P. 35

Continued

## ■ Map Icons and Functions

Display or hide all icons on the map screen, with the exception of Honda/Acura Dealer icons which are always shown.

### ■ Landmark icon

Type	Icon display control	Icon selectable	Icon searchable
Honda/Acura dealer	Always on	Yes	Yes
Hospital	Yes	Yes	Yes
School	Yes	Yes	Yes
ATM	Yes	Yes	Yes
Gas station	Yes	Yes	Yes
Restaurants	Yes	Yes	Yes
Post office	Yes	Yes	Yes
Grocery store	Yes	Yes	Yes
Hotel/Lodging	Yes	Yes	Yes
Police station	No icon	No	Yes
Shopping, Tourist attraction, Bank	No icon	No	Yes
Parking garage	Yes	Yes	Yes
Parking lot	Yes	Yes	Yes
Freeway exit info.	Yes	Yes	N/A

## ■ Map Icons and Functions


### Icon display control

Icons that can be displayed or hidden using the Interface Dial or voice command.

### Icon selectable

Icons that can be selected as a destination using the Interface Dial.

### Icon searchable


Icons that can be searched using the  Find Nearest voice command.

■ Traffic icon

Type	Icon display control	Icon selectable	Icon searchable
Traffic incident	Yes	No	N/A

▣ Traffic Incident

When you use the Interface Dial to position the cursor (round red circle) over the traffic incident icon, you can view the summary of the incident.


Press  on the traffic incident icon to view a pop-up message describing the incident in detail.





## Display Tracking


 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Display Tracking**

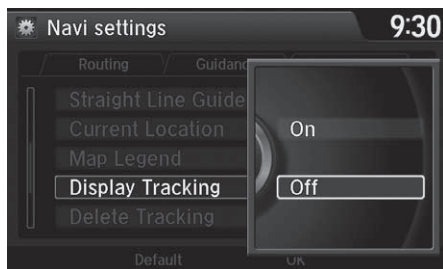The navigation system can be set to display white tracking dots ("breadcrumbs") on the map screen.




Rotate  to select an option. Press .

The following options are available:

- **On:** The system displays the white tracking dots.  
 **Tracking Dots** P. 119
- **Off** (factory default): Disables the feature.

## Deleting Tracking Dots

 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Delete Tracking**

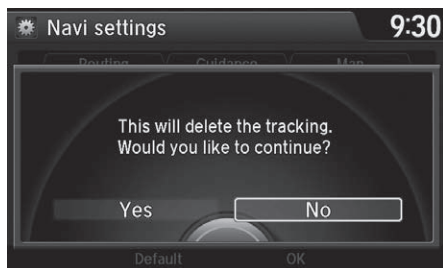

Rotate  to select **Yes**. Press .



## Deleting Tracking Dots






When you transfer the vehicle to a third party, delete the tracking dots.

## Correct Vehicle Position

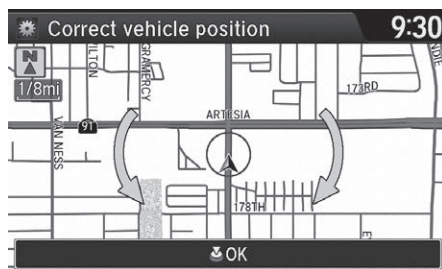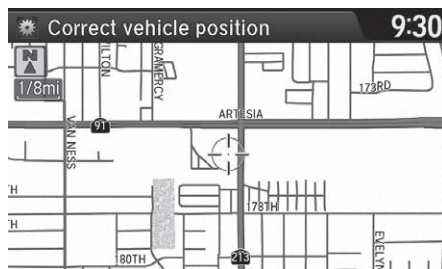 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Correct Vehicle Position**

Manually adjust the current position of the vehicle as displayed on the map screen if the position appears to be incorrect.



1. Put the vehicle in Park.
2. Rotate  to select **Correct Vehicle Position**. Press .
3. Scroll the map to position the cursor over at your correct position. Press .
4. Rotate  to position the arrowhead in the correct direction the vehicle is facing.
5. Press  to select **OK**.

### Correct Vehicle Position

An apparent position error can occur where buildings, tunnels, and other objects block or reflect the GPS signals, forcing the system to use "dead reckoning" to determine your location and direction.

Using this function to adjust vehicle position is not recommended. When the system reacquires a GPS signal, it will automatically place the vehicle in the correct location.


If you continually have to adjust the vehicle position, you may have problems with the GPS reception or there may be database errors.




► **System Limitations** P. 354

## Defaulting All the Settings

 **SETTINGS** button ► **System Settings** ► **Factory Data Reset**

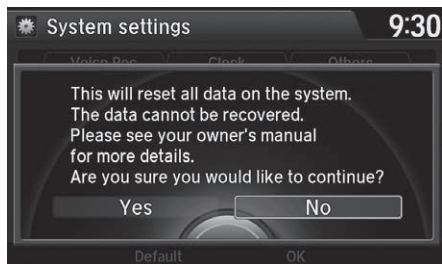Reset all the menu and customized settings as the factory defaults.



1. Rotate  to select **Yes**. Press .
- The confirmation message will appear.
2. Rotate  to select **Yes**. Press again to reset the settings.
- The confirmation message will appear. Press to select **OK**.

### Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

## Changing the Screen Settings

Adjusts the screen settings of the On Demand Multi-Use Display™.



1. Select **More**.
2. Select **Screen Settings**.
3. Use **+**, **-** or other icons to adjust the setting.
  - Use the **◀/▶/▲/▼** icons to turn the page.
  - Select **X** to go back to the previous screen.

The followings are adjustable screen settings:

- **Sync Display Brightness:** Selects whether the screen brightness synchronizes with the instruments panel brightness.
- **Brightness:** Adjusts the screen's brightness.
- **Contrast:** Adjusts the screen's contrast.
- **Black Level:** Adjusts the screen's black level.
- **Display:** Changes between the daytime or nighttime modes.
- **Beep:** Turns on or off the beep that sounds every time you touch the screen.
- **Keyboard:** Changes the on-screen keyboard from the alphabetical order to the qwerty type.
- **Vibration:** Turns on or off the vibration when you touch the screen.
- **Fade Timer:** Sets the screen black out timing.





# Navigation

This section describes how to enter a destination, select a route to take, and follow the route to your destination. It also describes how to change your route or destination along the way.

<b>Entering a Destination</b> .....	90
Address .....	92
Address Book .....	98
Previous Destination .....	99
Place Category .....	100
Local Search .....	102
Place Name .....	104
Place Phone Number .....	107
Download POI .....	108
Scenic Route .....	109
Intersection .....	110
Map Input .....	111
Coordinate .....	113

<b>Calculating the Route</b> .....	114
Viewing the Routes .....	115
<b>Driving to Your Destination</b> .....	116
Viewing the Route .....	116
Listening to Voice Guidance .....	120
Reaching a Waypoint .....	121
<b>Map Menu</b> .....	122
Displaying the Map Menu .....	122
Hide Traffic Flow .....	124
Directions .....	125
Traffic Rerouting™ .....	127
<b>Changing Your Route</b> .....	129
Pausing the Route .....	130
Canceling the Route .....	130

Adding Waypoints .....	131
Editing the Destination List .....	135
Taking a Detour .....	137
Avoiding Streets .....	137
<b>Changing Your Destination</b> .....	138
Find Nearest Place .....	138
Selecting a Destination on the Map .....	139
Entering a New Destination .....	140
<b>Resuming Your Trip</b> .....	141

# Entering a Destination

 **MENU** button (on map)

This section describes how to enter a destination for route guidance.



Rotate  to select an item. Press .

► Select **More Search Methods** to display additional menu entries.



The following items are available:

- **Address:** Sets a destination by entering an address.  
➤ **Address** P. 92
- **Address Book:** Sets a destination by selecting an address stored in your Address Book.  
➤ **Address Book** P. 98
- **Previous Destination:** Sets a destination by selecting a previous destination.  
➤ **Previous Destination** P. 99











## ➤ Entering a Destination

If you press the **MENU** button when en route, the Route Option screen is displayed.

➤ **Changing Your Route** P. 129

Prior to departure, you can set areas along your route to avoid.

➤ **Avoiding Streets** P. 137

- **Go Home:** Sets your home address as a destination.  
 **Going Home** P. 11
- **Place Category:** Sets a destination by selecting a place/landmark.  
 **Place Category** P. 100
- **Local Search:** Sets a destination by using Local Search.  
 **Local Search** P. 102
- **Place Name:** Sets a destination by entering a place name.  
 **Place Name** P. 104
- **Place Phone No.:** Sets a destination by entering the phone number of a place/landmark.  
 **Place Phone Number** P. 107
- **Download POI:** Sets a destination by using a list of the imported POI (category and places) data you created.  
 **Download POI** P. 108
- **Scenic Route:** Sets a destination by using a list of scenic roads for each state (U.S. and Canada only).  
 **Scenic Route** P. 109
- **Intersection:** Sets a destination (intersection) by entering two streets.  
 **Intersection** P. 110
- **Map Input:** Sets a destination by scrolling through the map.  
 **Map Input** P. 111
- **Coordinate:** Sets a destination by entering latitude and longitude.  
 **Coordinate** P. 113



## Address






 **MENU** button ► **Address**

Enter an address to use as the destination. The state or province you are currently in is displayed (e.g., California).



Rotate  to select an item. Press .



The following items are available:

- **City:** Selects your destination city.  
 **Selecting a City** P. 94
- **Street:** Selects your destination street.  
 **Selecting a Street** P. 95
- **House Number:** Enters the house number to select the street.  
 **Selecting a Street by House Number** P. 97
- **ZIP Code:** Enters the zip code to select the city.  
 **Selecting a City by Zip Code** P. 93
- **Change State:** Selects the state or province.  
 **Selecting the State or Province** P. 93

## ■ Selecting the State or Province

 **MENU** button ► **Address** ► **Change State**



Rotate  to select a state from the list. Press .

## ▣ Selecting the State or Province



Move ◀ or ▶ to select the following areas:

- **USA** for the U.S. mainland, Alaska, Hawaii, and Puerto Rico
- **Canada**
- **Mexico**

## ■ Selecting a City by Zip Code

 **MENU** button ► **Address** ► **ZIP Code**





1. Enter the zip code of your destination.
2. Move  to select **OK**. Press .

## ▣ Selecting a City by Zip Code

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.



3. Rotate  to select the destination city from the list. Press .

► Next, you are prompted to enter a street name.



➡ **Selecting a Street** P. 95

## ■ Selecting a City

 **MENU** button ► **Address** ► **City**

The name of the city where you are currently located is displayed.



1. Enter the name of a different city, or move  to select **OK** for the current city. Press .

## ✕ Selecting a City

Vehicle position may not be displayed when:



- The automobile is traveling off-road.
- The vehicle position data cannot be updated.

You do not need to enter spaces or symbols (e.g., &, -, %). Partial matches are supported (e.g., "ANGELES" to find "LOS ANGELES").


If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.



Non-detailed area mark: Try entering the street first and then select the city.

2. Rotate  to select your destination city from the list. Press .

- A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are highlighted.
- Next, you are prompted to enter a street name.

 **Selecting a Street** P. 95

### ► Selecting a Street



When entering the names of major freeways, you can use the following abbreviations. For interstates, use an "I" (e.g., I-10). For U.S. freeways, use "US" (e.g., US-18). For state freeways, use the two-character state designation (e.g., CA-101). For county roads, use the appropriate designation (e.g., G-2).

## Selecting a Street

 **MENU** button ► **Address** ► **Street**



1. Enter the name of your destination street.

- Do not enter the street type (e.g., street, road, avenue) or direction (e.g., north, south, east, west).
- Move  to select **OK** to display a list of streets. Press .



2. Rotate to select your destination street from the list. Press .

► A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list. Matching letters are highlighted.

3. Enter the street number.

► Only valid street numbers can be entered.

4. Move to select OK. Press .

5. Set the route to your destination.

► **Calculating the Route** P. 114

## ► Selecting a Street

If you did not select a city first and there is more than one city with the specified street, a list of cities is displayed.







Rotate to select the desired city from the list. Press .

## ■ Selecting a Street by House Number

 **MENU** button ► **Address** ► **House Number**






1. Enter the house number.
  - Only a valid house number can be entered.
2. Move  to select **OK**. Press .
  - If you did not yet select a street name, enter a street name when you are prompted.
3. Rotate  to select your destination street from the list. Press .
  - Select a city when you are prompted.
4. Set the route to your destination.
  - **Calculating the Route** P. 114

## Address Book


 **MENU button ► Address Book**

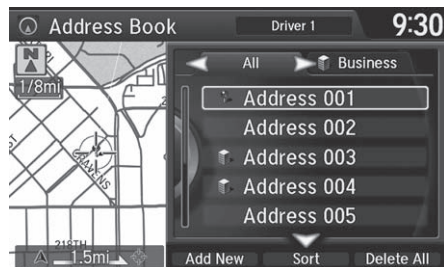
 
Select an address stored in your address book to use as the destination.




1. Rotate  to select your destination from the list. Press .


2. Set the route to your destination.

 **Calculating the Route** P. 114



► Move  or  to display only the entries in the categories you have created.


 **Selecting an Address Book Category** P. 44

### Address Book

If you have PIN-protected your address book, enter your PIN when prompted. Press  to select OK. PINs are optional.

 **PIN Numbers** P. 49


Move  and rotate  to select the following items:




- **Add New Address:** Adds an entry to the address book.  
 **Adding an Address Book Entry** P. 41
- **Sort:** Selects **Sort by Name** or **Sort by Distance**.
- **Delete All:** Deletes all entries in the address book.
- **Driver 1** or **Driver 2:** Displays the address book for the selected user.

## Previous Destination

### MENU button ▶ Previous Destination

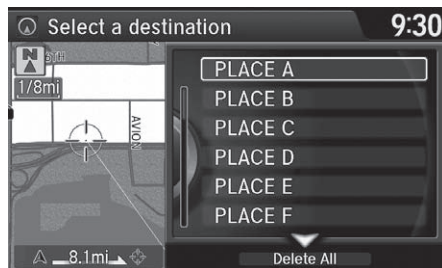Select an address from a list of your 50 most recent destinations to use as the destination. The list is displayed with the most recent destination at the top.



1. Rotate  to select a destination from the list. Press .
2. Set the route to your destination.  
 **Calculating the Route** P. 114

### Previous Destination

If **Previous Destination** is grayed out, there are no previous destinations entered.

Your home address and addresses stored in your address book are not added to the list of previous destinations.

Move  and rotate  to select **Delete All** to delete all previous destinations.

You can delete unwanted previous destinations from the list.

 **Previous Destination** P. 50






## Place Category



### MENU button ► Place Category

Select the category of a place (e.g., Banking, Lodging, Restaurant) stored in the map database to search for the destination.

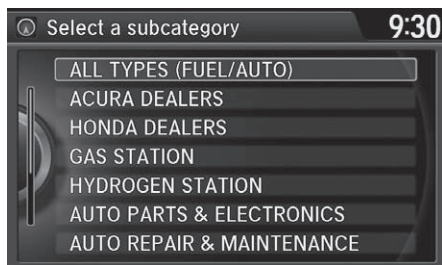


1. Rotate  to select a category.  
Press .



2. Rotate  to select a subcategory.  
Press .

### Place Category

This option is convenient if you do not know the exact name of a place or if you want to narrow down the number of matches returned for places with a common name.



Move  to select **Category History** to access your recently used place categories. Up to 30 categories can be stored.

You can also delete your recently used place categories.

### Category History P. 51

**Search POI Categories** helps you to search the subcategory. When you enter a keyword and select **OK**, the list of appropriate subcategories is displayed.



3. Rotate  to select an item. Press .



#### ►► Place Category

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown for the highlighted place.

The following items are available:

- **Search by Name:** Searches for a place in the subcategory by name. Enter a city name when prompted.
- **City Vicinity:** Searches for a place in the subcategory within a 20-mile radius of a specific city. Enter a city name and then a place name when prompted. Only the first 1000 matching places/landmarks are displayed.
- **Sort by Distance to Travel:** Displays all the places in the subcategory sorted by distance from your current location. The closest place is displayed at the top.



4. Rotate  to select a place name from the list. Press .


5. Set the route to your destination.



► **Calculating the Route** P. 114


## Local Search

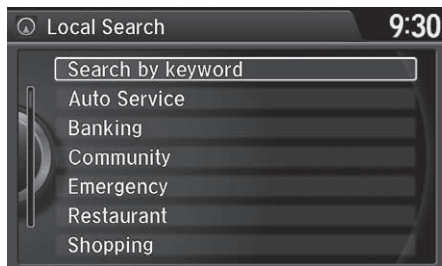

### MENU button ► Local Search

Select a place via Local Search database as the destination.

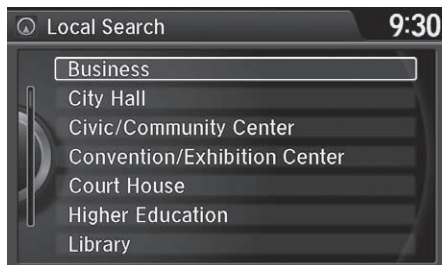

1. Rotate  to select a category (e.g., **Community**). Press .




2. Rotate  to select a subcategory. Press .



### Local Search

When you select **Search by keyword**, the list of appropriate categories is displayed.

The screen in this section may differ from the actual ones.

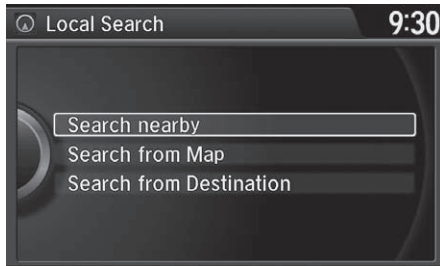Local Search is a subscription service. For more information, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com).



3. Rotate  to select an item. Press .

The following items are available:

- **Search nearby:** Finds the nearest POI around your vehicle.
- **Search from Map:** Selects a POI by scrolling the Interface Dial on the map screen.
- **Search from Destination:** Selects a POI around the destination. Search the category by scrolling the Interface Dial.


4. Set the route to your destination.



➤ **Calculating the Route** P. 114



## Place Name

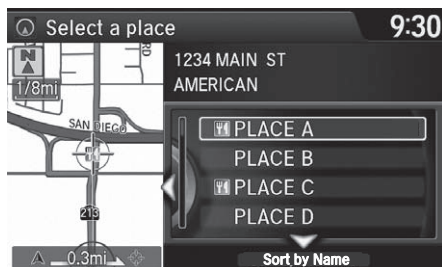 **MENU** button ► **Place Name**

Enter the name of a place (e.g., business, hotel, restaurant) stored in the map database to use as the destination.



1. Enter a place name.
2. Move  to select **OK** to display a list of matching hits. Press .

3. Rotate  to select a place name from the list. Press .


► If the place name is in multiple categories, the categories are displayed when you select it.



➤ **Place Name in Multiple Categories** P. 105


4. Set the route to your destination.  
➤ **Calculating the Route** P. 114

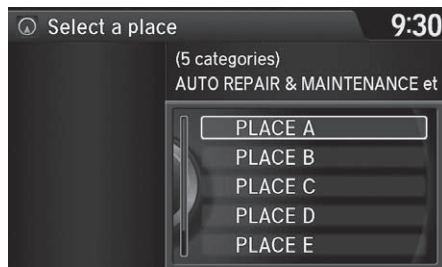

## ■ Place Name in Multiple Categories

If the place name is in multiple categories in the map database, the following screen is displayed.

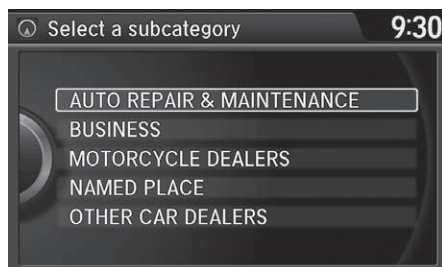


1. Rotate  to select a place name.  
Press .





2. Rotate  to select a subcategory.  
Press .

## ▣ Place Name in Multiple Categories

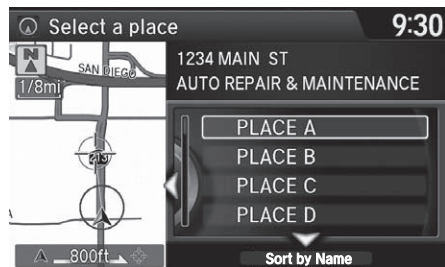Matching letters are in highlighted.




3. Rotate  to select a place. Press .

4. Set the route to your destination.

► **Calculating the Route** P. 114

#### ► Place Name in Multiple Categories




Move  to select **Sort by City** or **Sort by Distance**.

## Place Phone Number

 **MENU** button ► **More Search Methods** ► **Place Phone Number**

Select a destination by phone number. Only phone numbers in the database are recognized.





1. Enter the area code and phone number.
2. Rotate  to select OK. Press .
3. Set the route to your destination.  
 **Calculating the Route** P. 114

### Place Phone Number

All 10 digits must be entered.

Phone numbers of private residences entered in your address book are not stored in the database and thus cannot be used to search for a destination.


A list is displayed if there are multiple locations in the database with the same phone number. Rotate  to select a place from the list. Press .





## Download POI

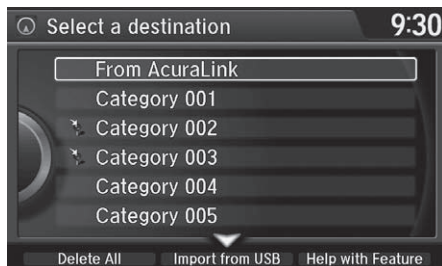

 **MENU** button ► **More Search Methods** ► **Download POI**

Select a place imported into the navigation system as the destination.




1. Rotate  to select a category from the list. Press .






2. Rotate  to select a place. Press .

3. Set the route to your destination.

 **Calculating the Route** P. 114

### Download POI

Move  and rotate  to select the following items:



- **Import from USB:** Imports POI data into the navigation system.  
 **Importing POI Categories** P. 52
- **Delete All:** Deletes all POI entries.
- **Help with Feature:** Views tips for the Download POI feature.



If you select **From AcuraLink**, you can download POI data stored on the AcuraLink® server.



## Scenic Route
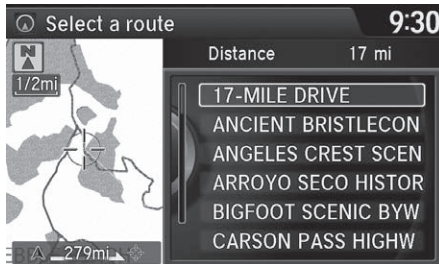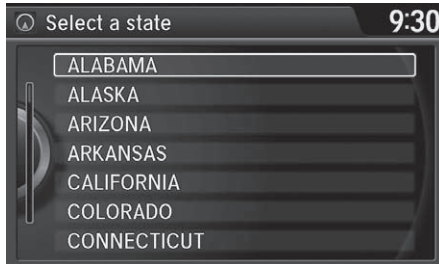
### MENU button ► More Search Methods ► Scenic Route

Select a scenic road as a destination (U.S. and Canada only).



1. Rotate  to select a state. Press .

2. Rotate  to select a scenic road. Press .

3. Set the route to your destination.

► **Calculating the Route** P. 114

### ► Scenic Route



If you select a scenic road that runs through multiple states, only the portion of the road in the selected state is displayed.

## Intersection


 **MENU** button ► **More Search Methods** ► **Intersection**

Select the intersection of two streets as the destination. The state or province for your current location is displayed at the top of the screen (e.g., California).






1. Rotate  to select the intersection search method. Press .

2. Set the route to your destination.


 **Calculating the Route** P. 114

The following options are available:

- **City:** Selects the city where the intersection is located. You are prompted to enter the name of the two intersecting streets.  
 **Selecting a City** P. 94
- **Street:** Selects the two intersecting streets. The city or cities that the streets are located in are displayed.  
 **Selecting a Street** P. 95
- **Change State:** Selects the state or province.  
 **Selecting the State or Province** P. 93

### Intersection

It is usually easier to select **Street** to find the streets first. The city or cities that the streets are in will be displayed. If you select **City** and your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

If the intersection is outside the state you are currently in, rotate  to select **Change State**.

 **Selecting the State or Province** P. 93

If there is more than one intersection, you are prompted to select the intersection. If the two streets that you have selected do not intersect, no intersection is entered.



## Map Input

 **MENU button** ▶ **More Search Methods** ▶ **Map Input**



Use the Interface Dial to manually select an icon or a location on the map screen as the destination.


You are prompted to define the map area to display.






1. Rotate  to select an item. Press .

The following items are available:

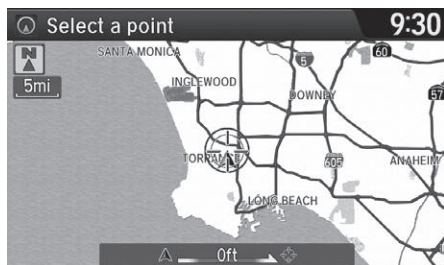
- **Current Position:** Your current location is centered on the map.
- **State:** You are prompted to select the state.  
 **Selecting the State or Province** P. 93
- **City:** You are prompted to select the city.  
 **Selecting a City** P. 94
- **USA, Canada and Mexico:** Your current location is displayed on a map of the country.



2. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary.
  - If the address is not the desired location, scroll the map to another location and try again.
3. Press  to display the route calculation menu.
  - **Calculating the Route** P. 114
4. Rotate  to select **Set as Destination**. Press .

## Map Input

### Auto Zoom

Press  repeatedly on the map to zoom in (to the scale 1/4 mile) while scrolling the map.

Information icons are displayed at scales from 1 mile to 1/4 mile. Place/landmark icons are displayed at 1/8 mile or less. Roads are displayed at 1/4 mile or less.


If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.

► **Selecting a Destination on the Map** P. 139


## Coordinate

 **MENU** button ► **More Search Methods** ► **Coordinate**

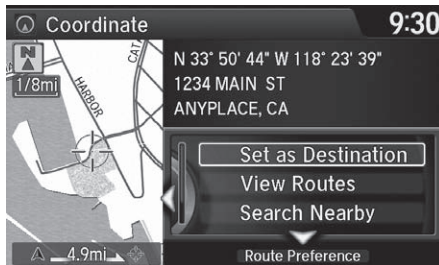


Specify a location using latitude and longitude map coordinates.



1. Enter the latitude and select **OK**.
2. Enter the longitude and select **OK**.

3. Move  to scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary.

► If the address is not the desired location, scroll to another location and try again.

4. Press  to display the route calculation menu.
  - **Calculating the Route** P. 114
5. Rotate  to select **Set as Destination**. Press .



### Coordinate

Latitude and longitude must be entered up to the seconds' value.

# Calculating the Route

 
This section describes how to calculate your route.



1. Rotate  to select **Set as Destination**. Press .

▶ The system calculates and displays the route line on the map screen.

➤ **Route Line** P. 118

▶ Move  to scroll the map around the destination.


The following options are available:

- **View Routes:** Displays three different routes.

➤ **Viewing the Routes** P. 115

- **Route Preference:** Move  to select **Route Preference** to change the route preferences (calculating method).

➤ **Route Preference** P. 56

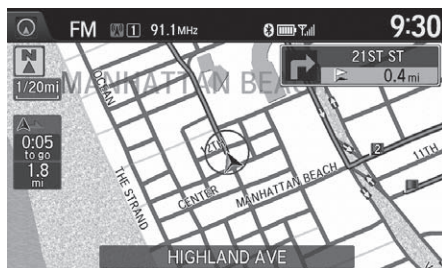

2. Follow the route guidance to your destination.

➤ **Driving to Your Destination** P. 116

▶ The system provides you with pop-up messages if your route passes through unverified areas, avoid areas, or areas with traffic restrictions.

## Calculating the Route

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown.

You cannot use voice commands while the system is calculating the route.

### Search Nearby

You can find the nearest place/landmark (e.g., nearest gas station) by specifying a category.

➤ **Find Nearest Place** P. 138

### Call

You can place a telephone call to the destination phone number.

➤ **Bluetooth® HandsFreeLink®** P. 226

### Save to Address Book

You can add the destination address to the address book.

➤ **Adding an Address Book Entry** P. 41

### Edit/Delete Entry

You can edit or delete the address book entry.

➤ **Editing an Address Book Entry** P. 43

### Edit Home Entry

You can edit your home address entry.

➤ **Home Address** P. 48

### More Info

You can view detailed information about the destination.

## Viewing the Routes

View three different routes to your destination.



Rotate  to select a route. Press .

- The travel distance and estimated travel time is displayed for each route.
- The system calculates and displays the route line on the map screen.

➤ **Route Line** P. 118

### Viewing the Routes

It is not unusual for some calculated route options to be identical.



This section describes how to follow the route guidance to your destination, receive traffic information and choose the icons displayed on the map screen.

## Viewing the Route

### Map Screen




After calculating the route to your destination, the route is displayed on the map screen.

➤ **Map Screen Legend** P. 9

As you drive, the system tracks your position on the map in real time and provides guidance as you approach each guidance point on the route.

➤ **During Route Guidance** P. 10

### Viewing the Route

You can change the map scale by rotating .


If you scroll the map while en route, the time and distance to destination indicators are replaced with an indicator showing distance from the current vehicle position.

You can display only the map screen or a split map-guidance screen.

➤ **Guidance Mode** P. 64

## Guidance Screen

The guidance screen offers an alternative way to view your route.

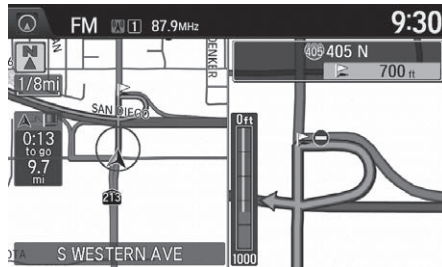

- ▶ The next guidance point is displayed as you approach each guidance point on the route.
- ▶ You can also view a list of guidance directions.

## Guidance Screen


A visual guide helps you check the guidance screen.

➤ **Guidance Screen** P. 10

### Turn-by-Turn Directions

The next guidance point appears on the multi-information display.

➤ **Turn-by-Turn Directions** P. 10

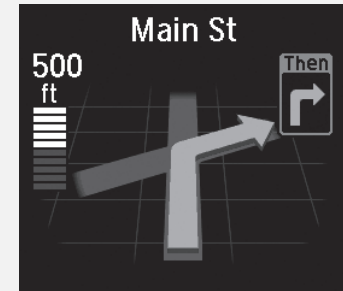


You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions.


## Route Line

When driving on verified streets, the route line is light blue. The route line display changes when driving on unverified streets:

Straight line guide

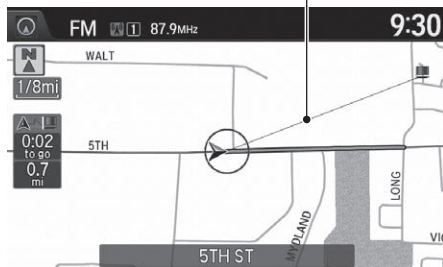

Blue-pink route line

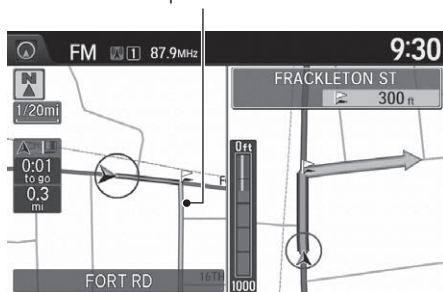

- If **Unverified Routing** is **Off**, the route line uses verified streets only (when possible). If **Straight Line Guide** is set to **On**, a pink “vector line” pointing directly towards your destination is displayed.  
**► Straight Line Guide** P. 78

- If **Unverified Routing** is **On**, the route line changes to a blue-pink line to indicate that the route line uses unverified streets.

## Route Line

You can set **Unverified Routing** to **Off** to follow your own route to the destination. If **Unverified Routing** is **On**, be aware that unverified streets may not be displayed accurately.

**► Unverified Routing** P. 57

The route line may also consist of red, orange, or green segments when traffic information is displayed.


**► Map Screen Legend** P. 9

**► Traffic Rerouting™** P. 127

## ■ Deviating From the Planned Route

If you leave the calculated route, the system automatically recalculates a route to the desired destination based on your current location and direction.


➤ **Route Preference** P. 56

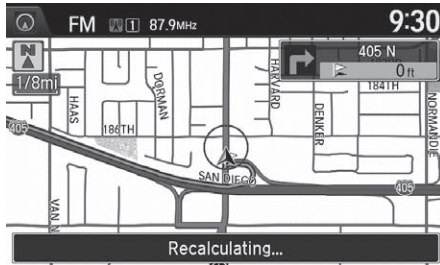

## ■ Tracking Dots

You can display a series of dots (breadcrumbs) to track the path you are taking. If needed, you can follow the dots back to the mapped road you originally left.

➤ **Display Tracking** P. 84

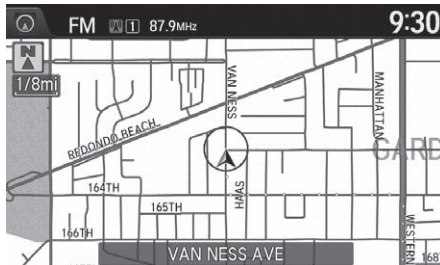

### » Tracking Dots


A message "Not on a digitized road" may appear when you drive 1/2 mile away from a mapped road.

Breadcrumbs may occasionally be displayed in urban areas, such as large parking lots in shopping malls, in new subdivisions where the roads are not yet in the database, or in areas where a GPS signal is unavailable, such as in a parking garage.

Breadcrumbs are limited to approximately 150 miles. Breadcrumbs at the beginning of the trail are deleted if you exceed that distance.

Breadcrumbs are displayed only at 1/20, 1/8, 1/4, and 1/2 mile map scales.

## Listening to Voice Guidance

 **ENTER** button (on map) ► **Voice**

As you approach each guidance point, a pop-up window is displayed on the map screen with instructions for you to follow. Voice guidance for each guidance point is also provided.

Typically, you hear three prompts:

- 1/2 mile from the guidance point (2 miles on freeway)
- 1/4 mile from the guidance point (1 mile on freeway)
- Just before the guidance point

To replay voice guidance, rotate  to select **Voice** in the Map Menu.

If you select **Voice** between guidance points, voice guidance for the next guidance point is provided.

### Listening to Voice Guidance

You can turn voice guidance OFF if you prefer. Press the **SETTINGS** button. Select **System Settings** and set **Guidance Volume** to **0**. You can also adjust **Guidance Volume** by rotating the volume knob while the route guidance or voice command confirmations is announced.

When driving in unverified areas, the phrase “if possible” is inserted before each voice guidance prompt.


**Voice** in the Map Menu may be grayed out if:



- The system is in process of gathering the route guidance information.
- The vehicle is out of the road (e.g., pulling in a parking lot).

The timing of voice guidance varies depending on the type of road you are on and the distance to the next guidance point.

## Reaching a Waypoint

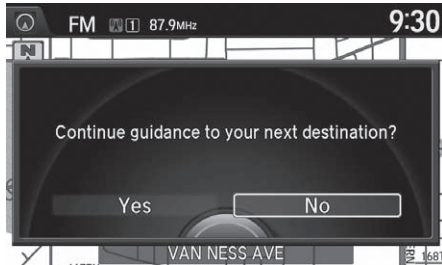When you reach a waypoint, a pop-up message is displayed. You can continue or pause the route guidance.






Rotate  to select **No** to pause the route guidance. Press .

► Select **Yes** to continue the guidance.


### ■ Resuming the route guidance


You can resume the route guidance in the following ways:

- Restart the engine when you stop your car (e.g., to rest, stop for gas, etc.).  
 **Resuming Your Trip** P. 141
- Select **Resume Guidance** from the navigation menu or the map menu.  
 **Map Menu** P. 122  
 **Changing Your Route** P. 129

## Displaying the Map Menu

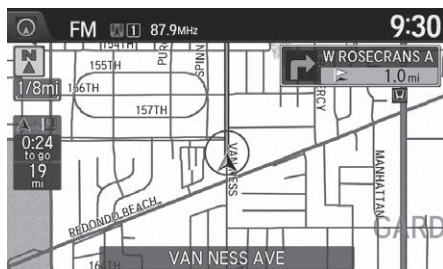

Use the Map Menu to control the icons displayed on the screen and to display traffic information and messages. You can also use the Map Menu to find locations or to cancel the route.



1. On the map screen, press .

► The Map Menu is displayed on the map screen.




2. Rotate  to select an item. Press .

The following items are available:

- **Voice:** Select to hear the voice guidance when en route.
  - ▣ **Listening to Voice Guidance** P. 120

### Map Menu

If you scroll the map while en route, press the **NAV** (or **BACK**) button to return to the current position map screen, then press .

- **Guidance Volume:** Adjusts the navigation system volume level.
- **Map/Guidance:** Allows you to select the map and guidance settings (display mode, icons to display on the map, map orientation, map color, and 3D view angle), display your current location and an overview of the map features.
  - **Guidance Mode** P. 64
  - **Showing Icons on Map** P. 72
  - **Color** P. 74
  - **View (Map Orientation)** P. 77
  - **3D Angle Adjustment** P. 78
  - **Current Location** P. 79
  - **Map Legend** P. 80
- **Pause Guidance:** Pauses your current route.
  - **Pausing the Route** P. 130
- **Resume Guidance:** Resumes your current route. This item is displayed while the route guidance is paused.
- **Hide Traffic Flow:** Hides the current traffic flow indicator on the map screen.
  - **Hide Traffic Flow** P. 124
- **Directions:** Displays a list of the guidance points.
  - **Directions** P. 125
- **Search Nearby:** Allows you to find the nearest place/landmark (e.g., nearest gas station) by specifying a category. You can then add the location to the list of destinations, set as a waypoint, or set as your destination.
  - **Find Nearest Place** P. 138
- **Traffic Incidents:** Displays a list of the traffic incidents around your current location or on your current route.
  - **Traffic Rerouting™** P. 127

## ➤ Map Menu

### **Traffic Incidents**

You must be in or near a traffic-enabled city to receive coverage for that area. Traffic information is available in certain areas in the lower 48 states.

➤ **Traffic Information** P. 358

The incident icons are displayed on the 5 mile or less map scale.

➤ **Map Scale and Functions** P. 81

### **Directions**

The system provides freeway exit information only in the U.S.




## Hide Traffic Flow

---



 **ENTER** button (on map) ► **Hide Traffic Flow**



Hide the traffic flow indicator on the map screen. Press the **ENTER** button and select **Display Traffic Flow** to display the traffic flow indicator on the map screen.

## Directions


 **ENTER** button (on map) ▶ **Directions**

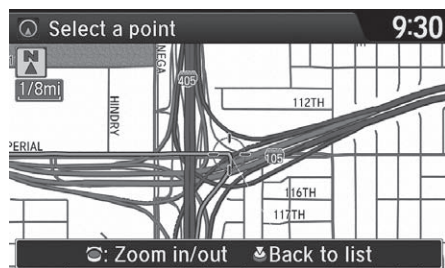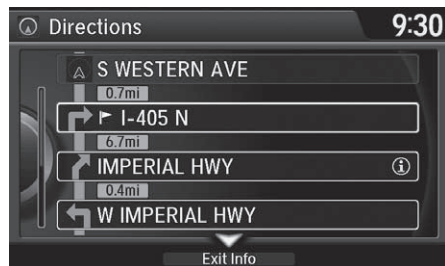Display a list of the guidance points on your route for your confirmation.





1. Rotate  to select a guidance point from the list. Press .

▶ The system displays a map of the guidance point.

2. Press  to select **Back to list** or press the **BACK** button to return to the previous screen.

### Directions

Guidance points with exit information are indicated by a  (freeway exit information) icon. Move  to select **Exit Info** to display the exit information.

▶ **Freeway Exit Information** P. 126


The system provides freeway exit information only in the U.S.

The route guidance information is automatically deleted when you reach your destination.

## Freeway Exit Information

📍 **ENTER** button (on map) ► **Directions** ► **Exit Info**

Display a list of the freeway exits for the route. You can view freeway exit information (whether the exit is near gas stations, restaurants, ATMs, etc.) and add new destinations or waypoints to the calculated route.

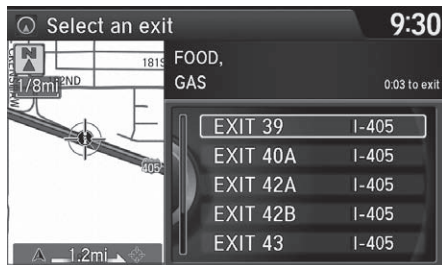

1. Rotate 🔄 to select an exit from the list. Press 📍.



2. Rotate 🔄 to select a list item. Press 📍.

► Move ◀○ or ○▶ to display information for different exits.

► You can set the route to your destination.

📌 **Calculating the Route** P. 114

## Freeway Exit Information

You can scroll the map and select a 📍 (freeway exit information) icon on the map screen to display the freeway exit information. The 📍 icon is only displayed if there is exit information available.

Icons are displayed only at 1/4, 1/2, or 1 mile scale.

📌 **Map Scale and Functions** P. 81

The system provides freeway exit information only in the U.S.

The route guidance information is automatically deleted when you reach your destination.

## Traffic Rerouting™

When driving to your destination, the system automatically searches for a faster route based on traffic flow information and traffic incidents.

➤ **Map Screen Legend** P. 9

➤ **Traffic Rerouting** P. 59



### Traffic Rerouting™ Manually

🗲 **ENTER** button (on map) ► **Traffic Incidents**

Manually avoid specific incidents and/or congestion on your route:



1. Rotate 🌀 to select an incident from the list. Press 🗲.

► The system displays the map screen and the incident location.

### ⌘ Traffic Rerouting™

Traffic information is only available in certain areas.

Automatic traffic rerouting may not provide a detour route depending on circumstances.

The route is recalculated only when **Traffic Rerouting** is set to **On**.

➤ **Traffic Rerouting** P. 59



### ⌘ Traffic Rerouting™ Manually

Traffic rerouting is only available in certain areas.


You must be in or near a traffic-enabled city to receive coverage for that area. Traffic information is available in certain areas in the lower 48 states, Hawaii, and some cities in Canada.

➤ **Traffic Information** P. 358



2. Rotate  to select **Avoid**. Press .

► Repeat step 1 to 2 as necessary.

3. Move  to select **Reroute**. Press .

► The system recalculates a detour route that avoids the traffic incidents.

#### ► Traffic Rerouting™ Manually

You can choose to avoid up to 10 traffic incidents. It is not always possible for the system to calculate a route that avoids all traffic incidents or specific traffic incidents you select.


The “On Route” tab on the Traffic List screen is only available during route guidance.

You cannot select an incident to avoid from the “All” tab.

You can also detour around a traffic incident manually if you encounter an unexpected obstacle.

► **Taking a Detour** P. 137

# Changing Your Route






 **MENU** button (when en route)

This section describes how to alter your route, add an interim “waypoint” (pit stop), choose a different destination, cancel your current destination, and continue your trip after stopping.



Rotate  to select an item. Press .

The following items are available:

- **Voice:** Select to hear the voice guidance when en route.  
 **Listening to Voice Guidance** P. 120
- **Destination List:** Shows a list of waypoints. You can delete waypoints or edit the order of them.  
 **Editing the Destination List** P. 135
- **Pause Guidance:** Pauses your current route.  
 **Pausing the Route** P. 130
- **Resume Guidance:** Resumes your current route. This item is displayed while the route guidance is paused.
- **Cancel Route:** Cancels the route guidance.  
 **Canceling the Route** P. 130
- **View Routes:** Displays three different routes.  
 **Viewing the Routes** P. 115

## Changing Your Route

If you press the **MENU** button when not en route, the Destination Menu screen is displayed.

 **Entering a Destination** P. 90

- **Change Route Preference:** Changes the route preferences (calculating method).  
    🗑️ **Route Preference** P. 56
- **Detour:** Calculates a detour route.  
    🗑️ **Taking a Detour** P. 137
- **Avoid Streets:** Avoids streets along your route.  
    🗑️ **Avoiding Streets** P. 137

## Pausing the Route

🗑️ **MENU** button (when en route) ► **Pause Guidance**

Pause the route guidance and return to the map screen. The destination icons and all waypoint flags remain displayed on the map. Press the **MENU** button when en route and select **Resume Guidance** to resume the route guidance.

## Canceling the Route

🗑️ **MENU** button (when en route) ► **Cancel Route**

Cancel the route guidance and remove the destination and all waypoints from the destination list. The system then returns to the map screen.

### 🗑️ Pausing the Route

You can also pause your route from the Map Menu.

🗑️ **Map Menu** P. 122


### 🗑️ Canceling the Route

You can also cancel your route from the Map Menu.

🗑️ **Map Menu** P. 122

## Adding Waypoints

Add up to four waypoints (pit stops) along the route to your destination.

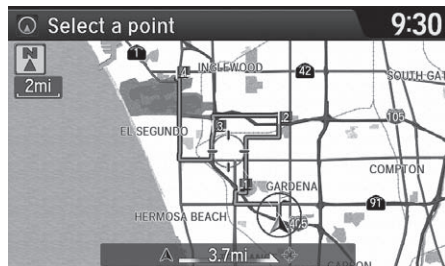

Waypoints are displayed on the map screen as small, numbered red flags. The route follows the waypoints in the order they are listed in the Destination List.

### ► Adding Waypoints

Waypoints allow you to stop for gas or food, for example, and then continue on to your destination.

Press the **NAV** button to return to the map screen without adding a waypoint at any time.

The search corridor used for adding waypoints can be adjusted.

► **Edit POI Search Radius Along Route** P. 60

You can delete waypoints or edit the order of waypoints in the destination list.

► **Editing the Destination List** P. 135



## ■ Adding Waypoints from the Route Menu


📍 **MENU** button (when en route) ► **Destination List** ► **Add New Destination**  
► **Find Along Route**



1. Rotate 🔄 to select a search method to add a waypoint. Press 📍.

The following items are available:

- **Search Around:** Searches in a spiral pattern around the location you select.
- **Search Along:** Searches within a “corridor” on either side of the locations you select.

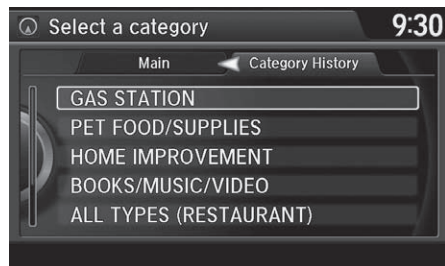

2. Rotate 🔄 to select a waypoint category (e.g., **GAS STATION**). Press 📍.


## ▣ Adding Waypoints



### Search method

“Search around” method




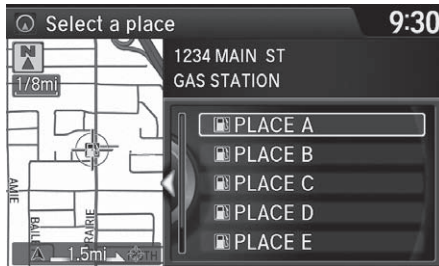

“Search along” method




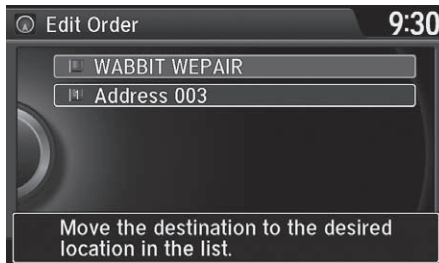


3. Rotate  to select a place. Press .

► The waypoint is added to the Destination List.

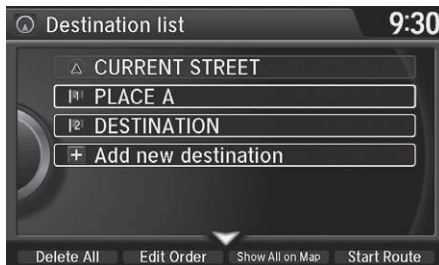

4. Rotate  to select a location and move the order of destinations. Press .




5. Move  and rotate  to select **Start Route**. Press .

► The route is automatically recalculated and displayed on the map screen.

## ■ Adding Waypoints from the Navigation Menu

📍 **MENU** button (when en route) ► **Destination List** ► **Add New Destination**  
 ► **Use Nav Menu**

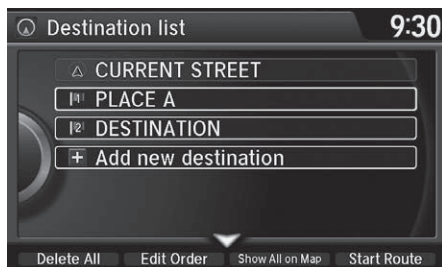

1. Rotate 🔄 to select a method to enter a waypoint.  
 ➤ **Entering a Destination** P. 90  
 ► A new destination is added to the end of the Destination list.

2. Move 📍 and rotate 🔄 to select **Start Route**. Press 🔄.  
 ► The route is automatically recalculated and displayed on the map screen.


## ▣ Adding Waypoints from the Navigation Menu


You can edit the order of waypoints and destination.




➤ **Editing the Destination List** P. 135


## Editing the Destination List

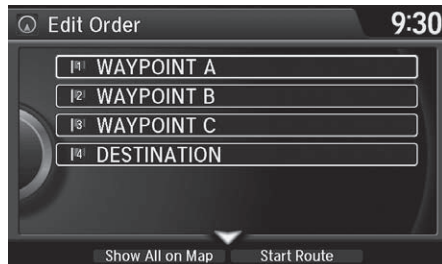

### ■ Editing the Order of Waypoints




 **MENU** button (when en route) ► **Destination List**



1. Move  and rotate  to select **Edit Order**. Press .



2. Rotate  to select a list item to move. Press .

3. Rotate  to select a new location. Press .

4. Move  and rotate  to select **Start Route**. Press .

► The route is automatically recalculated and displayed on the map screen.



### ▣ Editing the Order of Waypoints


Move  to rotate  to select **Show All on Map** to display the destination and waypoints on the map screen.



## Deleting Waypoints

 **MENU** button (when en route) ► **Destination List**

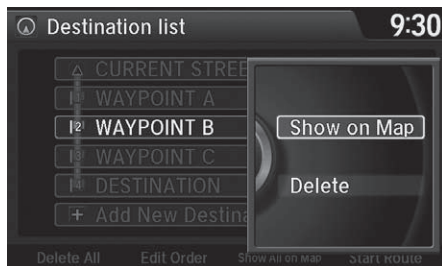


1. Rotate  to select a list item to delete. Press .



2. Rotate  to select **Delete**. Press .

3. Rotate  to select **Yes**. Press .

## Deleting Waypoints

Move  and rotate  to select **Delete All** to delete the destination and all the waypoints.

Select **Show on Map** to display the waypoint on the map screen.

## Taking a Detour



 **MENU** button (when en route) ► **Detour**



Calculate a detour route manually. The system attempts to calculate a new route by avoiding the next 5 miles (while on a freeway) or 1 mile (while on a surface street).

## Avoiding Streets

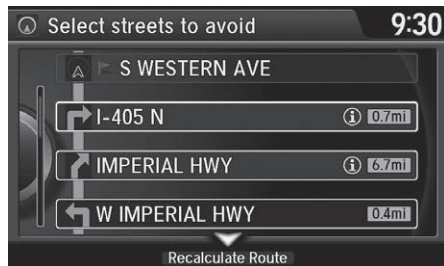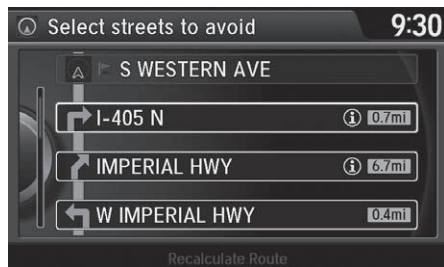

 **MENU** button (when en route) ► **Avoid Streets**

Select a street or streets along your route to avoid.



1. Rotate  to select the street you want to avoid. Press .

► Repeat the procedure to avoid other streets.

2. Move  to select **Recalculate Route**. Press .

► The system calculates a new route.

### » Taking a Detour

The detour option is convenient if you encounter an unexpected obstacle such as a road closure or extremely heavy traffic congestion.

### » Avoiding Streets

Avoiding certain streets is convenient if you know of road construction, road closures, or excessive traffic along the route.

You cannot choose specific streets you want to use, only those to avoid. However, you can select intersections or waypoints (places/landmarks) that the system will use in your route.

### » Adding Waypoints P. 131



You can store up to 10 streets to avoid. You cannot avoid your current street or the streets of your waypoint(s) or destination (system beeps if selected).









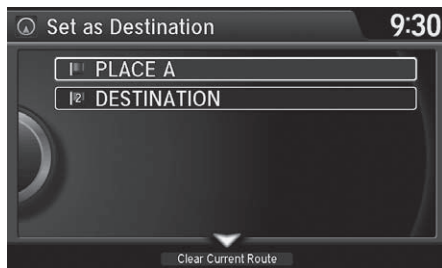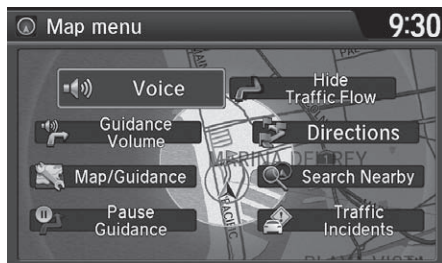



There are several methods you can use to change the route destination.

## Find Nearest Place

 **ENTER** button (on map) ► **Search Nearby**



Search for the nearest place/landmark on the map screen and set it as your destination.







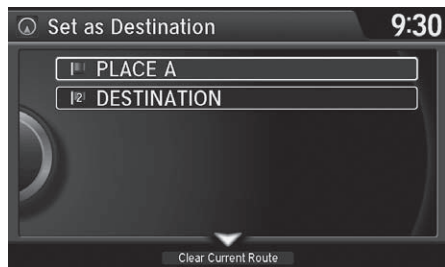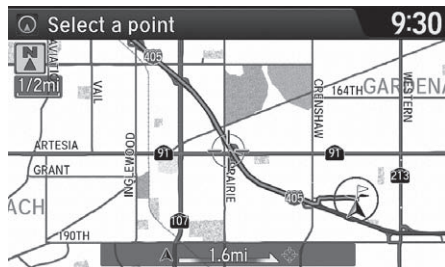


1. Rotate  to select **Search Nearby**. Press .
  2. Rotate  to select a category type. Press .
  3. Rotate  to select a place. Press .
  4. Rotate  to select **Set as Destination**. Press .
  5. Move  to select **Clear Current Route**. Press .
- The route is automatically recalculated and displayed on the map screen.
- Rotate  to edit the order to set the location as a new waypoint. Press .

## Selecting a Destination on the Map

Select a new destination when en route by selecting a location on the map.





1. Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press .
  - If the address displayed is not the desired location, press the **BACK** button and repeat the procedure.
2. Rotate  to select **Set as Destination**. Press .
  - **Calculating the Route** P. 114

3. Move  to select **Clear Current Route**. Press .
  - The route is automatically recalculated and displayed on the map screen.
  - Rotate  to edit the order to set the location as a new waypoint. Press .

### ► Selecting a Destination on the Map


If there is more than one icon or street under the map cursor, you are prompted to select the item from a list.

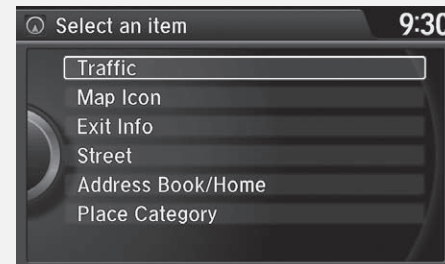

Rotate  to select an item. Press .




## Entering a New Destination

 **MENU** button (when en route) ► **Destination**



Enter a new destination using the Destination Menu screen even when you are en route.

 


1. Rotate  to select a method to enter a new destination.



► **Entering a Destination** P. 90


► After entering a new destination, the address is displayed on the Calculate Route screen.

2. Rotate  to select **Set as Destination**. Press .

3. Move  to select **Clear Current Route**. Press .

 ► The route is automatically recalculated and displayed on the map screen.

► Rotate  to edit the order to set the location as a new waypoint. Press .

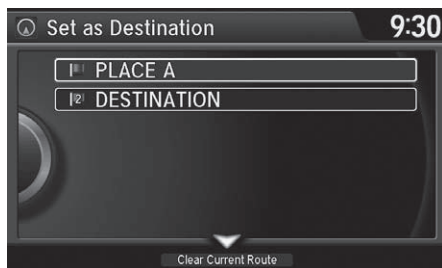




# Resuming Your Trip


Stop your vehicle en route (e.g., to rest, stop for gas, etc.), and then continue on your route.

If you did not complete your route, the Continue Trip screen is displayed when you restart your vehicle.



 Rotate  to select **Set as Destination**. Press .


- ▶ You can continue on the same route.
- ▶ Move  to scroll the map around the destination.
- ▶ Press the **BACK** button to cancel your destination.

- **Route Preference:** Move  to select **Route Preference** to change the route preferences (calculating method).
  - ▶ **Route Preference** P. 56
- **View Routes:** Displays three different routes.
  - ▶ **Viewing the Routes** P. 115

## ▶▶ Resuming Your Trip

The Continue Trip screen has the same options as when you calculate a route.

▶ **Calculating the Route** P. 114

You can also cancel your destination by pressing any hard button except the  button

### **Search Nearby**

You can find the nearest place/landmark (e.g., nearest gas station) by specifying a category.

▶ **Find Nearest Place** P. 138

### **Call**

You can place a telephone call to the destination phone number.

▶ **Bluetooth® HandsFreeLink®** P. 226

### **Save to Address Book**

You can add the destination address to the address book.

▶ **Adding an Address Book Entry** P. 41

### **Edit/Delete Entry**

You can edit or delete the address book entry.

▶ **Editing an Address Book Entry** P. 43

### **Edit Home Entry**

You can edit your home address entry.

▶ **Home Address** P. 48

### **More Info**

You can view detailed information about the destination.



# Audio

This section describes how to operate the audio system. You can play music from a wide array of media sources, and control the audio system using the audio buttons, the Interface Dial, or voice control.

<b>Audio System</b> .....	144
About Your Audio System .....	144
USB Ports .....	145
Auxiliary Input Jack .....	147
Audio System Theft Protection .....	148
Setting Audio Shortcuts .....	149
Customizing Audio Source .....	150
<b>Audio Remote Controls</b> .....	151
Steering Wheel Controls .....	151
<b>Audio Settings</b> .....	152
Adjusting the Sound .....	154
<b>Playing FM/AM Radio</b> .....	156
Selecting FM/AM Mode .....	156
Audio Screen Control .....	156
Audio Menu .....	159
<b>Playing SiriusXM® Radio</b> .....	162
Selecting SiriusXM® Mode .....	162
Audio Screen Control .....	162


Audio Menu .....	176
SiriusXM® Radio Service .....	179
<b>Playing a Disc</b> .....	180
Selecting Disc Mode .....	180
Audio Screen Control .....	181
Audio Menu .....	182
Recommended CDs .....	185
<b>Playing Hard Disc Drive (HDD) Audio</b> .....	187
Selecting HDD Mode .....	187
Recording a Music CD to HDD .....	188
Audio Screen Control .....	189
Audio Menu .....	190
<b>Playing an iPod®</b> .....	199
Selecting iPod® Mode .....	200
Audio Screen Control .....	201
Audio Menu .....	203
Song By Voice™ (SBV) .....	206

<b>Playing Internet Radio</b> .....	211
Selecting Internet Radio Mode .....	211
Pandora® Menu .....	212
Aha™ Radio Menu .....	214
<b>Playing a USB Flash Drive</b> .....	216
Selecting USB Mode .....	217
Audio Screen Control .....	218
Audio Menu .....	219
<b>Playing Bluetooth® Audio</b> .....	222
Selecting Bluetooth® Audio Mode .....	222
Audio Screen Control .....	223

## About Your Audio System

The audio system features AM/FM radio and the SiriusXM® Radio service. It can also play audio CDs, WMA/MP3/AAC files, Hard Disc Drive (HDD) audio, USB flash drives, and iPod®, iPhone® and *Bluetooth*® devices.

You can operate the audio system from the buttons and switches on the panel or the remote controls on the steering wheel, or the icons on the On Demand Multi-Use Display™.

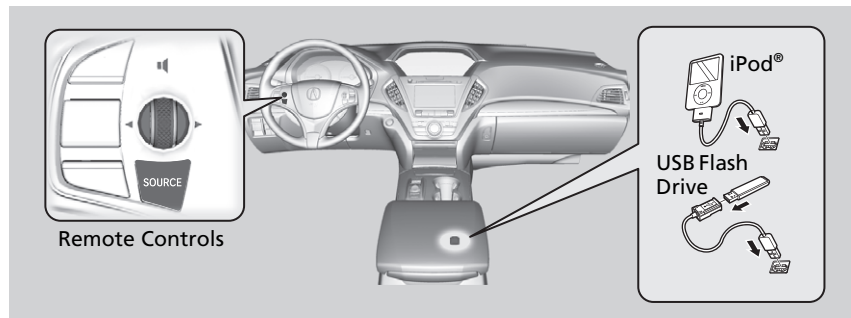

### ▣ About Your Audio System

SiriusXM® Radio is available on a subscription basis only. For more information on SiriusXM® Radio, contact a dealer.

▣ **SiriusXM® Radio Service** P. 179

SiriusXM® Radio is available in the United States and Canada, except Hawaii, Alaska, and Puerto Rico.

SiriusXM® is a registered trademark of SiriusXM Radio, Inc.


Video CDs, DVDs, and 3-inch (8-cm) mini CDs are not supported.

iPod® and iPhone® are registered trademarks owned by Apple Inc.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.

## USB Ports

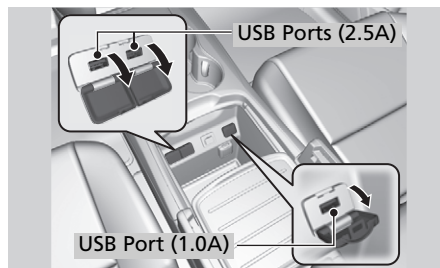

Models without RES or Ultrawide RES



Models with RES or Ultrawide RES



### ■ In the front console compartment

The USB port (1.0A) is for playing audio files on a USB flash drive and connecting a cellular phone and charging device.

The USB ports (2.5A) are only for charging devices.

### ■ On the back of the front console compartment\*

The USB ports (2.5A) are only for charging devices.

### ⌘ USB Ports

- Do not leave the iPod® or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend using an extension cable with the USB port.
- Do not connect the iPod® or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.


If the audio system does not recognize the iPod®, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod® or visit [www.apple.com/ipod](http://www.apple.com/ipod).

\*: Not available on all models



### ■ In the rear console compartment\*

The USB ports (2.5A) are only for charging devices.

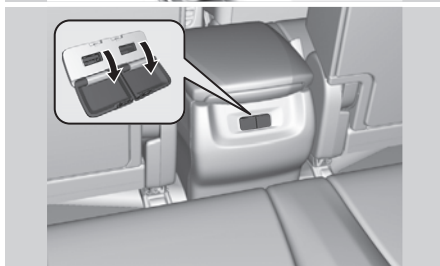

### ■ On the back of the rear console compartment\*

The USB ports (2.5A) are only for charging devices.

### ⌘ USB Ports

The USB port can supply up to 1.0A or 2.5A of power. It does not output 1.0A or 2.5A unless requested by the device.

For amperage details, read the operating manual of the device that needs to be charged. Set the power mode to ACCESSORY or ON first.

#### USB Ports (2.5A)

This port is for battery charge only. You cannot play music even if you have connected a music player to it.

Under certain conditions, a device connected to the port may generate noise in the radio you are listening to.

\*: Not available on all models

## Auxiliary Input Jack



Use the jack to connect standard audio devices.

1. Open the AUX cover.
2. Connect a standard audio device to the input jack using a 1/8 inch (3.5 mm) stereo miniplug.
  - ▶ The audio system automatically switches to the AUX mode.

### ▣ Auxiliary Input Jack

You can return to the AUX mode by selecting **Change Source** on the Audio menu screen or **Source** on the On Demand Multi-Use Display™.



## Audio System Theft Protection

---

The audio system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.

### ■ Reactivate the audio system

1. Set the power mode to ON.
2. Turn on the audio system.
3. Press and hold the audio system power button for more than two seconds.
  - The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognize the audio unit, you must go to a dealer and have the audio unit checked.

## Setting Audio Shortcuts

You can store up to six radio stations, and HDD audio album/play lists when playing AM, FM, or SiriusXM® radio, or HDD audio.

### ▶▶ Setting Audio Shortcuts

You can also preset a station or song by pressing and holding the preset icon you want to store that station or song after step 3.

### ■ Storing a station or song



1. Select **Shortcuts**.
2. Tune to a radio station or select a song.
  - ▶ **Playing FM/AM Radio** P. 156
  - ▶ **Playing SiriusXM® Radio** P. 162
  - ▶ **Playing Hard Disc Drive (HDD) Audio** P. 187
3. Select **Audio**.
4. Select **Edit** or **No Entry**.
  - ▶ If you select **No Entry**, go to step 6.
5. Select **Add**.
6. Select the preset icon you want to store the station or song to.



Continued

## ■ Deleting a preset station or song

1. Select **Shortcuts**.
2. Select **Audio**.
3. Select **Edit**.
4. Select **Delete**.
5. Select the preset icon with the radio station or a song you want to delete.

## Customizing Audio Source

You can customize order of the source list icons.




1. Select **Source**.
2. Select **Edit Order**.
3. Select two icons you want to swap.
4. Select **Done**.
  - Select **Default** to reset the customized order.

### ⌘ Customizing Audio Source

This operation is not allowed while the vehicle is in motion.

## Steering Wheel Controls

Allows you to operate the audio system while driving.

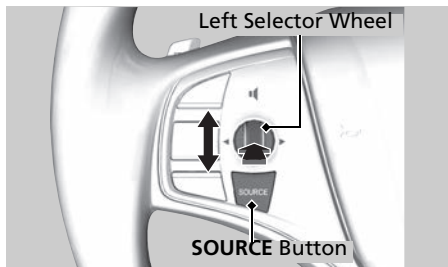

### SOURCE Button

Cycles through the audio modes as follows:

FM→AM→SiriusXM®→CD→HDD→  
USB→iPod®→*Bluetooth*® Audio→  
Pandora®→Aha™→AUX

### Left Selector Wheel

**Roll Up:** To increase the volume.

**Roll Down:** To decrease the volume.

**Push:** To mute. Push again to unmute.

- When listening to the radio
  - Move to the right:** To select the next preset radio station.
  - Move to the left:** To select the previous preset radio station.
  - Move to the right and hold:** To scan to the next strong station.
  - Move to the left and hold:** To scan to the previous strong station.
- When listening to a CD, HDD, iPod®, USB flash drive, or *Bluetooth*® Audio
  - Move to the right:** To skip to the next song.
  - Move to the left:** To go back to the beginning of the current or previous song.
  - Move to the right and hold:** To go to the next folder. (*Bluetooth*® Audio only)
  - Move to the left and hold:** To go to the previous folder. (*Bluetooth*® Audio only)
- When listening to a CD, HDD or USB flash drive
  - Move to the right and hold:** To skip to the next folder.
  - Move to the left and hold:** To go back to the previous folder.
- When listening to Pandora® or Aha™
  - Move to the right:** To skip to the next song.
  - Move to the right and hold:** To select the next station.
  - Move to the left and hold:** To select the previous station.

### Audio Remote Controls

The CD mode appears only when a CD is loaded.

 

The USB mode, iPod® mode, *Bluetooth*® Audio mode, Pandora® mode, and Aha™ mode appear when a connection (*Bluetooth* or USB) is established with a device.

To select audio mode, press the **SOURCE** button, then move the left selector wheel to the right or left.

## **SETTINGS** button ► **Audio Settings**




1. Move ◀○ or ○▶ to select an audio mode you want to set.

2. Rotate  to select an item. Press .

The following items are available:


- **SportsFlash™** (SXM mode):
  - Notification:** Turns on and off the sports alert function.
  - Beep:** Causes the system to beep when the sports alert is notified.
  - Favorite Teams:** Selects your favorite sport teams.
- **Play Song from Beginning** (SXM mode): Turns on and off the Tune Start function.
- **Traffic & Weather Now Setup** (SXM mode): Selects a city for using the SiriusXM® traffic and weather information.
- **Channel Art** (SXM mode): Turns on and off the channel art display.
- **Recording from CD** (CD mode): Selects whether the songs on music CDs are automatically recorded to the HDD.
- **Recording Quality** (CD mode): Selects the quality of the music files recorded to the HDD.
- **HDD Info** (HDD mode): Displays the HDD capacity.





- **Update Gracenote Album Info** (CD or HDD mode): Updates the Gracenote® Album Info (Gracenote® Media Database) from CD or from USB.  
 **Updating Gracenote® Album Info** P. 197
- **Delete All HDD Data** (HDD mode): Resets all the menu and customized settings, and delete all music data on the HDD.
- **Bluetooth Device List**: Displays the *Bluetooth*® device list.
- **Connect Bluetooth Audio Device** (*Bluetooth*® Audio, Pandora® or Aha™ mode): Connects, disconnects or pairs a *Bluetooth*® Audio device to HFL.
- **DVD Auto Play** (DVD mode): Turns the auto play feature on or off.
- **Audio Language** (DVD mode): Selects a language for the audio that is available on the DVD.
- **Subtitle Language** (DVD mode): Selects a language for the subtitle that is available on the DVD.
- **Menu Language** (DVD mode): Selects a language for the DVD menu that is available on the DVD.
- **Dynamic Range** (DVD mode): Sets whether to control the range of the loud and low sounds.
- **Source Select Popup**: Selects whether the list of selectable audio sources comes on when the **AUDIO** button is pressed.
- **HD Radio Mode** (AM/FM mode): Selects whether the audio system automatically switches to the digital radio waves or receives the analogue waves only.
- **Cover Art** (CD (MP3/WMA/AAC), iPod®, USB, Pandora® or Aha™ mode): Turns on and off the cover art display.
- **Default**: Cancels/Resets all customized items in the Audio Settings group as default.


## Adjusting the Sound
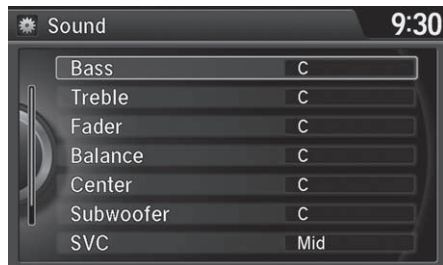
### Interface Dial

 **MENU** button ▶ **Sound**



1. Rotate  to select the sound mode to adjust. Press .
2. Rotate  to adjust the desired level. Press .

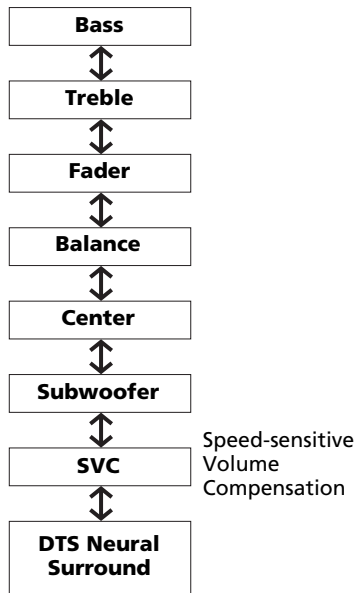

### Adjusting the Sound

The SVC has four modes: **Off**, **Low**, **Mid**, and **High**.

SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

DTS Neural Surround is a trademark of DTS, Inc.

# On Demand Multi-Use Display™



1. Select **More**.
2. Select **Sound**.
3. Use **+**, **-** or other icon to adjust the setting.
  - ▶ Use the / icons to turn the page.
  - ▶ Select to go back to the previous screen.

## ▶▶ Adjusting the Sound

Select **Off**, **Low**, **Mid** or **High** for the SVC setting.

▶ **Adjusting the Sound** P. 154





You can also adjust the sound to select on the On Demand Multi-Use Display™.



# Playing FM/AM Radio

## Selecting FM/AM Mode

### Interface Dial


1. Press the **MENU** button. (in AUDIO mode)
  2. Rotate  to select **Change Source**. Press .
  3. Rotate  to select the frequency band (FM, AM). Press .
- ▶ The band and frequency are displayed on the audio/information screen.

### On Demand Multi-Use Display™




1. Select **Source**.
  2. Select the frequency band (AM, FM) icon.
- ▶ The band and frequency are displayed on the On Demand Multi-Use Display™.

## Audio Screen Control

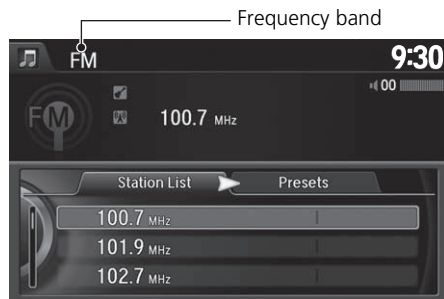Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



### Interface Dial

- Rotate  to select a station from the list. Press .
- ▶ Rotate  and select **Refresh** to update the station list at any time.
- ▶ Press **MENU** button to display the menu items.
- **Audio Menu** P. 159

### ▶ Playing FM/AM Radio

You can control the AM/FM radio using voice commands.

#### ➤ **Voice Control Operation** P. 6

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Stereo reproduction in AM is not available.


The radio can receive the complete AM and FM bands:

AM band: 530 to 1710 kHz

FM band: 87.7 to 107.9 MHz

You can store 6 AM stations and 12 FM stations into the preset memory.

# On Demand Multi-Use Display™

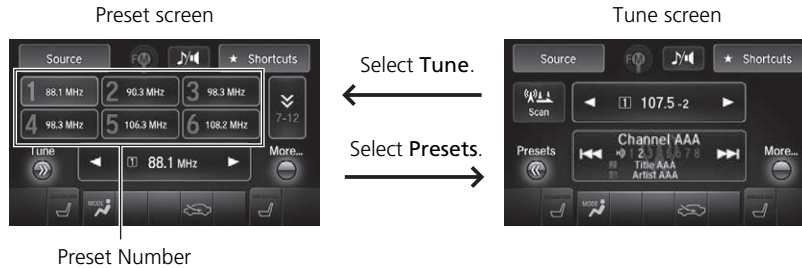




The following items are available:

- ◀ ▶: Tune the radio frequency. Select and hold to search that station on preset screen.
- ⏮ ⏭: Search up and down the selected band for a station with a strong signal.
- Preset Number**: Select and hold a desired number where you want to store the station. Select to listen a preset station.
- More**: Display the menu items.  
**Audio Menu** P. 159
- Scan**: Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.

## ■ Preset Memory

### Interface Dial

To store a station:

1. Tune to the desired station.
2. Move  to select **Preset**s.
3. Rotate  to select a desired number on the preset station list.
4. Press and hold  a few seconds to store the current station.

To listen to a stored station, rotate  to select the preset number. Press .

### On Demand Multi-Use Display™


To store a station:

1. Tune to the selected station on preset screen.
2. Select and hold a desired number.

To listen to a stored station, select the preset number.

## Audio Menu


### Interface Dial



 **MENU** button (in FM/AM mode)



Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Scan:** Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.
- **Refresh Station List:** Updates a station list.
- **Save Preset:** Stores the station into the preset memory.
- **Change Source:** Changes the audio source mode.


- **Radio Text:** Displays the text information broadcast by the current RDS station.
- **Tune/Seek:** Tunes the radio to the frequency you select. Rotate  to select a frequency, then Move .
- **HD Subchannel:** Displays the subchannel list when an HD Radio™ station is selected.

▣ Audio Menu



HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio and “Arc” logos are proprietary trademarks of iBiquity digital Corp.

# On Demand Multi-Use Display™

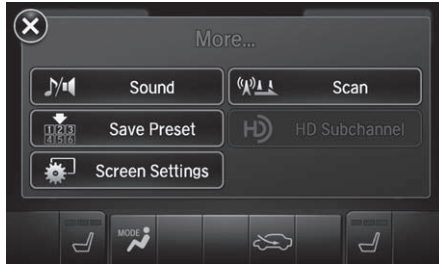





1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound:** Displays the sound preferences screen.  
➤ **Adjusting the Sound** P. 154
- **Scan:** Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current selection.
- **Save Preset:** Stores the station into the preset memory.
- **Screen Settings:** Adjusts the screen's preferences.  
➤ **Changing the Screen Settings** P. 87
- **HD Subchannel:** Displays the subchannel list when an HD Radio™ station is selected.

## Selecting SiriusXM® Mode

### Interface Dial


1. Press the **MENU** button. (in AUDIO mode)
  2. Rotate  to select **Change Source**. Press .
  3. Rotate  to select **SXM**. Press .
- ▶ The band and channel are displayed on the audio/information screen.

### On Demand Multi-Use Display™






1. Select **Source**.
  2. Select the SiriusXM icon.
- ▶ The category and channel are displayed on the On Demand Multi-Use Display™.
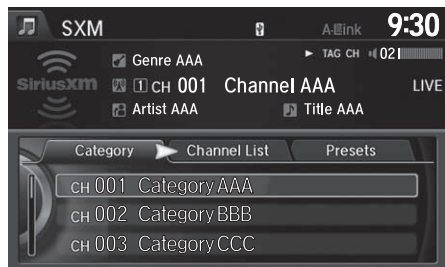
## Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



### Interface Dial

1. Rotate  to select a category. Press .
  - ▶ Move  if you want to select from the current channel list or presets.
  2. Rotate  to select a channel. Press .
  - ▶ Press **MENU** button to display the menu items.
- ▶ **Audio Menu** P. 176

### ▶ Playing SiriusXM® Radio

You can control the SiriusXM® radio using voice commands.


#### ▶ **Voice Control Operation** P. 6

In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when SiriusXM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.

SiriusXM® Radio station load in ascending order, which can take about a minute. Once they have loaded, you can scroll up or down to make your selections.

## On Demand Multi-Use Display™

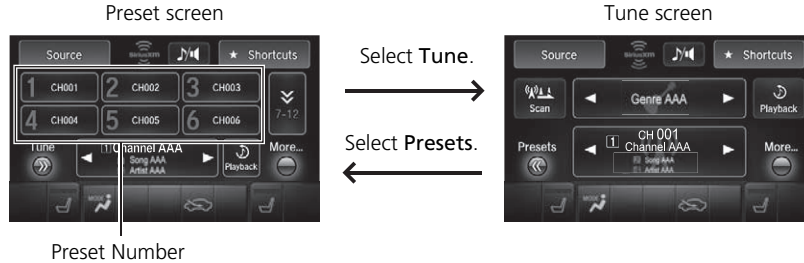

The following items are available:




- **Category bar** (Tune screen): Select ◀ or ▶ to search a category.
- **Channel bar**: Select ◀ or ▶ to search a channel. Select and hold ◀ or ▶ to search up or down 10 channels.
- **Preset Number** (Preset screen): Select and hold a desired number where you want to store the station. Select to listen a preset channel(s).
- **Playback**: Display the **Playback** screen.  
➔ **Replay Function** P. 166
- **More**: Display the menu items.  
➔ **Audio Menu** P. 176
- **Scan**: Select the scan type. Scans for channels and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current channel.  
**Scan Channels**: Scans for categories or channels with a strong signal in the selected mode.  
**Scan Songs in Presets**: Scans for desired preset channel by songs. Select ▶▶ or ◀◀ to skip to the next/previous stored selection.



## ■ Preset Memory

### Interface Dial

To store a channel:

1. Tune to the desired channel.
2. Move  to select **Preset**s.
3. Rotate  to select a desired number.
4. Press and hold  a few seconds to store the current channel.

To listen to a stored channel, rotate  to select the preset number. Press .

### On Demand Multi-Use Display™

To store a channel:

1. Tune to the desired channel.
2. Select and hold a desired number.

To listen to a stored channel, select the preset number.

## ▶▶▶ Preset Memory

You can store 12 SiriusXM® channels into the preset memory.

## ■ Multi-channel preset (for music channels only)

### On Demand Multi-Use Display™

You can store up to four of your preferred music channels per preset. When multiple channels exist, the music randomly skips between channels.



1. Select a channel you want to store.
2. Select **More**.
3. Select **Save Preset**.
4. Select **Edit TuneMix**.
5. Select a preset number where you want to add a music channel.
6. Select **Add**.
  - ▶ Select **OK** or **[X]** to return the previous screen.

To delete a multi-channel preset:

1. Select **More**.
2. Select **Save Preset**.
3. Select **Edit TuneMix**.
4. Select a multi-channel preset number.
5. Select **Delete**.
6. Select channel icon.
  - ▶ Select **OK** or **[X]** to return the previous screen.


## ▣ Multi-channel preset (for music channels only)

Not all SiriusXM® channels are available to add to multi-channel preset.

## ■ Replay Function

 **MENU** button (in SiriusXM® mode) ▶ **Playback**

The system can record up to the last 60 minutes broadcast of your currently tuned channel as well as the last 30 minutes broadcast of preset channels, starting from the moment you turn the vehicle on. If you tuned to preset channel, the system records up to 60 minutes of a broadcast instead of up to 30 minutes. You can rewind and replay the last 30 or 60 minutes of a broadcast.

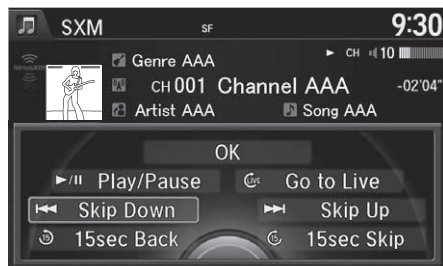

Select an option.

The following options are available:

- **OK**: Returns to previous channel.
- **Play/Pause**: Pauses or plays a storing broadcast.
- **Go to Live**: Returns to real-time broadcast.
- **Skip Down**: Skips to the previously stored channel.
- **Skip Up**: Skips to the next channel.
- **15sec Back**: Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.
- **15sec Skip**: Select to skip forward 15 seconds in the current selection. Select and hold to fast-forward the current selection.

## ▶▶▶ Replay Function

The system starts storing broadcast in memory when the vehicle is turned on. You can go back to the program from that point.

You can no longer replay any program once the vehicle is turned off or if the non-preset channel has been changed.

The audio/information screen displays how long the station has been recording in the replay status bar.

To play or pause in playback mode:

**Interface Dial**

Rotate  to select Play/Pause, press .

**On Demand Multi-Use Display™**

Select **Play/Pause**.

■ **Returning to real-time broadcast**

**Interface Dial**

Rotate  to select **Go to Live**, press  while listening to the playback channel.

**On Demand Multi-Use Display™**

Select **Go to Live** while listening to the playback channel.

On Demand Multi-Use Display™



1. Select **Playback**.
2. Select an option.


The following options are available:

- **(15sec Back)**: Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.
- **(15sec Skip)**: Select to skip forward 15 seconds in the current selection. Select and hold to fast-forward the current selection.
- **(Skip Down)**: Skips to the previously stored channel.
- **(Skip Up)**: Skips to the next channel.
- **(Play/Pause)**: Pauses or plays a storing broadcast.
- **LIVE**: Returns to real-time broadcast.
- **OK**: Returns to previous channel.


## ■ Replay status display

### Interface Dial

Display the replay status on the navigation screen when you listen to the playback.

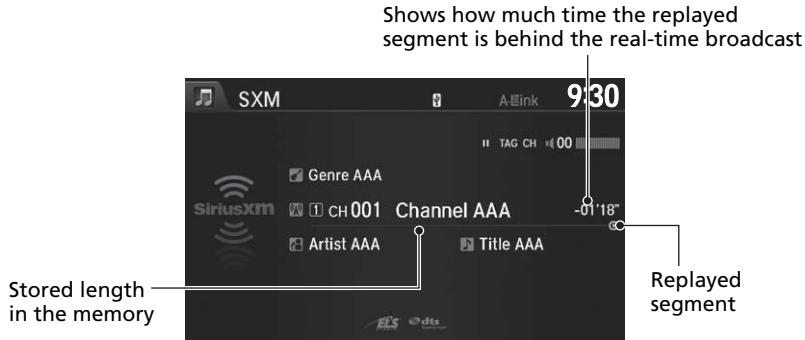

### On Demand Multi-Use Display™

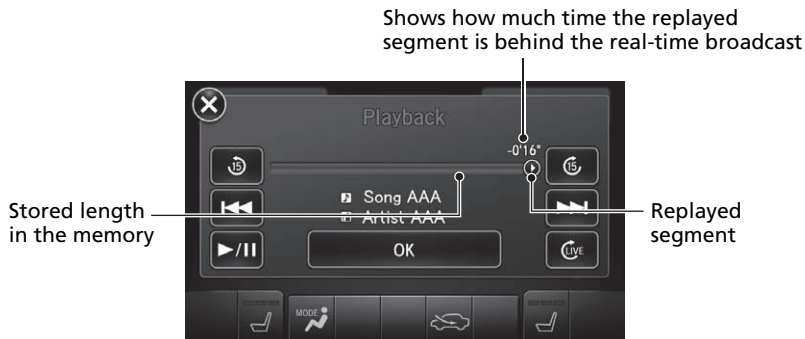

## ■ SportsFlash™ Alert

While listening to other channels, you can receive sports alerts such as scores from up to five of your favorite teams. The notification message appears on the navigation screen and On Demand Multi-Use Display™ when receiving sports alerts.

### Interface Dial



1. A pop-up appears and notifies you of a sports alert.
2. Select **Listen Now**.
  - ▶ Press the **BACK** button to return the previous screen.
  - ▶ If no operations are performed for 10 seconds, the system returns to the previous audio mode automatically.

The following items are available:

- **Check Later:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message appears again.
- **Ignore this Game:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message does not appear.

## ▣ SportsFlash™ Alert

The notification message does not appears on the navigation screen under the following circumstances:


- When you select other than the SiriusXM® Mode.
- When the start-up screen and Multi-view Rear Camera screen are displayed.

When a sports alert is received, the SportsFlash™ Listen indicator appears on the navigation screen.

You can change the SportsFlash™ setting.

▶ **Audio Settings** P. 152

SportsFlash™ is a registered trademark of SiriusXM® Radio, Inc.

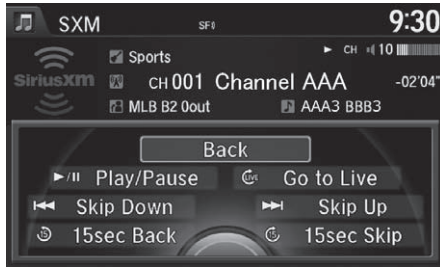


3. Select an option.

The following options are available:

- **Back:** Returns to the previous screen.
- **Play/Pause:** Pauses or plays a current sports alert.
- **Go to Live:** Returns to real-time broadcast.
- **Skip Down:** Skips to the previously stored sports alert.
- **Skip Up:** Skips to the next stored sports alert.
- **15sec Back:** Select to skip back 15 seconds to the current sports alert. Select and hold to fast-rewind the current sports alert.
- **15sec Skip:** Select to skip forward 15 seconds to the current sports alert. Select and hold to fast-forward the current sports alert.



#### On Demand Multi-Use Display™

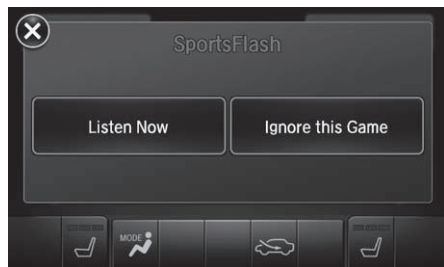


#### 1. Select an item.

- Select **X** to return the previous screen.
- If no operations are performed for 10 seconds, the system returns to the previous screen automatically.

The following items are available:

- **Listen Now:** Plays the received sports alert in the current game.
- **Ignore this Game:** Returns to the previous screen and stores the received sports alert in the audio system. If other sports alerts are received in the same game, the notification message does not appear.

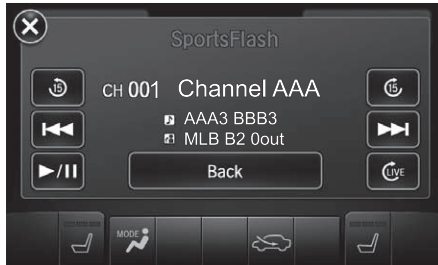

2. Select an option.

The following options are available:

- (15sec Back): Select to skip back 15 seconds to the current sports alert. Select and hold to fast-rewind the current sports alert.
- (15sec Skip): Select to skip forward 15 seconds to the current sports alert. Select and hold to fast-forward the current sports alert.
- (Skip Down): Skips to the previously stored sports alert.
- (Skip Up): Skips to the next stored sports alert.
- (Play/Pause): Pauses or plays a current sports alert.
- **LIVE**: Returns to real-time broadcast.
- **Back**: Returns to the previous screen.

## ■ Listening to a missed sports alert

### Interface Dial

If you have missed a sports alert:


1. From the audio screen, press the **MENU** button.
2. Move to select **Advanced**.
3. Rotate to select **SportsFlash™**, then press .
4. Rotate to select an alert, then press .

*Continued*

## ■ Traffic and Weather Information

 **MENU** button (in SiriusXM® mode) ▶ **Advanced** ▶ **Traffic & Weather Now**

You can receive the SiriusXM® traffic and weather information. The information displays on the audio/information screen and On Demand Multi-Use Display™.

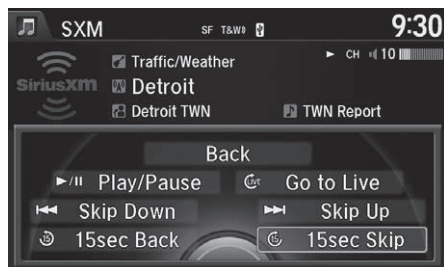

Select an option.

The following options are available:

- **Back:** Returns to previous channel.
- **Play/Pause:** Pauses or plays a storing broadcast.
- **Go to Live:** Returns to real-time broadcast.
- **Skip Down:** Skips to the previously stored channel.
- **Skip Up:** Skips to the next channel.
- **15sec Back:** Select to skip back 15 seconds in the current broadcast. Select and hold to fast-rewind the current broadcast.
- **15sec Skip:** Select to skip forward 15 seconds in the current broadcast. Select and hold to fast-forward the current broadcast.

## ▶▶ Traffic and Weather Information

The traffic and weather information function at SiriusXM® mode only.

When you listen to the traffic and weather information service, set up the applicable city using **Traffic & Weather Now Setup**.

▶ **Audio Settings** P. 152

Traffic & Weather Now are registered trademarks of SiriusXM® Radio, Inc.



#### On Demand Multi-Use Display™

1. Select **More**.
2. Select **Traffic & Weather Now**.
3. Select an option.

The following options are available:

- **15sec Back**: Select to skip back 15 seconds in the current broadcast. Select and hold to fast-rewind the current broadcast.
- **15sec Skip**: Select to skip forward 15 seconds in the current broadcast. Select and hold to fast-forward the current broadcast.
- **Skip Down**: Skips to the previously stored channel.
- **Skip Up**: Skips to the next channel.
- **Play/Pause**: Pauses or plays a storing broadcast.
- **LIVE**: Returns to real-time broadcast.
- **Back**: Returns to previous channel.

## Audio Menu

### Interface Dial

🔊 **MENU** button (in SiriusXM® mode)

1. Move ◀○ or ○▶ to select an item.
2. Rotate 🔄 to select an item. Press ⏸.



The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 📖 **Adjusting the Sound** P. 154
- **Save Preset:** Stores the current channel into the preset memory.
- **Scan:** Select the scan type. Scans for channels and plays a 10-second sample.  
 Select **Stop Scan** to stop scanning and play the current channel.  
**Scan Channels:** Scans for categories or channels with a strong signal in the selected mode.  
**Scan Songs in Presets:** Scans for desired preset channel by songs. Select **Skip Up** or **Skip Down** to skip to the next/previous stored selection.
- **Change Source:** Changes the audio source mode.
- **Playback:** Display the **Playback** screen.  
 📖 **Replay Function** P. 166

- **Traffic & Weather Now:** Display the SiriusXM® traffic and weather information.
- **View Channel Schedule:** Display the channel schedule.
- **Featured Channels:** Display the list of suggested channels from SiriusXM®. Up to three channel groups can be displayed.
- **SportsFlash:** Displays the list of available sports alerts. Up to two sports alerts can be displayed.

# On Demand Multi-Use Display™



1. Select **More**.
2. Select a setting item.

The following items are available:

- **Sound:** Displays the sound preferences screen.  
**▶ Adjusting the Sound** P. 154
- **Scan:** Select the scan type. Scans for channels and plays a 10-second sample. Select **Stop Scan** to stop scanning and play the current channel.  
**Scan Channels:** Scans for categories or channels with a strong signal in the selected mode.  
**Scan Songs in Presets:** Scans for desired preset channel by songs. Select **▶▶** or **◀◀** to skips to the next/previous stored selection.
- **Save Preset:** Stores the channel into the preset memory. Set to store up to five of your preferred music channels per preset if the Preset icon is highlighted.  
**▶ Multi-channel preset (for music channels only)** P. 165
- **Tune Mode:** Sets the tune mode.  
**Channel:** Scans to select all available channels.  
**Category:** Scans to select a channel within a category (Jazz, Rock, Classic, etc.).
- **Traffic & Weather Now:** Displays the SiriusXM® traffic and weather information.
- **Screen Settings:** Adjusts the screen's preferences.  
**▶ Changing the Screen Settings** P. 87

## SiriusXM® Radio Service

### ■ Subscribing to SiriusXM® Radio

1. You need your radio ID ready before registering for subscription. To see the ID in the display: Operate the On Demand Multi-Use Display™ until channel **0** appears.
2. Have your radio ID and credit card number ready, and either call or visit the SiriusXM® website to subscribe.

### ■ Receiving SiriusXM® Radio

Switch to the SiriusXM® mode by pressing the **SOURCE** button repeatedly or operating the On Demand Multi-Use Display™, and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

### ■ SiriusXM® Radio Display Messages

#### Loading:

SiriusXM® is loading the audio or program information.

#### Channel off air:

The channel is not currently broadcasting.

#### Channel unsubscribed:

You are not subscribed to the channel selected.

#### No signal:

The signal is too weak in the current location.

#### Channel unavailable:

No such channel exists.

#### Check antenna, Antenna disconnected, Antenna shorted:

There is a problem with the SiriusXM® antenna. Contact a dealer.

### ▶▶▶ Subscribing to SiriusXM® Radio

Contact Information for SiriusXM® Radio:  
SiriusXM® Radio at [www.siriusxm.com](http://www.siriusxm.com) or (800) 852-9696

### ▶▶▶ Receiving SiriusXM® Radio

The SiriusXM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle.
- In tunnels
- On the lower level of a multi-tiered road
- Large items carried on the roof rack







Your audio system supports audio CDs, CD-Rs and CD-RWs in either MP3, WMA, or AAC format. With the CD loaded, select the CD mode.

## Selecting Disc Mode

1. Insert a disc into the disc slot.

▶ The disc automatically being playing.

### Interface Dial

2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **CD**. Press .

### On Demand Multi-Use Display™

2. Select **Source**.
3. Select the **CD** icon.

## ▶ Playing a Disc

### NOTICE

Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

WMA and AAC files protected by digital rights management (DRM) cannot be played. The audio system displays Unplayable File, then skips to the next file.

Text data appears on the display under the following circumstances:

- When you select a new folder, file, or track.
- When you change the audio mode to CD.
- When you insert a CD.


If you eject the CD but do not remove it from the slot, the system reloads the CD automatically after several seconds.

You can control a CD audio using voice commands.

➔ **Voice Control Operation** P. 6

## Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.

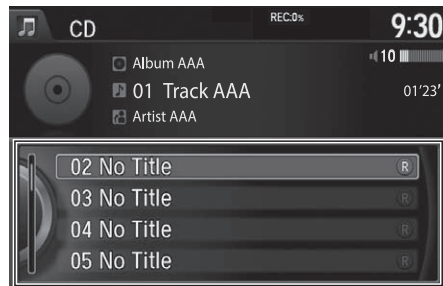

Track list



### Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a file from the list. Press .
  - ▶ Press **MENU** button to display the menu items
  - ▶ **Audio Menu** P. 182

### On Demand Multi-Use Display™

1. Select to skip to the next folder, and to skip to the beginning of the previous folder in MP3, WMA, or AAC.
2. Select or to change tracks (files in MP3, WMA, or AAC). Select and hold to move rapidly within a track/file.
  - ▶ Select **More** to display the menu item.
  - ▶ **Audio Menu** P. 182

### ▶▶▶ Audio Screen Control


#### On Demand Multi-Use Display™



- **Random**: Plays all tracks/files in random order.
- **Repeat**: Repeats the current track/file.
- **Scan**: Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC). Select **Stop Scan** to stop scanning and play the current selection.

## Audio Menu


### Interface Dial

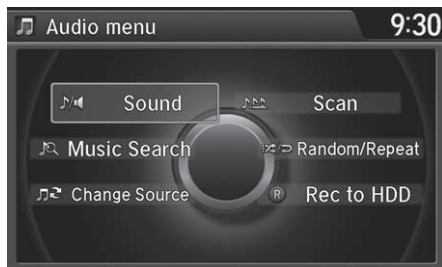 **MENU** button (in CD mode)




Rotate  select an item. Press .

The following items are available, depending on the type of disc:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Scan:**  
**Scan Folders** (MP3/WMA/AAC): Provides 10-second sampling of the first file in each of the main folders.  
**Scan Tracks:** Provides 10-second sampling of all tracks on the CD (all files in the current folder in MP3, WMA, or AAC).
- **Random/Repeat:**  
**Repeat Folder** (MP3/WMA/AAC): Repeats all files in the current folder.  
**Repeat Track:** Repeats the current track/file.  
**Random in Folder** (MP3/WMA/AAC): Plays all files in the current folder in random order.  
**Random All Tracks:** Plays all tracks/files in random order.

- **Change Source:** Changes the audio source mode.
- **Rec to HDD:** Records a music CD onto the HDD for playback using HDD Audio.  
     ▶ **Recording a Music CD to HDD** P. 188
- **Music Search:** Selects a file from the Music Search list.  
     ▶ **How to Select a File from the Music Search List (MP3/WMA/AAC)** P. 184

#### On Demand Multi-Use Display™

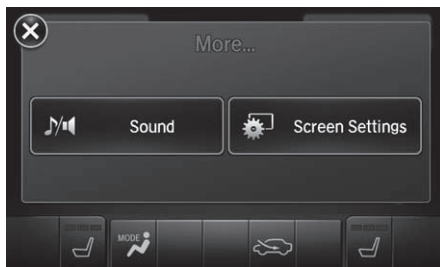


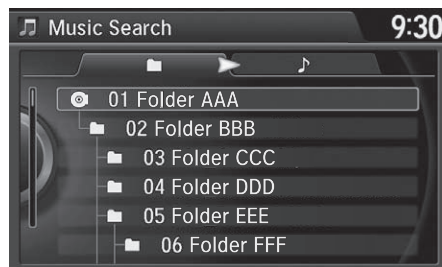
1. Select **More**.
2. Select a setting item.



The following items are available, depending on the type of disc:

- **Sound:** Displays the sound preferences screen.  
     ▶ **Adjusting the Sound** P. 154
- **Screen Settings:** Displays the screen preferences screen.  
     ▶ **Changing the Screen Settings** P. 87

## ■ How to Select a File from the Music Search List (MP3/WMA/AAC)

 **MENU** button (in CD mode) ▶ **Music Search**



Rotate , move ◀○ or ○▶ to select a file from the Music Search list. Press .

## Recommended CDs

- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped CDs.

The CD packages or jackets should have one of these marks.



Also includes:



### ▶▶▶ Recommended CDs

A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround and Neural Surround are trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

### CDs with MP3, WMA or AAC files

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA or AAC formats may be unsupported.

## ■ Protecting CDs

Follow these precautions when handling or storing CDs:

- Store a CD in its case when it is not being played.
- When wiping a CD, use a soft clean cloth from the center to the outside edge.
- Handle a CD by its edge. Never touch either surface.
- Never insert foreign objects into the CD player.
- Keep CDs out of direct sunlight and extreme heat.
- Do not place stabilizer rings or labels on the CD.
- Avoid fingerprints, liquids, and felt-tip pens on the CD.

## ► Protecting CDs

### NOTICE

Do not insert a damaged CD. It may be stuck inside and damage the audio unit.

### Examples:

- Bubbled, wrinkled, labeled, and excessively thick CDs



 
Bubbled/  
Wrinkled




With Label/  
Sticker



Using  
Printer Label  
Kit




Sealed

 


With Plastic Ring

 - Damaged CDs



Chipped/  
Cracked

 

Warped



Burrs

- Small CDs





3 in  
(80 mm)  
CD

- Poor quality CDs

The Hard Disc Drive (HDD) Audio function plays tracks from music CDs that have been recorded onto the built-in HDD. You can arrange the tracks in playlists or play the tracks using various search methods.

## Selecting HDD Mode

### Interface Dial

1. Press the **MENU** button. (in AUDIO mode)
2. Rotate  to select **Change Source**. Press .
3. Rotate to select **HDD**. Press to play tracks stored on the HDD.
  - ▶ Title information is displayed if found in the Gracenote® Album Info (Gracenote® Media Database) stored on the HDD.
  - ▶ The HDD has two types of playlists: original playlists and user playlists. An original playlist is automatically created for each album when a music CD is recorded. You can customize up to six user playlists provided on the HDD by adding tracks from your original playlists.

### On Demand Multi-Use Display™

1. Select **Source**.
2. Select the **HDD** icon to play tracks stored on the HDD.

### ▶ Playing Hard Disc Drive (HDD) Audio

You can control the HDD audio using voice commands.

▶ **Voice Control Operation** P. 6

▶ **Song By Voice™ (SBV)** P. 206

Music tracks recorded on HDD cannot be recorded onto CDs or other devices.

Tracks are recorded at four times the playback speed using ultra-efficient compression technology; therefore, sound quality may vary slightly from the original.

If the HDD is ever replaced, all music data is lost and cannot be recovered.


If there is a problem, you may see an error message on the display.

▶ **Hard Disc Drive (HDD) Audio** P. 344



## Recording a Music CD to HDD

The songs on music CDs are automatically recorded by factory default to the HDD the first time you play each disc. You can then play the songs directly from the HDD.

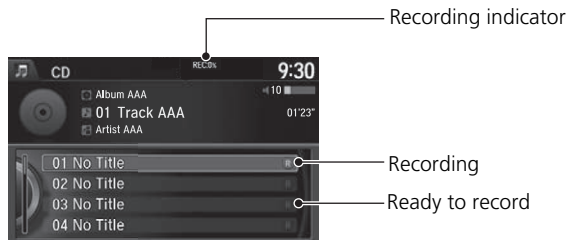

### Stopping Recording

1. Press the **MENU** button. (in CD mode)
2. Rotate to select **Cancel Record to HDD**. Press .

### Recording a CD Manually

1. Press the **MENU** button. (in CD mode)
2. Rotate to select **Rec to HDD**. Press .

### Recording a Music CD to HDD

You can add tracks to user playlists, where you can mix and match tracks from other CDs recorded on the HDD.

► **Editing an Album or Playlist** P. 193

► **Editing Track Information** P. 195

If you stop the engine or the power system is turned off while recording a CD, there may be pauses between songs when you play back from the HDD.

Repeat, random, and scan functions are not available during recording.

You can play music from other sources (e.g., SiriusXM®, HDD, etc.) while recording.


Please note that there is no compensation offered in the case of unsuccessful recording of audio data or the loss of audio data due to any cause whatsoever.

### Clearing the HDD

Any music tracks stored on the HDD can be deleted.

# Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.

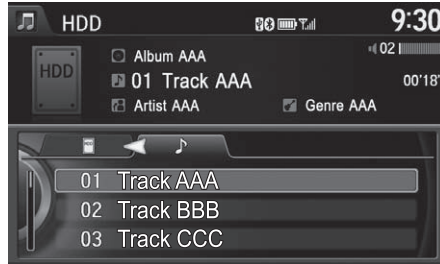

## Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a track from the list. Press .

▶ Press **MENU** button to display the menu items

▶ **Audio Menu** P. 190

## On Demand Multi-Use Display™

1. Select skip to the next playlist/album, and to skip to the beginning of the previous playlist/album.
2. Select or to change tracks. Select and hold to move rapidly within a track.

▶ Select **More** to display the menu item.

▶ **Audio Menu** P. 190

## ▶▶▶ Audio Screen Control

### On Demand Multi-Use Display™

- **Repeat:**
  - Repeat Artist:** Repeats all tracks in the current artist.
  - Repeat Album:** Repeats all tracks in the current album.
  - Repeat Track:** Repeats the current track.
- **Random:**
  - Random in Artist:** Plays all tracks in the current artist in random order.
  - Random in Album:** Plays all tracks in the current album in random order.
  - Random All Tracks:** Plays all tracks in random order.
- **Scan:**
  - Albums:** Provides 10-second sampling of the first track in each album.
  - Tracks:** Provides 10-second sampling of all tracks on HDD.

## Audio Menu



### Interface Dial


 **MENU** button (in HDD mode)



Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Scan:**  
**Scan Albums:** Provides 10-second sampling of the first track in each album.  
**Scan Tracks:** Provides 10-second sampling of all tracks on HDD.
- **Music Search:** Selects a file from the Music Search list.  
 **How to Select a Track from the Music Search List** P. 192
- **Change Source:** Changes the audio source mode.
- **Random/Repeat:** The following menu items vary depending on the category you selected by the Music Search list.  
**Repeat Artist:** Repeats all tracks in the current artist.  
**Repeat Album:** Repeats all tracks in the current album.  
**Repeat Track:** Repeats the current track.  
**Random in Artist:** Plays all tracks in the current artist in random order.  
**Random in Album:** Plays all tracks in the current album in random order.  
**Random All Tracks:** Plays all tracks in random order.
- **Edit/Delete:** Change the playlist name, album name, genre, and track order of the current playlist. You can also delete tracks, playlists, and albums.

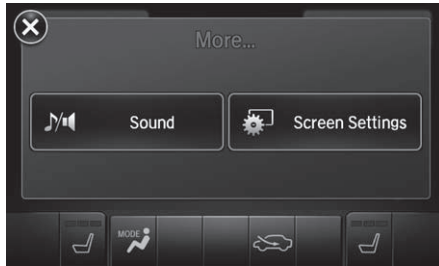**On Demand Multi-Use Display™**


1. Select **More**.
2. Select a setting item.


The following items are available:

- **Sound:** Displays the sound preferences screen.  
    ▶ **Adjusting the Sound** P. 154
- **Screen Settings:** Displays the screen preferences screen.  
    ▶ **Changing the Screen Settings** P. 87



## ■ How to Select a Track from the Music Search List

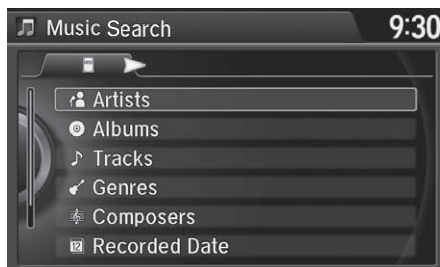 **MENU** button (in HDD mode) ▶ **Music Search**




1. Move ◀○ or ○▶ to select a search category. Press .



2. Rotate  to select a track from the Music Search list. Press .

## ■ Editing an Album or Playlist

 **MENU** button (in HDD mode) ► **Edit/Delete**

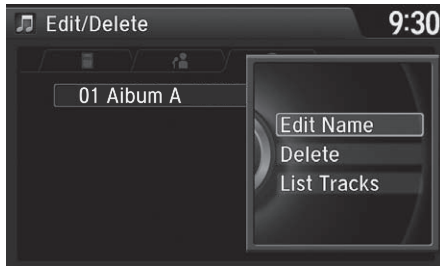

The following items are available:

- **Edit Name:** Enter a new name using the interface dial or the On Demand Multi-Use Display™.
- **Delete:** Deletes the selected album or playlist.
- **List Tracks:** Change the track title, artist name, genre and composer. You can also delete tracks.

Continued

## » Editing an Album or Playlist

The maximum number of original playlists is 50 with a maximum of 99 songs in each playlist.

Each album CD counts as an original playlist.  
Adding a track from a user playlist into the same  
user playlist will cause the track to appear twice  
in the playlist.

Deleting an album (original playlist) also deletes the album tracks you have stored in any user playlists.

Deleting a user playlist or deleting all tracks from a user playlist does not remove the playlist folder. The folder retains the playlist name and artist information.

## ■ Creating a new Playlist

🔊 **MENU** button (in HDD mode) ▶ **Edit/Delete** ▶ **Playlists** ▶ **Create New Playlist**




1. Enter the playlist name using the interface dial or the On Demand Multi-Use Display™.
2. Select tracks from the music search list.

## ■ Editing Track Information

🔊 **MENU** button (in HDD mode) ▶ **Edit/Delete** ▶ **Tracks**

Change the track title, artist name, genre and composer. You can also delete tracks.

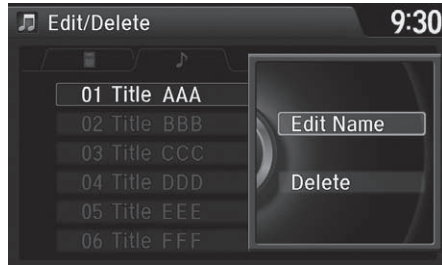

Rotate 🔄 select a track you want to edit or delete. Press 🔄.

▶ The pop-up menu appears on the screen.

The following items are available:


- **Edit Name:** Enter the track information (track name, track artist, etc.) using the interface dial or the On Demand Multi-Use Display™.
- **Delete:** Deletes a track.









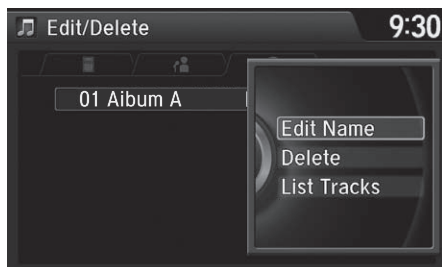

## ■ Displaying Music Information

 **MENU** button (in HDD mode) ▶ **Edit/Delete**

Music information (album name, artist name, genre) can be acquired by accessing the Gracenote® Album Info.



1. Rotate  to select **Albums**. Press .
2. Rotate  to select an album that you want edit or delete. Press .  
▶ The pop-up menu appears on the screen.
3. Rotate  to select **Edit Name**. Press .
4. Move  to select **Get Music Info**. Press .  
▶ The system starts to access the Gracenote® Album Info.

## ■ Updating Gracenote® Album Info

🔊 **SETTINGS** button (in HDD mode) ▶ **Audio Settings** ▶ **CD/HDD**

Update the Gracenote® Album Info (Gracenote® Media Database) that is included with the navigation system.



1. Insert the update disc into the disc slot or connect the USB flash drive that includes the update.

2. Rotate 🔄 to select **Update Gracenote Album Info**. Press 🔄.

3. Rotate 🔄 to select **Update by CD** or **Update by USB**. Press 🔄.

▶ The system starts updating and the confirmation message appears on the screen. Press to finish 🔄.

## ☒ Updating Gracenote® Album Info

To acquire updated files:

- Consult a dealer.
- Visit <http://www.navteq.com/gracenote/acura>.

Once you perform an update, any information you edited before will be overwritten or erased.

## ■ Deleting All HDD Data

 **SETTINGS** button ▶ **Audio Settings** ▶ **CD/HDD** ▶ **Delete All HDD Data**

Delete all music data on the HDD.



Rotate  to select **Yes**. Press .

## ■ Connecting an iPod®



1. Open the USB cover.
2. Install the iPod® dock connector to the USB connector.

## ■ Model Compatibility

Model
iPod (5th generation)
iPod classic 80GB/160GB (launch in 2007)
iPod classic 120GB (launch in 2008)
iPod classic 160GB (launch in 2009)
iPod nano (1st to 7th generation) released between 2005 and 2012
iPod touch (1st to 6th generation) released between 2007 and 2015
iPhone 3G/iPhone 3GS/iPhone 4/iPhone 4s/iPhone 5/iPhone 5s/iPhone 5c/iPhone 6/iPhone 6 Plus/iPhone 6s/iPhone 6s Plus

## ⌘ Connecting an iPod®

- Do not connect your iPod® using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

Your audio system may not work with all software versions of these devices.





If the audio system does not recognize your iPod®, try reconnecting it a few times or reboot the device.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

## Selecting iPod® Mode

1. Connect the iPod® to the USB adapter cable in the console compartment.

### Interface Dial

2. Press the **MENU** button. (in AUDIO mode)
3. Rotate , select **Change Source**. Press .
4. Rotate , select **iPod**. Press .

### On Demand Multi-Use Display™

2. Select **Source**.
3. Select the **iPod** icon.

### ►► Playing an iPod®

You can control an iPod® using voice commands.

► **Voice Control Operation** P. 6

► **Song By Voice™ (SBV)** P. 206


Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

► **iPod®/USB Flash Drive** P. 345




 

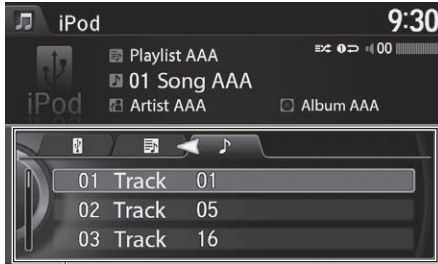
## Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



Track list

### Interface Dial


1. Rotate  or press  to display the song list.
2. Rotate , move  or  to select a song from the list. Press .

▶ Press **MENU** button to display the menu items.


▶ **Audio Menu** P. 203

### ▶▶ Audio Screen Control

This function may not be available depending on models or versions.

Select  to go back to the previous screen.

# On Demand Multi-Use Display™

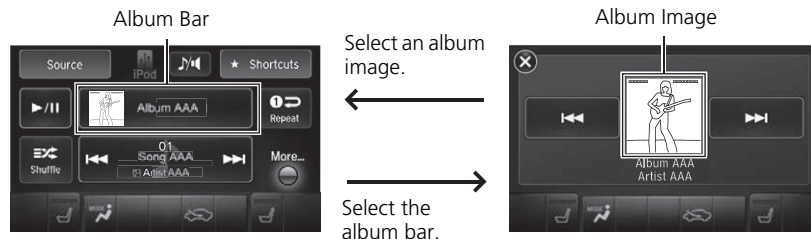


The following items are available:

- **►/||** (Play/Pause): Plays or pauses a song file.
- **◀◀ ▶▶**: Select the previous or next track. Select and hold to move rapidly within a track.
- **Album bar**: Select to display the album search screen.  
Select **◀◀** or **▶▶** to search for an album.
- **More**: Select to display the menu item.  
**Audio Menu P. 203**
- **Repeat**: Repeats the current track.
- **Shuffle**:  
**Shuffle Albums**: Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.  
**Shuffle All Songs**: Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.

## Audio Menu



### Interface Dial

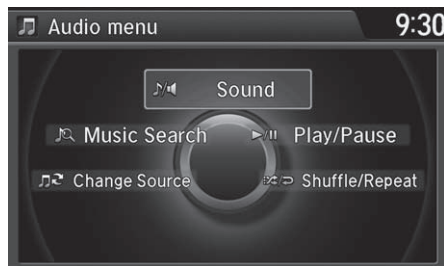 MENU button (in iPod® mode)



Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Music Search:** Selects a song from the Music Search list.  
 **How to Select a Song from the Music Search List** P. 205
- **Change Source:** Changes the audio source mode.
- **Shuffle/Repeat:**
  - Repeat Song:** Repeats the current track.
  - Shuffle Albums:** Plays all available albums in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
  - Shuffle All Songs:** Plays all available files in a selected list (playlists, artists, albums, songs, genres, or composers) in random order.
- **Play/Pause:** Pauses or plays a song file.



On Demand Multi-Use Display™




1. Select **More**.
2. Select a setting item.

The following items are available:


- **Sound:** Displays the sound preferences screen.  
    ➤ **Adjusting the Sound** P. 154
- **Screen Settings:** Displays the screen preferences screen.  
    ➤ **Changing the Screen Settings** P. 87

## ■ How to Select a Song from the Music Search List

🔍 MENU button (in iPod® mode) ▶ **Music Search**

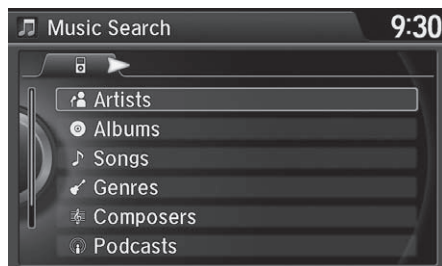

1. Move ◀○ or ○▶ to select a search category. Press 🔍.

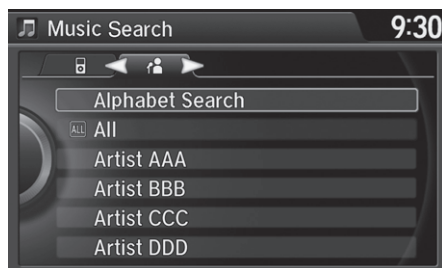

2. Rotate 🔍 to select a file from the Music Search list. Press 🔍.

## Song By Voice™ (SBV)

Use SBV to search for and play music from your HDD or iPod® using voice commands.

### ■ Settings Song By Voice™ (SBV)

 **SETTINGS** button ► **System Settings** ► **Song by Voice**





 
Rotate  to select **On** or **Off**. Press .

The following items are available:

- **On** (factory default): Song By Voice commands are available.
- **Off**: Disable the feature.

## ■ Searching for music using Song By Voice™ (SBV)

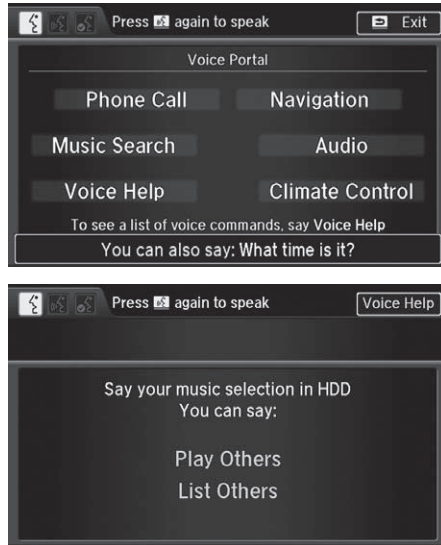

1. Set the Song by Voice setting to On.
2. Press the  (Talk) button and say "Music Search" to activate the SBV feature for the HDD and iPod®.
3. Say a command.
  - ▶ Example 1: Say "(List) 'Artist A'" to view a list of songs by that artist. Select the desired song to start playing.
  - ▶ Example 2: Say "Play 'Artist A'" to start playing songs by that artist.
4. To cancel SBV, press the  (hang-up/back) button on the steering wheel. The selected song continues playing.

## ▣ Searching for music using Song By Voice™ (SBV)

Song By Voice™ Commands List

▶ **Song By Voice Commands** P. 371


### NOTE:

Song By Voice™ commands are available for tracks stored on the HDD or iPod®.

You can add phonetic modifications of difficult words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands.

▶ **Phonetic Modification** P. 208

SBV may not be able to recognize languages other than English for the artist name, song title, album title, and composers.

Once you have canceled this mode, you need to press the  button and say "Music Search" again to re-activate this mode.

## Phonetic Modification



 **SETTINGS** button ► **System Settings** ► **Song by Voice Phonetic Modification**

Add phonetic modifications of difficult or foreign words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands when searching for music on the HDD or iPod®.



1. Move  and  rotate to select **New Modification**. Press .






2. Rotate  to select **HDD** or **iPod**. Press .

## Phonetic Modification

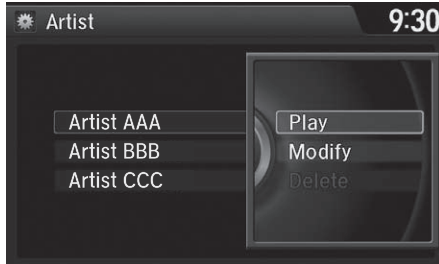

Phonetic Modification is grayed out when Song By Voice is set to **Off**.

You can store up to 2,000 phonetic modification items.






 
3. Rotate  to select the item to modify (e.g., **Artist**). Press .



▶ The list of the selected item appears on the screen.

4. Rotate  to select an entry (e.g., **No Name**). Press .

▶ The pop-up menu appears on the screen.



5. Rotate  to select **Modify**. Press .

▶ To listen to the current phonetic modification, rotate  to select **Play**. Press .

▶ To delete the current phonetic modification, rotate  to select **Delete**. Press .







6. Enter the phonetic spelling you wish to use (e.g., "Artist A") when prompted.

7. Rotate  to select **OK** to exit.  
The artist "No Name" is phonetically modified to "Artist A."  
When in the SBV mode, you can press the  (Talk) button and use the voice command "Play 'Artist A'" to play songs by the artist "No Name."

## Selecting Internet Radio Mode

1. Connect a compatible phone through *Bluetooth*®.

### Interface Dial

2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **Pandora** or **Aha**. Press .

### On Demand Multi-Use Display™

2. Select **Source**.
3. Select the **Pandora** or **Aha** icon.

### iPhone®


You can also connect the phone using your dock connector to the USB port.

### ▶▶ Playing internet Radio

To find out if your phone is compatible with this feature, visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink), or call 1-888-528-7876.



## Pandora® Menu

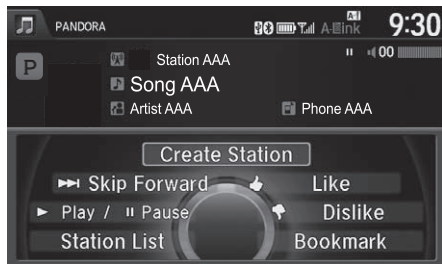

### Interface Dial

Rotate  to select an item. Press .

► Press **MENU** button to display the menu items.

The following items are available:

- **Skip Forward:** Skip the current song.
- **Play/Pause:** Resume or play a song.
- **Station List:** Displays the list of all your stored stations. Select a station from the list to play.
- **Like:** Likes the current song. Pandora® will play songs similar to the one liked.
- **Dislike:** Dislikes the current song and skips to the next song. Pandora® will avoid playing songs similar to the one disliked.
- **Bookmark Track:** Bookmarks the current song.
- **Bookmark Artist:** Bookmarks the current artist.
- **Create Station:** Create a new station from genre, current track, or artist.

### ► Pandora® Menu

Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora® Media, Inc., used with permission. Pandora® is currently available exclusively in the United States.

Pandora® is a personalized Internet radio service that selects music based on an artist, song, or genre a user enters, and streams what is likely to be of interest.

You can control Pandora® using voice commands.

► **Voice Control Operation** P. 6

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

► **Pandora Commands** P. 371

There are restrictions on the number of songs you can skip or dislike in a given hour.

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit [www.pandora.com](http://www.pandora.com) for more information.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth®* Audio.


Make sure Pandora® mode on your audio system is selected.



#### On Demand Multi-Use Display™

1. Select ◀ or ▶ to change a station.
2. Select ▶▶ to skip a song.
  - ▶ Select ▶|| to resume or play a song.
  - ▶ Select 👍 or 👎 to evaluate a song.
  - ▶ Select **More** to display the menu item.
    - **Adjusting the Sound** P. 154
    - **Changing the Screen Settings** P. 87

## Aha™ Radio Menu

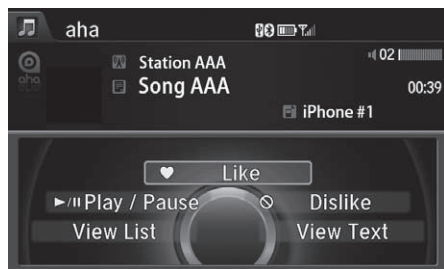


### Interface Dial

Rotate  to select an item. Press .

▶ Press **MENU** button to display the menu items.

### On Demand Multi-Use Display™

Select  or  to skip contents.

▶ Select  to resume or play a song.

▶ Select an icon to evaluate a song.

▶ Select **More** to display the menu item.

▶ **Adjusting the Sound** P. 154

▶ **Changing the Screen Settings**  
P. 87

### Aha™ Radio Menu

Aha™ by Harman is a cloud-based service that organizes your favorite web content into live radio stations. You can access podcasts, internet radio, location-based services, and audio updates from social media sites.

You can control Aha™ Radio using voice commands.

▶ **Voice Control Operation** P. 6

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

▶ **Aha™ Radio** P. 349

The menu items vary depending on the station you selected.

To use this service in your vehicle, the AcuraLink® app must be installed on your phone. Visit [owners.acura.com/apps](http://owners.acura.com/apps) for more information.

You must have a previously set up Aha account prior to using the service in your vehicle. Visit [www.aharadio.com](http://www.aharadio.com) for more information.

## ■ How to Select a Station from the Station List

🔊 **MENU** button (in Aha™ mode) ▶ **Station List**



Rotate 🔄 to select a station from the Station list. Press 🔄.

## ■ Connecting a USB Flash Drive



1. Open the USB cover.
2. Install the USB flash drive to the USB connector.

## ■ USB Flash Drives

Use a recommended USB flash drive of 256 MB or higher.

Some digital audio players may not be compatible.

Some USB flash drives (e.g., a device with security lockout) may not work.

Some software files may not allow for audio play or text data display.

Some versions of MP3, WMA, or AAC formats may be unsupported.

## ▣ Connecting a USB Flash Drive

- Do not connect your USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.

## ▣ USB Flash Drives





Digital music tracks, such as MP3, WMA, AAC, etc., in USB flash drives cannot be copied to HDD. Likewise, digital music tracks recorded to HDD cannot be copied to USB flash drives.

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

## Selecting USB Mode

1. Connect the USB flash drive to the USB port in the console compartment.

### Interface Dial

2. Press the **MENU** button. (in AUDIO mode)
3. Rotate  to select **Change Source**. Press .
4. Rotate  to select **USB**. Press .

### On Demand Multi-Use Display™

2. Select **Source**.
3. Select the USB icon.

### ▶▶▶ Playing a USB Flash Drive

You can control a USB flash drive using voice commands.

#### ▶▶▶ Voice Control Operation P. 6

Files in WMA/AAC format protected by digital rights management (DRM) cannot be played.


The audio system displays Unplayable File, and then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

#### ▶▶▶ iPod®/USB Flash Drive P. 345

## Audio Screen Control

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.

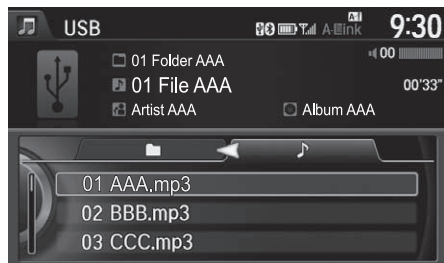

### Interface Dial

1. Rotate or press to display the song list.
2. Rotate , move or to select a song from the list. Press .

▶ Press **MENU** button to display the menu items

▶ **Audio Menu** P. 219



### On Demand Multi-Use Display™

1. Select to skip to the next folder, and to skip to the beginning of the previous folder.
2. Select or to change files. Select and hold to move rapidly within a file.

▶ Select **More** to display the menu item.

▶ **Audio Menu** P. 219

### ▶▶ Audio Screen Control


#### On Demand Multi-Use Display™

- **Random:**  
**Random in Folder:** Plays all files in the current folder in random order.  
**Random All Tracks:** Plays all files in random order.
- **Repeat:**  
**Repeat Folder:** Repeats all files in the current folder.  
**Repeat Track:** Repeats the current file.
- **Scan:**  
**Folders:** Provides 10-second sampling of the first file in each of the main folders.  
**Tracks:** Provides 10-second sampling of all files in the current folder.

# Audio Menu




## Interface Dial

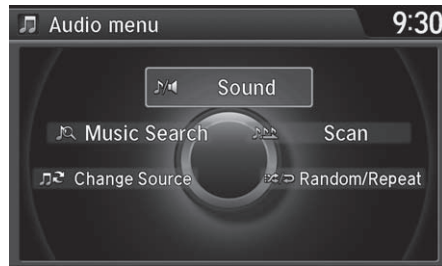 **MENU** button (in USB mode)




Rotate  to select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Scan:**  
**Scan Folders:** Provides 10-second sampling of the first file in each of the main folders.  
**Scan Tracks:** Provides 10-second sampling of all files in the current folder.
- **Random/Repeat:**  
**Repeat Folder:** Repeats all files in the current folder.  
**Repeat Track:** Repeats the current file.  
**Random in Folder:** Plays all files in the current folder in random order.  
**Random All Tracks:** Plays all files in random order.
- **Change Source:** Changes the audio source mode.  
 **Selecting Disc Mode** P. 180
- **Music Search:** Selects a file from the Music Search list.  
 **How to Select a File from the Music Search List** P. 221



#### On Demand Multi-Use Display™

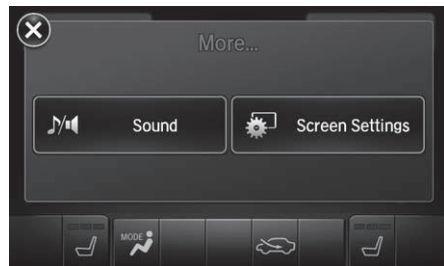


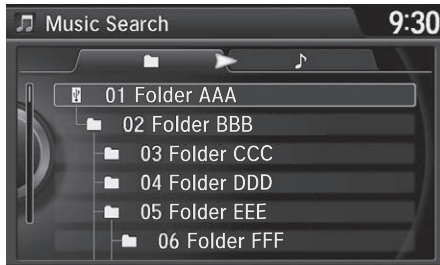
1. Select **More**.
2. Select a setting item.


The following items are available:


- **Sound:** Displays the sound preferences screen.  
    ➤ **Adjusting the Sound** P. 154
- **Screen Settings:** Displays the screen preferences screen.  
    ➤ **Changing the Screen Settings** P. 87



## ■ How to Select a File from the Music Search List

 **MENU** button (in USB mode) ▶ **Music Search**

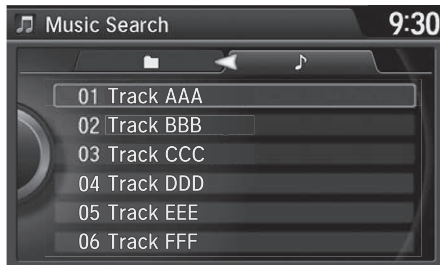

1. Move ◀○ or ○▶ to select a search category. Press .



2. Rotate  to select a file from the Music Search list. Press .

# Playing *Bluetooth*® Audio

Your audio system allows you to listen to music from your *Bluetooth*®-compatible phone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*® HandsFreeLink® (HFL) system.

➤ ***Bluetooth*® HandsFreeLink®** P. 226



## Selecting *Bluetooth*® Audio Mode

1. Make sure that your phone is on, paired, and linked to HFL.

➤ **Phone Settings** P. 246

### Interface Dial

2. Press the **MENU** button. (in AUDIO mode)

3. Rotate  to select **Change Source**. Press .

4. Rotate  to select **Bluetooth Audio**. Press .

### On Demand Multi-Use Display™

2. Select **Source**.

3. Select the **Bluetooth** icon.

### ➤ Playing *Bluetooth*® Audio

Not all *Bluetooth*®-enabled phones with streaming audio capabilities are compatible with the system.

For a list of compatible phones, visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink), or call 1-888-528-7876.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.


If more than one phone is paired to the HFL system, there will be a delay before the system begins to play.

You can control *Bluetooth*® Audio using voicecommands.



➤ **Voice Control Operation** P. 6

## Audio Screen Control

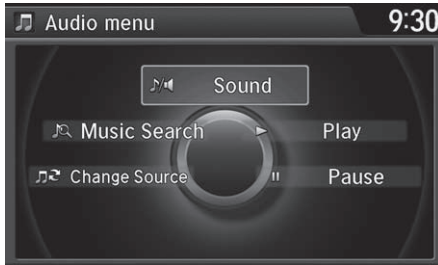

Control the audio system through the audio/information screen and On Demand Multi-Use Display™.



### Interface Dial

1. Press **MENU** button. (in BT mode)
2. Rotate  select an item. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Play:** Plays a song.
- **Pause:** Pauses a song.
- **Change Source:** Changes the audio source mode.  
 **Selecting Disc Mode** P. 180
- **Music Search:** Selects a song from the Music Search list.

### ▶▶▶ Audio Screen Control

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

The pause function and Music Search may not be available on some phones.

Switching to another mode pauses the music playing from your phone. This function may not be available on some phones.



#### On Demand Multi-Use Display™

1. Select ◀ or ▶ to change folders.
2. Select ◀◀ or ▶▶ to change files.
  - ▶ Select **More** to display the menu items, then select a setting item.
  - ▶ Select ▶ or || to play or pause a song file.

The following items are available:

- **Sound:** Displays the sound preferences screen.
  - ▶ **Adjusting the Sound** P. 154
- **Screen Settings:** Displays the screen preferences screen.
  - ▶ **Changing the Screen Settings** P. 87

# *Bluetooth® HandsFreeLink®*


This section describes how to operate *Bluetooth® HandsFreeLink®*. You can place and receive phone calls using your vehicle's audio system without handling your cell phone.


<b><i>Bluetooth® HandsFreeLink®</i></b> .....	226	Roadside Assistance* .....	265
Using HFL .....	226	HFL Menus .....	266
Pairing a Phone .....	228		
Importing Phonebook Data .....	234		
Setting Up Speed Dialing .....	235		
Phonebook Phonetic Modification .....	241		
Phone Settings .....	246		
Making a Call .....	251		
Receiving a Call .....	256		
<b>Text/E-mail Message</b> .....	258		
Setting a Text/E-mail Message .....	258		
Selecting a Mail Account .....	259		
Receiving a Text/E-mail Message .....	260		
Displaying Messages .....	261		


Bluetooth® HandsFreeLink® (HFL) allows you to place and receive phone calls using your vehicle's navigation system, without handling your cell phone.


## Using HFL

### HFL Buttons

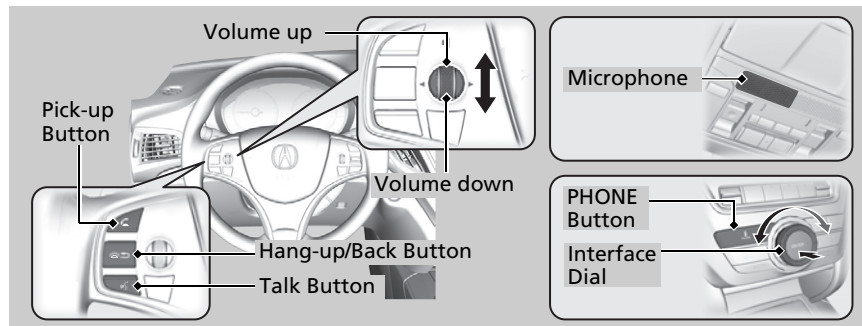






 (Pick-up) button: Press to go to the **Speed Dial/Call History** on the multi-information display or to answer an incoming call.

 (Hang-up/back) button: Press to end a call, to cancel a command or to clear the phone information on the multi-information display.

  (Talk) button: Press to give HFL voice commands.

**PHONE** button: Press to go directly to the Phone screen.


**Interface dial:** Rotate  to select an item on the screen, then press . Move ,  or  to select secondary menu.

### Bluetooth® HandsFreeLink®

 To use HFL, you need a Bluetooth®-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities:

Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink), or call 1-888-528-7876.

#### Voice control tips:


- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the  button when you want to call a number using a stored voice tag, a phonebook name, or a number. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, use the audio system's volume knob or the remote audio controls on the steering wheel.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

If you receive a call while using the audio system, the system resumes its operation after ending the call.

## HFL Status Display

The audio/information screen notifies you when you have an incoming call.

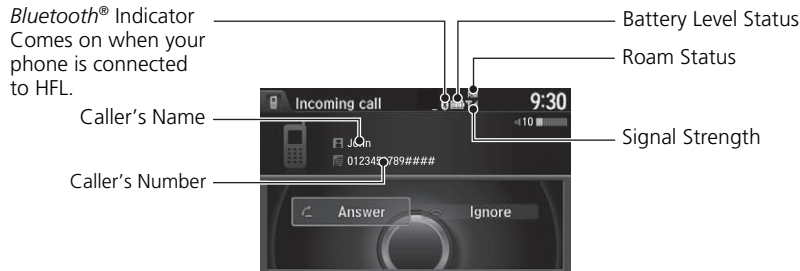

## Limitations for Manual Operation



Certain manual functions are disabled or inoperable while the vehicle is in motion.

You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags, phonebook names, or numbers can be called using voice commands while the vehicle is in motion.

▶ **Setting Up Speed Dialing** P. 235

## Bluetooth® HandsFreeLink®

### Bluetooth® Wireless Technology

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

### HFL Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

*Bluetooth*® HandsFreeLink® (HFL) allows you to place and receive phone calls using your vehicle's navigation system, without handling your mobile phone.

## HFL Status Display

The information that appears on the audio/information screen varies between phone models.

You can change the system language to English, French, or Spanish.


▶ **Language Settings** P. 36



## Pairing a Phone

### PHONE button

When no *Bluetooth*®-compatible phone is paired, the following screen appears:

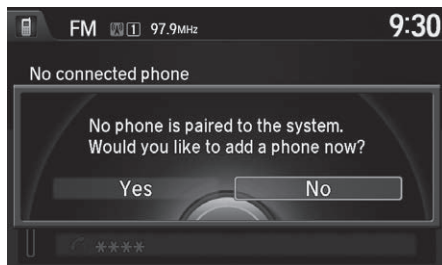

1. Rotate to select **Yes**. Press .
2. Make sure your phone is in search or discoverable mode. Press .
  - HFL automatically searches for a *Bluetooth*® device.
3. When your phone appears on the list, select it by pressing .
  - If your phone does not appear, you can select **Refresh** to search again.
  - If your phone still does not appear, move to select **Phone not Found?** and search for *Bluetooth*® devices using your phone. From your phone, select **HandsFreeLink**.

### Pairing a Phone

Your *Bluetooth*®-compatible phone must be paired to HFL before you can make and receive hands-free calls.

#### Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is connected to HFL.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and returns to idle.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

: The phone can be used with HFL.

: The phone is compatible with *Bluetooth*® Audio.



4. HFL gives you a pairing code on the audio/information screen.

► Confirm if the pairing code on the screen and your phone match.

This may vary by phone.

5. You will receive a notification on the screen if pairing is successful.

#### ► Pairing a Phone

When pairing is completed, an **Automatic Phone Sync** prompt appears. Select **On** if you want your call history and phonebook automatically imported to HFL.

► **Automatic Phone Sync setting** P. 250

Some phones may have an additional setting to allow the phone to auto connect each time you turn on your vehicle.

### Pairing from Phone Setup

ⓘ **SETTINGS** button ► **Phone Settings** ► **Connect Phone**





1. Rotate Ⓢ to select **Add Bluetooth Device**.

2. Make sure your phone is in search or discoverable mode. Press Ⓢ.

► HFL automatically searches for a *Bluetooth®* device.



3. When your phone appears on the list, select it by pressing .
  - If your phone does not appear, you can select **Refresh** to search again.
  - If your phone still does not appear, move  to select **Phone not Found?** and search for Bluetooth® devices using your phone. From your phone, select **HandsFreeLink**.
4. HFL gives you a pairing code on the audio/information screen.
  - Confirm if the pairing code on the screen and your phone match. This may vary by phone.
5. You will receive a notification on the screen if pairing is successful.

## ■ Changing the Pairing Code

🔧 **SETTINGS** button ▶ **System Settings** ▶ **Edit Pairing Code**



Rotate  to select **Fixed** or **Random**. Press .

## ☒ Changing the Pairing Code

The pairing code may be six or four digits depending on your phone.


The default pairing code is **0000** until you change the setting.


 


To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.

## ■ Changing the Currently Paired Phone

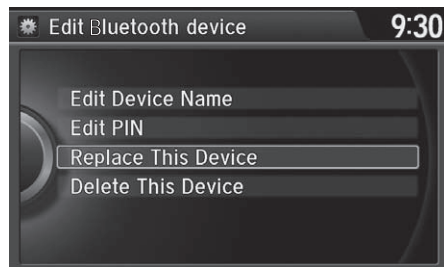 **SETTINGS** button ► **Phone Settings** ► **Bluetooth Device List**




1. Rotate  to select a paired phone you want to replace. Press .
2. Rotate  to select **Replace This Device**. Press .
3. HFL enters the pairing process and searches a new phone.
  - Follow the prompts to pair a new phone.
4. You will receive a notification on the screen if pairing is successful.





## ▣ Changing the Currently Paired Phone

The replaced phone will keep the same speed dial entries, and security PIN information from the previously paired phone.

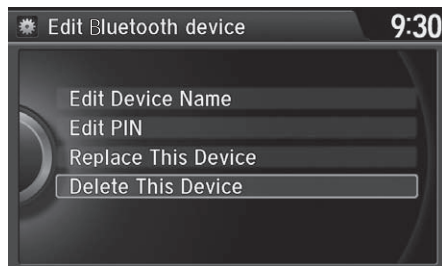

## ■ Deleting a Paired Phone

 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**



1. Rotate  to select a paired phone you want to replace. Press .
2. Rotate  to select **Delete This Device**. Press .



3. You will receive a confirmation message on the screen. Rotate  to select **Yes**. Press .
4. You will receive a notification on the screen if deletion is successful.


## Importing Phonebook Data



When your phone is paired, the contents of its phonebook and call history are automatically imported to HFL.

### ► Importing Phonebook Data


When you select a person from the list in the cellular phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.

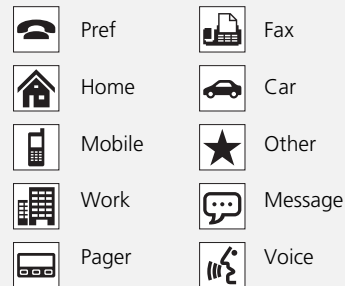


On some phones, it may not be possible to import the category icons to HFL.



The phonebook is updated after every connection. Call history is updated after every connection or call.

## Setting Up Speed Dialing

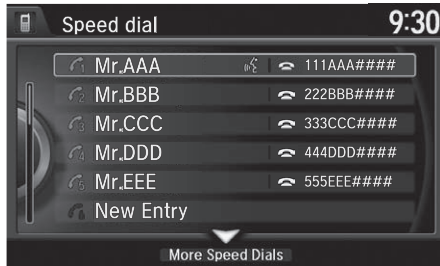

 **MENU** button (on Phone screen) ▶ **Speed Dial**

Up to 20 speed dial numbers can be stored per phone.



1. Rotate  to select **New Entry**. Press .

 


2. Rotate  to select a number entry method. Press .

The following options are available:

- **Import from Call History:** Select a number from the call history.
- **Manual Input:** Input the number manually.
- **Import from Phonebook:** Select a number from the linked cell phone's imported phonebook.

### ▶▶ Setting Up Speed Dialing


When a voice tag is stored, press the  button to call the number using the voice tag. Say "Call" and the voice tag name.







Voice tags allow you to call speed dial entries from the **Voice Portal** screen or **Phone call** screen by saying the voice tag name.

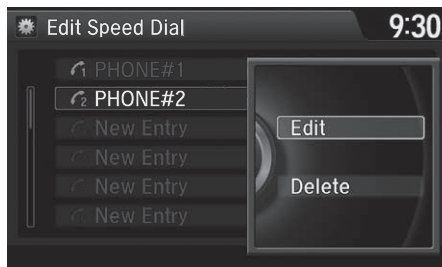


 
## ■ Registering a Voice Tag to a Speed Dial Entry

📞 **SETTINGS** button ▶ **Phone Settings** ▶ **Edit Speed Dial**



1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Edit**. Press .
3. Rotate  to select Voice Tag. Press .
4. From the pop-up menu, rotate  to select **Record**. Press .



5. Press .
  - ▶ Using the  (Talk) button, follow the prompt to enter a voice tag.

## ☒ Registering a Voice Tag to a Speed Dial Entry








Avoid using duplicate voice tags.


Avoid using "home" as a voice tag.

It is easier for HFL to recognize a longer name. For example, use "John Smith" instead of "John."


 



#### ■ To delete a voice tag

1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Edit**. Press .
3. Rotate  to select Voice Tag. Press .
4. From the pop-up menu, rotate  to select **Clear**. Press .
5. You will receive a confirmation message on the screen. Rotate to select **Yes**. Press .

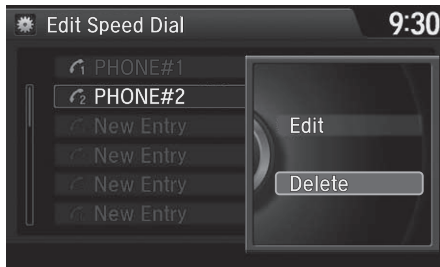



#### ■ To delete a speed dial

1. Select an existing speed dial entry.
2. From the pop-up menu, rotate  to select **Delete**. Press .
3. You will receive a confirmation message on the screen. Rotate to select **Yes**. Press .

## ■ Setting Phone Shortcuts

You can preset five previously stored speed dial entries, and make a call from one of the preset numbers, or call history when the phone is paired and connected to the vehicle's Bluetooth® HandsFreeLink® (HFL) system.

➤ **Setting Up Speed Dialing** P. 235

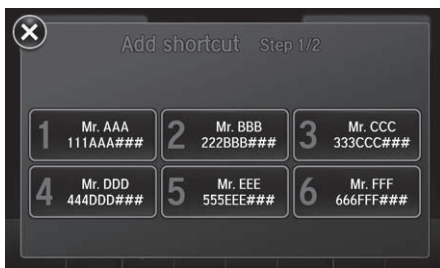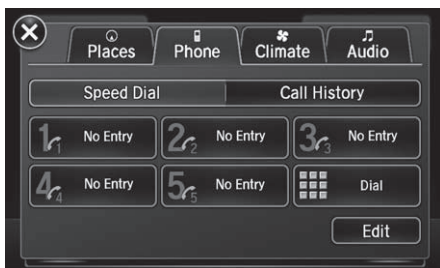

### ■ To preset a speed dial

1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select **Edit** or **No Entry**.

► If you select **No Entry**, go to step 6.

5. Select **Add**.

► Five presets appear. Select a **No Entry** preset or an existing preset.

► The screen changes to a list of previously stored speed dial entries.

## ▣ Setting Phone Shortcuts


### Dial icon

You can make a call using the keyboard on the On Demand Multi-Use Display™ to input numbers.

➤ **Entering a Phone Number** P. 253




6. Select a number you want to store as a shortcut.

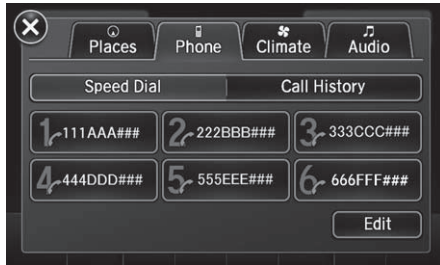


■ To make a call from a speed dial entry

1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select a preset number.
  - Dialing starts automatically.

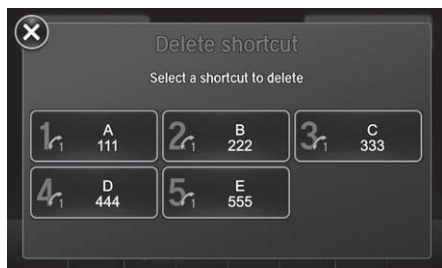

■ To delete a speed dial

1. Select **Shortcuts**.
2. Select **Phone**.
3. Select **Speed Dial**.
4. Select **Edit**.
5. Select **Delete**.
6. Select the preset number with the phone number you want to delete.

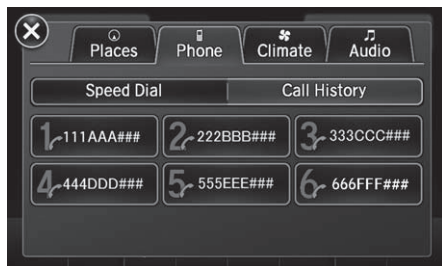

■ To make a call from call history

1. Select **Shortcuts**.
  2. Select **Phone**.
  3. Select **Call History**.
  4. Select a phone number.
- Dialing starts automatically.


►► To make a call from call history

The call history displays the last six dialed, received, or missed calls.





## Phonebook Phonetic Modification

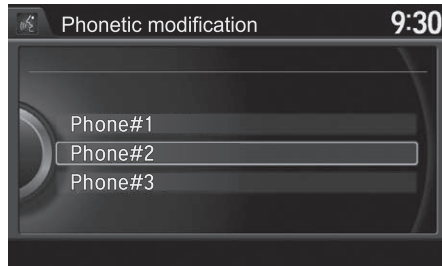
 **SETTINGS** button ▶ **System Settings** ▶ **Phonebook Phonetic Modification**

Add phonetic modifications or a new voice tag to the phone's contact name so that it is easier for HFL to recognize voice commands.




### ■ To add a new voice tag

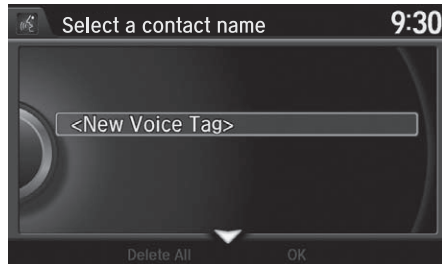

1. Rotate  to select the phone you want to add phonetic modification to. Press .
2. Rotate  to select **New Voice Tag**. Press .




### ☒ Phonebook Phonetic Modification

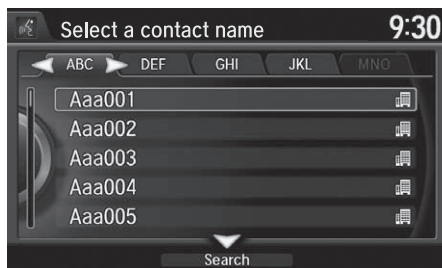

You can store up to 20 phonetic modification items.



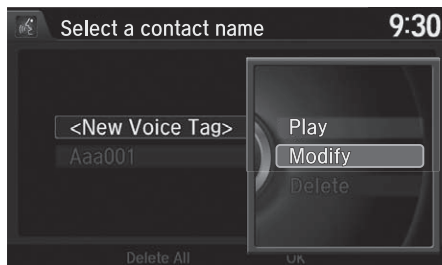

3. Move ◀○ or ○▶ and rotate  to select a contact name. Press .




► The pop-up menu appears on the screen.





4. Rotate  to select **Modify**. Press .







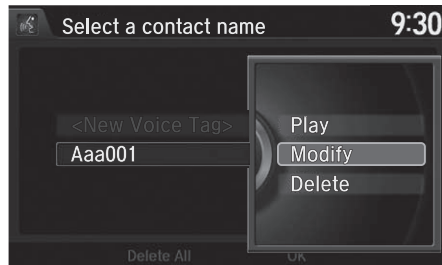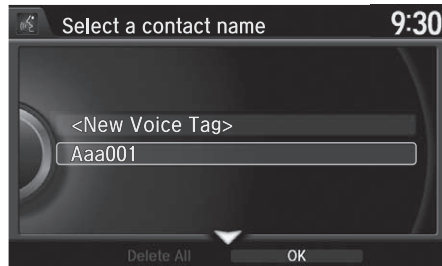


5. Using the  button, follow the prompts to complete the voice tag.

6. You will receive a confirmation message on the screen. Rotate  to select **OK**. Press .

7. The screen returns to the New Voice Tag screen. Move  and rotate  to select **OK**. Press .






### ■ To modify a voice tag

1. Rotate  to select the phone you want to add phonetic modification to. Press .
2. Rotate  to select a contact name you want to modify. Press .
  - The pop-up menu appears on the screen.
3. Rotate  to select **Modify**. Press .
4. Using the  button, follow the prompts to complete the voice tag.
5. You will receive a confirmation message on the screen. Rotate  to select **OK**. press .

### ► Phonebook Phonetic Modification

You can only modify or delete contact names for the currently connected phone.





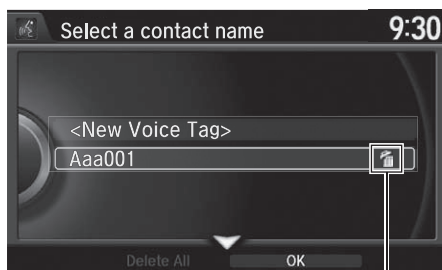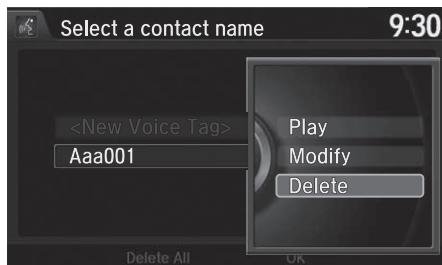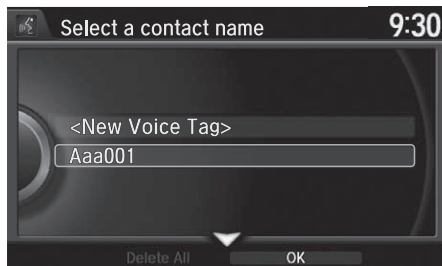



Trash icon

### ■ To delete a modified voice tag

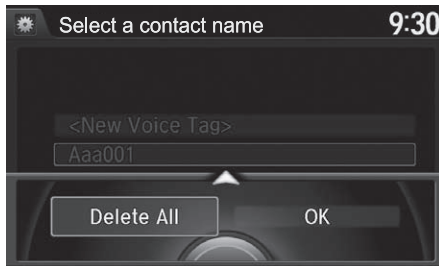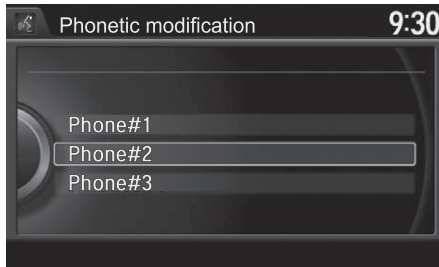


1. Rotate to select the phone you want to delete phonetic modification. Press .
2. Rotate to select a contact name you want to delete. Press .
  - The pop-up menu appears on the screen.
3. Rotate to select **Delete**, then press .
  - Items to be deleted are indicated with a trash icon.
4. Move and rotate to select OK. Press .





### ■ To delete all modified voice tags

1. Rotate  to select the phone you want to delete phonetic modification. Press .

► The contact name list appears.

2. Move  and rotate  to select **Delete All**. Press .

3. You will receive a confirmation message on the screen. Rotate  to select OK. press .

## Phone Settings


 **SETTINGS** button ► **Phone Settings**



Set HFL options and features.



### ■ Editing a Security PIN

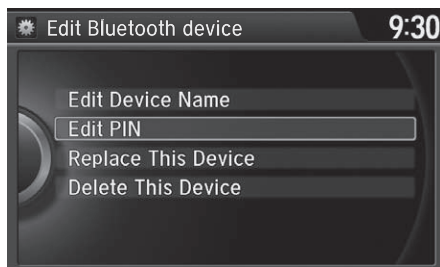 **SETTINGS** button ► **Phone Settings** ► **Bluetooth Device List**


You can protect each of the six cell phones with a security PIN.



1. Rotate  to select the phone you want to add a security PIN to. Press .

2. Rotate  to select **Edit PIN**. Press .



3. Enter a new four-digit number. Rotate  to select **OK** to enter the security PIN.

► Move  to delete.

4. Re-enter the four-digit number.

► The screen returns to the screen in step 4.

### ✎ Editing a Security PIN

If the phone is already security PIN protected, you need to enter the current security PIN before clearing the PIN or creating a new one.


You can use the keyboard on the On Demand Multi-Use Display™ to input numbers. Select numbers, then **OK**.



## ■ Editing User Name

📞 **SETTINGS** button ▶ **Phone Settings** ▶ **Bluetooth Device List**

Edit the user name of a paired phone as follows:

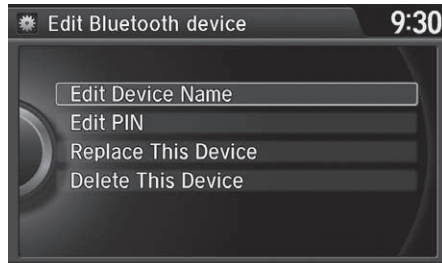

1. Rotate 📞 to select a phone you want to edit. Press 📞.
2. Rotate 📞 to select **Edit Device Name**. Press 📞.
3. Enter a new name of the phone.
  - ▶ Rotate 📞 or move 📍 to select **OK** to enter the name. Press 📞.
  - ▶ Move ⬅️ to delete.

## ▶▶ Editing User Name

You can use the keyboard on the On Demand Multi-Use Display™ to input numbers.



## Automatic Transferring

 **SETTINGS** button ► **Phone Settings** ► **Auto Transfer**

If you get into the vehicle while you are on the phone, the call can be automatically transferred to HFL.



Rotate  to select **On**. Press .

## Auto Answer

 **SETTINGS** button ► **Phone Settings** ► **Auto Answer**

You can set HFL to automatically answer an incoming call in four seconds.




Rotate  to select **On**. Press .

## ■ Ring Tone

🔊 **SETTINGS** button ▶ **Phone Settings** ▶ **Ring Tone**

You can change the ring tone setting.

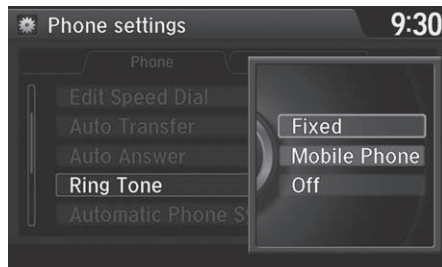


Rotate 🔄 to select your desired setting item. Press 🗑️.

The following items are available:

- **Fixed:** The fixed ring tone sounds from the speaker.
- **Mobile Phone:** The ring tone stored in the connected cell phone sounds from the speaker.
- **Off:** No ring tones sound from the speaker.

## Automatic Phone Sync setting

 **SETTINGS** button ► **Phone Settings** ► **Automatic Phone Sync**

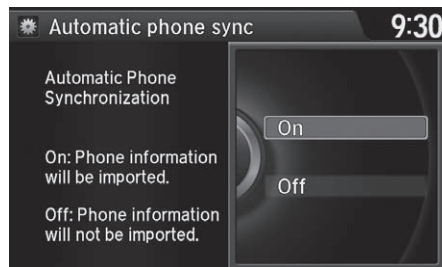

Rotate  to select **On** or **Off**. Press .

## Use Contact Photo

 **SETTINGS** button ► **Phone Settings** ► **Use Contact Photo**

You can display a caller's picture on an incoming call screen.



Rotate  to select **On**. Press .

## Automatic Phone Sync setting

Select **On** if you want your call history and phonebook automatically imported to HFL. If prompted by your phone, please accept the import request.

 
Not all phones require this additional step.

## Making a Call

You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.



### ► Making a Call

Any voice-tagged speed dial entry, phonebook name, or number can be dialed by voice from most screens. Press the  button and say "Call" and the voice tag name, "Call by name" and the phonebook name, or "Call" and the phone number.



The maximum range between your phone and vehicles is 30 feet (10 meters).

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.



## ■ Using the Phonebook

📞 **MENU** button (on Phone screen) ► **Phonebook**

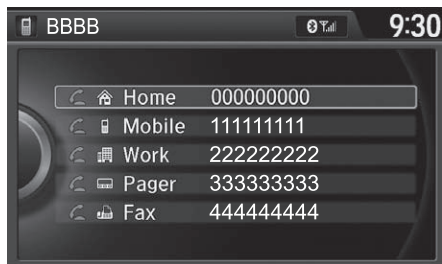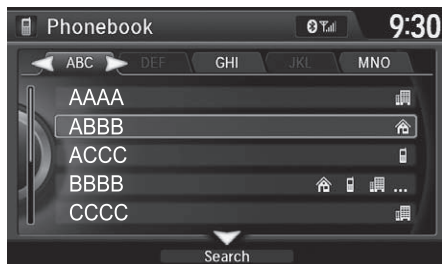

1. The phonebook is stored alphabetically. Move 📞 to **Search**.

► You can use the keyboard on the touch screen for an alphabetical search.

2. Rotate 📞 to select a number. Press 📞.

► Dialing starts automatically.

## ▣ Using the Phonebook

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number, phonebook name, or number using voice commands.

▣ **Limitations for Manual Operation** P. 227

▣ **Setting Up Speed Dialing** P. 235






You can use the keyboard on the On Demand Multi-Use Display™ for an alphabetical search.




## ■ Entering a Phone Number

 **MENU** button (on Phone screen) ► **Dial**





1. Rotate  to select a number. Press .
2. Rotate  to select . Press .

## ■ Using Redial

 **MENU** button (on Phone screen) ► **Redial**

You can display a caller's picture on an incoming call screen.




- Rotate  to select Dial. Press .
- Dialing starts automatically.

## ► Entering a Phone Number

This function is disabled while the vehicle is moving. However, you can call a stored voice-tagged speed dial number, phonebook name, or number using voice commands.

► **Limitations for Manual Operation** P. 227

► **Setting Up Speed Dialing** P. 235

You can use the keyboard on the On Demand Multi-Use Display™ to input numbers. Select numbers, then  to start dialing.





## ■ Using Call History

 **MENU** button (on Phone screen) ► **Call History**

Call history is stored by **All**, **Dialed**, **Received**, and **Missed**.



1. Move ◀○ or ○▶ to select **All**, **Dialed**, **Received**, and **Missed**.

2. Rotate  to select a number. Press .


► Dialing starts automatically.

### Multi-information Display


1. Press the  button.

2. Move the left selector wheel right to select **Call History**.

3. Roll the left selector wheel to select a number.

4. Push the left selector wheel or the  button.

► Dialing starts automatically.

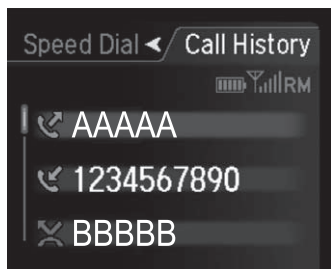

## ▣ Using Call History

The call history displays the last 20 dialed, received, or missed calls.  
(Appears only when a phone is connected to HFL.)

These icons next to the number indicate the following:



: Dialed calls



: Received calls




: Missed calls

### Multi-information Display

The call history displays the last 12 dialed, received, or missed calls.


## ■ Using Speed Dial

📞 **MENU** button (on Phone screen) ▶ **Speed Dial**

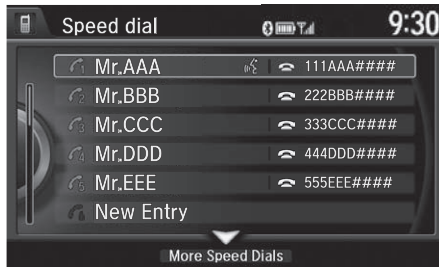

Rotate 🔄 to select a number. Press 📞.

▶ Dialing starts automatically.

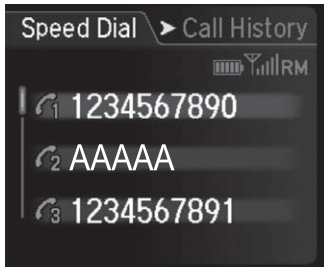

### Multi-information Display

1. Press the 📞 button.
2. Move the left selector wheel left to select **Speed Dial**.
3. Roll the left selector wheel to select a number.
4. Push the left selector wheel or the 📞 button.

▶ Dialing starts automatically.

## ▶▶ Using Speed Dial

Move 📞 to select **More Speed Dials** to view another paired phone's speed dial list. You can make a call from that list using the currently connected phone.

When a voice tag is stored, press the 🗣️ button to call the number using the voice tag.

### ▶ Setting Up Speed Dialing P. 235


Any voice-tagged speed dial entry, phonebook name or number can be dialed by voice from any screen. Press the 🗣️ button and follow the prompts.


 
### Multi-information Display

The speed dial displays the 20 speed dial entries.

## Receiving a Call


When there is an incoming call, an audible notification sounds (if activated) and the Incoming call screen appears.

 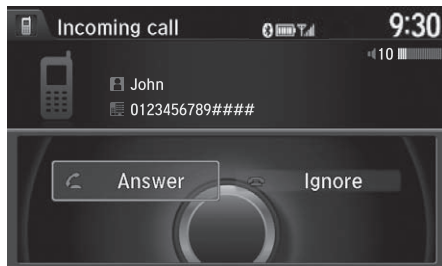


1. Press the  button to answer the call.
2. Press the  button to decline or end the call.

 
### Receiving a Call


 
#### Call Waiting

Press the  button to put the current call on hold to answer the incoming call.

Press the  button again to return to the current call.

Ignore the incoming call if you do not want to answer it.


Press the  button if you want to hang up the current call.



You can select the icons on the On Demand Multi-Use Display™ instead of the  and  buttons.



## Options During a Call

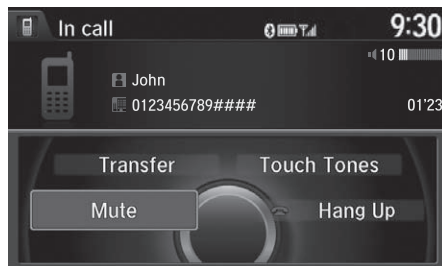The available options are shown on the Phone screen.



Rotate  to select the option. Press .

► The mute icon appears when **Mute** is selected. Select **Mute** again to turn it off.


The following options are available during a call:

- **Mute:** Mute your voice.
- **Transfer:** Transfer a call from HFL to your phone.
- **Touch Tones:** Send numbers during a call. This is useful when you call a menu-driven phone system.

## Options During a Call

**Touch Tones:** Available on some phones.


You can select the icons on the On Demand Multi-Use Display™.

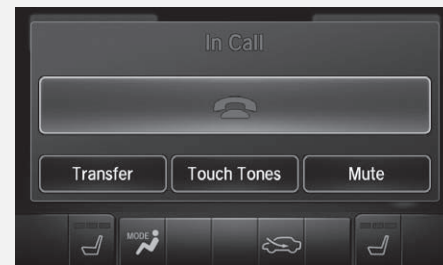

## Setting a Text/E-mail Message

### To turn on or off the text/E-mail message function

 **SETTINGS** button ► **Phone Settings** ► **Enable Text/Email**

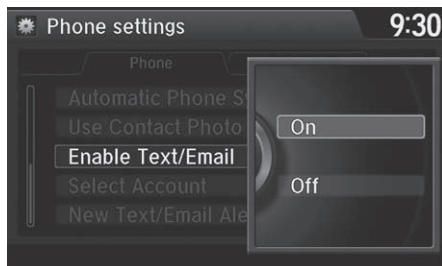

Rotate  to select **On** or **Off**. Press .

### To turn on or off the text/E-mail message notice

 **SETTINGS** button ► **Phone Settings** ► **New Text/Email Alert**



Rotate  to select **On** or **Off**. Press .

The following items are available:

- **On:** A pop-up notification comes on every time you receive a new text message.
- **Off:** The message you receive is stored in the system without notification.


### Text/E-mail Message



Some text/e-mail features may not be available depending on a cellular phone.

## Selecting a Mail Account

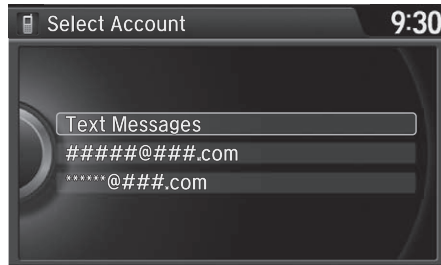

 **SETTINGS** button ► **Phone Settings** ► **Select Account**

If a paired phone has text message or mail accounts, you can select one of them to be active and receive notifications.



Rotate  to **Text Messages** or an E-mail account you want. Press .

### ✎ Selecting a Mail Account

You can also select a mail account from the folder list screen or the message list screen. Move  to select **Select Account**, then press .



You can only receive notifications from one text message or mail account at a time.



## Receiving a Text/E-mail Message

HFL can display newly received text and E-mail messages as well as 20 of the most recently received messages on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.




1. A pop-up appears and notifies you of a new text or E-mail message.

2. Rotate to select **Read** to listen to the message. Press .

► The text or E-mail message is displayed. The system automatically starts reading out the message.

3. To discontinue the message read-out. Press .

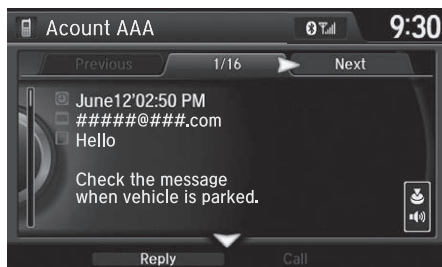

### Receiving a Text/E-mail Message


The system does not display any received messages while you are driving. You can only hear them read aloud.

With some phones, you may be able to display up to 20 most recent text and E-mail messages.

State or local laws may limit your use of the HFL text/E-mail message feature. Only use the text/E-mail message feature when conditions allow you to do so safely.


When you receive a text or E-mail message for the first time since the phone is paired to HFL, you are asked to turn the **New Text/Email Alert** setting to On.

► **To turn on or off the text/E-mail message notice** P. 258

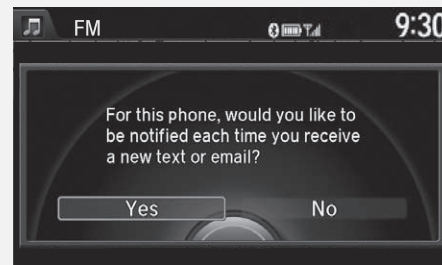




## Displaying Messages

### ■ Displaying text messages

 **MENU** button (on Phone screen) ► **Text/Email**



1. Select account if necessary.
  2. Rotate  to select a message. Press .
- The text message is displayed. The system automatically starts reading the message aloud.

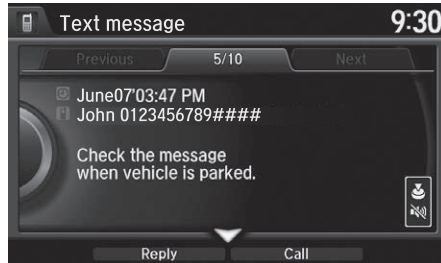

### ►► Displaying Messages

The icon appears next to an unread message.

If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.



To see the previous or next message, move ◀○ or ○▶ on the text message screen.


Some phones may have an additional setting to enable this feature.



## ■ Displaying E-mails

 **MENU** button (on Phone screen) ► **Text/Email**

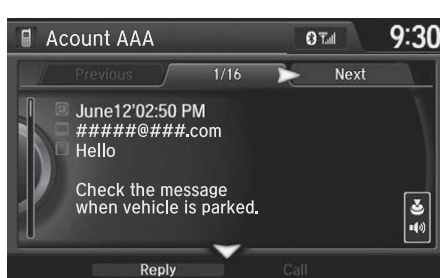

1. Rotate  to select a folder. Press .




2. Rotate  to select a message. Press .



► The text message is displayed.  
The system automatically starts reading the message aloud.

## ► Displaying E-mails


Received text and E-mail message may appear in the message list screen at the same time. In this case, text messages are titled **No subject**.

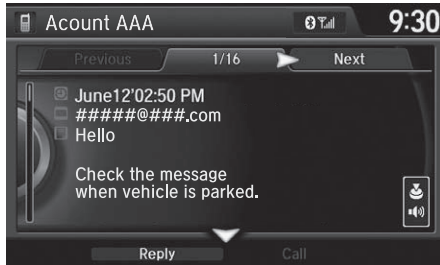
 

## ■ Read or stop reading a message





1. Go to the text or E-mail message screen.  
► The system automatically starts reading the message aloud.  
➔ **Displaying Messages** P. 261
2. Press  to stop reading.  
Press  again to start reading the message from the beginning.
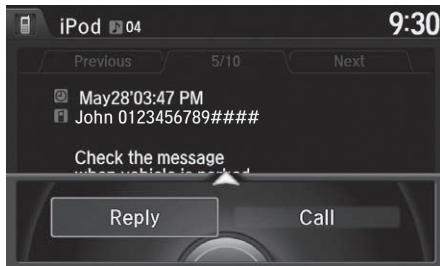
## ■ Reply reading a message



1. Go to the text or E-mail message screen.  
► The system automatically starts reading the message aloud.  
➔ **Displaying Messages** P. 261
2. Move  and rotate  to select Reply. Press .



3. Rotate  to select the reply message. Press .
- The pop-up menu appears on the screen.
4. Select **Send** to send the message.
- **Message Sent** appears on the screen when the reply message was successfully sent.

#### ► Reply to a message

The available fixed reply messages are as follows:


- Talk to you later, I'm driving.
- I'm on my way.
- I'm running late.
- OK
- Yes
- No




You cannot add, edit, or delete reply messages.

Only certain phones receive and send messages when paired and connected. For a list of compatible phones:


- U.S.: Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink), or call 1-888-528-7876.
- Canada: Visit [www.handsfreelink.ca](http://www.handsfreelink.ca), or call 1-888-528-7876.
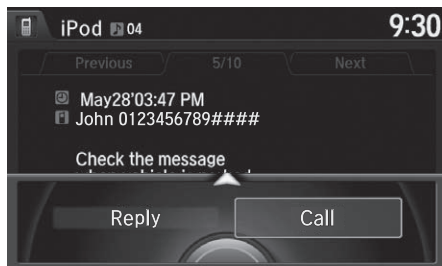
## Making a call to a sender






1. Go to the text message screen. The system automatically starts reading the message aloud.
- **Displaying text messages** P. 261
2. Move  and rotate  to select **Call**. Press .

## Roadside Assistance\*

 **MENU** button (on Phone screen) ► **Roadside Assistance**

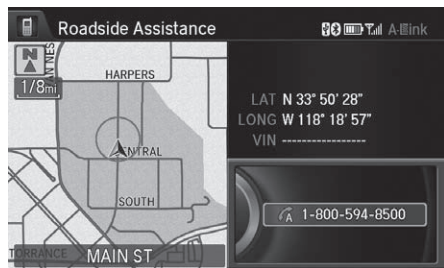Provides a nationwide service for unexpected incidents. You can call for assistance using a phone paired and connected to *Bluetooth*® HandsFreeLink®.



Rotate  to select a phone number.  
Press .

► Dialing starts automatically.

### ► Roadside Assistance\*

If you are subscribed to a paid AcuraLink® package, you can call the roadside assistance using the **LINK** button instead of your phone.  
► **AcuraLink**® P. 272

\*: Not available on all models

## HFL Menus

The power mode must be in ACCESSORY or ON to use HFL.

### ■ Phone Settings screen





1. Press the **SETTINGS** button.
2. Rotate to select **Phone Settings**, then press .

### ► HFL Menu

To use HFL, you must first pair your *Bluetooth®*-compatible cell phone to the system while the vehicle is parked.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

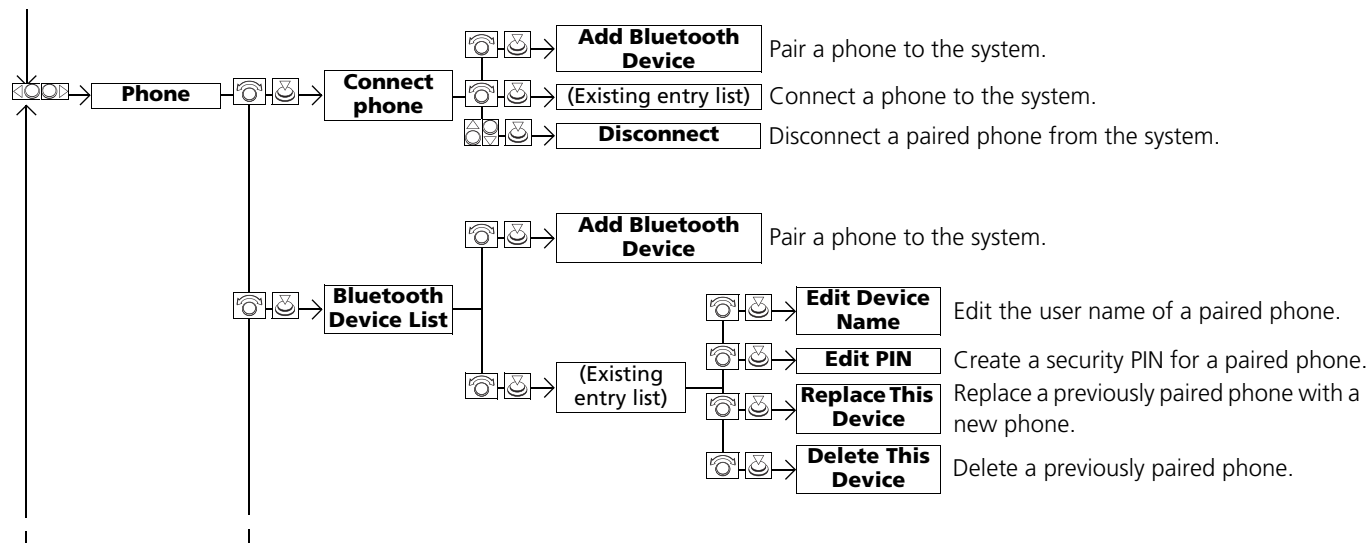

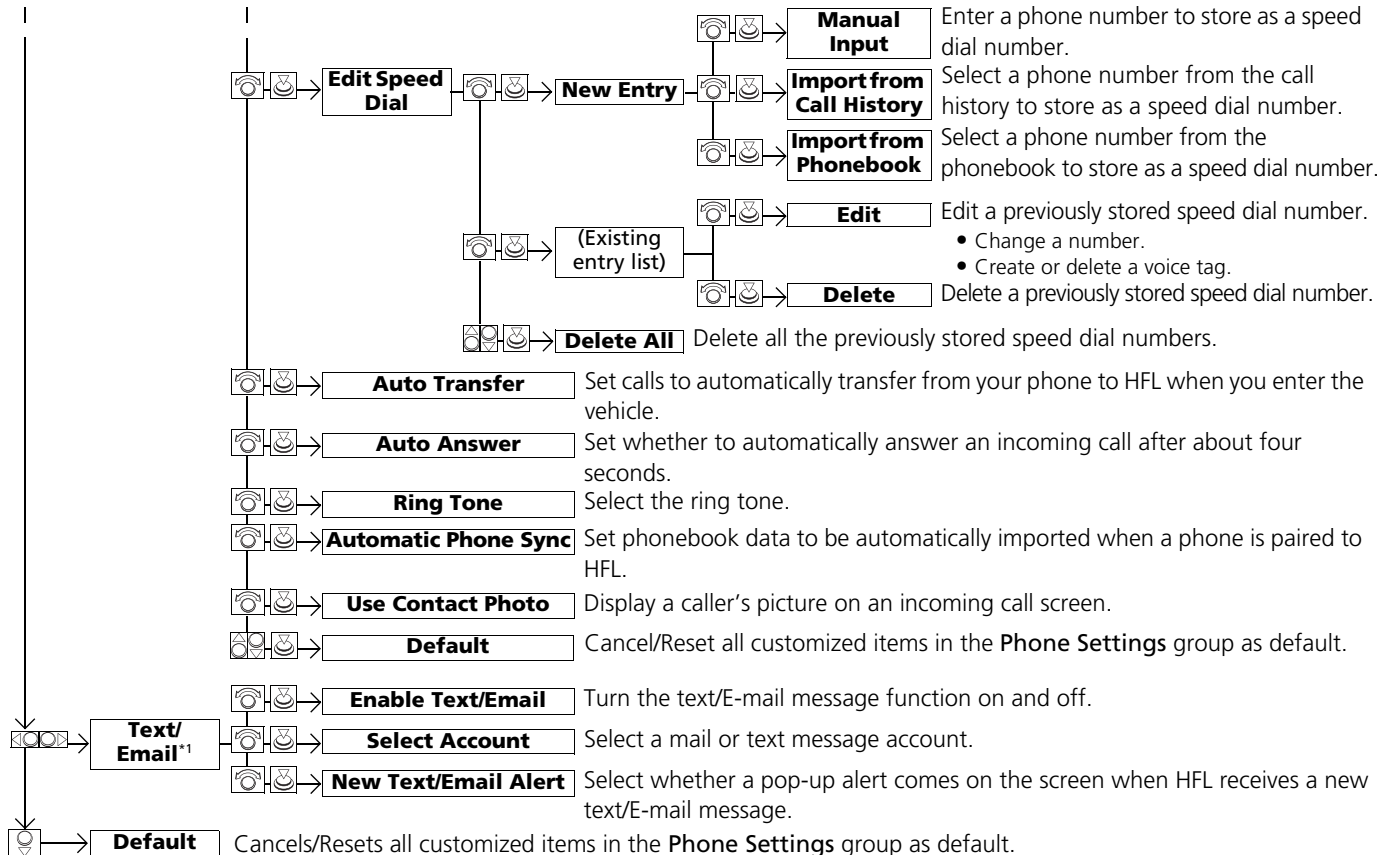


\*1: Appears only when a phone is connected to HFL.




## ■ Phone screen



1. Press the **PHONE** button.
2. Press the **MENU** button to display the menu items.

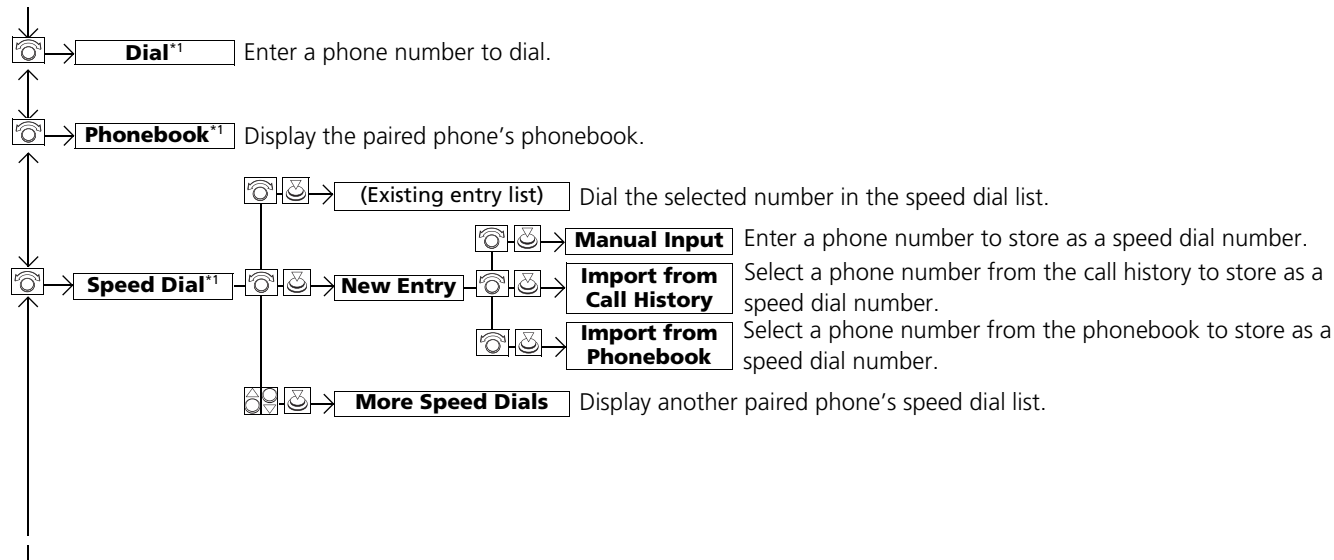

\*1: Appears only when a phone is connected to HFL.

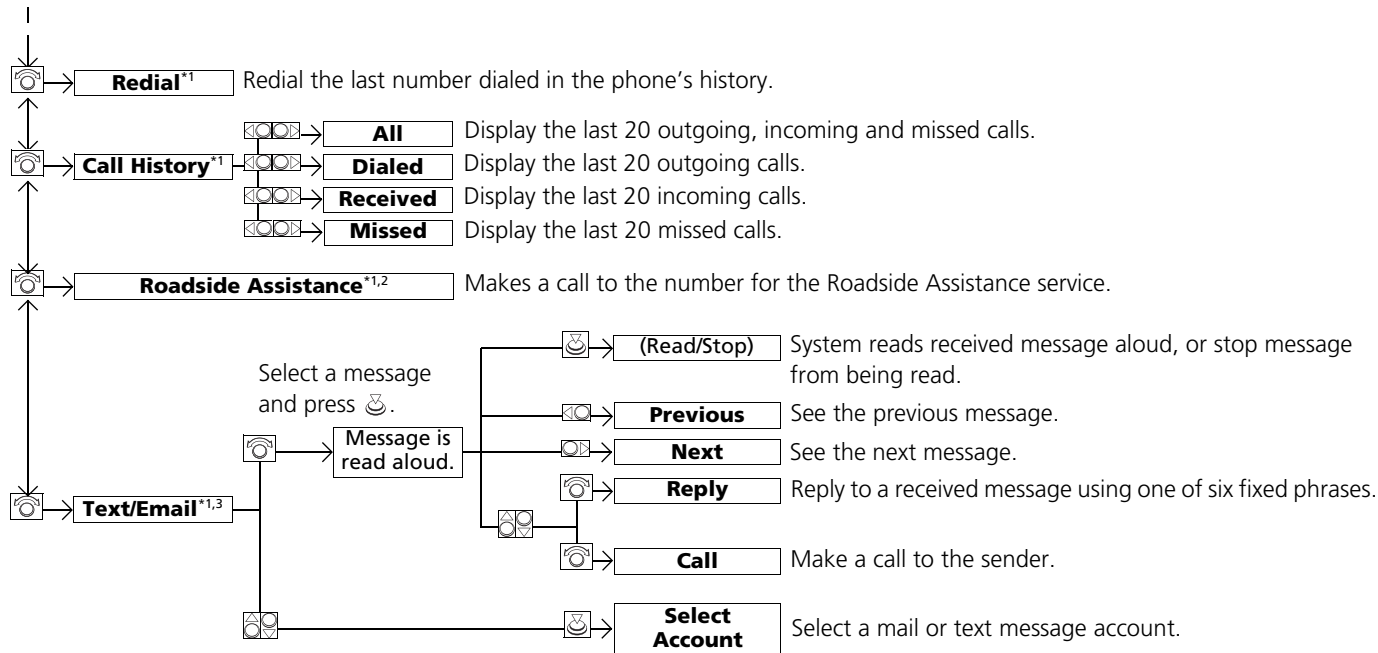

\*1: Appears only when a phone is connected to HFL.

\*2: Not available on all models

\*3: This function is not available if your phone is not supported.



# AcuraLink®

This section describes how Acura directly communicates important information to you regarding your vehicle.


<b>AcuraLink®</b> .....	272
In Case of Emergency.....	272
Security Features .....	274
Operator Assistance .....	275
AcuraLink® Message.....	276
AcuraLink® Subscription Status.....	279

Is a subscription-based service that provides convenient features such as voice communication in case of emergency, online security, one-on-one operator assistance, and the transmission of important messages regarding your vehicle's status.

## In Case of Emergency

### Automatic collision notification

#### Audio/Information Screen

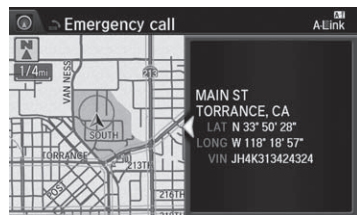

#### On Demand Multi-Use Display™



If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically will attempt to connect to the AcuraLink® operator. Once connected, information about your vehicle, its positioning, and its condition will be sent to the operator; you also can speak to the operator when connected.

### » AcuraLink®

AcuraLink® also provides services you can operate from the Internet or your smartphone.

To subscribe to AcuraLink®, or to get more information about all of its features, contact an Acura dealer or visit [owners.acura.com](http://owners.acura.com).

### » In Case of Emergency

Your vehicle may not be able to connect to the operator if the battery level is low, the line is disconnected or you do not have adequate cellular coverage.

You cannot use emergency services when:

- You travel outside the AcuraLink® service coverage areas.
- There is a problem with the connecting devices, such as the **ASSIST** button, microphone, speakers, or the unit itself.
- You are not subscribed to the service or your subscription is no longer valid.

You cannot operate other navigation- or phone-related functions using the screens while talking to the operator.

Only the operator can terminate the connection to your vehicle.

### » Automatic collision notification

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.

## ■ Manual operator connection



If you need to talk to the AcuraLink® operator in an emergency situation, you can manually connect to them by pressing the **ASSIST** button with the power mode in ACCESSORY or ON.

1. Open the cover attached to the ceiling console.
2. Press the **ASSIST** button.

▶ You are connected to the AcuraLink® operator.

## ▣ Manual operator connection

Do not press the button while driving. When you need to contact the operator, park the vehicle in a safe place.

If the unit fails to connect to the operator, it automatically cancels the action after three minutes.

In an emergency, the cover can be broken through to press the **ASSIST** button.

## Security Features

Your subscribed telematics service provider can track your vehicle's location, remotely lock or unlock doors, and help you find your vehicle.

To use these features, you need your user ID and personal identification number (PIN).

### ■ Stolen vehicle tracking

This feature searches and tracks down your vehicle position even if it is on the move. If you believe that your vehicle has been stolen, contact the police as well as the provider.

### ■ Remote door lock/unlock

The provider can remotely lock or unlock doors upon your request.

### ■ Vehicle finder

This feature is convenient to use when trying to locate your vehicle in large areas, such as a crowded parking lot. If you cannot locate your vehicle after using the remote transmitter's answerback function, you can contact the provider which can then flash your vehicle's exterior lights and sound the horn.

### ■ Security alarm notification

If the security system in your vehicle detects an abnormal condition, such as someone tampering with the lock on your vehicle, the provider notifies you by your preferred method.

#### » Security Features

The contact information of your provider, your user ID and PIN will be given when you subscribe to AcuraLink®. If you forget any of the above, contact a dealer or go to [owners.acura.com](http://owners.acura.com).

You can also activate the remote door lock/unlock and vehicle finder features from the Internet or using your smartphone app. Ask a dealer or visit [owners.acura.com](http://owners.acura.com) for details.


#### » Vehicle finder

The lights will stop flashing and horn will stop sounding under the following conditions:

- When 30 seconds have elapsed.
- You unlock the doors using the remote transmitter.
- You unlock the doors using the keyless access system.
- You unlock the doors using the built-in key.
- The power mode is set to ACCESSORY or ON.

## Operator Assistance


Connect to the AcuraLink® operator when trying to find a destination or for roadside assistance.

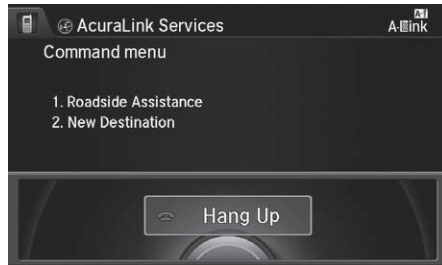

1. Press the **LINK** button.

▶ Connection to the operator begins.

2. Talk to the operator.

▶ To disconnect, rotate  to select **Hang Up**, select **End Call** on the On Demand Multi-Use Display™, or press the **Hang-up** button.


### Operator Assistance

Remain attentive to road conditions and driving during operator assistance.



## AcuraLink® Message

Message Icon

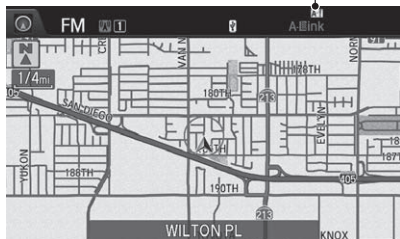


AcuraLink® sends you messages on vehicle features, safety and emissions recall campaigns, maintenance reminders, and diagnostic information.

When you receive a new message, an icon appears on the upper right corner of the audio/information screen.

### Message category



There are six message categories.

- **Feature Guide:** Messages about your vehicle and its features are sent daily for the first 90 days.
- **Quick Tips:** Supplements your Owner's Manual with updated vehicle information.
- **Diagnostic Info:** Appears when a warning indicator or message comes on. Rotate  to select **Check Later** or **Check Now**.  
► Selecting **Check Now** lets you know if you should see a dealer immediately or later in accordance with the warning severity level.
- **Scheduled Dealer Appointment:** An appointment made through the Acura server or Acura Owners website can be rescheduled or canceled from this option.  
► **Dealer Appointments** P. 278
- **Maintenance Minder:** Lets you know which maintenance item is due along with a reminder message.
- **Recalls/Campaigns:** Reminds you of a recall or important safety information. You should also be notified by mail.

### Message category

Messages may not appear immediately after your vehicle purchase. It can take several days for your dealer to register your vehicle's ID.

If an icon includes an exclamation point, it indicates that Acura gives high priority to this message compared to the one without.

- : An unread message with high priority
- : An unread message

### Message category







The types of messages you receive can be modified. Ask a dealer or visit [owners.acura.com](http://owners.acura.com).

You can call your dealer, find the nearest dealer, or schedule appointments from the message options in **Maintenance Minder, Recalls/Campaigns, and Diagnostic Info**.


► **Message Options** P. 277

## Reading a message



1. Press the **INFO** button, rotate  to select **AcuraLink/Messages**, then press .
  - ▶ If your display has changed from Info menu to **Current Drive**, press the **MENU** button.
  - ▶ Select **AcuraLink messages**.
2. Rotate  to select a category, then press .
  - ▶ If there are unread messages in a category, a message icon appears next to that category.
3. Rotate  to select a message you want to read, then press .

## Message Options

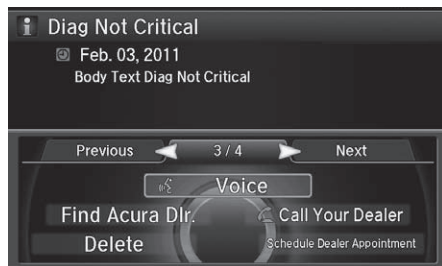

While a message is displayed, you can use options to take immediate action to the message.

Available options are:


- **Voice:** Reads the message aloud. Select Stop to cancel it.

## Reading a message

If there is no message listed on the menu, **AcuraLink/Messages** is grayed out and cannot be selected.

The message icon disappears once you read the message.

However, the exclamation mark that indicates that the message has a high priority remains.

-  : A read message with high priority.

## Message Options

The available options vary by message category.






You can delete all messages in a category at once.

- **Find Acura Dlr.:** Searches for the nearest Acura dealer.
- **Delete:** Deletes the displayed message.
- **Call Your Dealer:** Calls your Acura dealer using HFL.
- **Schedule Dealer Appointment:** Automatically sets an appointment date at your dealer.
- **Phone number:** Dials a number displayed in the message via HFL.
- **Diagnostic Info:** Updates the current diagnostic message by connecting to the Acura server using HFL.

## Dealer Appointments

You can confirm the scheduled appointment date when you receive a **Maintenance Minder** or **Recalls/Campaigns** message, or reschedule any existing appointments.



1. Select a **Maintenance Minder**, **Recalls/Campaigns**, or **Scheduled Dealer Appointment** message.
2. Rotate  to select **Scheduled Dealer Appointment** or **Reschedule Appointment** (depending on the screen). Press .
- ▶ A suggested time and date are displayed.
3. Rotate  to select **Confirm Appointment**. Press  to accept the time and date.
4. Press  to select **OK**.

## Dealer Appointments


To set up an automated dealer appointment when a regular maintenance is due, visit the Acura Owners website at [owners.acura.com](http://owners.acura.com) and set the required option. A reminder message will be sent as the date for the dealer appointment approaches. A reminder message will also be sent if you schedule an appointment online using the **Schedule Service Appointment** function.

If you are not satisfied with the proposed appointment date and time, call your dealer directly.


To cancel the scheduled appointment, select **Cancel Appointment** when a message is displayed.

# AcuraLink® Subscription Status

 **SETTINGS** buttons (in FM mode) ▶ **Info Settings** ▶ **AcuraLink Subscription Status**

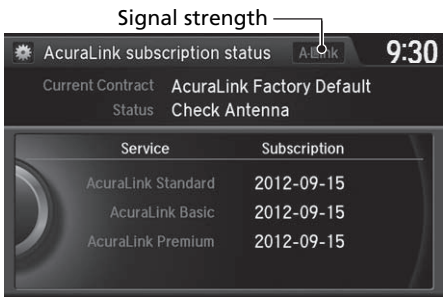

Confirm your AcuraLink® subscription status.

Item	Information
	You can check the signal strength.
Current Contract	The AcuraLink® subscription number and subscription level is displayed.
Service	You can confirm the type of service.
Subscription	You can confirm the expiration date.
Status	<div>The following message can be displayed:<ul style="list-style-type: none"><li>• Check Antenna: There is a problem with the AcuraLink® antenna. Contact a dealer.</li><li>• No data: The signal is received, but some error has occurred in the system.</li><li>• OK: The system is receiving the signal.</li></ul></div>



# Rear Entertainment System

Rear seat passengers can enjoy a completely separate entertainment source than front passengers, including movies, games, and other audio choices.

<b>Rear Entertainment System</b> .....	282	<b>Front Control Panel Operation</b> .....	296
Auxiliary Console Panel .....	282	Selecting the Audio Source using front control panel .....	296
HDMI® Input Jack (Ultrawide RES only) .....	283	Rear System Setup .....	297
Playable Discs .....	284	Setting the DVD Menu .....	298
<b>Rear Control Panel Operation</b> .....	285	<b>Wireless Headphones</b> .....	300
Selecting the Audio Source .....	285	Using the Wireless Headphones .....	300
Rear DVD Menu .....	286	Changing the Sound Source (Ultrawide RES only) .....	301
Screen and Surround Settings .....	289	Replacing the Batteries .....	302
DVD Initial Settings (RES only) .....	292		
Dual Screen Mode (Ultrawide RES only) .....	293		
Replacing the Batteries .....	295		


The Rear Entertainment System (RES) is operable from both the front control panel and the rear control panel.

➤ **Front Control Panel Operation** P. 296

➤ **Rear Control Panel Operation** P. 285

## Auxiliary Console Panel

Auxiliary input jacks and headphone connectors for the rear entertainment system are on the back of the center console compartment.

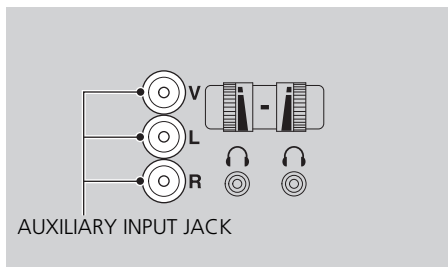

V = Video jack

L = Left audio jack

R = Right audio jack

### ■ Auxiliary Input Jacks

The system will accept auxiliary inputs from standard video games and video equipment. Some video game power supplies may cause poor picture quality.

### ■ Headphone Connectors

There are two headphone connectors for the rear passengers. Each connector has its own volume control.

## ➤ Rear Entertainment System

### NOTICE

This vehicle's overhead mounted video display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste.

## HDMI® Input Jack (Ultrawide RES only)

There is an HDMI® input jack on the back of the center console compartment. The system will accept HDMI® input from video games and video equipment which are equipped with an HDMI® jack.



Open the outlet cover and insert the cable.

### ⌘ HDMI® Input Jack (Ultrawide RES only)

The terms HDMI® and HDMI® High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



## Playable Discs

The discs that come with these labels can be played in your vehicle's rear entertainment system.

Also look for the region code of 1 or ALL on the package or jacket on the disc.

DVD-ROMs are not playable in this unit.

The disc packages or jackets should have one of these marks.



Also includes:



### ▶▶ Playable Discs

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights.

Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering and disassembly are prohibited.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround and Neural Surround are trademarks of DTS, Inc. © DTS, Inc. All Rights Reserved.

Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, MLP Lossless and the double-D symbol are trademarks of Dolby Laboratories.

## Selecting the Audio Source

### ■ RES

1. Press the Rear Power button on the front control panel.
2. Press the audio source button on the rear control panel.
  - ▶ You can also change the audio source by the front control panel.
    - **Selecting the Audio Source using front control panel** P. 296
3. Select a station, channel, track, or chapter using the CH/FOLDER, TUNE/SKIP, or CATEGORY bars.
  - **Overhead Screen and Rear Control Panel** P. 15

### ■ Ultrawide RES




1. Press the Rear Power button on the front control panel.
2. Press the **SOURCE** button on the rear control panel.
3. Select the audio source. Press the **ENTER** button.
  - ▶ You can also change the audio source by the front control panel.
    - **Selecting the Audio Source using front control panel** P. 296
4. Select a station, channel, track, or chapter using the CH/FOLDER, TUNE/SKIP, or CATEGORY bars.

### ➤ Rear Control Panel Operation


In the procedures of this section, “select” means the following actions:

#### RES

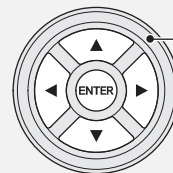

Press the cursor buttons on the rear control panel.

#### Ultrawide RES

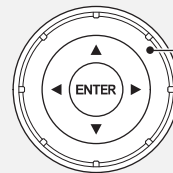

Rotate the Interface Dial on the rear control panel.


The rear control panel can be detached from the ceiling unit and used as a remote control.


➤ **Overhead Screen and Rear Control Panel** P. 15

In this section, screen illustrations from the standard RES are used for the explanation unless otherwise noted.

The screen is displayed on the overhead screen.



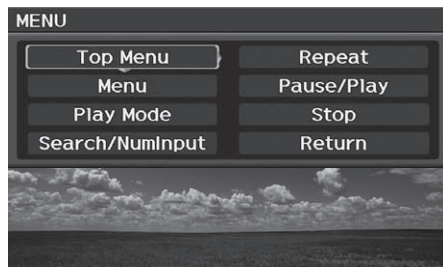


## Rear DVD Menu

 **MENU** button (in the DVD mode)



Select an item. Press the **ENTER** button.

 The following items are available:

- **Top Menu:** Displays the top menu of the DVD.
- **Menu:** Displays the menu of the DVD.
- **Play Mode:** Displays while a DVD is playing and changes the DVD's audio, subtitle, or angle settings.  
 **Setting the Play Mode** P. 287
- **Initial Settings:** Displays while a DVD is not playing and changes the DVD preferences.  
 **DVD Initial Settings (RES only)** P. 292
- **Search/NumInput:** Skips to a title or chapter by entering the number.  
 **Searching a Title/Chapter** P. 288
- **Repeat:**
  -  **TITLE REPEAT:** Repeats the current title.
  -  **CHAPTER REPEAT:** Repeats the current chapter.
- **Pause/Play:** Pauses or resume the playback
- **Stop:** Stops the playback.
- **Return:** Hides the rear audio menu.

## ■ Setting the Play Mode

🔑 **MENU** button (in the DVD mode) ▶ **Play Mode**




1. Select an item. Press the **ENTER** button.
2. Select an option. Press the **ENTER** button.

The following items are available:

- **Audio:** Selects the language of the DVD audio.
- **Subtitle:** Selects the language of the DVD subtitle.
- **Angle:** Selects the angle of a scene shot with multiple cameras.

## ■ Searching a Title/Chapter

🔍 **MENU** button (in the DVD mode) ► **Search/NumInput**

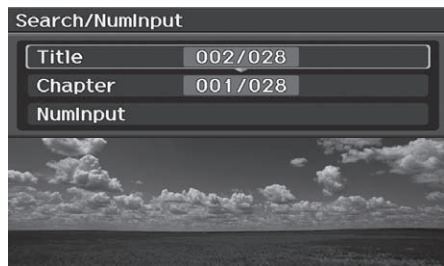

1. Select an item. Press the **ENTER** button.
2. Select a number. Press the **ENTER** button.

The following items are available:

- **Title**: Skips to a title you specify.
- **Chapter**: Skips to a chapter you specify.
- **NumInput**: Enters a number of a title or chapter to skip.


**RES**

Enter a number and select ENT. Press the **ENTER** button.

**Ultrawide RES**

Enter a number and press the **ENTER** button. Select DONE.




## Screen and Surround Settings

 **SETUP** button (in the DVD mode)




Select an item. Press the **ENTER** button.

The following items are available:

- **Brightness** (Ultrawide RES only): Adjusts the screen's brightness. Adjust the brightness using the Interface Dial and press the **ENTER** button.
- **Appearance** (Ultrawide RES only): Selects the color of the rear menu screen.
- **Display Adjust**: Adjusts the screen's preferences.  
 **Adjusting the Screen** P. 290
- **Aspect Ratio**: Selects an aspect ratio of the image  
 **Setting the RES Aspect Ratio** P. 291  
 **Setting the Ultrawide RES Aspect Ratio** P. 291
- **PERSONAL SURROUND**: Sets the surround of the wireless headphones. You can choose from three options: **Music**, **Cinema**, or **Voice**. Select **Off** to disable the feature.
- **Language**: Sets the system language used on all screens. You can choose from three languages: **English**, **Français** (French), or **Español** (Spanish).

## ■ Adjusting the Screen

 **SETUP** button (in the DVD mode) ► **Display Adjust**

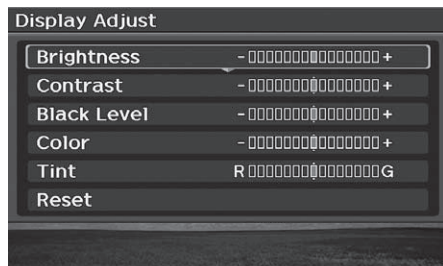


1. Select an item. Press the **ENTER** button.
2. Make the adjustment. Press the **ENTER** button.

The following items are available:

- **Brightness** (RES only): Adjusts the screen's brightness.
- **Contrast**: Adjusts the screen's contrast.
- **Black Level**: Adjusts the screen's black level.
- **Color**: Adjusts the screen's color strength.
- **Tint**: Adjusts the screen's hue.
- **Reset**: Resets all the settings to their factory default.

## ■ Setting the RES Aspect Ratio

🔑 **MENU** button (in the DVD mode) ▶ **Aspect Ratio**

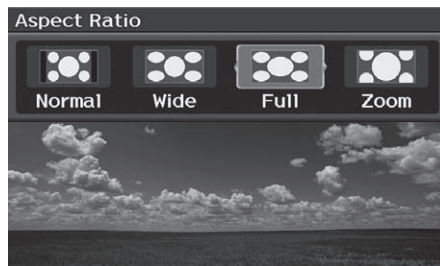

Select an option. Press the **ENTER** button.

## ■ Setting the Ultrawide RES Aspect Ratio

🔑 **MENU** button (in the DVD mode) ▶ **Aspect Ratio**



1. Select an item. Press the **ENTER** button.
2. Select an item. Press the **ENTER** button.

The following items are available:


- **Wide:** Selects the wide screen option (Normal, Full, Super Full, Ultra Full).
- **Zoom:** Selects the zoom screen option (Super Zoom, Ultra Zoom).



## DVD Initial Settings (RES only)


 **MENU** button (in the DVD mode) ► **Initial Settings**

Set the DVD default settings so that you do not have to select the settings each time you play a DVD.

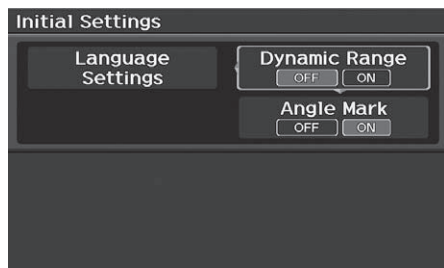


1. Select an item. Press the **ENTER** button.
2. Select an option. Press the **ENTER** button.

The following items are available:

- **Language Settings:** Selects a menu language of the DVD (top) menu.  
 **Selecting the DVD Menu Language** P. 293
- **Dynamic Range:** Sets whether to control the range of the loud and low sounds.  
**On:** Adjusts the dynamic range to easily hear the low sound.  
**Off** (factory default): Disables the feature.
- **Angle Mark:** Sets whether to display the angle symbol.  
**On:** Displays the angle symbol when playing the multiple angle scenes.  
**Off** (factory default): Disables the feature.

## ■ Selecting the DVD Menu Language

🔑 **MENU** button (in the DVD mode) ▶ **Initial Settings** ▶ **Language Settings**

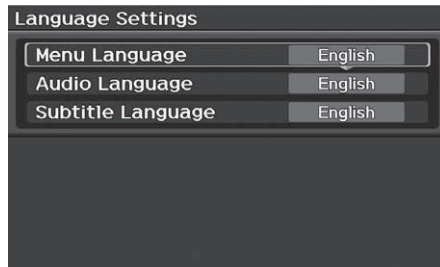

1. Select an item. Press the **ENTER** button.
2. Select a language. Press the **ENTER** button.

## ☒ Selecting the DVD Menu Language

When you select **Other**, enter a 4-digit language code.

## Dual Screen Mode (Ultrawide RES only)

Select between the two screen modes, single or dual.

### ■ Single Mode


The selected source is displayed in the center of the screen.

### ■ Dual Mode


Two separate screens are displayed side by side. You can only select one output source from the front audio system. The other source must come from "REAR AUX Video" or "REAR AUX HDMI".

*Continued*


## ■ Single mode to Dual mode

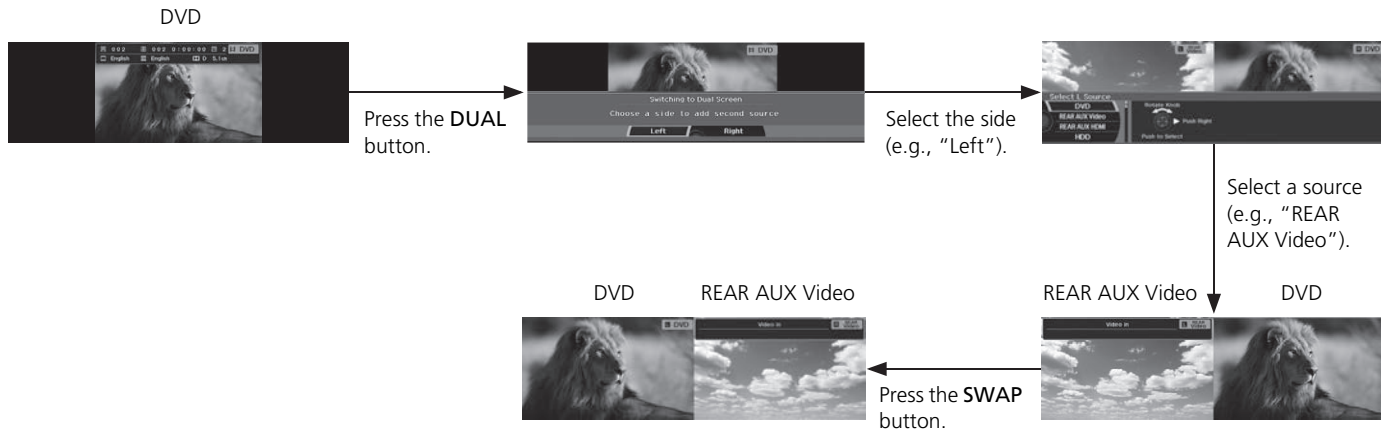

## ■ Dual mode to Single mode

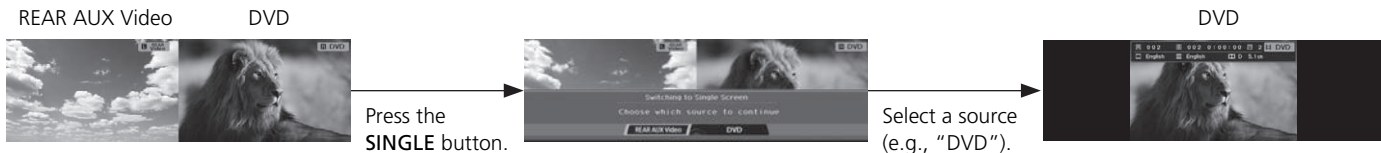

## Replacing the Batteries

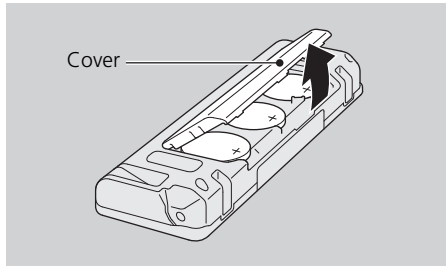

1. Remove the rear control panel.

► **Overhead Screen and Rear Control Panel P. 15**

2. Open the cover.
3. Change the batteries.

► Battery type: BR3032



### ► Replacing the Batteries

An improperly disposed of battery can hurt the environment. Always confirm local regulations for battery disposal.

Operate the Rear Entertainment System (RES) from the front control panel.


## Selecting the Audio Source using front control panel







1. Press the Rear  (Power) button on the front control panel.
2. Press the **REAR AUDIO** button.
  - ▶ The rear source is displayed on the front audio/information screen and the On Demand Multi-Use Display™.
  - ▶ The rear source is heard from the front speakers.
3. Select **Rear Source** on the On Demand Multi-Use Display™.
4. Select the audio source icon on the On Demand Multi-Use Display™.
5. Select a station, channel, track, or chapter in the same way as the front audio system.  
 **Audio** P. 143

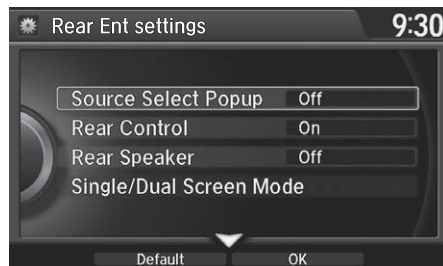

## Rear System Setup

 **SETTINGS** button ▶ **Rear Ent Settings**



1. Rotate  to select an item. Press .
2. Rotate  to select an option. Press .

The following items are available:



- **Source Select Popup:** Selects whether the list of selectable audio sources comes on when the **AUDIO** button is pressed.
- **Rear Control:** Sets whether to use the rear control panel to control the RES.  
**On** (factory default): Operates the RES using the rear control panel.  
**Off:** Disables the feature.
- **Rear Speaker:** Sets the front audio source to play through the rear speakers, even when the RES is on. The RES source can only be heard through the wireless headphones.  
**On** (factory default): Outputs the sound of the front source to the rear speakers.  
**Off:** Disables the feature.
- **Single/Dual Screen Mode** (Ultrawide RES only): Selects a source to continue playing when you switch from dual mode to single mode on the overhead screen. Rotate  to select a source and press .

## Setting the DVD Menu


### Interface Dial



 **MENU** button (in DVD mode)




1. Rotate  to select an item. Press .

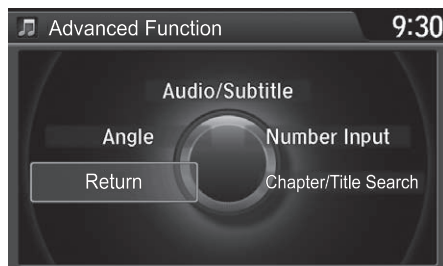▶ Select **Advanced Function** to display additional menu entries.



2. Rotate  to select an option. Press .

The following items are available:

- **Sound:** Adjusts the settings of the audio speaker's sound.  
 **Adjusting the Sound** P. 154
- **Top Menu:** Displays the top menu of the DVD.
- **Menu:** Displays the menu of the DVD.
- **Repeat:**  
**Repeat Title:** Repeats the current title.  
**Repeat Chapter:** Repeats the current chapter.

- **Change Source:** Changes the audio source mode.
- **Play/Pause:** Pauses or resume the playback.
- **Stop:** Stops the playback.
- **Audio/Subtitle:** Selects the language of the DVD audio and the DVD subtitle.
- **Angle:** Selects the angle of a scene shot with multiple cameras.
- **Return:** Hides the DVD menu.
- **Number Input:** Enters a number of a title or chapter to skip.
- **Chapter/Title Search:** Skips to a title or chapter by Interface Dial.

#### On Demand Multi-Use Display™



1. Select **More**.
2. Select a setting item.


The following items are available:

- **Sound:** Displays the sound preferences screen.  
 ▶ **Adjusting the Sound** P. 154
- **Screen Settings:** Displays the screen preferences screen.  
 ▶ **Changing the Screen Settings** P. 87



## Using the Wireless Headphones

Audio for the Rear Entertainment System is sent to the wireless headphones that come with the system.

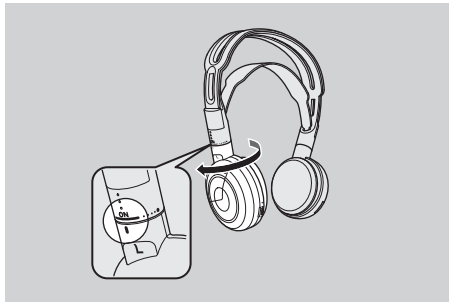

1. Pivot the earpieces outward.



2. Adjust the volume by turning the dial on the bottom of the right earpiece.
3. Wear the headphones correctly with the left and right earpieces on the correct sides.
  - ▶ L (left) and R (right) are marked on the sides of the frame.

### Using the Wireless Headphones

When you remove the headphones, the earpieces automatically pivot inward, and the headphones turn off. When not in use, store the headphones in the back pocket of either front seat.

Some state and local government agencies prohibit the use of headphones by the driver of a motor vehicle. Always obey applicable laws and regulations.


You can use wired headphones through the auxiliary input jacks.

▶ **Auxiliary Console Panel** P. 282

## Changing the Sound Source (Ultrawide RES only)

### ■ Wireless Headphone

In dual screen mode, you can switch the sound source of the wireless headphones between the left and right side screens.

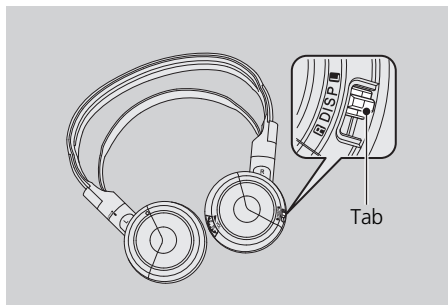


Slide the tab to "L" for the left side, or "R" for the right side.

### ☒ Changing the Sound Source (Ultrawide RES only)


You can switch the sound source from the setup menu if you connected a set of wired headphones.

1. Press the **SETUP** button on the rear control panel.
2. Select **Wired Headphones**. Press the **ENTER** button.
3. Select **Left** or **Right** to switch the sound source. Press the **ENTER** button.

## Replacing the Batteries

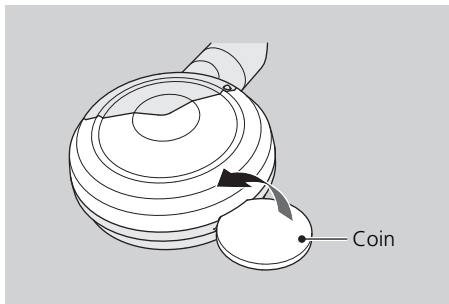

1. Insert a coin in the slot and twist it slightly to pry the cover away from the earpiece.
2. Pull the cover outward, and pivot it out of the way.

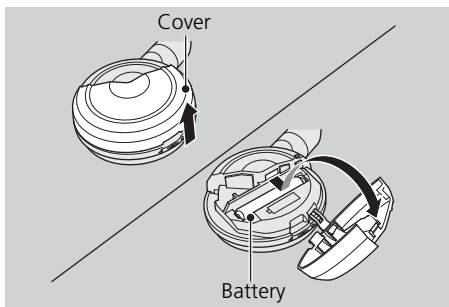

3. Remove the battery.
4. Install the new battery in the earpiece as shown in the diagram next to the battery slot.

► Battery Type: AAA battery

5. Slide the cover back into place on the earpiece, then press down on the back edge to lock it in place.

### Replacing the Batteries

The battery is under the cover on the left earpiece.

An improperly disposed of battery can hurt the environment. Always confirm local regulations for battery disposal.

If static is heard in the headphones, try replacing the battery.


# Other Features

This section describes the useful functions incorporated into the navigation system to help make your journey easier and more enjoyable.


<b>Trip Computer</b> .....	304
<b>Calendar</b> .....	305
<b>Information Functions</b> .....	306
System Device Information .....	306
Map Data Update .....	306
Info Screen Preference .....	307
<b>Multi-view Rear Camera*</b> .....	308
About Your Multi-View Rear Camera ...	308
<b>Surround View Camera*</b> .....	310
<b>Troubleshooting</b> .....	332

## INFO button ► Trip Computer

View the distance traveled and average fuel consumption.

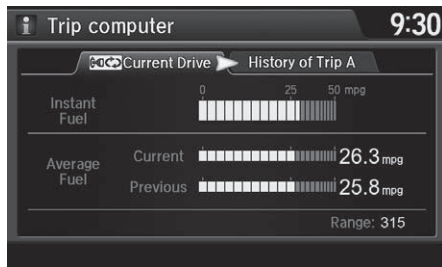

Move ◀ or ▶ to select the trip information.

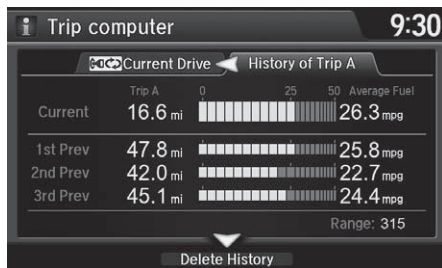

The following items are available:

- **Current Drive:** Displays the current trip information.
- **History of Trip A:** Displays information for three previous histories. The information is stored every time you reset Trip A.
- **Delete History:** Deletes the trip information. Move ◀ on the Trip A screen to select **Delete History**, then press ⏏. You will receive a confirmation message on the screen. Rotate ⌚ to select **Yes**, then press ⏏.

## ▣ Trip Computer

Displays the following trip information:

- **Instant Fuel:** The current estimated instant fuel economy.
- **Average Fuel:** The average fuel economy since the last key cycle.
- **1st, 2nd, 3rd Prev.:** The previous average fuel consumption.
- **RANGE:** The estimated distance you can travel on the fuel remaining in the tank.

These values are estimates only.

 **INFO** button ► **Calendar**

View the calendar screen.



Move ◀○ or ○▶ to select the months of the year.

## System Device Information

 **SETTINGS** button ► **Navi Settings** ► **Map** ► **System Device Information**


View database, software, device, and vehicle identification information.



## Map Data Update


 **SETTINGS** button ► **Navi Settings** ► **Map** ► **Map Data Update**

Check the map data update status when updating the map database.

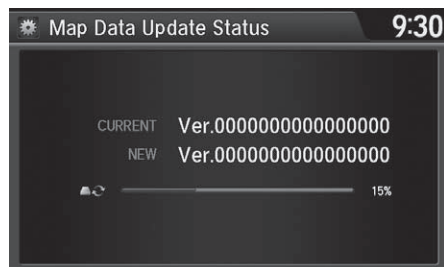

### System Device Information

You will need this information when ordering a map update.

 **Obtaining a Navigation Update** P. 357

### Map Update Status


This operation is only available during a database update.

 **Obtaining a Navigation Update** P. 357

## Info Screen Preference

🔧 **SETTINGS** button ▶ **Info Settings** ▶ **Other** ▶ **Info Screen Preference**

Select the top menu when the **INFO** button is pressed.

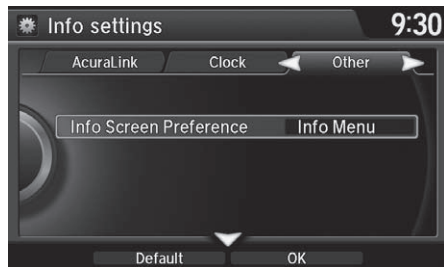

Rotate 🔄 to select your desired setting item. Press ⏹.

The following options are available:


- **Info Top**: A brief menu pops up.
- **Info Menu** (factory default): A full menu pops up.
- **Off**: A menu does not pop up.



## About Your Multi-View Rear Camera

The audio/information screen can display your vehicle's rear view. The display automatically changes to the rear view when the gear position is changed to **R**.

### Multi-View Rear Camera Display Area

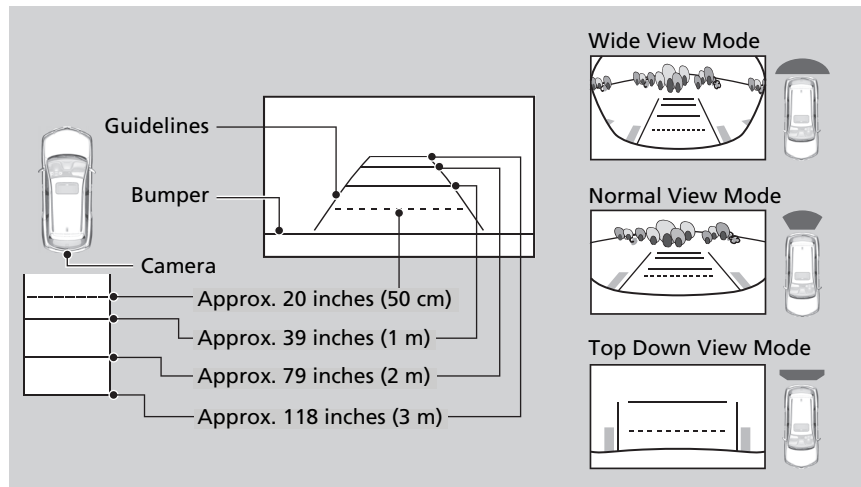

You can view three different camera angles on the rearview display. Press the interface dial to switch the angle.

If Top View is last used before you turn the power mode to OFF, Wide mode is selected next time you turn the power on and change to **R**.

### ⚠ About Your Multi-View Rear Camera

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.


Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

\*: Not available on all models

## Multi-View Rear Camera Settings

 **SETTINGS** button ► **Camera Settings**

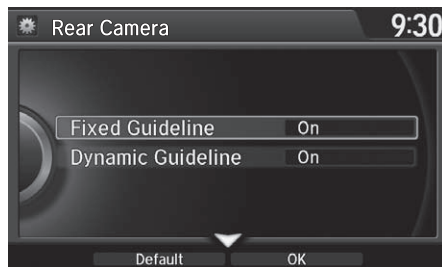

Rotate  to select an item. Press .

The following items are available:

- **Fixed Guideline:**  
**On (factory default):** Guidelines appear when you shift into Reverse.  
**Off:** Guidelines do not appear when the dynamic guideline is off.
- **Dynamic Guideline:**  
**On (factory default):** Guidelines move according to the steering wheel direction.  
**Off:** Guidelines do not move.

The Surround View Camera System allows the driver to check the blind spots through the images displayed on the audio/information screen.

Using this support system will reduce the driver's stress in the following situations.

- Backing up the vehicle into a parking space marked with parking lines.
- Checking both ways at intersections with poor visibility.
- Parallel-parking in a parking space marked with parking lines.
- Checking for obstacles in front of the vehicle.
- Checking for obstacles at the rear of the vehicle.
- Checking for obstacles around the front right and left sides of the vehicle.

### Surround View Camera\*

Always keep the camera lens clean and unobstructed. The rearview camera has a lens that makes distances appear different than they actually are. Always take care when backing up, and look behind you for obstacles.

Navigation controls are disabled when in Reverse.

Adjusting the brightness for the camera display does not affect the brightness of the audio/information screen.

If you turn the guide lines off, they remain off until you turn them back on.


The Surround View Camera System is designed to reduce the driver's stress of operating the vehicle. Use this system as support for visual checks to confirm the safety in areas likely to be blind spots.

The Surround View Camera System does not eliminate all blind spots. Visually confirm safety around the vehicle with your own eyes and the mirrors. Do not rely on the camera view.

\*: Not available on all models


## Camera locations and images

Your vehicle is equipped with four cameras.  
They provide different views and also a synthetically combined ground view.  
The views appear differently during the day and at night.

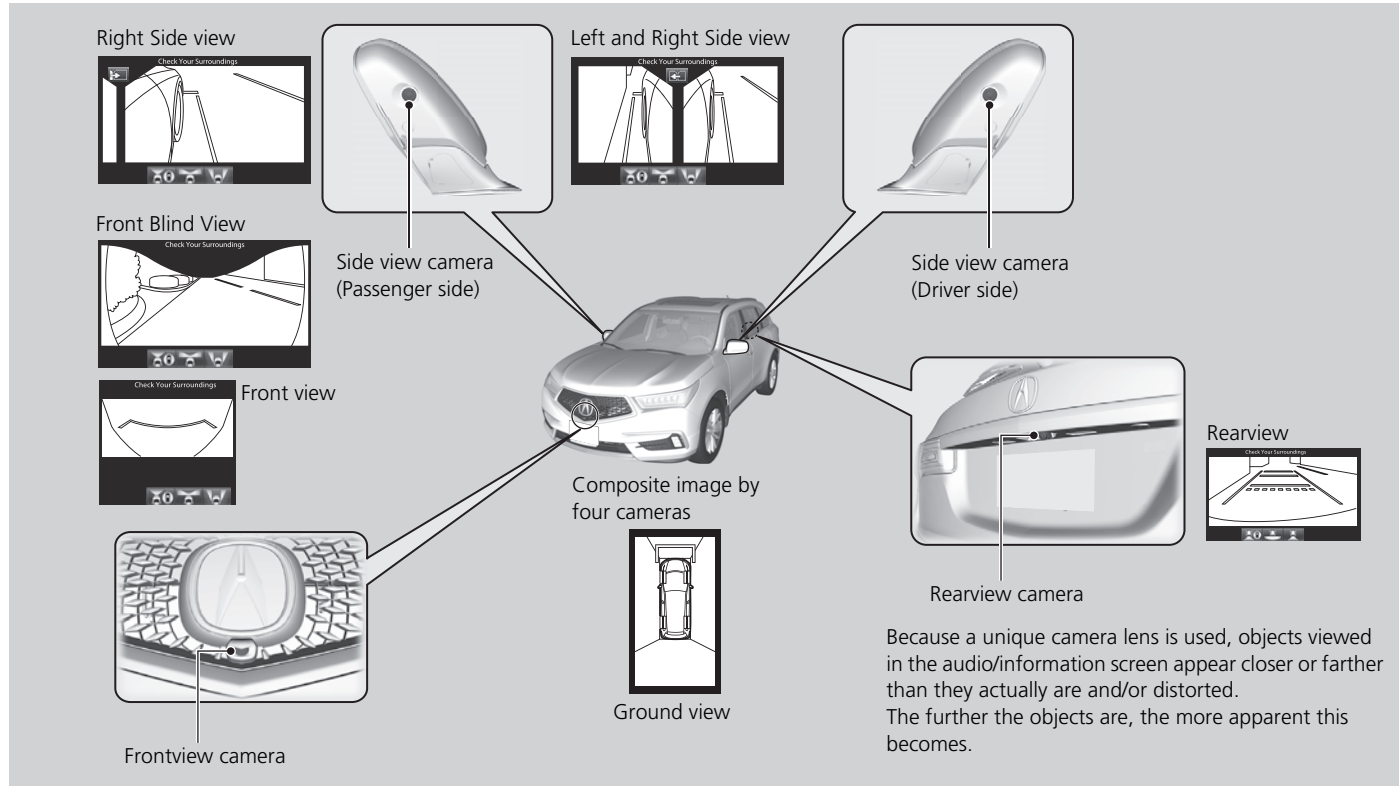

## Displaying the Surround View Camera Screen

### ■ Using the CAMERA Button

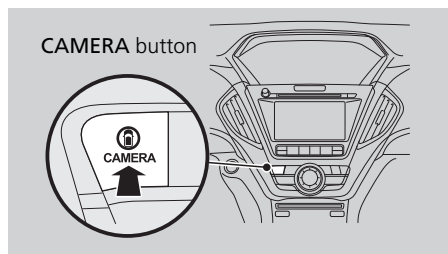

Press the **CAMERA** button while the vehicle is stopped or running slower than 7 mph (12 km/h).


- Displays the front view. To switch the screen, press the **CAMERA** button. Press other mode buttons to exit the Surround View Camera System.

### ☒ Displaying the Surround View Camera screen

Operating the navigation system or audio system while the Surround View Camera System screen is displayed closes the Surround View Camera System screen and starts up the navigation system screen.

### ☒ Using the CAMERA button

Even when the Surround View Camera System screen is displayed, the display automatically switches to the audio/information screen if the vehicle speed exceeds 9 mph (15 km/h), and it switches back to the multi-view camera system screen if the speed is reduced to below 7 mph (12 km/h).<sup>\*1</sup>

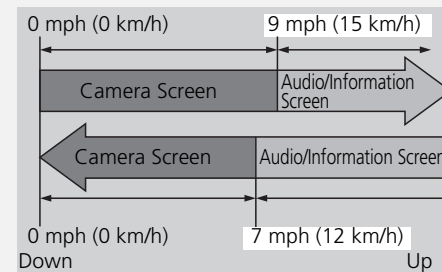


When the vehicle is decelerating rapidly, it may appear before it reaches 7 mph (12 km/h).

If you press the **CAMERA** button while the vehicle speed is more than 7 mph (12 km/h), a message screen appears. When the vehicle speed is less than 7 mph (12 km/h), it switches to the Surround View Camera System screen.

<sup>\*1</sup>: For the rear view, the screen does not automatically switch based on the vehicle speed.

## ■ Using the Shift Button

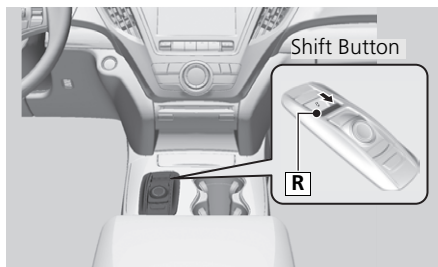

Change the gear position to **R** with the brake pedal depressed.

- ▶ Displays the rear view. To switch the screen, press the **CAMERA** button.

## ☒ Using the Shift Button

If you do not touch any switch after changing the gear position to the **R** position, the display switches from the Rear View screen to the previous screen when the gear position is changed out of **R**. If you touch any switch while the gear position is in **R**, the display switches from the Rear View screen to the Front View screen when the gear position is changed out of **R**.

You can customize the display setting.


☒ **Customized Surround View Camera System** P. 330

You can adjust the brightness of the rearview camera.

☒ **Display Settings** P. 28

## Switching the Screen

### Front View Screen (When Gear Position is in Other than R Position)

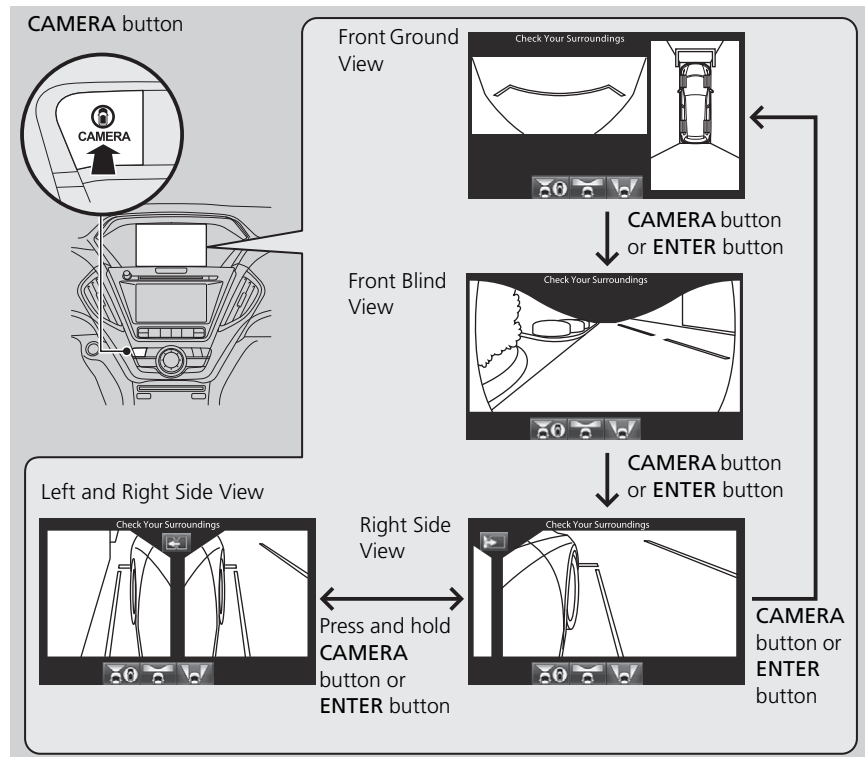

### Switching the Screen

In the view image fixed guidelines are displayed which help the driver get a sense of distance between the vehicle and objects.




Dynamic guidelines are displayed which help the driver confirm the projected vehicle path.

The guidelines can be turned ON/OFF to setup.


The positions/distances indicated by the guide lines and camera views on the display may differ from the actual positions/distances due to the changes in the vehicle height, road conditions, and other factors.

The guide lines should be used as a reference only.

You can also select to switch the display for the following marks on the screen.

-  : Front Ground View
-  : Front Blind View
-  : Right Side View/Left and Right Side View

## ■ Rear View Screen (When Gear Position is in **R** Position)

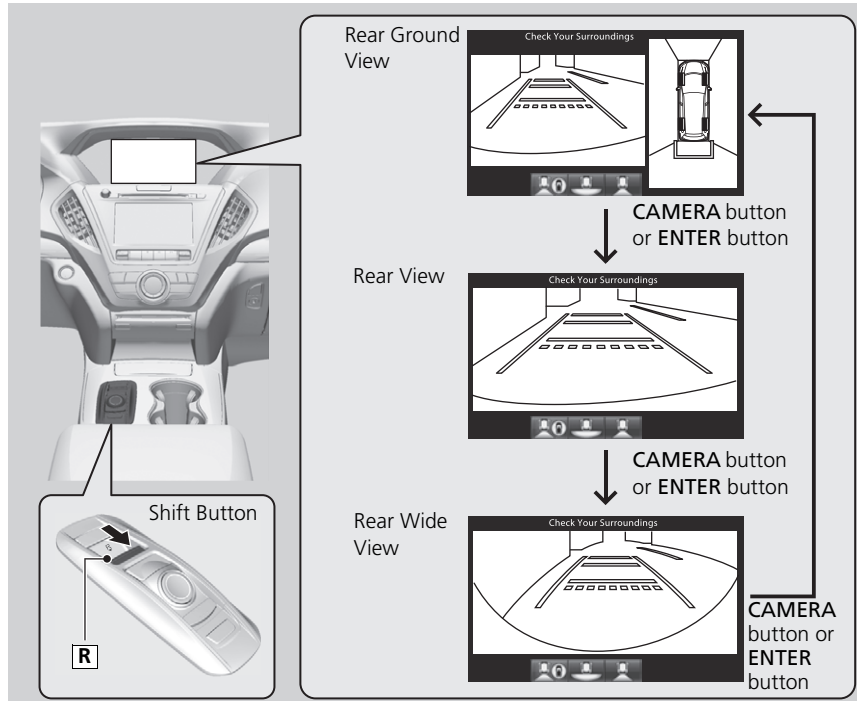

## ☒ Rear View Screen (When Gear Position is in **R** Position)






**Visually confirm safety around the vehicle with your own eyes and/or using the mirrors.**

The view area displayed on the screen is restricted. It may not show all people or obstacles around you. Relying only on the view on the screen may cause an accident.

**Minimize the time spent looking at the view screen while driving.**

Failure to do so may cause an accident as you cannot pay sufficient attention to your surroundings.

You can also select to switch the display for the following marks on the screen.

-  : Rear Ground View
-  : Rear Normal View
-  : Rear Wide View




## Backing Up The Vehicle into a Parking Space Marked with Parking Lines


When backing up the vehicle into a parking space with parking lines, the parking guide lines of the Surround View Camera System provide support to the driver during parking.

### ■ Before Parking

The rear reference guide lines of the Surround view camera system can be used in a parking space marked with parking lines, such as that shown in the figure below.

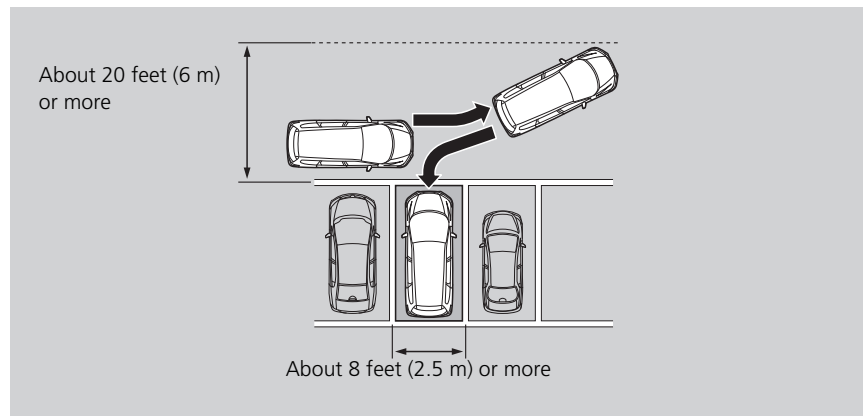


## ■ Selecting Rear Reference Lines

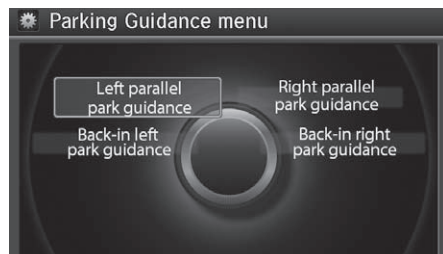


1. Press the **CAMERA** button while the vehicle is stopped.
2. Press the **MENU** button.
3. Select Back-in left park guidance or Back-in right park guidance.

## ■ How to park

The following section describes how to back up the vehicle into a parking space with the rear right of the vehicle in first.

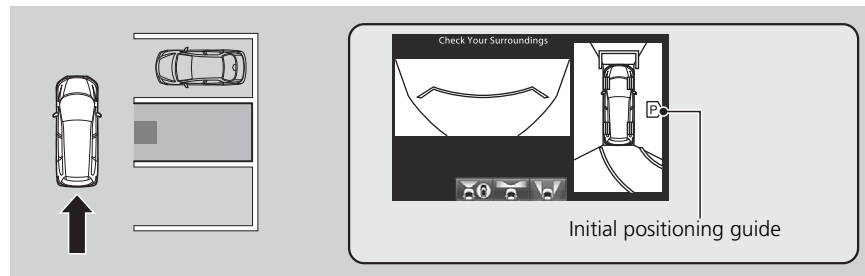

1. Move the vehicle forward perpendicular to the parking space and stop where the initial positioning guide comes to the center of the parking space.

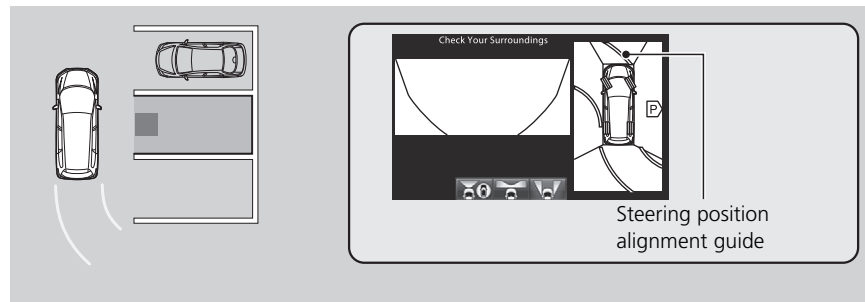


2. Turn the steering wheel fully to the left while stopped.

► The steering position alignment guide is displayed.


## ▣ How to park

When you need operation instruction, press and hold the **CAMERA** button while the parking guide screen is displayed. The instruction screen appears on the screen. To close the Instruction screen, press the **BACK** button or press and hold the **CAMERA** button.

3. Slowly move the vehicle forward with the steering wheel turned fully to the left.

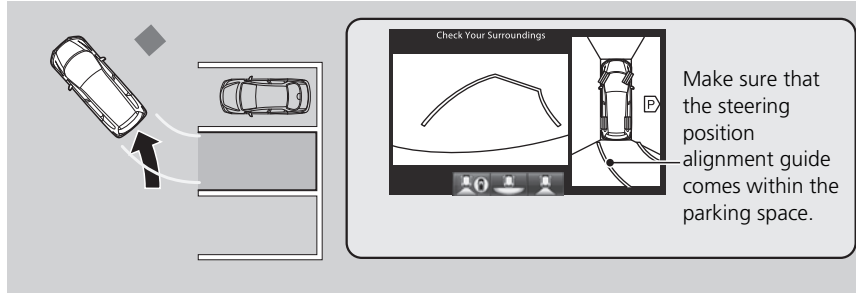

4. Stop the vehicle when the steering position alignment guide enters the parking space.

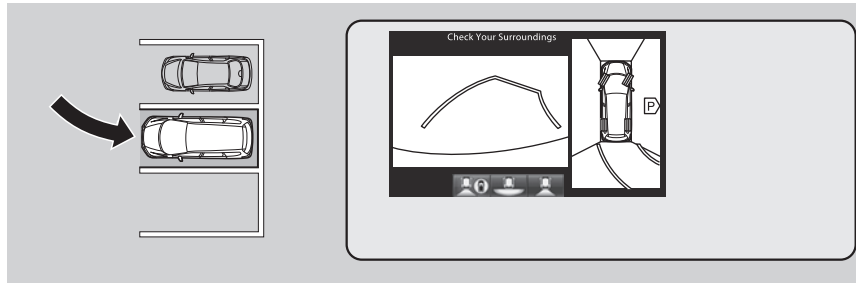


5. Turn the steering wheel fully to the left while stopped and back up the vehicle slowly.
6. Stop the vehicle when it is parallel to the parking lines.
7. Straighten the steering wheel, and then back up and park the vehicle at the proper position.

#### How to park


If the steering position alignment guide does not fit in the parking lines, the parking space is too small for the vehicle.

This system does not work for:

- Parking spaces with crooked parking lines.

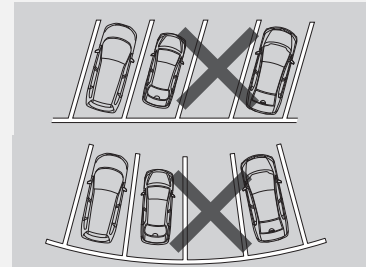

- Parking spaces where the surrounding vehicles are parked off the parking lines.

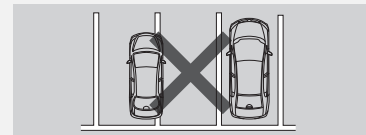


## Parallel Parking the Vehicle into a Parking Space Marked with Parking Lines.

The parallel parking guide lines of the Surround View Camera System provide support to the driver while parking in parking spaces, such as that shown in the figure below.

### ■ Before Parking


The rear reference guide lines of the Surround View Camera System can be used in a parking space marked with parking lines, such as that shown in the figure below.

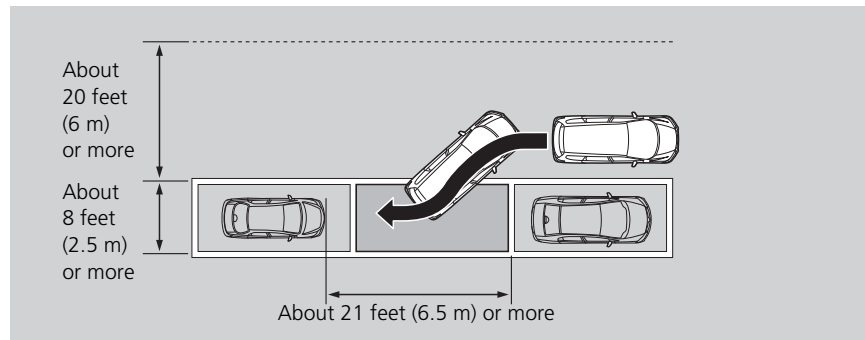

You may need to try more than once before parking the vehicle in the parking space properly depending on the condition of the space.

In such a case, adjust the vehicle position while looking around the vehicle to park the vehicle in the proper parking position.


## ■ Selecting Parallel Park Reference Lines

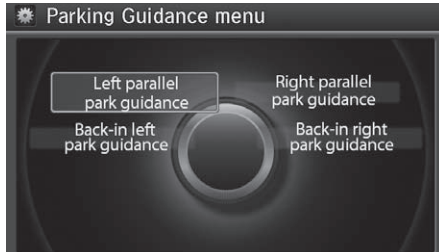


1. Press the **CAMERA** button while the vehicle is stopped.
2. Press the **MENU** button.
3. Select Left parallel park guidance or Right parallel park guidance.

## ■ How to park

The following section describes how to parallel-park the vehicle into a parking space at the right side of the street.

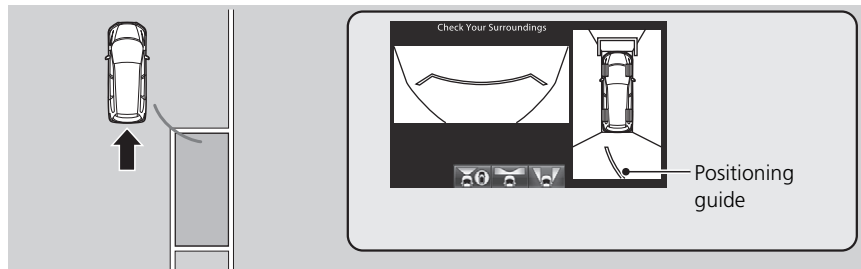

1. Move the vehicle forward parallel to the parking space and stop where the initial positioning guide overlaps the front corner of the parking space.

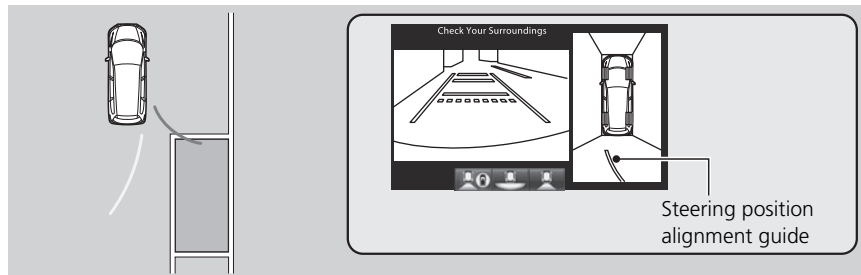


2. Turn the steering wheel fully to the right while stopped.
  - The steering position alignment guide is displayed.


## ▣ How to park

When you need operation instruction, press and hold the **CAMERA** button while the parking guide screen is displayed. The instruction screen appears on the screen. To close the Instruction screen, select press the **BACK** button or press and hold the **CAMERA** button.

3. Slowly back up the vehicle with the steering wheel turned fully to the right.

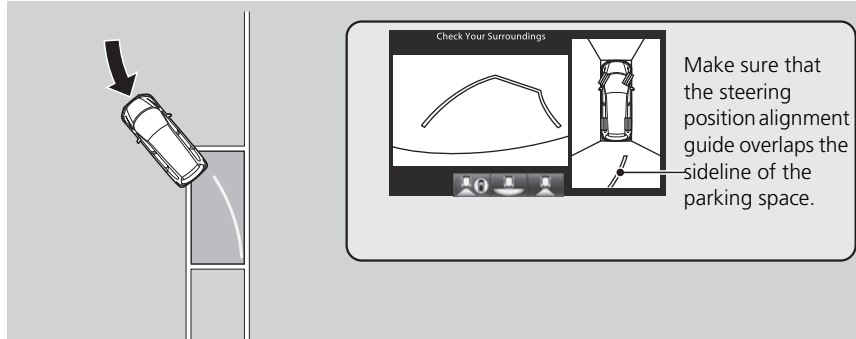

4. Stop the vehicle when the steering position alignment guide overlaps the sideline of the parking space.

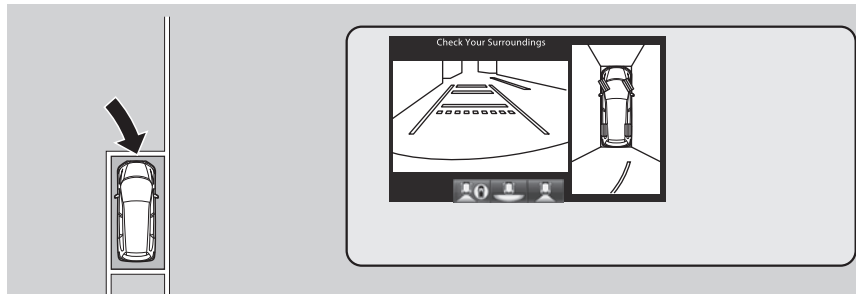


5. Turn the steering wheel fully to the left while stopped and back up the vehicle slowly.  
 6. Stop the vehicle when it is parallel to the parking lines.  
 7. Straighten the steering wheel, and then back up and park the vehicle at the proper position.

#### How to park


Always take care when backing up, and look behind you for obstacles.

This system does not work for:


- Parking spaces with crooked parking lines.

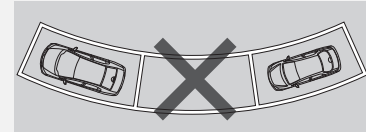

- Parking spaces where the surrounding vehicles are parked off the parking lines.

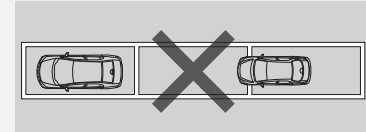

- Parking spaces without parking lines.

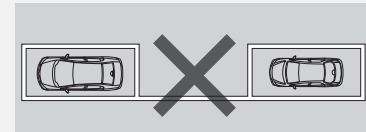



## Checking for Obstacles at the Rear of the Vehicle


Display the rear view screen to check for any obstacles at the rear of the vehicle when backing up the vehicle into a garage or the like.  
Switch between the rear view and ground view and rear view and mirror view accordingly.

### ► Checking for Obstacles at the Rear of the Vehicle

Each guide line display can be turned ON/OFF.

The four cameras provide the ground view on the screen even when the door mirrors are folded.

Note that the view area and blind spots change when the door mirrors are folded.

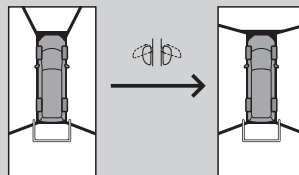


### **Do not drive the vehicle with the door mirrors folded.**

The view displayed on the screen when the door mirrors are folded is for confirming the safety around the vehicle during parking.


## ■ Description and operation of the screens

Change the gear position to **R**.

► Display the rear ground view screen.

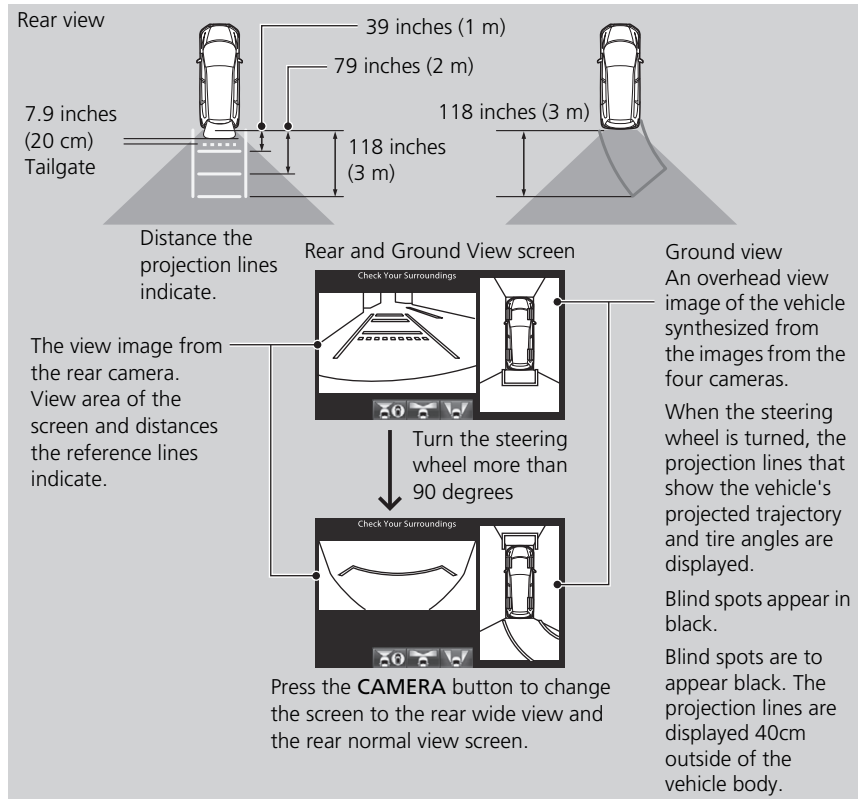

Continued

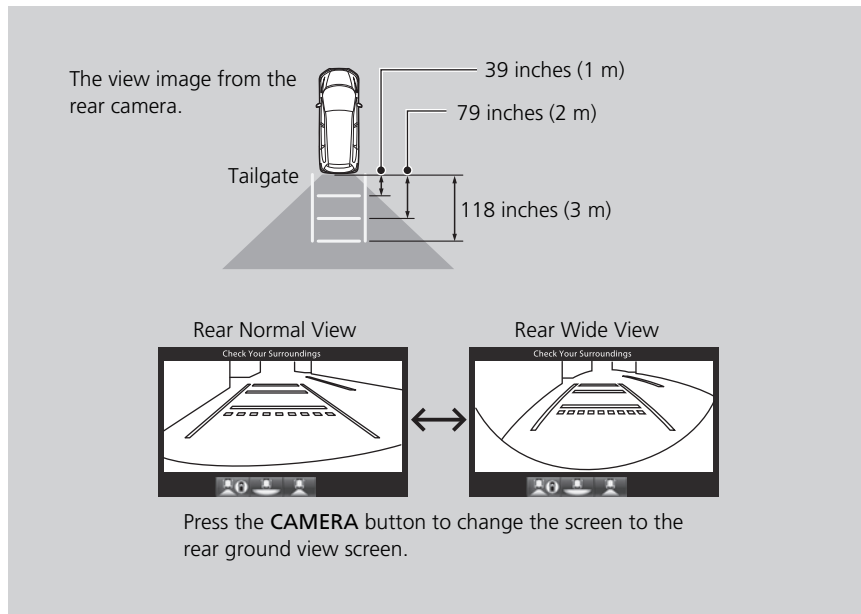

☒ Checking for Obstacles at the Rear of the Vehicle

Each side view is not displayed when the door mirrors are folded.


## Checking the Right and Left Sides of the Vehicle at Intersections with Poor Visibility

Display the front blind view screen when conforming the right and left sides of the vehicle at intersections with poor visibility.

### ■ Description and Operation of the Screens

To switch the screens, press the **CAMERA** button when the vehicle speed is below 7 mph (12 km/h).

► Display the front blind view screen.

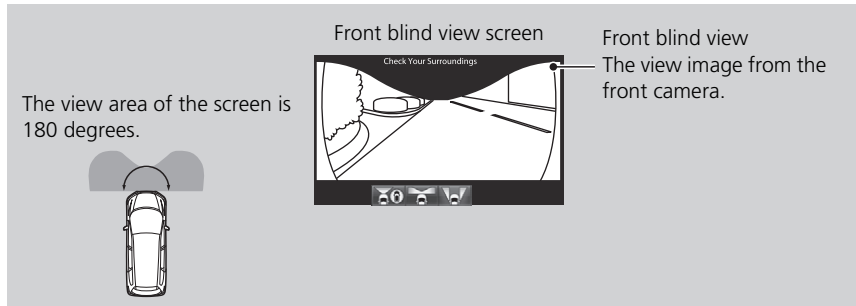

### ☒ Checking the Right and Left Sides of the Vehicle at Intersections with Poor Visibility

As the system uses a wide-angle view, the displayed images on the screen will be largely distorted and different from the actual distance.

The front blind view screen is switched in the order shown in the figure on P.314.

## Checking for Obstacles in Front of the Vehicle

Display the front view and ground view screen to check for any obstacles in front of the vehicle when parking the vehicle in a garage or the like.


### ■ Description and Operation of the Screens

To switch the screens, press the **CAMERA** button when the vehicle speed is below 7 mph (12 km/h).


► Display the front view and ground view screen.

#### Front view


The view image from the front camera.  
View area of the screen and distances the reference lines indicate.

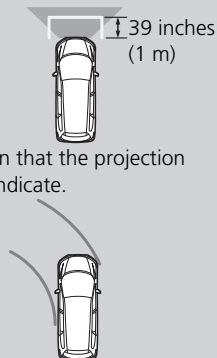

#### Front view and ground view screen

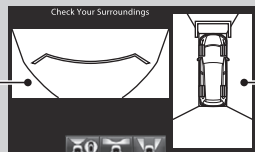

Turn the steering wheel

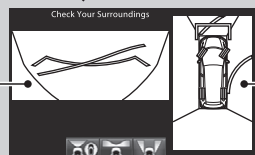

#### Ground view

An overhead view image of the vehicle synthesized from the images from the four cameras.

When the steering wheel is turned, the projection lines that show the vehicle's projected trajectory and tire angles are displayed.

Blind spots appear in black.


### ☒ Checking for Obstacles in Front of the Vehicle

Each guide line display can be turned ON/OFF.

The front view and ground view screen are switched to in the order shown in the figure on P.314.

The four cameras provide the ground view on the screen even when the door mirrors are folded.

Note that the view area and blind spots change when the door mirrors are folded.

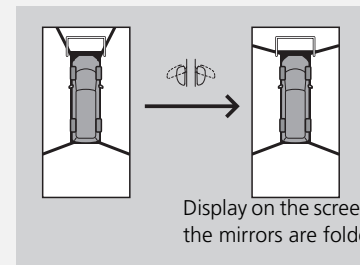

### ⚠ CAUTION

**Do not drive the vehicle with the door mirrors folded.**

The view displayed on the screen when the door mirrors are folded is for confirming the safety around the vehicle during parking.

## Checking for Obstacles Around the Front Sides of the Vehicle


Display the side view screen to check the right and left sides of the vehicle when pulling up the vehicle to a curve or tollbooth or passing an oncoming car in a narrow driving condition.

The left side view screen displays only the left side view, and the right and left side view screen display the views of both sides. Switch the screens accordingly.

### ■ Description and Operation of the Screens

Display the side view and ground view screen.

- To switch the screens, press the **CAMERA** button when the vehicle speed is below 7 mph (12 km/h).

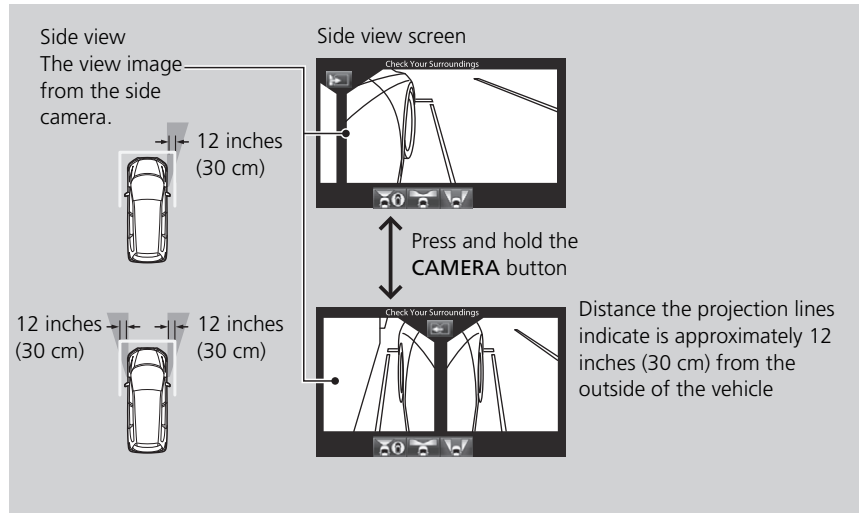

- ☒ Checking for obstacles around the front sides of the vehicle

Each guide line display can be turned ON/OFF.


When the door mirrors are folded, the side view screen is not displayed.

The side view screen is switched in the order shown in the figure on P.314.

## Customized Surround View Camera System

 **CAMERA** button ► **SETTINGS** button ► **Camera Settings**

Set the camera screen settings.

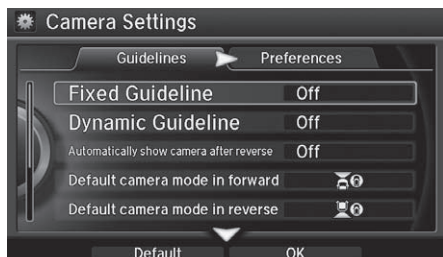

 

 
 
 

 
 
 
 
 
 
 
 
The following items are available:

- **Fixed Guideline:** Sets whether to turn the display of the reference lines on or not.  
**On:** Displays the reference lines.  
**Off:** Disables the feature.
- **Dynamic Guideline:** Sets whether to turn the display of the projection lines on or not.  
**On:** Displays the projection lines.  
**Off:** Disables the feature.
- **Automatically show camera after reverse:** Sets whether to automatically switch between the cameras to use when the gear position is changed out of **R** to move the vehicle forward.  
**On**  
**Off**
- **Default camera mode in forward:** Sets which screen to display when the multi-view camera system is turned on while the vehicle is moving forward.  
**Front ground view**  
**Last Used**  
**Front blind view**  
**Side view**




 
 







- **Default camera mode in reverse:** Sets which screen to display when the multi-view camera system is turned on while the vehicle is backing up.  
**Rear ground view**  
**Last Used**  
**Rear normal view**  
**Rear wide view**
- **Show camera when decelerating:** Sets whether to automatically return the display to the camera view screen when the vehicle speed is reduced to lower than 7 mph (12 km/h), after the display is switched from the camera view screen to audio/information screen when the vehicle speed exceeds 9 mph (15 km/h) while the Surround View Camera System is on.  
**On**  
**Off**
- **Clear parking guidance automatically:** Sets whether to automatically turn the display of the parking guide lines off or not.  
**On:** Displays the parking guide lines.  
**Off:** Disables the feature.
- **Display:** Adjust the screen's preferences.



## Backing up using the parking guide lines

Vehicle position	Cause	solution	Reference page
Turns too big.  	Did you turn the steering wheel before the initial positioning guide enters the parking space? 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the center of parking space.</li> </ul> 	<b>➤ Backing Up The Vehicle into a Parking Space Marked with Parking Lines</b> P. 316
	Did you turn the steering wheel before the steering position alignment guide enters the parking space while backing up? 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the steering position alignment guide fits in the parking space.</li> </ul> 	
	Did you fully turn the steering wheel while backing up? 	<ul style="list-style-type: none"> <li>Fully turn the steering wheel when steering.</li> </ul> 	
Turns too short.  	Did you turn the steering wheel after the initial positioning guide comes outside of the parking space? 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the center of the parking space.</li> </ul> 	
	Did the steering position alignment guide come off of the parking space while backing up? 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the steering position alignment guide fits in the parking space.</li> </ul> 	
The projection line is off.	-	<ul style="list-style-type: none"> <li>The position is automatically corrected after continuing to drive for a short amount of time.</li> </ul>	

## Parallel-parking using the parking guide lines

Vehicle position	Cause	solution	Reference page
<p>Too deep.</p> 	<p>Did the steering position alignment guide come off of the curbside line of the parking space while backing up?</p> 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the steering position alignment guide overlaps with the curbside line of the parking space.</li> </ul> 	<b>▶ Parallel Parking the Vehicle into a Parking Space Marked with Parking Lines.</b> P. 320
	<p>Did you fully turn the steering wheel while backing up?</p>	<ul style="list-style-type: none"> <li>Fully turn the steering wheel when steering.</li> </ul>	
<p>Too shallow.</p> 	<p>Did you turn the steering wheel before the steering position alignment guide overlaps with the curbside line of the parking space while backing up?</p> 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the steering position alignment guide overlaps with the curbside line of the parking space.</li> </ul> 	
<p>Too close to the vehicle in front.</p> 	<p>Did you turn the steering wheel when the initial positioning guide is outside of the parking space?</p> 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the corner of the parking space.</li> </ul> 	
<p>Too close to the vehicle behind.</p> 	<p>Was the initial positioning guide inside of the parking space?</p> 	<ul style="list-style-type: none"> <li>Stop the vehicle and turn the steering wheel when the initial positioning guide comes to the corner of the parking space.</li> </ul> 	
	<p>Did you fully turn the steering wheel while backing up?</p>	<ul style="list-style-type: none"> <li>Fully turn the steering wheel when steering.</li> </ul>	
<p>The projection line is off.</p>	-	<ul style="list-style-type: none"> <li>The position is automatically corrected after continuing to drive for a short amount of time.</li> </ul>	

## About camera view image

Condition	Cause	solution	Refer to:
Camera view images are hard to see.	<p>The images may not be displayed clearly when:</p> <ul style="list-style-type: none"> <li>• At night, in rainy condition, and a dark location</li> <li>• The camera lens has insects, moist, or debris stuck to the camera lens.</li> <li>• The camera lens is scratched.</li> <li>• The temperature of the camera is high.</li> <li>• Strong light such as the sun's light shines on the camera.*</li> <li>• When light shines on the camera in a dark location.</li> </ul> <p>* When strong light shines on the camera, halation which fogs around the light source or smearing which creates the streaks of the light may occur.</p>	<ul style="list-style-type: none"> <li>• When the camera view image is not clearly displayed due to weather conditions, etc, visually confirm the safety using mirrors.</li> </ul>	-
Camera view images are not clear.	If the camera lens is dirty, clear images are not displayed.	<ul style="list-style-type: none"> <li>• When the camera lens is dirty, wipe off the dirt, debris, and the like using water, mild detergent, or glass cleaner.</li> <li>• Never use any benzine, thinner, or polishing powder such as cleanser. It will cause damage to the lens.</li> </ul>	-
Camera position is shifted.	The camera body or its surrounding parts have been subject to some severe impact or pressure.	<ul style="list-style-type: none"> <li>• Do not have any severe impacts or pressures on the camera body or its surrounding parts.</li> <li>• In case of being subject to an impact, stop using the camera and contact a dealer.</li> </ul>	-

# Troubleshooting

<b>Troubleshooting</b> .....	336
Map, Voice, Entering Destinations.....	336
Traffic .....	338
Guidance, Routing .....	339
Update, Coverage, Map Errors .....	340
Display, Accessories .....	341
Miscellaneous Questions .....	341
Surround View Camera* .....	341
<b>Error Messages</b> .....	342
Navigation System .....	342
CD Player.....	343
Hard Disc Drive (HDD) Audio .....	344
iPod®/USB Flash Drive.....	345
Pandora® .....	346
Aha™ Radio .....	349
Surround View Camera* .....	349

## Map, Voice, Entering Destinations

Problem	Solution
The Startup Confirmation screen is displayed every time I start the car.	This is normal. The Startup Confirmation screen reminds you and your guest drivers to always operate the navigation system in a safe manner. The Startup Confirmation screen goes off after a certain period of time and the top screen of the last mode is displayed.
The navigation system reboots by itself (returns to the opening screen).	A reboot can be caused by extreme temperatures or shock from bumpy roads, and does not necessarily indicate a problem. If this happens frequently, please see a dealer.
How do I specify a destination when an entered city or street could not be found?	<ul style="list-style-type: none"> <li>Try entering the street first. Some cities are lumped in with a major metro area. In rural “unverified” areas or new subdivisions, streets may be missing or only partially numbered.</li> <li>Try selecting the destination directly from the map.</li> </ul> <b>Map Input P. 111</b>
Why do some letters become grayed out when I enter an address?	As you enter each letter in an address or a place/landmark, the navigation system looks in the database to see what letters are possible and grays out letters that do not apply.
How do I delete Personal Addresses, Previous Destinations, or the Home Address?	<ol style="list-style-type: none"> <li>Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Personal Info</b> to display the types of information.</li> <li>Select the type of address to delete.</li> <li>Select <b>Delete</b>.</li> </ol>
I cannot hear the navigation system voice.	<ol style="list-style-type: none"> <li>Press the <b>SETTINGS</b> button. Select <b>System Settings</b> and check that <b>Guidance Volume</b> is not set to 0.</li> <li>Select <b>Voice Reco</b> and set <b>Voice Prompt</b> to <b>On</b>.</li> </ol>
The voice control system is having difficulty recognizing my voice commands.	<ul style="list-style-type: none"> <li>Check that the vents are not blowing air onto the microphone on the ceiling, the vehicle is as quiet as possible, and you are using the correct command when speaking.</li> </ul> <b>Voice Recognition P. 25</b>
I cannot give voice commands.	<p>Make sure you selected <b>OK</b> at the Startup Confirmation screen.</p> <b>Start-up P. 22</b>

Problem	Solution
I cannot select an option using the Interface Dial.	To reduce potential driver distraction, certain onscreen functions and features are limited or inoperable while the vehicle is moving. Use voice commands or pull over to proceed.
The navigation system pronunciation of street names in the guidance command or destination address sounds strange.	The basic guidance phrases use a studio-recorded voice, but street names are pronounced using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times.
The screen is bright when I drive at night.	<ol style="list-style-type: none"> <li>1. Check that the nighttime dashboard brightness control is not set to maximum.</li> <li>2. Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map &gt; Color (Night)</b>.  ▶ <b>Switching Display Mode Manually</b> P. 75</li> </ol>
The screen is dark when I drive during the day.	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map &gt; Color (Day)</b> . ▶ <b>Switching Display Mode Manually</b> P. 75
How do I change or remove my PIN?	<ol style="list-style-type: none"> <li>1. Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Personal Info &gt; PIN Number &gt; Address Book PIN</b> or <b>Go Home PIN</b>.</li> <li>2. Enter your existing PIN. You then have the choice to change or remove the PIN.  ▶ <b>PIN Numbers</b> P. 49</li> </ol>
I have forgotten my PIN. How do I reset the PIN for Home or the PIN for personal addresses?	A dealer must reset the PIN for you.
Why is <b>Call</b> grayed out on the Calculate Route screen?	Your phone is not paired to <b>Bluetooth® HandsFreeLink®</b> or, if paired, your phone is in use. ▶ <b>Bluetooth® HandsFreeLink®</b> P. 226

Traffic

Problem	Solution
Traffic information is missing or is not displaying properly. What is wrong?	<ul style="list-style-type: none"> <li>Check that the traffic status indicator is available on the map screen.                             <ul style="list-style-type: none"> <li>➤ <b>Map Screen Legend</b> P. 9</li> </ul> </li> <li>Traffic information relies on a clear signal. If signal strength is low, traffic data may not be available.</li> <li>Check that the traffic icons are turned on.                             <ul style="list-style-type: none"> <li>➤ <b>Showing Icons on Map</b> P. 72</li> </ul> </li> <li>There may be a temporary technical problem in your metropolitan area. Call Acura Client Relations to see if there is an outage.                             <ul style="list-style-type: none"> <li>➤ <b>Acura Client Relations Contact Information</b> P. 356</li> </ul> </li> <li>If the situation persists, see your Acura dealer for assistance.</li> <li>Traffic information is available only in certain areas.</li> </ul>
The navigation system sometimes provides a detour route when I am driving a route on the freeway.	If <b>Traffic Rerouting</b> is set to <b>On</b> , the navigation system provides a detour route to your destination only if it can find a significantly faster route than the original one. <ul style="list-style-type: none"> <li>➤ <b>Traffic Rerouting</b> P. 59</li> </ul>
The navigation system routes me to an exit and an alternate freeway with unknown flow speeds or surface streets.	The navigation system predicts which route should be faster based on freeway congestion along your route. Use your own experience to determine whether the alternate route would be faster.
How can I ignore the detour route and return to the original route?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Routing</b> , and set <b>Traffic Rerouting</b> to <b>Off</b> . <ul style="list-style-type: none"> <li>➤ <b>Traffic Rerouting</b> P. 59</li> </ul>

## Guidance, Routing

Problem	Solution
The navigation system does not route me the same way I would go or the same way as other mapping systems.	The navigation system attempts to generate the optimal route. You can change the route preferences used when calculating a route. ➤ <b>Route Preference</b> P. 56
The navigation system wants to route me around potential traffic problems. How do I stop these pop-up messages?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Routing</b> , and set <b>Traffic Rerouting</b> to <b>Off</b> . ➤ <b>Traffic Rerouting</b> P. 59
The street I'm on is not shown on the map screen.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. ➤ <b>Map Coverage</b> P. 357
The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing.	<ul style="list-style-type: none"> <li>• Check that the GPS antenna (located in the dashboard) is not blocked. For best reception, remove items from the dashboard, such as radar detectors, cell phones, or loose articles.</li> <li>• Metallic tinting or other aftermarket devices can interfere with the GPS reception. Please consult a dealer.</li> </ul> ➤ <b>GPS</b> P. 354
The blue highlighted route and voice guidance stopped or turned into a blue/pink line before I got to my destination.	Your route has entered an unverified area. ➤ <b>Unverified Routing</b> P. 57
How do I stop the map from rotating as I drive along?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map &gt; View &gt; North-Up</b> .
The "time to destination" display sometimes increases even though I am getting closer to my destination.	If your speed reduces due to slower traffic, the navigation system updates the "time to destination" based on your actual road speed to give you a better estimate of arrival time.
The vehicle position icon on the map "lags" a short distance behind, especially when I arrive at an intersection.	This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal. ➤ <b>GPS</b> P. 354
The screen is showing white dots as I drive along.	These dots are called "breadcrumbs." These are displayed if <b>Display Tracking</b> is set to <b>On</b> . ➤ <b>Display Tracking</b> P. 84



Problem	Solution
How do I remove the white dots (“breadcrumbs”) from my screen?	Press the <b>SETTINGS</b> button. Select <b>Navi Settings &gt; Map</b> , set <b>Display Tracking</b> to <b>Off</b> or select <b>Delete Tracking</b> to remove the white dots from the map. ➡ <b>Display Tracking</b> P. 84
A road that I selected to avoid is being used when routing.	When you “draw” your area to avoid, make sure to select sections of roads that include at least one intersection. ➡ <b>Avoided Area</b> P. 61
My elevation (shown when I display the current position) seems to fluctuate even though my elevation has not changed.	This is normal. The elevation can vary $\pm 100$ feet due to GPS calculation errors. ➡ <b>GPS</b> P. 354
My elevation is missing on the “current position” screen.	The elevation is only displayed if the GPS antenna can receive signals from at least four satellites. Try moving the vehicle into an open area. The elevation is also not displayed if the calculated elevation is zero or below sea level.


## Update, Coverage, Map Errors

Problem	Solution
My city is not part of a fully verified detailed coverage area.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. ➡ <b>Map Coverage</b> P. 357
Does the navigation system work outside North America?	The navigation system contains maps for the 50 U.S. states, Canada, Puerto Rico, and Mexico. The navigation system will not work in other countries. ➡ <b>Map Coverage</b> P. 357
How do I report errors I find in the database?	Minor errors are bound to occur in a large database. If you encounter major errors, see ➡ <b>Reporting Errors</b> P. 356



## Display, Accessories

Problem	Solution
The display appears dim when starting the car in really cold weather.	This is normal. The display will become brighter after a few minutes.

## Miscellaneous Questions

Problem	Solution
My battery was disconnected or went dead, and the navigation system is asking for a code.	Set the power mode to ON, and press and hold the  (Power) button for two seconds. The system should reactivate. If you have installed an aftermarket system, contact a dealer.

## Surround View Camera\*

Problem	Solution
When I shift gears, the rear camera image display is delayed.	This is normal. When shifting into or out of Reverse, you may experience a delay while the screen image switches between the audio/information screen and the rear camera image.
The rear camera image is too dark or too bright. How do I adjust the brightness?	While the camera image is displayed, press the <b>SETTINGS</b> button and select <b>Camera Settings &gt; Display</b> , and select  or  to adjust the brightness. This adjustment does not affect the audio/information screen brightness settings.





\*: Not available on all models

## Navigation System

Error Message	Solution
The display temperature is too high. For protection, the system will shut off until the display cools down.	This message appears briefly when the display temperature is too high. The navigation system turns off until the display cools down. The system turns back on automatically when the display cools down.
System temp is low. System will shut down until it warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F (-30°C). The navigation system starts up automatically when the display warms up.
The navigation system temperature is too low. For protection, the system will shut off until it warms up.	
The navigation system atmospheric pressure is too low. For protection, the system will shut off until the pressure returns to safe levels.	The HDD is inoperable due to low atmospheric pressure. Move your vehicle to the place where the atmospheric pressure is high.
The navigation system temperature is too high. For protection, the system will shut off until it cools down.	The navigation system has difficulty reading the HDD when the temperature is high. The navigation system starts up automatically when the system cools down.
System temp is too high. System will shut down until it cools down.	
HDD access error. Please consult your dealer.	Writing of the data to the HDD failed with a cause other than low temperature, high temperature, and low atmospheric pressure. After a short wait, try to operate the system again. If this does not solve the problem, consult with the dealer.
HDD access error. The system will reset and attempt to correct the problem.	

# CD Player

If a disc error occurs, you may see the following error messages.

Error Message	Cause	Solution
Unplayable File	Track/file format not supported	<ul style="list-style-type: none"><li>• Current track/file will be skipped. The next supported track/file plays automatically.</li></ul>
Bad Disc Please Check Owner's Manual Push Eject	Mechanical error	<ul style="list-style-type: none"><li>• Press the  (eject) button and remove the disc, and check that the error message is cleared.</li><li>• Check that the disc is not damaged or deformed, and insert the disc again.</li></ul> <p> <b>Protecting CDs</b> P. 186</p> <ul style="list-style-type: none"><li>• If the error message reappears, press the  button, and pull out the disc.</li><li>• Insert a different disc.</li><li>• If the error message repeats, or the disc cannot be removed, contact a dealer.</li></ul> <p>Do not try to force the disc out of the player.</p>
Mecha Error		
Bad Disc Please Check Owner's Manual	Servo error	<ul style="list-style-type: none"><li>• If the error message reappears, press the  button, and pull out the disc.</li><li>• Insert a different disc.</li><li>• If the error message repeats, or the disc cannot be removed, contact a dealer.</li></ul> <p>Do not try to force the disc out of the player.</p>
Check Disc	Disc error	
Heat Error	High temperature	<ul style="list-style-type: none"><li>• Turn the audio system off and allow the player to cool down until the error message is cleared.</li></ul>

## Hard Disc Drive (HDD) Audio

If an error occurs while playing the Hard Disc Drive (HDD) Audio, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
HDD access error. Please consult your dealer.	—
The display system temperature is too high. For protection, the system will shut off until the display cools down.	Turn the audio system off and allow the player to cool down until the error message is cleared.
The navigation system temperature is too low. For protection, the system will shut off until it warms up.	The navigation system has difficulty reading the HDD when the temperature is below approximately -22°F (-30°C). The navigation system starts up automatically when the display warms up.
Unplayable File	Appears when a file format not supported. Current track will be skipped. The next supported track plays automatically.

# iPod®/USB Flash Drive

If an error occurs while playing an iPod® or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact a dealer.

Error Message	Solution
USB Error	Appears when there is a problem with the audio system. Check if the device is compatible with the audio system.
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
Unsupported Version	Appears when an unsupported iPod® is connected. If it appears when a supported iPod® is connected, update the iPod® software to the newer version.
Connect Retry	Appears when the system does not acknowledge the iPod®. Reconnect the iPod®.
Unplayable File	Appears when the files in the USB flash drive are DRM or an unsupported format. This error message appears for about 3 seconds, then plays the next song.
No Data	<div>iPod®</div> Appears when the iPod® is empty. <div>USB flash drive</div> Appears when the USB flash drive is empty or there are no MP3, WMA, or AAC files in the USB flash drive. <div>iPod® and USB flash drive</div> Check that compatible files are stored on the device.
Unsupported	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

## Pandora®

If an error occurs while playing Pandora®, you may see the following error messages.  
If you cannot clear the error message, contact a dealer.

Error Message	Cause	Solution
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected.	Disconnect the device. Then turn the audio system off, and turn it again. Do not reconnect the device that caused the error.
Audio/Information Screen There is no station list in the device. Please add the station list to your device. On Demand Multi-Use Display™ No stations have been created. Please create a station on the device.	Appears when there is no station list on the device.	Use the device to create a station.
Music licenses force us to limit the number of tracks you may skip each hour.	Appears when you try to skip a song or select Dislike over the predetermined number of times in an hour.	Try again later.
Unable to save rating. Unable to save bookmark.	Appears when the commanded operation is failed.	Try again later.
No data	Appears when no data is available with Pandora® activated.	Reboot the app and reconnect the device.
Unsupported PANDORA App version is not supported.	Appears when Pandora® version is not supported.	Update Pandora® to the latest version.
PANDORA system maintenance	Appears when the Pandora® server is in maintenance.	Try again later.

Error Message	Cause	Solution
Cannot connect to PANDORA. When stopped, check your mobile device.	The Pandora® app failed to start because of the following device errors:	<ul style="list-style-type: none"> <li>• Turn the phone screen on, and make sure it is unlocked.</li> <li>• The Pandora® version is not supported. Update to the latest version.</li> </ul>
When not driving, please see mobile device.	<ul style="list-style-type: none"> <li>• The display on your smartphone is turned off.</li> <li>• Your smartphone is locked.</li> <li>• The home screen or the app screen (music screen) is not displayed on your smartphone.</li> <li>• The track is not played on your smartphone even after 30 seconds have passed.</li> <li>• The Pandora® app is not installed in your device, or the Pandora® version is not supported.</li> </ul>	
	The Pandora® app in your smartphone is not compatible with the app launcher system.	Download the most recent version of the Pandora® app.
	The required app is not installed.	Download the HondaLink app from <a href="http://www.hondalink.com">www.hondalink.com</a> .
The maximum number of stations that can be created is 100. To create more, please delete one or more previously created stations.	Appears when the number of created stations reaches the limitation.	Delete the unneeded stations from the Station List.
Unable to create new station. Please try again.	Appears when you try to create a new station.	Try again later.



Error Message	Cause	Solution
Unable to play PANDORA. Please try again later.	Appears when you try to play PANDORA.	Try again later.
Unable to play PANDORA. Music licensing restricts play in this area.		Try again later.
Unable to play PANDORA. When stopped, log-in to PANDORA.		Log in to the PANDORA sever.
This PANDORA station is currently not available. Please select another station.	Appears when the station you selected is not currently available.	Select another station.

# Aha™ Radio

If an error occurs while playing Aha™ Radio, you may see the following error messages.  
If you cannot clear the error message, contact a dealer.

Error Message	Solution
Cannot connect to AcuraLink. When stopped, check your mobile device.	Appears when the Aha™ app is not activated. Check your device.
Incompatible USB Device Please Check Owner's Manual	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.

# Surround View Camera\*

If an error message is displayed, contact a dealer.

\*: Not available on all models



# Reference Information

<b>System Initialization</b> .....	352	Visiting a Dealer .....	356
Entering the Security Code .....	352	Map Coverage .....	357
Acquiring GPS Information .....	352	Obtaining a Navigation Update .....	357
Startup Confirmation Screen .....	353	Traffic Information .....	358
Map Matching .....	353	Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico .....	358
<b>System Limitations</b> .....	354	<b>Legal Information</b> .....	359
GPS .....	354	Copyrights .....	359
Address Calculation .....	354	User Agreements .....	359
Database .....	354	As required by the FCC .....	365
<b>Client Assistance</b> .....	356		
Resolving Problems .....	356		
Reporting Errors .....	356		
Acura Client Relations Contact Information .....	356		

The navigation system must be initialized if power to the navigation system is interrupted for any reason (e.g., the battery was disconnected).


## Entering the Security Code

In most cases, you do not need to enter a security code. Follow the steps to reactivate the system.

### Enter code

To enter the security code automatically, push and hold the audio power button for 2 seconds. If this does not work, manually enter the security code using the touch panel below.

1. Set the power mode to ON, and turn on the audio system.

2. Press and hold the  (Power) button for more than two seconds.

- The system is reactivated when the system's control unit recognizes that the system is in your vehicle. If the control unit fails to recognize, you must go to a dealer and have the system checked.

## Acquiring GPS Information

Depending on the length of time the power was interrupted, your system may require GPS initialization.

The navigation system lost power and is acquiring its location from the GPS satellites. This usually takes less than 10 minutes.

- \* Start the engine.
- \* Park the vehicle in an open area away from trees, power lines, and tall buildings.
- \* Remove loose articles, mobile phones, or electrical accessories located near the GPS antenna.
- \* If this screen is displayed repeatedly when starting the vehicle, see your dealer.

If initialization is not necessary, the system proceeds directly to the Startup Confirmation screen.

If the system fails to locate a sufficient number of satellites to locate your position within 10 minutes, the following screen is displayed.


Something is interfering with the system's ability to acquire its location. Check the following:


- \* The vehicle must be in an open area with a clear view of the sky.
- \* Remove sources of GPS interference like metallic window tint above antenna, or electrical items near antenna (see owner's manual for details).
- \* Check GPS antenna cable connection.
- \* Restart the engine and repeat the GPS acquire procedure. If the problem persists, see your dealer.

If you are experiencing GPS reception problems:

➤ **GPS** P. 354

## Startup Confirmation Screen

The Startup Confirmation screen is displayed when initialization has successfully completed. It is displayed every time you start your vehicle. Press  to select **OK** to continue.

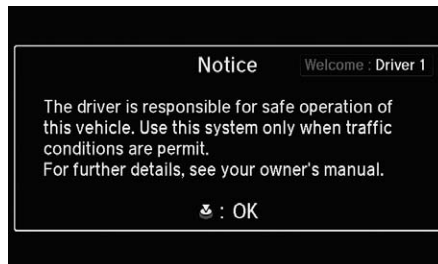

## Map Matching

Map matching is the process of using the acquired GPS information to locate your position on the map screen. If you are on a mapped road, the name of the road is displayed along the bottom of the map screen when map matching is completed. Do not enter a destination until the road name is displayed.

The system may initially show your location on a different street (e.g., in urban areas where streets are close together), may show an incorrect elevation, or may delay the display of the vehicle position icon at intersections. This is normal; the system will correct itself while you drive.

## GPS

The signals received from the GPS satellites are extremely weak (less than a millionth of the strength of a local FM station) and require an unobstructed view of the sky. The GPS antenna is located in the dashboard. The signal reception can easily be interrupted or interfered with by the following:

- Metallic window tint on the front or side windows
- Cell phones, PDAs, or other electronic devices docked in a cradle or lying loose on the dashboard
- Remote starters or “hidden” vehicle tracking systems mounted near the navigation unit
- Audio electronic devices mounted near the navigation unit
- Trees, tall buildings, freeway overpasses, tunnels, or overhead electrical power wires

The GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into the GPS for which the navigation system must constantly compensate. This

can cause occasional positioning errors of up to several hundred feet.

## Address Calculation

The destination icon shows only the approximate location of a destination address. This occurs if the number of possible addresses is different from the number of actual addresses on a block. For example, the address 1425 on a 1400 block with 100 possible addresses (because it is followed by the 1500 block) will be shown a quarter of the way down the block by the system. If there are only 25 actual addresses on the block, the actual location of address 1425 would be at the end of the block.

## Database

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your database may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

For example, some places/landmarks may be missing when you search the database because the name was misspelled, the place was improperly categorized, or a place/landmark is not yet in the database. This is also true for police stations, hospitals, and other public institutions. Do not rely on the navigation system if you need law enforcement or hospital services. Always check with local information sources.

In addition, the map database contains verified and unverified areas. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. A message will warn you if your route includes unverified streets. Exercise additional caution when driving in unverified areas.

The database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits
- Traffic facilities safety
- Special events

- Pavement characteristics or conditions

Every effort has been made to verify that the database is accurate. The number of inaccuracies you experience increases the longer you go without obtaining an updated map database.

#### 🗺️ **Obtaining a Navigation Update** P. 357

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.



## Resolving Problems

If you run into a specific issue that you cannot resolve, consult the following help resources:

- For navigation system issues:  
➤ **Troubleshooting** P. 336  
There are also FAQs available online at [www.acuranavi.com](http://www.acuranavi.com).
- For traffic-related issues:  
➤ **Traffic** P. 338
- For reporting issues with the database or places/landmarks:  
➤ **Reporting Errors** P. 356
- Call Acura Client Relations.  
➤ **Acura Client Relations Contact Information** P. 356

## Reporting Errors

You can help to improve database accuracy by reporting any errors you encounter.

- Report errors in freeways and main “verified” roads shown in black on the map at <http://mapreporter.navteq.com/dur-web-external/>.
- Please do not report errors in purple “unverified” roads. Maps for these areas are provided for reference only.  
➤ **Unverified Routing** P. 57
- Please do not report errors in places/landmarks, such as changes in business names. Information about points of interest are constantly being updated. An updated database is available for purchase, usually in the fall of each year.  
➤ **Obtaining a Navigation Update** P. 357
- For vehicle position icon errors, screen error messages, or other GPS-related errors:  
➤ **Troubleshooting** P. 336  
➤ **System Limitations** P. 354

## Acura Client Relations Contact Information

Acura Navi

American Honda Motor Co., Inc.

Acura Client Relations

Mail Stop 500-2N-7E

1919 Torrance Blvd.

Torrance, CA 90501-2746

Tel: (800) 382-2238

## Visiting a Dealer

If you have a question that you cannot resolve using the available help resources, you can consult a dealer. Please identify the specific issue (e.g., error occurs when you enter a specific address, when driving on a certain road, or just when it’s cold) so that the service technician can refer the issue to the factory so that a solution can be found. Be patient, the service technician may be unfamiliar with your specific issue.

## Map Coverage

The navigation system provides map coverage for the United States, Canada, Puerto Rico, and Mexico. The map coverage consists of accurately mapped (verified) metropolitan areas and a less accurate (unverified) rural database. Note that unverified areas are constantly being reviewed and converted to verified areas each year.



Map coverage update information is available from Acura Client Relations or online at [www.acuranavi.com](http://www.acuranavi.com).

To find navigation system update information:

1. Visit [www.acuranavi.com](http://www.acuranavi.com).
2. Enter your vehicle model and model year.
3. Click Map Coverage to display a list of verified coverage areas on the most recent update.
4. Click Map Coverage Details to display a PDF document with a full listing of all coverage areas.

► Adobe® Reader® is required for viewing and printing the Portable Document Format (PDF) documents. To download the latest version of Adobe Reader, visit <http://get.adobe.com/reader/>.

## Obtaining a Navigation Update

Acura is continually expanding the scope of the navigation system. Navigation system software upgrades may be made available periodically, usually in the fall of each year.

To purchase an update:

1. Obtain your vehicle's VIN number and the System/Device Information.  
**System Device Information P. 306**
2. Call the Acura Navigation Disc Fulfillment Center at (888) 549-3798, or order online at [www.acuranavi.com](http://www.acuranavi.com).

An update is not available from a dealer. However, the dealer may assist you in obtaining one for you out of courtesy. There is no program for free updates.

## Traffic Information

- Continuously updated traffic information is available in certain areas across the lower 48 U.S. states, Hawaii, and some cities in Canada.
- Visit [automobiles.honda.com/traffic](http://automobiles.honda.com/traffic) for a complete listing of coverage areas and other information.

## Operation in Alaska, Hawaii, Canada, Puerto Rico, and Mexico

### ■ Map Coverage

All roads displayed on the map screens are verified roads. Information in this manual relating to “unverified” roads or areas is not applicable.

### ■ Address and Place Entry Screens

Entering a destination address or place/landmark on another island may result in a screen caution message. This is because there are no ferry routes between islands in the database.

### ■ Puerto Rico and Mexico

If **Street Name Guidance** is set to **On**, the street names will not be read out by voice guidance. This may change in a future data update.

## Copyrights

- Infogroup-Data: Certain business data provided by Infogroup © 2011, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2011. All rights reserved.
- Building foot print: © ZENRIN CO., LTD. 2011. All rights reserved.
- Junction View Data: © ZENRIN USA, INC. 2011. All rights reserved.
- Brand icon: The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

## User Agreements

### ■ Navigation System User Agreement

In using this HDD “Satellite Linked Navigation System” (the “HDD”), which includes HONDA MOTOR CO., LTD. software, ALPINE ELECTRONICS, INC. software, and NAVTEQ database contents (hereinafter referred to as “Licensors”), you are bound by the terms and conditions set forth below. By using your copy of the HDD, you have expressed your Agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this Agreement, please return the HDD to your dealer.

- The HDD may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The HDD may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.

- The HDD may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The HDD may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The HDD is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The HDD is not to be used for commercial purposes.
- The Licensors do not guarantee to the client that the functions included in the HDD meet the specific objectives of the user.
- Licensor shall not be responsible for any damages caused by the use of the HDD to the actual user or to any third party.
- The warranty on the HDD shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the contents of the HDD.
- The right to use the HDD shall expire either when the user destroys the HDD or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the HDD or software.

- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The logos of oil companies, hotels, convenience stores, and other businesses are displayed for your information and convenience, and in no way imply any sponsorship, approval or endorsement of these companies, or their products. The logos are trademarks of their respective owners.
- The marks of companies displayed by this product to indicate business locations are the marks of their respective owners.
- The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the HDD or software.

Use, duplication, or disclosure of this HDD by or on behalf of the United States government is subject to "Restricted Rights" as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Alpine Electronics, Inc., 20-1 Yoshima Kogyodanchi, Iwaki, Fukushima 970-1192 JAPAN., NAVTEQ Corporation, 425 W Randolph St. Chicago, IL 60606, USA.

### ■ Navigation System END USER LICENSE AGREEMENT

You have acquired a device ("DEVICE") that includes software licensed by Alpine Electronics, Inc. (collectively "ALPINE") from an affiliate of Microsoft Corporation (collectively "MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE INSTEAD, PROMPTLY CONTACT ALPINE FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

- GRANT OF SOFTWARE LICENSE  
This EULA grants you the following license: You may use the SOFTWARE only on the DEVICE.
- NOT FAULT TOLERANT  
THE SOFTWARE IS NOT FAULT TOLERANT. ALPINE HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON ALPINE TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.
- NO WARRANTIES FOR THE SOFTWARE  
THE SOFTWARE is provided "AS IS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND

EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR SOFTWARE THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.

- NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, MS, MICROSOFT CORPORATION AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS, MICROSOFT CORPORATION AND/OR THEIR AFFILIATES BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S.\$250.00).

#### • SPEECH RECOGNITION

If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an inherently statistical process and that recognition errors are inherent in the process. Neither ALPINE nor its suppliers shall be liable for any damages arising out of errors in the speech recognition process.

#### • LIMITATIONS ON REVERSE ENGINEERING, DECOMPILE, AND DISASSEMBLY

You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.

#### • ADDITIONAL SOFTWARE/SERVICES

The SOFTWARE may permit ALPINE, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-base service components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

▶ If ALPINE provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

▶ If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be licensor of the Supplemental Component(s).

▶ ALPINE, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

#### • RECOVERY MEDIA

If SOFTWARE is provided by ALPINE on separate media and labeled "Recovery Media" you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.

- **UPGRADES**

If the SOFTWARE is provided by ALPINE separate from the DEVICE on separate media or via web download or other means, and is labeled "For Upgrade Purposes Only" you may install one (1) copy of such SOFTWARE onto the DEVICE as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

- **TERMINATION**

Without prejudice to any other rights, ALPINE or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

- **INTELLECTUAL PROPERTY RIGHTS**

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets," incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by MS, Microsoft Corporation, their affiliates or

suppliers. The SOFTWARE is licensed, not sold.

You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

- **TRADEMARKS**

This EULA does not grant you any rights in connection with any trademarks or service marks of ALPINE MS, Microsoft Corporation, their affiliates or suppliers.

- **PRODUCT SUPPORT**

Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to ALPINE support number provided in the documentation for the DEVICE.

Should you have any questions concerning this EULA, or if you desire to contact ALPINE for any other reason, please refer to the address provided in the documentation for the DEVICE.

- **SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS**

You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.

- **EXPORT RESTRICTIONS**

You acknowledge that SOFTWARE is of US-origin. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions

issued by U.S. and other governments. For additional information on exporting the SOFTWARE, see <http://www.microsoft.com/exporting/>.

## ■ Gracenote Music Recognition Service (CDDB)



Music recognition technology and related data are provided by Gracenote®. Gracenote is the industry standard in music recognition technology and related content delivery.

For more information, visit [www.gracenote.com](http://www.gracenote.com).

When music is recorded to the HDD from a CD, information such as the recording artist and track name are retrieved from the Gracenote Database and displayed (when available).

Gracenote may not contain information for all albums.

Gracenote is an internet-based music recognition service that allows artist, album, and track information from CDs to display on the HDD.

Gracenote users are allowed 4 free updates a year. More information about Gracenote, its features, and downloads are

available at [www.honda.com](http://www.honda.com) (in U.S.) or [www.honda.ca](http://www.honda.ca) (in Canada).

CD and music-related data from Gracenote, Inc., copyright © 2000 to present Gracenote. Gracenote Software, copyright © 2000 to present Gracenote.

One or more patents owned by Gracenote apply to this product and service. See the Gracenote website for a non-exhaustive list of applicable Gracenote patents. Gracenote, CDDB, MusicID, MediaVOCS, the Gracenote logo and logotype, and the "Powered by Gracenote" logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.

## ■ Gracenote® END USER LICENSE AGREEMENT

This application or device contains software from Gracenote, Inc. of Emeryville, California ("Gracenote"). The software from Gracenote (the "Gracenote Software") enables this application to perform disc and/or file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers or embedded databases



(collectively, "Gracenote Servers") and to perform other functions. You may use Gracenote Data only by means of the intended End-User functions or this application or device.

You agree that you will use Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal non-commercial use only.

You agree not to assign, copy, transfer, or transmit the Gracenote Software or any Gracenote Data to any third party.

YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive license to use the Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your license terminates, you agree to cease any and all use of the Gracenote Data, the Gracenote Software, and Gracenote Servers.

Gracenote reserves all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers, including all ownership

rights. Under no circumstances will Gracenote become liable for any payment to you for any information that you provide. You agree that Gracenote, Inc. may enforce its rights under this Agreement against you directly in its own name.

The Gracenote service uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow the Gracenote service to count queries without knowing anything about who you are. For more information, see the web page for the Gracenote Privacy Policy for the Gracenote service.

The Gracenote Software and each item of Gracenote Data are licensed to you "AS IS."

Gracenote makes no representations or warranties, express or implied, regarding the accuracy of any Gracenote Data from in the Gracenote Servers. Gracenote reserves the right to delete data from the Gracenote Servers or to change data categories for any cause that Gracenote deems sufficient. No warranty is made that the Gracenote Software or Gracenote Servers are error-free or that functioning of

Gracenote Software or Gracenote Servers will be uninterrupted.

Gracenote is not obligated to provide you with new enhanced or additional data types or categories that Gracenote may provide in the future and is free to discontinue its services at any time.

GRACENOTE DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. GRACENOTE DOES NOT WARRANT THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES.

copyright © 2000 to present Gracenote

## As required by the FCC

1. This device complies with Part 15 of the FCC Rules and Canadian RSS-210/ RSSGen. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
2. The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.
3. This product emits radio frequency energy, but the radiated output power of this device is far below the FCC and IC radio frequency exposure limits. This equipment complies with FCC and IC RF radiation exposure limits set forth for an uncontrolled environment. Nevertheless, the device should be used in such a manner that the potential for human contact with the antenna during normal operation is minimized.




 


# Voice Commands


<b>Voice Commands</b> .....	368
Voice Portal Screen .....	368
Navigation Commands .....	369
Useful Commands .....	370
Phone Commands .....	370
Audio Commands .....	371
On Screen Commands .....	371
Music Search Commands .....	371
General Commands .....	372
Climate Control Commands .....	372
List of Categories .....	372

## Voice Portal Screen

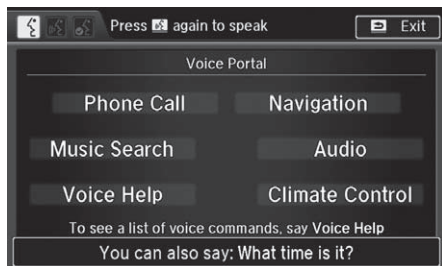

When the  (Talk) button is pressed, available voice commands appear on the screen.

For a complete list of commands, say “Voice Help” after the beep or select **Voice Help**.

You can see the list of commands in **Voice Info** on the Info menu screen. Select **Info**, then select .

### Phone Call

This can be only used when the phone is connected. When the system recognizes the *Phone call* command, the screen will change the dedicated screen for the voice recognition of the phone.

*Call <Your Contact Name>*

*Call <Phone Number>*

*Dial by Number*

*Redial*

*Call History*

### Music Search

This can be only used when the iPod or HDD device is connected.

### Voice Help

You can see a list of the available commands on the screen.

*Navigation Commands*

*Useful Commands*

*Phone Commands*

*Audio Commands*

*On Screen Commands*

*Music Search Commands*

*General Commands*

*Climate Control Commands*

*All Commands*

*Voice Settings*

*Getting Started*

### Navigation

The screen changes the navigation screen.

*Address (English only)\*<sup>1</sup>*

*Place Name (English only)\*<sup>1</sup>*

*Find Nearest POI Category*

*Go Home*

*Previous Destination*

*Address Book*

*Place Phone Number*

## ■ Audio

When the system recognizes the *Audio* command, the screen will change the dedicated screen for the voice recognition of the audio.

*Audio on*\*<sup>1</sup>

*Audio off*\*<sup>1</sup>

*FM*

*AM*

*SXM*

*Disc*

*HDD*

*USB*

*iPod*

*Bluetooth® Audio*

*Pandora*

*Aha*

*AUX*

➔ **Audio Commands** P. 371

## ■ Climate Control

The screen changes the climate control screen.

➔ **Climate Control Commands** P. 372

## Navigation Commands

The system accepts these commands on the dedicated screen for the voice recognition of the navigation.

### ■ General Commands

*What time is it?*

*What is today's date?*

*Voice help* (displays commands for current screen)

### ■ Find Place Commands

*Find nearest* (specify place):

*Fuel and auto*

*Acura dealers*

*Honda dealers*

*Gas station*

*Hydrogen station*

*Auto parts & electronics*

*Auto repair & maintenance*

*Car wash & detailing*

*Motorcycle dealers*

*Other car dealers*

*Roadside assistance*

*ATM and bank*

*ATM*

*Bank*

*Check cashing*

*Currency exchange*

*Community*

*Business*

*City hall*

*Civic center*

*Convention center*

*Court house*

*Higher education*

*Library*

*Post office*

*School*

*Emergency room*

*Hospital*

*Police station*

*Veterinarian*

*Lodging*

*Bed & breakfast*

*Hotel*

*Resort*

*Recreation*

*Amusement park*

*Golf course*

*Historical monument*

*Marina*

*Movie theater*

*Museum*

*Park*

\*1: These commands toggle the function on and off, so the command may not match your intended action.

*Performing arts*  
*Sports complex*  
*Tourist attraction*  
*Restaurant*  
*American restaurant*  
*Californian restaurant*  
*Chinese restaurant*  
*Coffee shop*  
*Continental restaurant*  
*Fast food*  
*French restaurant*  
*German restaurant*  
*Greek restaurant*  
*Indian restaurant*  
*Italian restaurant*  
*Japanese restaurant*  
*Korean restaurant*  
*Mexican restaurant*  
*Pizza*  
*Seafood restaurant*  
*Thai restaurant*  
*Vegetarian restaurant*  
*Vietnamese restaurant*  
*Other restaurant*  
*Shopping*  
*Accessory store*  
*Book store*  
*Clothing store*

*Grocery store*  
*Home improvement store*  
*Mall*  
*Office supply store*  
*Pharmacy*  
*Pet food store*  
*Sewing store*  
*Shoe store*  
*Sporting goods store*  
*Toy store*  
*Travel center*  
*Airport*  
*Automobile club*  
*Bus station*  
*Camping*  
*Commuter rail station*  
*Ferry terminal*  
*Named place*  
*Park & ride*  
*Parking garage*  
*Parking lot*  
*Rental car agency*  
*Rest area*  
*Ski area*  
*Tourist information*  
*Train station*  
*Travel agency*  
*Truck stop*

## Useful Commands

The system accepts these commands on the voice portal top screen.

*Call <Your Contact Name>*

*Call <Phone Number>*

*What time is it?*

*What is today's date?*

## Phone Commands

The system accepts these commands on the dedicated screen for the voice recognition of the phone.

*Call <Your Contact Name>*

*Call <Phone Number>*

*Call by number*

*Call by name*

### NOTE:

Contacts that are imported from your phone to the vehicle are all made available by voice.

## Audio Commands

The system accepts these commands on the dedicated screen for the voice recognition of the audio.

### Radio FM Commands

*Radio tune to <87.7-107.9> FM*  
*Radio FM preset <1-12>*

### Radio AM Commands

*Radio tune to <530-1710> AM*  
*Radio AM preset <1-6>*

### Radio SXM Commands

*SXM channel <1-999>*  
*Radio SXM preset <1-12>*

### Disc Commands

*Disc play*  
*Disc play track <1-30>*

### HDD Commands

*HDD play*  
*HDD play track <1-30>*

### iPod Commands

*iPod play*  
*iPod play track <1-30>*

### USB Commands

*USB play*  
*USB play track <1-30>*

### Bluetooth® Audio Commands

*Bluetooth® audio play*

#### NOTE:

Bluetooth® Audio commands may not work on some phones or Bluetooth® Audio devices.

### Pandora Commands

*Pandora play*

### Aha Commands

*Aha radio play*

### AUX Commands

*AUX play*

## On Screen Commands

The system accepts the voice command operation of the voice recognition screen.

## Music Search Commands

The system accepts these commands on the **Music Search** screen.

### Using Song By Voice

Song By Voice™ is a feature that allows you to select music from your HDD or iPod device using your voice. To activate this mode, you must push the talk switch and say: "Music search".

### Song By Voice Commands

*Music search*  
*What am I listening to?*  
*Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*



## ■ Play Commands

*Play artist <Name>*  
*Play album <Name>*  
*Play track/song <Name>*  
*Play composer <Name>*  
*Play genre/category <Name>*  
*Play playlist <Name>*

## ■ List Commands

*List artist <Name>*  
*List album <Name>*  
*List composer <Name>*  
*List genre/category <Name>*  
*List playlist <Name>*

## General Commands

*What time is it?*  
*What is today's date?*

## Climate Control Commands

The system accepts these commands on the **Climate control** screen.



 
*Climate control automatic*  
*Climate control on\**  
*Climate control off*  
*Air conditioner on\**  
*Air conditioner off*  
*Defrost on\**  
*Defrost off*  
*Climate control vent*  
*Climate control dash and floor*  
*Climate control floor vents*  
*Climate control floor and defrost*  
*Fan speed up*  
*Fan speed down*  
*Fan speed <1-7>*  
*Temperature up*  
*Temperature down*  
*Temperature max heat*  
*Temperature max cool*  
*Temperature <57-87> Degrees*

## List of Categories

The system accepts these commands (POI category name) on the dedicated screen.

Fuel/Auto  
 ATM/Bank  
 Community  
 Emergency  
 Lodging  
 Recreation  
 Restaurant  
 Shopping  
 Travel

## Symbols

 (Display Mode) Button .....	75
 (Hang-Up/Back) Button .....	6, 24
 (Talk) Button .....	6, 24

## Numerics

3D Angle Adjustment .....	78
---------------------------	----

## A

Acura Client Relations .....	356
AcuraLink® .....	272
Address .....	
Editing Address Book .....	43
Editing Avoid Area .....	62
Setting Destination .....	92
Address Book .....	
Editing Address Book .....	41
Setting Destination .....	98
Address Book PIN .....	49
Aha™ Radio .....	349
ATM/Bank (Place Category) .....	100
Audio .....	
On Demand Multi-Use Display™ .....	5
Remote Control .....	151
Settings .....	152
Voice Commands List .....	371
Audio Menu .....	
Bluetooth® Audio .....	222
Disc .....	180
FM/AM Radio .....	156
HDD .....	187
Internet Radio .....	211

iPod® .....	199
USB Flash drive .....	216
SiriusXM® Radio .....	162
Audio System .....	
Auxiliary Input Jack .....	147
Security Code .....	148
Theft Protection .....	148
USB Ports .....	145
Auxiliary Input Jack .....	147
Avoid Streets .....	137
Avoided Area .....	61

## B

Black Level .....	28
Bluetooth® Audio .....	
Playing .....	222
Voice Commands List .....	371
Bluetooth® HandsFreeLink® .....	
Editing User Name/PIN .....	246, 247
Importing Phonebook Data .....	234
Making a Call .....	251
Pairing a Phone .....	228
Phone Settings .....	246
Receiving a Call .....	256
Setting Up Speed Dialing .....	235
Brightness .....	28

## C

Calendar .....	305
Call .....	
Calculate Route Screen .....	114, 141
Call History .....	254
Camera locations and images .....	311

Cancel Route .....	130
Category .....	
Editing Address Book .....	43
Setting Destination .....	100
Category History .....	
Deleting .....	51
Change State .....	93
City .....	94
City Vicinity .....	
Setting Destination .....	101
Clock Adjustment .....	30
Community (Place Category) .....	100
Continue Trip .....	141
Contrast .....	28
Coordinate .....	113
Correct Vehicle Position .....	85
Current Location .....	79
Current Position .....	
Editing Address Book .....	43
Setting Destination .....	111
Customized Surround View Camera System .....	330

## D

Day Mode .....	
Day .....	74
Night .....	74
Switching Display Mode .....	75
Delete Tracking .....	84
Destination List .....	
Adding Waypoint .....	131
Editing .....	135
Detour .....	137
Dial .....	253

Directions .....	125
Disc	
Playing .....	180
Voice Commands List .....	371
Display Tracking .....	84
Driving .....	119
Setting .....	84
Displaying the Surround View Camera screen .....	312
Download POI	
Editing Category .....	53
Importing Category .....	52
Setting Destination .....	108
<b>E</b>	
Edit Go Home .....	48
Edit Home Entry .....	114
Edit POI Search Radius Along Route .....	60
Edit/Delete Entry .....	114
Emergency (Place Category) .....	100
ENTER Button .....	7
Error Messages .....	342
Aha™ Radio .....	349
CD Player .....	343
Hard Disc Drive (HDD) Audio .....	344
iPod®/USB Flash Drive .....	345
Navigation System .....	342
Pandora® .....	346
Estimated Time .....	69
Exit Info .....	126

## F

FM/AM Radio	
Playing .....	156
Voice Commands List .....	371
Folder List	
Disc .....	184
USB Flash Drive .....	221
Fuel/Auto (Place Category) .....	100

## G

Go Home .....	11
Go Home PIN .....	49
Gracenote Info. Update .....	197
Guidance (Navi Settings) .....	63
Guidance Mode .....	64
Guidance Point .....	68

## H

HandsFreeLink® (HFL)	
HFL Menus .....	266
Using HFL .....	226
HDD	
Playing .....	187
Voice Commands List .....	371
Hide Traffic Flow .....	124
Home Address .....	11, 48
House Number .....	97

## I

Import Phonebook Data .....	234
Interface Dial .....	7

Intersection .....	110
iPod®	
Connecting, Disconnecting .....	199, 216
Playing .....	199
Voice Commands List .....	371

## L

Language Settings .....	36
Local Search .....	102
Lodging (Place Category) .....	100

## M

Map (Navi Settings) .....	70
Map Data Update	
Checking Version .....	306
Obtaining Update Data .....	357
Map Input	
Editing Avoid Area .....	62
Setting Destination .....	111
Map Legend .....	9, 80
Map Menu .....	122
Map Screen .....	116
Changing View .....	77
Icon .....	9, 82
Scale .....	81
MENU Button	
Changing Route .....	129
Entering a Destination .....	90
Multi-View Rear Camera .....	308
Music Search	
HDD .....	192
iPod® .....	205
Phonetic Modification .....	208

Song By Voice ..... 207

## N

NAV Button ..... 10, 64

Navigation Menu (Destination) ..... 90

Navigation Menu (Route Option) ..... 129

Night Mode

Switching Display Mode ..... 75

Non-map screens ..... 67

## O

On Demand Multi-Use Display™

Basic Operation ..... 5

Customizing Audio Source ..... 150

Screen Settings ..... 87

Shortcuts ..... 238, 46, 149

Sound ..... 154

## P

Pandora® ..... 212

Personal Info ..... 40

Phone Setup ..... 246

Phonebook

Importing ..... 234

Making a Call ..... 252

PIN Numbers ..... 49

Place Category

Editing Address Book ..... 43

Setting Destination ..... 100

Place Name

Editing Address Book ..... 43

Setting Destination ..... 104

Place Phone Number

Editing Address Book ..... 43

Setting Destination ..... 107

Previous Destinations

Deleting ..... 50

Editing Address Book ..... 43

Setting Destination ..... 99

## R

Radio

FM/AM ..... 156

SiriusXM® ..... 162

Random

Disc ..... 182

HDD ..... 190

USB Flash Drive ..... 219

Rear Entertainment System ..... 282

Auxiliary Console Panel ..... 282

Front Control Panel Operation ..... 296

HDMI® Input Jack ..... 283

Rear Control Panel Operation ..... 285

Wireless Headphones ..... 300

Rearview Camera ..... 308, 310

Recreation (Place Category) ..... 100

Repeat

Disc ..... 182

HDD ..... 190

iPod® ..... 203

USB Flash Drive ..... 219

Restaurant (Place Category) ..... 100

Route Option ..... 129

Route Preference ..... 56

Routing ..... 55

## S

Scan

Disc ..... 182

FM/AM Radio ..... 159, 161

HDD ..... 190

SiriusXM® Radio ..... 176

USB Flash Drive ..... 219

Scenic Road Information ..... 306

Scenic Route ..... 109

Schedule

Calendar ..... 305

Search Along ..... 132

Search Around ..... 132

Search by Name ..... 101

Search Nearby ..... 138

Security PIN Code ..... 352

Shopping (Place Category) ..... 100

Show Icon on Map ..... 72

Siri Eyes Free ..... 27

SiriusXM® Radio

Playing ..... 162

Voice Commands List ..... 371

Song By Voice™

Searching Music ..... 207

Setting ..... 206

Voice Commands List ..... 371

Sort by Distance to Travel ..... 101

Sound Setup ..... 154, 155

Speed Dial

Making a Call ..... 255

Registering ..... 235

Straight Line Guide ..... 78

Street ..... 95

Street Name Guidance ..... 66

Surround View Camera.....	310
System/Device Information.....	306

## T

Traffic Incidents.....	127
Traffic List.....	127
Traffic Rerouting.....	127
Auto Reroute.....	127
Navi Settings.....	59
Travel (Place Category).....	100
Trip Computer.....	304
Troubleshooting.....	17, 332, 336

## U

Unit Settings.....	35
Unverified Routing.....	57
Update System Software	
Finding Update Information.....	357
Obtaining Update Data.....	357
USB Flash Drive	
Connecting, Disconnecting.....	199, 216
Playing.....	216
Voice Commands List.....	371
USB Ports.....	145

## V

Vehicle	
Correct Vehicle Position.....	85
Off-road Tracking.....	84
View (Navi Settings).....	77
View Area Map.....	61
View Routes.....	115

## Voice

Map Menu.....	120
Voice Commands	
Help.....	16
Voice Commands List.....	368
Voice Control System.....	24
Voice Control Operation	
Basic Operation.....	6
Voice Portal.....	6

## W

### Wallpaper

Deleting, Importing, Setting.....	32
-----------------------------------	----

### Waypoint

Adding.....	131
Deleting, Ordering.....	135

## Z

Zip Code.....	93
---------------	----