 


Multi-Information Display

Main Menu

 
➔ : Press INFO button (▼)

➜ : Press INFO button (▲)

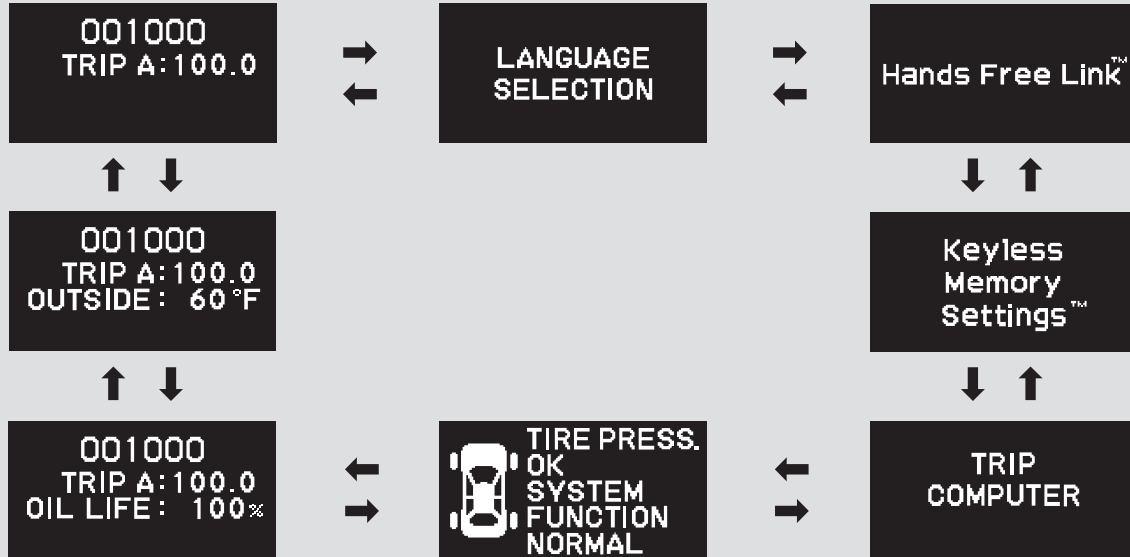


Multi-Information Display

Odometer

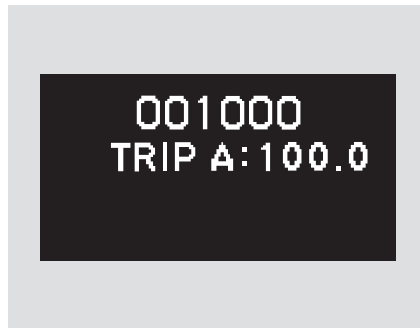


The odometer shows the total distance your vehicle has been driven. It measures miles in U.S. models and kilometers in Canadian models. It is illegal under U.S. federal law and Canadian provincial regulations to disconnect, reset, or alter the odometer with the intent to change the number of miles or kilometers indicated.

 Trip Meter

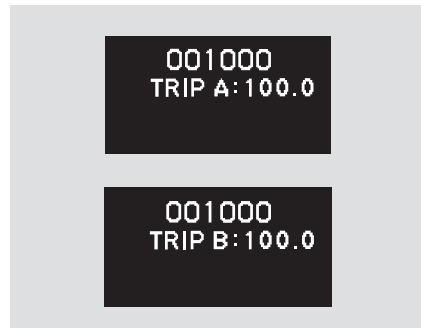


 This meter shows the number of miles (U.S.) or kilometers (Canada) driven since you last reset it. There are two trip meters: Trip A and Trip B. Each trip meter works independently, so you can keep track of two different distances. Switch between Trip A and Trip B by pressing the SEL/RESET button.

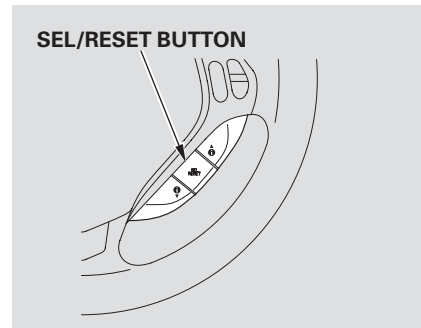

To reset a trip meter, display it, then press and hold the SEL/RESET button until the number resets to "0.0".

 Outside Temperature

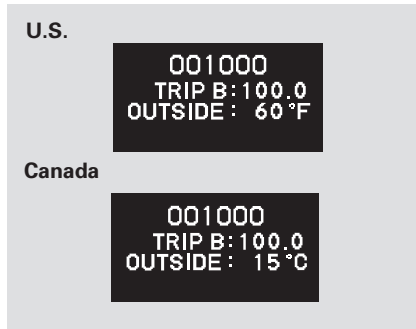

This shows the outside Fahrenheit temperature in U.S. models, and Centigrade temperature in Canadian models.

The temperature sensor is in the front bumper. The temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from surrounding traffic. This can cause an incorrect temperature reading when your vehicle speed is under 19 mph (30 km/h). When you start your trip, the sensor is not fully acclimatized, therefore it may take several minutes until the proper temperature is displayed.

If the outside temperature is incorrectly displayed, you can adjust it up to $\pm 5^{\circ}\text{F}$ ($\pm 3^{\circ}\text{C}$) warmer or cooler.

NOTE: The temperature must be stabilized before doing this procedure.

 
Select the outside temperature display, then press the SEL/RESET button for 10 seconds. The following sequence will appear for 1 second each: 0, 1, 2, 3, 4, 5, -5, -4, -3, -2, -1, 0 (U.S.) or 0, 1, 2, 3, -3, -2, -1, 0 (Canada).

When it reaches the desired value, release the SEL/RESET button. You should see the new outside temperature displayed.

In certain weather conditions, temperature readings near freezing (32°F , 0°C) could mean that ice is forming on the road surface.

Multi-Information Display

Engine Oil Life

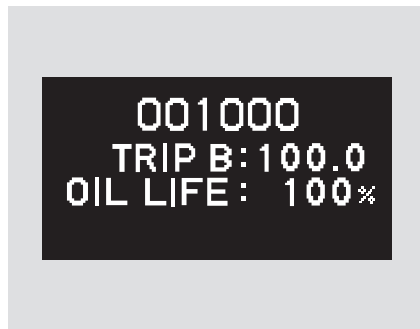

This shows the remaining life of the engine oil. It shows 100% after the engine oil is replaced and the display is reset. The engine oil life is calculated based on engine operating conditions and accumulated engine revolutions. For more information, see page [273](#).

Language Selection



The language of the multi-information display is selectable. The selectable languages are English, French, and Spanish.



To select a language, display "LANGUAGE SELECTION." Press the SEL/RESET button. The display will change as shown above.

Select the desired language by pressing the INFO (▼) button, then enter your selection by pressing the SEL/RESET button.

 
HandsFreeLink™



You can receive or make phone calls from your cell phone through your vehicle's HandsFreeLink (HFL) system without touching your cell phone.

To use the system, your cell phone and the HFL system must be linked. Not all cell phones are compatible with this system. Refer to page [190](#) for instructions on how to link your cell phone to the HFL and how to receive or make phone calls, or visit the handsfreelink.com website.


Trip Computer

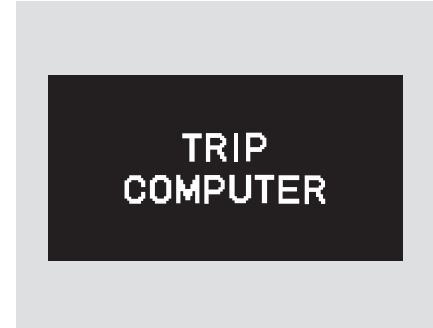

When the multi-information display is in the trip computer mode, pressing the SEL/RESET button changes the display as shown in the next column.

CONTINUED

 
Multi-Information Display

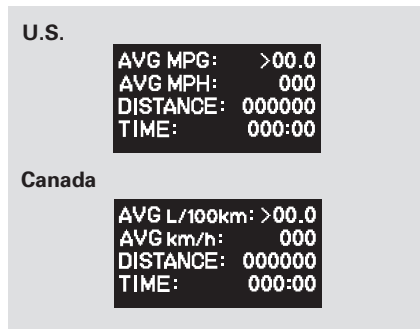

The messages in this display indicate:

- AVG MPG (U.S. models)/AVG L/100 KM (Canadian models): Average fuel economy
- AVG MPH (U.S. models)/AVG km/h (Canadian models): Average vehicle speed
- DISTANCE: Distance traveled
- TIME: Time traveled

 To reset the values in the trip computer, press and hold the SEL/RESET button until the values reset.

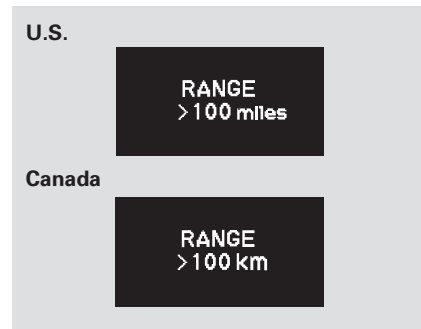

When you press the INFO (▼) button, the display changes as shown above. This is the estimated distance you can travel on the fuel remaining in the tank. This distance is estimated from the fuel economy you received over the last several miles (kilometers), so it will vary with changes in speed, traffic, etc. It measures miles in U.S. models and kilometers in Canadian models.