


Key and Remote Unlock Mode



You can select whether the driver's door or all the doors unlock when you press the unlock button on the remote transmitter first time.

Select the desired setting "DRIVER DOOR" or "ALL DOORS" by pressing the INFO (▼) button and enter your selection by pressing the SEL/RESET button.

Keyless Lock Acknowledgment

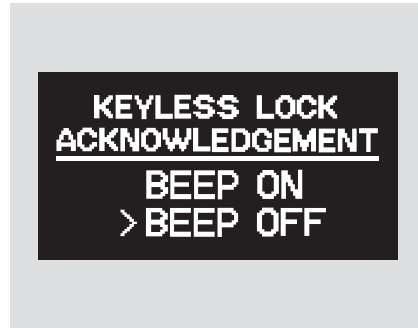

When you push the LOCK button a second time within 5 seconds after you lock the doors with the remote transmitter, a beeper will sound to verify that doors are locked and the security system has set.

If you do not want the beeper to sound, select "BEEP OFF" with the INFO (▼) button and enter your selection by pressing the SEL/RESET button.

Security Relock Timer

If you unlock the doors with the remote transmitter, but do not open any of the doors within 30 seconds, the doors automatically relock and the security system sets.

You can change this relock time from 30 seconds to 60 or 90 seconds.

CONTINUED

Multi-Information Display




Select the desired relock time by moving the pointer with the INFO (▼) button and enter your selection by pressing the SEL/RESET button.

Headlight Auto Off Timer

The headlights, parking lights, side marker lights, taillights, and license plate lights go off after the selected time when you close the driver's door.

You can change how long the lights stay on before they go off as described next.

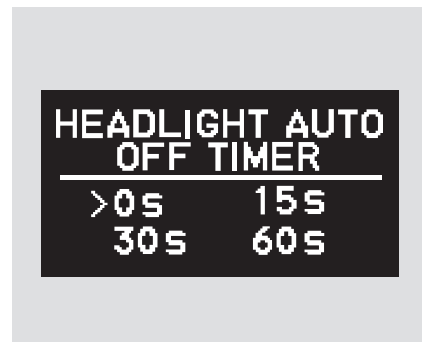

Select the desired time ("0s, 15s, 30s or 60s") by moving the pointer with the INFO (▼) button and enter your selection by pressing the SEL/RESET button.

Interior Light Dimming Time


The interior lights fade out when you close all doors (see page 118). Select how long it takes for the interior lights to fade out (in seconds) from “5s, 15s, or 30s” by moving the pointer with the INFO (▼) button.

Enter your selection by pressing the SEL/RESET button.

Default All

If you want the settings as they were when the vehicle left the factory, display the menu shown above. Select “DEFAULT ALL” by moving the pointer with the INFO (▼) button and enter your selection by pressing the SEL/RESET button.


To exit “DEFAULT ALL” without changing the current settings, select “EXIT” by moving the pointer with the INFO (▼) button and enter your

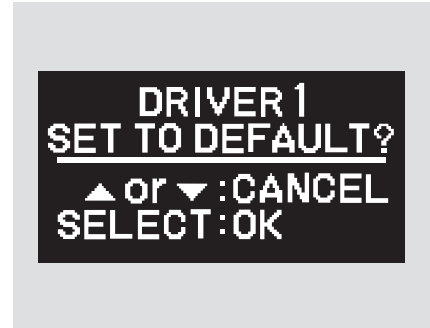

selection by pressing the SEL/RESET button.

If you select “DEFAULT ALL,” the display changes as shown. Press the INFO (▲/▼) button to cancel “DEFAULT ALL,” or press the SEL/RESET button to confirm your selection is “DEFAULT ALL.”

Controls Near the Steering Wheel

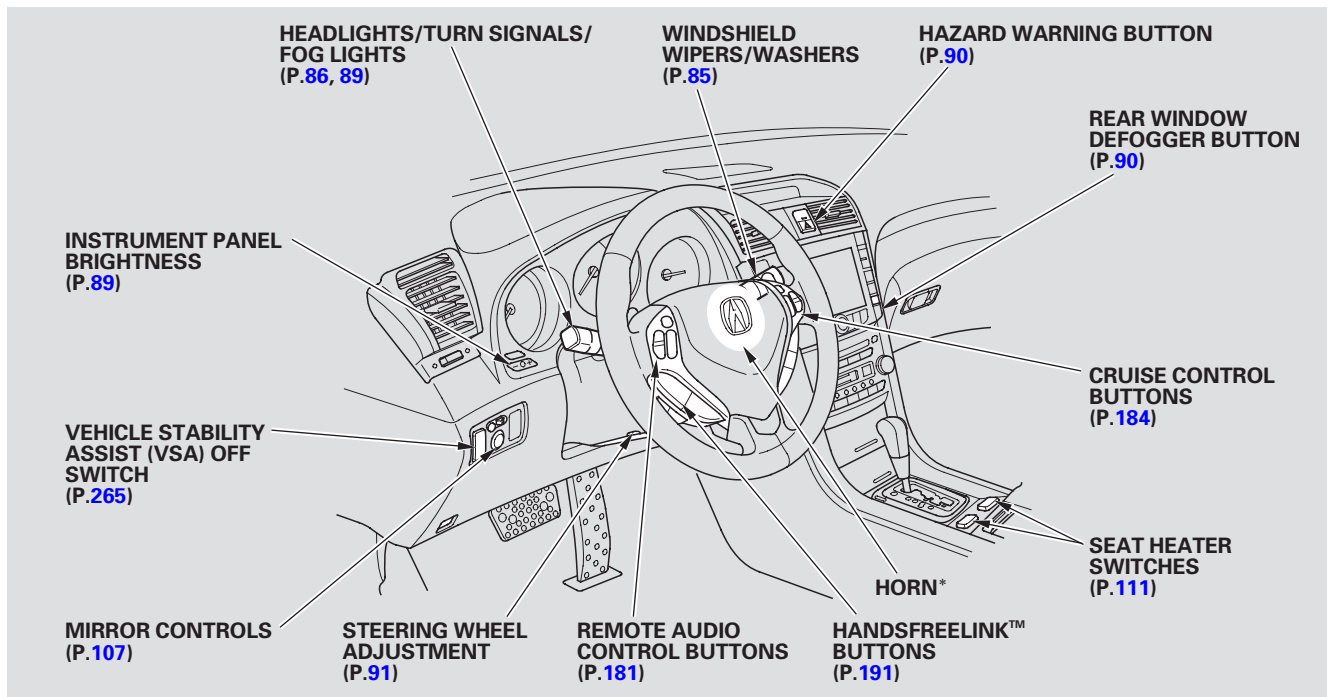

* : To use the horn, press the center pad of the steering wheel.