

This section covers the more-common problems that motorists experience with their cars. It gives you information about how to safely evaluate the problem and what to do to correct it. If the problem has stranded you on the side of the road, you may be able to get going again. If not, you will also find instructions on getting your car towed.

- Compact Spare Tire204
- Changing a Flat Tire..... 205
- If Your Engine Won't Start..... 210
 - Nothing Happens.....211
 - The Starter Operates
 - Normally.....211
- Jump Starting.....212
- If Your Engine Overheats214
- Low Oil Pressure..... 216
- Charging System Indication217
- Malfunction Indicator Lamp/
 - Check Engine light218
- Closing the Moonroof219
- Fuses220
 - Checking and Replacing221
- Towing.....225