

Safety Labels

These labels are in the locations shown. They warn you of potential hazards that could cause seriously injury. Read these labels carefully and don't remove them.

If a label comes off or becomes hard to read, contact your Acura dealer for a replacement.

FOLDING SPARE TIRE

AO CO

WARNING

- CAREFULLY READ OWNER'S MANUAL BEFORE USING THIS FOLDING SPARE TIRE.
- THIS SPARE TIRE/WHEEL ASSEMBLY IS FOR TEMPORARY EMERGENCY USE ONLY AND NOT FOR CONTINUOUS USE. REPLACE WITH NEW REGULAR TIRE AS SOON AS POSSIBLE. REPAIRED TIRES ARE NOT INCLUDED IN GUARANTEE.
- THIS TIRE/WHEEL ASSEMBLY IS DESIGNED SPECIFICALLY FOR PROPER FIT AND OPERATION ON THE VEHICLE IT CAME WITH. DO NOT INSTALL ON OTHER VEHICLES.
- DO NOT REPAIR THIS TIRE. DO NOT REMOVE THIS TIRE FROM THE WHEEL.
- DO NOT EXCEED 50 mph (80 km/h).
- DO NOT PUT GOODS OTHER THAN THE SPARE TIRE IN THE PLACE WHERE THE SPARE TIRE IS TO BE STORED.

HOW TO USE THE SPARE TIRE

- BEFORE INFLATING, MOUNT THE SPARE TIRE ON THE CAR AXLE. MAKE SURE THE WHEELNUTS ARE FASTENED. PUT THE REMOVED REGULAR TIRE IN REAR TRUNK.
- INFLATE WITH THE AIR COMPRESSOR PROVIDED. ADJUST TO THE PRESSURE VALUE SPECIFIED BELOW.
INFLATION PRESSURE FOR FRONT USE 180 kPa (26 psi)
INFLATION PRESSURE FOR REAR USE 220 kPa (32 psi)
- TO STORE THE SPARE TIRE, LOOSEN THE VALVE TO COMPLETELY RELEASE THE AIR, FOLD THE TIRE AND RE-TIGHTEN THE VALVE.

BATTERY

⚠ DANGER

EXPLOSIVE GASES Keep sparks, flame and cigarettes away. Provide adequate ventilation when charging or using batteries in an enclosed space.

CHEMICAL HAZARD Contains sulfuric acid. Contact with skin, even through clothing, may cause severe burns. Wear a face shield and protective clothing. If electrolyte gets into your eyes, antidote: flush thoroughly with water for at least 15 minutes and call a physician immediately.

POISON Antidote: EXTERNAL: flush with water. INTERNAL: drink large quantities of water or milk then follow with milk of magnesia or vegetable oil.


KEEP OUT OF REACH OF CHILDREN

Distributed by: AMERICAN HONDA MOTOR CO., INC. GARDENA, CA 90247

RADIATOR FAN

DANGER VORSICHT 危険

▶ KEEP HANDS AWAY
FAN STARTS AUTOMATICALLY.
▶ 手を離す。ファンは自動的に始まります。
▶ NE PAS APPROCHER LES MAINS LE DEMARRAGE DU VENTILATEUR EST AUTOMATIQUE.
▶ NICHT BERÜHREN
SELBSTEINSCHALTENDER VENTILATOR.

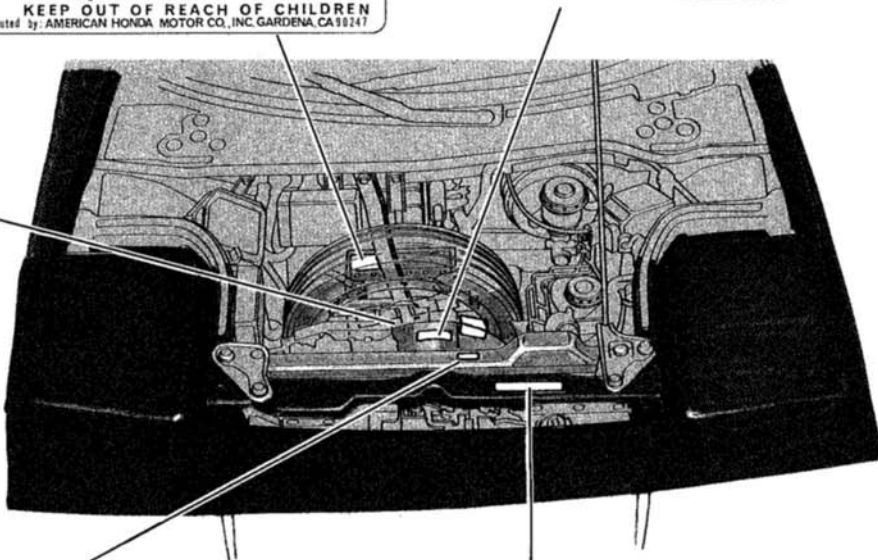

RADIATOR

DANGER ACHTUNG 危険

NEVER OPEN WHEN HOT.
N'OUVREZ PAS QUAND CHAUD.
NICHT BEI HEISSEM MOTOR ÖFFNEN.
熱い時にあけるな。

➔

HEADLIGHT MOTOR

CAUTION

- WHEN OPERATING THE HEADLAMP OPERATING SWITCH, MAKE SURE THAT ANYONE OUTSIDE THE CAR WILL NOT HAVE HIS OR HER FINGER CAUGHT BY THE HEADLAMP COVER.
- IF IT IS NECESSARY TO OPERATE THE HEADLAMP MANUALLY, THE FUSES (15 AMPERE) FOR THE RETRACTOR MOTOR LOCATED (AT TWO PLACES) IN THE RELAY BOX MUST BE REMOVED BEFORE SUCH OPERATION.