

## Guard Against Theft

 
Your new Passport has features to help prevent theft of the vehicle, its equipment, and its contents. These anti-theft features work depending on how well you use them.

- Park in a well-lighted area whenever possible.
- Lock the steering column and take the key with you.
  - Turn the ignition switch to "LOCK" and remove the key. This locks both the ignition switch and steering control.
- Fully close all windows and lock all doors.
- Keep costly items out of sight.
  - Never leave things of value in plain sight on the seat or floor.
  - The glove box offers a place to hide small items (and if locked, protects them even more).

## Locks


### Door Locks

You can lock the doors from outside the car by inserting the key into the door lock and turning.

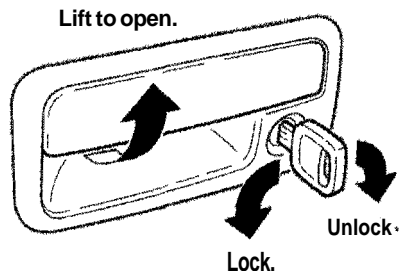

To unlock, turn clockwise for the passenger's door and counter-clockwise for the driver's door. To lock, turn the key in the opposite direction.

 
You can also lock the doors from outside without using the key by pushing the lock knob down and closing the door with the outside door handle lifted.

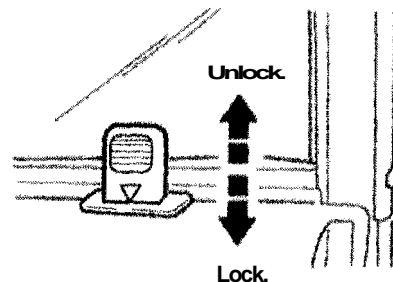

Lock the doors from the inside by pushing down the lock knob. If the triangle mark on the door lock knob is visible, the door is unlocked.

To open the door from inside, unlock the door lock, then pull the inside handle. To open the door from the outside, pull the outside door handle.

 As a standard feature the doors have overriding door locks. When the doors are locked, the door latch mechanisms are inoperative. This prevents someone from accidentally pulling the inside handle and opening the door during vehicle operation.

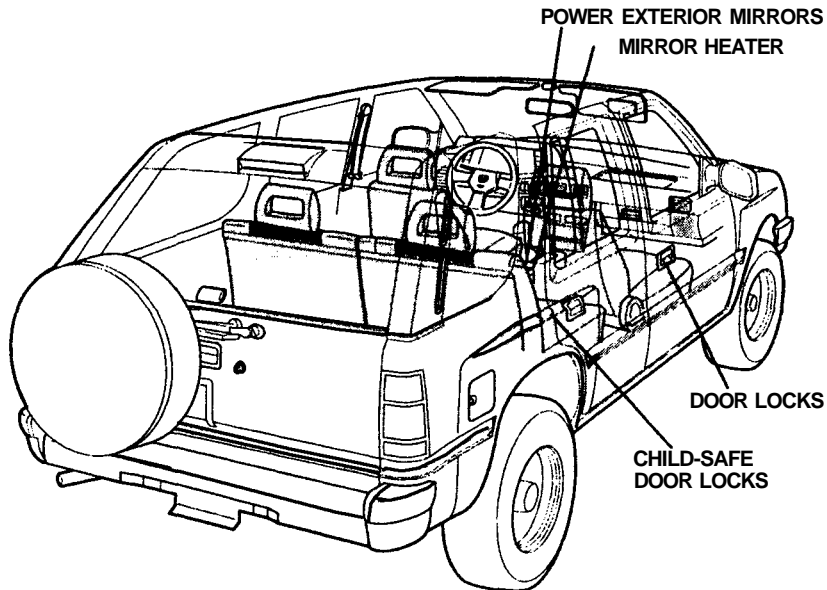

When leaving the vehicle unattended, shut the engine hood and lock all doors.

### Power Door Locks

*LX and EX models*

Locking or unlocking the driver's door with either the key or the lock button will also lock or unlock the remaining doors.

 
Locking or unlocking the front passenger's door with the key will lock or unlock only the front passenger's door.

Locking or unlocking the front passenger's door with the lock button will not lock or unlock the remaining doors.

Before driving, make sure that the doors are closed and locked, especially when young children are in the vehicle.

### Child-Safe Door Locks

The rear doors can be locked to prevent children from opening the door from the inside.

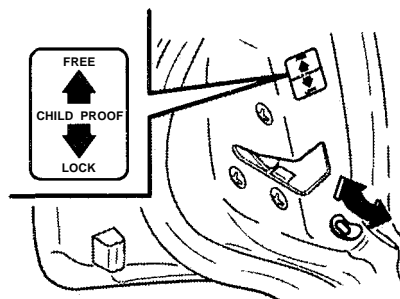

REAR DOOR


This is done by depressing the lever shown in the illustration. To disengage the lock, open the door from the outside and raise the lever.

## Mirrors
 
### Interior Mirror


To adjust, move the mirror right or left and up or down.

Pull the lever to switch the mirror to night operation. This reduces the glare from the headlights of following vehicles.

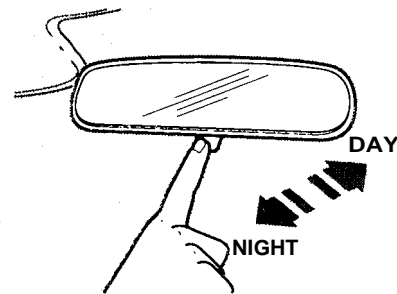

## Manual Exterior Mirror

 
Adjust the exterior mirror by hand before beginning to drive the vehicle.

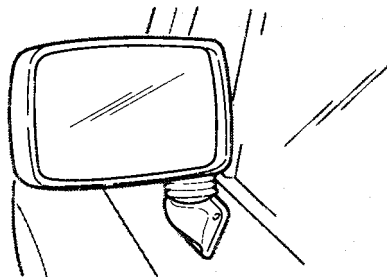

## Power Mirrors

*EX model only*

 Adjust the outside mirrors with the adjustment switch on the center console.

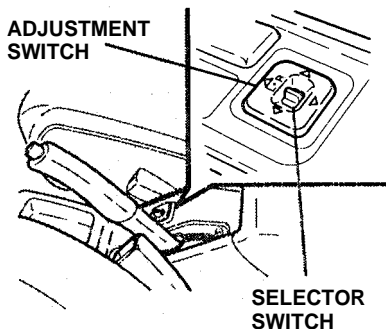


1. Turn the ignition switch to ON.
2. Move the selector switch to L (driver's side) or R (passenger's side).

3. Push the appropriate arrow on the adjustment switch to move the mirror right, left, up, or down.
4. When you finish, move the selector switch to the center (off) position. This turns off the adjustment switch so a mirror will not be moved out of position if you accidentally bump the switch.


## Mirror Heaters

 The power mirrors have built-in heaters to remove fog and frost.

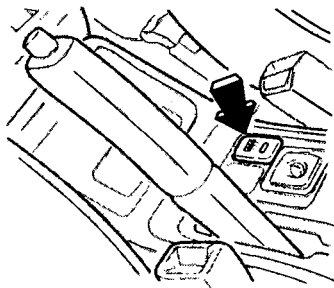

Press the mirror heater button, with the ignition ON, to turn on the heaters. The light in the button comes on as a reminder. Press the button again to turn the heaters off.

 The outside mirror on the passenger's side has curved glass.

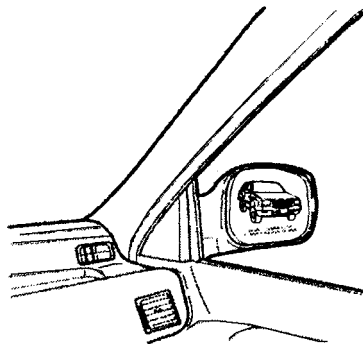

Objects look farther away than they really are. Use this mirror to get a "wide view." Do not use it to judge the distance of things behind you.

## Vanity Mirrors

*EX model only*

The vanity mirrors are on the back of the sun visors.

