2012 Civic Hybrid Navigation Online Reference Manual

 
The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Accessories Precautions

The GPS antenna is located in the dashboard. Metallic front or side window tinting can seriously degrade or obstruct GPS reception.

Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

Important Safety Information



Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Certain on-screen controls are disabled when driving, but most of the audible instructions and voice commands continue to function. Pull to the side of the road if you need to devote more attention and time to look at the screen or access additional menus.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.

The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.

System Limitations P. 182

NOTICE

This vehicle's navigation display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste. Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on navigation screens.

(1)

Inde

2012 Civic Hybrid Navigation Online Reference Manual

System Setup P. 17

Voice Control System 19 Personal Information 29 Start-up 18 Interface Settings 21 Clock Adjustment 46 Routing & Guidance 39 Vehicle 49 Data Reset 52

Navigation P. 55

Entering a Destination 56 Calculating the Route 77 Driving to Your Destination 80 Map Menu 85

Changing Your Route 101 Changing Your Destination 108 Resuming Your Trip 112

Audio P. 113

Audio System 114 Playing FM/AM Radio 116 Plaving an iPod® 129

Plaving a USB Flash Drive 133

Playing Bluetooth® Audio 137

Receiving a Call 159

Playing XM® Radio 121

Playing a Disc 125

Adjusting the Sound 140

Audio Remote Controls 141

HandsFreel ink® 144

Phone Setup 155

Bluetooth® HandsFreeLink® P. 143

Bluetooth®

Pairing a Phone 146

Making a Call 156

Setting Up Speed Dialing 151

Editing Phone Information 154 HFI Menus 160

Other Features P. 163

Trip Computer 164 Information Functions 165

Troubleshooting P. 167

Troubleshooting 168

Error Messages 174

Reference Information P. 179

System Initialization 180 System Limitations 182 Customer Assistance 184 Legal Information 187

Voice Commands P. 189

Voice Commands 190

Navigation Key Quick Reference Guide

Chapter Table of Contents

Index

Commands

Book Table of Contents

Contents

Quick Reference Guide P 2

System Setup P 17

Navigation P.55

Audio P 113

Bluetooth® HandsFreeLink® P 143

Other Features P.163

Troubleshooting P 167

Reference Information P.179

Voice Commands P.189

Index P.200



Overview—Functions at a Glance

Navigation

You can select any place/landmark as a destination by using voice control or the touch screen. The navigation system gives you turn-by-turn driving directions to your destination.



Store home addresses P35

Register **2** home addresses.

Store contacts P30

Store up to **200** contacts in **2** address books.

Enter destination P.56

Select your destination using **11** methods.

Select route P.78

Set route preferences and select one of **3** routes.



Follow your route in real-time with voice guidance.

FM Traffic P.99

View and avoid congestion and traffic incidents.

Avoid certain areas P102

Set streets and areas to detour around.

Add waypoints
P103

Add up to 4 "pit stops" along your route.



(15)

Index

Audio

The advanced audio system provides clear, well-defined sound and makes the most of your music. Enjoy listening to a variety of audio sources, such as:



AM/FM Radio →R116
XM® Radio →R121
Compact Disc →R125

iPod® →R129

USB Flash Drive →R133

Bluetooth® Audio →R137



Voice Control P19


Use voice commands to control the system while driving. You can operate all key functions of the navigation, audio, and climate control systems.

Pair a compatible cell phone to receive incoming and make outgoing calls. You can operate the phone features without ever taking your hands off the wheel.





System Controls

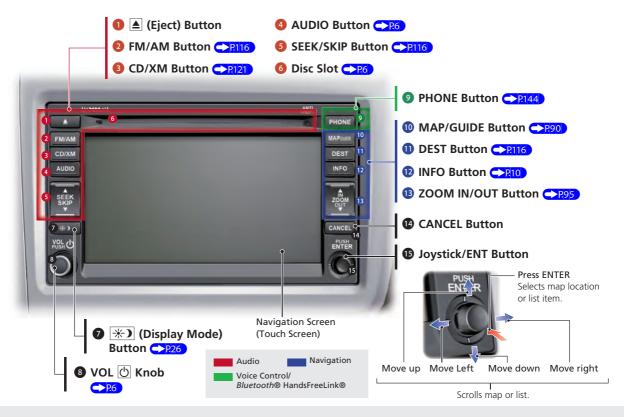

This illustration is for models without a moonroof.



- (Display/Information)
 Button → P.142
- 18 SOURCE Button →P141
- (Channel) Button

 → P.142
- 20 + (Volume) Button



- ②1 ∠ (Pick-Up) Button → P.159
- (Hang-Up/Back) Button
- 23 🖟 (Talk) Button 🗪 🔼

Voice Control Operation



A helpful prompt asks what you would like to do. Press and release the 🖟 (Talk) button again to bypass this prompt.

岖 (Talk) Button



- Available voice commands are highlighted on the screen.
- 2 Say a voice command.
 Voice Command >P.189
- The audio system is muted during voice control mode.
- Say M "Help" to see all supported commands. A voice help tutorial is also available.

Voice Help P13

<u>ح</u> ۱۱)






Audio System

You can play music from a wide array of media sources. You can also control the audio system using voice commands.

Basic Operation

- Press the VOL (Volume/Power) button to turn the audio system on or off.
- 2 Press the AUDIO button and select **SOURCE** on the screen.

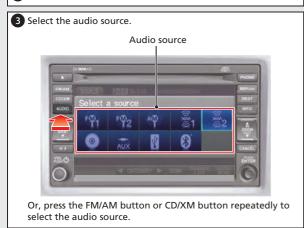

4 Rotate the VOL (Volume/Power) knob to adjust the volume.




Audio Control Display

Press the AUDIO button to display the audio system on the navigation screen.



Map Screen Legend

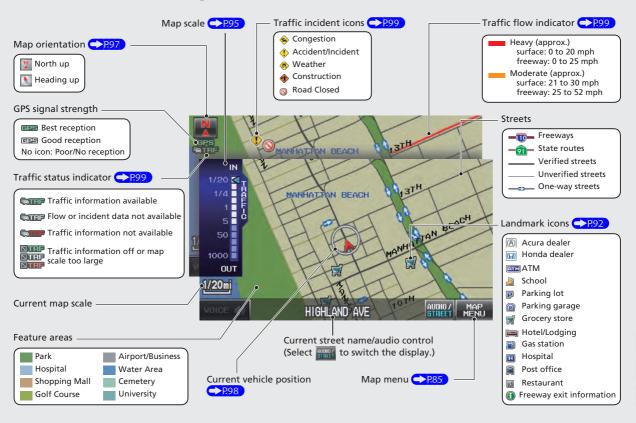

During Route Guidance

During route guidance, route information is displayed on the map/guidance screen and multi-information display. Press the MAP/GUIDE button to display the guidance screen.

Map Screen



Guidance Screen



Day or Night Mode

Press the *) (Display mode) button to manually switch between day and night mode.



Multi-information Display

Turn-by-Turn Directions

The next guidance point appears on the multi-information display.



Next driving maneuver is approaching.

 
How to Enter Information

You can enter information (e.g., city names, street names, personal names, and business names comprising letters, numbers, and symbols) when prompted on input screens by two different methods.

Using Voice Control

When you see 🛐 in this manual, voice commands are available for that feature.

- Say the letter, number, or symbol (e.g., say [6] "A").
- Use spelling assist (e.g., say ½ "Alpha" to enter the letter "A" or ¾ "Hyphen" to enter a hyphen).
- The system beeps if you say an unavailable (grayed out) letter or number.
- If a voice command is not recognized, a list is displayed with possible options.



On list screens:

- Say the number of the list item (e.g., say 😥 "Five" to select item 5).
- Say 🐔 "Up" or 🐔 "Previous" to scroll up one page.
- Say 🛍 "Down" or 🛍 "Next" to scroll down one page.

Using the Touch Screen

Touch a character or icon on the screen to select it.

- Select **Delete** to remove the last entered character.
- Select **Shift** to display accented and upper/lower case characters.
- Select **Space** to enter a space character.
- Select More to display symbols.



On input search screens, the number of hits in the map database is displayed. Select **List** to display a list of possible entries.

NOTE

You can also use the joystick to enter information.

System Controls P. 4







Navigation—Home Addresses and Going Home

The "Home" feature automatically routes you to your home address from any location simply by selecting **Go Home 1** or **2**, or saying significantly from the same of the same o Home." You can store two home addresses as Home Address 1 and Home Address 2.

Storing Your Home Address













Going Home



2 Select Go Home 1.



Alternatively, you can say 6 "Go Home" from any screen. Your home address is displayed on the Calculate Route screen.



- The following voice commands are available: say 6 "Go Home," 6 "Go Home 1," € "Go Home 2."
- If you have two home addresses stored, saying "Go Home" will select Home Address 1.



 
Navigation—Entering a Destination

 
Enter your destination using one of several methods, then follow route guidance on the map or guidance screen to your destination. You can also perform these steps using [6] voice control.

 


 













 7 If there is more than one city with the specified street, a list of cities is displayed. Select the desired city from the list.







View Routes: Choose one of three routes.



 Route Pref.: Choose MAX or MIN for the three settings.







Navigation—Changing Route or Destination

You can alter your route by adding waypoints to visit, adding streets to avoid, or changing your destination during route guidance.

Adding a Waypoint ("Pit Stop")

You can add up to four waypoints along your route. P.103

- 1 Press the DEST button.
 2 Select Waypoint.
- 3 Select search method.

 Select a search method

 Places Along the Route

 Places Around the Destination

 Places Around the Waypoint

When you select **Places Around the Waypoint**, select the desired waypoint.

4 Select the icon category and location to add to the destination list when prompted.

Changing Your Destination

There are four methods you can use to specify a new destination during route guidance.

- Say <u>Find Nearest...</u> <u>P108</u>
 Searches for the nearest place/landmark on the map screen (e.g., <u>Find nearest gas station</u>
- Say *Go Home" >P.10
 Routes to your home address.
- Selecting an icon on the map
 P109

 Scroll the map to position the cursor over a place/landmark icon or a new area on the map. Press the Enter button twice.
- Entering a new destination Priss the DEST button. Select DEST
 Menu1/2 and enter a new destination.

Canceling Your Route



From the map screen:

1 Select MAP MENU.





Index

Voice Help

This navigation system comes with voice help information, which tells you how to use the voice command functions. Go to Voice Info for tips when using the voice command functions.

Getting Started Tutorial









Command Help

For "Command Help" menu items, all voice commands that are available for that system are listed.



Select **Read** to hear the commands in the list read aloud.

Voice Commands P189

mE.



Troubleshooting

For more Information P.167





Why does the vehicle position icon on the map "lag" a short distance behind my actual position, especially at intersections?



This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal.



Why does the "time to destination" display sometimes increase even though I am getting closer to my destination?



The "time to destination" is based on the posted road speed signs and your actual road speed to give you a better estimate of arrival time



Why does my clock frequently change the time forward and backward by one hour?



The clock setting is automatically updated based on your GPS location. If you normally drive between two time zones, the clock may keep adjusting the time. You can turn this feature off.

Clock Adjustment P. 46



How do I specify a destination when an entered city or street could not be found?



Try entering the street first. Some cities are lumped in with a major metro area. In rural "unverified" areas or new subdivisions, streets may be missing or only partially numbered



How do I turn on the navigation system voice guidance?



- 1. Press the INFO button. Select **Setup**. Check that Volume is not set to Off
- 2. Select Other, then Basic Settings. Set Voice **Recognition Tutor** to **On** if you want the system to provide confirmations and system prompts.



My battery was disconnected or went dead, and the navigation system is asking for a code. Where do I find it?



In most cases, you do not need to enter a code. Simply press and hold the VOL (Volume/Power) button for two seconds; the system should reactivate.

System Initialization P. 180

How to Use This Manual

This section explains different methods on how you can easily find information in this manual.






Two types of Tables of Contents help you find your desired information.



First, find the general chapter related to what you are looking for (e.g., entering a destination from the Address Book). Then, go to that chapter to view a more specific table of contents.

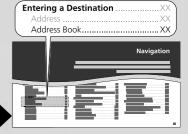

Chapter Contents

This more detailed table of contents shows you exactly what information is listed by section and title.




Menu items displayed on the navigation screen (e.g., Address Book) can be found individually in the Index.



The Index consists of main terms and subentries. The sub-entries help you get to the desired page depending on what you are looking for.

> Go to the **Next Page**

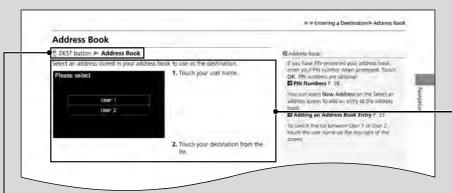

After following the menu tree, step-by-step instructions explain how to achieve the desired result.



Menu Tree

The menu tree helps guide you through the system's menu options. To get to your desired function, follow the menu tree in order of the steps shown.

NOTE:

All menu options can also be activated with voice commands.



Press the hard button on the system control panel.

Press the DEST button



Select the menu option.

Select Address Book

Sample pages and images in this section may differ from the actual ones.

16

System Setup

This section describes the start-up procedure and the navigation and setup functions.

1
1
2
2
2
2
2
2
2
2
3
3
3

User Name	37
Previous Destinations	38
Routing & Guidance	39
Rerouting	40
Unverified Area Routing	41
Edit Avoid Area	43
Edit Waypoint Search Area	45
Clock Adjustment	46
Adjust Time	47
Resetting the Clock Settings	47
Setting the Clock Type	48
Vehicle	49
Off-road Tracking	50
Correct Vehicle Position	51

Data Reset	52
Reset Factory Default Settings	52
Clear All Speed Dial	53

 
The navigation system starts automatically when you turn the ignition to ACCESSORY (I) or ON (II). At start-up, the following Confirmation screen is displayed.



- 1. Select Change Language.
 - ► If you do not need to change the system language, proceed to step 3.



2. Select the system language.



- 3. Select OK.
 - Your current position is displayed on the map screen.

Start-up

If the navigation system loses power at any time, you may need to press and hold the VOL (Olume/Power) button for more than two seconds, or you may be prompted for the 5-digit security code.

System Initialization P. 180

You can change the system language at any time.

≥ Language P. 28

"OK" on the Confirmation screen cannot be selected by using a voice command. If you do not select **OK** within 30 seconds, the screen turns dark. Press any navigation or voice control button to continue.

- Clock Adjustment P. 46
- Setting the Clock Type P. 48

(Inde

Index

Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions. You can also control the audio and climate control system*, and make and receive phone calls using *Bluetooth*® HandsFreeLink®.

The voice control system uses the 🚱 (Talk) and 🖘 (Hang-Up/Back) buttons on the steering wheel and a microphone near the map lights on the ceiling.

A "Voice Info" feature provides a tutorial that explains how to use the voice control system.

▶ Voice Help P. 13

Command Input

If the system does not understand a command or you wait too long to give a command, it responds with "Pardon," "Please repeat," or "Would you say again."

When you give a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. However, listening to the feedback will help familiarize you with the way the system expects commands to be phrased.

Basic Settings P. 23

If the system cannot perform a command or the command is not appropriate for the screen you are on, the system beeps.

If the system responds with prompts such as "Please use the touch screen to..." or "Please use the joystick to...," the system is asking for input that cannot be performed using the voice control system.

On character input screens, a list of possible characters is displayed if the system does not recognize your command.

You can find out which voice commands are available for a particular screen using the 6 Help command. The system will display and read the list of available commands to you.

፮፮ 🖟 (Talk) Button

When you press the 🖟 (Talk) button, a helpful prompt asks what you would like to do. Press and release the 🖟 (Talk) button again to bypass this prompt and give a command.

* Climate voice control: Civic Hybrid model only.

Command Input

The audio system is muted while using the voice control system.

(1)

Index

Voice Recognition

To achieve optimum voice recognition when using either the navigation voice control system or *Bluetooth*® HandsFreeLink®:

- Make sure the correct screen is displayed for the voice command that you are using.
 - **> Voice Commands** P. 190
- Close the windows and moonroof.
- Adjust the dashboard and side vents so air does not blow onto the microphone on the ceiling.
- Speak clearly in a clear, natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.
- Refer to the Voice Info tutorial.
 - **▶ Voice Help** P. 13

w.E

Index

Interface Settings

Display and Volume Settings

% INFO button ▶ Setup

Use the Main Setup screen to adjust the display and volume.



Select **◀** or **▶** to adjust the desired item.

The following items are available:

- Brightness: Adjusts the screen's brightness.
- Contrast: Adjusts the screen's contrast.
- Black Level: Adjusts the screen's black level.
- Volume: Adjusts the navigation system volume level.

Display and Volume Settings

You can set separate daytime and nighttime settings for **Brightness**, **Contrast**, and **Black Level**. Adjust each setting when the display is in either daytime or nighttime mode.

You can set the display and volume settings using voice commands.

Main Setup Screen Commands P. 195

Volume

If you set **Volume** to **Off**, you will not hear route guidance or voice command confirmations. If you then select **VOICE** on the map screen, you will hear route guidance at the default volume.

(n\var2



Guidance Prompts

§ INFO button ► Setup

Set the number of guidance prompts before you get to the guidance point.



Select an option.

The following options are available:

Items	Distance from Guidance Point			
items	About 1/2 mile	About 1/4 mile	Just before	
MIN		Yes		
NORMAL (factory default)		Yes	Yes	
MAX	Yes	Yes	Yes	

■ Guidance Prompts

To replay voice guidance, select **VOICE** on the map screen.

≥ Listening to Voice Guidance P. 84

You can turn voice guidance off if you prefer.

Display and Volume Settings P. 21





Basic Settings

Set the map units to either miles or kilometers, and control the voice feedback from the navigation system.



Select an item.

The following items are available:

- Keyboard Layout: Sets the type of keyboard screen to either Alphabet (factory default) or QWERTY.
- Units: Sets the map units to either miles (factory default) or kilometers.
- Voice Recognition Tutor: Turns the voice feedback feature on or off.
 On (factory default): Provides voice control system confirmation or prompts.
 Off: Disables the feature.
- Display Voice Command Tips: Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.
 On (factory default): Displays a message.

Off: Disables the message, but some options may be grayed out on the screen.

165



• Verbal Reminder: Turns the verbal reminders on or off.

On (factory default): Provides warning voice messages when:

- Driving with the parking brake on
- Driving without wearing the driver and/or passenger seat belt

Off: Disables the feature.

Color

% INFO button ▶ Setup ▶ Other ▶ Color

Choose the color of the navigation map and system menus.



Select an item.

The following items are available:

- Map: Sets the color of the map screen.
 - Map Color P. 25
- Menu: Sets the color of the menu screens.
 - Menu Color P. 25

inde

Home

24

■ Map Color

% INFO button ▶ Setup ▶ Other ▶ Color ▶ Map

Set separate map colors for Day and Night modes.



Select a color for the map screen.

■ Menu Color

§ INFO button ► Setup ► Other ► Color ► Menu

Set separate menu colors for Day and Night modes.



Select a color for the menu screens.

Map Color

For Day mode

Set to **White** (factory default is **Beige**) to obtain the best daytime display contrast.

For Night mode

Set to **Black** (factory default) to obtain the best nighttime display contrast.

Menu Color

For Day mode

Set to **Black** (factory default is **Blue***) to obtain the best daytime display contrast.

For Night mode

Set to **Black** (factory default is **Blue***) to obtain the best nighttime display contrast.

* Factory default is Red for Si models.







■ Switching Display Mode Manually

Set the screen brightness separately for Day and Night modes. Press the (Display mode) button to cycle through the display modes (Day to Night to Off).



- 1. Press the * button.
 - ► The Brightness bar is displayed for a few seconds.
- 2. Press the * button again.
 - ► Repeat the procedure to switch the display modes.
 - ► Select ◀ or ► to adjust the brightness.

Switching Display Mode Manually

A visual guide helps you see the difference between Day and Night modes.

Day or Night Mode P. 8

Recommended Settings

- Select mid-range for the dash illumination.
- Select White for the map Day display and Black for the map Night display.

mE.

Index

Illumination control	Priority	Operation
*) button	1	Selects Day, Night, or Off display mode. This button has the highest priority and overrides all other display control adjustments listed below. Remember: Once you press this button, you assume full manual control of the display mode until the ignition is turned off.
Sunlight sensor* (see your Owner's Manual for location)	2	If the sunlight sensor detects daylight and the headlights are turned on, the system automatically overrides the Night display and displays the Day display mode. Remember: If desired, use the 来) button to override this automatic choice.
Dash illumination adjustment buttons (see your Owner's Manual for location)	3	When the headlights are turned on, and you wish to have the Day display mode, adjust the illumination to full brightness (beeps). Remember: Adjust the dash brightness back to mid-range to allow auto switching by sensing the headlights are on or off.
Headlights (Auto*/On/Off)	4	When turned on, the display changes to Night display mode. The previous three controls listed above can "cancel" this function. Remember: Use the *D button, or adjust the dash illumination to full brightness, to set the display to your desired choice.
Screen color choice	N/A	The user can select the color of the screen that will be displayed for the Day and Night display modes described above. Remember: For best contrast, ensure that the map color is white for Day and black for Night.

>>	Illumination	Control	
-----------------	--------------	---------	--

* Not available on all models.

(11/2)



Language

 $% \mathbb{R} = \mathbb{R}$ INFO button \blacktriangleright Setup \blacktriangleright Other \blacktriangleright Language

Set the system language used on all screens. You can choose from three languages: **English, Français** (French), **Español** (Spanish).



Select the system language.

Language

Voice confirmation of cities and streets only occurs when **English** is the system language.

When **Français** or **Español** is selected, some messages continue to be displayed in English.

(nE

Index

Hom

§ INFO button ► Setup ► Personal Information

Use the personal information menu to select and set your address books, home addresses, and PINs. You can also delete unwanted destinations from the list of previously routed destinations.



Select an item.

The following items are available:

- Address Book: Stores new addresses or edits your address book.
 - Address Book P. 30
- Home Address 1: Sets or edits your home address.
 - Home Addresses P. 35
- Home Address 2: Sets or edits another home address.
 - **▶ Home Addresses** P. 35
- PIN Number: Sets or changes your PIN.
 - **▶ PIN Numbers** P. 36
- User Name: Sets or changes your user name.
 - User Name P. 37
- Previous Destinations: Deletes the destination history.
 - Previous Destinations P. 38

Personal Information

Personal information cannot be backed up or moved to another navigation system.

(hE

Index

.....

Address Book

Store up to 200 address entries in two address books (User 1 and User 2). You can add. edit. and delete information in the address books.





Select the user name to edit the user address book.

Displays the address book.

- Select the user name to change the user address book.
- ► Select the category tab to display only the address in the selected category.

Address Book

The number of addresses is shared by the two address books. For example, if User 1 has 150 addresses, User 2 can only have 50.

If you have PIN-protected your address book, enter your PIN when prompted. Select **OK**. PINs are optional.

PIN Numbers P. 36

Any address book categories you create are also displayed on the Select an Address screen.

Selecting an Address Book Category P. 33



Index

■ Adding an Address Book Entry

% INFO button ▶ Setup ▶ Personal Information ▶ Address Book

This section explains how to enter the name and address.



1. Select New Address.



2. Select an item.

The following items are available:

- Edit Name: Edits the name of the entry.
- Edit Address: Edits the address of the entry.
- Edit Phone No.: Edits the phone number of the entry.
- Edit Category: Specifies the category of the entry.
- Delete: Deletes the entry.

Madding an Address Book Entry

If you do not give the address a name, one is automatically assigned (e.g., Address 001). You can re-enter, edit, or make changes to any entry. "Address" is the only required field.

(hÉ

Index

поп



- 3. Select Edit Name.
- 4. Enter a name or title. Select OK.
- 5. Select Edit Address.
- **6.** Select an item for specifying the address.

Madding an Address Book Entry

When you use Place Name or Place Category,

the phone number is automatically entered.

The following items are available:

- Current Position: Select your current location.
- Address: Enter an address on the character input screen when prompted.
 - Address P. 58
- Previous Destinations: Select a previous destination.
 - **▶ Previous Destinations** P. 64
- Place Name: Enter the name of a place/landmark.
 - Place Name P. 65
- Place Category: Select a category to search for a place/landmark (e.g., Banking, Lodging).
 - **▶ Place Category** P. 67
- Place Phone Number: Enter the phone number of a place/landmark.
 - **Place Phone Number** P. 72

WE.

Inde

Home

32

■ Editing an Address Book Entry

% INFO button ▶ Setup ▶ Personal Information ▶ Address Book



- 1. Select the address to edit
- 2. Enter the name, address, phone number, and category fields. Adding an Address Book Entry P. 31
- 3. Select OK.

■ Selecting an Address Book Category

% INFO button ▶ Setup ▶ Personal Information ▶ Address Book



- 1. Select an address
- 2. Select Edit Category.
- 3. Select BUSINESS, PERSONAL, or a category you created.

☑ Editing an Address Book Entry

The entered contents are displayed on the Edit address screen.

Selecting an Address Book Category

You can have up to 100 categories (including "UNFILED"). These categories can be shared with User 1 and User 2. For example, if User 1 creates some categories, User 2 can also use them.

If you delete a category that is used by other addresses, the category type for those addresses changes to "UNFILED."

Category Icons

The following icons can be selected for a category:

















Continued

■ Creating a New Category

- 1. Select New Category.
- **2.** Enter a name and select an icon when prompted. Select **OK**.
 - ▶ The created category is displayed in the list of categories.
- Deleting or Editing a Category
- 1. Select Edit Category.
- 2. Select Edit Category or Delete.
- **3.** Delete an existing category, or change the name and icon.

■ Deleting an Address Book Entry

§ INFO button ► Setup ► Personal Information ► Address Book

Edit address

ABC STORE
1234 MAIN ST
ANYPLACE, CA
(310)555-1234

Edit Name
Edit Category
Edit Address
Delete
Edit Phone No.
OK

- **1.** Select the address to delete.
- 2. Select Delete.
- 3. Select Yes.

Deleting an Address Book Entry

When you transfer the vehicle to a third party, delete all address book entries.

(164

Index

Home Addresses

Set two home addresses that you frequently use.



- Edit the name, address, and phone number the same way as an address in the address book.
 Adding an Address Book Entry P. 31
- 2. Select OK.

If you have PIN-protected your home addresses, enter your PIN when prompted. Select **OK**. PINs are optional.

PIN Numbers P. 36

If your home street is not in the system database, park on the nearest verified street to your home. When entering the "Address" field, select **Current Position** to use your current location as the home address.

You can delete a home address if necessary. Select **Delete**. Select **Yes**.

When you transfer the vehicle to a third party, delete all home addresses.

The home icon is shown on the map screen in 1/20 and 1/8 mile scales.

(n/2°



PIN Numbers

Set a 4-digit PIN for protecting personal addresses and your home addresses. Once you set a PIN, you are prompted to enter it whenever you access a personal address or a home address.



- 1. Select the PIN to create.
- **2.** Select the user name (when selecting **Address Book PIN**).



- 3. Enter a 4-digit PIN.
- Re-enter the new PIN when prompted to confirm the number you just entered.
 - ▶ If you do not enter the same number both times, an "INCORRECT PIN" message is displayed. Enter your PIN again.

PIN Numbers

PIN

Personal Identification Number (PIN) is a password used to access some personal data.

PINs are optional. If you choose to use a PIN, keep a note of the number in a secure location. If you forget your PIN, your dealer will have to reset the navigation system and all of your stored information will be erased. The factory default is no PIN.

Go Home PIN

Go Home PINs are shared with User 1 and User 2. If either User 1 or User 2 sets a Go Home PIN, both of them need to enter the PIN when:

- selecting **Go Home** for a destination
- selecting **Home Address** for editing

If you want to stop using a PIN, select **Do not use PIN**.



Index

User Name

§ INFO button **▶ Setup ▶ Personal Information ▶ User Name**

Change the user name ("User 1" or "User 2") to your desired name.



- **1.** Select the name to change.
- 2. Enter a name. Select OK.

Previous Destinations

The navigation system maintains a list of your previously routed destinations as a shortcut for entering the same destination in the future. You can delete some or all of your previous destinations from the list.



- 1. Select the destination to delete.
 - ► Repeat the procedure as necessary.
 - ltems to be deleted are indicated with a trash icon.



2. Select **OK** to delete the selected destinations.

>> Previous Destinations

Up to 50 destinations can be stored.

The list of previous destinations is shared with User 1 and User 2. For example, if User 1 deletes some previous destinations, they are deleted for User 2 as well.

To cancel the selection of a previous destination, select the destination again.

Selecting **Delete All** allows you to delete all destinations.





§ INFO button ▶ Setup ▶ Other ▶ Routing & Guidance

Choose various settings that determine the navigation system functionality during route quidance.



Select an item.

The following items are available:

- Rerouting: Sets the route recalculation to automatic or manual mode.
 ▶ Rerouting P. 40
- Unverified Area Routing: Sets whether you use the route guidance in unverified areas.
 - Unverified Area Routing P. 41
- Edit Avoid Area: Specifies areas to avoid when calculating a route.

 ▶ Edit Avoid Area P. 43
- Edit Waypoint Search Area: Sets the distance from the route to find waypoints.
 Edit Waypoint Search Area P. 45
- Guidance Mode: Sets whether to display only the map screen or a split mapguidance screen.
 - **Guidance Mode** P. 90

11/2

Index

Rerouting

§ INFO button ➤ Setup ➤ Other ➤ Routing & Guidance

Set whether route recalculation occurs automatically or manually during route guidance.



Select an option.

The following options are available:

- Automatic (factory default): The system calculates a new route automatically when you deviate from the route. It is strongly recommended that you leave the system set to Automatic.
- Manual: Disables route recalculation. The system beeps and "Off Route" is displayed when you deviate from the route.

Rerouting

If you live in an area with poor mapping, you may wish to set **Rerouting** to **Manual** to avoid constant recalculation. You will need to select **Recalc.** manually to make the system recalculate your new route.



Index

Unverified Area Routing

% INFO button ▶ Setup ▶ Other ▶ Routing & Guidance

Receive turn-by-turn map and voice guidance in unverified areas.

Set routing Rerouting Automatic Manual Unverified Area Routing On Off Edit Avoid Area Edit

Select On or Off.

Differences	Off (factory default)	On
On or Off?	The driver wishes to manually navigate using the navigation map and choose the streets that lead to the destination.	The driver chooses to let the navigation system suggest possible routing, knowing that the guidance may not be accurate.
Route calculation	Route is usually longer, using verified roads whenever possible.	Route is shorter, but uses unverified (purple) streets that may not be accurate.
Route line	A blue dotted vector line is displayed on the map that continually points to your destination.	A blue-pink dashed route line highlights suggested unverified streets on the map while traveling to your destination.
Cautionary messages	Cautionary pop-up screens and voice announcements remind you to obey all traffic restrictions.	Cautionary pop-up screens and voice announcements remind you to exercise additional caution and obey all traffic restrictions.

■ Unverified Area Routing

Unverified roads are found in rural areas, and typically include residential streets away from the center of a town. They may not be accurate, and can contain errors in location, naming, and address range.

Unverified roads are shown only when viewing the map in the 1/20, 1/8, 1/4 mile map scales.





System Setup

Differences	Off (factory default)	On
Guidance (map/voice)	There is no turn-by-turn map or voice guidance.	Voice guidance commands end with the phrase "if possible" to remind you to verify all traffic restrictions.
My Destination (Direction list)	A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road.	A direction list is provided showing unverified street names in blue boxes and turn symbols in pink.


الحج

Index

Fdit Avoid Area

§ INFO button ▶ Setup ▶ Other ▶ Routing & Guidance ▶ Edit Avoid Area "Edit"

Specify up to five areas to avoid (e.g., road construction, closures), if possible, when the system calculates routes to your destination.

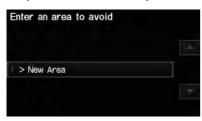

1. Select **New Area** or an existing area to edit.



- Select Edit Name to label the area to avoid.
- 3. Enter a name or title. Select OK
- **4.** Select **Edit Area** to define the area to avoid.

The following items are available (after an area is set):

- View Area Map: Displays the selected avoid area on the map.
- Delete: Deletes the selected avoid area.

Edit Avoid Area

The avoid areas are shared with User 1 and User 2. For example, if User 1 specifies some avoid areas, User 2 can also use them for setting a route.

The maximum size of an "avoid area" is 1/2 square mile.

If your selected area contains a freeway, you are asked "Do you want to avoid freeways?" Answering "No" allows you to use a route through an avoid area on a freeway without any pop-up messages.

You can select areas to avoid, however you cannot select roads or areas that you want the system to use for routing.

You can enter up to 25 characters for the name.

(Inde





5. Select a method for specifying the area.

The following items are available:

- Address: Specify the general area by entering an address.
- Map Input: Specify the general area by map input.

 ▶ Map Input P. 75

Cursor



► To redo the area selection, press the CANCEL button.

cursor over your desired start point,

necessary. Press the ENTER button

6. Scroll the map to position the

adjusting the map scale as

to mark the start point.

- **7.** Scroll the map to "draw" the area. Press the ENTER button to mark the end point.
- 8. Select OK.
 - ► The area you specify is displayed in the list of areas to avoid.

(11/2

Index

Home

Edit Waypoint Search Area

§ INFO button ► Setup ► Other ► Routing & Guidance ► Edit Waypoint
Search Area "Edit"

Select the distance from your highlighted route line (on either side of your route) that the system will search for a waypoint.

Adding Waypoints P. 103

You can specify a different search distance for freeways and surface streets.



- 1. Select a search distance.
- 2. Select OK

The following options are available:

- On Freeways: 1, 2, 5, or 10 miles can be set. Factory default is 2 miles.
- On Surface Street: 1/2, 1, 2, or 5 miles can be set. Factory default is 1/2 mile.

The search distance does not affect the search range used for the Find Nearest voice commands (e.g., say [wsc] "Find nearest gas station").

w£

Index

.....

§ INFO button ▶ Setup ▶ Other ▶ Clock Adjustment ▶ Clock Adjustment

Set the automatic adjustment of the system clock for daylight saving and international time zones.



Select an item.

The following items are available:

 Auto Daylight: The navigation system automatically adjusts the clock ("spring ahead" or "fall back" by one hour) when a daylight saving time change occurs.
 On (factory default): Adjusts the clock automatically.
 Off: Disables the feature.

 Auto Time Zone: The navigation system automatically adjusts the clock when driving through different time zones.

On (factory default): Adjusts the clock automatically.

Off: Disables the feature

- Clock Format: Sets the time notation to either 12-hour clock (12H, factory default) or 24-hour clock (24H).
- Time Adjustment: Adjust the current time manually.
 Adjust Time P. 47
- Reset: Reset the clock settings to the factory default.
 Resetting the Clock Settings P. 47

Clock Adjustment

You can check the time and date from any screen using voice commands.

Յ Global Commands P. 190

Auto Daylight

This function is not activated in areas that have not adopted daylight saving time, even if you have set **Auto Daylight** to **On**.

Auto Time Zone

If you live and work in two different time zones, you may want to turn **Auto Time Zone** to **Off**. When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.

贬

Index

lome

Adjust Time

% INFO button ▶ Setup ▶ Other ▶ Clock Adjustment ▶ Clock Adjustment Adjust the current time (hours and minutes).



- **1.** Select \square or \square to adjust the value.
- **2.** Select **OK** on the top right of the screen.

Resetting the Clock Settings

§ INFO button ▶ Setup ▶ Other ▶ Clock Adjustment ▶ Clock Adjustment Reset all clock settings to the factory defaults.



Select **OK** under **Reset**.

(n\lambda



Setting the Clock Type



- 1. Select Clock Type or Background.
- **2.** Select an option to change the design.
- 3. Select OK.

WE.

Index

Setup ► Other ► Vehicle

Set the off-road tracking feature and correct the vehicle position displayed on the map.



Select an item.

The following items are available:

- Off-road Tracking: Set whether to display the tracking dots on the map.
 → Off-road Tracking P. 50
- Correct Vehicle Position: Adjust the position of the vehicle on the map.

 → Correct Vehicle Position P. 51





Off-road Tracking

Setup ► Other ► Vehicle

The navigation system can be set to display white off-road tracking dots ("breadcrumbs") on the map screen whenever you drive into an area approximately 1/2 mile away from a mapped road.



Select an option.

The following options are available:

- On: The system displays the white tracking dots.
 Driving Off-road P. 83
- Off (factory default): Disables the feature.



To clear existing breadcrumbs, set Off-road Tracking to Off, exit the Setup screen, and then set Off-road Tracking to On again.




Index

Correct Vehicle Position

% INFO button ▶ Setup ▶ Other ▶ Vehicle

Manually adjust the current position of the vehicle as displayed on the map screen if the position appears to be incorrect.

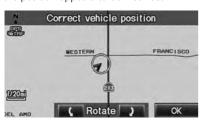



- 1. Put the vehicle in Park
- 2. Select ADJUST under Current Vehicle Position.
- **3.** Scroll the map to position the arrowhead at your correct position.
- **4.** Select **C** or **D** to position the arrowhead in the correct direction the vehicle is facing.
- 5. Select OK.

○ Correct Vehicle Position

An apparent position error can occur where buildings, tunnels, and other objects block or reflect the GPS signals, forcing the system to use "dead reckoning" to determine your location and direction.

Using this function to adjust vehicle position is not recommended. When the system reacquires a GPS signal, it will automatically place the vehicle in the correct location.

If you continually have to adjust the vehicle position, you may have problems with the GPS reception or there may be database errors.

System Limitations P. 182

(hÉ



Reset Factory Default Settings

§ INFO button ➤ Setup ➤ Other ➤ Reset Factory Default

Reset all the settings on the Setup screens to their factory defaults.



Select Yes.

■ Reset Factory Default Settings

The following settings are reset:

- Brightness, Contrast, Black Level, Volume, Guidance Prompts
- Basic Settings: Keyboard Layout, Units, Voice Recognition Tutor, Verbal Reminder, Display Voice Commands Tips
- Routing & Guidance: Rerouting, Unverified Area Routing, Edit Waypoint Search Area, Guidance Mode
- Clock Adjustment: Auto Daylight, Auto Time Zone, Clock Format Time, Clock Type
- Vehicle: Off-road Tracking
- Color: Map Color, Menu Color

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

- Deleting an Address Book Entry P. 34
- Home Addresses P. 35
- PIN Numbers P. 36
- User Name P. 37
- **Previous Destinations** P. 38
- Edit Avoid Area P. 43
- Deleting a Paired Phone P. 149



index


Clear All Speed Dial

% INFO button ▶ Setup ▶ Other ▶ Clear All Speed Dial

Delete all registered speed dials stored in *Bluetooth*® HandsFreeLink®.

Select Yes.



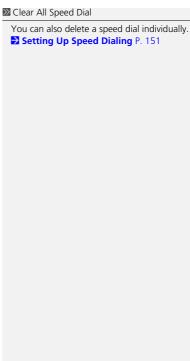

m£

Index

.....

w E

Index

Home

Navigation

This section describes how to enter a destination, select a route to take, and follow the route to your destination. It also describes how to change your route or destination along the way.

Address 58 Address Book 63 Previous Destinations 64 Place Name 65 Place Category 67 Place Phone Number 72 Coordinate 73 Intersection 74 Map Input 75	Entering a Destination	56
Previous Destinations 64 Place Name 65 Place Category 67 Place Phone Number 72 Coordinate 73 Intersection 74	Address	58
Place Name 65 Place Category 67 Place Phone Number 72 Coordinate 73 Intersection 74	Address Book	63
Place Category 67 Place Phone Number 72 Coordinate 73 Intersection 74	Previous Destinations	64
Place Phone Number 72 Coordinate 73 Intersection 74	Place Name	65
Coordinate	Place Category	67
Intersection	Place Phone Number	72
	Coordinate	73
Map Input 75	Intersection	74
	Map Input	75

77
78
78
79
80
80
84
85
85
87
92
94
99

Changing Your Route 10
Canceling the Route10
Taking a Detour 10
Avoiding Streets 10
Adding Waypoints 10
Editing My Destination 10
Changing Your Destination 10
Find Nearest Place 10
Selecting a Destination on the Map 10
Entering a New Destination 11
Resuming Your Trip11

§ DEST button

This section describes how to enter a destination for route guidance.



 
Select an item.

Select **DEST Menu 2** to display additional menu entries.



The following items are available:

- Address: Sets a destination by entering an address.
 - Address P. 58



Address Book P. 63

• Previous Destinations: Sets a destination by selecting a previous destination.

▶ Previous Destinations P. 64



• Place Name: Sets a destination by entering a place name.

Place Name P. 65

• Place Category: Sets a destination by selecting a place/landmark.

▶ Place Category P. 67

 Place Phone Number: Sets a destination by entering the phone number of a place/landmark.

Place Phone Number P. 72

• Coordinate: Sets a destination by entering latitude and longitude.

Coordinate P. 73

• Intersection: Sets a destination (intersection) by entering two streets.

▶ Intersection P. 74

• Map Input: Sets a destination by scrolling through the map.

▶ Map Input P. 75

• Go Home 1 or 2: Sets your home address as a destination.

B Going Home P. 10

(n\zeta

Index

Navigation

Address

[®] DEST button ▶ Address

Enter an address to use as the destination. The state or province you are currently in is displayed (e.g., California).



Select an item.

The following items are available:

- City: Selects your destination city.
 - ≥ Selecting a City P. 60
- Street: Selects your destination street.
 - ≥ Selecting a Street P. 61
- Change State: Selects the state or province.
 - **≥** Selecting the State or Province P. 59



■ Selecting the State or Province

DEST button ► Address ► Change State



- 1. Enter a state name.
 - Select **List** to display a list of states.



2. Select a state from the list.





Navigation

■ Selecting a City

§ DEST button ▶ Address ▶ City

The name of the city where you are currently located is displayed.



- **1.** Enter the name of a different city, or select **List** for the current city.
 - Select **List** to display a list of cities.



Non-detailed area mark: Try entering the street first and then select the city.

- **2.** Select your destination city from the list.
 - ➤ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list.
 - Next, you are prompted to enter a street name.
 - Selecting a Street P. 61

Selecting a City by Name

Vehicle position may not be displayed when:

- The automobile is traveling off-road.
- The vehicle position data cannot be updated.

You do not need to enter spaces or symbols (e.g., &, -, %). Partial matches are supported (e.g., "ANGELES" to find "LOS ANGELES").

Using Voice Command (English only)

Say [6] "City" on the Find address by screen, and the following screen is displayed:



Say © "Current City" to select your current location, or say the name of a different city.

Selecting a Street P. 61

If your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

(Inde

Index

Home

■ Selecting a Street





 
- **1.** Enter the name of your destination street.
 - ▶ Do not enter the street type (e.g., street, road, avenue) or direction (e.g., north, south, east, west).
 - ► Select **List** to display a list of streets
- **2.** Select your destination street from the list.
 - ➤ A list of matching hits is automatically displayed after you enter several letters, with the closest match at the top of the list.

Selecting a Street

When entering the names of major freeways, you can use the following abbreviations. For interstates, use an "I" (e.g., I-10). For U.S. freeways, use "US" (e.g., US-18). For state freeways, use the two-character state designation (e.g., CA-101). For county roads, use the appropriate designation (e.g., G-2).

Using Voice Command (English only)

Say [6] "Street" on the Find address by screen, and the following screen is displayed:



- Say the name of your destination street, and say the street number as a string of individual numbers.
- Set the route to your destination.
 - Calculating the Route P. 77


贬

index

....



- 3. Enter the street number. Select OK.
 - Only valid street numbers can be entered.
- **4.** Set the route to your destination.
 - **≥** Calculating the Route P. 77

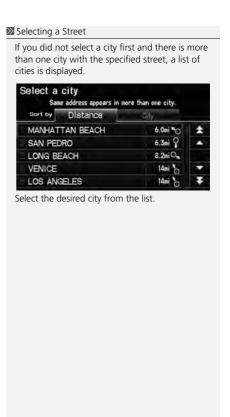

WE.

Index

Address Book

8 DEST button ▶ Address Book

Select an address stored in your address book to use as the destination.



1. Select your user name.



- **2.** Select your destination from the list.
- **3.** Set the route to your destination.
 - **► Calculating the Route** P. 77
 - ➤ Select ◀ or ► to display only the entries in a category: ALL, BUSINESS, PERSONAL, or other categories you have created.
 - Selecting an Address Book Category P. 33

Address Book

If you have PIN-protected your address book, enter your PIN when prompted. Select **OK**. PINs are optional.

PIN Numbers P. 36

You can select **New Address** on the Select an address screen to add an entry to the address book.

Adding an Address Book Entry P. 31

To switch the list between User 1 or User 2, select the user name on the top right of the screen.

(n\lambda



--

Navigation

Previous Destinations

8 DEST button ▶ Previous Destinations

Select an address from a list of your 50 most recent destinations to use as the destination. The list is displayed with the most recent destination at the top.



- 1. Select a destination from the list.
- **2.** Set the route to your destination.
 - **Calculating the Route** P. 77

▶ Previous Destinations

If **Previous Destinations** is grayed out, there are no previous destinations entered.

Your home addresses and addresses stored in your address book are not added to the list of previous destinations.

You can delete unwanted previous destinations from the list.

▶ Previous Destinations P. 38

w£

Index

Hom

Place Name

⁸ DEST button ▶ Place Name

Enter the name of a place (e.g., business, hotel, restaurant) stored in the map database to use as the destination



- 1. Enter a place name.
- **2.** Select **List** to display a list of matching hits.



- **3.** Select a place name from the list.
 - ▶ If the place name is in multiple categories, the categories are displayed when you select it.
 - Place Name in Multiple Categories P. 66
- **4.** Set the route to your destination.
 - **≥** Calculating the Route P. 77

Place Name

This option is convenient if you know the exact name of a place.

Select **More** to enter symbols and accented letters, select **Space** to enter a space character, or select **Delete** to remove the last character.

Once a name is entered and selected, select SORT BY Name or SORT BY Distance.
Matching letters are in yellow.

wE*





тос

■ Place Name in Multiple Categories

If the place name is in multiple categories in the map database, the following screen is displayed.

 


1. Select a place name.



- 2. Select a subcategory.
- **3.** Set the route to your destination.





Select **SORT BY Name** or **SORT BY Distance**. Matching letters are in yellow.



Index

Place Category

DEST button ► Place Category

Select the category of a place (e.g., Banking, Lodging, Restaurant) stored in the map database to search for the destination.



1. Select a category.



- 2. Select a subcategory.
 - ➤ Select ◀ or ▶ to change the main category.
 - List of Categories P. 199

Place Category

This option is convenient if you do not know the exact name of a place or if you want to narrow down the number of matches returned for places with a common name.

You can store up to 30 favorite subcategories. Select **Fav. Subcategory** to access your favorites.

Favorite Subcategories P. 69

Advanced helps you to search the subcategory. When you enter a keyword and select List, the list of appropriate subcategories is displayed.

(1)

Index

Navigation



3. Select an item.

The following items are available:

- Place Name: Searches for a place in the subcategory by name. Enter a city name when prompted.
- Sort by Distance to Travel: Displays all the places in the subcategory sorted by distance from your current location. The closest place is displayed at the top.
- City Vicinity: Searches for a place in the subcategory within a 20-mile radius of a specific city. Enter a city name and then a place name when prompted. Only the first 1,000 matching places/landmarks are displayed.
- Search by Keyword: Searches for a place by keyword when you do not know the
 exact category. Select Sort by Distance to Travel for locations near your current
 location, or select City Vicinity for locations in a specific city. Enter a keyword
 when prompted. Select List to view a list of possible locations if one is not found
 automatically.



Sort by Distance to Travel

For locations sorted by distance to travel, you can select **More** to increase the scope of the search. The number of locations increases to 100, 200, and up to 1000. When the number of locations is 100 or less, you can increase the scope to 500 miles, 1000 miles, or all of U.S.



WE.

Index



- **4.** Select a place name from the list.
- **5.** Set the route to your destination. **Calculating the Route** P. 77

The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown for the highlighted place.

■ Favorite Subcategories

↑ DEST button ► Place Category ► Fav. Subcategory
 Store up to 30 favorite subcategories.



 
w£



■ To store a subcategory in favorites:



- **1.** Select a category on the Category screen.
- 2. Select Add to Fav. Subcategory.



3. Select the favorite subcategories to add. Select **OK**.



Stored categories

A subcategory stored in **Fav. Subcategory** has a star at the end of the line.




Index

Home

■ To delete a subcategory from favorites:



1. Select **Delete** on the Favorite Subcategory screen.

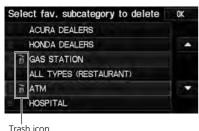

- **2.** Select the subcategories to delete.
 - ► Repeat the procedure as necessary.
 - ltems to be deleted are indicated with a trash icon.
- 3. Select OK.

Deleting categories

You can also delete a favorite subcategory on any Subcategory screen. Select ▲ or ▼ to select a favorite subcategory (which has a star at the end of line) and select **Delete from Fav.** Subcategory.





Place Phone Number

B DEST button ► DEST Menu 2 ► Place Phone Number

Select a destination by phone number. Only phone numbers in the database are recognized.



- **1.** Enter the area code and phone number. Select **OK**.
- **2.** Set the route to your destination.
 - **≥** Calculating the Route P. 77

All 10 digits must be entered.

Phone numbers of private residences entered in your address book are not stored in the database and thus cannot be used to search for a destination.

A list is displayed if there are multiple locations in the database with the same phone number. Select a place from the list.

WE.

Index

Coordinate

8 DEST button ▶ **DEST Menu 2** ▶ **Coordinate**

Specify a location using latitude and longitude map coordinates.



- 1. Enter the latitude. Select OK.
- 2. Enter the longitude. Select OK.



Calculate route to

1234 MAIN ST
ANYPLACE, CA

4,5 ml +0
Destination Map

Ano Address Book
My Dest, Route Pref.
Set as Dest,

- **3.** Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press the ENTER button.
 - ► If the address is not the desired location, scroll to another location and try again.
- 5. Select Set as Dest.

Coordinate

Latitude and longitude must be entered up to the seconds' value.

A yellow box (shown at scales above 1/4 mile) denotes the area that can be viewed when you press the ENTER button on the current map.

Information icons are displayed at scales from 1 mile to 1/4 mile. Place/landmark icons are displayed at 1/8 mile or less. Roads are displayed at 1/4 mile or less.

If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.

(n/2°



Intersection

B DEST button ▶ **DEST Menu 2** ▶ **Intersection**

Select the intersection of two streets as the destination. The state or province for your current location is displayed at the top of the screen (e.g., California).



- **1.** Select the intersection search method.
- **2.** Set the route to your destination.
 - **⊇** Calculating the Route P. 77

The following items are available:

- City: Selects the city where the intersection is located. You are prompted to enter the name of the two intersecting streets.
 - Selecting a City P. 60
- Street: Selects the two intersecting streets. The city or cities that the streets are located in are displayed.
 - ≥ Selecting a Street P. 61
- Change State: Selects the state or province.
 - **Selecting the State or Province** P. 59

It is usually easier to select **Street** to find the streets first. The city or cities that the streets are in will be displayed. If you select **City** and your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.

If the intersection is outside the state you are currently in, select **Change State**.

Selecting the State or Province P. 59

If there is more than one intersection, you are prompted to select the intersection. If the two streets that you have selected do not intersect, no intersection is entered.



Index

Map Input

B DEST button ▶ DEST Menu 2 ▶ Map Input

Use the joystick to manually select an icon or a location on the map screen as the destination

You are prompted to define the map area to display.



1. Select an item.

The following items are available:

- Current Position: Your current location is centered on the map.
- City: You are prompted to select the city.

 ➤ Selecting a City P. 60
- State: You are prompted to select the state.
 - **Selecting the State or Province** P. 59

(n\langle

Index





- Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press the ENTER button.
 - ► If the address is not the desired location, scroll the map to another location and try again.
- 3. Press the ENTER button again to display the route calculation menu.

 Calculating the Route P. 77
- 4. Select Set as Dest.

Map Input

A yellow box (shown at scales above 1/4 mile) denotes the area that can be viewed when you press the ENTER button on the current map.

Information icons are displayed at scales from 1 mile to 1/4 mile. Place/landmark icons are displayed at 1/8 mile or less. Roads are displayed at 1/4 mile or less.

If you select multiple icons within the cursor radius, you are prompted to select one of the items from a list.

Selecting a Destination on the Map P. 109

(n\ge^2

Index

The current route preferences are displayed as icons on the top right of the Calculate Route screen. The straight line distance (as the crow flies, not driving distance) and direction to the destination are shown

You cannot use voice commands while the system is calculating the route.

Add to Address Book

○ Calculating the Route

You can add the destination address to the address book.

Adding an Address Book Entry P. 31

Add to My Dest.

You can add the address to the destination list. Editing My Destination P. 107

Call

You can place a telephone call to the destination phone number.

Bluetooth® HandsFreeLink® P. 144

This section describes how to calculate your route.



- 1. Select Set as Dest.
 - ► The system calculates and displays the route line on the map screen.
 - Route Line P. 82

The following items are available:

- Route Pref.: Changes the route preferences (calculating method). Changing the Route Preference P. 78
- View Routes: Displays three different routes. **≥ Viewing the Routes** P. 78
- **Destination Map**: Displays a map of the destination.
 - **► Calculating the Route on the Destination Map** P. 79



- 2. Follow the route guidance to your destination.
 - Driving to Your Destination P. 80
 - ► The system provides you with pop-up messages if your route passes through unverified areas, avoid areas, or areas with traffic restrictions.

Changing the Route Preference

Change the route preference by selecting minimum or maximum driving methods.



- **1.** Select MIN or MAX for each item.
- 2. Select OK

Viewing the Routes

View three different routes to your destination.



- 1. Select a route on the list
 - ➤ The travel distance and estimated travel time is displayed for each route.
 - ➤ The system calculates and displays the route line on the map screen.
 - Route Line P. 82
- 2. Select OK.

∑ Changing the Route Preference

The calculated route may not be the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- Shortcuts through residential areas are avoided.
- Right turns are favored over left turns or Uturns.
- Time-restricted turns (turns prohibited at certain times of the day) are not used.

∑ Viewing the Routes

It is not unusual for some calculated route options to be identical.







Calculating the Route on the Destination Map

Calculate the route from the map of the destination address.



Select Calculate the Route.

- ► The system calculates and displays the route line on the map screen.
 - Route Line P. 82

☑ Calculating the Route on the Destination Map

"Display Destination Map" (when en route)

w£

Index



This section describes how to follow the route guidance to your destination, receive traffic information, and choose the icons displayed on the map screen.

Viewing the Route

■ Map Screen



After calculating the route to your destination, the route is displayed on the map screen.

► Map Screen Legend P. 7

As you drive, the system tracks your position on the map in real time and provides guidance as you approach each guidance point on the route.

必 "Display Map"

You can change the map scale using voice control commands (e.g., say x "Display 2 mile scale").

▶ Map Scale Commands P. 191

You can also change the map scale by using the ZOOM button.

You can control the icons displayed on the map screen using voice control commands (e.g., say "S" "Display post office").

► Map Display Commands P. 190

You can obtain information about the route using voice control commands (e.g., say 1/4) "How long to the destination?").

Route Commands P. 192

You can display the next guidance point on the map screen by saying [62] "Display Map Guide" (when en route).

If you scroll the map while en route, the time and distance to destination indicators are replaced with an indicator showing distance from the current vehicle position.

The map screen can be viewed in single-screen or split-screen mode.

Guidance Mode P. 90 **Guidance Mode** P. 90

mE*

Index

Home

■ Guidance Screen

The guidance screen offers an alternative way to view your route.



- ► In single-screen mode, press the MAP/GUIDE button to switch between the map and guidance screens.
- ▶ In split-screen mode, press the MAP/GUIDE button to switch between the next guidance direction and a list of guidance directions.

■ Guidance Screen

A visual guide helps you check the guidance screen.

Guidance Screen P 8

Turn-by-Turn Directions

The next guidance point appears on the multiinformation display.


Turn-by-Turn Directions P. 8



You can turn this feature on or off using the multi-information display. See the Owner's Manual for instructions

■ Route Line

When driving on verified streets, the route line is light blue. The route line display changes when driving on unverified streets:

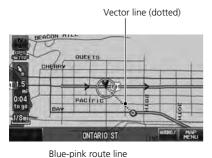

W BAY AVE

900 Ft Oft 500

1000

27TH ST

► If Unverified Area Routing is Off, the route line uses verified streets only (when possible). A dotted "vector line" pointing directly towards your destination is also displayed.

▶ If Unverified Area Routing is On, the route line changes to a dashed blue-pink line to indicate that the route line uses unverified streets.

■ Route Line

You can set **Unverified Area Routing** to **Off** to follow your own route to the destination. If **Unverified Area Routing** is **On**, be aware that unverified streets may not be displayed accurately.

→ Unverified Area Routing P. 41

You can always view the entire route by simply saying [6] "Display entire route."

The route line may also consist of red or orange segments when your route line displays traffic information.

Map Screen Legend P. 7

FM Traffic P. 99

w£

0:01 | FIC togo

VOICE I

Index

■ Deviating From the Planned Route

If you leave the calculated route, the system automatically recalculates a route to the desired destination based on your current location and direction.

Rerouting P. 40



■ Driving Off-road

If you leave all mapped (digitized) roads, the system automatically starts displaying a series of dots (breadcrumbs) to track the path you are taking. If needed, you can follow the dots back to the mapped road you originally left.

Off-road Tracking P. 50



Deviating From the Planned Route

If **Rerouting** is set to **Manual** and you go off route, the system waits for you to manually initiate recalculation. Select **Recalc.**

Rerouting P. 40

Driving Off-road

A message "Not on a digitized road" may appear when you drive half a mile away from a mapped road.

Breadcrumbs may occasionally be displayed in urban areas, such as large parking lots in shopping malls, in new subdivisions where the roads are not yet in the database, or in areas where a GPS signal is unavailable, such as in a parking garage.

Off-road tracking breadcrumbs are limited to approximately 150 miles. Breadcrumbs at the beginning of the trail are deleted if you exceed that distance.

Breadcrumbs are displayed only at 1/20, 1/8, 1/4, and 1/2 mile map scales.

Index

Hom

Listening to Voice Guidance

VOICE (on map)

As you approach each guidance point, a pop-up window is displayed on the map screen with instructions for you to follow. Voice guidance for each guidance point is also provided.

Typically, you hear three prompts:

- 1/2 mile from the guidance point
- 1/4 mile from the guidance point
- Just before the guidance point

To replay voice guidance, select **VOICE** on the map screen.

If you select **VOICE** between guidance points, voice guidance for the next guidance point is provided.

∑ Listening to Voice Guidance

"Voice" (on the map screen)

You can turn voice guidance off if you prefer.

Display and Volume Settings P. 21

When driving in unverified areas, the phrase "if possible" is inserted before each voice guidance prompt.

VOICE on the map screen may be grayed out if the vehicle is approaching or in an unverified area.

The timing of voice guidance varies depending on the type of road you are on and the distance to the next guidance point.

WE.

Index

Displaying Map Menu

Use the Map Menu to control the icons displayed on the screen and to display traffic information. You can also use the Map Menu to find locations or to cancel the route.



- **1.** On the map screen, select MAP MENU (if displayed).
 - ► The Map Menu is displayed on the map screen.



2. Select an item.

The following items are available:

- Cancel Route: Cancels your current route.
 Canceling the Route P. 102
- Show Icon on Map: Selects the icons to display on the map.

 → Showing Icons on the Map P. 92
- Traffic Incidents: Displays a list of the traffic incidents around your current location or on your current route.

FM Traffic P. 99

Map Menu

If you scroll the map while en route, press the MAP/GUIDE (or CANCEL/BACK) button to return to the current position map screen, then select MAP MENU.

Traffic Incidents

You must be in or near a traffic-enabled city to receive coverage for that area. FM Traffic is available in the lower 48 states and Hawaii.

The incident icons are displayed on the 5 mile (8 km) or less map scale.

▶ Map Scale and Functions P. 95

w.E

• Map Legend: Displays an overview of the map features.

Map Legend P. 94

• Guidance Menu: Allows you to set or confirm the guidance points and freeway exits for your route.

⊇ Guidance Menu P. 87

• Find Nearest...: Allows you to find the nearest place/landmark (e.g., nearest gas station) by specifying a category. You can then add the location to the list of destinations, set as a waypoint, or set as your destination.

⊇ Changing Your Destination P. 108

• Exit Info: Displays a list of the freeway exits.

→ Freeway Exit Information P. 89

(n/s

Index

Guidance Menu

MAP MENU (on map) ► Guidance Menu

Display the guidance points and freeway exits for your route, and set the display mode for the map and guidance screens.



Select an item.

The following items are available:

• **Directions**: Displays a list of the guidance points.

Directions P. 88

• Guidance Mode: Selects the guidance display mode.

B Guidance Mode P. 90

(u\Z

Index

.....

Directions

MAP MENU (on map) ► Guidance Menu ► Directions

Display a list of the guidance points on your route for your confirmation.



Select \blacktriangle or \blacktriangledown to scroll through the list.

► Press the MAP/GUIDE button to return to the map screen.

Directions

Guidance points with exit information are indicated by a (freeway exit information) icon. Select Exit Information to display the exit information.

▶ Freeway Exit Information P. 89

The route guidance information is automatically deleted when you reach your destination.

uE*

Index

■Freeway Exit Information

% MAP MENU (on map) ▶ Exit Info.

Display a list of the freeway exits for the route. You can view freeway exit information (whether the exit is near gas stations, restaurants, ATMs, etc.) and add new destinations or waypoints to the calculated route.



1. Select an exit from the list.



- 2. Select a list item.
 - ► Select or to display information for different exits.
 - ► The location is displayed on the Calculate Route screen.
 - **B** Calculating the Route P. 77

▼ Freeway Exit Information

"Display Freeway Exit Information"

You can scroll the map and select a ① (freeway exit information) icon on the map screen to display the freeway exit information. The ① icon is only displayed if there is exit information available.

Icons are displayed only at 1/4, 1/2, or 1 mile scale.

Showing Icons on the Map P. 92

The route guidance information is automatically deleted when you reach your destination.

 
(1)

muex

■ Guidance Mode

MAP MENU (on map) ► Guidance Menu ► Guidance Mode


Select the display mode during route guidance: single-screen mode (default) or split-screen mode



Select an option.

The following options are available:

• Single Screen: Displays the map and guidance screens on separate screens.

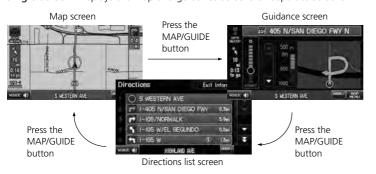

■ Guidance Mode

The guidance mode can also be selected from the System Setup menu.

Routing & Guidance P. 39


اللخ

Index

Home

91

• Split Screen: Displays the map and guidance information simultaneously on the map screen.

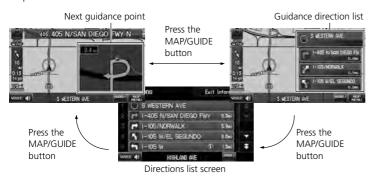

■ Guidance Mode

Next guidance point

The next guidance point (the pop-up window) is displayed on the map screen as you approach a guidance point in the single-screen mode.

The next guidance point is also displayed on the multi-information display.

Turn-by-Turn Directions P. 8

Showing Icons on the Map

% MAP MENU (on map) ► Show Icon on Map

The icon bar along the bottom of the screen allows you to select the icons that are displayed on the map.



Select an icon in the icon bar.

- Selecting toggles the icon display on or off.
- ▶ Repeat the procedure as necessary.

The following options are available:

- Icon check boxes: Displays or hides the traffic and landmark icons.
 - **► Map Screen Legend** P. 7
 - FM Traffic P. 99
- ALL OFF: Hides all icons.
- Icon Options: Fine-tunes the icon display.
 - Fine-tuning the Icons P. 93

Showing Icons on the Map

You can display or hide the icons using voice commands on the map screen (e.g., say Esplay hospital").

▶ Map Display Commands P. 190



Index

■Fine-tuning the Icons

§ MAP MENU (on map) ► Show Icon on Map ► Icon Options

Icons in some categories can be fine-tuned to display or hide.



1. Select an icon category from the list (e.g., **Other Icons**).



- **2.** Select the icons to display on the map.
 - Selecting toggles the icon display on or off.
 - Repeat the procedure as necessary.
- 3. Select OK.

∑ Fine-tuning the Icons

To display the "Other Icons," be sure to turn on **OTHER ICON** in the icon bar.





Map Legend

§ MAP MENU (on map) ► Map Legend

See an overview of the map lines, areas, routes, traffic information, and navigation icons.



Select an item.

► The system displays the map legend.

Map Legend

A visual guide helps you see the map legend.

▶ Map Screen Legend P. 7

FM Traffic P. 99

(hE

Index

Home

■ Map Scale and Functions

The functions that are available from the map screen depend on the map scale.

	page	Map Scale (top: mile, bottom: metric)											
Function		1/20	1/8	1/4	1/2	1	2	5	15	50	150	350	1000
		80	200	400	800	1.6	3	8	24	80	240	560	1600
Icon display													
Landmark icon	7	~	~										
Exit info.	7			~	~	~							
One-way traffic	7	~											
Waypoint "flag"	8	~	~	~	~	•	~	~	~	~	~	~	•
Traffic incident	7	~	'	~	~	~	'	~					
Map orientation													
Heading-up	97	~	~	~	~	~							
North-up	97	~	V	~	~	~	~	~	~	~	~	~	~
Others													
Off-road tracking dots	83	~	~	~	~								
Unverified road	7	~	~	~									
Map features	7	~	'	~	~	~	'	~	~	'	~	'	
Avoid areas	43	~	'	~									
Traffic speed	7	~	~	~	~	~	~	~					

≥ Map Scale & Functions

You can change the map scale using voice commands on the map screen (e.g., say 12 "Display 2 mile scale").

► Map Scale Commands P. 191

You can change between miles or kilometers.

Basic Settings P. 23

w£



.....

vavigation

■ Map Icons and Functions

Display or hide all icons on the map screen, with the exception of Honda/Acura Dealer icons which are always shown.

■ Landmark icon

Туре	lcon display control	lcon selectable	lcon searchable	
Honda/Acura dealer	Always on	Yes	Yes	
Hospital	Yes	Yes	Yes	
School	Yes	Yes	Yes	
ATM	Yes	Yes	Yes	
Gas station	Yes	Yes	Yes	
Restaurants	Yes	Yes	Yes	
Post office	Yes	Yes	Yes	
Grocery store	Yes	Yes	Yes	
Hotel/Lodging	Yes	Yes	Yes	
Police station	No icon	No	Yes	
Shopping, Tourist attraction, Bank	No icon	No	Yes	
Parking garage	Yes	Yes	Yes	
Parking lot	Yes	Yes	Yes	
Freeway exit info.	Yes	Yes	No	

Map Icons & Functions

You can display or hide the icons using voice commands on the map screen (e.g., say 1/2) say hospital").

Map Display Commands P. 190 ■

Some icons, like police stations, are not shown, but you can still locate the nearest one with the Find Nearest voice command (e.g., say ** "Find nearest police station").

Find Place Commands P. 191

Icon display control

Icons that can be displayed or hidden.

Icon selectable

Icons that can be selected as a destination using the joystick.

Icon searchable

Icons that can be searched using the Find Nearest voice command.

(11/2

Index


Home

■ Traffic icon

Туре	Icon display control	lcon selectable	lcon searchable	
Traffic speed	Yes	No	No	
Traffic incident	Yes	No	Yes	

■ Map Orientation

 Select the map orientation icon to change the map orientation.



North-up: Displays the map with North always pointing up.

▼ Traffic Incident

When you use the joystick to position the cursor (round red circle) over the traffic incident icon, you can view the summary of the incident.

When you press the ENTER button to select the traffic incident icon, you can view a pop-up message describing the incident in detail.

Map Orientation

"Display Heading-up" (from map screen), 配 "Display North-up" (from map screen)

The red arrow in the symbol always points North. On scales greater than 1 mile, North-up mode is always used.

so that the direction you are traveling is always pointing up.

■ Current Location

Display and save your current location for future use as a destination. The address, latitude, longitude, and elevation of your current location are displayed.

■ To save your current location in the address book:



1. Select the vehicle icon on the map.



- 2. Select Save.
- **3.** Edit the name, phone number, and category.
 - Address Book P. 30
- 4. Select OK.

Current Location

"Display Current Location" (on map screen)

You can also save the current location by saying **Register the Current Location**.

If you have PIN-protected your address book, enter your PIN when prompted. Select **OK**. PINs are optional.

PIN Numbers P. 36

The elevation is not displayed if the system is receiving insufficient GPS information. When elevation is displayed, it may differ with roadside elevation signs by ±100 feet or more.

Saving your current location does not change or cancel your current route.

wE*

Index

FM Traffic

Accident

1-405 S at ANYPLACE.

TORRANC

§ MAP MENU (on map) ► Traffic Incidents

View and avoid specific incidents and/or congestion on your route:

2.7mi

Traffic Detail

CARSON

KEYSTON



- 1. Select On Route.
- 2. Select an incident from the list
 - ► The system displays the map screen and the incident location.
- 3. Select Traffic Detail



FM Traffic

You must be in or near a traffic-enabled city to receive coverage for that area. FM Traffic is available in the lower 48 states and Hawaii.

Automatic traffic rerouting may not provide a detour route depending on circumstances.

"Display traffic incidents", 底 "Display traffic list"

You can also display the traffic incidents from the INFO screen

You can display traffic incidents and related information on the map screen using voice commands.

Map Display Commands P. 190





QRG

Navigation





4. Select Avoid.

▶ Repeat step 2 to 4 as necessary.

5. Select Reroute

➤ The system recalculates a detour route that avoids the traffic incidents.

FM Traffic

You can choose to avoid up to 10 traffic incidents. It is not always possible for the system to calculate a route that avoids all traffic incidents or specific traffic incidents you select.

The "On Route" tab on the Traffic List screen is only available during route guidance.

You cannot select an incident to avoid from the "All" tab.

You can also detour around a traffic incident manually if you encounter an unexpected obstacle.

Taking a Detour P. 102

mE.

Index

Hom

R DEST button (when en route)

This section describes how to alter your route, add an interim "waypoint" (pit stop), choose a different destination, cancel your current destination, and continue your trip after stopping.



Select an item

The following items are available:

- Cancel Route: Cancels the route guidance.
 - **⊇** Canceling the Route P. 102
- Detour: Calculates a detour route.
 - Taking a Detour P. 102
- Avoid Streets: Avoids streets along your route.
 Avoiding Streets P. 102
- Change Route Pref.: Changes the route preferences (calculating method).
 Changing the Route Preference P. 78
- Waypoint: Sets waypoints along your route.
 Adding Waypoints from the Route Menu P. 104
- My Destination: Shows a list of waypoints. You can delete waypoints or edit the order of them.
 - **Editing My Destination** P. 107

○ Changing Your Route

(when en route) "Display Navigation"

If you press the DEST button when not en route, the Destination Menu screen is displayed.

B Entering a Destination P. 56

(list

Index

Canceling the Route

§ DEST button (when en route) ▶ Cancel Route

Cancel the route guidance and remove the destination and all waypoints from the destination list. The system then returns to the map screen.

Taking a Detour

B DEST button (when en route) ▶ **Detour**

Calculate a detour route manually. The system attempts to calculate a new route by avoiding the next 5 miles (while on a freeway) or 1 mile (while on a surface street).

Avoiding Streets

DEST button (when en route) ► Avoid Streets

Select a street or streets along your route to avoid.



- 1. Select the street you want to avoid.
 - Repeat the procedure to avoid other streets.
 - Streets to be avoided are indicated with a trash icon.

○ Canceling the Route

You can also cancel your route from the Map Menu.

Map Menu P. 85

∑ Taking a Detour

The detour option is convenient if you encounter an unexpected obstacle such as a road closure or extremely heavy traffic congestion.

Avoiding Streets

Avoiding certain streets is convenient if you know of road construction, road closures, or excessive traffic along the route.

You cannot choose specific streets you want to use, only those to avoid. However, you can select intersections or waypoints (places/landmarks) that the system will use in your route.

Adding Waypoints P. 103

You can store up to 10 streets to avoid. You cannot avoid your current street or the streets of your waypoint(s) or destination (system beeps if selected).



Index



2. Select OK.

► The system calculates a new route.

Adding Waypoints

Add up to four waypoints (pit stops) along the route to your destination.



Waypoints are displayed on the map screen as small, numbered red flags. The route follows the waypoints in the order they are listed in the destination list.

Adding Waypoints

Waypoints allow you to stop for gas or food, for example, and then continue on to your destination.

Press the MAP/GUIDE button to return to the map screen without adding a waypoint at any time.

The search corridor used for adding waypoints can be adjusted.

Edit Waypoint Search Area P. 45

You can delete waypoints or edit the order of waypoints in the destination list.

Editing My Destination P. 107

(n/ž



■ Adding Waypoints from the Route Menu

B DEST button (when en route) ► Waypoint



1. Select a search method to add a waypoint.

The following items are available:

- Places Along the Route: Searches within a "corridor" on either side of the route.
- Places Around the Destination: Searches in a spiral pattern around the destination
- Places Around the Waypoint: Searches in a spiral pattern around the location you select.



2. Select the location when you select Places Around the Waypoint.











- **3.** Select a waypoint category (e.g., Auto Service).
- **4.** Select a waypoint subcategory (e.g., **GAS STATION**).



- **5.** Select a place.
 - ► The waypoint is added to the destination list.
 - ► The route is automatically recalculated and displayed on the map screen.

(n\lambda

Index

. . . -

■ Adding Waypoints from the Calculate Route Screen



- 1. Select a new address or location.
- 2. Select ADD TO My Dest.



3. Select ▲ or ▼ to select a location in the destination list. Select **OK**.



- 4. Select OK.
 - ► The route is automatically recalculated and displayed on the map screen.



Index

Home

Editing My Destination

⁸ DEST button (when en route) ▶ My Destination

Delete or edit the order of waypoints.



- 1. Select Edit.
 - ► Select Map to display the destination and waypoints on the map screen.



- 2. Select an item
- 3. Select OK
 - ► The route is automatically recalculated and displayed on the map screen.

The following items are available:

- Delete: Select a list item to delete
- Edit Order: Select a list item to move, select ▲ or ▼ to select a new location.

There are several methods you can use to change the route destination.

Find Nearest Place

8 MAP MENU (on map) ► Find Nearest...

Search for the nearest place/landmark on the map screen and set it as your destination.



- 1. Select Find Nearest....
- 2. Select a category type.
- 3. Select a subcategory.
- 4. Select a place.
- 5. Select Set as Dest.
- **6.** Select an item to set the place as a destination or add to the destination list
 - ▶ The system calculates the route. Calculating the Route P. 77

▼ Find Nearest Place

"Find Nearest..." (on map screen)

 
The Find Nearest voice command is the fastest method of specifying a place/landmark as your destination. Many kinds of places can be found. Find Place Commands P. 191

Selecting a Destination on the Map


If there is more than one icon or street under the

Selecting a Destination on the Map

Select a new destination when en route by selecting a location on the map.



 - Scroll the map to position the cursor over your desired destination, adjusting the map scale as necessary. Press the ENTER button.
 If the address displayed is not
 - ► If the address displayed is not the desired location, press the CANCEL/BACK button and repeat the procedure.
- 2. Press the ENTER button again.
- 3. Select a place.
- 4. Select Set as Dest.Calculating the Route P. 77



- Select an item
- If you select **Map Icon**, select a place.





Index

109

Continued



- 5. Select an option.
 - ➤ The route is automatically recalculated and displayed on the map screen.

The following options are available:

- Set as New Destination: Sets the location as your new destination.
- Add to My Destination: Sets the location as a new waypoint.

Entering a New Destination

note that the Boltzmann of the Boltzman

Enter a new destination using the Destination Menu screen even when you are en route.



- **1.** Select a method to enter a new destination.
- **Entering a Destination** P. 56
 - ► After entering a new destination, the address is displayed on the Calculate Route screen.
- 2. Select Set as Dest.

呕 "Display Menu", 岖 "Display Navigation"

(less

....

Home



- 3. Select an option.
 - ➤ The route is automatically recalculated and displayed on the map screen.

The following options are available:

 
- Set as New Destination: Sets the location as your new destination.
- Add to My Destination: Sets the location as a new waypoint.

тос

Navigation

Stop your vehicle en route (e.g., to rest, stop for gas, etc.), and then continue on your route.

If you did not complete your route, the Continue Trip screen is displayed when you restart your vehicle.



Select Set as Dest.

You can continue on the same route.

- Route Pref.: Changes the route preferences (calculating method).
 Changing the Route Preference P. 78
- View Routes: Displays three different routes.

 Viewing the Routes P. 78
- Destination Map: Display a map of the destination.
 Calculating the Route on the Destination Map P. 79

Resuming Your Trip

The Continue Trip screen has the same options as when you calculate a route.

≥ Calculating the Route P. 77

To cancel your destination, press the CANCEL/ BACK button.

Add to Address Book

You can add the destination address to the address book.

► Adding an Address Book Entry P. 31

Add to My Dest.

You can add the address to the destination list.

Editing My Destination P. 107

Call

You can place a phone call to the destination phone number.

Bluetooth® HandsFreeLink® P. 144



Index

Home

This section describes how to operate the audio system. You can play music from a wide array of media sources, and control the audio system using the audio buttons, the touch screen, or voice control.

Audio System	1.14
About Your Audio System	114
Auxiliary Input Jack	114
System Theft Protection	11!
Playing FM/AM Radio	116
Selecting FM/AM Mode	116
Audio Screen Control	117
Audio Menu	118
Radio Data System (RDS)	119
Playing XM® Radio	12
Selecting XM Mode	12
Audio Screen Control	12
Audio Menu	12
XM® Radio Service	124

Playing a Disc	125
Selecting Disc Mode	125
Audio Screen Control	126
Playing MP3/WMA/AAC Discs	127
Recommended Discs	128
Playing an iPod®	129
Selecting iPod® Mode	130
Audio Screen Control	131
Searching for Music	132
Playing a USB Flash Drive	133
Selecting USB Mode	134
Audio Screen Control	135
Playing Tracks in Folders	136

Playing Bluetooth® Audio	137
Selecting Bluetooth® Audio Mode	137
Switching to HFL Mode	138
Audio Screen Control	139
Adjusting the Sound	140
Audio Remote Controls	141
Steering Wheel Controls	141
3	



About Your Audio System

The audio system features FM/AM radio and XM® Radio. It can also play audio discs, WMA/MP3/AAC tracks, iPods®, USB flash drives, and *Bluetooth*® devices.

The audio system is operable from the buttons and switches on the panel, or the remote controls on the steering wheel.

- Audio Remote Controls P. 141
- **National System** P. 6



Auxiliary Input Jack

Use the jack in the console compartment to connect standard audio devices.



1. Open the AUX cover.

- **2.** Connect a standard audio device to the input jack using a 1/8 inch/3.5 mm stereo miniplug.
 - ► The audio system automatically switches to the AUX mode.

Male About Your Audio System

XM® Radio is available on a subscription basis only.

XM® Radio Service P. 124

XM® Radio is available in the United States and Canada, except Hawaii, Alaska, and Puerto Rico.

XM is a registered trademark of Sirius XM® Radio, Inc.

Video CDs, DVDs, and 3-inch/8-cm mini discs are not supported.

Do not leave the iPod® or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.

iPod® is a registered trademark owned by Apple Inc.

You can operate the audio system by voice commands.

Audio Commands P. 193

Mack Auxiliary Input Jack

To switch the mode, press any of the other audio mode buttons. You can return to the AUX mode by pressing the AUX button.

(In Se

inaex

Home

System Theft Protection

The system is disabled when it is disconnected from the power source, such as when the battery is disconnected or goes dead.

■ Reactivating the system

- **1.** Turn the ignition switch to ON (II), and turn on the system.
 - ▶ If you turn the ignition switch to ACCESSORY (I), you will be requested to enter the security code. See step 3.
- 2. Press and hold the VOL (Volume/Power) button again for more than two seconds.
 - ► The system is reactivated when the system's control unit recognizes that the system is in your vehicle.
 - ▶ If the control unit fails to recognize, "ENTER CODE" appears on the navigation screen.
- **3.** Enter the security code. If you do not enter code correctly after 10 tries, leave the system for one hour before trying again, or visit a dealer to have the system reset.

System Theft Protection

Find the audio system's security code and serial number label in your Owner's Manual kit.

Do not store the label in your vehicle. If you lose the label, you must first retrieve the serial number, and then obtain the code from your dealer.

U.S. Only

You can register the security code at Owner Link (owners.honda.com.). To find information on how to retrieve the serial number and obtain the code, visit radio-navicode.honda.com.

Entering the Security Code P. 180

(1/2





Selecting FM/AM Mode





- 1. Press the FM/AM button.
 - Press the FM/AM button again, if necessary, to select the frequency band (FM1, FM2, AM).
 - ► The band and frequency are displayed.
- 2. Select AUDIO/STREET
 - ► The preset keys are displayed at the bottom of the screen.
- 3. Select the preset key.
 - ➤ You can also select a station using the SEEK/SKIP button.

▶ Playing FM/AM Radio

"Display audio screen"

You can control the radio using voice commands.

Radio Commands P. 193

A visual guide helps you operate the audio system.

- **≥** System Controls P. 4
- **Basic Operation** P. 6

The ST indicator comes on the display for stereo FM broadcasts. Stereo reproduction in AM is not available.

The radio can receive the complete AM and FM bands:

AM band: 530 to 1710 kHz FM band: 87.7 to 107.9 MHz

You can store six AM stations and 12 FM stations in the preset buttons. FM1 and FM2 let you store six stations each.




Index

Home

Audio Screen Control

R AUDIO button (in FM/AM mode)

Control the audio system through the navigation screen.

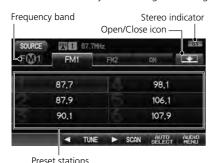

- 1. Select a frequency band (AM, FM1. or FM2).
- 2. Select a preset station.
 - Touch and hold a preset key until a beep sounds to store the current station in the key.

Audio Screen Control

The audio information is also displayed on the multi-information display. See your Owner's Manual for more information.

The A.SEL indicator comes on the display when AUTO SELECT is on. If you do not like the stations Auto Select has stored, you can change the frequencies stored in the preset buttons manually.

Audio

The following items are available:

- TUNE: Tunes the radio to the frequency you select. Select ◀ or ▶ to select a frequency.
- SCAN: Scans for stations with a strong signal in the current band and plays a 10-second sample. Select **Stop** to stop scanning and play the current selection.
- AUTO SELECT: Scans and automatically stores up to six AM stations and 12 FM stations with a strong signal in the preset buttons.
- AUDIO MENU: Sets the RDS options and sound preferences.
- **SOURCE**: Changes the source mode.
- Open/Close icon: Displays/hides the detailed information.

roc Audio

Audio Menu

§ AUDIO button (in FM/AM mode) ► AUDIO MENU



Select an item.

The following items are available:

- RDS search: Searches for programs by RDS category.
 Searching for Programs by RDS Category P. 119
- Radio Text: Displays the text information broadcast by the current RDS station.
 Radio Text Display P. 120
- RDS INFO: Sets whether to display the RDS Information on the screen.

 RDS Info Display P. 119
- SOUND: Displays the sound preferences screen.

 ▶ Adjusting the Sound P. 140



Index

Hom

Radio Data System (RDS)

Provides text data information related to your selected RDS-capable FM station.

■ RDS Info Display

When **RDS INFO** is set to ON, the name of the FM station is displayed. When set to OFF, the frequency of the station is displayed.

■ Searching for Programs by RDS Category

§ AUDIO button (in FM/AM mode) ► AUDIO MENU ► RDS search

Search for FM stations with a strong signal that broadcast the selected RDS category information



- **1.** Select a search method (**Seek up**, **Seek down**, **Scan**).
- **2.** Select a category.
 - Scanning for stations in that category begins. When an RDS station is found, it begins to play.
 - ► If there are no RDS-capable stations in the area, "NOTHING" briefly appears on the display.

RDS information is displayed on the audio screen, if available.

TOC

Audio

(hŽ





■ Radio Text Display

§ AUDIO button (in FM/AM mode) ► AUDIO MENU ► Radio Text Display the radio text information of the selected RDS station.



■ Radio Text Display

The RDS indicator comes on the display when the selected RDS station is broadcasting text data.

WE.

Index

Hom

Selecting XM Mode





- 1. Press the CD/XM button.
 - Press the CD/XM button again, if necessary, to select the channel band (XM1, XM2).
 - ► The band and channel are displayed.

2. Select AUDIO/STREET

- ► The preset keys are displayed at the bottom of the screen.
- 3. Select the preset key.
 - You can also select a station using the SEEK/SKIP button.

▶ Playing XM® Radio

"Display audio screen"

You can control the radio using voice commands.

Radio Commands P. 193

A visual guide helps you operate the audio system.

- **≥** System Controls P. 4
- **Basic Operation** P. 6

In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when XM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.

You can store 12 XM stations in the preset buttons. XM1 and XM2 let you store six stations each.

XM® Radio display messages will be displayed on the audio screen.

≥ XM® Radio Display Messages P. 124

(list

Home

121

2012 Civic Hybrid Navigation


Audio

TOC Audio

Audio Screen Control

AUDIO button (in XM mode)

Control the audio system through the navigation screen.

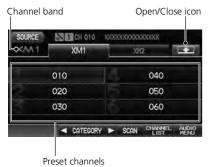

- Select the channel band (XM1, XM2).
- 2. Select a preset channel.
 - ➤ Touch and hold a preset key until a beep sounds to store the current channel in the key.

Mario Screen Control

The audio information is also displayed on the multi-information display. See your Owner's Manual for more information.

The following items are available:

- CATEGORY: Tunes to the channel you select. Select **■** or **▶** to select a channel.
- SCAN: Scans for channels by the scan mode (channel mode or category mode) selected in the Audio Menu.

Scan Channel: Scans for channels with a strong signal in the current band and plays a 10-second sample. Select Scan Channel to stop scanning and play the current selection.

CAL Scan Category: Scans for channels with a strong signal in the selected category in the current band and plays a 10-second sample. Select Scan Category to stop scanning and play the current selection.

 CHANNEL LIST: Displays the list of available channels. Scroll the list to select a channel.

(In E

Inde

Home

 AUDIO MENU: Sets the receiving mode (channel or category) and sound preferences.

Audio Menu P. 123

- SOURCE: Changes the source mode.
- Open/Close icon: Displays/hides the detailed information.

Audio Menu

8 AUDIO button (in XM mode) ► AUDIO MENU



Select an item.

The following items are available:

- MODE: Sets CH (channel mode) or CAT (category mode) scan mode.
- Sound: Displays the sound preferences screen.

 ▶ Adjusting the Sound P. 140

w£

index

XM® Radio Service

■ Subscribing to XM® Radio

- **1.** Retrieve your radio ID before registering for subscription.
 - ► To see the radio ID, press the ▼ (SEEK/SKIP) button to select "000" channel. You can also select "000" channel from CHANNEL LIST.
- 2. Have your radio ID and credit card number ready, and either call XM or visit the XM website to subscribe.

■ Receiving XM® Radio

Press the XM button and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

■XM® Radio Display Messages

Loading: XM is loading the audio or program information.

Channel Off Air: The channel is not currently broadcasting.

Channel Not Authorized: The encryption code is being updated. Channels 0 and 1 still work normally.

No Signal: The signal is too weak in the current location.

Channel Not Available: No such channel exists, the channel is not part of your subscription, or the artist or title information is not available.

Check Antenna: There is a problem with the XM antenna. Contact a dealer.

Subscribing to XM® Radio

Contact Information for XM® Radio:

U.S.: XM® Radio at *www.xmradio.com*, or (800) 852-9696

Canada: XM Canada at www.xmradio.ca, or (877) 209-0079

■ Receiving XM® Radio

The XM satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle
- In tunnels
- On the lower level of a multi-tiered road
- Large items are carried on the roof rack

uE

Inde

Home

Selecting Disc Mode



GPS STREET ВТН Audio control

- 1. Press the CD/XM button.
- 2. Insert a disc into the disc slot.
 - ► The disc automatically begins playing.
- 3. Select AUDIO/STREET
- **4.** Select or to select a track.
 - You can also select a track using the SEEK/SKIP button.
 - ► The track number and elapsed time are displayed on the display. Text information stored on MP3/WMA/AAC discs is also displayed.

Playing a Disc

"Display audio screen"

You can control the disc using voice commands.

Disc Commands P. 194

A visual guide helps you operate the audio system.

System Controls P. 4

Basic Operation P. 6

In some cases, the name of the artist, album, or track may not appear correctly.

Do not use discs with adhesive labels. The label can cause the disc to jam in the unit.

WMA tracks protected by digital rights management (DRM) cannot be played. The audio system displays Unplayable File, then skips to the next track.

If there is a problem, you may see an error message on the display.

Error Messages P. 174

If you eject the disc but do not remove it from the slot, the system reloads the disc automatically after several seconds

R AUDIO button (in DISC mode)

Audio Screen Control

Control the audio system through the navigation screen.



Select a track.

- ► Select the **Folder** tab to display the list of folders on MP3/WMA/AAC discs having a folder structure.
 - Playing MP3/ WMA/AAC Discs P. 127

Audio Screen Control

The audio information is also displayed on the multi-information display. See your Owner's Manual for more information.

■ Repeat and Random Play

To stop repeat- or random-play, select the current play mode button again.

The following items are available, depending on the type of disc:

• FOLDER: Select ◀ or ▶ to select a folder on MP3/WMA/AAC discs having a folder structure.

SCAN:

Scan Track: Scans all tracks on the disc (or in the selected folder) in the order they were recorded (stored) and plays a 10-second sample. Select Stop to stop scanning and play the current selection.

Scan Folder: Scans the first track in each folder on the disc and plays a 10second sample. Select **Stop** to stop scanning and play the current selection.

PLAY MODE:

Random All: Plays all tracks on the current disc in random order.

Random in Folder: Plays all tracks in the current folder in random order.

• Repeat 1 Track: Repeats the current track.

Repeat 1 Folder: Repeats all tracks in the current folder.


- SOUND: Displays the sound preferences screen.

 ▶ Adjusting the Sound P. 140
- **SOURCE**: Changes the source mode.
- Open/Close icon: Displays/hides the detailed information.

Playing MP3/WMA/AAC Discs

8 AUDIO button (in DISC mode) ▶ Folder

Change the folder on MP3/WMA/AAC discs that have tracks stored in a folder structure

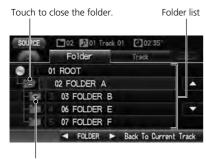

Touch to open the folder.

1. Select a folder.

- ► The system displays the track list.
- 2. Select a track.
 - ► The system begins playing the selected track.

Folder List

- Any tracks not in a folder are automatically added to a "ROOT" folder, which is displayed at the top of the Folder List.
- If the root folder has additional folders in a lower layer, they are listed on the screen.

Back to Current Track: Displays the current track at the top of the list.

(m\Z



Recommended Discs

- Use only high-quality CD-R or CD-RW discs labeled for audio use.
- Use only CD-R or CD-RW discs on which the recordings are closed.
- Play only standard round-shaped discs.

The disc packages or jackets should have one of these symbols.











■ Discs with MP3, WMA, or AAC Tracks

- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported. If an unsupported track is found, the audio unit displays Unsupported, and then skips to the next track.

■ Recommended Discs


A Dual-disc cannot play on this audio unit. If recorded under certain conditions, a CD-R or CD-RW may not play either.

uE

Index

Home

■Connecting an iPod®

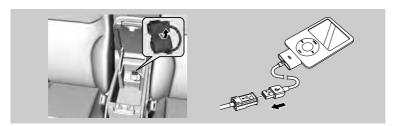

- **1.** Unclip the USB connector in the center console and loosen the adapter cable.
- **2.** Install the iPod® dock connector to the USB connector.

■ Model Compatibility

Mode	ı
------	---

iPod (5th generation)

iPod classic 80GB/160GB (launch in 2007)

iPod classic 120GB (launch in 2008)

iPod nano

iPod touch

○ Connecting an iPod®

- Do not use an extension cable with the USB adapter cable.
- Do not connect the iPod® using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

Your audio system may not work with all software versions of these devices.

If the audio system does not recognize the iPod®, try reconnecting it a few times or reboot the device.

(less





Audio

Selecting iPod® Mode



- **1.** Connect the iPod® to the USB adapter cable in the center console.
- **2.** Press the CD/XM button until you get to iPod® mode.



- 3. Select AUDIO/STREET.
- **4.** Select or to select a track.
 - ➤ You can also select a track using the SEEK/SKIP button.
 - ➤ The current track number and total number of tracks are displayed.

"Display audio screen"

You can control the iPod® using voice commands.

PiPod® Commands P. 194

A visual guide helps you operate the audio system.

- System Controls P. 4
- **Basic Operation** P. 6

In some cases, the name of the artist, album, or track may not appear correctly.

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the display.

Error Messages P. 174






Home

Audio Screen Control

AUDIO button (in iPod® mode)

Control the audio screen through the navigation system.

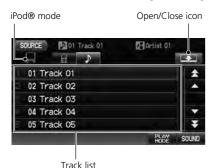

Select a track.

- Select the menu tab to change songs in the track list.
- Searching for Music P. 132

The following items are available:

PLAY MODE

Shuffle All: Plays all tracks in the track list in random order.

Shuffle Album: Plays all tracks in the track list in random order by albums. Each song in an album is played in the right order and only the order of albums is randomized.

● Repeat 1 Track: Repeats the current track.

- SOUND: Displays the sound preferences screen.

 ▶ Adjusting the Sound P. 140
- SOURCE: Changes the source mode.
- Open/Close icon: Displays/hides the detailed information.

Audio Screen Control

The audio information is also displayed on the multi-information display. See your Owner's Manual for more information.

■ Repeat and Shuffle Play

To stop repeat- or shuffle-play, select the current play mode button again.

Audio

.6

Index

поше

Searching for Music

Search for music using the iPod® menu.

iPod® menu tab



- 1. Select the menu tab.
- **2.** Select a search category (e.g., Album).



- 3. Select an item.
 - ► The selection begins playing.

Searching for Music

The order of the track list displayed if you select "All" on the iPod® menu varies depending on the iPod® model and software.


Back to Current Track: Displays the current track at the top of the list.



Index

Home

■ Connecting a USB Flash Drive

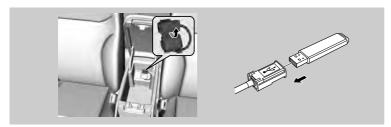

- 1. Unclip the USB connector in the center console and loosen the adapter cable.
- 2. Install the USB flash drive to the USB connector.

■ USB Flash Drives

Use a recommended USB flash drive of 256 MB or higher.

Some digital audio players may not be compatible.

Some USB flash drives (e.g., a device with security lockout) may not work.

Some software files may not allow for audio play or text data display.

Some versions of MP3, WMA, or AAC formats may be unsupported.

∑ Connecting a USB Flash Drive

- Do not use an extension cable with the USB adapter cable.
- Do not connect the USB flash drive using a hub
- Do not use a device such as a card reader or hard disk drive, as the device or your tracks may be damaged.
- We recommend backing up your data before using the device in your vehicle.

Audio







Selecting USB Mode



- Connect the USB flash drive to the USB adapter cable in the center console.
- **2.** Press the CD/XM button until you get to USB mode.



- 3. Select AUDIO/STREET.
- **4.** Select or to select a track.
 - ➤ You can also select a track using the SEEK/SKIP button.
 - ➤ The current track number and total number of tracks are displayed.

▶ Playing a USB Flash Drive

"Display audio screen"

You can control the USB flash drive using voice commands.

USB Commands P. 194

A visual guide helps you operate the audio system.

- System Controls P. 4
- **Basic Operation** P. 6

In some cases, the name of the artist, album, or track may not appear correctly.

Tracks on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

The audio system displays Unplayable File, and then skips to the next track when the following tracks are played:

- Tracks in WMA format protected by digital rights management (DRM)
- Tracks in unsupported format

If there is a problem, you may see an error message on the display.

Error Messages P. 174



Audio Screen Control

8 AUDIO button (in USB mode)

Control the audio screen through the navigation system.



Select a track.

- Select the **Folder** tab to display the folder list.
- **▶ Playing Tracks in Folders** P. 136

Track 05

▼ FOLDER ► SCAN FLOOR SOUND

Track list

The following items are available:

- FOLDER: Select ◀ or ▶ to select a folder.
- SCAN:

Scan Track: Scans all tracks in the current folder in the order they were stored and plays a 10-second sample. Select **Stop** to stop scanning and play the current selection.

Scan Folder: Scans the first track in each folder on the USB flash drive and plays a 10-second sample. Select **Stop** to stop scanning and play the current selection.

Audio Screen Control

The audio information is also displayed on the multi-information display. See your Owner's Manual for more information.

тос

Audio

(1)



Continued

PLAY MODE:

Random All: Plays all tracks on the USB flash drive in random order.

Random in Folder: Plays all tracks in the current folder in random order.

Repeat 1 Track: Repeats the current track.

Repeat 1 Folder: Repeats all tracks in the current folder.

• **SOUND**: Displays the sound preferences screen.

Adjusting the Sound P. 140

• **SOURCE**: Changes the source mode.

• Open/Close icon: Displays/hides the detail information.

Playing Tracks in Folders

8 AUDIO button (in USB mode) ▶ Folder

Change the folder if the tracks are stored in a folder structure.

Folder list Touch to close the folder. 102 101 Track 01 2 02:35 Folder Track 01 ROOT

■ FOLDER ► Back To Current Track

02 FOLDER A

03 FOLDER B 06 FOLDER E 07 FOLDER F

- 1. Select a folder
 - ► The system displays the track list.
- 2. Select a track
 - ► The system begins playing the selected track.

■ Repeat and Random Play

To stop repeat- or random-play, select the current play mode button again.

▶ Playing Tracks in Folders

Folder List

- Any music tracks not in a folder are automatically added to a "ROOT" folder. which is displayed at the top of the Folder List.
- If the root folder has additional folders in a lower layer, they are listed on the screen.

Back to Current Track: Displays the current track at the top of the list.

Touch to open the folder.

Your audio system allows you to listen to music tracks stored on your Bluetoothcompatible phone.

This function is available when the phone is linked to the vehicle's *Bluetooth*® HandsFreeLink® (HFL) system.

Bluetooth® HandsFreeLink® P 143

Selecting Bluetooth® Audio Mode



- 1. Make sure that your phone is on, paired, and linked to HFL. Pairing a Phone P. 146
- 2. Press the CD/XM button until you get to Bluetooth® Audio mode.
 - ► A Bluetooth® message and icon are displayed on the display and screen.
- 3. Select AUDIO/STREET.

▶ Playing Bluetooth® Audio

心 "Display audio screen"

You can control the Bluetooth® Audio using voice commands.

Bluetooth® Audio Commands P. 195

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible. To check if your phone is compatible:

- U.S.: Visit automobiles.honda.com/ handsfreelink
- Canada: Visit www handsfreelink ca
- Call HandsFreeLink customer support at (888) 528-7876.

In some states, it may be illegal to perform some data device functions while driving.

In some cases, the name of the artist, album, or track may not appear correctly.

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the first paired phone the system finds is automatically linked.

137

Audio



- **4.** Select **⋈** or **⋈** to select a track.
- **5.** If necessary, follow the cell phone operating instructions for playing audio tracks.

≥ Playing Bluetooth® Audio

If more than one phone is paired to the HFL system, there may be a delay before the system begins to play.


A "NO CONNECT" message may be displayed if:

- The phone is not linked to HFL.
- The phone is not turned on.
- The phone is not in the vehicle.
- An incompatible phone is connected.

Check the following if the phone is not recognized:

• Another HFL-compatible phone, which is not compatible for *Bluetooth*® Audio, is already connected.

Switching to HFL Mode

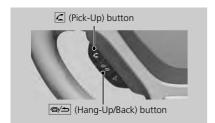

- 1. If you receive a call when Bluetooth® Audio is playing, press the ∠ (Pick-Up) button on the steering wheel to answer the call.
- 2. Press the (A) (Hang-Up/Back) button to end the call, and Bluetooth® Audio is resumed

(le²

Index

Home

Audio Screen Control

R AUDIO button (in BT mode)

Control the audio screen through the navigation system.

Bluetooth® Audio mode

Select an item.



Audio control

The following items are available:

- GROUP: Select ◀ or ▶ to select a playlist, album, genre, etc.
- SOUND: Displays the sound preferences screen.

 ▶ Adjusting the Sound P. 140
- **SOURCE**: Changes the source mode.

Mario Screen Control

The audio information is also displayed on the multi-information display. See your Owner's Manual for more information.

The display items vary on the connected device.

The following functions may not be available on some devices:

- Pause function
- Group selection

1.5





\S AUDIO button (\blacktriangleright AUDIO MENU) \blacktriangleright SOUND

Adjust the sound bass, treble, fader, and balance. You can also adjust the strength of the sound coming from the subwoofer speaker*. In addition, you can set Speedsensitive Volume Compensation (SVC).



- **1.** Select the tab to adjust the desired sound mode.
- 2. Adjust the desired level.

Adjusting the Sound

Fader adjusts the front-to-back strength, while balance adjusts the side-to-side strength. If the fader adjustment is set to the maximum front level, the subwoofer is turned off.

The SVC has four modes: Off, Low, Mid, and High. SVC adjusts the volume level based on the vehicle speed. The faster you go, the audio volume increases. As you slow down, the audio volume decreases. If you feel the sound is too loud, choose Low, and vice versa.

* Not available on all models.


w£

Index

Hom


Steering Wheel Controls

Control basic audio system functions using the controls mounted on the steering wheel.

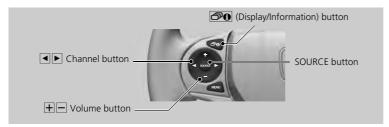

■SOURCE Button

 Cycles through the audio modes as follows:



∑ SOURCE Button

DISC mode appears only when a disc is loaded.

When in AUX mode, the following are operable from the remote audio controls:

- iPod®/USB flash drive connected to the USB adapter cable
- Bluetooth® Audio (not all phones support this function)

Audio





■ + - (Volume) Button

Adjusts the volume.

- Press the + (Volume) button to increase the volume.
- Press the (Volume) button to decrease the volume.

FM/AM, XM

- Press the 🕨 (Channel) button to select the next preset station (channel).
- Press and hold the **b** button to skip to the next station in the frequency.

DISC, iPod®, USB, or Bluetooth® Audio

- Press the button to skip to the next track.
- Press the dutton to skip to the beginning of the current track. Press the button again to go to the beginning of the previous track.

■ 🗗 (Display/Information) Button

Press the (display/information) button to temporarily clear the turn-by-turn directions screen.

(11/2

Inde

Hom

QRG

Bluetooth® HandsFreeLink®

This section describes how to operate *Bluetooth*® HandsFreeLink®. You can place and receive phone calls using your vehicle's audio system without handling your cell phone.

1	uetooth® HandsFreeLink®	144
	Pairing a Phone	146
	Setting Up Speed Dialing	151
	Editing Phone Information	154
	Phone Setup	155
	Making a Call	156
	Receiving a Call	159
	HFL Menus	160



Index

Home

PHONE button



Select an item.

The following items are available:

- Redial: Dials the last number.
- Call History: Displays the call history.
 Using Call History P. 158
- Phonebook: Displays the cell phone's imported phonebook.
 Using the Phonebook P. 157
- Dial: Makes a call by entering the phone number.
 - **Entering a Phone Number** P. 157
- Phone Setup: Sets up the HFL features.
 - Pairing a Phone P. 146
 - Setting Up Speed Dialing P. 151
- Speed Dial 1, 2: Makes a call to stored speed dial entries.
 - Using Speed Dial P. 158

Bluetooth® HandsFreeLink®

You can control the HFL system using voice commands.

HFL Menus P. 160

To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities:

- U.S.: Visit automobiles.honda.com/ handsfreelink.
- Canada: Visit www.handsfreelink.ca.
- Call HandsFreeLink customer support at (888) 528-7876.

Voice Control Tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press and release the (Talk) button before giving a command. Speak clearly and naturally after a beep.

Voice Control Operation P. 5

- If the microphone picks up voices other than yours, the command may be misinterpreted.
- When HFL is in use, navigation voice commands cannot be recognized.
- To change the volume level, use the audio system's volume knob or the remote audio controls.

(In ξ

Bluetooth® HandsFreeLink®

. .

Home

■ Help Features

Say K "Hands-free help" or K "Help" any time to get help or hear a list of commands.

Voice Help P. 13

Bluetooth® HandsFreeLink®

Bluetooth® Wireless Technology

Bluetooth® name and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motors Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

HFL Limitations

An incoming call on HFL will interrupt Bluetooth® Audio when it is playing. Audio will resume when the call is ended.



Pairing a Phone

8 PHONE button

Notification

When no *Bluetooth*-compatible phone has ever been paired to the system, the following screen appears:



Please enter the Pairing Code "0000"

when requested by your phone,

- 1. Select Yes
- **2.** Put your cell phone in "Discovery" or "Search" mode.
 - ► The system begins to search for your phone.



- 4. Select your phone in the list.Select Find Another Phone if
 - Select Find Another Phone if your phone is not found.
 - Refer to your phone manual for instructions on searching for a Bluetooth® device.
- **5.** Enter the 4-digit pairing code on your phone when prompted to complete the pairing process.

▶ Pairing a Phone

Your *Bluetooth*-compatible phone must be paired to HFL before you can make and receive hands-free calls.

The maximum range between your phone and vehicle is about 30 feet (10 meters).

Phone Pairing Tips

- You cannot pair your phone while the vehicle is moving.
- Your phone must be in discovery or search mode when pairing the phone. Refer to your phone's manual.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to HFL.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and returns to idle.
- The default pairing code "0000" is used unless you change the setting.

Pairing Code

You can change the pairing code setting.

△ Changing the Pairing Code P. 148

Delete a Phone

You can delete the paired phone.

Deleting a Paired Phone P. 149



Index

Home

■ Pairing from Phone Setup

 
PHONE button ► Phone Setup

Use the Phone setup screen to pair a *Bluetooth*-compatible phone.



1. Select Add/Select a Phone under Bluetooth setup.

2. Select Search.



- **3.** Put your cell phone in "Discovery" or "Search" mode.
 - ► The system begins to search for your phone.
- 4. Select OK.
- **5.** Select your phone in the list.
 - Select Find Another Phone if your phone is not found.
 - Refer to your phone manual for instructions on searching for a Bluetooth® device.
- **6.** Enter the 4-digit pairing code on your phone when prompted to complete the pairing process.

▶ Pairing from Phone Setup

You can control the HFL system using voice commands.

→ HFL Menus P. 160

us.

Index

147

2012 Civic Hybrid Navigation

■ Changing the Pairing Code

PHONE button ► Phone Setup ► Add/Select a phone



1. Select Edit under Pairing Code.



2. Select an item.

The following items are available:

- Random: Uses a randomly generated pairing code.
- Fixed: Create your own pairing code.



Hom

4.40



- **3.** If you select **Fixed**, enter a new pairing code. Select **OK**.
 - Select **Delete** to remove the current pairing code.

■ Deleting a Paired Phone

PHONE button ► Phone Setup ► Add/Select a phone



- **1.** Select List under Paired Phone List.
- 2. Select a phone to delete.
 - ► The *Bluetooth*® icon indicates the currently linked phone.

Deleting a Paired Phone

When you transfer the vehicle to a third party, delete all paired phones.

(hŽ



- 3. Select Delete this Phone.
- 4. Select Yes.

■ Changing the Currently Paired Phone

PHONE button ► Phone Setup ► Add/Select a phone



- 1. Select List under Paired Phone List.
- **2.** Select a phone to connect.
- 3. Select Connect.
 - ► HFL disconnects the linked phone and starts searching for another paired phone.

∑ Changing the Currently Paired Phone

If no other phones are found or paired when trying to switch to another phone, HFL will inform you that the original phone is linked again.



Index

Setting Up Speed Dialing

PHONE button ► Speed Dial 1 or Speed Dial 2

Create speed dial entries with voice tags for easy calling.



1. Select Add New.



- 2. Select a number entry option.
- 3. Select a number.
- 4. Select Voice Tag.
 - Select **OK** to store the speed dial without a voice tag.
- **5.** Follow the prompt to enter a voice tag.

The following options are available:

- Phonebook: Adds a number from the imported phonebook.
- History: Adds a number from the last 20 numbers.
- Phone Number: Enters a number manually.

Setting Up Speed Dialing

You can control the HFL system using voice commands.

HFL Menus P. 160

Up to 15 speed dial entries can be stored per phone.

65

Index

Home

ос _Б



PHONE button ► Speed Dial 1 or Speed Dial 2



- 1. Select a speed dial entry.
- 2. Select Edit Speed Dial.
- 3. Select Voice Tag.



4. Follow the prompt to enter a voice tag.

■ Registering a Voice Tag to a Speed Dial Entry

Voice tags allow you to call your speed dial entries from the PHONE screen using the "Call..." voice command (e.g., say ** "Call John Smith").

- Avoid using duplicate voice tags.
- Avoid using "Home" as a voice tag.
- It is easier for HFL to recognize a longer name (e.g., "John Smith" instead of "John").

Deleting a Speed Dial Entry

- 1. Select Delete Speed Dial.
- 2. Select Yes.



Index

Home

■ Editing a Voice Tag

PHONE button ► Speed Dial 1 or Speed Dial 2



- 1. Select a speed dial entry.
- 2. Select Edit Speed Dial.
- 3. Select Voice Tag



4. Select an item.

The following items are available:

- Play Stored Voice Tag: Plays the stored voice tag.
- Record Voice Tag: Stores a voice tag. Follow the prompt to enter a voice tag.
- Delete Voice Tag: Deletes the stored voice tag. Select Yes.







Bluetooth® HandsFreeLink®

Editing Phone Information

PHONE button ► Phone Setup ► Add/Select a phone ► List

Edit the user name of a paired phone, and protect the phonebook and speed dial entries with a PIN.



1. Select a phone to edit.



2. Select an item.

The following items are available:

- Connect: Connects the selected phone to the HFL.
- Edit Name: Enter a name.
- PIN: Enter a 4-digit PIN. Re-enter to confirm. You can select Do Not Use PIN to remove a PIN
- Replace this Phone: Deletes the selected phone and adds a new phone.
 ▶ Pairing a Phone P. 146
- Delete this Phone: Deletes the user name, call history, and phonebook.

■ Editing Phone Information

You can control the HFL system using voice commands.

HFL Menus P. 160

You can name up to six HFL users. Each can be PIN protected, and have their own phonebook, speed dial entries, and call history.

Phone Setup

PHONE button ► Phone Setup

Set HFL options and features.



- 1. Select an item.
- 2. Select OK.

The following items are available:

- Bluetooth Setup: Pairs your phone to the system.
 Pairing a Phone P. 146
- Bluetooth Connection: Turns the Bluetooth® connection on or off.
 On: Connects your Bluetooth-compatible device to the system.
 Off (factory default): Disables the feature.
- Auto Transfer: Sets whether to automatically transfer a call from your phone to
 HFL when you enter and turn on the vehicle.
 On (factory default): Automatically transfers your call to HFL.
 Off: Disables the feature
- Auto Answer: Sets whether to automatically answer an incoming call.
 On: Automatically connects an incoming call after about five seconds.
 Off (factory default): Disables the feature.
- Volume: Select = or + to adjust the receiver and ring volume. If you change the volume during a call, it is maintained at that level until you change it again.



You can control the HFL system using voice commands

→ HFL Menus P. 160

us.



Making a Call

Make calls by entering a number or using the imported phonebook, call history, or speed dial entries.

- Using the Phonebook P. 157
- **≥ Entering a Phone Number** P. 157
- **Using Call History** P. 158
- Using Speed Dial P. 158







156

Making a Call

You can control the HFL system using voice commands.

HFL Menus P. 160

When you say (Call by number" or Call by voice tag" on any screen, the following screen appears:



You can make a call to a phone number or a speed dial entry with a voice tag using a voice command (e.g., say (Call John Smith").

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the first paired phone the system finds is automatically linked.

■ Using the Phonebook

PHONE button ► Phonebook



- 1. Select a name
 - ► Select alphabetical tabs to display the entries in the group.
- 2. Select a number.
- **3.** Select **Call** to begin dialing.

■ Entering a Phone Number

% PHONE button ▶ Dial



- 1. Enter a phone number.
- 2. Select Dial to begin dialing.



A command that consists of several words can be spoken together.

For example, say (123-456-7890" at once.





2012 Civic Hybrid Navigation







Call history



1. Select a call

- ► Select All. Dialed. Received. Missed to view the call history by category.
- 2. Select Call to begin dialing.

■ Using Speed Dial

■ Using Call History

PHONE button ► Call History

PHONE button ► Speed Dial 1 or Speed Dial 2



- 1. Select a speed dial entry.
- **2.** Select **Call** to begin dialing.

■ Using Call History

The call history shows the last 20 calls from your phone.

■ Using Speed Dial

To make a call using speed dial, you need to create speed dial entries.

Setting Up Speed Dialing P. 151

More Speed Dial Lists


You can make a call by using more speed dials on the other phones.

- **1.** Select another paired phone in the list.
- 2. Select a speed dial entry.
- 3. Select Call to begin dialing.

If the other phone is PIN-protected, enter the PIN when prompted. Select OK. PINs are optional.

Editing Phone Information P. 154

Receiving a Call

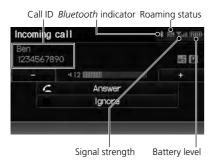

1. Press the (Pick-Up) button to answer a call and display the Calling screen.



2. Press the (Hang-Up) button to terminate the call.

The following options are available during a call:

- MUTE: Allows you to mute your voice.
- Touch Tones (available on some phones): Allows you to send numbers or names during a call. This is useful when you call a menu-driven phone system.
- Transfer Call: Allows you to transfer a call from HFL to your phone, or from your phone to HFL.

■ Receiving a Call

An incoming call notification appears on both the navigation screen and the multi-information display, and you hear an audible ring tone.

If your phone has Call Waiting, press the button to put the original call on hold and answer the incoming call. To return to the original call, press the button again. If you want to hang up the original call and answer the new call, press the button.

To change the volume level of HFL, use the audio system volume knob or the steering wheel volume controls.

Some phones may send battery, signal strength, and roaming status information to the screen.

Phonebook

Displays the cell phone's imported phonebook.

Using the Phonebook P. 157

(1)

mack

HFL Menus

Use HFL when the vehicle's ignition is in the ACCESSORY (I) or ON (II) position.

You can operate HFL by voice when on the PHONE screen. Below is the flow chart showing available voice commands.

Press the (Pick-Up) button to display the PHONE screen. Press the 🖟 (Talk) button each time you give a voice command. "Phone Setup" ωŚ "Bluetooth Setup" "Paired Phone List" Display the list of the paired phones. (n/2°

Select a phone

"Add a New Phone"

"Pairing Code"

>> HFL Menus

To use HFL, you must first pair your Bluetoothcompatible cell phone to the system while the vehicle is parked.

Switch from a currently linked phone to another paired phone. Changing the Currently Paired Phone P. 150 Create a user name for a paired phone. Create a PIN for a paired phone. Replace the previously paired phone with a new "Replace this Phone" phone. Delete a previously paired phone. "Delete this Phone" Deleting a Paired Phone P. 149

≧ Changing the Pairing Code P. 148

"Connect"


"Edit Name"


"PIN"

Pair your phone to the system. Pairing a Phone P. 146 Set a "fixed" or "random" pass-key code for phone pairing.

161

Continued

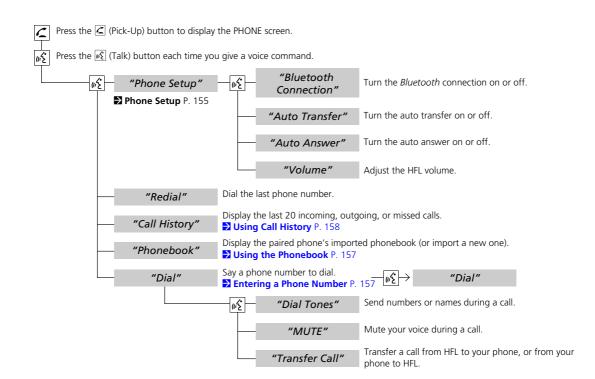

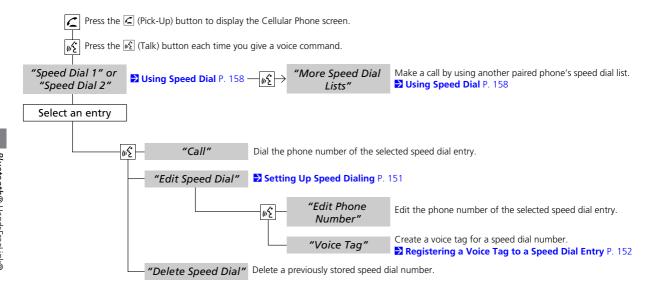



Index

Home

Other Features

This section describes the useful functions incorporated into the navigation system.

Trip Computer	
Information Functions	16
System/Device Information	16!
Map Update	165



Index

Home

4...

§ INFO button ► Trip Computer

View the distance traveled and average fuel consumption.



Select an item.



The following items are available:

- Current Drive: Displays the current trip information.
- History of Trip A: Displays information for three previous histories. The information is stored every time you reset Trip A.
- Delete History: Deletes the trip information. Select Yes.

▼ Trip Computer

Displays the following trip information:

- **Instant Fuel**: The current estimated instant fuel economy.
- Average Fuel: The average fuel economy since the last key cycle.
- 1st, 2nd, 3rd Prev.: The previous average fuel consumption.
- RANGE: The estimated distance you can travel on the fuel remaining in the tank.

These values are estimates only.









System/Device Information

§ INFO button **▶ System/Device Information**

View database, software, device, and vehicle identification information.



Map Update

n INFO button ► Map Update Update the map database.



∑ System/Device Information

You will need this information when ordering a map update.

Obtaining Navigation Update Data P. 185

Map Update

When you order a map update, it is mailed to you on a USB flash drive.

Obtaining Navigation Update Data P. 185

Other Features



ځ ۱۱)

Index

Hom

Troubleshooting

Map, Voice, Entering Destinations 1	68
Traffic 1	70
Guidance, Routing 1	70
Update, Coverage, Map Errors 1	72
Display, Accessories 1	72
Miscellaneous Questions 1	73
Error Messages1	74
Navigation System 1	74
Disc Player1	75
iPod®1	76
USB Flash Drive	77

Troubleshooting 168



Index

Home

0001001000119

тос

(Inde

Map, Voice, Entering Destinations

Problem	Solution
The Startup Confirmation screen is displayed every time I start the car.	This is normal. The Startup Confirmation screen reminds you and your guest drivers to always operate the navigation system in a safe manner.
The navigation system reboots by itself (returns to the opening screen).	A reboot can be caused by extreme temperatures or shock from bumpy roads, and does not necessarily indicate a problem. If this happens frequently, please see your dealer.
How do I specify a destination when an entered city or street could not be found?	 Try entering the street first. Some cities are lumped in with a major metro area. In rural "unverified" areas or new subdivisions, streets may be missing or only partially numbered. Try selecting the destination directly from the map. Map Input P. 75
Why do some letters become grayed out when I enter an address?	As you enter each letter in an address or a place/landmark, the navigation system looks in the database to see what letters are possible and grays out letters that do not apply.
How do I delete Personal Addresses, Previous Destinations, or the Home Address?	 Press the INFO button. Select Setup > Personal Information to display the types of information. Select the type of address to delete. Select Delete.
I cannot hear the navigation system voice.	 Press the INFO button. Select Setup and check that Volume is not set to Off. Display and Volume Settings P. 21 Select Other > Basic Settings and set Voice Recognition Tutor to On. Basic Settings P. 23
The voice control system is having difficulty recognizing my voice commands.	 Check that the vents are not blowing air onto the microphone on the ceiling, the vehicle is as quiet as possible, and you are using the correct command when speaking. Voice Recognition P. 20 Say Say Say " "Help" on any screen to see a list of the applicable voice commands.

Problem	Solution
The navigation system pronunciation of street names in the guidance command or destination address sounds strange.	The basic guidance phrases use a studio-recorded voice, but street names are pronounced using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times.
The screen is bright when I drive at night.	 Check that the nighttime dashboard brightness control is not set to maximum. Press the INFO button. Select Setup > Other > Color > Map. Set the Night color to Black for the best contrast. Switching Display Mode Manually P. 26
The screen is dark when I drive during the day.	Press the INFO button. Select Setup > Other > Color > Map . Set the Day color to White for the best contrast. Switching Display Mode Manually P. 26
How do I change or remove my PIN?	 Press the INFO button. Select Setup > Personal Information > PIN Number > GO Home 1 PIN or GO Home 2 PIN or Address Book PIN. Enter your existing PIN. You then have the choice to change or remove the PIN. PIN Numbers P. 36
I have forgotten my PIN. How do I reset the PIN for Home or the PIN for personal addresses (User 1 or User 2)?	Your dealer must reset the PIN for you.
Why is Call grayed out on the Calculate Route screen?	Your phone is not paired to ${\it Bluetooth} @$ HandsFreeLink@ or, if paired, your phone is in use.



Troubleshooting

Traffic

Problem	Solution
My FM Traffic is missing or is not displaying properly. What is wrong?	 Verify the following: FM Traffic relies on a clear FM signal. If signal strength is low, traffic data may not be available. Check the traffic icon on the icon bar, and the icon options for traffic. Showing Icons on the Map P. 92 It is possible that there is a temporary technical problem with your metropolitan area traffic. You can call Honda Automobile Customer Service to see if there is an outrage. Honda Automobile Customer Service Contact Information P. 184 If the situation persists, see your Honda dealer for assistance.

Guidance, Routing

Problem	Solution
The navigation system does not route me the same way I would go or the same way as other mapping systems.	The navigation system attempts to generate the optimal route. You can change the route preferences used when calculating a route. ▶ Changing the Route Preference P. 78
The street I'm on is not shown on the map screen.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. Map Coverage P. 185
The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing.	 Check that the GPS antenna (located in the dashboard) is not blocked. For best reception, remove items from the dashboard, such as radar detectors, cell phones, or loose articles. Metallic tinting or other aftermarket devices can interfere with the GPS reception. Please consult your dealer. → GPS System P. 182

otin
9
тос

Problem	Solution
The blue highlighted route and voice guidance stopped or turned into a blue/pink dashed line before I got to my destination.	Your route has entered an unverified area. ■ Unverified Area Routing P. 41
How do I stop the map from rotating as I drive along?	Select the map orientation icon on the map screen, or say 😥 "Display north-up" to change the map orientation.
Sometimes, I cannot select between the North-up and Heading-up map orientations.	The Heading-up map orientation can only be shown in the lower scales (1/20 - 1 mile scales). ▶ Map Scale and Functions P. 95
The "time to destination" display sometimes increases even though I am getting closer to my destination.	If your speed reduces due to slower traffic, the navigation system updates the "time to destination" based on your actual road speed to give you a better estimate of arrival time.
The vehicle position icon on the map "lags" a short distance behind, especially when I arrive at an intersection.	This is normal. The navigation system is unaware of the width of intersections. Large differences in vehicle position can indicate a temporary loss of the GPS signal. ☐ GPS System P. 182
The screen is showing white dots as I drive along.	These dots are called "breadcrumbs." These are displayed if Off-road Tracking is set to On and you drive more than 1/2 mile off mapped roads. ▶ Off-road Tracking P. 50
How do I remove the white dots ("breadcrumbs") from my screen?	Press the INFO button. Select Setup > Other > Vehicle, and set Off-road Tracking to Off, then return to the map. Doff-road Tracking P. 50
A road that I selected to avoid is being used when routing.	When you "draw" your area to avoid, make sure to select sections of roads that include at least one intersection. ▶ Avoiding Streets P. 102
My elevation (shown when I display the current position) seems to fluctuate even though my elevation has not changed.	This is normal. The elevation can vary ±100 feet due to GPS calculation errors. ⊇ GPS System P. 182

- (
9
7
(
·
- (
- (
•

TOC

Problem	Solution
My elevation is missing on the "current position" screen.	The elevation is only displayed if the GPS antenna can receive signals from at least four satellites. Try moving the vehicle into an open area. The elevation is also not displayed if the calculated elevation is zero or below sea level.

Update, Coverage, Map Errors

Problem	Solution
My city is not part of a fully verified detailed coverage area.	The mapping database is constantly undergoing revision. You can access the most recent information on the internet. ☑ Map Coverage P. 185
Does the navigation system work outside North America?	The navigation system contains maps for the 50 U.S. states, Canada, and Puerto Rico. The navigation system will not work in Mexico or other countries. Map Coverage P. 185
Can I play video DVDs in my navigation system?	No. The navigation system is designed only to read music discs. If you experience any problems that you cannot resolve, please contact your dealer.
How do I report errors I find in the database?	Minor errors are bound to occur in a large database. If you encounter major errors, see ▶ Reporting Errors P. 184

Display, Accessories

Problem	Solution
The display appears dim when starting the car in really cold weather.	This is normal. The display will become brighter after a few minutes.



Home

Miscellaneous Questions

Problem	Solution
My clock frequently changes forward and backward by one hour.	The clock setting is automatically updated based on your GPS location. If you live and work on the boundary between two time zones, you can turn off this feature. Clock Adjustment P. 46
The clock changes even when I am not driving near a time zone boundary.	The time zone boundaries are only approximated in the navigation system. Depending on the geography of the time zone boundary, the switch to a different zone can be erratic. Clock Adjustment P. 46
My state does not observe daylight saving time. How do I turn off this feature?	Press the INFO button. Select Setup > Other > Clock Adjustment > Clock Adjustment, and set Auto Daylight to Off. Clock Adjustment P. 46
Daylight saving time has started, but the navigation system did not change time even though Auto Daylight is set to ON.	The automatic daylight saving time feature does not work in regions where the daylight saving time system has not been adopted.
The navigation system automatic daylight feature is not switching the navigation system clock on the correct dates.	Press the INFO button. Select Setup > Other > Clock Adjustment > Clock Adjustment, and set Auto Daylight to On. Note that the automatic daylight feature does not work in regions where the daylight saving time system has not been adopted. Clock Adjustment P. 46
The navigation system clock switched by one hour for no apparent reason.	You may be driving near a time zone boundary. Clock Adjustment P. 46
My battery was disconnected or went dead, and the navigation system is asking for a code.	Press and hold the VOL ♂ (Volume/Power) button for two seconds. The system should reactivate. If you have installed an aftermarket system, see your dealer. Entering the Security Code P. 180
How do I change the interface language?	Press the INFO button. Select Setup > Other > Language , and set the language to English , Français , or Español .



174

Navigation System

Error Message	Solution
The display temperature is too high. For protection, the display will shut down.	This message appears briefly when the display temperature is too high. The navigation system turns off until the display cools down. The system turns back on automatically when the display cools down.
The navigation system is unable to start due to excessive heat. The system will start after the system cools.	The navigation system has difficulty accessing to the map database when the temperature is below approximately -22°F/-30°C. The navigation system starts up automatically when the display warms up.
Route has not been completed. Please try again from a different location.	This message appears when you are on a route to or from a new area that is not in the database. Try planning a different route to or from a different location. If the error persists or is shown for a wide area, see your dealer.
Destination is not in this database version. Please set from map. No POI found	The destination was not found in the database. Try another destination nearby, or select the destination from the map using the joystick. If the error persists or is shown for a wide area, see your dealer.

Disc Player

Error Message	Cause	Solution
Bad Disc	Servo error	• Press the 🛕 (Eject) button and remove the disc, and check that the
Please Check Owners Manual	Mechanical error	error message is cleared.Check that the disc is not damaged or deformed, and insert the dis
Mecha Error	Mechanical error	again.
Check Disc	Focus error Disc violates copyright Disc not supported	 Recommended Discs P. 128 If the error message reappears, press the button, and pull out the disc. Insert a different disc. If the new disc plays, there is a problem with
	Load error	the first disc. If the error message repeats, or the disc cannot be removed, con your dealer. Do not try to force the disc out of the player.
Unsupported	Appears when an unsupported disc is inserted.	If it appears when a supported disc is inserted, reinsert the disc.
Unplayable File	Appears when the tracks on the disc are DRM or an unsupported format.	This error message appears for about three seconds, then plays the next song.
	The system cannot read the track(s).	• Check the tracks on the disc. There is a possibility that the tracks have been damaged.
Heat Error	High temperature	• Turn the audio system off and allow the player to cool down until the error message is cleared.





Troubleshooting 6

iPod®

Error Message	Cause	Solution
Unsupported	Appears when an unsupported iPod® is connected.	 Update the iPod® software to the latest version. If it appears when a supported iPod® is connected, reconnect the iPod®.
Connect Retry	Appears when the iPod® cannot be authenticated.	Reconnect the iPod®.
No Data	Appears when there are no tracks in the iPod®.	Store tracks in the iPod®.
Bad Use Device Please Check Owners Manual	Appears when the overcurrent protection feature of the system stops supplying power to USB because an incompatible iPod® is connected.	Disconnect the iPod®. Turn the audio system off, and turn it on again. Do not reconnect the iPod® that caused the error.
USB Error	Appears when the internal USB error occurs.	Try a different iPod®.





USB Flash Drive

Error Message	Cause	Solution
Unsupported	Appears when an unsupported device is connected.	If it appears when a supported device is connected, reconnect the device.
Unplayable File	Appears when the tracks in the USB flash drive are DRM or an unsupported format.	This error message appears for about three seconds, then plays the next song.
	The system cannot read the track(s).	Check the tracks in the USB flash drive. There is a possibility that the tracks have been damaged.
No Data	Appears when the USB flash drive is empty or there are no tracks in MP3, WMA, or AAC format in the drive.	Save tracks in MP3, WMA, or AAC format in the USB flash drive.
Bad Use Device Please Check Owners Manual	Appears when the overcurrent protection feature of the system stops supplying power to USB because an incompatible device is connected.	Disconnect the device. Turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
USB Error	Appears when the Internal USB ROM error occurs.	Try a different USB flash drive.



(1) £

Index

Hom

Reference Information

ystem Initialization	180
Entering the Security Code	180
Acquiring GPS Information	180
Startup Confirmation Screen	181
Map Matching	181
ystem Limitations	
GPS System	182
Address Calculation	
Database	182
Customer Assistance	184
Resolving Problems	184
Reporting Errors	184
Honda Automobile Customer Service	
Contact Information	184

Visiting Your Dealer	18
Map Coverage	18
Obtaining Navigation Update Data 1	18
Traffic Information	18
Operation in Alaska, Hawaii, Canada,	
and Puerto Rico1	18
Shipping a Vehicle to the U.S. Mainland 1	18
egal Information1	18
Copyrights	
As required by the FCC	18

Index

Home

The navigation system must be initialized if power to the navigation system is interrupted for any reason (e.g., the battery was disconnected).

Entering the Security Code

Find the navigation system's security code and serial number label in your Owner's Manual kit. Do not store the label in your vehicle. If you lose the label, you must first retrieve the serial number, and then obtain the code. You can find out about your serial number and security code from a dealer

1	2	3
4	5	6
7	8	9
	0	

- **1.** Turn the ignition switch to ON (II), and turn on the audio system.
 - ► If you turn the ignition switch to ACCESSORY (I), and you will requested to enter the security code. See step 3.
- 2. Press and hold the VOL ((Volume/ Power) button for more than two seconds.
 - ➤ The system is reactivated when the system's control unit recognizes that the system is in your vehicle. If the control unit fails to recognize, "ENTER CODE" appears on the navigation screen.
- 3. Enter the security code.
 - ▶ If you do not enter the security code correctly after 10 tries, leave the system for one hour before trying again, or visit a dealer to have the system reset.

NOTE:

In the U.S., you can register the security code on Owner Link (owners.honda.com.). To find information on how to retrieve the serial number and obtain the code, visit radio-navicode.honda.com.

Acquiring GPS Information

Depending on the length of time the power was interrupted, your system may require GPS initialization.

The navigation system lost power and is acquiring its location from the GPS satellites. This usually takes less than 10 minutes.

* Start the engine.

* Park the vehicle in an open area away from trees, power lines, and tall buildings.

* Remove loose articles, cell phones, or electrical accessories located near the GPS antenna.

* If this screen is displayed repeatedly when starting the vehicle, see your dealer.

If initialization is not necessary, the system proceeds directly to the Startup Confirmation screen

If the system fails to locate a sufficient number of satellites to locate your position within 10 minutes, the following screen is displayed.

Something is interfering with the system's ability to acquire its location. Check the following:

If The vehicle must be in an open area with a clear view of the sky.

Remove sources of GPS interference like metallic window tint above antenna, or electrical items near antenna (see owner's manual for details).

If Check GPS antenna cable connection.

Restart the engine and repeat the GPS acquire procedure. If the problem persists, see your dealer.

If you are experiencing GPS reception problems:

GPS System P. 182

Startup Confirmation Screen

The Startup Confirmation screen is displayed when initialization has successfully completed. It is displayed every time you start your vehicle. Select **OK** to continue.



NOTE:

"OK" cannot be selected using a voice command.

Map Matching

Map matching is the process of using the acquired GPS information to locate your position on the map screen. If you are on a mapped road, the name of the road is displayed along the bottom of the map screen when map matching is completed. Do not enter a destination until the road name is displayed.

The system may initially show your location on a different street (e.g., in urban areas where streets are close together), may show an incorrect elevation, or may delay the display of the vehicle position icon at intersections. This is normal; the system will correct itself while you drive.

Index



182

GPS System

The signals received from the GPS satellites are extremely weak (less than a millionth of the strength of a local FM station) and require an unobstructed view of the sky. The GPS antenna is located in the dashboard. The signal reception can easily be interrupted or interfered with by the following:

- Metallic window tint on the front or side windows
- Cell phones, PDAs, or other electronic devices docked in a cradle or lying loose on the dashboard
- Remote starters or "hidden" vehicle tracking systems mounted near the navigation unit
- Audio electronic devices mounted near the navigation unit
- Trees, tall buildings, freeway overpasses, tunnels, or overhead electrical power wires

The GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into the GPS for which the navigation system must constantly compensate. This

can cause occasional positioning errors of up to several hundred feet.

Address Calculation

The destination icon shows only the approximate location of a destination address. This occurs if the number of possible addresses is different from the number of actual addresses on a block. For example, the address 1425 on a 1400 block with 100 possible addresses (because it is followed by the 1500 block) will be shown a quarter of the way down the block by the system. If there are only 25 actual addresses on the block, the actual location of address 1425 would be at the end of the block.

Database

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your database may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

For example, some places/landmarks may be missing when you search the database because the name was misspelled, the place was improperly categorized, or a place/landmark is not yet in the database. This is also true for police stations, hospitals, and other public institutions. Do not rely on the navigation system if you need law enforcement or hospital services. Always check with local information sources

In addition, the map database contains verified and unverified areas. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. A message will warn you if your route includes unverified streets. Exercise additional caution when driving in unverified areas.

The database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade

- Bridge height, width, weight, or other limits
- · Traffic facilities safety
- Special events
- Pavement characteristics or conditions

Every effort has been made to verify that the database is accurate. The number of inaccuracies you experience increases the longer you go without obtaining an updated map database.

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.

Resolving Problems

If you run into a specific issue that you cannot resolve, consult the following help resources:

- For navigation system issues:
 Troubleshooting P. 168
 There are also FAQs available online at automobiles.honda.com.
- For questions regarding Bluetooth® HandsFreeLink:
 - **Bluetooth® HandsFreeLink®** P. 144
- · For traffic-related issues:
 - Traffic P 170
- For reporting issues with the database or places/landmarks:
 - **Reporting Errors** P. 184
- Call Honda Automobile Customer Service
 - **▶** Honda Automobile Customer Service Contact Information P. 184

Reporting Errors

You can help to improve database accuracy by reporting any errors you encounter.

- Report errors in freeways and main "verified" roads shown in black on the map at http://mapreporter.navteq.com/ dur-web-external/.
- Please do not report errors in purple "unverified" roads. Maps for these areas are provided for reference only.
 - Unverified Area Routing P. 41
- Please do not report errors in places/ landmarks, such as changes in business names. Information about points of interest are constantly being updated. An updated database is available for purchase, usually in the fall of each year.
 - **Dobtaining Navigation Update Data** P. 185
- For vehicle position icon errors, screen error messages, or other GPS-related errors:
 - **→ Troubleshooting** P. 168
 - System Limitations P. 182

Honda Automobile Customer Service Contact Information

Honda Navi

American Honda Motor Co., Inc.

Honda Customer Service Mail Stop 500-2N-7E 1919 Torrance Blvd.

Torrance, CA 90501-2746 Tel: (800) 999-1009 Fax: (310) 783-3273

Visiting Your Dealer

 
If you have a question that you cannot resolve using the available help resources, you can consult your dealer. Please identify the specific issue (e.g., error occurs when you enter a specific address, when driving on a certain road, or just when it's cold) so that the service technician can refer the issue to the factory so that a solution can be found. Be patient, the service technician may be unfamiliar with your specific issue.

Map Coverage

The navigation system provides map coverage for the contiguous United States, Alaska, Hawaii, Canada, and Puerto Rico. The map coverage consists of accurately mapped (verified) metropolitan areas and a less accurate (unverified) rural database. Note that unverified areas are constantly being reviewed and converted to verified areas each year.

Contiguous United States

WHOODST HOME TO BE TO



Map coverage update information is available from Honda Automobile Customer Service or online at www.hondanavi.com.

To find navigation system update information:

- 1. Visit www.hondanavi.com.
- **2.** Enter your vehicle model and model year.
- Click Map Coverage to display a list of verified coverage areas on the most recent update.
- Click Map Coverage Details to display a PDF document with a full listing of all coverage areas.
 - ➤ Adobe® Reader® is required for viewing and printing the Portable Document Format (PDF) documents. To download the latest version of Adobe Reader, visit http://get.adobe.com/reader/.

Obtaining Navigation Update Data

Honda is continually expanding the scope of the navigation system. Navigation system software upgrades may be made available periodically, usually in the fall of each year.

To purchase an updated data file:

- **1.** Obtain your vehicle's VIN number and the System/Device Information.
 - **System/Device Information** P. 165
- Call the Honda Navigation Disc Fulfilment Center at (888) 549-3798, or order online at www.hondanavi.com.

Update data is not available from your dealer. However, the dealer may assist you in obtaining an update data for you out of courtesy. There is no program for free updates.

45

muck

186

Traffic Information

- Continuously updated traffic information is available in major metropolitan areas across the 48 contiguous states and Hawaii.
- Visit automobiles.honda.com/traffic for a complete listing of coverage areas and other information.

Operation in Alaska, Hawaii, Canada, and Puerto Rico

■XM® Radio

Navigation-equipped vehicles delivered to Alaska, Hawaii, Canada, and Puerto Rico are equipped with XM hardware, but XM broadcasting is not available. There are certain functions that rely on XM satellite signal coverage which are not available. Unavailable menu options will appear gray on the LCD display.

■ Map Coverage

All roads displayed on the map screens are verified roads. Information in this manual relating to "unverified" roads or areas is not applicable.

Address and Place Entry Screens

Entering a destination address or place/ landmark on another island may result in a screen caution message. This is because there are no ferry routes between islands in the database.

Shipping a Vehicle to the U.S. Mainland

To receive XM audio, you must call XM and set up an account at (800) 852-9696.

Copyrights

- infoUSA-Data: Certain business data provided by infoUSA, Inc., Omaha, NE, Copyright © 2010, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2009. All Rights Reserved.
- Building foot print: © ZENRIN CO., LTD. 2009. All Rights Reserved.
- Junction View Data: © ZENRIN USA, INC. 2009. All rights reserved.
- Brand icons: The icons for companies displayed by this product to indicate business locations are the registered marks of their respective owners. The use of such icons in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

As required by the FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada Standard RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.



(n/2°

Index

Hom

Voice Commands



Index

Home

oice Commands	19
Global Commands	19
Navigation Commands	19
Climate Control Commands	19
Audio Commands	19
Cellular Phone Commands	19
Main Setup Screen Commands	19
On-Screen Commands	19
Spelling Assistance	19

Global Commands

The system accepts these commands on any screen.

Help (displays available commands for current screen)

Display map (equivalent to MAP)

Display menu (equivalent to DEST)

Display information (equivalent to INFO)

Display audio screen (equivalent to AUDIO)

Back (returns to previous screen)

Cancel (equivalent to CANCEL)

What is today's date?

What time is it?

Navigation Commands

The system accepts these commands on a map/guidance screen.

■ General Commands

Display menu (if en route, displays the Route screen)

Display navigation (if en route, displays the Route screen)

Display map

Display map guide (when en route, shows the next guidance point)

Display information (or Information)

Display audio screen

Cancel

Backward (or Back)

What time is it?

What is today's date?

Help (reads list of General and Map

Display Commands)

■ Map Display Commands

Display current location (shows current latitude, longitude, and elevation)
Display/Hide (specify icon type):

ATM

gas station

restaurant

post office

grocery store

lodging (hotel, motel)

parking garage

parking lot

school

hospital

freeway exit information

traffic

traffic speeds

traffic icons

traffic incidents

Go home 1

Go home 2

Register the current location (stores current location in the Address Book)

■ Map Scale Commands

Display north up Display heading up Display zoom in Display zoom out Display (specify scale): 1/20 mile (80 m) scale 1/8 mile (200 m) scale 1/4 mile (400 m) scale 1/2 mile (800 m) scale 1 mile (1600 m) scale 2 mile (3 km) scale 5 mile (8 km) scale 15 mile (24 km) scale 50 mile (80 km) scale 150 mile (240 km) scale 350 mile (560 km) scale 1000 mile (1600 km) scale Max zoom in

Max zoom out

■ Find Place Commands

Find nearest (specify place):
Auto service center

ACURA dealers

HONDA dealers

Gas station

Hydrogen station

Auto parts & electronics shop Auto repair & maintenance shop

Car wash & detailing shop

Motorcycle dealers

Other car dealers

Roadside assistance

Banking center

ATM

Bank

Check cashing Currency exchange

Community

Business

City hall

Civic center

Convention center

Court house

Higher education

Library

Post office

School

Emergency room

Hospital

Police station

Veterinarian

Lodging

Bed & breakfast

Hotel

Resort

Leisure center

Amusement park

Golf course

Historical monument

Marina

Movie theater

Museum

Park

Performing arts

Sports complex

Tourist attraction

Restaurant

American restaurant Californian restaurant

Chinese restaurant

Coffee shop

Continental restaurant

Fast food restaurant

French restaurant





uE u

German restaurant Greek restaurant Indian restaurant Italian restaurant Japanese restaurant Korean restaurant Mexican restaurant Pizza Seafood restaurant Thai restaurant Vegetarian restaurant Vietnamese restaurant Other restaurant Shopping area Accessory store Book store Clothing store Grocery store Home improvement store Mall Office supply store Pharmacv Pet food store Sewing store Shoe store Sporting goods store

Airport Automobile club **Bus station** Camping Commuter rail station Ferry terminal Named place Park & ride Parking garage Parking lot Rental car agency Rest area Ski area Tourist information Train station Travel agency Truck stop

■ Route Commands

How long to the destination?*
How far to the destination?*
Display destination map
Display entire route

These commands are not available if you use the joystick to scroll through the map while en route to a destination

Climate Control Commands

The system accepts these commands on most screens.

Climate control automatic (maintains selected temperature)

Climate control off

Air conditioner on*

A' I'' CO

Air conditioner off*

Climate control defrost on*

Climate control defrost off*

Rear defrost on*

Rear defrost off*

Climate control fresh air

Climate control recirculate

Climate control vent

Climate control bi-level (vent and floor)

Climate control floor

Climate control floor and defrost

Fan speed up

Fan speed down

Fan speed # (#: 1 to 7)

Temperature # degrees (#: 57 to 87 °F/

15 to 29 °C)

Driver temperature # degrees (#: 57 to 87 °F/15 to 29 °C)

* These commands toggle the function on and off, so the command may not match your intended action.

192

Toy store

Travel center

Passenger temperature # degrees (#: 57 to 87 °F/15 to 29 °C)
Temperature up
Temperature down
Temperature max hot
Temperature max cold
Driver temperature max cold
Priver temperature max cold
Front climate control automatic
Front climate control off

Audio Commands

The system accepts these commands on most screens.

■ Radio Commands

Audio on*

Audio off*

Radio on*

Radio off*

Radio select FM1

Radio select FM2

Radio select AM

Radio tune to # FM (#: frequency,

e.g., 95.5)

Radio tune to # AM (#: frequency,

e.g., 1020)

Radio seek up

Radio seek down

Radio next station

Radio preset # (#: 1 to 6)

Radio FM preset # (#: 1 to 6)

Radio FM1 preset # (#: 1 to 6)

Radio FM2 preset # (#: 1 to 6)

Radio AM preset # (#: 1 to 6)

Radio auto select*

* These commands toggle the function on and off, so the command may not match your intended action.

Radio scan*

Radio select XM1

Radio select XM2

XM channel # (#: 1 to 255)

XM channel up

XM channel down

XM category up

XM category down

XM preset # (#: 1 to 6)

XM1 preset # (#: 1 to 6)

XM2 preset # (#: 1 to 6)

XM scan*

XM category scan*

XM channel scan*

XM category mode

XM channel mode

* These commands toggle the function on and off, so the command may not match your intended action.

NOTE:

Radio volume levels cannot be controlled using voice control.





194

■ Disc Commands

DISC play

DISC play track # (#: 1 to 30)

DISC skip forward

DISC skip back

DISC track random*

DISC track repeat*

DISC track scan*

DISC folder up

DISC folder down

DISC folder random*

DISC folder repeat*

DISC folder scan*

DISC normal play (cancels random, repeat, or scan play mode, resumes normal play mode)

 These commands toggle the function on and off, so the command may not match your intended action.

■USB Commands

USB play

USB play track # (#: 1 to 30)

USB skip forward

USB skip back

USB track random*

USB track repeat*

USB track scan*

USB folder up

USB folder down

USB folder random*

USB folder repeat*

USB folder scan*

USB normal play (cancels random, repeat, or scan play mode, resumes normal play mode)

 These commands toggle the function on and off, so the command may not match your intended action.

■ iPod® Commands

iPod play

iPod skip forward

iPod skip back

iPod track shuffle*

iPod album shuffle*

iPod track repeat*

iPod normal play (cancels repeat or shuffle play mode, resumes normal play mode)

* These commands toggle the function on and off, so the command may not match your intended action.

■ Bluetooth® Audio Commands

Bluetooth audio play Bluetooth audio skip forward Bluetooth audio skip back Bluetooth audio pause Bluetooth audio resume

NOTE:

Bluetooth® Audio commands may not work on some phones or Bluetooth® audio devices.

■ AUX Commands

AUX play (or Auxiliary play)

Cellular Phone Commands

The system accepts these commands only on the PHONE screen.

Redial

Call History

Phonebook

Dial

Phone Setup

Phone Menu

Speed Dial 1

Speed Dial 2

More Speed Dial Lists

These commands can be made from any screen.

Dial/call by number

Dial/call by voice tag

Main Setup Screen Commands

The system accepts these commands on the Main Setup screen.

Brightness up

Brightness down

Brightness minimum/min.

Brightness maximum/max.

Contrast up

Contrast down

Contrast minimum/min.

Contrast maximum/max.

Black level up Black level down

Black level minimum/min

Black level maximum/max.

Volume up

Volume down

Volume minimum/min.

Volume maximum/max.

Volume off

Guidance prompts normal

Guidance prompts maximum/max Guidance prompts minimum/min





Voice Commands

On-Screen Commands

The system accepts these commands on any screen. There are over 100 on-screen commands. Say what is written on the screen to activate that selection. For lists, you can say the list item number to select that item.

Next/Previous*1 Right/Left*1

Up/Down*2

Return

OK (excluding Startup Confirmation screen)

Delete

- *1. To get to another tab.
- *2. While driving, you can scroll down the list up to three pages.

Spelling Assistance

The voice control system can also recognize phonetic alphabet input for numbers, letters, accented letters, punctuation marks, and symbols.

NOTE:

When selecting letters using the voice control system, a confirmation box may pop up to confirm the entry.

Numbers



Say	Say or Number
1	One
2	Two
3	Three
4	Four
5	Five
6	Six
7	Seven
8	Eight
9	Nine
0	Zero

■ Letters



Say	Or say	
А	Alpha/Apple	
В	Bravo/Boy	
C	Charlie	
D	Delta/Dog	
E	Echo/Edward	
F	Foxtrot/Frank	
G	Golf/George	
Н	Hotel/Henry	
1	India/Igloo	
J	Juliet/John	
K	Kilo/King	
L	Lima/Larry	
M	Mike/Mary	
N	November/Nancy	

Say	Or say	
0	Oscar	
P	Papa/Paul	
Q	Quebec/Queen	
R	Romeo/Robert	
S	Sierra/Sam	
Т	Tango/Tom	
U	Uniform/Uncle	
V	Victor	
W	Whiskey/William	
X	X-ray	
Υ	Yankee/Yellow	
Z	Zulu/Zebra	

■ Accented Letters



Say	Say or Symbol		
À	A grave		
Â	A circumflex		
Ä	A umlaut		
Ç	C cedilla		
È	E grave		
É	E acute		
Ê	E circumflex		
Ë	E umlaut		
ì	I grave		
Î	I circumflex		
Ϊ	I umlaut		
Ô	O circumflex		
Ù	U grave		
Û	U circumflex		





н		

Say	Say or Symbol
Ü	U umlaut

■ Symbols





Say	Say or Symbol		
@	At sign		
٨	Caret		
*	Asterisk		
_	Underscore		
`	Back quote		
,	Comma		
	Dot		

Say	Say or Symbol		
?	Question mark		
:	Colon		
;	Semicolon		
+	Plus		
-	Hyphen		
!	Exclamation point		
n .	Double quote		
#	Pound		
\$	Dollar		
%	Percent		
&	Ampersand		
,	Apostrophe		
(Open parenthesis		
)	Close parenthesis		
~	Tilde		
/	Slash		
<	Less than		
>	Greater than		
{	Open brace		
}	Close brace		
4	Enter		

Auto	Auto Service		Lodging		Shopping	
All Types (Auto Service)	Car Wash & Detailing	All Types (Lodging)	Hotel/Motel	All Types (Shopping)	Mall/Department Store	
Honda Dealers*	Motorcycle Dealers	Bed & Breakfast		Accessories/Jewelry	Office Supplies/Electronics	
Acura Dealers*	Other Car Dealers	Leisure		Auto Parts & Electronics	Pet Food/Supplies	
Gas Station*	Parking Garage/House	All Types (Leisure)	Museum	Books/Music/Video	Pharmacy/Drug Store	
Hydrogen Station	Parking Lot	Amusement Park	Park/Recreation Area	Clothing/Shoes/Bags	Sewing/Linen	
Auto Parts & Electronics	Rental Car Agency	Golf Course	Performing Arts	Furniture/Home Furnishing	Sporting Goods	
Auto Repair & Maintenance	Roadside Assistance	Historical Monument	Sports Complex	Groceries/Supermarket	Toys/Arts/Crafts	
Ва	nking	Marina	Tourist Attraction	Home Improvement		
All Types (Banking)	Check Cashing/Money Transfer	Movie Theater		Travel		
ATM*		Resta	urant	All Types (Travel)	Park & Ride	
Bank		All Types (Restaurant)*	Indian	Airport	Parking Garage/House	
Com	munity	American	Italian	Automobile Club Parking Lot		
All Types (Community)	Court House	Café/Coffee Shop	Japanese	Bed & Breakfast	Rental Car Agency	
Business	Higher Education	Californian	Korean	Bus Station	Rest Area	
City Hall	Library	Chinese	Mexican	Camping	Ski Area	
Civic/Community Center	Post Office	Continental	Pizza	Commuter Rail Station	Tourist Attraction	
Convention/Exhibition Center	School	Fast Food	Seafood	Ferry Terminal	Tourist Information	
Emergency		French	Thai	Hotel/Motel	Train Station	
All Types (Emergency)	Roadside Assistance	German	Vegetarian	Named Place	Travel Agency	
Hospital*	Veterinarian	Greek	Vietnamese			
Police Station		Ice Cream/Dessert	Other			

^{*} Stored in "Fav. Subcategory" by factory default.





(Ch *) (Dis 分) (Dis 分) (Ha 全 (Pick-t 岭 (Talk)
A
A.SEL (Au
Add to A
Add to D
Address
Editing .
Editing .
Setting
Address E
Editing .
Setting
Address E
Adjust Tii
Advanced
Audio Basic Op
Remote
Sound S
Voice C
AUDIO B
Audio Me
Bluetoo
FM/AM
XM® Ra

Symbols	Auto Answer 155
<u></u>	Auto Daylight46
【▶ (Channel) Button142 ※→ (Display Mode) Button26	Auto Service (Place Category)67
予 (Display/Information) Button5, 142	Auto Time Zone46
	Auto Transfer155
≘ ⁄ =) (Hang-Up/Back) Button 5, 19, 159 ⊆ (Pick-Up) Button 5, 159, 160	AUX
	Input Jack114
(Talk) Button	Voice Commands List
H (Volume) Button142	Avoid Streets 102
A	В
SEL (Auto Select)117	Banking (Place Category)67
add to Address Book77, 112	Basic Settings23, 24
add to Dest. List 77, 106, 110, 111, 112	Black Level21
Address	Bluetooth Setup
Editing Address Book32	Bluetooth Connection
Editing Avoid Area44	Bluetooth® Audio
Setting Destination58	Playing
Address Book	Voice Commands List
Editing Address Book30	Bluetooth® HandsFreeLink®143
Setting Destination63	Editing Phone Info154
Address Book PIN36	Making a Call155
Adjust Time47	Pairing a Phone146
dvanced (Place Category)67	Phone Setup
udio113	Receiving a Call159
Basic Operation6	Setting Speed Dials151
Remote Control141	Brightness21, 26
Sound Setup140	, .
Voice Commands List193	
UDIO Button4	C
audio Menu	Call
Bluetooth® Audio139	Calculate Route Screen
FM/AM Radio118	Call History
XM® Radio123	Cancel Route

Category
Editing Address Book
Place Category List19
Setting Destination
CD/XM Button 6, 121, 125, 130, 134, 13
Change Language
Change Route Preference
Change State
Channel List12
City
City Vicinity
Setting Destination
Clear All Speed Dial
Clock Adjustment
Adjust Time
Auto Daylight
Auto Time Zone
Clock Format
Resetting
Clock Format
Clock Type
Color
Map Color
Menu Color
Community (Place Category)
Connect (Phone)15
Continue Trip1
Contrast
Coordinate
Correct Vehicle Position
Current Location
Current Position
Editing Address Book
Setting Destination

D Day Mode Favorite Subcategory69 Icon Option93 Map Color25 Find Nearest... 108 Menu Color25 Switching Display Mode26 FM/AM Radio Delete this Phone149 Playing116 Voice Commands List193 **DEST Button** Changing Route101 Folder List Entering a Destination56 USB Flash Drive136 DEST Menu 256 Destination Map79 G Go Home 110 Directions88 Go Home 1 PIN 36 Disc Go Home 210 Go Home 2 PIN36 Playing125 Guidance Menu87 Display Voice Command Tips23 Directions 88 Exit Info89 Guidance Mode 90 E Guidance Mode90 Guidance Prompts22 Edit Avoid Area43 Edit Speed Dial151 Edit Waypoint Search Area45 Н Emergency (Place Category)67 Heading-up97 Home Address 110. 35 Home Address 210, 35 iPod®176 Navigation System174 Honda Customer Services184 Exit Info.

Intersection	74
iPod®	
Connecting, Disconnecting	129, 133
Playing	129
Voice Commands List	194
K	
keyboard Layout	23
L	
Language	28
Leisure (Place Category)	
Lodging (Place Category)	
M	
Map Color	25
Map Input	
Editing Avoid Area	44
Setting Destination	75
Map Legend	7, 94
Map Menu	85
Map Screen	80
lcon	7, 92, 96
Orientation	97
Scale	95
Map Update	
Checking Version	
Obtaining Update Data	185
Viewing Update Status	165







MAP/GUIDE Button8, 90	Phone Setup 144	Reset Clock Settings4
Menu (DEST Menu 1)56	Phonebook	Reset Factory Default5
Menu (DEST Menu 2)56	Making a Call157	Restaurant (Place Category)6
Menu (Route)101	PIN Numbers	Route (Menu)10
Menu Color25	Personal Info36	Route Pref7
Mode123	Phone154	Routing & Guidance3
Music Search	Place Category	
iPod®132	Editing Address Book32	S
Mute	Place Category List199	3
My Destination	Setting Destination67	Scan
Adding Waypoint103	Place Name	Disc12
Editing107	Editing Address Book32	FM/AM Radio11
	Setting Destination65, 68	USB Flash Drive13
A.I	Place Phone No.	Scan Category12
N	Editing Address Book32	Scan Channel12
Night Mode	Setting Destination72	Search by Keyword6
Map Color25	Previous Destination	Security PIN Code18
Menu Color25	Deleting38	SEEK/SKIP Button
Switching Display Mode26	Editing Address Book32	Shopping (Place Category)6
North-up97	Setting Destination64	Show Icon on Map9
		Single Screen9
0	В	Sort by Distance to Travel6
0	R	Sound Setup14
Off-road Tracking	Radio	SOURCE Button14
Driving83	FM/AM116	Speed Dial
Setting50	XM®121	Making a Call15
_	Random (Pairing Code)148	Registering15
D	RDS Search119	Split Screen9
P	Read Radio Text120	Street6
Pair Phone146	Recalculation	System/Device Information16
Pairing Code148	Repeat	•
Personal Information29	iPod®131	
Phone	USB Flash Drive136	
Voice Commands List195	Replace this Phone 154	
PHONE Button4	Rerouting40	
	=	

T
Touch Tones159
Traffic Detail99
Traffic Rerouting99
Transfer Call159
Travel (Place Category)67
Trip Computer164
Tune
FM/AM Radio117
XM® Radio122
U
Units (mile or km)23
Unverified Area Routing41
Update System Software
Finding Update Information
Obtaining Update Data185
USB Flash Drive
Connecting, Disconnecting129, 133
Playing133
Voice Commands List194
V
Vehicle49
Correct Vehicle Position
Off-road Tracking50
Verbal Reminder24
View Area Map43
View Routes 78
Voice
Map Menu84
1

Voice Commands	
Basic Operation	9
Help	13
Voice Commands List	190
Voice Control System	19
Voice Control Operation	
Basic Operation	5
Voice Recognition Tutor	23
Voice Tag	152
Editing	153
Registering	152
VOL (Volume/Power) Knob	6
Volume	21
Guidance	21
Phone	155
Waypoint Adding Deleting, Ordering	
X XM® Radio Playing Voice Commands List	
Z ZOOM IN/OUT Button	4, 96



