

Use these links (and links throughout this manual) to navigate through this reference.
For a printed owner's manual, click on authorized manuals or go to www.helminc.com.

Table of Contents

Refer to [1999 RL Owner's Manual](#) for more information.

Introduction.....	2
System Controls.....	4
System Start-up.....	6
Main Menu.....	7
Selecting By Address.....	8
Selecting By Intersection.....	13
Selecting By Places.....	19
Outlying Areas.....	25
Selecting A Previous Destination..	26
Selecting By Map Input.....	27
Traveling To Your Destination.....	30
The Map Screen	34
Going Off the Route.....	36
Modifying the Route.....	36
System Setup.....	38
Personal Addresses.....	43
Entering a PIN.....	43
Entering Personal Addresses.....	43
Updating a Personal Address.....	48
Selecting a Personal Address as a Destination.....	49
System Security.....	51
System Limitations.....	52
Customer Assistance.....	54
Alpha Index	