

Trip Odometer/Reset Knob

There are two trip odometers. Each odometer works independently, so you can keep track of two different distances. Switch between them and the odometer by repeatedly pressing and releasing the reset button.

To reset a trip odometer, display it, then press and hold the reset button until the odometer clears to zero.

Fuel Gauge

The fuel gauge will register the approximate fuel level in the tank when the key is in the "ON" position. The following conditions may be considered normal:


- Gas station pumps may shut off before the fuel gauge indicates "F" (FULL).
- The amount of fuel required for a fill-up may not exactly correspond to the gauge.
- The needle may not move away from "F" (FULL) until some time after fill-up.
- The needle may move during turning, stopping and acceleration.

When the key is turned to the "OFF" position, the needle does not return to the "E" (EMPTY) mark but remains to indicate the approximate fuel level.

Gauge Reading	Remaining Amount Approx. Gallons (Liters)
F	20.2 (78.0)
1/2	12.3 (47.5)
E	2.1 (8.0)

Engine Coolant Temperature Gauge

When the key is in the "ON" position, the engine coolant temperature gauge indicates the temperature of the engine coolant. The letters "C" and "H" on the gauge represent "Cold" and "Hot," respectively.

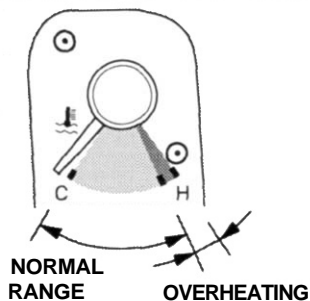

If the pointer reaches the "H" mark, pull safely to the side of the road. Turn to page [208](#) for instructions and precautions on checking the engine's cooling system.

NOTICE

Driving with the temperature gauge pointer at "H" can cause serious damage to the engine.