

Maintenance Schedule (Severe Conditions)

Service at the indicated distance or time – whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120	
	km x 1,000	24	48	72	96	120	144	168	192	
	months	12	24	36	48	60	72	84	96	
Replace engine oil and oil filter	Replace every 3,750 miles (6,000 km) or 6 months									
Check engine oil and coolant	Check oil and coolant at each fuel stop									
Clean (○) or replace (●) air cleaner element Use normal schedule except in dusty conditions	○	●	○	●	○	●	○	●	○	
Inspect valve clearance (2.5 TL)		●		●		●		●		
Replace spark plugs	2.5 TL	●		●		●		●		
	3.2 TL	Replace every 105,000 miles (168,000 km) or 84 months								
Replace timing belt*1 and inspect water pump								●	●	
Inspect and adjust drive belts		●		●		●		●	●	
Inspect idle speed								●	●	
Replace engine coolant			●		●		●		●	
Replace transmission fluid		●		●		●		●	●	
Replace front differential fluid		●		●		●		●	●	
Inspect front and rear brakes	Inspect every 7,500 miles (12,000 km) or 6 months									
Replace brake fluid			●		●		●		●	
Check parking brake adjustment	●	●	●	●	●	●	●	●	●	
Lubricate locks and hinges	●	●	●	●	●	●	●	●	●	
Rotate tires (Check tire inflation and condition at least once per month)	Rotate tires every 7,500 miles (12,000 km)									
Visually inspect the following items:										
Tie rod ends, steering gear box, and boots Suspension components, Driveshaft boots	Every 7,500 miles (12,000 km) or 6 months									
Brake hoses and lines (including ABS) All fluid levels and condition of fluid Cooling system hoses and connections *Exhaust system *Fuel lines and connections Lights and controls, Vehicle underbody	●	●	●	●	●	●	●	●	●	

Follow the Severe Maintenance Schedule if you drive your vehicle *MAINLY* under one or more of the following conditions:

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot [over 90° F (32°C)] conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a roof rack carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

* 1 : Refer to page 201 for replacement information under special driving conditions.

For Canadian Owners
Follow the Maintenance Schedule for Severe Conditions.

Maintenance Schedule for Severe Conditions (listed by distance/time)

Use this schedule if your vehicle is MAINLY driven in any of the following Severe Conditions, or normally driven in Canada; otherwise use the Normal Schedule. Service at the indicated distance or time, whichever comes first. Do the items in **A, B, C** as required for each distance/time.

3,750 mi/6,000 km/6 mos	<input type="checkbox"/> Replace engine oil and filter.
7,500 mi/12,000 km/-	Do items in A.
11,250 mi/18,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
15,000 mi/24,000 km/1 yr	Do items in A, B.
18,750 mi/30,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
22,500 mi/36,000 km/1½ yrs	Do items in A.
26,250 mi/42,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
30,000 mi/48,000 km/2 yrs	<input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Replace front differential fluid. Do items in A, B, C.
33,750 mi/54,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
37,500 mi/60,000 km/2½ yrs	Do items in A.
41,250 mi/66,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
45,000 mi/72,000 km/3 yrs	<input type="checkbox"/> Replace coolant. <input type="checkbox"/> Replace brake fluid. <input type="checkbox"/> Replace front differential fluid. Do items in A, B.
48,750 mi/78,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
52,500 mi/84,000 km/3½ yrs	Do items in A.
56,250 mi/90,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
60,000 mi/96,000 km/4 yrs	<input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Replace front differential fluid. Do items in A, B, C.
63,750 mi/102,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
67,500 mi/108,000 km/4½ yrs	Do items in A.
71,250 mi/114,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
75,000 mi/120,000 km/5 yrs	<input type="checkbox"/> Replace coolant. <input type="checkbox"/> Replace front differential fluid. Do items in A.
78,750 mi/126,000 km/-	<input type="checkbox"/> Replace engine oil and filter.

Severe Conditions:

- Driving less than 5 mi (8 km) per trip or, in freezing temperatures, driving less than 10 mi (16 km) per trip.
- Driving in extremely hot (over 90°F/32°C) conditions.
- Extensive idling or long periods of stop-and-go driving.
- Trailer towing, driving with a roof rack carrier, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

A

- Replace engine oil and filter.
- Inspect front and rear brakes.
- Rotate tires (follow pattern on page 204).
- Inspect tie rod ends, steering gearbox and boots.
- Inspect suspension components.
- Inspect driveshaft boots.

B

- Clean air cleaner element.
- Check parking brake adjustment.
- Lubricate door locks and hinges with multipurpose grease.

CONTINUED

Maintenance Schedule for Severe Conditions (listed by distance/time)

82,500 mi/132,000 km/5½ yrs	Do items in A.
86,250 mi/138,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
90,000 mi/144,000 km/6 yrs	<input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Replace brake fluid. <input type="checkbox"/> Replace front differential fluid. Do items in A, B, C.
93,750 mi/150,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
97,500 mi/156,000 km/6½ yrs	Do items in A.
101,250 mi/162,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
105,000 mi/168,000 km/7 yrs	<input type="checkbox"/> Replace timing belt, inspect water pump.* <input type="checkbox"/> Replace coolant. <input type="checkbox"/> Replace front differential fluid. <input type="checkbox"/> Inspect idle speed. Do items in A, B.
108,750 mi/175,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
112,500 mi/181,000 km/7½ yrs	Do items in A.
116,250 mi/187,000 km/-	<input type="checkbox"/> Replace engine oil and filter.
120,000 mi/193,000 km/8 yrs	<input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Replace front differential fluid. Do items in A, B, C.

<input type="checkbox"/> Inspect brake hoses and lines (including ABS). <input type="checkbox"/> Check all fluid levels condition of fluids. <input type="checkbox"/> Inspect cooling system hoses and connections. <input type="checkbox"/> * Inspect exhaust system. <input type="checkbox"/> * Inspect fuel lines and connections. <input type="checkbox"/> Check all lights and controls. <input type="checkbox"/> Inspect the vehicle underbody.
C <input type="checkbox"/> Replace spark plugs. <input type="checkbox"/> Inspect and adjust drive belts. <input type="checkbox"/> Replace transmission fluid. <input type="checkbox"/> Replace air cleaner element.

: See maintenance and emissions warranty info, last column, page 159.

* : See Timing Belt on page 201 to determine need for replacement.

Required Maintenance Record (for Normal and Severe Schedules)

You or the servicing dealer can record all completed maintenance here, whether you follow the schedule for normal conditions (page 160) or severe conditions (page 162). Keep the receipts for all work done on your vehicle.

3,750 mi 6,000 km (or 6 mo)	Signature or dealer stamp	mi/km
		Date
7,500 mi 12,000 km		mi/km
		Date
11,250 mi 18,000 km		mi/km
		Date
15,000 mi 24,000 km (or 1 year)		mi/km
		Date
18,750 mi 30,000 km		mi/km
		Date
22,500 mi 36,000 km (or 1½ years)		mi/km
		Date
26,250 mi 42,000 km		mi/km
		Date
30,000 mi 48,000 km (or 2 years)		mi/km
		Date

33,750 mi 54,000 km	Signature or dealer stamp	mi/km
		Date
37,500 mi 60,000 km (or 2½ years)		mi/km
		Date
41,250 mi 66,000 km		mi/km
		Date
45,000 mi 72,000 km (or 3 years)		mi/km
		Date
48,750 mi 78,000 km		mi/km
		Date
52,500 mi 84,000 km (or 3½ years)		mi/km
		Date
56,250 mi 90,000 km		mi/km
		Date
60,000 mi 96,000 km (or 4 years)		mi/km
		Date

Required Maintenance Record (for Normal and Severe Schedules)

63,750 mi 102,000 km	Signature or dealer stamp	mi/km
		Date
67,500 mi 108,000 km (or 4½ years)		mi/km
		Date
71,250 mi 114,000 km		mi/km
		Date
75,000 mi 120,000 km (or 5 years)		mi/km
		Date
78,750 mi 126,000 km		mi/km
		Date
82,500 mi 132,000 km (or 5½ years)		mi/km
		Date
86,250 mi 138,000 km		mi/km
		Date
90,000 mi 144,000 km (or 6 years)		mi/km
		Date

93,750 mi 150,000 km	Signature or dealer stamp	mi/km
		Date
97,500 mi 156,000 km (or 6½ years)		mi/km
		Date
101,250 mi 162,000 km		mi/km
		Date
105,000 mi 168,000 km (or 7 years)		mi/km
		Date
108,750 mi 174,000 km		mi/km
		Date
112,500 mi 180,000 km (or 7½ years)		mi/km
		Date
116,250 mi 186,000 km		mi/km
		Date
120,000 mi 192,000 km (or 8 years)		mi/km
		Date

Non-Scheduled Maintenance Record

Record additional maintenance for severe driving conditions or non-scheduled maintenance on this page (see page 159).

Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date

Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date
Maintenance Performed:	(Sign or Stamp)	Miles (Km)
		Date