

TECHNOLOGY  
REFERENCE  
GUIDE



[owners.honda.com](http://owners.honda.com)

2013 Honda Accord Sedan Touring  
Technology Reference Guide

©2012 American Honda Motor Co., Inc. — All Rights Reserved

Printed in U.S.A.

31T2A000  
00X31-T2A-0000

 


2013 Accord Sedan  
Touring

# TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of its technology and convenience features. This guide covers the Accord Sedan Touring.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual or Navigation Manual.

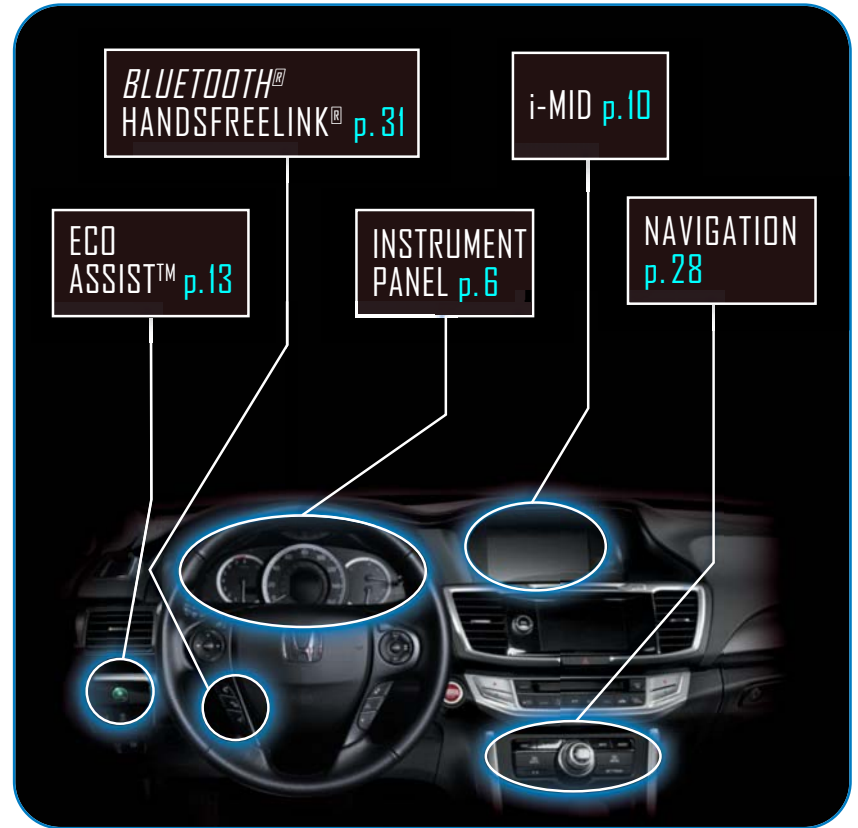

Smart Entry with Push Button Start.....	2
Auto Door Locks .....	4
Instrument Panel Indicators .....	6
Intelligent Multi-Information Display (i-MID) .....	8
Color Information Display.....	10
Using the Touchscreen.....	11
Tire Pressure Monitoring System (TPMS) .....	12
Eco Assist™.....	13
Driving Position Memory System (DPMS).....	14
One-Touch Turn Signal.....	15
Auto Headlights with Wiper Integration.....	15
Multi-View Rear Camera .....	16
LaneWatch™ .....	18
Lane Departure Warning (LDW) .....	19
Forward Collision Warning (FCW) .....	20
Adaptive Cruise Control (ACC).....	22

Voice Recognition.....	24
Navigation.....	28
Bluetooth® HandsFreeLink® (HFL).....	31
SMS Text Messaging and E-Mail .....	36
Bluetooth® Audio .....	38
iPod® or USB Flash Drive .....	39
HDD Audio.....	40
Song By Voice.....	42
HondaLink featuring Aha™.....	43
Pandora®.....	44
Settings for Your Vehicle .....	45
HomeLink® .....	46
Owner Link.....	47
Safety Reminder.....	47
Fuel Recommendation.....	48

## SMART ENTRY WITH PUSH BUTTON START

### Unlocking the Doors



**Grab** either one of the front door handles.



### Locking the Doors



**Press** the door lock button on either front door handle.



### Opening the Trunk



**Press** the trunk release button under the trunk handle.

 


Operate certain functions of your vehicle by simply having the remote within operating range.

### Engine Start/Stop Button

#### Accessory or On Mode


Operate audio or other electrical features without turning the engine on.

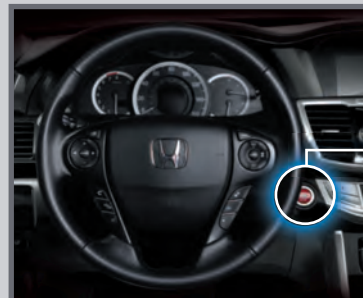


**Press** the ENGINE START/STOP button once (without pressing the brake pedal). **Press** it again for ON mode.




#### Starting the Engine

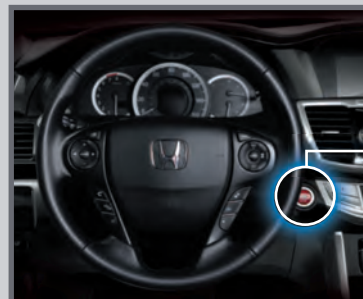 

 
**Press and hold** the brake pedal, then **press** the ENGINE START/STOP button.

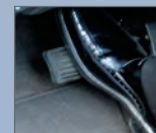

#### Turning the Vehicle Off

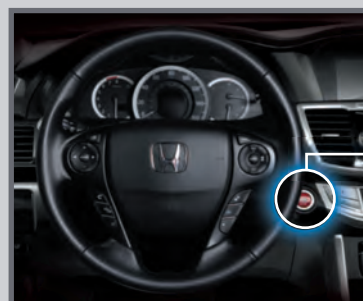 

 **Shift** to Park, then **press** the ENGINE START/STOP button.

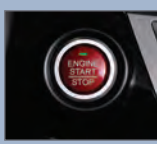

**Note:** If you press the button and the shift lever is not in Park, the vehicle goes into Accessory mode.

## AUTO DOOR LOCKS

### Door Locks



#### Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.



#### Default Unlock Setting

All doors are set to unlock when the driver's door is opened.



Program how and when the vehicle doors automatically lock and unlock.

### Changing the Door Lock Settings

Below is an example of how to change the auto door unlock setting\*. Make sure the vehicle is in ON mode. See your Owner's Manual for other setting options.

Use the interface dial to make and enter selections.

 
#### 1. Press SETTINGS.




#### 2. Select Vehicle Settings.




#### 3. Move the interface dial to the right to Door/Window Setup.

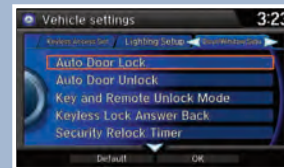

#### 4. Select Auto Door Unlock.

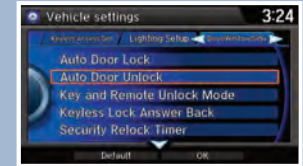 

#### 5. Select from the options.

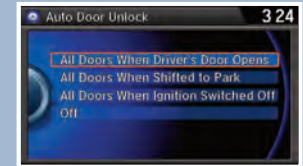 

#### 6. Press BACK to exit the menu.



**Note:** The driver's and front passenger's door can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for rear passengers.

\*You can also change vehicle settings using the multi-information display








 

 
 
 
 
## INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.







### Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

 Charging system	 ABS (anti-lock brake system)
 Low brake fluid	 Malfunction lamp (check engine light)
 Low oil pressure	 TPMS (tire pressure monitoring system)
 SRS (supplemental restraint system)	 VSA <sup>®</sup> (vehicle stability assist)
 EPS (electric power steering)	 Smart Entry System
 FCW (forward collision warning system)	 Brake system
 LDW (lane departure warning system)	 Adaptive Cruise Control









### Condition Indicators

Action is needed by driver

 Parking brake on: <b>Release</b>	 Seat belt reminder: <b>Fasten seat belt(s)</b>
 Door/Trunk open: <b>Close door(s) / trunk</b>	 Immobilizer (blinks): <b>Use correct key</b>

 Low fuel: <b>Refill</b>	 Low tire pressure: <b>Add air</b>
 FCW (blinks): <b>Brake</b>	 System message indicator: <b>Check MID</b>
 LDW (blinks): <b>Stay in your lane</b>	

 
### On/Off Indicators

 PASSENGER AIRBAG OFF (next to display screen)	 Headlights <b>on</b>
 VSA <b>OFF</b>	 Turn signals/hazards <b>on</b>
 ECON Mode <b>on</b>	 High beams <b>on</b>
 Fog lights <b>on</b>	 Adaptive Cruise Control <b>on</b>

## MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

### Accessing the Information Display

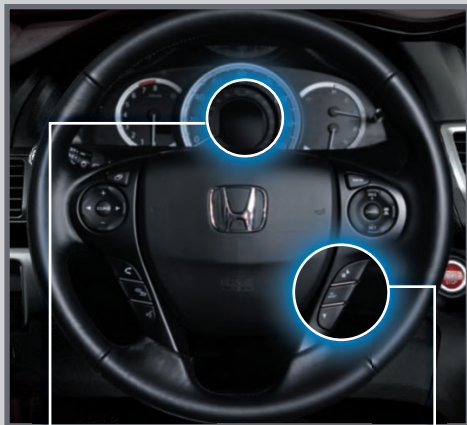


When you start the engine, the information display shows your last active selection from the previous drive cycle.



To toggle between the different displays:


- **Press** either info button (▲/▼) for the main displays.
- **Press** SEL/RESET for the lower displays.

### Main Displays

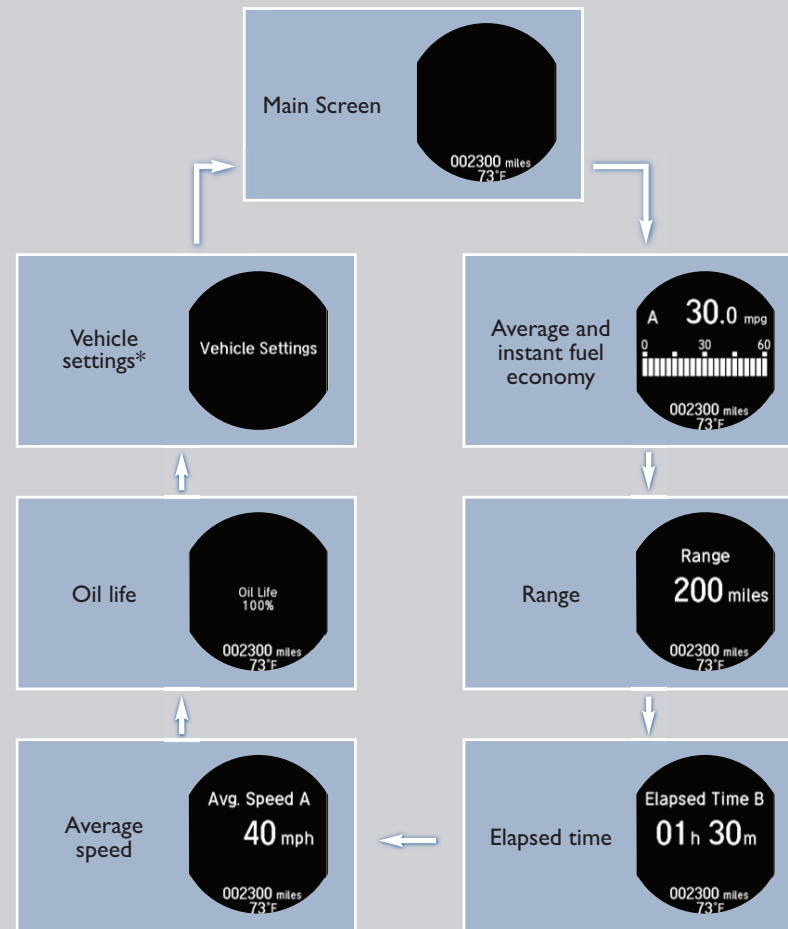 

\*You can also change vehicle settings using the SETTINGS button on the center panel.

### Lower Displays

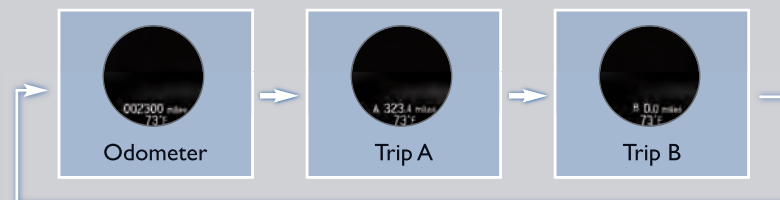 



## INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the center screen.

### Changing the Display



Press the Display button to change the main displays.



### Display Options

**Audio**  
Shows current audio information.



**Phone**  
Shows phone screen.



**Navigation**  
Shows map or navigation information.



**Info**  
Shows information screen and options.



## USING THE TOUCHSCREEN

Interactive touchscreen display includes audio and *Bluetooth*® HandsFreeLink® functionality.

### Audio Options



**Source:** Select audio sources.

**Preset:** Select preset stations or channels.

**Skip/Seek:** Change stations, channels, tracks, etc.

**More:** Select menu options and sound settings.



*FM screen shown*

### *Bluetooth*® HandsFreeLink® Options\*

When you enter the Dial screen from the Phone Menu, you can use the touchscreen to enter the number.



When you enter the Phonebook screen from the Phone Menu, you can use the touchscreen to search for names.



\* Manual operation is inoperable while the vehicle is moving.

### Sound/Screen Options

Select More from the main screen.



**Select** Sound Settings to adjust the audio system.

 


**Select** Screen Settings to adjust various screen features.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

### How It Works

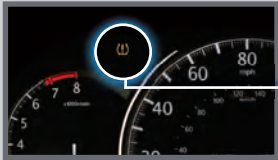

When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

### What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.
3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.



### TPMS Calibration

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system.

1. **Press SETTINGS.**



2. **Select Vehicle Settings.**



 
3. **Select TPMS Calibration.**



4. **Select Calibrate.**



5. The low tire pressure indicator blinks and calibration begins.



## ECO ASSIST™

When turned on, performance of the vehicle's engine, transmission, cruise control, and air conditioning system are adjusted to maximize fuel efficiency.

### ECON Button

1. **Press ECON** to turn the system on.



2. The **ECON** mode indicator comes on.



3. **Press ECON** again to turn the system off.



### Ambient Meter

Indicates instant fuel efficiency using color-coded bars.

High fuel efficiency



Moderate fuel efficiency



Low fuel efficiency





## DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote (1 or 2), which are recalled when you unlock the driver's door with the remote and enter the vehicle.

### How It Works

1. **Turn on** the vehicle. Make sure the shift lever is in Park (P).



2. **Adjust** your preferred seat settings.



3. **Press SET.** You will hear a beep.



4. **Press** the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.



**Note:** Stored positions can also be recalled by pressing memory buttons (1 or 2) on the door.

## ONE-TOUCH TURN SIGNAL

Use this quick and convenient method to signal a lane change.

### How It Works

- Lightly push the turn signal lever up or down for a three-blink sequence.
- For a continuous signal, push the lever up or down until it locks into place.

 


## AUTO HEADLIGHTS WITH WIPER INTEGRATION

For your safety and convenience, your vehicle's headlights automatically turn on when you activate the windshield wipers.

### How It Works

- Make sure your headlights are in the AUTO position.
- Turn on your windshield wipers. The headlights also turn on.
- When you turn off the windshield wipers, the headlights turn off shortly after.




## MULTI-VIEW REAR CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

### How It Works

 - When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the navigation display, along with helpful parking guidelines.
- The display turns off when you shift out of Reverse.

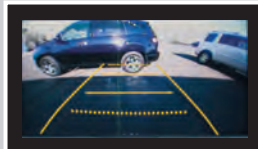

### Switching Views

There are three rearview modes: wide, normal, and top down. **Press** the interface dial to toggle between views.



Wide (default)



Normal



Top down



## Camera Settings

Turn the guidelines on or off.

Use the interface dial to make and enter selections.

1. **Press** SETTINGS.



 
2. **Select** Camera Settings.



3. **Select** Rear Camera.



4. **Select** one of the options.

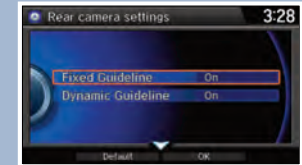

*Fixed Guidelines:* Guidelines appear when you shift into Reverse. **Select** On or Off.

*Dynamic Guidelines:* Guidelines move as you turn the steering wheel. **Select** On or Off.

5. **Press** BACK to exit the menu.




## LANEWATCH™


 
Helps you check your right blind spots when you make a right lane change.

### How It Works

When the right turn signal is activated, a camera located in the passenger side door mirror shows the right rear area outside your vehicle on the display.

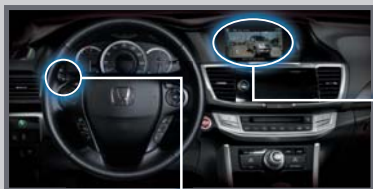


#### Visibility Area

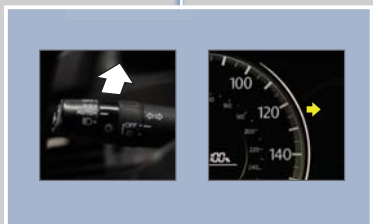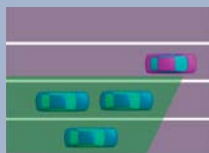  

### LaneWatch Display

 **Press** the LaneWatch button on the turn signal switch to view a constant real-time display. **Press** it again to turn the display off. The display still appears when the right turn signal is activated.

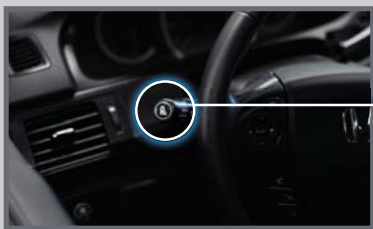


See your Owner's Manual for more information on adjusting LaneWatch settings.

## LANE DEPARTURE WARNING (LDW)

 Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated.

### How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.

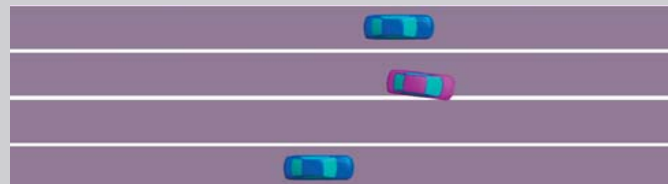

If you cross a lane line without using your turn signal, the LDW indicator flashes, a message appears on the MID, and a beep sounds.



LDW may not activate under certain conditions. See your Owner's Manual for more information.

### Turning LDW On or Off

**Press** the LDW button to turn the system on or off.



LDW On



LDW Off



# FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.

 
## How It Works

If the radar sensor in the front grille detects a vehicle in front of you when your vehicle speed is 10 mph or higher--and it determines there is a likelihood of a frontal collision--the system provides you with the following visual and audible warnings:



With the FCW Distance set to Short:

- the heads-up light near the windshield flashes continuously
- the FCW indicator flashes continuously
- a beep sounds continuously until you take preventive action

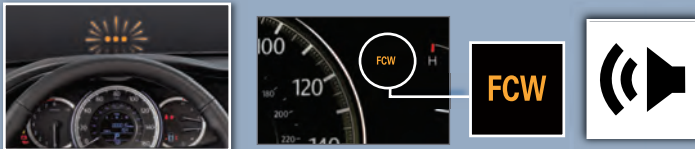

With the FCW Distance set to Normal or Long:

- the heads-up light near the windshield and FCW indicator flash twice
- if you do not take action to prevent a collision and the distance to the other vehicle becomes sufficiently close, BRAKE flashes on the MID, the FCW indicator and heads-up light flash, and a beep sounds continuously until you take preventive action



FCW may not activate under certain conditions. See your Owner's Manual for more information.

## Customizing FCW

Use the interface dial to make and enter selections.

 
1. Press **SETTINGS**.




2. Select **Vehicle Settings**.



3. **Move** the interface dial to the right to **Driver Assist Style**.

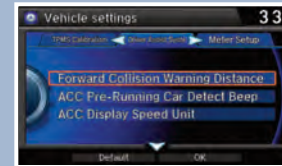


 4. **Select** Forward Collision Warning Distance.

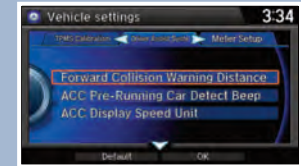

5. **Select** one of the options.

 - Long:* early warning timing
- Normal:* standard warning timing
- Short:* late warning timing
- Off:* Turn the system off

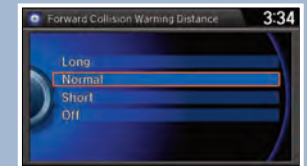

6. Press **BACK** to exit the menu.



## ADAPTIVE CRUISE CONTROL (ACC)

Set a time or space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and adapts to maintain a set range.

### How It Works

#### 1. Press MAIN.



2. ACC appears on the MID and the ACC indicator comes on.



### Switching Between ACC and Standard Cruise Control

1. Press and hold the Distance button for about one second.



2. The selected mode appears on the MID.

ACC Mode Selected

Cruise Mode Selected

### Switching Between ACC and Standard Cruise Control

 
1. Press MAIN to activate.




2. Accelerate to the desired speed (above 25 mph).



3. Press and release -/SET, then release the accelerator pedal.



 4. To increase speed: Press RES/+. To decrease speed: Press -/SET.



### Canceling ACC

There are three ways to cancel:

Press MAIN.



Press CANCEL.



 
Tap the brake pedal.




### Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

ACC automatically adjusts the following distance based on the range selected and your vehicle speed.

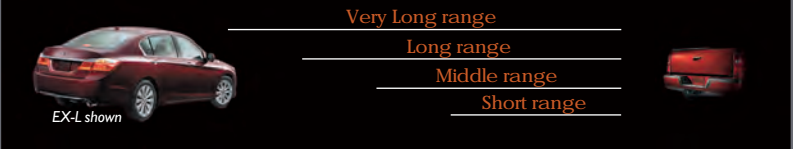

 Press the Distance button to shuffle through four ranges.

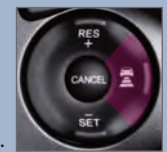

The selected range and set speed are shown on the MID.

Range	MID Screen
Very Long	50 mph
Long	50 mph
Middle	50 mph
Short	50 mph

If a vehicle enters the ACC range, a beep sounds and a vehicle icon appears on the MID.



If there is no vehicle ahead of you, a dotted-line vehicle icon appears on the MID.



Note: The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.



## VOICE RECOGNITION

### How It Works

Control four different systems with the steering wheel buttons and the ceiling microphone.

**To reduce the likelihood of driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.**



**Pick-Up button:** Answer an incoming call or go to a phone-specific voice portal screen.

**Hang-Up/Back button:** End a call, decline an incoming call, or cancel an operation.

**Talk button:** Give phone, navigation, audio, or climate control commands.



### Voice Command Tips

- To hear a list of available commands at any time, press and release the Talk button, then say “Help.”
- When using the Talk button, wait for a beep, then give a command.
- When the Talk button is pressed, all available voice commands are highlighted in yellow.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

 
To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of commands, say “Information” and “Voice Help.”

### Voice Command Portal

When you press the Talk button from any of the main screens (NAV, PHONE, INFO, AUDIO), the voice portal screen appears and the system gives you examples of voice commands that can be used. For more examples, see [page 26](#).



Press the Talk button again, and the system waits for you to say a command.



The system recognizes your command.



The system confirms the command.

## Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Talk button before you give a command.

### General Commands (Accepted on most screens to change displays)

- Display map
- Display menu
- Display phone
- Information
- Display audio screen
- What time is it?



 
### Find Place Commands (Accepted on Map screen)

- Find nearest:
  - ATM
  - Honda dealer
  - gas station
  - airport
  - Mexican restaurant
  - hospital
  - bank
  - post office




### Navigation Commands (Accepted on Map screen)

- How long/far to the destination?
- Display destination map
- Display entire route

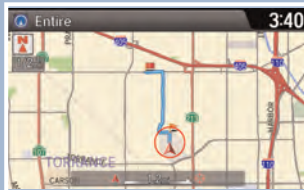

### Display Commands (Accepted on Map screen)

 - Display (or hide):
  - ATM
  - gas station
  - restaurant
  - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location

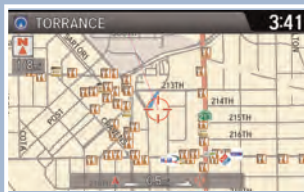

Press and release the Talk button before you give a command.


### Audio Commands (Accepted on most screens)

 - Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- DISC play
- DISC play track #
- DISC skip forward/back
- iPod/USB/HDD play



### Phone Commands (Accepted on most screens)

- Call "phone number"
- Call "voice tag"

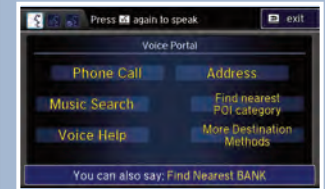

### Climate Control Commands (Accepted on most screens)

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



### Help Commands (Accepted on most screens)

- Voice help (list of all available commands by category)



# NAVIGATION

## Entering a Destination Using Voice Commands

 
Set a destination using a street address. For other destination options, see your Navigation Manual.

Press and release the Talk button before you give a command.

1. Say "Address."




2. Say "Street," then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).

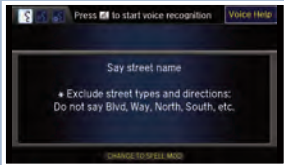


3. A list of street names appears. Say the number next to the street you want.



 
4. Say the entire street address number. For example, "1-2-3-4." If necessary, say "OK" to proceed.

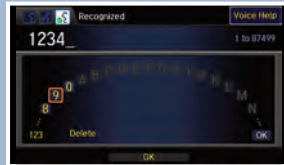

 5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.

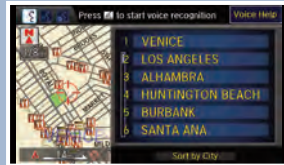

 6. Say "Set as destination" to set the route.

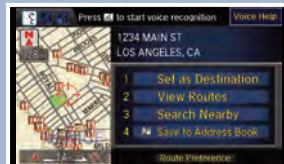

**NOTE:** It is recommended that you enter your destination before driving or when the vehicle is stopped.

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

## Using the "Find Nearest" Command

 
Find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Talk button before you give a command.


1. From the map screen, say "Find nearest ATM."




2. A list of the nearest ATMs in your area is displayed with shortest distance to destination.

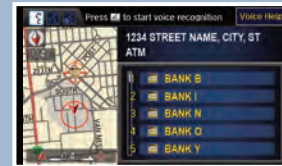

 3. Say the number next to the destination you want to select.

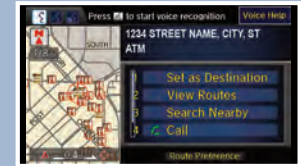

 4. Say "Set as destination" to set the route.

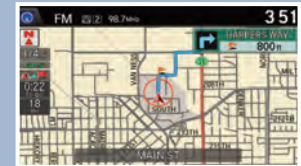


## Map Screen Legend



Calculated route

Time to go

 Distance to go

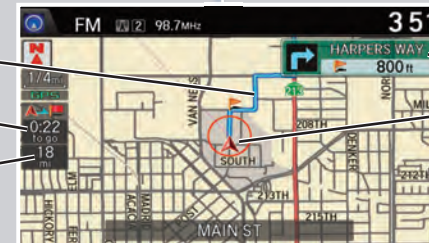

Next guidance point

Current vehicle location


## FM Traffic

 Provides continuously updated info, including traffic speed, incidents, and construction in major metro areas. Works in cities where a clear FM traffic signal is available.

Press and release the Talk button before you give a command.

### Displaying Traffic Information

Say "Display traffic" to view traffic flow and icons.

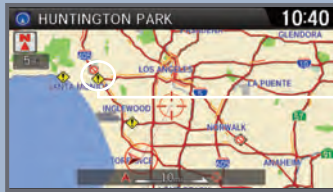

**Heavy traffic**

**Moderate traffic**

**Note:** Traffic flow and incident icons are only displayed on map scales of 5 miles (8 km) or less.

#### Incident Icons:



Incident



Road closed



Congestion



Weather



Construction

 
### Traffic Rerouting

The system can automatically provide detours around traffic or incidents when a destination is set and Traffic Rerouting is turned on in Navi Settings (see [page 45](#)).

1. Say "Display traffic on my route" to view a list of incidents on your route.




3. Say "Avoid" and the incident list returns.

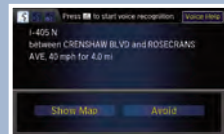

2. Say the number of the incident you want to avoid.



 4. Say "Recalculate route" to set the new route.

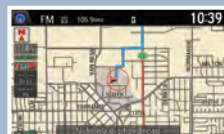

## BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if your phone is Bluetooth-compatible.

**To reduce the likelihood of driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### Using HFL

**Pick-Up button:** Answer an incoming call or go to a phone-specific voice portal screen.

**Hang-Up/Back button:** End a call, decline an incoming call, or cancel an operation.

**Talk button:** Make a call using a stored voice tag, phonebook name, or phone number.

 


Use these buttons to navigate through the HFL menus.

**PHONE button:** Go to the phone screen.

**BACK button:** Cancel an operation or return to the previous screen.

**SETTINGS button:** Go to Phone Settings to pair a phone and set up text/mail options.

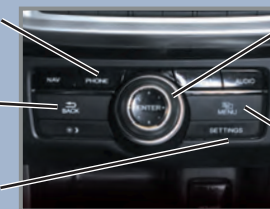

**Interface Dial:** Rotate to scroll through selections and press to make a selection.

**MENU button:** From the Phone screen, access Speed Dial, Redial, Call History, Phonebook, Dial, and Text/Mail options.



## Pairing Your Phone

Pair your phone to begin using hands-free phone and related audio functions. The vehicle must be stopped to pair the phone.

Use the interface dial to make and enter selections.

### 1. Press SETTINGS.



 
### 2. Select Phone Settings.




### 3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if another phone has been paired).




### 4 Select Add Bluetooth Device.

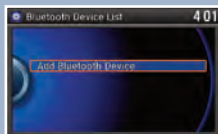

### 5. Make sure your phone is in discovery mode.

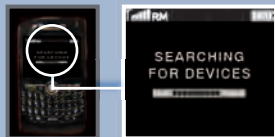 


### 6. HFL searches for your phone. Select your phone when it appears on the list.

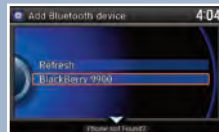 


*If your phone does not appear:*

Select **Phone Not Found** and **search** for HandsFreeLink from your phone.

### 7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. If it is the same, connect to HFL from your phone.

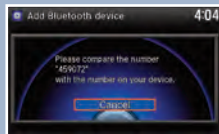 

### 8. The system asks if you want to enable Phone Synchronization. Select On.

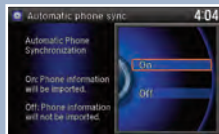 

## Dialing a Number

Enter a 10-digit phone number to call.

Using the Menu\*

Use the interface dial to make and enter selections.

### 1. Press PHONE.



### 2. Press MENU.



### 3. Select Dial.



### 4. From the navigation screen or the touchscreen, enter the phone number. Select the green Dial icon to call.

 


\*This feature is inoperable when the vehicle is moving.


## Using Voice Commands

Press and release the TALK button to say a command.

### 1. Say "Dial by number."

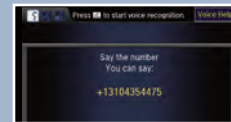

### 2. Say the phone number.

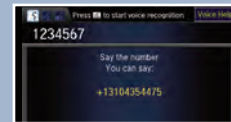 

### 3. Say "Dial." The system begins to dial.





## Using Speed Dial

Store 20 speed dial entries for quick calling.

 
### Using the Menu

Use the interface dial to make and enter selections.

#### 1. Press PHONE.



#### 3. Select the entry to call.

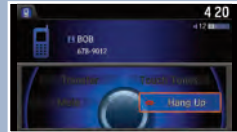

#### 2. From the Speed Dial tab, scroll the list of speed dial entries.



### Using Voice Commands

When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. See your Owner's Manual for more information.

Press and release the TALK button to say a command.

Say "Call" and the stored voice tag name. The system begins to dial.



You can also say the name and type of any phone number stored in your phonebook. For example, say "Call by name" followed by "John Smith mobile."

**Note:** Phone synchronization must be on for the "Call by name" feature to work.

## Using the Phonebook

 
When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the interface dial to make and enter selections.

#### 1. Press PHONE.




#### 3. Select Phonebook.

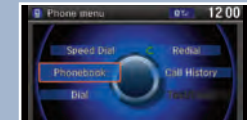

#### 2. Press MENU.



 
#### 4. Scroll through the list to find the name and number you want to call, and select it to call.

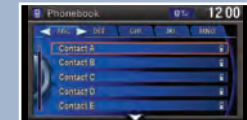

## Receiving a Call

 When you receive an incoming call, you hear a notification and see the following pop-up message:

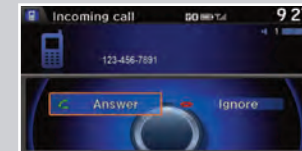

Press the Pick-Up button to accept the call.



Press the Hang-Up button to end or decline the call.





## SMS TEXT MESSAGING AND E-MAIL

  Receive and send text messages and e-mails from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

### Receiving Messages

Use the interface dial to make and enter selections.



1. A notification appears on the display. **Select** Read to open the message.
2. The message is displayed, and the system reads it aloud.

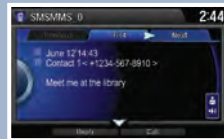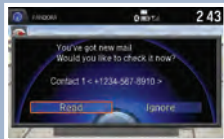


### Replying to Messages

Use the interface dial to make and enter selections.

  1. With the message open, **move** the interface dial down to select Reply.
2. **Select** one of the six available reply messages.

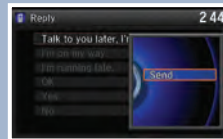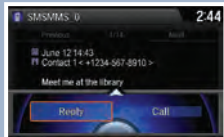

 
3. **Select** Send to send the message.

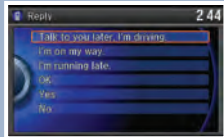

### Calling the Sender

Use the interface dial to make and enter selections.

 
1. With the message open, **move** the interface dial down to select Call.
2. HFL begins dialing the number.

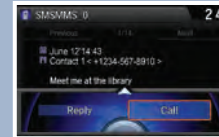

### Displaying Messages

Use the interface dial to make and enter selections.

 
1. **Press** PHONE.
4. **Select** Inbox or the desired folder.

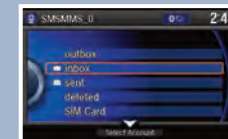

2. **Press** MENU.



 5. **Select** a message to open it and hear it read aloud.

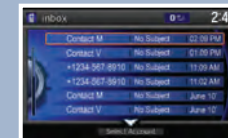

3. **Select** Text/Email. The 20 most recent messages are displayed.



**Note:** Notifications and operation for SMS Text and E-mail are separate. Choose your desired account in the Phone Settings menu.

## BLUETOOTH® AUDIO

Stream audio from your compatible phone through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is available on your phone.

 
### Playing Bluetooth Audio

1. Make sure your phone is on and paired to Bluetooth® HandsFreeLink® (see [page 32](#)).
5. Press (⏮) or (⏪) on the screen or (▶) or (⏩) on the steering wheel to change tracks.


2. Press SOURCE.



3. Press the Bluetooth icon.

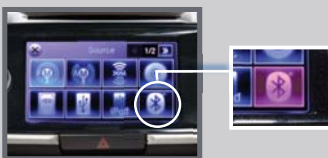

 4. From your phone, open the desired audio player or app and begin playing. Sound is redirected to the audio system.

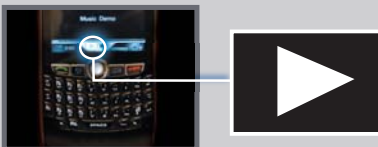

#### Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional Bluetooth settings on your phone for playback.
- The play/pause function and remote audio controls may not be supported on all phones.

## iPod® OR USB FLASH DRIVE

 
Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

### Connecting Devices and Playing Audio Files

1. Open the USB port in the front console. Connect the dock connector or flash drive.
5. Press (⏮) or (⏪) on the screen or (▶) or (⏩) on the steering wheel to change tracks.



2. Press SOURCE.



3. Press the iPod or USB icon.



4. Press the album or folder bar to change albums or folders.



iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

## HARD DISC DRIVE (HDD) AUDIO

Record CDs onto your vehicle's hard disc drive. Songs are automatically recorded once a CD is inserted into the disc slot.

### Playing HDD Audio

 
1. **Press SOURCE.**



2. **Press the HDD icon.**




3. **Press (⏮) or (⏭) on the screen or (▶) or (◀) on the steering wheel to change tracks.**




### Searching for Music

Use the interface dial to make and enter selections.

 
1. From the audio screen, **move** the interface dial to the left to go to the HDD search screen.

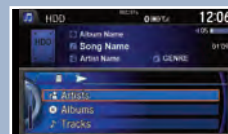

 3. **Select** a track and **press ENTER** to begin playing.

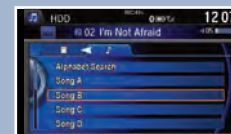

 2. **Select** one of the categories.

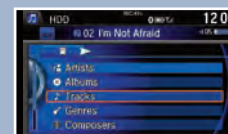

## SONG BY VOICE™ (SBV)

Play songs from your iPod and HDD from most navigation/audio screens by using simple voice commands.

### Playing Audio Files Using Voice Commands

 
#### Using the "Play" Command

Press and release the Talk button before you give a command.


1. Say "Music search."



2. Say "Play" and a search option. For example, say "Play artist XYZ."



 3. The system plays the first song by the artist and returns to your original screen.

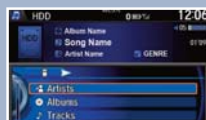

#### Using the "List" Command

Press and release the Talk button before you give a command.

1. Say "Music search."



2. Say "List" and a search option. For example, say "List artist XYZ."



3. A list of tracks by the selected artist displays. Say the number of your selection. For example, say "One."



4. The system plays the first song by the artist and returns to your original screen.



## HondaLink featuring Aha™

Access music and entertainment programming, location-based services, and social media sites through your vehicle's audio system. Download the HondaLink app to your phone prior to using this feature at [owners.honda.com/apps](http://owners.honda.com/apps). Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is available on your phone. Standard data rates apply.

### Playing Aha

1. For Bluetooth connection: Make sure your phone is paired to Bluetooth® HandsFreeLink® (see [page 32](#)) and the screen is on and unlocked.

For USB connection: **Connect** the dock connector to the USB port.



2. Press SOURCE.



3. Press the Aha icon on the second screen and streaming begins.



4. From the screen, **select** items such as Like/Dislike and Play/Pause.



Press Stations to select from 16 favorite stations.

Press MENU to access the complete station list.



#### Notes:

- You can select Bluetooth or USB priority connection in the Audio Settings menu (see [page 45](#)). This establishes what kind of connection will happen every time you turn your vehicle on.
- iPhone can connect via Bluetooth or USB; Android can connect via Bluetooth only.
- If you cannot operate Aha through the audio system, it may be streaming through Bluetooth® Audio. Make sure the Aha source on your audio system is selected.



## PANDORA®

Play and operate Pandora streaming radio from your compatible phone through your vehicle's audio system. Visit [handsfreelink.honda.com](http://handsfreelink.honda.com) to check if this feature is available on your phone. Standard data rates apply.

### Playing Pandora

1. For Bluetooth connection: Make sure your phone is paired to Bluetooth® HandsFreeLink® (see [page 32](#)) and the screen is on and unlocked.

For USB connection: **Connect** the dock connector to the USB port.



2. Select SOURCE.



3. Select the Pandora icon and streaming begins.



4. From the screen, select items such as Like/Dislike and Play/Pause.



#### Notes:

- You can select Bluetooth or USB in Connected Device Priority in the Audio Settings menu (see [page 45](#)). This establishes what kind of connection will happen every time you turn your vehicle on.
- iPhone can connect via Bluetooth or USB; Android and BlackBerry can connect via Bluetooth only.
- If you cannot operate Pandora through the audio system, it may be streaming through Bluetooth® Audio. Make sure the Pandora source on your audio system is selected.

iPhone is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPhone not included.

## SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

### Adjusting Vehicle Settings



Press **SETTINGS** to select the settings menu. Use the interface dial to make and enter selections.

Choose from the available options:



#### Navi Settings

Change various settings for navigation system routing.

#### Camera Settings

Change camera modes.

#### Vehicle Settings

TPMS calibration, meter setup, door setup, and more.

#### System Settings

Adjust the display, system language, and more.

#### Phone Settings

Pair a phone, change call and text/e-mail options, and more.

#### Info Settings

Import wallpaper and select clock type.

 
#### Audio Settings

Change sound options and various settings for audio modes.

## HOMELINK® (if equipped)

The HomeLink Universal Transceiver can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

### Training a Button

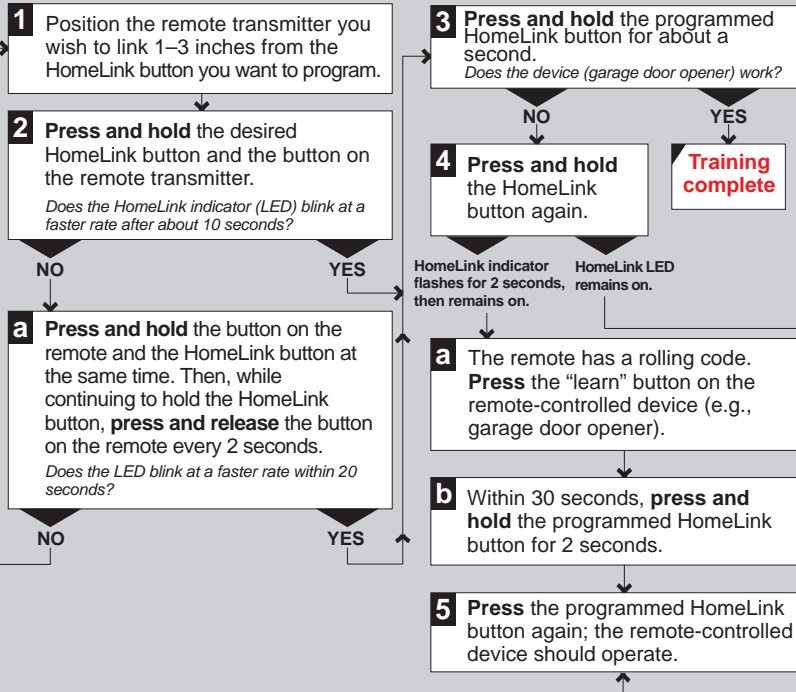

If you have any problems programming HomeLink, see the owner’s manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit [www.homelink.com](http://www.homelink.com).

## OWNER LINK

Owner Link allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, and access other useful information. Register at [owners.honda.com](http://owners.honda.com) to ensure that you continue to enjoy the experience of owning a Honda. For added convenience, Owner Link can also be accessed on a mobile device.



## SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger’s seat as the force of a deploying airbag can seriously injure an infant.

## FUEL RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit [www.toptiergas.com](http://www.toptiergas.com).
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at [owners.honda.com](http://owners.honda.com).