

TECHNOLOGY
REFERENCE
GUIDE



Accord

owners.honda.com

31T2A010
00X31-T2A-D100

2014 Honda Accord Sedan Touring
Technology Reference Guide
©2013 American Honda Motor Co., Inc. — All Rights Reserved

Printed in U.S.A.




2014 Accord Sedan
Touring

TECHNOLOGY REFERENCE GUIDE

This Technology Reference Guide is designed to help you get acquainted with your 2014 Honda Accord Sedan Touring and provide basic instructions on some of its technology and convenience features.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual or Navigation Manual.

Smart Entry with Push Button Start.....	2
Instrument Panel Indicators	4
Multi-Information Display (MID)	6
Eco Assist™	8
Tire Pressure Monitoring System (TPMS).....	9
Settings for Your Vehicle	10
Auto Door Locks	11
Driving Position Memory System (DPMS).....	12
One-Touch Turn Signal.....	13
Auto Headlights with Wiper Integration.....	13
HomeLink®	14
Multi-View Rear Camera	15
LaneWatch™	16
Lane Departure Warning (LDW)	17
Forward Collision Warning (FCW)	18
Adaptive Cruise Control (ACC).....	20

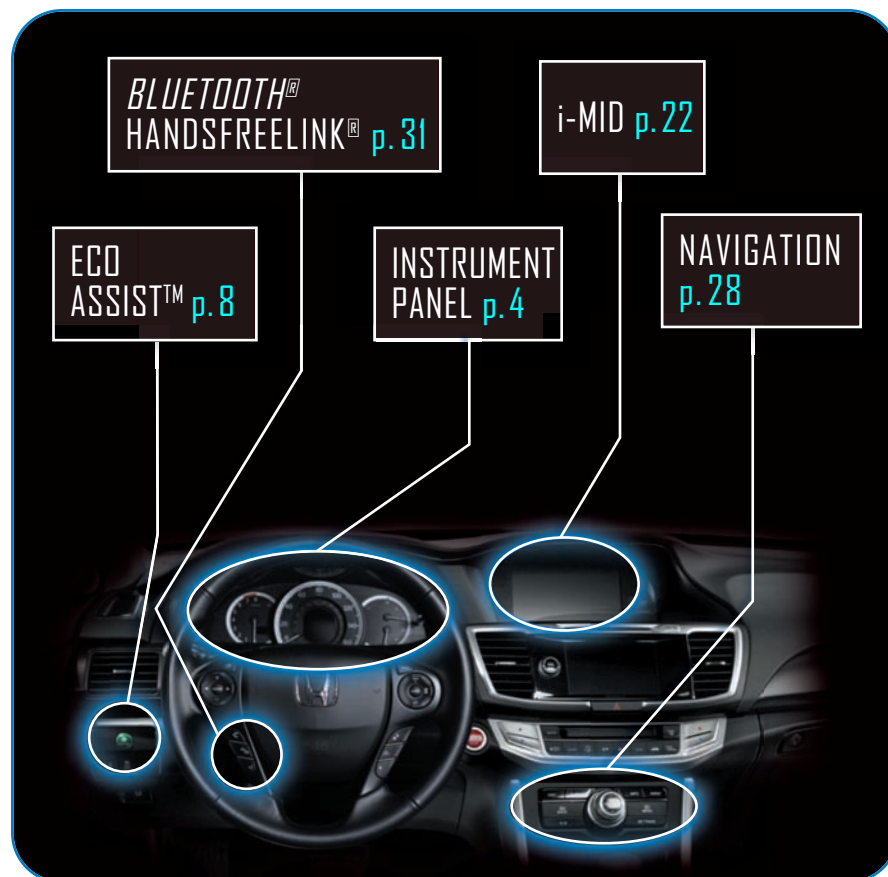

Intelligent Multi-Information Display (i-MID)	22
Using the Touchscreen.....	23
Voice Recognition.....	24
Navigation.....	28
Bluetooth® HandsFreeLink® (HFL).....	31
SMS Text Messaging and E-Mail	35
Basic Audio Operation	36
iPod® or USB Flash Drive	37
Hard Disc Drive (HDD) Audio	38
Song By Voice.....	39
Pandora®	40
HondaLink featuring Aha™	41
Bluetooth® Audio	42
Honda Owners	43
Safety Reminder	43
Fuel Recommendation.....	44

SMART ENTRY WITH PUSH BUTTON START

Unlocking the Doors




Grab either one of the front door handles when the vehicle is off. Wait until the doors unlock, then pull the handle to open.



Locking the Doors



Press the door lock button on either front door handle when the vehicle is off.

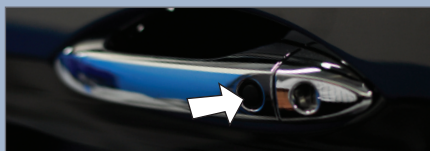

Opening the Trunk




Press the trunk release button under the trunk handle.



Operate certain functions of your vehicle by simply having the remote transmitter within operating range.

Engine Start/Stop Button

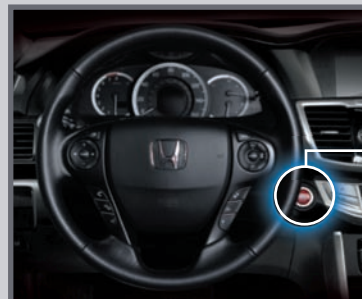

Accessory or On Mode

Press ENGINE START/STOP once without pressing the brake pedal for Accessory mode. Press it again for On mode.

Starting the Engine

Press and hold the brake pedal, then press ENGINE START/STOP.


Turning the Vehicle Off

Shift to Park, then press ENGINE START/STOP.

Note: If you press ENGINE START/STOP and the shift lever is not in Park, the vehicle goes into Accessory mode.



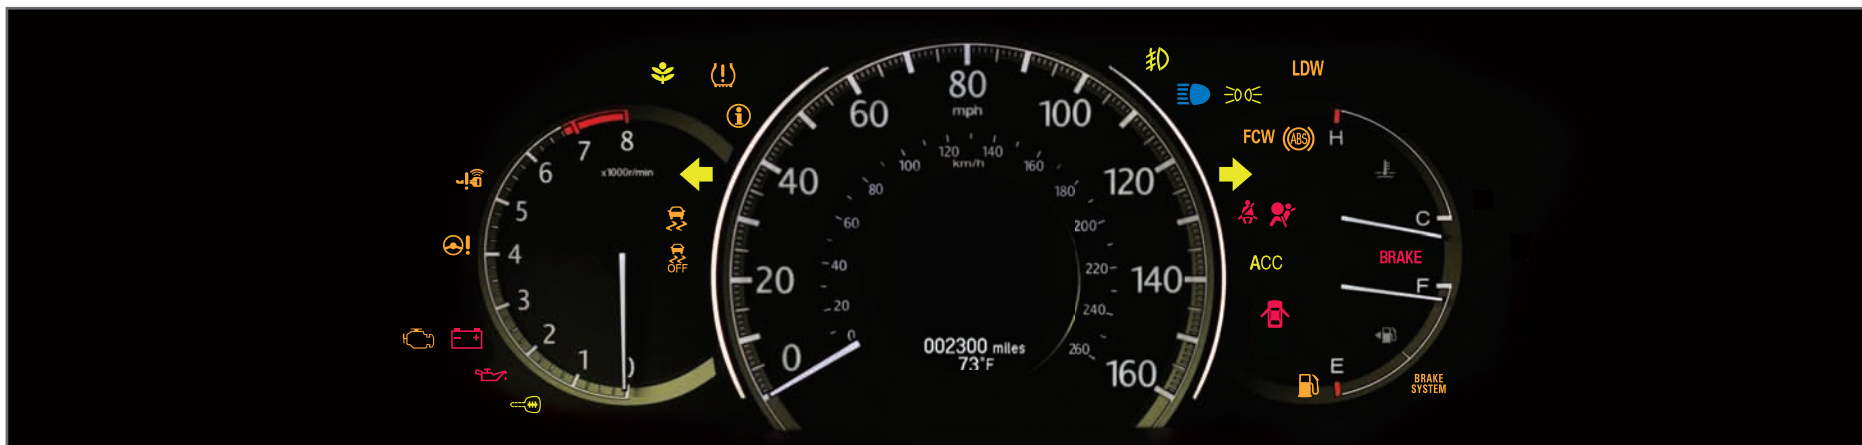


 
 
 
 
 
 
INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and orange indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer


 Charging system	 Anti-Lock Brake System (ABS)
 Low brake fluid	 Malfunction lamp (check engine light)
 Low oil pressure	 Tire Pressure Monitoring System (TPMS) (<i>blinks and stays on</i>)
 Supplemental Restraint System (SRS)	 Vehicle Stability Assist® (VSA)
 Electric Power Steering (EPS)	 Smart Entry System
 Forward Collision Warning (FCW)	 Brake system
 Lane Departure Warning (LDW)	 Adaptive Cruise Control (ACC)


Condition Indicators

Action is needed by driver


 Parking brake on: Release	 Seat belt reminder: Fasten seat belt(s)
 Door/Trunk open: Close door(s) / trunk	 Immobilizer (<i>blinks</i>): Use other vehicle key and see dealer

 
 Low fuel:
Refill


 Low tire pressure:
Add air

 System message indicator:
Check MID

On/Off Indicators


 PASSENGER AIRBAG **OFF**
(next to display screen)

 Exterior lights **on**


 VSA **OFF**

 Turn signals/hazards **on**

 ECON Mode **on**

 High beams **on**


 Fog lights **on**

 Adaptive Cruise Control **on**

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the Information Display

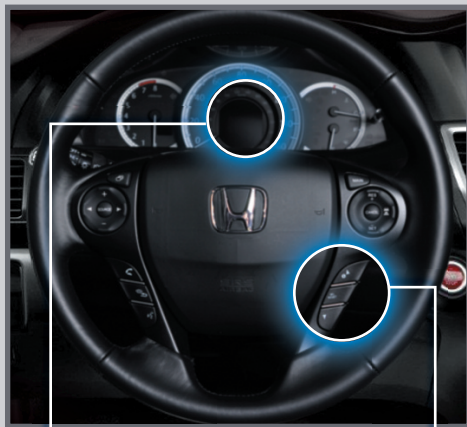


When you start the engine, the information display shows your last active selection from the previous drive cycle.



To toggle between the different displays:


- Press either info button (▲/▼) for the main displays.
- Press SEL/RESET for the lower displays.

Main Displays

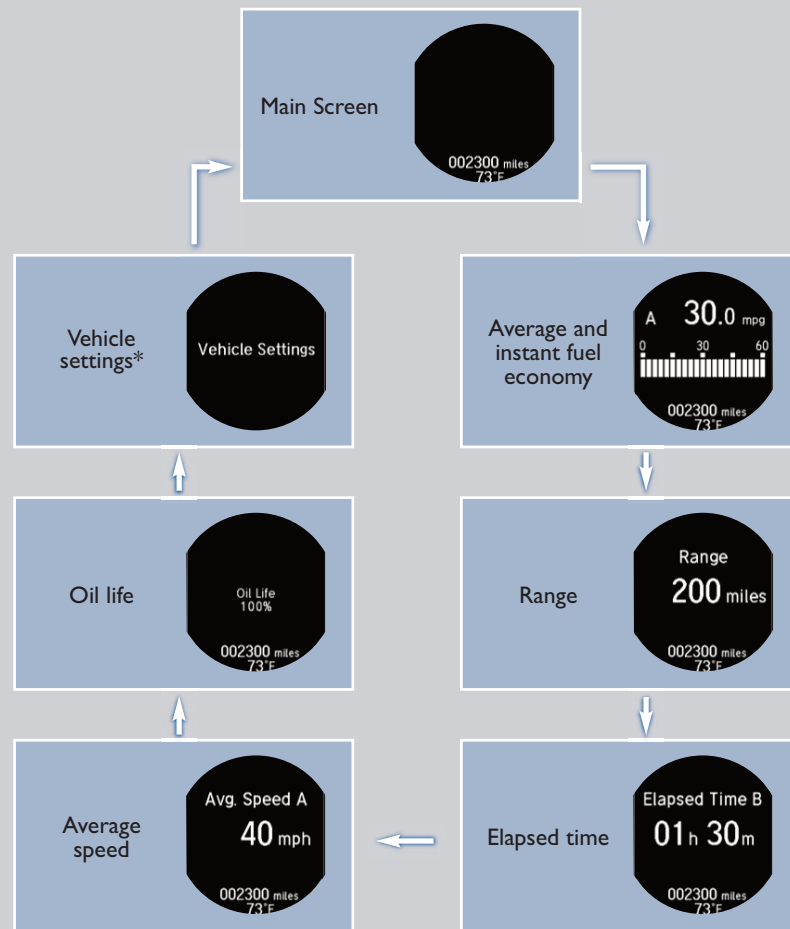

*You can also change vehicle settings using the SETTINGS button on the center panel.

Lower Displays

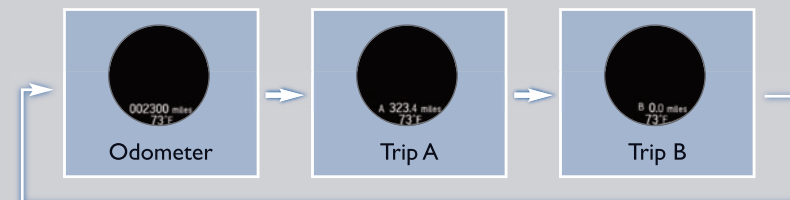

ECO ASSIST™

When turned on, performance of the vehicle's engine, transmission, cruise control, and air conditioning system are adjusted to maximize fuel efficiency.

ECON Button


1. Press ECON to turn the system on.



2. The ECON mode indicator comes on.



3. Press ECON again to turn the system off.

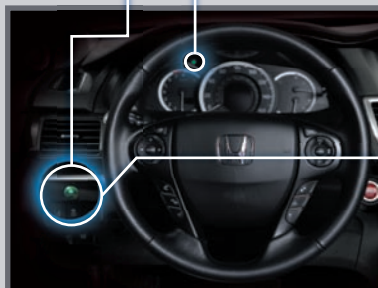

Ambient Meter

Indicates real-time fuel efficiency using color-coded bars.

High fuel efficiency



Moderate fuel efficiency



Low fuel efficiency



TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.
4. Start TPMS calibration.



TPMS Calibration

Any time you inflate, change, or rotate one or more of your tires, you need to recalibrate the system.

1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select TPMS Calibration.
4. Select Calibrate. The low tire pressure indicator blinks, and calibration begins.
5. Press BACK to exit the menu.



You can also change vehicle settings using the multi-information display (see [page 6](#)).

SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

Adjusting Vehicle Settings



Press **SETTINGS** to select the settings menu. Use the interface dial to make and enter selections.

Choose from the available options:



Navi Settings

Change various settings for navigation system routing.

Camera Settings

Change camera modes.

Vehicle Settings*

TPMS calibration, meter setup, door setup, and more.

System Settings

Adjust the display, system language, and more.

**The vehicle must be in Park (P) to access this menu.*

Phone Settings

Pair a phone, change call and text/e-mail options, and more.

Info Settings

Import wallpaper and select clock type.

Audio Settings

Change sound options and various settings for audio modes.

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Locks



Default Lock Setting

The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

All doors are set to unlock when the driver's door is opened.

Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is in ON mode. See your Owner's Manual for complete setting options.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **Auto Door Lock** or **Auto Door Unlock**.
4. Select from the options.
5. Press **BACK** to exit the menu.



You can also change vehicle settings using the multi-information display (see [page 6](#)).



Note: The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for unlocking the rear doors when a front door handle is pulled.

DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote transmitter (1 or 2).

How It Works

1. Turn on the vehicle. Make sure the shift lever is in Park (P).
2. Adjust the seat to your preferred position.
3. Press SET. You will hear a beep.
4. Press the memory button corresponding to the remote (1 or 2) you are using within 5 seconds. You will hear two beeps.

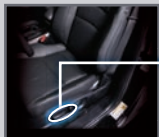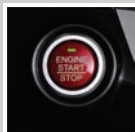

Note: Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.

ONE-TOUCH TURN SIGNAL

Use this quick and convenient method to signal a lane change.

How It Works

- Lightly push the turn signal lever up or down for a three-blink sequence.
- For a continuous signal, push the lever up or down until it locks into place.



AUTO HEADLIGHTS WITH WIPER INTEGRATION

For your convenience, your vehicle's headlights automatically turn on when the windshield wipers operate.

How It Works



Make sure your headlights are in the AUTO position.



Turn on your windshield wipers. The headlights also turn on. When you turn off the windshield wipers, the headlights turn off shortly after.

HOMELINK®

The HomeLink Universal Transceiver can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button



1 Position the remote transmitter you wish to link 1–3 inches from the HomeLink button you want to program.

2 Press and hold the desired HomeLink button and the button on the remote transmitter.

Does the HomeLink indicator (LED) blink at a faster rate after about 10 seconds?

NO

YES

a Press and hold the button on the remote and the HomeLink button at the same time. Then, while continuing to hold the HomeLink button, press and release the button on the remote every 2 seconds.

Does the LED blink at a faster rate within 20 seconds?

NO

YES

3 Press and hold the programmed HomeLink button for about a second.

Does the device (garage door opener) work?

NO

YES

4 Press and hold the HomeLink button again.

Training complete

HomeLink indicator flashes for 2 seconds, then remains on.

HomeLink LED remains on.

a The remote has a rolling code. Press the "learn" button on the remote-controlled device (e.g., garage door opener).

b Within 30 seconds, press and hold the programmed HomeLink button for 2 seconds.

5 Press the programmed HomeLink button again; the remote-controlled device should operate.

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit www.homelink.com.

MULTI-VIEW REAR CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

How It Works

- When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the navigation display, along with helpful parking guidelines.
- Press the interface dial to toggle between views.
- The display turns off when you shift out of Reverse.



Wide (default)



Normal



Top down



Changing Settings

Turn the guidelines on or off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Camera Settings**.
3. Select **Rear Camera**.

4. Select one of the options.

Fixed Guidelines: Guidelines appear when you shift into Reverse. Select On or Off.

Dynamic Guidelines: Guidelines move as you turn the steering wheel. Select On or Off.

5. Press **BACK** to exit the menu.




LANEWATCH™


Helps you check your right blind spot when you make a lane change to the right.

How It Works

When the right turn signal is activated, a camera located in the passenger side door mirror shows the right rear area outside your vehicle on the display.

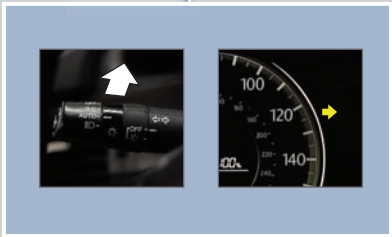

Visibility Area

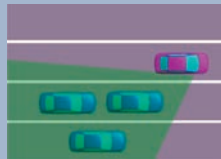

LaneWatch Display

Press the LaneWatch button on the turn signal switch to view a constant real-time display. Press it again to turn the display off. The display still appears when the right turn signal is activated.



See your Owner's Manual for more information on adjusting LaneWatch settings.

LANE DEPARTURE WARNING (LDW)

Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated.

How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.





If you cross a lane line without using your turn signal, a message appears on the MID and a beep sounds.



LDW may not activate under certain conditions. See your Owner's Manual for more information.

Turning LDW On or Off

Press the LDW button to turn the system on or off. A green indicator light appears on the button when the system is on.

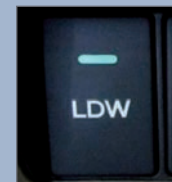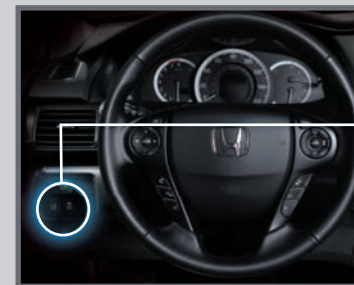


FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.

How It Works

At 10 mph or higher, if the radar sensor in the front grille detects a vehicle in front of you and the system determines a collision is likely, the system warns you with the following visual and audible alerts:

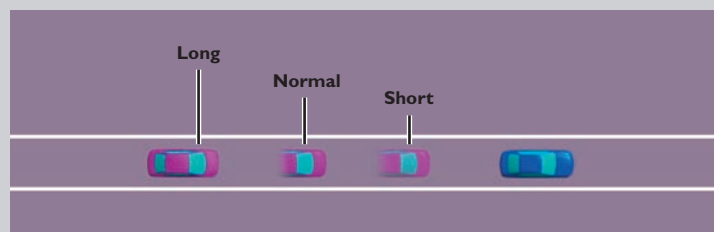


When the FCW distance is set to Short:

- the heads-up light near the windshield flashes continuously
- BRAKE flashes continuously
- a beep sounds continuously until you take preventive action.

When the FCW distance is set to Normal or Long:

- The heads-up light near the windshield flashes twice.
- If you do not take action to prevent a collision and the distance to the other vehicle becomes sufficiently close, BRAKE flashes on the MID, the heads-up light flashes, and a beep sounds continuously until you take preventive action.

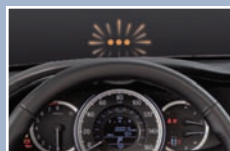

FCW may not activate under certain conditions. See your Owner's Manual for more information.

Changing Settings

Determine the warning timing, or turn the system off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **Forward Collision Warning Distance**.
4. Select **Long**, **Normal**, **Short**, or **Off**.
5. Press **BACK** to exit the menu.



You can also change vehicle settings using the multi-information display (see [page 6](#)).

ADAPTIVE CRUISE CONTROL (ACC)

Operating ACC

Check the MID for information.



How to Use ACC

Turning ACC On

1. Press MAIN.
2. ACC appears in the MID.

Using ACC

1. Accelerate to the desired speed (above 25 mph).
2. Press SET/- and release the accelerator pedal. The set speed is fixed, and ACC begins.
3. To increase speed, press RES/+. To decrease speed, press SET/-.

Standard Cruise Control

1. Press and hold the Distance button.
2. A beep sounds, and the selected mode appears in the MID.

Canceling ACC

There are three ways to cancel:


- Press MAIN.
- Press CANCEL.
- Tap the brake pedal.

Set a space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and increases or decreases your vehicle's speed to maintain a set following distance or speed.

Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

ACC automatically adjusts the following distance based on the range selected and your vehicle speed.

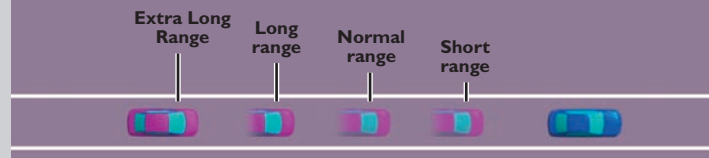

Press the Distance button to shuffle through four ranges.



The selected range and set speed are shown on the MID.

Range	MID Screen
Extra Long	50 mph
Long	50 mph
Middle	50 mph
Short	50 mph

If a vehicle enters the ACC range, a beep sounds and a vehicle icon appears on the MID.



If there is no vehicle ahead of you, a dotted-line vehicle icon appears on the MID.



Note: The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.

INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)

Choose what to display in the upper screen.

Changing the Display




Press the Display button to change the main displays.



Display Options


Audio
Shows current audio information.

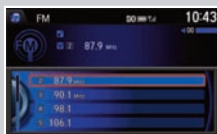


Phone
Shows phone screen.



Navigation
Shows map or navigation information.

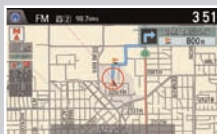

Info
Shows information screen and options.

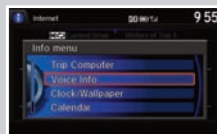

USING THE TOUCHSCREEN

Interactive touchscreen display includes audio and *Bluetooth*® HandsFreeLink® functionality.

Audio Options



Source: Select audio sources.

Preset: Select preset stations or channels.

 


Skip/Seek: Change stations, channels, tracks, etc.

More: Select menu options and sound settings.

FM screen shown

Bluetooth® HandsFreeLink® Options*



When you enter the Dial screen from the Phone Menu, you can use the touchscreen to enter the number.



When you enter the Phonebook screen from the Phone Menu, you can use the touchscreen to search for names.


**Manual operation is disabled while the vehicle is moving.*

Sound/Screen Options

Select More from the main screen.



Select Sound Settings to adjust the audio system.

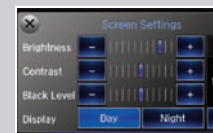

Select Screen Settings to adjust various screen features.

VOICE RECOGNITION

How It Works

The voice control system uses the steering wheel buttons and the ceiling microphone.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.



Pick-Up button: Answer an incoming call or go to a phone-specific voice portal screen.




Hang-Up/Back button: End a call, decline an incoming call, or cancel an operation.




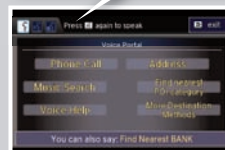
Talk button: Say phone, navigation, audio, or climate control commands.




 
To keep your eyes on the road and hands on the wheel, use the  Talk button to say voice commands to operate certain vehicle features.

Voice Command Portal


When you press the  Talk button from any of the main screens (NAV, PHONE, INFO, AUDIO), the voice portal screen appears and the system gives you examples of voice commands that can be used. For more examples, see [page 22](#).



Press the  Talk button again, and the system waits for you to say a command.



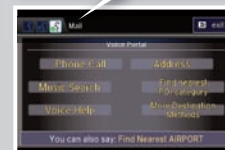


The system recognizes your command.




The system confirms the command.

Voice Command Tips

- When the  Talk button is pressed, all available voice commands are highlighted in yellow. To bypass the system prompts, press and release the  Talk button again to say a command.
- To hear a list of available commands at any time, press and release the  Talk button, then say "Voice Help."
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the  Talk button before you say a command.

General Commands

(Accepted on most screens to change displays)


- Display map
- Display menu
- Display phone
- Information
- Display audio screen
- What time is it?



Find Place Commands

(Accepted on Map screen)


- Find nearest:
 - ATM
 - Honda dealer
 - gas station
 - airport
 - Mexican restaurant
 - hospital
 - bank
 - post office

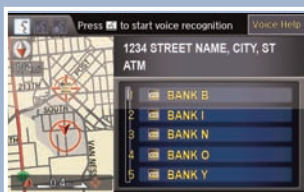

Navigation Commands

(Accepted on Map screen)


- How long/far to the destination?
- Display destination map
- Display entire route

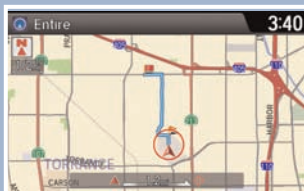


Display Commands

(Accepted on Map screen)

- Display (or hide):
 - ATM
 - gas station
 - restaurant
 - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location

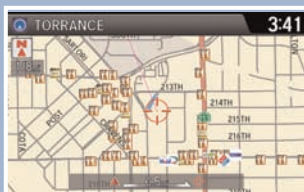

Press and release the  Talk button before you say a command.

Audio Commands

(Accepted on most screens)


- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- DISC play
- DISC play track #
- DISC skip forward/back
- iPod/USB/HDD play



Phone Commands

(Accepted on most screens)

- Call by name
- Call by number

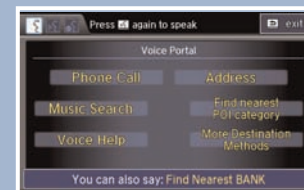

Climate Control Commands

(Accepted on most screens)

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



Help Commands

(Accepted on most screens)

- Voice help (list of all available commands by category)



NAVIGATION

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.


Entering a Destination Using Voice Commands

For information on setting other destination options, see your Navigation Manual.

Entering a Street Address

Press and release the  Talk button before you say a command.


1. Say "Address."
2. Say "Street," then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
3. A list of street names appears. Say the number next to the street you want to select.
4. Say the entire street address number. For example, "1-2-3-4." If necessary, say "OK" to proceed.
5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.
6. Say "Set as destination" to set the route.

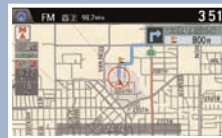

Using the "Find Nearest" Command

Press and release the  Talk button before you say a command.

1. From the map screen, say "Find nearest ATM."
2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
3. Say the number next to the destination you want to select.
4. Say "Set as destination" to set the route.

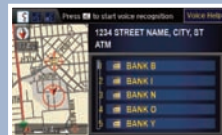

Note: It is recommended that you enter your destination before driving or when the vehicle is stopped.

Map Screen Legend





FM Traffic

Provides continuously updated information, including traffic speed, incidents, and construction in major metro areas.

Press and release the  Talk button before you say a command.

Displaying Traffic Information

Say "Display traffic" to view traffic flow and incident icons.

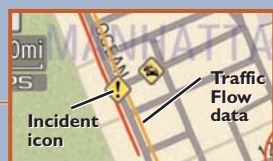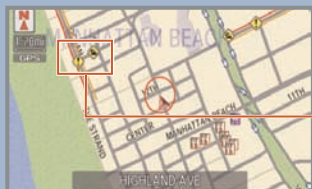

Heavy traffic

Moderate traffic

Note: Traffic flow and incident icons are displayed on map scales of 5 miles or less.

Incident Icons



Incident



Road closed



Congestion



Weather




Construction

Traffic Rerouting™

The system can automatically provide detours around traffic or incidents when a destination is set and Traffic Rerouting is turned on in Navi Settings (see [page 10](#)), or you can manually reroute.

1. Say "Display traffic on my route" to view a list of incidents on your route.
2. Say the number of the incident you want to avoid.
3. Say "Avoid" and the incident list returns.
4. Say "Recalculate route" to set the new route.

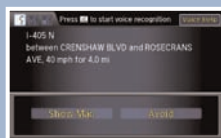

BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone.

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

Using HFL



Pick-Up button: Answer an incoming call or go to a phone-specific voice portal screen.



Hang-Up/Back button: End a call, decline an incoming call, or cancel an operation.



Talk button: Make a call using a stored voice tag, phonebook name, or phone number.




Use these buttons to navigate through the HFL menus.

PHONE button: Go to the phone screen.

BACK button: Cancel an operation or return to the previous screen.

SETTINGS button: Go to Phone Settings to pair a phone and set up text/e-mail options.

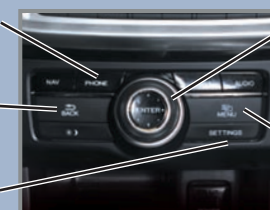

Interface Dial: Rotate to scroll through selections and press to make a selection.




MENU button: From the Phone screen, access Speed Dial, Redial, Call History, Phonebook, Dial, and Text/E-Mail options.

Pairing Your Phone

Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Phone Settings.
3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if pairing an additional phone).
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode and select OK.

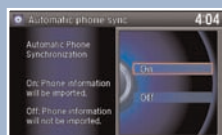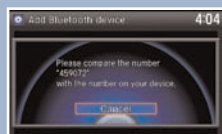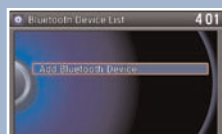


- If your phone does not appear:*
Select Phone Not Found and search for HandsFreeLink from your phone.
7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
 8. The system asks if you want to enable Phone Synchronization. Select On to automatically import contacts and call history.

Receiving a Call

A notification is heard and the incoming call information appears on the display.

Press the Pick-Up button to answer the call.

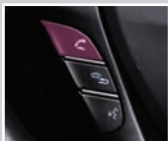

You can also select the icons on the touchscreen.



Press the Hang-Up button to end or decline the call.



Dialing a Number

Enter a 10-digit phone number to call.

Using the Menu*


Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Dial.
4. From the navigation screen or the touchscreen, enter the phone number. Select the green phone icon to call.




*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the  Talk button before you say a command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-1-2-3-4."
3. The system begins to dial.

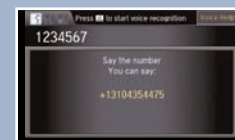

Using Speed Dial and Call History

Store 20 speed dial entries for quick calling, or view the last 20 calls.

Use the interface dial to make and enter selections.

1. Press PHONE.
 2. From the Speed Dial tab, scroll through the list to find the entry you want to call, and select it to call.
- For Call History, move the interface dial to the right and scroll through the list.




Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. Phone synchronization must be on for this feature to work.

Using the Menu*

Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call, and select it to call.

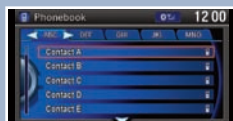


*Manual operation is limited while the vehicle is moving. Voice commands are always available.

Using Voice Commands

Press and release the  Talk button before you say a command.

1. Say "Call by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."

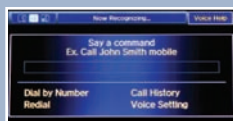


SMS TEXT MESSAGING AND E-MAIL

Receive and send text messages and e-mails from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit handsfreelink.honda.com to see if this feature is compatible with your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

Receiving Messages

Use the interface dial to make and enter selections.


1. A notification appears on the display. Select Read to open the message.
2. The message is displayed, and the system reads it aloud.

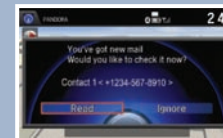

Replying to Messages

Use the interface dial to make and enter selections.


1. With the message open, select Reply.
2. Select one of the six available reply messages.
3. Select Send to send the message.

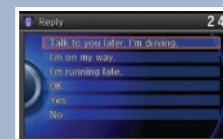

Calling the Sender

Use the interface dial to make and enter selections.

1. With the message open, select Call.
2. The system begins dialing the number.

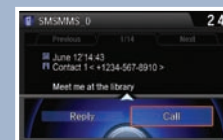

Note: Notifications and operation for SMS Text and E-mail are separate. Choose your desired account in Phone Settings (see [page 10](#)).

BASIC AUDIO OPERATION

Operate basic controls of your audio system using various and convenient methods.

Steering Wheel Controls

Volume increase button

◀ button: Go to previous stations or tracks.

Volume decrease button



SOURCE button: Change audio source.

▶ button: Go to next stations or tracks.

Touchscreen Controls

Select various controls depending on the audio source being played.

Source: Select audio sources.

Preset: Select preset stations.



FM screen shown

Skip/Seek: Change stations, tracks, etc.

More: Select menu options and sound settings.

USB Connection



Connect the iPhone or iPod cable or a USB flash drive to the USB port in the front console.

Connect your device only when your vehicle is stopped.

iPod® OR USB FLASH DRIVE

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

Playing Audio Files



Select the iPod or USB icon from Source.




1. Connect the iPod cable or USB flash drive to the USB port in the front console (see opposite page).
2. Select Source and select the iPod or USB icon.
3. Use the touchscreen or steering wheel controls to change tracks.

iPod is a trademark of Apple, Inc.

Searching for Music

1. Press AUDIO. Use the interface dial to make and enter selections.
2. Press MENU.
3. Select Music Search.
4. Select a category or folder.
5. Select a track and press ENTER to begin playing.

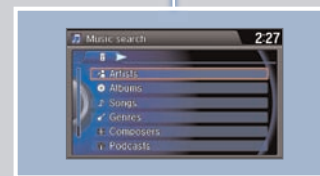

HARD DISC DRIVE (HDD) AUDIO

Record CDs onto your vehicle's hard disc drive. Songs are automatically recorded once a CD is inserted into the disc slot.

Playing HDD Audio



Select the HDD icon from Source.



1. Select Source and select the HDD icon. The last recorded album begins playing.
2. Use the touchscreen or steering wheel controls to change tracks.

Searching for Music

1. Press AUDIO. Use the interface dial to make and enter selections.
2. Press MENU.
3. Select Music Search.
4. Select one of the categories.
5. Select a track and press ENTER to begin playing.




SONG BY VOICE™ (SBV)

Play songs from your iPod and HDD from most screens by using simple voice commands.

Using the "Play" Command

Press and release the  Talk button before you say a command.

1. Say "Music search."
2. Say "Play" and a search option. For example, "Play artist XYZ" or "Play song XYZ."
3. The system plays the first song by the artist or the specified song and returns to your original screen.

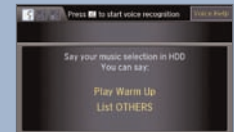

Using the "List" Command

Press and release the  Talk button before you say a command.

1. Say "Music search."
2. Say "List" and a search option. For example, "List artist XYZ" or "List album XYZ."
3. A list of tracks by the artist or album is displayed. Say the number of your selection. For example, "One."
4. The system plays the selected song and returns to your original screen.



PANDORA®

Play and operate Pandora from your compatible phone through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone. Standard data rates apply.

Playing Pandora



Select the Pandora icon from Source.



1. For **Bluetooth connection**: Make sure your phone is paired to **Bluetooth® HandsFreeLink®** (see [page 31](#)) and the screen is on and unlocked.
For **USB connection**: Connect the iPhone cable to the USB port in the front console (see [page 36](#)).
2. Select Source and select the Pandora icon. Streaming begins.
3. Use the touchscreen to like/dislike songs, and the touchscreen or steering wheel controls to change tracks.

iPhone is a trademark of Apple, Inc.

Notes:

- iPhone can connect via Bluetooth or USB; Android and BlackBerry can connect via Bluetooth only.
- If you cannot operate Pandora through the audio system, it may be streaming through **Bluetooth® Audio**. Make sure the Pandora source on your audio system is selected.
- A pop-up may appear on your phone requesting you to allow access for the app to be launched.
- Operate your phone only when your vehicle is stopped.

 
HondaLink featuring Aha™

Access music and information programming, location-based services, and social media through your vehicle's audio system. Download the HondaLink app to your phone from owners.honda.com/apps before using this feature. Visit handsfreelink.honda.com to check if this feature is compatible with your phone. Standard data rates apply.

Playing Aha



Select the aha icon from Source.



Select Stations to select from 16 favorite stations.

Press MENU to view the complete station list.

1. For **Bluetooth connection**: Make sure your phone is paired to **Bluetooth® HandsFreeLink®** (see [page 31](#)) and the screen is on and unlocked.
For **USB connection**: Connect the iPhone cable to the USB port in the front console (see [page 36](#)).
2. Select Source and select the aha icon. Streaming begins.
3. Use the touchscreen to like/dislike songs, and the touchscreen or steering wheel controls to change tracks.

iPhone is a trademark of Apple, Inc.

Notes:

- iPhone can connect via Bluetooth or USB; Android can connect via Bluetooth only.
- If you cannot operate Aha through the audio system, it may be streaming through **Bluetooth® Audio**. Make sure the Aha source on your audio system is selected.
- A pop-up may appear on your phone requesting you to allow access for the app to be launched.
- Operate your phone only when your vehicle is stopped.

BLUETOOTH® AUDIO

Play stored or streaming audio from your compatible phone through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone.

Playing Bluetooth Audio



Select the Bluetooth icon from Source.



1. Make sure your phone is on and paired to *Bluetooth® HandsFreeLink®* (see [page 31](#)).
2. Select Source and select the Bluetooth icon.
3. From your phone, open the desired audio player or app and begin playing. Sound is redirected to the audio system. Make sure the volume on your phone is properly adjusted.
4. Use the touchscreen or steering wheel controls to change tracks.

Notes:

- You may need to enable additional Bluetooth settings on your phone for playback.
- The play/pause function and remote audio controls are not supported on all phones.
- Operate your phone only when your vehicle is stopped.

HONDA OWNERS

Visit owners.honda.com and register to explore features and technologies specific to your vehicle, obtain and update maintenance and service records, manage your financial services account, and access other useful information. For added convenience, Honda Owners can also be accessed on a mobile device.



SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL RECOMMENDATION

Use of unleaded gasoline of 87 octane or higher is recommended.

- Honda recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.

See your Owner's Manual for more information.

Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under your new vehicle warranty.

TOP TIER Detergent Gasoline (recommended) never contains MMT and has detergent additives to keep your engine clean. For further information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit owners.honda.com.