

TECHNOLOGY REFERENCE GUIDE



www.owners.honda.com

31TE0030
00X31-TE0-Q300

2011 Honda Accord Coupe Technology Reference Guide
©2010 American Honda Motor Co., Inc. — All Rights Reserved

12345
1234.5678.91.0
Printed in U.S.A.




2011 ACCORD COUPE

TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of the technology items.

This guide is not intended as a substitute for the Owner's Manual. For complete information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

As with the Owner's Manual, this guide covers all trim levels of the Accord Coupe. Therefore, you may find descriptions of equipment and features that are not on your particular vehicle.

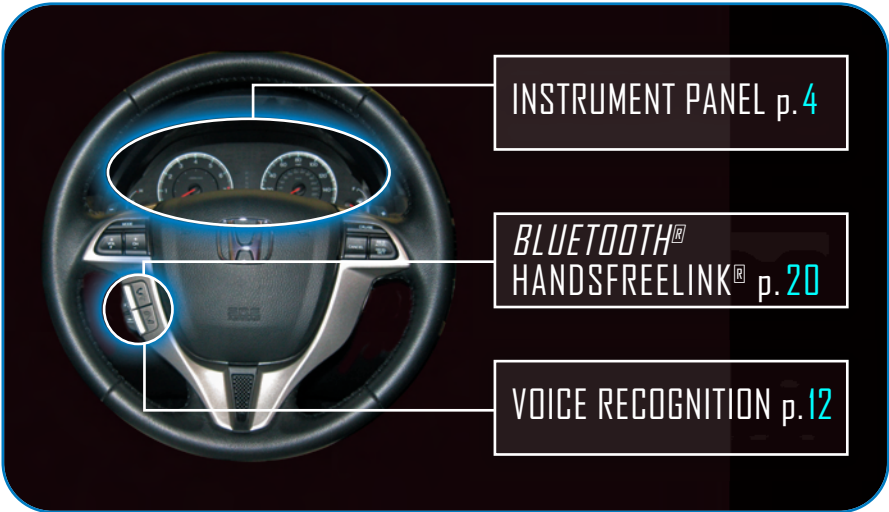

Auto Door Locks	2
Instrument Panel Indicators	4
Information Display	6
Tire Pressure Monitoring System (TPMS).....	7
Driving Position Memory System (DPMS) (if equipped)	8
Paddle Shifting (if equipped)	9
iPod® or USB Flash Memory	10

HomeLink® (if equipped)	11
Voice Recognition (if equipped)	12
Navigation (if equipped)	18
Bluetooth® HandsFreeLink® (HFL) (if equipped)	20
Owner Link.....	23
Safety Reminder	24
Fuel Recommendation.....	24

AUTO DOOR LOCKS

Default Lock Setting



The doors are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting



Only the driver's door is preset to unlock when you shift into Park (P).

Program how and when the vehicle doors automatically lock and unlock.

Programming the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

1. **Close** all doors. **Shift** into Park.



2. **Turn** the ignition switch to ON (II).



3. **Press and hold** the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.



4. Within 5 seconds, **turn** the ignition switch to LOCK (0).



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

AUTO DOOR LOCK

Auto Lock

 


When you reach 10 mph



When you shift out of Park


Turn off Auto Lock



Operate manually

AUTO DOOR UNLOCK

 Auto Unlock (all doors)



When you turn the ignition OFF



When you shift into Park

Auto Unlock (only driver's door)

 


When you turn the ignition OFF



When you shift into Park

Turn off Auto Unlock



Operate manually










INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.









Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer




 







 Charging system	 ABS (anti-lock brake system)
 Low brake fluid	 DRL (daytime running lights)
 Low oil pressure	 Malfunction indicator lamp (check engine light)
 SRS (supplemental restraint system)	 TPMS (tire pressure monitoring system)
	 VSA (vehicle stability assist)

Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Low fuel: Refill
 Door/Trunk open: Close door(s) / trunk	 Low tire pressure: Add air
 Seat belt reminder: Fasten seat belt(s)	 Maintenance Minder™: Make dealer appointment

 On/Off Indicators

 PASSENGER AIRBAG OFF (above Hazard Warning button)	 Fog lights on*
 SIDE AIRBAG OFF	 Immobilizer Flashes: improperly coded key; use correct key
 VSA OFF	 Headlights on
 CRUISE CONTROL on	 Turn signals/hazards on
 CRUISE MAIN on	 High beams on
 Fuel economy on*	

*if equipped

INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

Accessing the Information Display



TRIP A
003000 120.0

When you start the engine, the information display shows your last active selection from the previous drive cycle.



To toggle between the different displays, **press and release** the select/reset knob repeatedly.

Information Displays

TRIP A
003000 120.0
Odometer, Trip meter A



TRIP A
75°F 120.0
Outside temperature*, Trip meter A



TRIP B
75°F 120.0
Outside temperature*, Trip meter B



OIL LIFE%
100
Oil life

* if equipped

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



Each tire valve stem contains a TPMS sensor.



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

TPMS


If the TPMS indicator appears, there may be a problem with the system. See your dealer.

What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.



3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

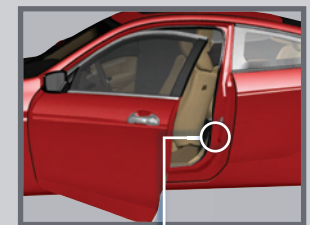

DRIVING POSITION MEMORY SYSTEM (DPMS) (if equipped)

Store a driver's seat position into memory for each remote transmitter.

Programming DPMS

1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).



3. **Press and hold** the SET button until you hear a beep, then release.



2. **Adjust** your seat to the preferred setting.



4. **Press and hold** the memory button # corresponding to the remote (1 or 2) you are using until you hear two beeps.




Note: A stored memory position is linked to the corresponding keyless remote (1 or 2). Each item begins to adjust when you unlock the driver's door with the remote and enter the vehicle.

PADDLE SHIFTING* (if equipped)


Manually shift your vehicle's gears up or down. Useful for engine braking or when driving in hilly terrain or cornering.

Paddle Modes

Pull (-) to shift down.

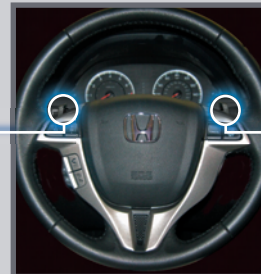


Pull (+) to shift up.

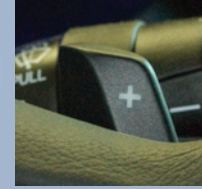


D-Paddle Shift Mode

- **Move** the shift lever to the D position.
- **Pull (+) or (-)** to shift to a higher or lower gear.
- The selected gear number is displayed on the gear position indicator.
- When the vehicle's speed is constant or when you press the accelerator pedal, the mode returns to automatic.

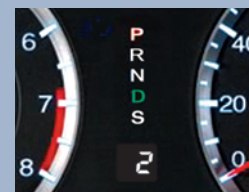

Sequential Shift Mode

- **Move** the shift lever to the S position.
- **Pull (+) or (-)** to manually shift between first and fifth gears.
- The M indicator and selected gear number are displayed on the gear position indicator.
- **Move** the shift lever to the D position to cancel this mode.

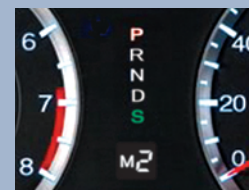

*V6 automatic transmission model only

IPOD® OR USB FLASH MEMORY

Play audio files from your compatible iPod or USB flash memory device through your vehicle's audio system.

Connecting Devices and Playing Audio Files


1. **Open** the center console, and **pull out** the USB adapter cable.




2. **Connect** the USB connector to your iPod dock connector or flash drive.



3. **Press** CD/AUX or AUX to begin playing.

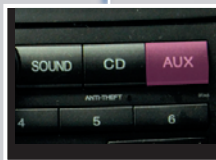

4. **Press** the SKIP buttons to change tracks.

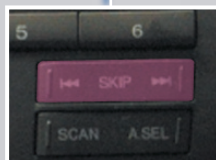

iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

HOMELINK® (if equipped)

The HomeLink Universal Transceiver can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button



- 1 Position the remote transmitter you wish to link 1–3 inches from the HomeLink button you want to program.

- 2 **Press and hold** the desired HomeLink button and the button on the remote transmitter.
Does the HomeLink indicator (LED) blink at a faster rate after about 10 seconds?

NO

YES

- a Press and hold** the button on the remote and the HomeLink button at the same time. Then, while continuing to hold the HomeLink button, **press and release** the button on the remote every 2 seconds.
Does the LED blink at a faster rate within 20 seconds?

NO

YES

- 3 **Press and hold** the programmed HomeLink button for about a second.
Does the device (garage door opener) work?

NO

YES

- 4 **Press and hold** the HomeLink button again.

Training complete

HomeLink indicator flashes for 2 seconds, then remains on.

HomeLink LED remains on.

- a The remote has a rolling code. Press** the "learn" button on the remote-controlled device (e.g., garage door opener).

- b Within 30 seconds, press and hold** the programmed HomeLink button for 2 seconds.

- 5 **Press** the programmed HomeLink button again; the remote-controlled device should operate.

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit www.homelink.com.

VOICE RECOGNITION (if equipped)

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of commands, say "Information" and "Voice Command Help."

Key Functions by Voice Command

Control four different systems with the steering wheel buttons and the ceiling microphone.



HFL Talk button: Give HFL commands or answer incoming calls.

Navi Talk button: Give navigation, audio, and climate control commands.

Navi Back button: Cancel a command or return to the previous screen.

HFL Back button: End a call, go back to the previous command, or cancel an operation.



Voice Command Tips

- **Press and release** the HFL or Navi Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, **press and release** the HFL Talk button and say "Hands-free help."
- For a list of available navigation commands, **press and release** the Navi Talk button and say "Help."
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

NAVIGATION p. 18



BLUETOOTH® HANDSFREELINK® p. 20



AUDIO p. 17



CLIMATE p. 17



Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the NaviTalk button before you give a command.

Locate Points of Interest

Say a command like “Display restaurant” to see restaurant icons appear on the map.




Say a command like “Display gas stations” to see gas station icons appear on the map.




Press and release the NaviTalk button before you give a command.

Get Navigation Route Information

After a destination is entered, **say** “How far to destination?” to hear the remaining distance.

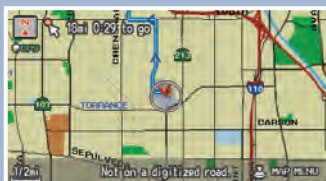


Say “Display entire route” to see the routing method the system mapped for your destination.

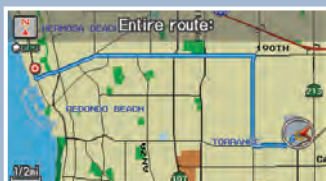

Press and release the NaviTalk button before you give a command.

Make Audio Selections

Say a command like “Radio 97.1 FM” to select that station.

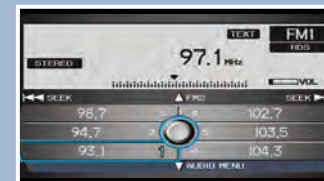


Say a command like “CD play track 1” to hear that song on a currently inserted CD.



Press and release the NaviTalk button before you give a command.

Adjust the Vehicle's Climate Setting

 Say a command like “Air conditioner on” to start the air conditioning system.



Say a command like “Fan speed 4” to adjust the fan speed.



Commonly Used Voice Commands (Continued)

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the NaviTalk button before you give a command.

General Commands

(Accepted on most screens to change displays)

- Display map
- Display menu
- Information
- Display audio screen
- What time is it?



Find Place Commands

(Accepted on Map screen)

- Find nearest:
 - ATM
 - gas station
 - Mexican restaurant
 - post office
 - Honda dealer
 - airport
 - hospital
 - bank



Navigation Commands

(Accepted on Map screen)

- How long/far to destination?
- Display destination
- Display entire route



Display Commands

(Accepted on Map screen)

- Display (or hide):
 - ATM
 - gas station
 - restaurant
 - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location




Press and release the NaviTalk button before you give a command.

Audio Commands

(Accepted on most screens)

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- CD play
- CD play track/disc #
- CD skip forward/back
- Auxiliary (AUX) play

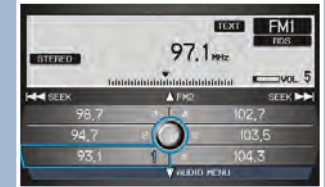

Setup Commands

(Accepted on Setup screen)

- Brightness up/down
- Volume up/down/min/max/off
- Interface dial feedback on/off
- Guidance prompts min/max/normal



Climate Control Commands

(Accepted on most screens)


- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



Help Commands

(Accepted on most screens)

- Help (list of available commands for current screen)
- Voice command help - from INFO screen (list of all available navigation, audio, and climate control commands)

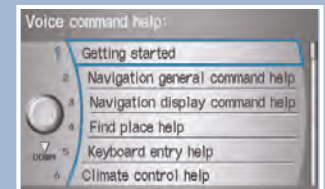

NAVIGATION (if equipped)





Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

Entering a Destination

Using Voice Control

Press and release the Navi Talk button before you give a command.

1. **Say** "Display menu" and "Address."
2. **Say** "Street" followed by the street name. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
3. A list of street names appears. **Say** the number next to the street you want to select.
4. **Say** the entire street address number. For example, "1-2-3-4."
5. If the street address is in more than one city, a list of city names appears. **Say** the number next to the city you want to select.
6. The system calculates the route and displays the "Calculate route to" screen. **Say** "OK" to set the route.

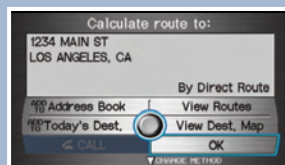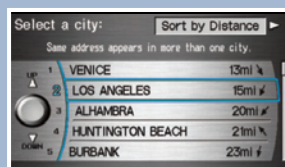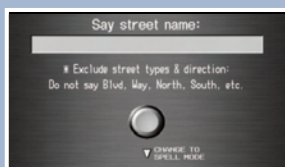
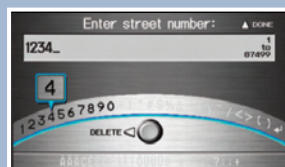


Using the Find Nearest Command

Try these simple steps to find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Navi Talk button before you give a command.

1. **Say** "Find nearest ATM."
2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
3. **Say** the number next to the destination you want to select.
4. The system calculates the route and displays the "Calculate route to" screen. **Say** "OK" to set the route.

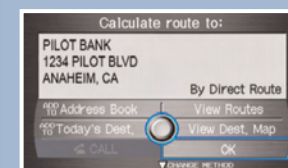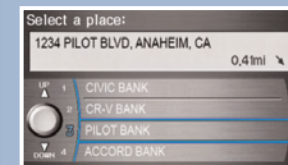

Map Screen Legend

Direction of destination

Distance to go

Time to go


Calculated route

Current vehicle location



BLUETOOTH® HANDSFREELINK® (if equipped)

Pairing Your Phone

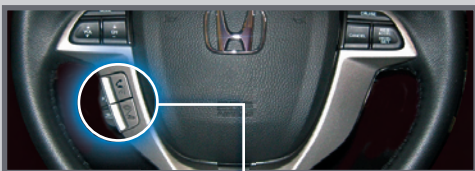

HFL Talk button: Give HFL commands or answer incoming calls.

HFL Back button: End a call, go back to the previous command, or cancel an operation.




Press and release the HFL Talk button before you give a command.


1. **Enable** “Discovery” or “Search” mode on your compatible phone.
2. **Say** “Phone setup,” then **say** “Pair.”



3. HFL gives you a four-digit code and begins to search for your phone.

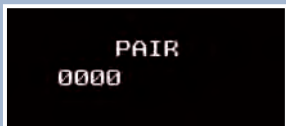

4. **Search** for a HandsFreeLink device from your phone, and connect to HFL.

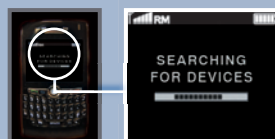

5. **Enter** the four-digit code on your phone when prompted.
6. HFL asks you to name the phone. For example, **say** “Mary’s phone.”



Place and receive phone calls through your vehicle’s audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

Making a Call

Press and release the HFL Talk button before you give a command.

1. **Press** the HFL Talk button.



2. **Say** “Call” or “Dial” and the desired phone number.



3. **Press** the HFL Talk button, and **say** “Call” or “Dial” to continue.




4. The call is connected and heard through the vehicle’s speakers.



Receiving a Call

1. A notification is heard and the incoming phone number appears on the audio display.

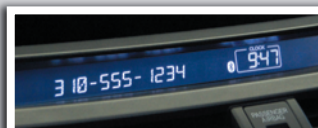

2. **Press** the HFL Talk button to accept the call.



3. **Press** the HFL Back button to end or decline the call.



HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dials.

Press and release the HFL Talk button before you give a command.

1. Say "Phonebook."



3. Say the name of the contact, and then the phone number.



2. Say "Store."



4. To call a contact once an entry is stored, say "Call Mike."



Cellular Phonebook* (models with navigation)

Import your entire cell phone's address book to the navigation system.

Press and release the NaviTalk button before you give a command.


1. Say "Display Information" and "Cellular Phone."



3. HFL begins to import your contacts to the system.



2. Say "Import Cellular Phonebook."

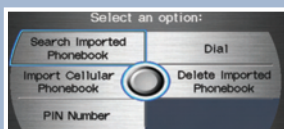

4. To call a contact, say "Search Imported Phonebook" and select the name and number.



*not available on all phones

OWNER LINK

Owner Link allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information. Register at www.owners.honda.com to ensure that you continue to enjoy the experience of owning a Honda.

HONDA | OWNER LINK®

Now Live - 2010 Honda Insight Model Information Guide
Learn All About Its Advanced Features

MEMBER | BENEFITS

MANAGE YOUR VEHICLE

Caring for your vehicle has never been easier. Now you can schedule service visits, view your maintenance schedule and shop for parts and accessories, all from the comfort of home. Plus, receive personalized special offers and tips designed to help you get the most from your Honda—right here on Owner Link. [Register today.](#)

- ☒ View recall information
- ☒ View service information
- ☒ Schedule service
- ☒ Buy Genuine Parts/Accessories
- ☒ Receive special offers
- ☒ Retrieve Radio/Navi Code

MEMBER LOGIN

Registered with another Honda site?
Log in with your username and password
Note: Username and password are case sensitive.

Username: Password: [LOGIN](#)

☐ Remember my username

[Forgot your username or password?](#)
[Having trouble logging in?](#)

NEW REGISTRATION

Register now to get started on Owner Link. It's fast, it's easy.

MANAGE YOUR FINANCIAL SERVICES ACCOUNT

Our commitment to service extends well beyond the dealership. With Owner Link, you can update your address, view your statement and make secure online payments to your financial services Account. It's easy to use. And, it's available 24 hours a day, 7 days a week. [Register today.](#)

- ☒ Get secure online access to your lease or finance account, including statements, account history and free electronic bill payment.

Are you a Honda owner? [Register for Owner Link](#)

Are you an Acura owner? [Register for My Acura](#)

REGISTRATION

Questions about registration? [FIND HELP HERE.](#)

Note: Username and password are case sensitive.

After registration, you can always click "My Profile" to edit or update your information.

☒ first name ☒ last name

☒ username ☒ password (min. 6 char.) ☒ confirm password

☒ email address ☒ confirm email address

VIN or Hull Identification Number (HIN)

promo :

[Need help with registration?](#)

Please Note: E-mail spam filters may block our e-mails from being delivered. If you have a spam blocker, please set it to accept e-mails from "ownerlink@ebizmail.honda.com".

[Where can I find my VIN? Benefits of entering VIN](#)

[SUBMIT](#) [CANCEL](#)

SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at www.owners.honda.com.