

HONDALINK®

BLUETOOTH®
HANDSFREELINK®

AUDIO AND
CONNECTIVITY

VEHICLE
CONTROLS

INSTRUMENT PANEL

SAFETY
INFORMATION

VISUAL INDEX

TABLE OF CONTENTS

HONDA
The Power of Dreams

FIT

2018
OWNER'S GUIDE

INDEX

VOICE COMMAND
INDEX

CUSTOMER
INFORMATION

SPECIFICATIONS

MAINTENANCE

HANDLING THE
UNEXPECTED

DRIVING

NAVIGATION

DISCLOSURES

■ Devices That Emit Radio Waves

The following products and systems on your vehicle emit radio waves when in operation:

- Audio system
- Bluetooth® Audio
- Bluetooth® HandsFreeLink®
- Collision Mitigation Braking System™ (CMBS™)*
- Immobilizer system
- Remote transmitter
- Smart Entry System*

Each of the above complies with the appropriate requirements or the required standards of the FCC (Federal Communications Commission) and Industry Canada, described below:

As required by the FCC: This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

As required by Industry Canada: This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

■ California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR-type batteries in this vehicle may contain perchlorate materials—special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate/ for more information.

■ California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the state of California to cause cancer and birth defects or other reproductive harm.

■ Disclaimer

The information and data contained herein are believed to be accurate and reliable. American Honda Motor Co., Inc. makes no warranty of any kind and accepts no responsibility for the results obtained through application of this information.

■ Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit www.hondalink.com/vehicle-data-choices.

**if equipped*

■ Event Data Recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. **The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:**

- **How various systems in your vehicle were operating;**
- **Whether or not the driver and passenger safety belts were buckled/fastened;**
- **How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,**
- **How fast the vehicle was traveling.**

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement that have the special equipment can read the information if they have access to the vehicle or the EDR.

The data belong to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

■ Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential.

■ End User License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in this vehicle's Owner's Manual, and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out of the arbitration provisions within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A, 1919 Torrance Blvd. Torrance, CA 90501-2746

INTRODUCTION

This Owner's Guide is intended to help you quickly get acquainted with your **2018 Honda Fit**. It provides basic information and instructions on technology and convenience features, as well as emergency procedures and how to get assistance.

This guide is for vehicles sold in the United States and Canada. It covers all Fit models, so you may find descriptions of features and equipment that are not in your vehicle. Images throughout this guide are from U.S. vehicles and represent features and equipment that are available on some, but not all, models.

This guide is not intended to be a substitute for the Owner's Manual and Navigation Manual at owners.honda.com (U.S.) or myhonda.ca (Canada). The Warranty Information CD enclosed in your glove box kit includes the vehicle and tire warranties in electronic format. This information can be viewed on a computer (PC or Mac platform) and saved or printed for your reference. You can also visit owners.honda.com (U.S.) or myhonda.ca (Canada) to view the complete and most current information.

If you are the first registered owner of your vehicle, you may request a complimentary printed copy of the Owner's Manual, Navigation Manual, or Vehicle Warranty within the first six months of vehicle purchase. To request a copy, visit owners.honda.com (U.S.) and create or log in to your account. In Canada, please request a copy from your Honda dealer.

American Honda Motor Co., Inc. strives to be proactive in protecting our environment and natural resources. By using electronic delivery for a considerable portion of the information typically found in a vehicle owner's manual, we are further reducing our impact on the environment.

Honda Automobile Customer Service

Your authorized Honda dealer should be able to answer any questions you have about your vehicle. However, if you are dissatisfied with the information you receive, you can call Honda Automobile Customer Service (see page 141).

Call (800) 999-1009 (U.S.) or (888) 946-6329 (Canada)

Honda Roadside Assistance

24-hour emergency road service is available to you in the United States and Canada throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply).

Call (866) 864-5211 (U.S.) or (800) 465-7587 (Canada)

TABLE OF CONTENTS


VISUAL INDEX	1
Steering Wheel and Nearby Controls.....	1
Dashboard and Other Controls.....	2
SAFETY INFORMATION	3
Important Safety Information.....	3
Seat Belts.....	5
Airbags.....	9
Child Safety.....	15
Safety Label Locations.....	22
Reporting Safety Defects.....	23
INSTRUMENT PANEL	24
Malfunction Indicators.....	24
Condition Indicators.....	26
On/Off Indicators.....	27
Information Display.....	28
Multi-Information Display*.....	29
VEHICLE CONTROLS	30
Using the Key or Remote Transmitter.....	30
Smart Entry System*.....	31
Door Operation.....	34
Tailgate Operation.....	35
Power Window Operation.....	36
Power Moonroof Operation*.....	37
Interior and Exterior Lights.....	38
One-Touch Turn Signal.....	39
Wiper Operation.....	40
Adjusting the Seats.....	41
Rear Seats.....	44
Adjusting the Mirrors.....	45
Adjusting the Steering Wheel.....	45
Heating and Cooling System*.....	46
Climate Control System*.....	47
Seat Heaters*.....	47
Setting the Clock.....	48
Customized Features.....	49
AUDIO AND CONNECTIVITY	50
Basic Audio Operation.....	50
Models with color audio system.....	53
Color Audio System*.....	53
FM/AM Radio.....	54
Compact Disc (CD).....	55
iPod®.....	56
USB Flash Drive.....	57
Bluetooth® Audio.....	58
Models with Display Audio.....	59
Touchscreen Operation*.....	59
HondaLink™.....	60
Apple CarPlay™.....	60
Android Auto™.....	61
Wi-Fi Connection.....	62
FM/AM Radio.....	63
SiriusXM® Radio*.....	64
iPod®.....	65
USB Flash Drive.....	66
Bluetooth® Audio.....	67
Pandora®.....	68
BLUETOOTH® HANDSFREELINK® (HFL)	69
Models with color audio system.....	69
Basic HFL Operation.....	69
Pairing a Phone.....	70
Making a Call.....	71
Models with Display Audio.....	72
Basic HFL Operation.....	72
Pairing a Phone.....	74
Making a Call.....	75
HondaLink™ Assist.....	76
SMS Text Messaging and E-Mail*.....	77
Siri® Eyes Free.....	78
NAVIGATION*	79
Basic Navigation Operation.....	79
Entering a Destination.....	81
Routing.....	84

*if equipped

VISUAL INDEX

Quickly locate items in the vehicle's interior.

Steering Wheel and Nearby Controls

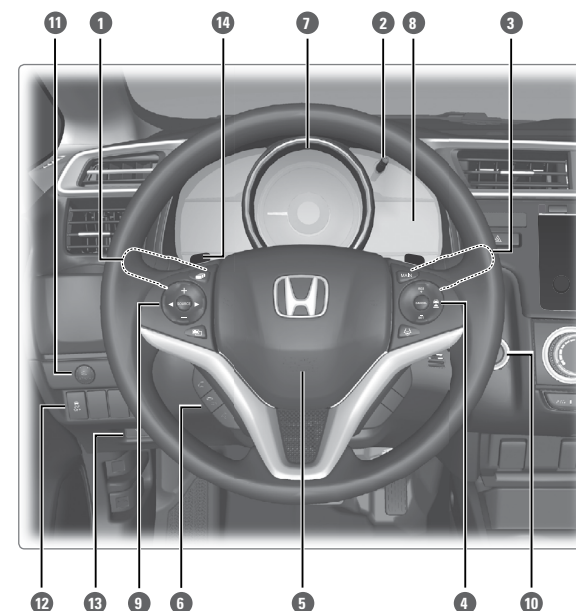

- 1 Lights/turn signals/LaneWatch button* p. 38, p. 39, p. 102
- 2 Select/Reset knob p. 28
Brightness control p. 38
- 3 Wipers/washers p. 40
- 4 Cruise control buttons* p. 96
Adaptive Cruise Control (ACC) buttons* p. 97
Lane Keeping Assist (LKAS) button* p. 99
- 5 Horn
- 6 Bluetooth® HandsFreeLink®/voice control buttons p. 69, p. 72, p. 79
- 7 Instrument panel p. 24
- 8 Information display p. 28
Multi-information display* p. 29
- 9 Audio remote control buttons* p. 51
Display button* p. 59
- 10 ENGINE START/STOP button* p. 91
- 11 ECON button* p. 95
- 12 Vehicle Stability Assist (VSA) button p. 95
Collision Mitigation Braking System (CMBS) OFF button* p. 101
- 13 Road Departure Mitigation System (RDM) button* p. 100
- 14 Tire Pressure Monitoring System (TPMS) button* p. 110
Paddle shifters* p. 92


*if equipped

*if equipped

DRIVING	86
Before Driving.....	86
Improving Fuel Economy and Reducing CO ₂ Emissions.....	87
Maximum Load Limit.....	88
Starting to Drive.....	90
Shifting.....	91
Braking.....	93
Vehicle Stability Assist (VSA®).....	95
ECON Button*.....	95
Cruise Control*.....	96
Lane Keeping Assist System (LKAS)*.....	99
Road Departure Mitigation (RDM)*.....	100
Collision Mitigation Braking System™ (CMBS™)*.....	101
LaneWatch™*.....	102
Multi-View Rear Camera.....	103
Refueling.....	105
HANDLING THE UNEXPECTED	106
Smart Entry Remote Battery Strength*.....	106
Jump Starting.....	106
Shift Lever Does Not Move*.....	107
Overheating.....	108
Emergency Engine Stop*.....	109
Tire Pressure Monitoring System (TPMS).....	110
Changing a Flat Tire.....	112
Fuse Locations.....	116

MAINTENANCE	120
Safety Precautions.....	120
Maintenance Minder™.....	121
Under the Hood.....	123
Engine Oil.....	124
Engine Coolant.....	126
Brake/Clutch* Fluid.....	127
Window Washer Fluid.....	127
Checking the Battery.....	128
Changing Wiper Blades.....	129
Tire Information.....	131
Tire Labeling.....	134
DOT Tire Quality Grading.....	135
Testing of Readiness Codes.....	137
SPECIFICATIONS	138
CUSTOMER INFORMATION	140
Frequently Asked Questions/Troubleshooting.....	140
Contact Us.....	141
Honda Roadside Assistance.....	142
Warranty Coverages.....	142
VOICE COMMAND INDEX	143
INDEX	149

Dashboard and Other Controls

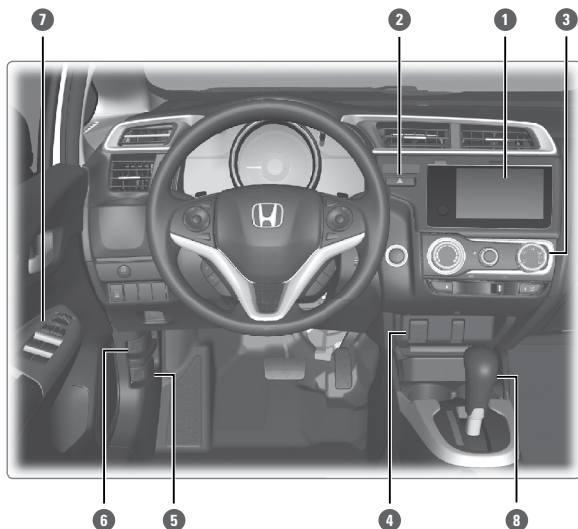

- | | |
|--|--|
| ① Touchscreen* p. 59 | ⑦ Power window switches p. 36 |
| ② Hazard warning button | Door lock switches p. 34 |
| ③ Heating/air-conditioning* system p. 46 | Door mirror controls p. 45 |
| ④ USB port p. 50 | ⑧ CVT shift lever* p. 91 |
| Accessory power socket p. 50 | Manual shift lever* p. 93 |
| ⑤ Hood release handle p. 123 | Parking brake (behind shift lever) p. 94 |
| ⑥ Fuel fill door release handle p. 105 | |

*if equipped

SAFETY INFORMATION

Your safety—and the safety of others—is very important, and operating this vehicle safely is an important responsibility. While we strive to help you make informed decisions about safety, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. Therefore, you must use your own good judgment.

Important Safety Information

This guide explains many of your vehicle's safety features and how to use them. Please read this information carefully. Following the instructions below will also help to keep you and your passengers safe.

■ Important Safety Precautions

- Always wear your seat belt.
- Secure all children in the proper restraint system.
- Be aware of airbag hazards.
- Don't drink and drive.
- Pay appropriate attention to the task of driving safely.
- Control your speed.
- Keep your vehicle in safe condition.

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly and only you can decide when it is safe to divert some attention away from driving.

■ Safety Messages

When you see the following messages throughout this guide, pay close attention.

⚠ DANGER You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ WARNING You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ CAUTION You **CAN** be **HURT** if you don't follow instructions.

NOTICE This information is intended to help you avoid damage to your vehicle, other property, or the environment.


Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle and follow the instructions set forth below, you will not accumulate dangerous levels of carbon monoxide gas in the vehicle interior.

Have the exhaust system inspected for leaks whenever:

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the tailgate open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the tailgate open, open all the windows and set the climate control system as shown below.

1. Select the fresh air mode.
2. Select the  mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

WARNING

Carbon monoxide gas is toxic. Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas. Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Seat Belts

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts and wear them properly.

Lap/Shoulder Seat Belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving, the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop, the retractor locks to restrain your body. The rear seat belts also have a lockable retractor for use with child seats.

The front seats are equipped with automatic seat belt tensioners to enhance safety. The tensioners automatically tighten the front seat belts during a moderate to severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags.

Proper Use of Seat Belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat and remain in that position for the duration of the trip. Slouching and leaning reduces the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.
- No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

WARNING

Not wearing a seat belt properly increases the chance of a serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

■ Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily. If a belt does not retract easily, cleaning the belt may correct the problem. Use only mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

⚠ WARNING

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.



Check your seat belts regularly and have any problem corrected as soon as possible.

■ Fastening a Seat Belt

Adjust your seat to the proper position (see page 41) and then follow the below steps:

1. Pull the seat belt out slowly.
2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure. Make sure that the belt is not twisted or caught on anything.
3. Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
4. If necessary, pull up on the belt again to remove any slack, then make sure that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

To release the belt, push the red PRESS button then guide the belt by hand until it has retracted completely.

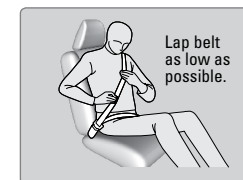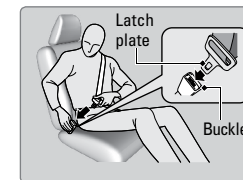

⚠ WARNING


Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

■ Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.





1. Move the anchor up and down while pulling the release outward.
2. Position the anchor so that the belt rests across the center of your chest and over your shoulder.

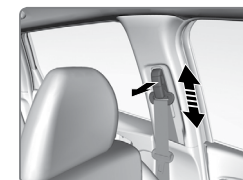

■ Seat Belt with Detachable Anchor

The seat belt for the rear center seat is located in the ceiling.

1. Pull out the seat belt's small latch plate and the latch plate from each holding slot in the ceiling.
2. Line up the triangle marks on the small latch plate and anchor buckle. Make sure the seat belt is not twisted. Attach the belt to the anchor buckle.
3. Insert the latch plate into the buckle. Properly fasten the seat belt the same way you fasten the lap/shoulder seat belt.

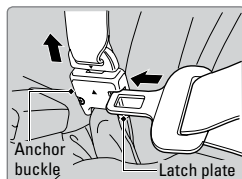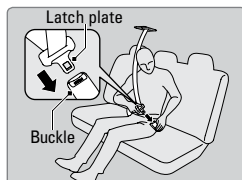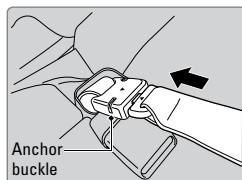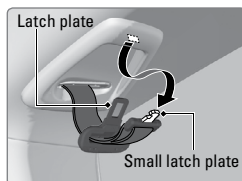

To unlatch the detachable anchor, insert the latch plate into the slot on the side of the anchor buckle.

⚠ WARNING

Using the seat belt with the detachable anchor unlatched increases the chance of serious injury or death in a crash.

Before using the seat belt, make sure the detachable anchor is correctly latched.

Airbags

Your vehicle is equipped with three types of airbags: front airbags, side airbags, and side curtain airbags.

■ Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger. They are housed in the center of the steering wheel for the driver and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.



■ Advanced Airbags

The front airbags have advanced features to help reduce the likelihood of airbag-related injuries to smaller occupants.

The driver's advanced airbag system includes a seat position sensor.

Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag. The front passenger's advanced airbag system has weight sensors.

We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, **if you do allow a child age 12 or under to ride in the front passenger's seat**, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

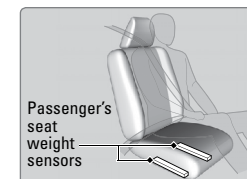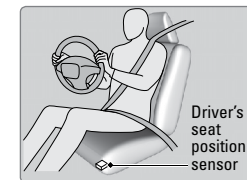

For both advanced front airbags to work properly:

- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.
- Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors.

■ Side Airbags



The side airbags help protect the upper torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact. They are housed in the outside edge of the driver's and front passenger's seat-backs. Both are marked **SIDE AIRBAG**.

■ Side Curtain Airbags

Side curtain airbags help protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

The side curtain airbags are designed to deploy in a rollover or moderate-to-severe side impact. If the SRS control unit senses that your vehicle is about to roll over, it immediately deploys both side curtain airbags and activates both front seat belt tensioners. If the impact is on the passenger's side, the passenger's side curtain airbag will inflate even if there are no occupants on that side of the vehicle.

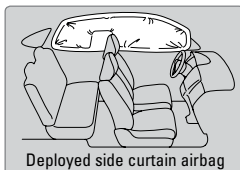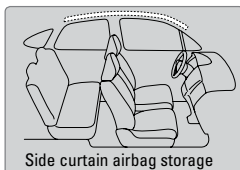

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars, as they can interfere with the proper operation of the side curtain airbags.

When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may inflate in a moderate-to-severe angled frontal collision.

■ Important Facts About Your Airbags

Always wear your seat belt properly and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Do not place hard or sharp objects between yourself and a front airbag. Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front airbag covers. Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Do not attach any objects to the side windows or roof pillars. They can interfere with the proper operation of the side curtain airbags.

Do not cover or replace the front seat-back covers. This can prevent your side airbags from properly deploying during a side impact.

⚠ WARNING

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.


Always keep the glove box closed while driving.

■ Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator comes on.

SRS (Supplemental Restraint System) indicator

If the indicator comes on at any other time besides vehicle start-up, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

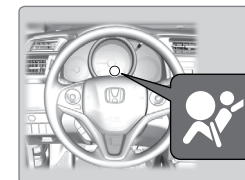

⚠ WARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Passenger Airbag Off indicator

The indicator comes on to alert you that the front passenger's front airbag has been turned off. This occurs when the front passenger's weight sensors detect about 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

Infants and small children should always ride properly restrained in a back seat.

Objects placed on the seat can also cause the indicator to come on.


If the front passenger's seat is empty, the passenger's front airbag will not deploy and the indicator will not come on.

If the indicator comes on with no occupant or objects in the front passenger's seat or if a passenger (weighing over the airbag cutoff threshold) is occupying the front passenger seat, something may be interfering with the weight sensors, such as:


- An object hanging on the seat or in the seat-back pocket.
- A child seat or other object pressing against the rear of the seat-back.
- A rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is forced back against an object on the seat or floor behind it.
- An object placed under the front passenger's seat.

If none of these conditions exist, have your vehicle checked by a dealer as soon as possible.

The passenger airbag off indicator may come on and go off repeatedly if the total weight on the seat is near the airbag cutoff threshold.

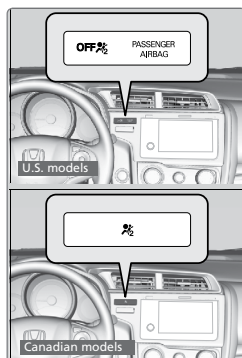

Airbag System Components

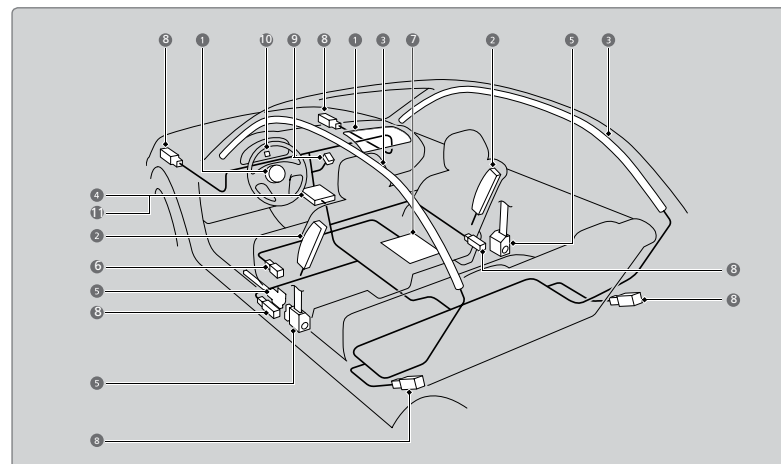

- 1 Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS AIRBAG**.
- 2 Two side airbags, one for the driver and one for the front passenger. The airbags are stored in the outer edges of the seat-backs. Both are marked **SIDE AIRBAG**.
- 3 Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked **SIDE CURTAIN AIRBAG**.
- 4 An electronic control unit that, when the vehicle is on, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners, and other vehicle information. During a crash event the unit can record such information.
- 5 Automatic front seat belt tensioners. The driver's and front passenger's seat belts incorporate sensors that detect whether or not they are fastened.
- 6 A driver's seat position sensor. If the seat is too far forward, the airbag will inflate with less force.
- 7 Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is 65 lbs (29 kg) or less (the weight of an infant or small child).
- 8 Impact sensors that can detect a moderate-to-severe front or side impact.
- 9 An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
- 10 An indicator on the instrument panel that alerts you to a possible problem with the airbag system or seat belt tensioners.
- 11 A rollover sensor that detects whether the vehicle is about to roll over.

■ Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

Do not remove or modify a front seat without first consulting a dealer

This would likely disable the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact a Honda dealer. For U.S. vehicles, call Honda Automobile Customer Service at (800) 999-1009. For Canadian vehicles, call Honda Canada Customer Relations at (888) 946-6329.

Child Safety

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle collisions are the number one cause of death of children ages 12 and under.

The National Highway Traffic Safety Administration and Transport Canada recommend that all children ages 12 and under be properly restrained in a rear seat. Some states or provinces/territories have laws restricting where children may ride.

To reduce the number of child deaths and injuries, every state, Canadian province and territory requires that infants and children be properly restrained when they ride in a vehicle.

■ Protecting Child Passengers

- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.
- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the lap belt portion of the lap/shoulder belt or the lower anchors of the LATCH system.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows, or seat adjusters.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls, causing it to move unexpectedly.

⚠ WARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

⚠ WARNING


Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

■ Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat maker's weight or height limit for the seat and the infant is at least one year old. Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Child seats must be placed and secured in a rear seating position. Rear-facing child seats should never be installed in a forward-facing position.

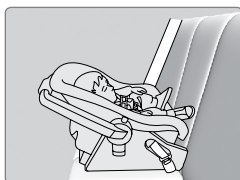

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position. Make sure that there is no contact between the child seat and the seat in front of it. It can also interfere with proper operation of the front passenger's advanced front airbag system. If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed and leave it unoccupied. Or, you may wish to get a smaller rear-facing child seat.

⚠ WARNING

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.


Always place a rear-facing child seat in the rear seat, not the front.

■ Protecting Smaller Children

If a child is at least one year old and within the weight range indicated by the child seat manufacturer, the child should be properly restrained in a firmly secured forward-facing child seat.

We strongly recommend placing a forward-facing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.

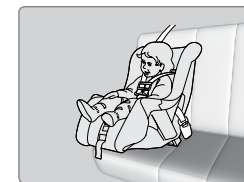**⚠ WARNING**

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible and properly restrain the child.

■ Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for Children). Some have a rigid-type connector, while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH-compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

Important considerations when selecting a child seat





Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213 or Canadian Motor Vehicle Safety Standard 213.

■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.

1. Locate the lower anchors under the marks.
2. Raise the head restraint to its highest position.
3. Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat. Make sure that the lower anchors are not obstructed by the seat belt or any other object. If necessary, remove the cargo area cover.*
4. Route the tether strap between the head restraint legs. Make sure the strap is not twisted. Secure the tether strap hook onto the anchor.
5. Tighten the tether strap according to the child seat manufacturer's instructions.
6. Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
7. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked. If necessary, reinstall the cargo area cover.*

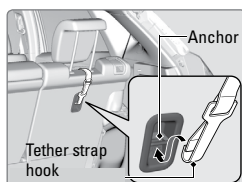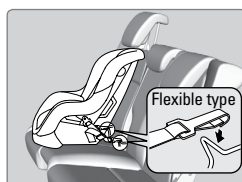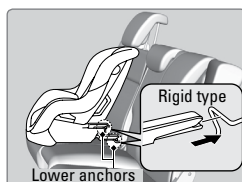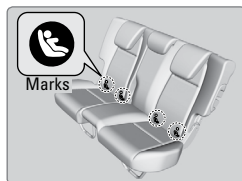


*if equipped

■ Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed in any of the rear seats. Raise the head restraint to its highest position.

1. Place the child seat on the vehicle seat.
2. Route the seat belt through the child seat according to the seat manufacturer's instructions and insert the latch plate into the buckle. Insert the latch plate fully until it clicks.
3. Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
4. Let the seat belt completely wind up into the retractor, then try to pull it out to make sure the retractor is locked. If you are able to pull the shoulder belt out, the lockable retractor is not activated. Pull the seat belt all the way out and repeat steps 4 – 5.
5. Grab the shoulder part of the seat belt near the buckle and pull up to remove any slack from the lap part of the belt. When doing this, place your weight on the child seat and push it into the vehicle seat.
6. Make sure the child seat is firmly secured by rocking it forward and back and side to side; less than one inch of movement should occur near the seat belt.
7. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated and the belt is fully retracted and locked.

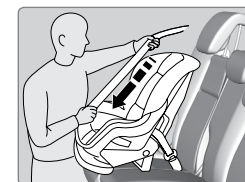


To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.


■ Adding Security with a Tether

Two tether anchorage points are provided behind the rear outer seating positions and one in the ceiling for the rear center. A child seat that is installed with a seat belt and comes with a tether can use the tether for additional security.


1. **Using an outer anchor:** If necessary, remove the cargo area cover.* Raise the head restraint to its highest position, then route the tether strap through the head restraint legs.

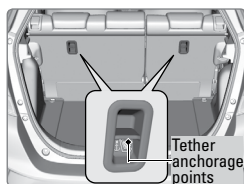


Using the center anchor: Lower the head restraint to its lowest position. Open the anchor cover. Route the tether strap over the head restraint.

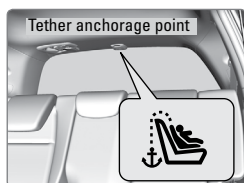

2. Secure the tether strap hook onto the anchor. Make sure the strap is not twisted.

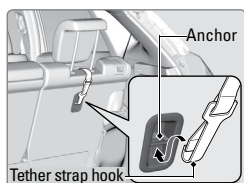

3. Tighten the tether strap according to the seat manufacturer's instructions. If necessary, reinstall the cargo area cover.*

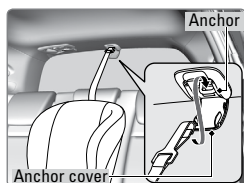

*if equipped

■ Protecting Larger Children

When a child is too big for a child seat, secure the child in a rear seat using the lap/shoulder seat belt.

Have the child sit upright and all the way back, then ensure the following:

- The child's knees bend comfortably over the edge of the seat.
- The shoulder belt crosses between the child's neck and arm.
- The lap part of the seat belt is as low as possible, touching the child's thighs.
- The child can stay seated for the whole trip.



If a lap/shoulder belt cannot be used properly, position the child in a booster seat in a rear seating position. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

Some U.S. states and Canadian provinces/territories require children to use a booster seat until they reach a given age or weight (e.g., 6 years or 60 lbs/27 kg). Be sure to check current laws in the state or province/territory where you intend to drive.


⚠ WARNING

Allowing a child age 12 or under to sit in the front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, then have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Safety Label Locations

Safety labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

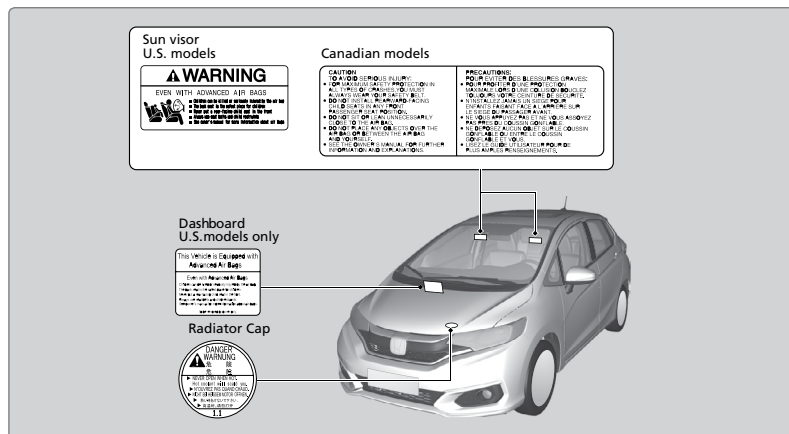

Reporting Safety Defects

In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>, or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Honda Canada, Inc., and you may also inform Transport Canada.


If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may lead to a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Honda Canada, Inc.

To contact Transport Canada's Defect Investigations and Recalls Division, you may call 1-800-333-0510. For more information on reporting safety defects or about motor vehicle safety, go to <http://www.tc.gc.ca/roadsafety>.

INSTRUMENT PANEL


Learn about the indicators, gauges, and displays related to driving the vehicle.

Models with information display

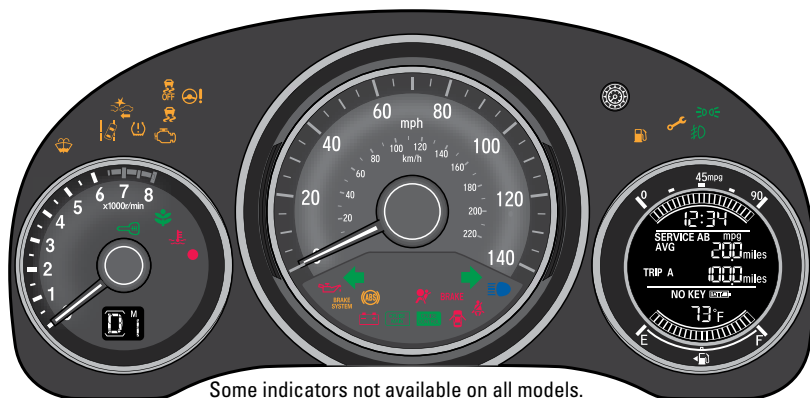

Some indicators not available on all models.

Models with multi-information display

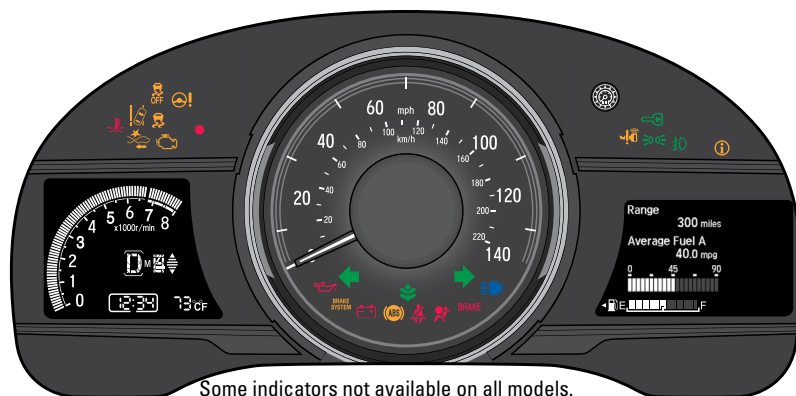

Some indicators not available on all models.

Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.



Brake system

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood. Check the oil level and add oil if necessary (see page 125). If the indicator does not turn off, have your vehicle repaired immediately.



Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



Smart Entry system*

There is a problem with the smart entry system.



Malfunction indicator lamp (check engine light)

- The emissions control system may have a problem or the fuel cap is loose or missing.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place, and wait for the engine to cool down.



Anti-lock Brake System (ABS)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



Tire Pressure Monitoring System (TPMS) (U.S. models only)

There is a problem with the tire pressure monitoring system or the vehicle is fitted with the compact spare tire.



Vehicle Stability Assist (VSA®)

There is a problem with the VSA system or hill start assist system.



Brake system

There is a problem with a braking system other than the regular brakes.



Electric power steering

There is a problem with the system. Stop in a safe place and restart the vehicle.

*if equipped

- LKAS

Lane Keeping Assist System (LKAS)*
 There is a problem with the system.
- ACC

Adaptive Cruise Control (ACC)*
 There is a problem with the system.
- Road Departure Mitigation (RDM)***
 There is a problem with the system.
- Collision Mitigation Braking System (CMBS)***
 There is a problem with the system, the temperature is too high, or the camera is blocked.
- Starter system***
 There is a problem with the starter system.
- High temperature**
 The engine coolant temperature is high. Drive slowly to prevent overheating. If the indicator remains on, immediately stop the vehicle in a safe place (see page 108).
- Low temperature**
 The engine coolant temperature is low. If the indicator remains on, there may be a problem with temperature sensors.
- Immobilizer**
 Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

Condition Indicators

These indicators may require you to perform an action.

- Parking brake**
 Release the parking brake before driving. You will hear a beep if you drive with it not fully released.
- Seat belt reminder**
 Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you and/or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.
- Door/tailgate open***
 A door or the tailgate is open. A beep sounds if any door or the tailgate is open while driving.

- Low fuel***
 Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.
- Low tire pressure**
 Stop in a safe place, check tire pressures and inflate tire(s) if necessary. If the indicator remains on after tire inflation, you need to calibrate the system (see page 110). The indicator also appears if your vehicle is fitted with the compact spare tire. Have your regular tire repaired or replaced as soon as possible.
- Washer fluid level** *(Canadian models only)*
 Washer fluid is low. Refill the reservoir (see page 127).
- Maintenance Minder***
 Scheduled maintenance for your vehicle is due (see page 121).
- System message***
 When a condition or malfunction indicator comes on, a message also appears on the multi-information display. Check the display for more information. See the message again or press the button to return to the normal screen.

On/Off Indicators

These indicators remind you when an item is on or off.

- VSA off

High beams on
- VSA on (blinks)

Exterior lights on
- CRUISE MAIN* on

ECON mode* on
- CRUISE CONTROL* on

ACC* on
- Turn signals/hazards on


CMBS* off
- Fog lights* on

LKAS* on


*if equipped

Information Display

Consists of several displays that provide you with useful information.

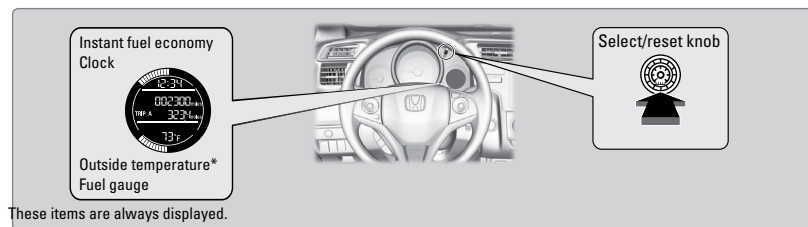


Press the select/reset knob to change information displayed.

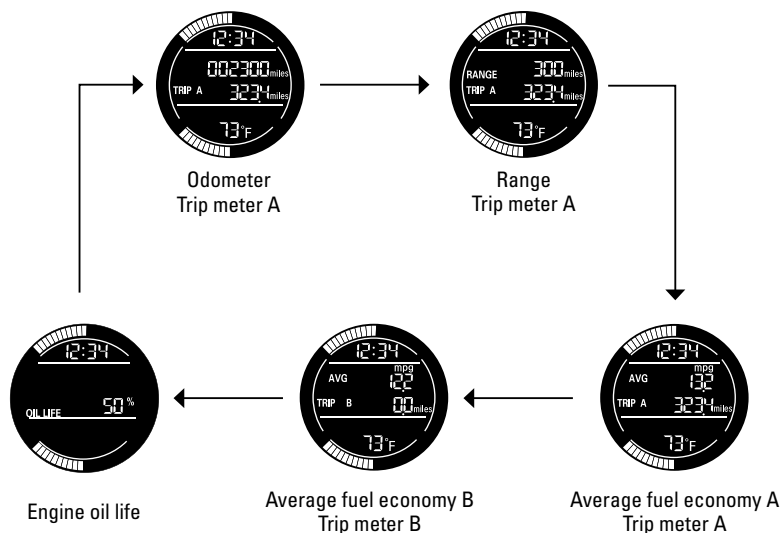

*if equipped


Multi-Information Display*

Consists of several displays that provide you with useful information.

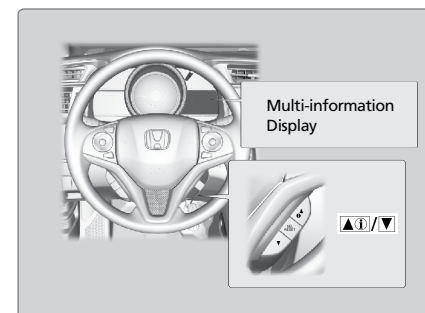


Main Displays

Press the ▲④/▼ buttons to scroll through the different icons shown. Detailed information for the selected icon appears after a few seconds, or you can press the ENTER button to view it.

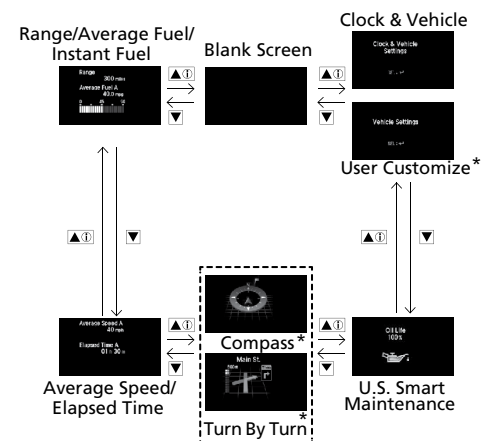

Lower Displays

 Press the Select/Reset button to cycle through the lower displays shown below.



*if equipped

VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.


Using the Key or Remote Transmitter

Lock or unlock the doors and tailgate.

Lock button: Press to lock the doors and tailgate. Press again for audible verification.


Unlock button: Press once to unlock the driver's door. Press again to unlock all doors and the tailgate.

Panic button: Press and hold to sound the alarm for 30 seconds. Press again to cancel.

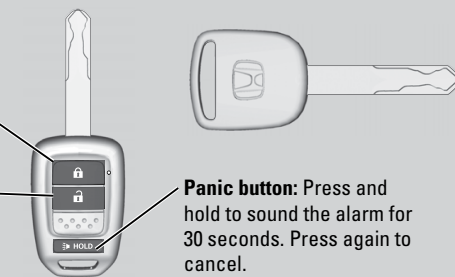

Rear unlock button: Press and hold to unlock the tailgate.

Built-in key (Smart Entry)*: Slide the release knob on the back of the transmitter and pull out the built-in key.

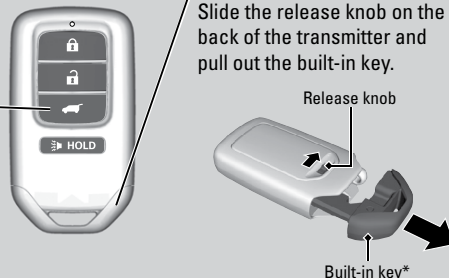

NOTICE

Leaving the key or remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.


*if equipped

Smart Entry System*

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and tailgate without handling the transmitter.

■ Unlocking/Locking the Doors

To unlock: Grab the driver's door handle when the vehicle is off to unlock the driver's door. Grab the front passenger's door handle to unlock all doors and the tailgate.

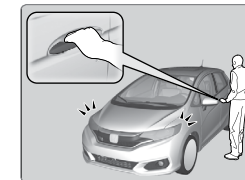


To lock: Press the door lock button on the front door handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.




■ Unlocking/Locking the Tailgate

To unlock: Press the tailgate release button under the tailgate handle to unlock the doors and the tailgate. The vehicle can be on or off.

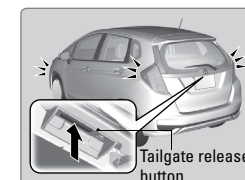

To lock: Press the tailgate lock button to lock the tailgate and all doors. If the remote transmitter is inside the vehicle, the tailgate and doors will not lock.

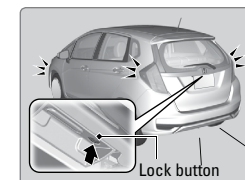

*if equipped

■ Customizing Door Lock/Unlock Settings

Customize the auto door-lock settings to your preference. Begin with the vehicle in Park (CVT models) or with the parking brake set (manual transmission models).

Customizing lock settings (models with color audio)

Steps	Drive Lock Mode ^{*1}	Off
1	Apply the parking brake. Continuously variable transmission models Move the shift lever to P .	
2	The driver's door must be closed at this stage.	Open the driver's door.
3	Turn the ignition switch to ON ^{*2} . Push the ENGINE START/STOP button twice without depressing the brake pedal ^{*3} .	
4	Continuously variable transmission models Move the shift lever out of P with the brake pedal depressed.	—
5	Press and hold the front of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.	
6	Continuously variable transmission models Move the shift lever to P .	—
7	Turn the ignition switch to OFF within 20 seconds ^{*2} . Push the ENGINE START/STOP button once without depressing the brake pedal ^{*3} . Customization is completed. All doors unlock and all turn signals blink three times.	

^{*1}: Default setting
^{*2}: Models without smart entry system
^{*3}: Models with smart entry system

Customizing unlock settings (models with color audio)

Steps	Driver Door Open Unlock Mode ^{*1}	Continuously variable transmission models Park Unlock Mode	Off
1	Apply the parking brake. Continuously variable transmission models Move the shift lever to P .		
2	The driver's door must be closed at this stage.	Open the driver's door.	
3	Continuously variable transmission models Move the shift lever out of P with the brake pedal depressed.	—	
4	Turn the ignition switch to ON ^{*2} . Push the ENGINE START/STOP button twice without depressing the brake pedal ^{*3} .		
5	Press and hold the rear of the master door lock switch on the driver's door. You will hear a click more than five seconds elapsed. Release the switch.		
6	Continuously variable transmission models Move the shift lever to P .	—	
7	Turn the ignition switch to OFF within 20 seconds ^{*2} . Push the ENGINE START/STOP button once without depressing the brake pedal ^{*3} . Customization is completed. All doors lock and all turn signals blink three times.		

^{*1}: Default setting
^{*2}: Models without smart entry system
^{*3}: Models with smart entry system

Models with Display Audio

See “Customized Features” on page 49.

■ Walk Away Auto Lock*

When you walk away from the vehicle while carrying the remote transmitter, the doors can automatically lock if the following conditions are met:


- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the tailgate are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

To turn on this feature, follow the steps below. The vehicle must be in Park (P):.

1. From the HOME screen, select Vehicle Settings.
2. Select Door Setup.
3. Select Walk Away Auto Lock.
4. Select On.
5. Select BACK to exit the menus.

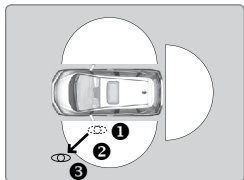

**if equipped*


Door Operation

Use several methods to lock or unlock the doors.

■ Using the Lock Tab

To unlock: Pull the lock tab rearward. When you unlock the door using the lock tab on the driver's door, only the driver's door unlocks.


To lock: Push the lock tab forward. When you lock the door using the lock tab on the driver's door, all other doors and the tailgate lock.

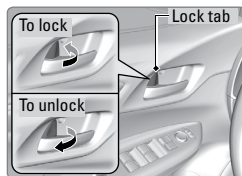

■ Using the Front Door Inner Handle

When you pull either front door inner handle, the door unlocks and opens.


Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

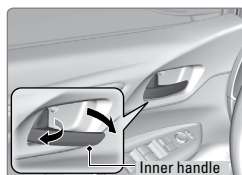

■ Using the Master Door Lock Switch

To unlock: Press the unlock side of the switch to unlock all doors and the tailgate.

To lock: Press the lock side of the switch to lock all doors and the tailgate.

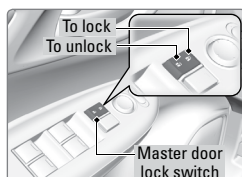


You can use the master door lock switch to customize the door lock and unlock settings. See the Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for instructions.

■ Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside, regardless of the position of the lock tab.

Slide the lever in the rear door to the lock position and close the door.

Open the door using the outer door handle.

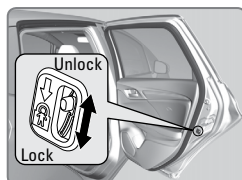


Tailgate Operation

Use these methods to operate the tailgate.

■ Opening the Tailgate


Models without smart entry system

Pull up the tailgate outer handle and lift up the tailgate to open it.

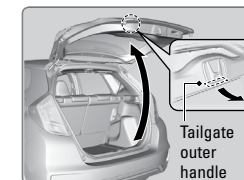


Models with smart entry system

Press the tailgate release button and lift up the tailgate to open it.

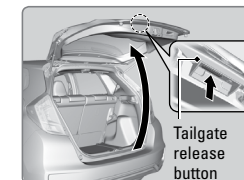

■ Closing the Tailgate

Grab the inner handle and pull the tailgate down. Push it closed from the outside.

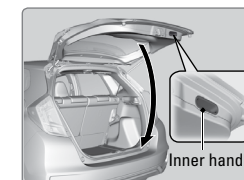

Power Window Operation

The power windows can be opened and closed when the vehicle is on by using the switches on the doors. The switches on the driver's side can be used to open and close all the windows.

Automatic Operation

To open: Push the switch down firmly.

To close: Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch again briefly.

Manual Operation


To open: Push the switch down lightly.

To close: Pull the switch up lightly.

Release the switch when the windows reach the desired position.

Power Window Lock

Push in the power window lock button so only the driver's window can be operated. The driver can operate all other windows using the specific switches.

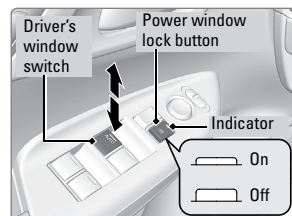

⚠ WARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

Power Moonroof Operation*


The moonroof can be opened and closed when the vehicle is on by using the switch on the ceiling.

Automatic Operation

To open: Push the switch back firmly, then release.

To close: Push the switch forward firmly, then release.

The moonroof opens or closes completely. To stop the moonroof at any time, push the switch briefly.

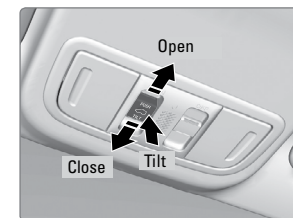

Manual Operation

To open: Push and hold the switch back until the desired position is reached.

To close: Push and hold the switch forward until the desired position is reached.

Moonroof Tilt

To tilt: Push the center of the switch.

To close: Push the switch forward firmly, then release.

NOTICE

Opening the moonroof in below freezing temperatures or when it is covered with snow or ice can damage the moonroof panel or motor.

⚠ WARNING

Closing the moonroof on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the moonroof before closing it.

*if equipped

Interior and Exterior Lights

Operate interior and exterior lights when the vehicle is on or off.


Brightness Control

Adjust instrument panel brightness when the vehicle is on.

To brighten: Turn the knob to the right.

To dim: Turn the knob to the left.

A beep sounds when the brightness reaches minimum or maximum.

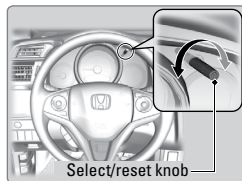


Interior Lights

Change the interior light settings using the switches on the ceiling.

ON position (rear only): Interior lights remain on.


Door-activated position: Interior lights come on when any of the doors are opened, the driver's door is unlocked, or the vehicle is turned off.

OFF position: Interior lights remain off.

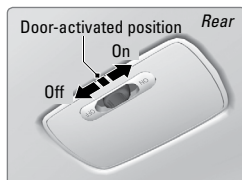

Map Lights


Press the front map lights to turn on or off.

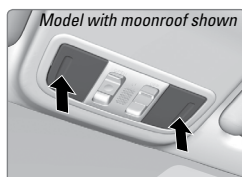


Exterior Lights


Rotate the switches on the headlight lever to operate the exterior lights. Push the lever forward to turn on the high beams. Return the lever to its original position for low beams.

 
OFF: All exterior lights are off.

: Turn on exterior lights except headlights.

AUTO: Turn on the automatic lighting feature*. Headlights turn on or off depending on ambient brightness when the vehicle is on. Headlights automatically come on after the wipers are engaged for a certain time.

: Turn on all exterior lights including headlights.

: Turn fog lights* on or off.

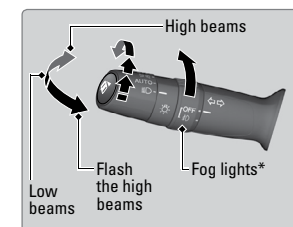


One-Touch Turn Signal

Use this quick and convenient method to signal a lane change.

Lightly push the turn signal lever up or down for a three-blink sequence.

For a continuous signal, push the lever up or down until it locks into place.

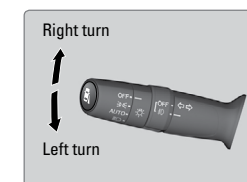

*if equipped

*if equipped

Wiper Operation


The windshield wipers and washers can be used when the vehicle is on.

Front Wipers

Move the wiper lever up or down to the desired position.

Headlight-Wiper Integration*

When the headlights are in the AUTO position, they automatically turn on when the front wipers operate several times within a certain interval. The headlights turn off shortly after the wipers are turned off or if there is enough ambient light.

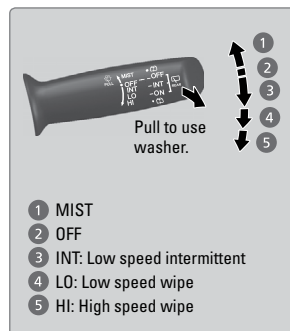

Rear Wiper

Rotate the end of the wiper lever to the desired position.

When you shift to Reverse (R) and the front wipers are activated, the rear wiper activates even if the switch is off.



NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched or the rubber blades will get damaged.

In cold weather, the blades may freeze to the windshield, becoming stuck. Operating the wipers in this condition may damage the wipers. Use the defroster to warm the windshield or manually clear the windshield of ice and snow before turning on the wipers.


*if equipped

Adjusting the Seats

Make seat adjustments before driving to ensure the best comfort and safety.

Adjusting the Front Seats


Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright and well back in the seat, adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted so that it is as far back from the front airbag in the dashboard as possible.

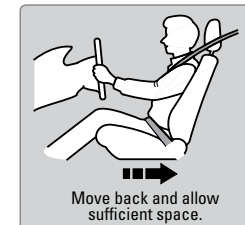

The National Highway Traffic Safety Administration and Transport Canada recommend that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.


Horizontal position adjustment

Pull up on the bar to move the seat, then release the bar.

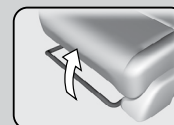

Seat-back angle adjustment

Pull up the lever to change the angle.

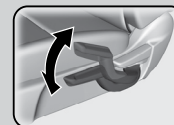

Height adjustment (Driver's seat only)

Pull up or push down the lever to raise or lower the seat.



⚠ WARNING

Reclining the seat-back too far can result in serious injury or death in a crash. Adjust the seat-back to an upright position and sit well back in the seat.

⚠ WARNING

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

⚠ WARNING


Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

■ Reclining the Front Seats

You can recline the seat-backs of the front seats so they are level with the rear seat cushions to make a large cushioned area.

1. Remove the front head restraints (see page 43). Store the head restraints in the cargo area.
2. Adjust the front seats forward as far as possible.
3. Pivot the seat-back backward with the seat-back angle adjustment lever to be level with the rear seat cushion.
4. Move the front seat backward until it touches the rear seat.
5. Unlatch the detachable anchor from the anchor buckle and store the rear center seat belt (see page 8).
6. Adjust the rear seat-back to the desired position.

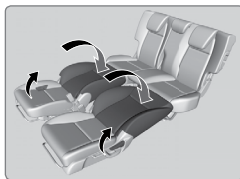


To return the front seats to their original positions, reverse this procedure. When you return the seat-back to its upright position, hold the seat-back to keep it from going up too quickly.

■ Floor Mats*

Position the front seat floor mats properly and anchor them. If they are not properly positioned, the floor mats can interfere with the front seat functions.

Do not put additional floor mats on top of the anchored mats.

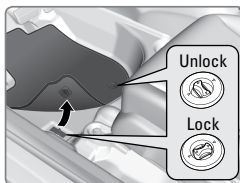


**if equipped*

■ Adjusting the Head Restraints

Your vehicle is equipped with head restraints in all seating positions. Head restraints are most effective for protection against whiplash and other rear-impact crash injuries.

The center of the back of the occupant's head should rest against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.


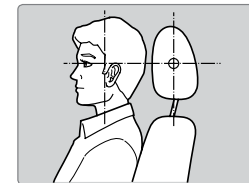


To raise the head restraint: Pull it upward.

To lower the head restraint: Push it down while pressing the release button.

To remove the head restraint: Pull the restraint up as far as it will go. Then push the release button and pull the restraint up and out.

To reinstall a head restraint: Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

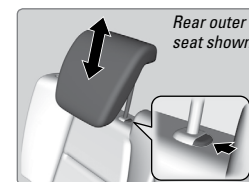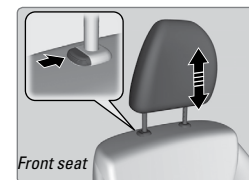

In order for the head restraint system to work properly:

- Do not hang any items on the head restraints or from the restraint legs.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

⚠ WARNING

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

⚠ WARNING

Failure to reinstall or correctly reinstall the head restraints can result in severe injury during a crash.


Always replace the head restraints before driving.

Rear Seats

Rear seats can be folded up or down separately to allow for additional storage space.

Folding Down Rear Seats

1. Store the center seat belt. Insert the latch plate into the slot on the side of the anchor buckle. Retract the seat belt into the holder on the ceiling (see page 8).
2. Lower the head restraint to its lowest position (see page 43).
3. Pull the release lever and fold down the seat-back.

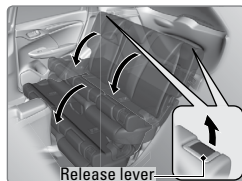




NOTICE

Make sure all items in the cargo area or items extending to the rear seats are properly secured. Loose items can fly forward if you have to brake hard.

To return the seat to the original position, pull up the seat-back to the upright position.

Folding Up Rear Seats

1. Make sure the seat belt buckles are in their loops on the seat.
2. Pull up the rear seat cushion.
3. Fold the seat leg down while pushing the seat cushion firmly against the seat-back to lock it.

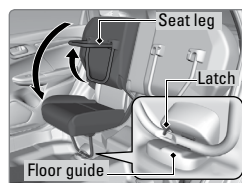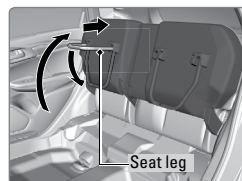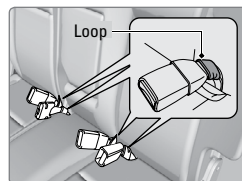

To return the seat to its original position, hold the seat cushion in the upright position and pull up the seat leg fully. Slowly put down the seat cushion and set the seat leg in the floor guide. A latch comes out when the leg is set properly.

Make sure the seat is firmly secured by rocking it forward and back.

Adjusting the Rear Seats

Pull the release lever on the left or right side to change the angle of the seat-back.




Adjusting the Mirrors

Adjust the angle of the mirrors for the best visibility when you are sitting in the correct driving position.

Rearview Mirror with Day/Night Positions

Manually adjust the position to reduce headlight glare from vehicles behind you. Flip the tab to switch between day and night positions.

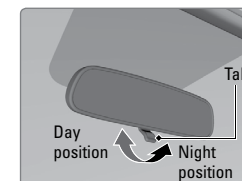


Power Door Mirrors

Adjust the power door mirrors when the vehicle is on.

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the center position.


Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

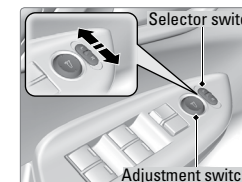

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

1. Pull up the steering wheel adjustment lever.
2. Move the steering wheel up or down and in or out.
3. Push down the steering wheel adjustment lever to lock the steering wheel in position.

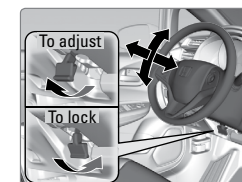


⚠ WARNING

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.

Adjust the steering wheel only when the vehicle is stopped.

Heating and Cooling System*

Manually control the front heating and cooling in your vehicle's interior using the buttons and dials on the dashboard.

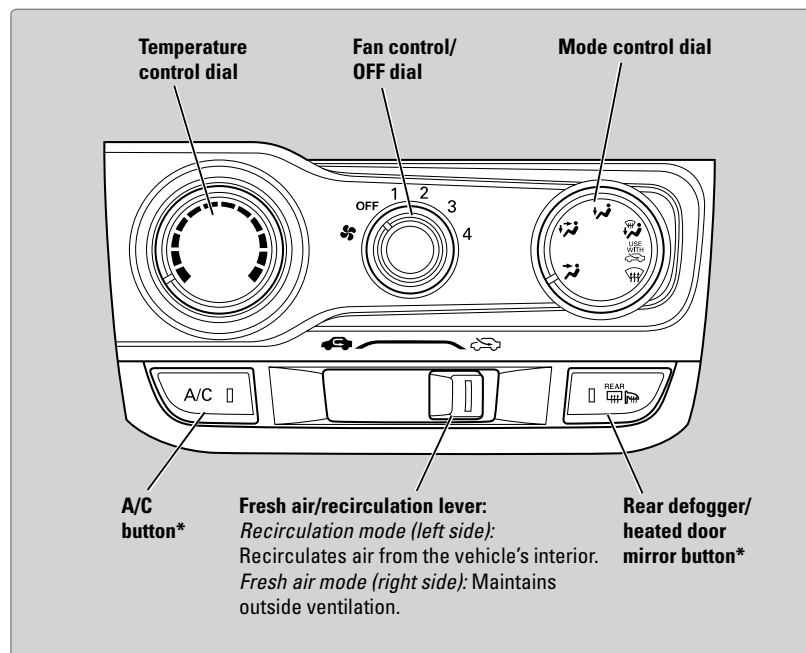


Follow these steps for maximum cooling.

1. Set the fan to maximum speed.
2. Set the temperature to maximum cool.
3. Select recirculation.
4. Press the A/C button (indicator on).

Climate Control System*

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Touch the icons on the dashboard to control the system.

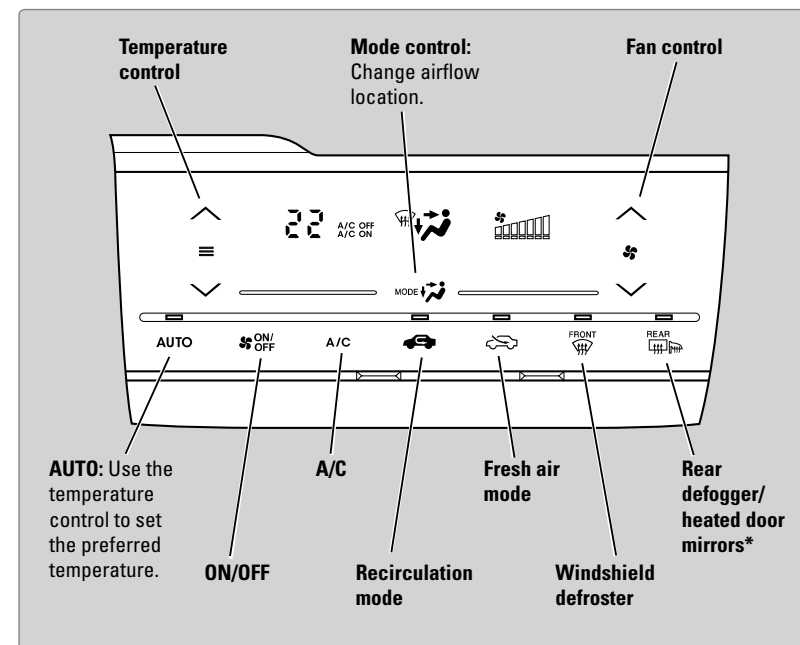


Seat Heaters*

Quickly warm the front seats when the vehicle is on.

Press the switch next to the parking brake to select the HI or LO setting. The indicator for the selected setting appears on the switch.

In the HI setting, the seat heater cycles on and off.

In the LO setting, the seat heater runs continuously and does not automatically turn off.

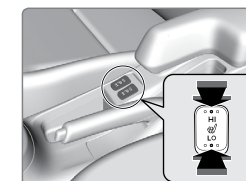

⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

*if equipped

*Canadian models, if equipped


Setting the Clock

Adjust the time using the steps described for your system type.

■ Using the Color Audio System*

Use this method for vehicles with color audio system. Use the selector knob to make and enter selections.


1. Press and hold the MENU/CLOCK button.
2. Select the hour and adjust as necessary.
3. Select the minutes and adjust as necessary.
4. Select Set when complete.
5. Press the Back button to exit the menu.

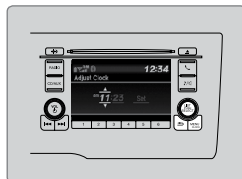

■ Using the Display Audio Settings Menu*

Use this method for vehicles with touchscreen. Touch items to make selections.

1. From the HOME screen, select Settings.
2. Select Clock/Info.
3. Select Clock Adjustment.
4. Adjust the hour and minute values.
5. Select OK when complete.

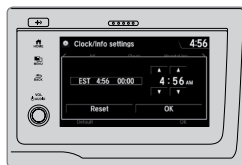

On vehicles with navigation, the time is automatically set using GPS signals.

Customized Features


Customize certain features when the vehicle is in Park (CVT models) or the parking brake is set (manual transmission models).

■ How to Change Settings

Models with color audio system

Use the selector knob to make and enter selections.

1. Press the MENU/CLOCK button.
2. Select Settings.
3. Select a setting option and make your preferred changes.
4. Press the Back button to exit the menus.

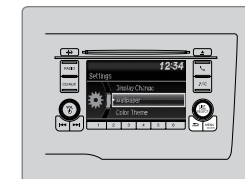

Models with Display Audio

Select items on the touchscreen to make selections.

1. From the HOME screen, select SETTINGS.
2. Select an option (Clock/Info, Audio, Bluetooth/Wi-Fi, Smartphone, Phone, Camera, System, or Navigation*).
3. Select a setting option and make your preferred changes.
4. Press BACK to exit the menus.



*if equipped

*if equipped

AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.

Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.


■ USB Port

1. Open the USB cover in the front console.

The USB port (1.0A) is for playing audio files on a USB flash drive and connecting a cellular phone and charging device.

The USB port (1.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay or Android Auto.

An additional USB port is located inside the center console.*

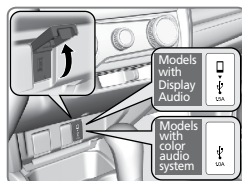


*iPod and iPhone are trademarks of Apple, Inc.
Applicable laws may prohibit the operation
of handheld electronic devices while operating a vehicle.*

■ Accessory Power Socket

Open the socket cover in the front console to use power when the vehicle is on.

An additional power socket is located inside the center console.*

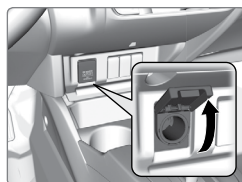

NOTICE

Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Audio Remote Controls*


You can operate certain functions of the audio system using the steering wheel controls.

SOURCE button: Cycle through available audio modes.

◀/▶ buttons: Change presets, tracks, albums, or folders.

+/- buttons: Adjust audio volume.

Menu button*: From the audio screen, press and hold to choose options for the current audio mode (Models with Display Audio). Use the +/- buttons and the SOURCE button to scroll and enter selections.

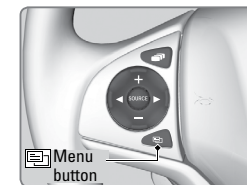

FM/AM/XM® Radio

Press ◀ or ▶ for the next or previous station.

Press and hold ◀ or ▶ for the next or previous strong station.

CD*/iPod®/USB/Bluetooth® Audio

Press ◀ or ▶ for the next or previous track.

Press and hold ◀ or ▶ for the next or previous folder (CD*/USB).

Pandora® (U.S. only)

Press ▶ for the next song.

Press and hold ◀ or ▶ for the next or previous station.

*if equipped

*if equipped


■ Adjusting the Sound

Adjust various sound settings.

Models with color audio system

Use the selector knob to make and enter selections.


1. Press the Sound button.
2. Select a sound mode to change and adjust it using the selector knob.
3. Press the Back button to exit the menu.

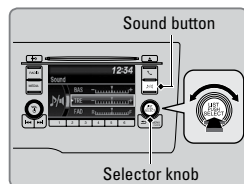

Models with Display Audio

Make selections using the touchscreen.


1. From the HOME screen, select Audio.
2. Select Sound.
3. Select the tabs to change the sound mode and adjust the setting.
4. Select OK when complete.

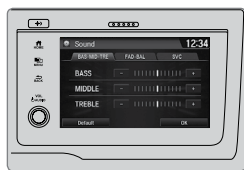

Models with color audio system

Color Audio System*

Use the buttons to control the display and audio system.


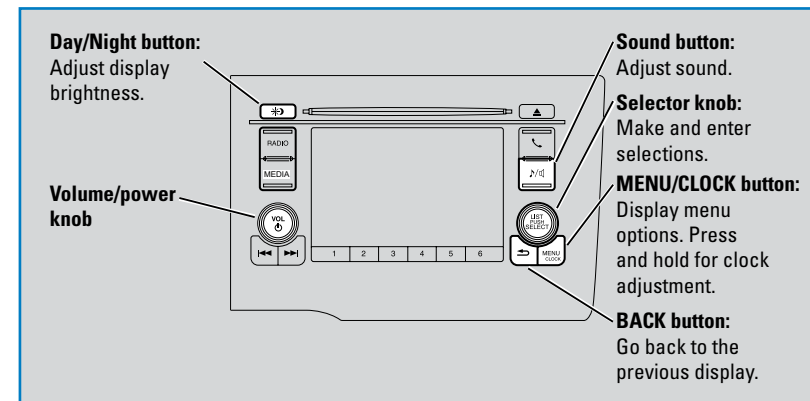


*if equipped

Models with color audio system

FM/AM Radio


Play FM or AM radio stations.

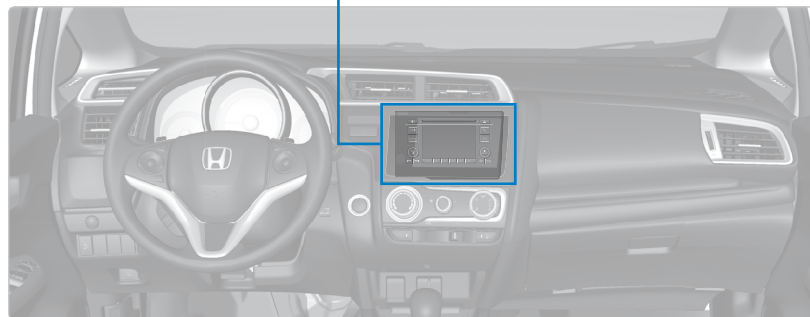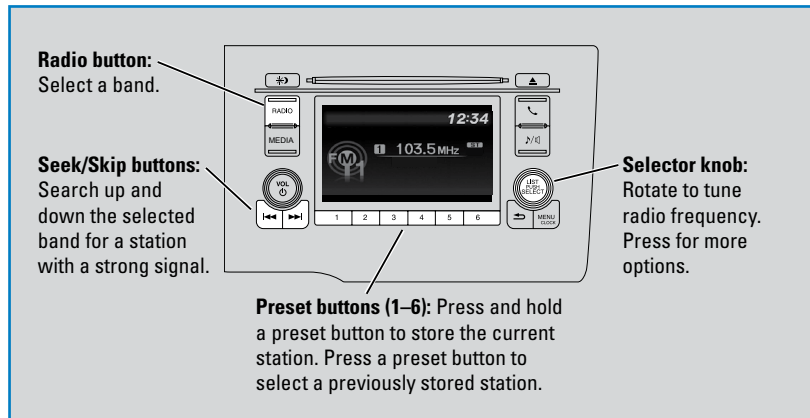

Models with color audio system

Compact Disc (CD)

The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

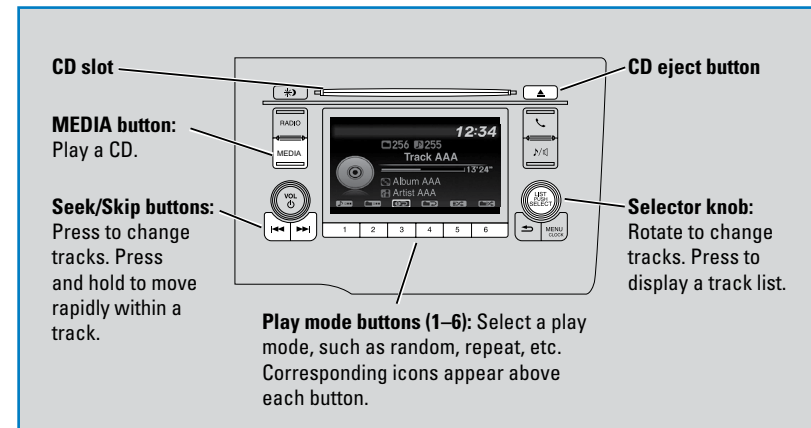



NOTICE

Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck or damage the audio unit.

Models with color audio system

iPod®


Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see page 50).

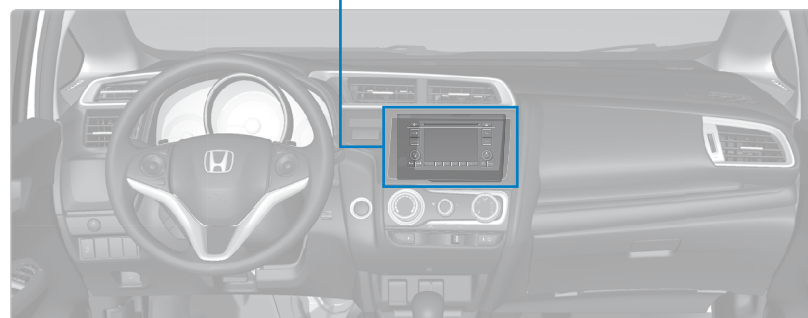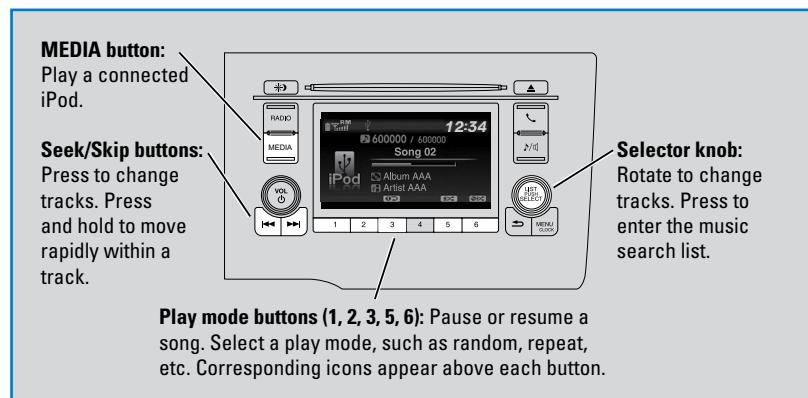

■ Searching for Music

Use the selector knob to search for tracks stored on the iPod.

1. From the audio screen, press the selector knob.
2. Select a search category.
3. Select the track you want to play.

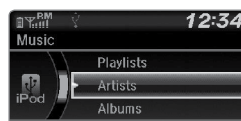


iPod is a trademark of Apple, Inc.

Models with color audio system

USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Connect your device to the USB port (see page 50).

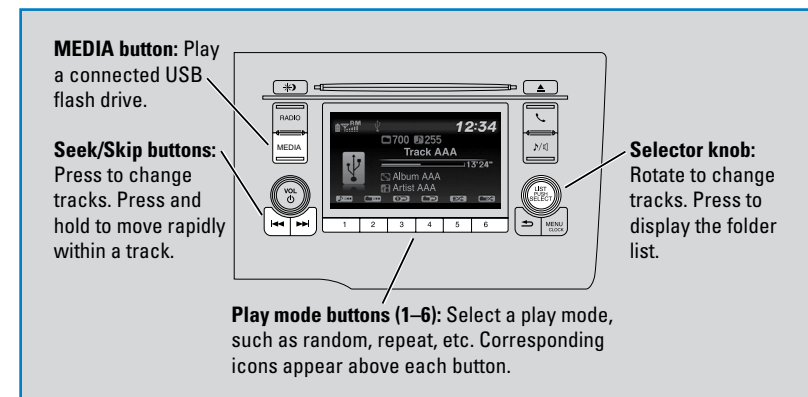

■ Searching for Music

Use the selector knob to search for tracks stored on the flash drive.


1. From the audio screen, press the selector knob.
2. Select a folder.
3. Select the track you want to play.



Models with color audio system


Bluetooth® Audio

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility. Standard data rates apply with your phone service provider. Connect your phone to **Bluetooth® HandsFreeLink®** (see page 70).

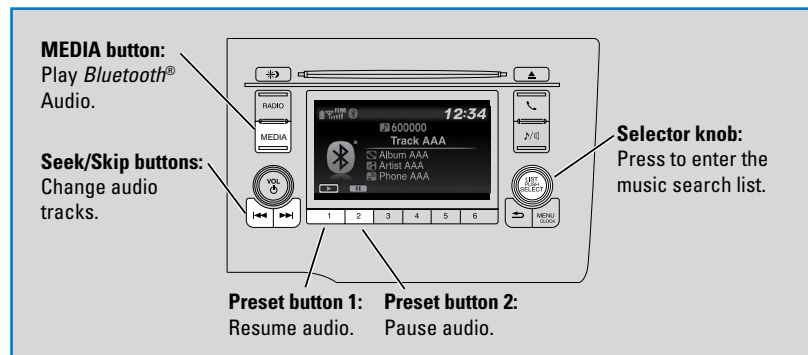**■ Searching for Music**

Use the selector knob to search for tracks stored on the device.

 1. From the audio screen, press the selector knob.
2. Select a category.
3. Select the track you want to play.

**Notes:**

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.



Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

Models with Display Audio**Touchscreen Operation***

Use simple gestures—including touching, swiping, and scrolling—to operate certain audio functions.

Some items may be grayed out during driving to reduce the potential for distraction. You can select them when the vehicle is stopped or use voice commands*.

Wearing gloves may limit or prevent touchscreen response.

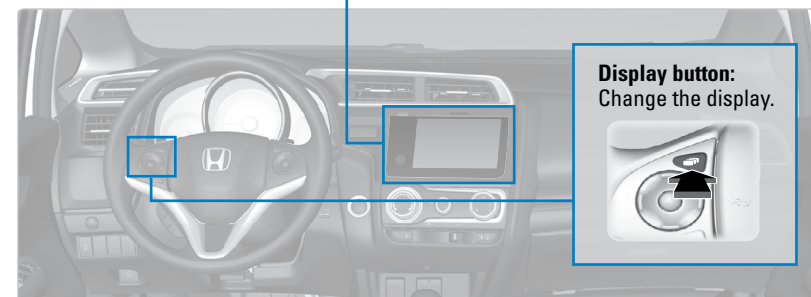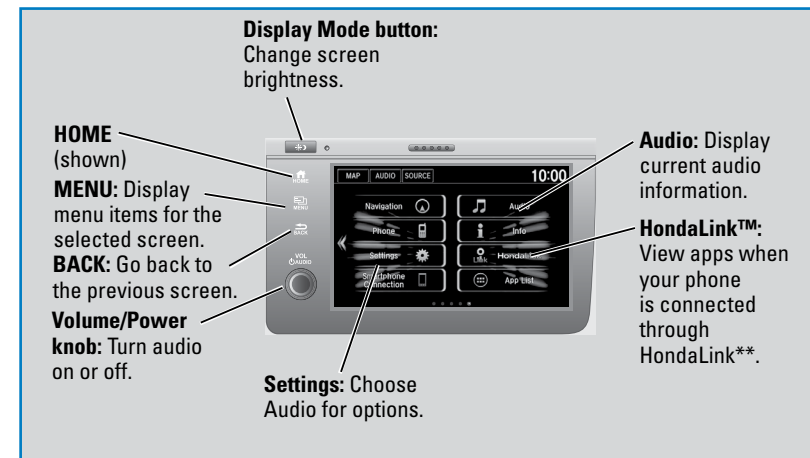**■ Setting Touchscreen Sensitivity**

You can adjust the touchscreen's sensitivity to your fingertip.

1. From the HOME screen, select Settings, then System.
2. Select Display, then Touch Panel Sensitivity.
3. Make your selection.

**if equipped. Do not install apps other than those confirmed by a Honda dealer. Installation of unauthorized apps may introduce data corruption risks to your vehicle's information and your privacy.*

***HondaLink can be accessed only if the app is installed on your smartphone and the phone is connected to the system (see page 60).*

HondaLink™

You can connect a compatible smartphone to the audio system to enable integration between the smartphone's approved apps and the vehicle. This allows you to control the phone's apps through the touchscreen.

To check smartphone compatibility and connection instructions, visit automobiles.honda.com/handsfreelink (U.S.).


To get more information on HondaLink features and apps, visit www.hondalink.com (U.S.).

Apple CarPlay™

Connect an Apple CarPlay-compatible iPhone to the system. You can use the touchscreen to make a phone call, listen to music, and more. Visit the Apple CarPlay website for more information.

Park in a safe place before connecting your iPhone and launching any compatible apps.

1. Connect the iPhone to the front-console USB port (1.5A) (see page 110).
2. Apple CarPlay requires you to send vehicle information to Honda. Select Enable Once, Always Enable, or Cancel. Your phone may prompt you to allow access for CarPlay to be launched.
3. From the HOME screen, select Apple CarPlay.
4. Select a menu option.

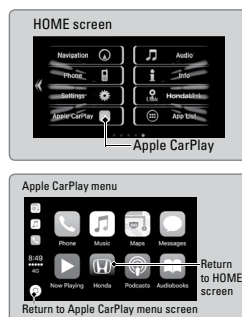

Phone: Access your contacts, make phone calls, or listen to voicemail. While connected to Apple CarPlay, calls can be made only through Apple CarPlay, not through *Bluetooth HandsFreeLink*.

Music: Play music stored on your iPhone.

Maps: View a map and operate navigation. You can use only Apple Maps or the pre-installed navigation system to set a destination with routing guidance.

Messages: View and reply to text messages, or have messages read to you aloud by the system.

Once connected, press and hold the Talk button on the steering wheel (see page 72) to operate the system using voice commands with Siri Eyes Free.

Depending on use, Apple CarPlay can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with the connected iPhone. See Apple's privacy policy for details regarding Apple's use and handling of data uploaded by CarPlay. Use of CarPlay is at user's own risk, and is subject to agreement to the CarPlay terms of use, which are included as part of the Apple iOS terms of use. CarPlay vehicle integration is provided "as is," and Honda cannot guarantee CarPlay operability or functionality now or in the future due to, among other conditions, changes in CarPlay software/Apple iOS, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Use CarPlay only when conditions allow you to do so safely. See your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for further license and warranty terms.


Models with Display Audio

Android Auto™

Connect a compatible Android phone to the system. You can use the touchscreen to make a phone call, listen to music, and more. Visit the Android Auto website for more information.

Park in a safe place before connecting your smartphone and launching any compatible apps.

1. Download the Android Auto app to your phone.
2. Connect the phone to the front-console USB port (1.5A) (see page 110). The phone is automatically paired. A tutorial also appears.
3. From the HOME screen, select Android Auto.
4. Android Auto requires you to send vehicle information to Honda. Select Enable Once, Always Enable, or Cancel.
5. Select a menu option.

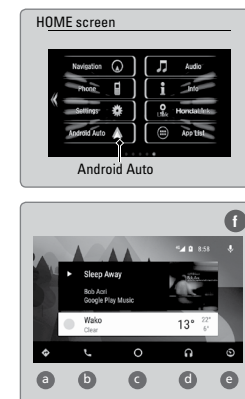

- a Maps (Navigation):** View Google Maps and operate navigation with routing guidance. You cannot enter destinations using the keyboard while the vehicle is moving.
- b Phone (Communication):** Make phone calls or listen to voicemail.
- c Google Now (home screen):** Display useful information organized by Android Auto into simple cards that appear only when needed.
- d Music and audio:** Play music from compatible apps. Select this icon to switch between music apps.
- e Go back to the home screen:** Go back to the vehicle system HOME screen.
- f Voice:** Operate Android Auto with your voice. You can also press and hold the Talk button on the steering wheel (see page 92) to say voice commands.

Depending on use, Android Auto can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with Google and its service providers. See Google privacy policy for details regarding Google's use and handling of data uploaded by Android Auto. Use of Android Auto is at user's own risk, and is subject to agreement to the Android Auto terms of use, which are presented to the user when the Android Auto application is downloaded to the user's Android phone. Android Auto vehicle integration is provided "as is," and Honda cannot guarantee Android Auto operability or functionality now or in the future due to, among other conditions, changes in Android Auto software/Android operating system, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Use Android Auto only when conditions allow you to do so safely. See your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for further license and warranty terms.

Models with Display Audio

Wi-Fi Connection

You can connect the audio system to the internet using Wi-Fi and use online services through the touchscreen. If your compatible phone has hotspot capabilities, the system can be tethered to the phone. Follow the steps below to set up Wi-Fi when the vehicle is stopped. Standard data rates apply with your phone service provider.


1. From the Home screen, select Settings.
2. Select Bluetooth/Wi-Fi. Select the Wi-Fi tab.
3. Select Wi-Fi On/Off Status, and select On.
4. Select Wi-Fi Device List. Make sure your phone's Wi-Fi setting is in access point (tethering) mode.
5. Select the phone you want to connect to the system. If the phone you want to connect does not appear, select Scan.
6. Select Connect.
7. Enter a password for your phone, if necessary. Select OK. The Wi-Fi symbol is displayed on the list when connection is successful.



Models with Display Audio

FM/AM Radio


Play FM or AM radio stations.

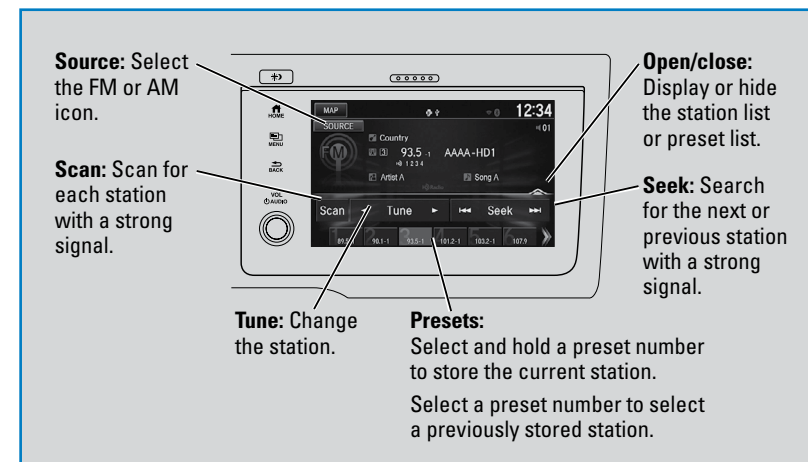

Models with Display Audio

SiriusXM® Radio*

Available on a subscription basis only. For more information or to subscribe, contact your dealer, or visit www.siriusxm.com/subscribe-now (U.S.) or www.siriusxm.ca/subscribe-now (Canada).

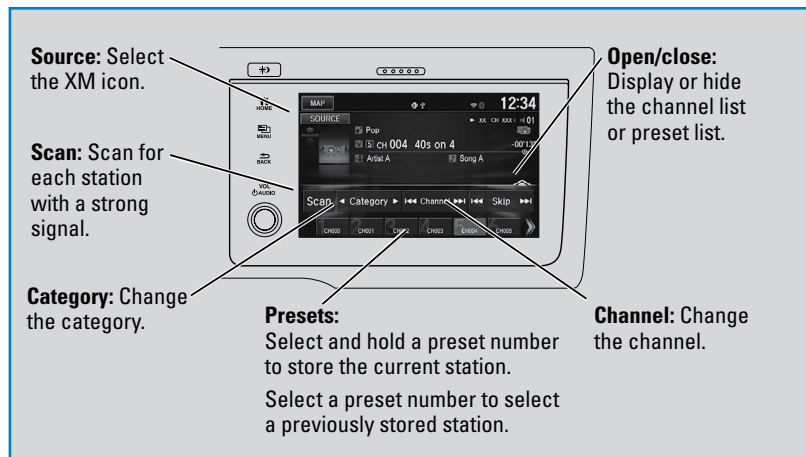

Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.
XM® is a registered trademark of Sirius XM Radio, Inc.

*if equipped

Models with Display Audio

iPod®


Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see page 50).



■ Searching for Music

Use the touchscreen to search for tracks stored on the iPod.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search option.
4. Select the track you want to play.

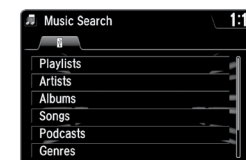


iPod is a trademark of Apple, Inc.

Models with Display Audio

USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Connect your device to the USB port (see page 50).

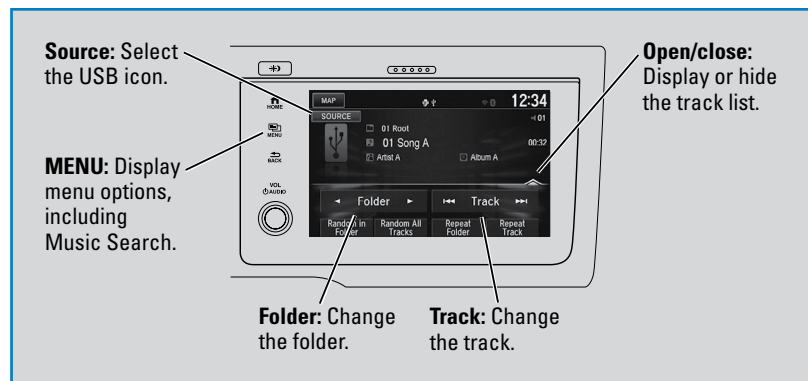

■ Searching for Music

Use the touchscreen to search for tracks stored on the USB flash drive.


1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a folder.
4. Select the track you want to play.



Models with Display Audio

Bluetooth® Audio


Play streaming or stored audio from your compatible phone through the vehicle's audio system. Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility. Standard data rates apply with your phone service provider. Connect your phone to *Bluetooth® HandsFreeLink®* (see page 74).

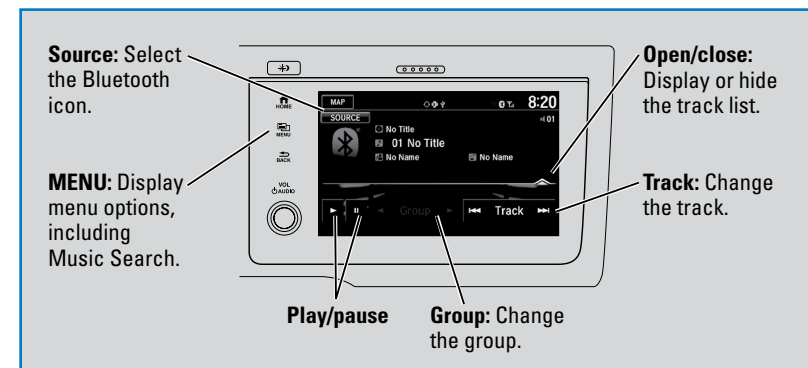

■ Searching for Music

Use the touchscreen to search for tracks stored on the device.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search category.
4. Select the track you want to play.

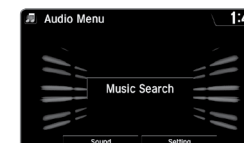

Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

Models with Display Audio

Pandora®

Play and operate Pandora from your compatible phone through the vehicle's audio system. Visit automobiles.honda.com/handsfreelink to check phone compatibility. Standard data rates apply with your phone service provider. **Available in the U.S. only.**


Connect your phone when the vehicle is stopped.

For iPhone:

- Connect via *Bluetooth®* HandsFreeLink® (see page 74) or USB port (1.5A) (see page 50).
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If you cannot operate Pandora through the audio system, it may be streaming through *Bluetooth®* Audio. Make sure Pandora is selected on the audio system.
- If Pandora still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For other compatible smartphones:

- Connect via *Bluetooth®* HandsFreeLink® (see page 74).

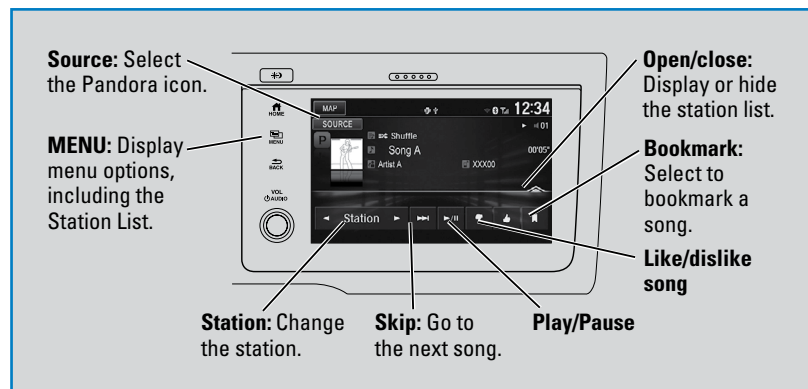

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

BLUETOOTH® HANDSFREELINK® (HFL)

Learn how to operate the vehicle's hands-free calling system.

Models with color audio system

Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.


■ HFL Controls

Use the controls to enter information and make selections.

Pick-Up button: Answer an incoming call.

Hang-Up/Back button: End or decline a call, or cancel an operation.

Talk button: Make a call using a stored voice tag.

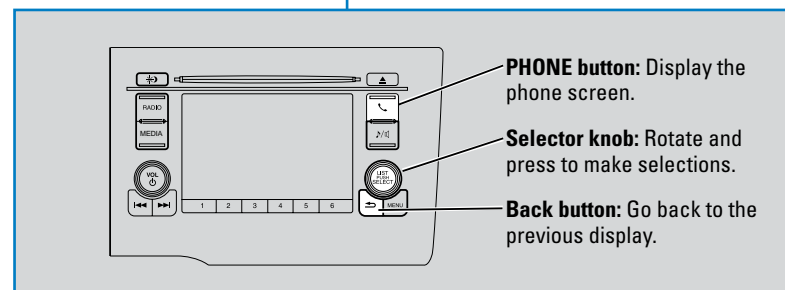

Models with color audio system

Pairing a Phone

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the selector knob to make and enter selections.

■ Pairing the First Phone

1. Press the Phone button to go to the Phone screen. A prompt appears. Select Yes.
2. Make sure your phone is in discovery mode. Select OK.
3. The system searches for your phone. Select your phone when it appears on the list.
If your phone does not appear: Select Phone not found? and search for HandsFreeLink from your phone. Connect to HFL.
4. The system gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.



■ Pairing an Additional Phone

1. Press the Phone button to go to the Phone screen. If a prompt appears asking to connect to a phone, select No.
2. Select Phone Setup.
3. Select Bluetooth Setup.
4. Select Add new device.
5. Make sure your phone is in discovery mode. Select OK.
6. The system searches for your phone. Select it when it appears on the list.
If your phone does not appear: Select Phone not found?, and search for HandsFreeLink from your phone. Connect to HFL.
7. The system gives you a pairing code. Enter it on your phone when prompted.



Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Models with color audio system

Making a Call

You can make a call using several methods.

■ Dialing a Number

Enter a 10-digit phone number to call. Use the selector knob to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the Phone button.
2. Select Dial.
3. Enter the phone number. Select the green phone icon to call.



■ Using the Phonebook

When your phone is paired, its phonebook is automatically imported to the system. Use the selector knob to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the Phone button.
2. Select Phonebook.
3. Scroll through the list to find the name and number you want to call and select it to call.



■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing. Use the selector knob to make and enter selections.

1. Press the Phone button.
2. Select Phone Setup.
3. Select Speed Dial, then select Add New.
4. Select an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.



■ Using Speed Dial

Make calls quickly using stored speed dial entries. Use the selector knob to make and enter selections.

1. Press the Phone button.
2. Select Speed Dial.
3. Scroll through the list to find the entry you want to call and select it to call.



Speed dial entries with stored voice tags can be called using the Talk button. Press the Talk button and follow the prompts.

Models with Display Audio

Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function. Voice commands are also available.

HFL Controls

Use the controls to enter information and make selections.

Pick-Up button: Answer an incoming call.


Hang-Up/Back button: End or decline a call, or cancel an operation.

Talk button: Make a call using a stored voice tag, or say voice commands*.

+ / - buttons: Scroll the list after pressing and holding the Menu button.

SOURCE button: Press to enter a selection after pressing and holding the Menu button.

Menu button: From the phone screen, press and hold to display speed dial, call history, or redial.

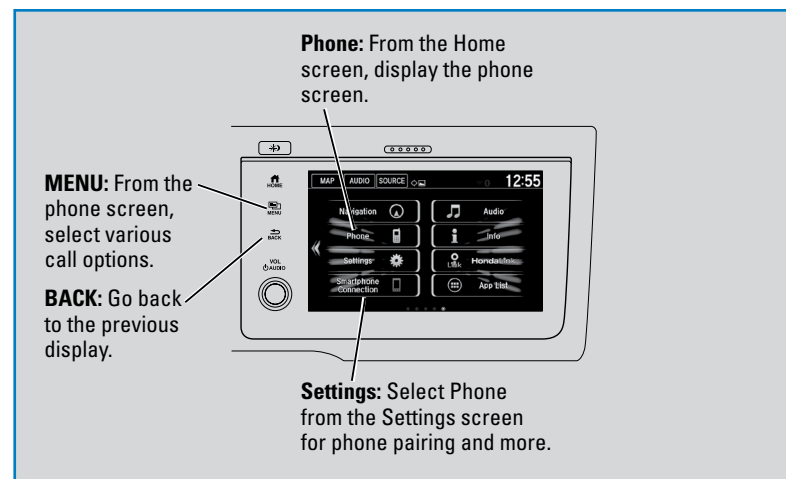

Talk Button Tips

The microphone is in the ceiling near the rearview mirror. When using the Talk button, wait until you hear a beep before speaking. The system recognizes only the commands in the Voice Command Index, page 143.

- Sit in a normal driving position, looking forward.
- Speak in a clear, natural voice.
- To bypass the system prompts, simply press the Talk button again to say your command.*
- When the Talk button is pressed, all available voice commands are highlighted in yellow.*
- Reduce all background noise.
- Close the windows and moonroof.
- Aim the air vents away from the microphone.

*vehicles with navigation


*vehicles with navigation

Models with Display Audio

Pairing a Phone

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the touchscreen to make and enter selections.

1. From the Home screen, select Settings.
2. Select Phone.
3. Select Bluetooth Device List.
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode. Select Continue.
6. The system searches for your phone. Select your phone when it appears on the list.
If your phone does not appear:
Select Phone Not Found and search for HandsFreeLink from your phone. Connect to HFL.
7. The system gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable options:
HondaLink Assist: Select On to enable emergency collision notification (see page 76).
Phone Synchronization: Select On to automatically import contacts and call history from your phone.
9. Press BACK to exit the menu.

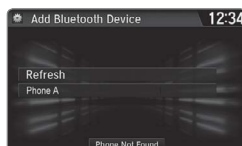

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Models with Display Audio

Making a Call

You can make a call using several methods.

■ Dialing a Number

Enter a 10-digit phone number to call.

Using voice commands


Press the Talk button before you say each command.

1. Say "Dial by number."
2. Say the phone number: For example, "3-1-0-5-5-1-2-3-4."
3. The system begins to dial.

Using the touchscreen

Manual operation is limited while the vehicle is moving. Voice commands are always available.

1. From the Home screen, select Phone.
2. Select MENU.
3. Select Dial.
4. Enter the phone number. Select the green phone icon to call.

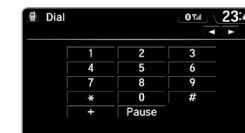

■ Using the Phonebook

When your phone is paired, its entire phonebook can be automatically imported to the system. Phone synchronization must be turned on.

Using voice commands


Press the Talk button before you say each command.

1. Say "Dial by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."

Using the touchscreen

Manual operation is limited while the vehicle is moving. Voice commands are always available.

1. From the Home screen, select Phone.
2. Select MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call and select it to call.

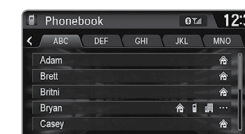

■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing.

1. From the Home screen, select Phone.
2. Select MENU.
3. Select Edit Speed Dial, then select New Entry.
4. Select an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.



■ Using Speed Dial

Make calls quickly using stored speed dial entries.

Using voice commands

Press the Talk button before you say each command.

1. Say "Dial by name."
2. Say the stored voice tag name. For example, "John Smith."

Using the touchscreen


1. From the Home screen, select Phone.
2. Select Speed Dial.
3. Select a number. Dialing starts automatically.



HondaLink™ Assist

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically attempts to connect to an operator. Your phone must be paired to the system and have good cellular connection. Visit www.hondalink.com (U.S.) or honda.ca/hondalinkassist (Canada) for more information.

1. Make sure your phone is on and paired to Bluetooth® HandsFreeLink® (see page 74).
2. Select Call Now, or the system automatically connects after 10 seconds. The vehicle information and its position may be sent to the operator.*
3. Select Talk Now to immediately talk to the operator.
4. When the call is complete, select Hang Up or press the Hang-Up/Back button on the steering wheel.

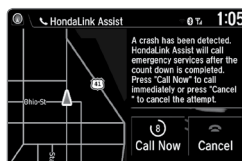

*Depending on your phone and cellular signal capability, your vehicle's location may not be sent to the operator.

Models with Display Audio

SMS Text Messaging and E-Mail*

Certain phones can receive and send messages while paired and connected. Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility. Standard message rates apply. This feature is limited while the vehicle is moving.



■ Receiving and Responding to Messages

When you receive a new message, a pop-up appears on the touchscreen. You can view the message when the vehicle is stopped. You can also reply to it using fixed phrases or call the sender.

1. When the prompt appears, select Read.
2. The message is displayed and the system reads it aloud.

To reply: With the message open, select Reply and choose one of the six available responses. Select Send to send the message. You cannot create a new text message.


To call the sender: With the message open, select Call.

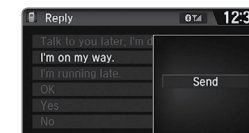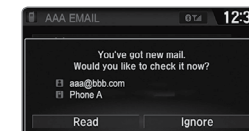

■ Selecting an Account

If your phone has both text message and e-mail accounts, you can select only one of them at a time to be active and receive notifications.

1. From the Home screen, select Settings.
2. Select Phone.
3. Select Select Account.
4. Select Text Message or an e-mail account.

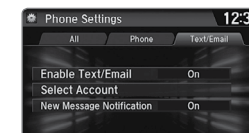


*if equipped

Models with Display Audio

Siri® Eyes Free

Activate Siri through your vehicle when an iPhone® is paired to the system. Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility.

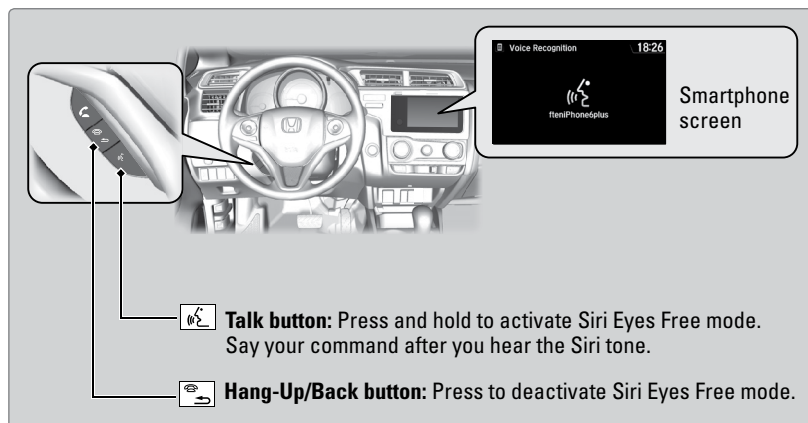

Here are some examples of Siri commands:

"Call John Smith" "Remind me to pick up dinner"
 "Read my new text message" "Set up a meeting today at 3 p.m."
 "Find a nearby sushi restaurant" "Play song XYZ"

Notes:

- Any requests that include visual feedback from Siri on your phone are not displayed in the vehicle.
- Certain commands rely on the iPhone's features and existing apps.
- To hear turn-by-turn directions or songs through the vehicle, set the audio source to *Bluetooth®* Audio.

Siri and iPhone are registered trademarks of Apple, Inc.

NAVIGATION*

Learn how to enter a destination and operate the navigation system.


Basic Navigation Operation

A real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination. You can operate the system using voice commands or the system controls.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

Steering Wheel Controls

Use the steering wheel controls to say voice commands.

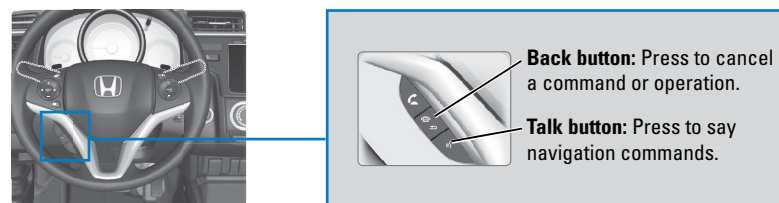


Talk Button Tips

- The system recognizes only those commands listed beginning on page 8.
- Sit in your normal driving position, looking forward.
- Speak in a clear, natural voice.
- To bypass the system prompts, simply press the Talk button again to say your command.*
- When the Talk button is pressed, all available voice commands are highlighted in yellow.*
- Reduce all background noise.
- Close the windows and moonroof.
- Aim the air vents away from the microphone (near the rearview mirror).

System Guidance Volume

Adjust the navigation system volume.


- From the HOME screen, select Settings.
- Select System.
- Select the Sound/Beep tab.
- Select Guidance Volume, and adjust the level. Select OK when complete.
- Press BACK to exit the menus.

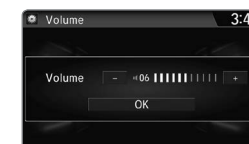

**if equipped*

Navigation Display and Controls

Touch icons on the screen to enter information and make selections. You can adjust the touchscreen's sensitivity to your fingertip. See page 46.

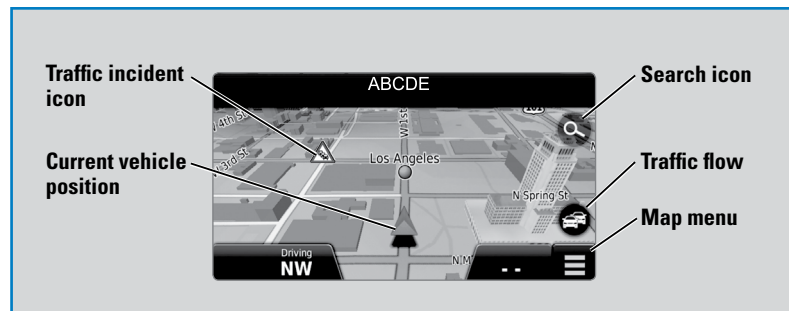

MAP: Display the map screen.

Navigation: Display the map screen.

MENU: Display navigation options.

BACK: Go back to the previous display.




Entering a Destination

Use several methods to enter a destination.

Home Address

Store your home address in the system so you can easily route to it.

1. From the map screen, select the Search icon.
2. Select MENU.
3. Select Set Home Location.
4. Select Enter My Address.
5. Select Search All.
6. Enter the house number and select Done.
7. Enter the street name and select Done. Select the street from the list.
8. Select the address from the list. A map of the address is shown. Select Select.

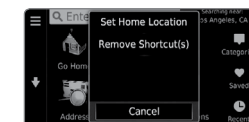


When your home address is stored, you can press the Talk button and say "Navigation" and then "Go home" at any time. You can also select Go Home from the Where To? menu.


Street Address

Enter a street address.

1. From the map screen, select the Search icon.
2. Select Address.
3. Select Search All.
4. Enter the house number and select Done.
5. Enter the street name and select Done. Select the street from the list.
6. Select the address from the list.
7. Select Go!.

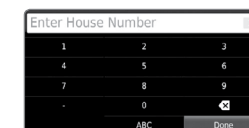



You can also enter a street address using voice commands. Press the Talk button and say "Navigation" and then "Find Address." Follow the prompts.

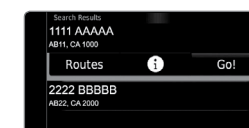

■ Place Category

Enter a destination using a point of interest or landmark.

1. From the map screen, select the Search icon.
2. Select Categories.
3. Select a subcategory.
4. Select a place from the list.
5. Select Go!.

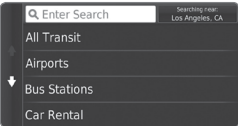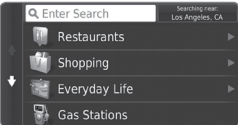


You can also enter a street address using voice commands. Press the Talk button and say “Navigation” and then “Find Place.” Follow the prompts.

■ Recent Places

Select an address from a list of your 50 most recent destinations.

1. From the map screen, select the Search icon.
2. Select Recent.
3. Select a place from the list.
4. Select Go!.

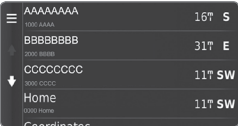


■ Saved Places

Save locations so you can quickly route to them.

Saving a location


1. From the map screen, select the Search icon.
2. Select Enter Search.
3. Enter the address or place name.
4. Select the destination name when it appears.
5. Select the info icon.
6. Select the menu icon.
7. Select Save.
8. Select OK.

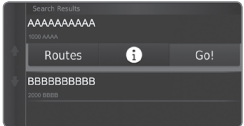

You can also save your current location. From the map screen, select the vehicle icon. Select Save. Enter a name for the location. Select Done. Select OK.

Routing to a saved location



1. From the map screen, select the Search icon.
2. Select Saved.
3. Select the destination from the list.
4. Select Go!.

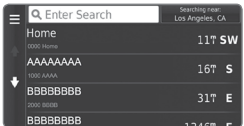

Routing

After a destination is set, you can alter or cancel your route.

Map Legend

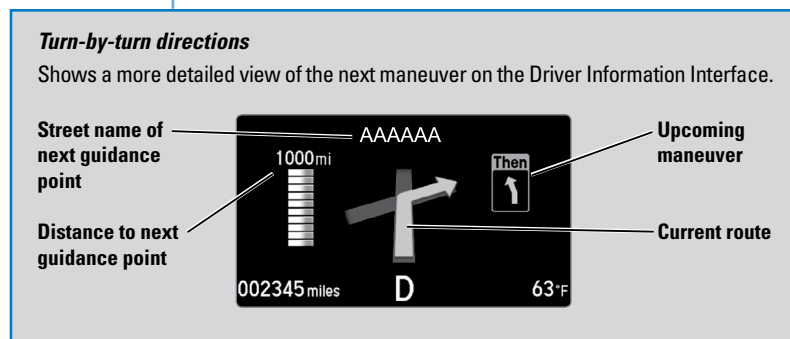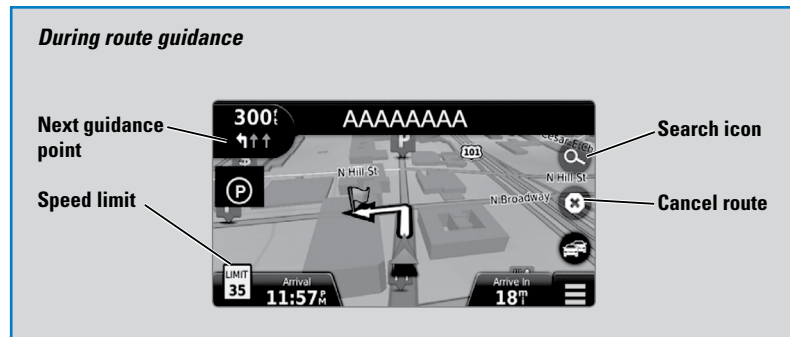

⚠ WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Operate system controls only when the conditions permit you to safely do so.

Traffic

View traffic flow and incidents in major metro areas. Traffic alerts are accompanied by an audible beep. Pop-up messages and traffic information can be viewed when you are on the map screen. You can also select traffic to avoid. Traffic coverage is limited in Canada.

Viewing traffic



1. From the map screen, select the traffic icon.
2. Select Traffic Conditions.
3. Traffic icons are shown on the map. Select the magnifying glass icon to display a full list of traffic delays.



To mute traffic alerts and voice guidance: From the map screen, press MENU. Select Mute. To lower voice guidance volume, see page 79.

Avoiding traffic on your route

1. From the map screen, select the traffic icon.
2. Select Traffic on Route.
3. Select an incident to avoid from the list.
4. Select the menu icon.
5. Select Avoid.

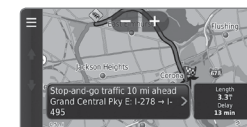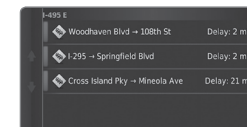

DRIVING

Learn about preparation for driving, as well as other features.

Before Driving

Check the following items before you begin driving.

■ Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
- Remove any frost, snow, or ice.
- Make sure the hood is securely closed.
- Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.
- Make sure the tires are in good condition.
- Make sure there are no people or objects behind or around the vehicle.

NOTICE

If the doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

■ Interior Checks

- Store or secure all items on board properly.
- Do not pile items higher than the seat height.
- Do not place anything in the front seat footwells. Make sure to secure the floor mats.
- If you have any animals on board, do not let them move freely around in the vehicle.
- Securely close and lock all doors and the tailgate.
- Adjust your seating position, mirrors, and steering wheel properly.
- Make sure items placed on the floor behind the front seats cannot roll under the seats.
- Everyone in the vehicle must fasten their seat belt.
- Make sure that the indicators in the instrument panel come on when you start the vehicle and go off soon after.

In addition:

- During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.
- Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

⚠ WARNING

Improper accessories or modifications can affect your vehicle's handling, and stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in the vehicle owner's guide regarding accessories and modifications.

Improving Fuel Economy and Reducing CO₂ Emissions

Achieving fuel economy and reducing CO₂ emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Maximum Load Limit

Carrying too much cargo or improperly storing it can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe.

The maximum load for your vehicle is 850 lbs (385 kg). See the Tire and Loading Information label on the driver's doorjamb.

Label example

TIRE AND LOADING INFORMATION				
SEATING CAPACITY		TOTAL X	FRONT X	REAR X
The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs.				
TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION	
FRONT	XXXX/XXXXX XXX	XXXKPA, XXPSI		
REAR	XXXX/XXXXX XXX	XXXKPA, XXPSI		
SPARE	XXXX/XXXXX XXX	XXXKPA, XXPSI		

This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer. Below are the steps for determining the correct load limit:

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400 - 750 (5 x 150) = 650 lbs.)
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the Owner's Manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

Load Limits Example

Example1



Max Load
850 lbs
(385 kg)

≥



Passenger Weight
150 lbs x 2 = 300 lbs
(68 kg x 2 = 136 kg)

+



Cargo Weight
550 lbs
(249 kg)

Example2



Max Load
850 lbs
(385 kg)

≥



Passenger Weight
150 lbs x 5 = 750 lbs
(68 kg x 5 = 340 kg)

+



Cargo Weight
100 lbs
(45 kg)

⚠ WARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this guide.

The headlight aim on your vehicle was set by the factory and does not need to be adjusted. However, if you regularly carry heavy items in the cargo area or pull a trailer, have the aiming readjusted at your dealer or by a qualified technician.

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

■ Towing Behind a Motorhome

Models with continuously variable transmission

Your vehicle is not designed to be towed behind a motorhome. If your vehicle needs to be towed in an emergency, refer to the emergency towing information. See page 109.

Models with manual transmission

Your vehicle can be towed behind a motorhome. Perform the following procedure before towing your vehicle:

1. Shift to Neutral.
2. Release the parking brake.
3. Turn the ignition switch (or power mode) to ACCESSORY. Make sure the steering wheel does not lock.
4. Turn off all electrical devices. Do not use any accessory power sockets. This can prevent the battery from running down.


Starting to Drive

Turn on the vehicle and start the engine to begin driving.

■ Before Starting the Engine


Continuously variable transmission (CVT)

Check that the shift lever is in Park (P), then press the brake pedal. Keep your foot firmly on the brake pedal when starting the engine.

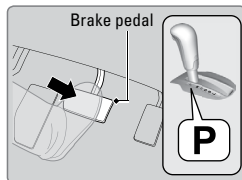

Manual transmission

Check that the shift lever is in Neutral (N). Press the brake pedal with your right foot and press the clutch pedal all the way down with your left foot. Keep your foot firmly on the brake pedal when starting the engine.

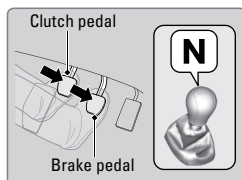


The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 m). When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce battery drain.

■ Starting the Ignition*

Insert the key into the ignition and turn to turn on the vehicle or start the engine.

- 🔑 **LOCK:** Insert and remove the key in this position.
- 🔑 **ACCESSORY:** Operate the audio system and other accessories in this position.
- 🔑 **ON:** This is the position when driving.
- 🔑 **START:** This position is for starting the engine. The switch returns to ON when you release the key.

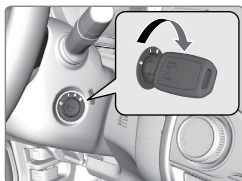

*if equipped


■ Changing the Power Mode*

Use the ENGINE START/STOP button to cycle through power modes or start the engine.

Accessory or On mode: Press ENGINE START/STOP once without pressing the brake pedal for Accessory mode. Press it again for On mode.

Starting the engine: Press and hold the brake pedal (and the clutch for manual transmission), then press ENGINE START/STOP. Keep your foot firmly on the brake pedal when starting the engine. If you press the button and the shift lever is not in Park (P), the vehicle goes into Accessory mode.

Turning the vehicle off: Shift to Park (P) (or apply the parking brake for manual transmission), then press ENGINE START/STOP.

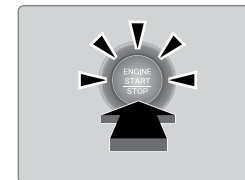

Shifting

Change the shift position based on your driving needs.

■ Continuously Variable Transmission (CVT)*

Park (P): Used for parking or starting/stopping the engine. Press the brake pedal, then press the release button to shift.

Reverse (R): Used for reversing.

Neutral (N): Used for idling.

Drive (D): Used for normal driving.

Drive (S): Used for better acceleration, increased engine braking, driving in hilly terrain, or when using paddle shifters*.

Low (L)*: Used for stronger engine braking when driving in hilly terrain.



NOTICE


When you change the shift lever from D to R and vice versa, come to a complete stop and keep the brake pedal pressed. Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Do not operate the shift lever while pressing the accelerator pedal. You could damage the transmission.

*if equipped

■ Paddle Shifters*

Use the paddle shifters to change gears from 1st through 7th without removing your hands from the steering wheel.

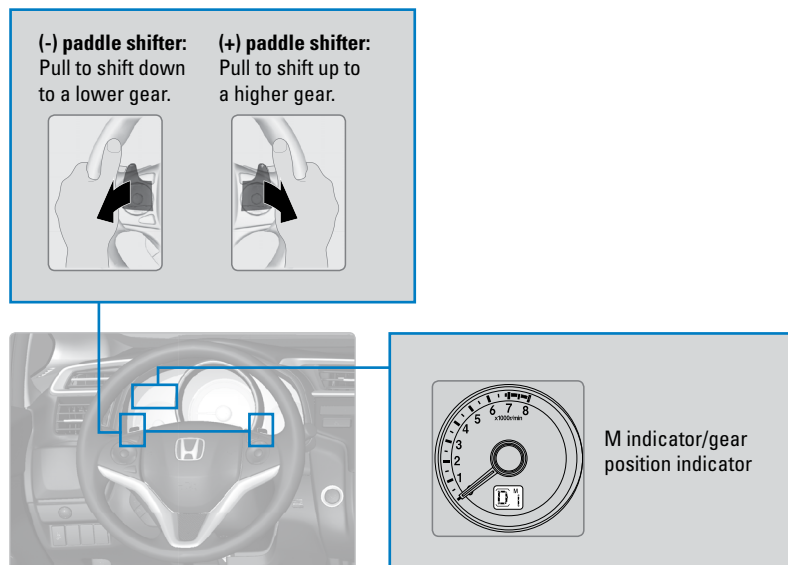

When the shift lever is in D: The vehicle goes into manual shift mode temporarily and the gear number appears. When you start traveling at a constant speed, or pull the (+) paddle for a few seconds, manual shift mode automatically switches off and the gear number goes off.

When the shift lever is in S: The vehicle goes into manual shift mode and the M indicator and gear number appear. When the vehicle comes to a stop, it automatically shifts down into 1st gear. You can pull away only in 1st gear. If the vehicle speed increases and the engine speed approaches the tachometer's red zone, the transmission automatically shifts up. As the vehicle speed slows down, the transmission automatically shifts down accordingly.

To cancel manual shift mode, move the shift lever from S to D. The M indicator and gear number go off.


*if equipped

■ Manual Transmission*

Fully press the clutch pedal to operate the shift lever and change gears.



Shift indicators* come on when an upshift or downshift is recommended.

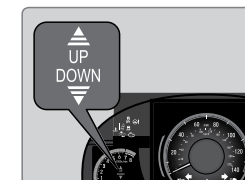

NOTICE

Do not shift to Reverse (R) before the vehicle comes to a complete stop. This can damage the transmission.

NOTICE



Before downshifting, make sure the engine will not go into the tachometer's red zone. This can severely damage your engine.

Braking

Slow down or stop your vehicle and keep it from moving when parked.

■ Foot Brake

Press the brake pedal to slow down or stop your vehicle from moving.

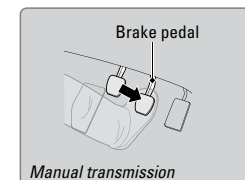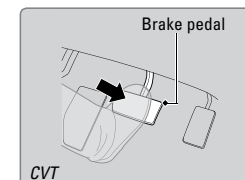


*if equipped


■ Parking Brake

Keep your vehicle from moving while parked.

To apply: Fully pull up the lever without pressing the release button.

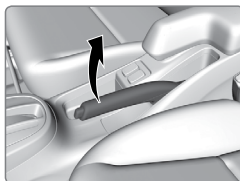

To release: Pull up the lever slightly and press and hold the release button. Lower the lever down all the way, then release the button.

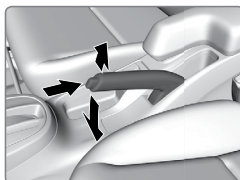

NOTICE

Release the parking brake fully before driving. The rear brakes and axle can be damaged if you drive with the parking brake applied.

■ Brake Assist System

During hard or emergency braking, the system increases braking force. The brake pedal may move slightly or make a noise; this is normal. Continue to hold the brake pedal firmly down.

■ Anti-Lock Brake System (ABS)

During hard or emergency braking, the system rapidly pumps the brakes to prevent wheel lockup and help you maintain steering control. Do not pump the brake pedal, rather continue to hold it firmly down.

When ABS activates, you may notice vibrations through the brake pedal or the vehicle body, the brake pedal depressing further than usual, or hear a motor noise from the engine compartment. These are all normal.

In normal use, the ABS system will occasionally cause a motor sound from the engine compartment, especially when the engine is first started or after repeated use of the brakes.

NOTICE

The ABS may not function correctly if you use an incorrect tire type and size.

Vehicle Stability Assist (VSA®)


Also known as Electronic Stability Control (ESC), VSA helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It assists in maintaining traction on slippery surfaces by regulating engine output and selectively applying the brakes.

■ Turning VSA On or Off

VSA is turned on every time you start the engine, even if you previously turned it off. If you turn VSA off, your vehicle has normal braking and cornering ability, but VSA traction and stability enhancement become less effective.

Press and hold the VSA OFF button until you hear a beep to turn VSA on or off. The VSA OFF indicator appears when the system is off.

When VSA is turned off, traction control stops functioning, which may make it easier when trying to free your vehicle if it is stuck in mud or snow.

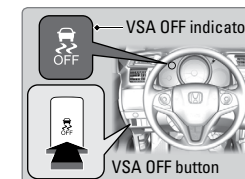

ECON Button*


Can help improve your fuel economy by adjusting the performance of the engine, transmission, cooling*/climate control system*, and cruise control*.

Press the ECON button to turn the system on or off. The ECON Mode indicator appears when the system is turned on.



Cruise Control*

Maintain a constant vehicle speed without having to keep your foot on the accelerator pedal. Use cruise control on freeways or open roads where you can travel at a constant speed with little acceleration or deceleration.

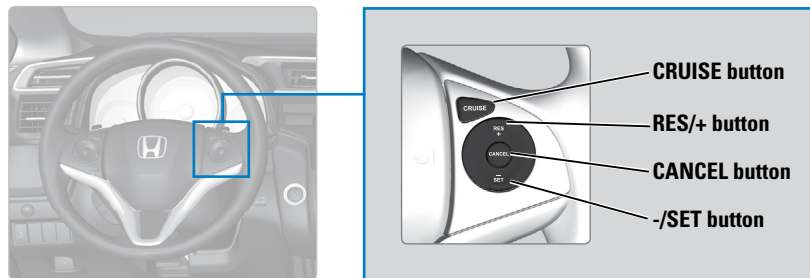

■ Activating and Setting the Vehicle Speed

1. Press CRUISE. The CRUISE MAIN indicator appears.
2. Accelerate to the desired speed (above 25 mph/ 40 km/h). Take your foot off the pedal and press -/SET to set the speed. The CRUISE CONTROL indicator appears.



■ Adjusting the Vehicle Speed

Press RES/+ to increase or -/SET to decrease.

Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the button pressed, the vehicle speed increases or decreases until you release it.



■ Canceling Cruise Control

Press CANCEL or the brake pedal. The CRUISE CONTROL indicator goes off. Or, depress the clutch pedal for at least five seconds (manual transmission models).

After cruise control has been canceled, you can still resume the prior set speed by pressing RES/+ while driving at a speed of at least 25 mph (40 km/h).

Press CRUISE to turn the system off.



⚠ WARNING


Improper use of the cruise control can lead to a crash.

Use cruise control only when traveling on open highways in good weather.

*if equipped

Adaptive Cruise Control (ACC)*

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours.

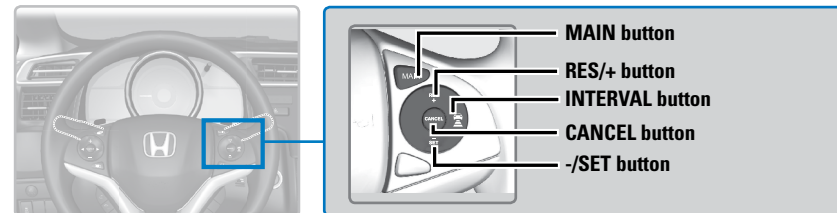

■ Activating and Setting the Vehicle Speed

1. Press the MAIN button. The ACC indicator appears in the MID.
2. Accelerate to the desired speed (above 25 mph/ 40 km/h). Take your foot off the pedal and press the -/SET button to set the speed.



■ Adjusting the Vehicle Speed

Press the RES/+ button to increase speed or the -/SET button to decrease speed.

Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the button pressed, the vehicle speed increases or decreases by 5 mph (5 km/h) until you release it.



■ Adjusting the Following Interval

Press the Interval button to change the following interval. Each time you press the button, the setting cycles through extra long, long, middle, and short.

Interval	Short	Middle	Long	Extra Long
Approx. Gap (seconds)	1.1	1.5	2.1	2.8



■ Switching to Standard Cruise Control

Press and hold the Interval button. Cruise Mode appears in the multi-information display. Press and hold the button again to switch back to ACC.

*if equipped
97

■ During Operation

If a vehicle is detected ahead of you when ACC is turned on, the system maintains, accelerates, or decelerates your vehicle's set speed to keep the vehicle's set following interval from the vehicle ahead.

If a vehicle detected ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beep sounds and BRAKE appears on the multi-information display to alert you.



⚠ WARNING

ACC has limited braking capability.

When your vehicle speed drops below 22 mph (35 km/h), ACC will automatically cancel and no longer will apply your vehicle's brakes.


Always be prepared to apply the brake pedal when conditions require.

■ Canceling ACC

Press the CANCEL or MAIN button, or press the brake pedal. Or, depress the clutch pedal for at least five seconds (manual transmission models). The ACC indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, the amber ACC indicator appears on the instrument panel (see page 32).

After cruise control has been canceled, you can still resume the prior set speed by pressing RES/+ when your vehicle speed is over 25 mph (40 km/h).

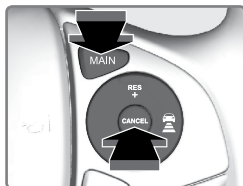

⚠ WARNING

Improper use of ACC can lead to a crash.

Use ACC only when traveling on open highways in good weather.

Lane Keeping Assist System (LKAS)*


Provides steering input to help keep the vehicle in the middle of a detected lane while driving between 45–90 mph (72–145 km/h).

If your vehicle is getting too close to detected left or right side lane markings without a turn signal activated, a message appears on the multi-information display and the steering wheel vibrates. Steering torque is also applied to help keep your vehicle within your driving lane.




■ Turning the System On or Off

1. Press the MAIN button. LKAS appears in the multi-information display.

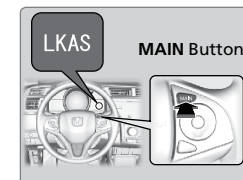

2. Press the LKAS button. Lane outlines appear in the multi-information display. Dotted lane lines turn solid when the system starts operating.

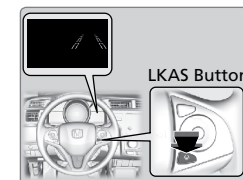

3. Press the MAIN button or the LKAS button to turn the system off.

Important Safety Reminder

LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.

*if equipped

Road Departure Mitigation (RDM)*

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether while driving between 45–90 mph (72–145 km/h).

If your vehicle is getting too close to detected lane markings without a turn signal activated, a message appears in the multi-information display. Steering wheel torque and vibrations are applied to help your vehicle stay in the lane.


Braking may also be applied if the lane lines are solid and continuous.

If the system operates several times without detecting driver response, the system beeps to alert you.



■ Turning the System On or Off

Press the RDM button to turn the system on or off. A green indicator appears on the button when the system is on.

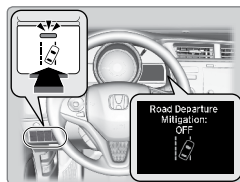

■ Changing Settings

Determine the warning type.

1. From the HOME screen, select Settings.
2. Select Vehicle. The vehicle must be in Park (P).
3. Select Driver Assist System Setup.
4. Select Road Departure Mitigation Setting.
5. Select from the options.

Normal (default): Steering control starts from inside the lane edge.

Wide: Steering control starts from outside the lane edge.

Warning Only: The system provides only a BRAKE message and steering wheel vibrations, but does not apply steering torque or braking.

6. Press BACK to exit the menu.

Important Safety Reminder

The RDM system has limitations. Over-reliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.


**if equipped*

Collision Mitigation Braking System™ (CMBS™)*

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours.

The system can give you visual, audible and tactile alerts when a potential collision is determined, and reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

When a potential collision with a detected oncoming vehicle is determined, the system also alerts you with rapid vibrations on the steering wheel.

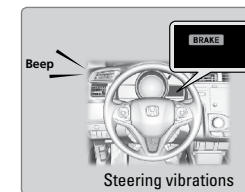

The system activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you is about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and there is a chance of a collision with an oncoming detected vehicle or a pedestrian in front of you.

■ Alert Stages

The system has three alert stages for a possible collision. Depending on the circumstances or CMBS settings, CMBS may not go through all of the stages before initiating the last stage.

Stage 1: Visual and audible warning, steering wheel vibrations

Stage 2: Visual and audible warning and light brake application

Stage 3: Visual and audible warning and strong brake application

■ Changing Settings

Determine the warning timing.

1. From the HOME screen, select Settings.
2. Select Vehicle. The vehicle must be in Park (P).
3. Select Driver Assist System Setup.
4. Select Forward Collision Warning Distance.
5. Select Long, Normal, or Short.
6. Press BACK to exit the menu.

**if equipped*

LaneWatch™*


Check the passenger-side rear areas in the upper display when the right turn signal is activated.



■ Activating LaneWatch

Activate the right turn signal. The LaneWatch display appears. Check the display for blind spots and visually confirm that it is safe to change lanes.

You can also press the LaneWatch button on the end of the turn signal switch to view a constant real-time display. Press it again to turn the display off.

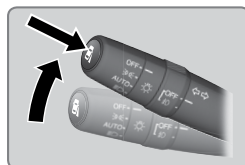

■ Changing Settings

Customize the display and how and when the display appears.

1. From the HOME screen, select Settings.
2. Select Camera.
3. Select LaneWatch.
4. Select an option and make the preferred changes.
5. Press BACK to exit the menu.

Important Safety Reminder

Like all assistance systems, LaneWatch has limitations. Over-reliance on the system may result in a collision.

⚠ WARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death.


Do not rely only on LaneWatch while driving. Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

*if equipped

Multi-View Rear Camera

When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the display, along with helpful parking guidelines.

Models with color audio system

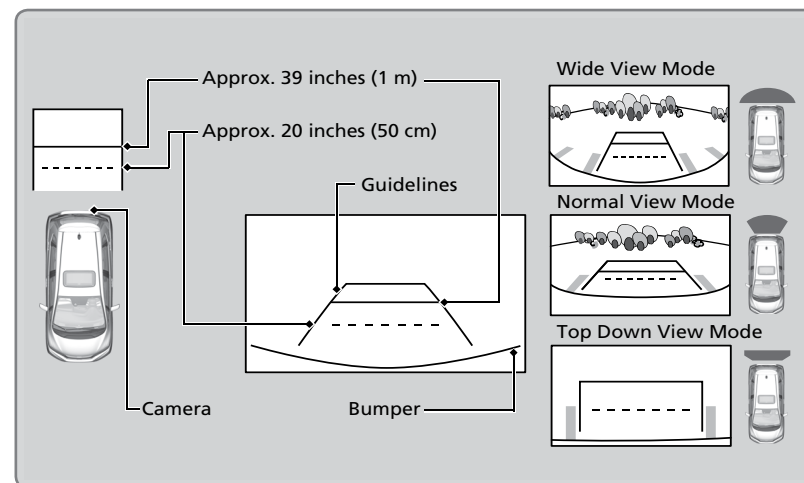


■ Changing Camera Settings

Turn the guidelines on or off. Use the selector knob to make and enter selections.

1. Press the MENU/CLOCK button.
2. Select Settings.
3. Select Rear Camera.
4. Select Camera Guideline.
5. Select On or Off.
6. Press the Back button to exit the menu.

Models with Display Audio

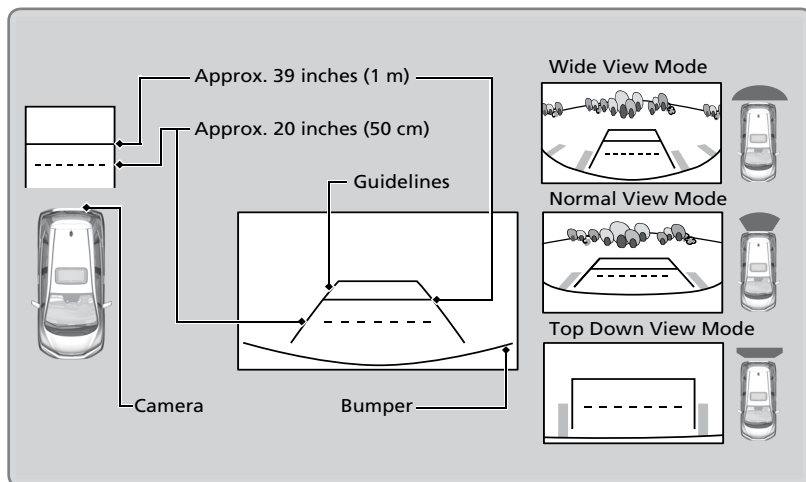

■ Changing Camera Settings

Turn the guidelines on or off.

1. From the HOME screen, select Settings.
2. Select Camera.
3. Select Rear Camera.
4. Select one of the options.
Fixed Guideline: Guidelines appear when you shift into Reverse. Select On or Off.
Dynamic Guideline: Guidelines move as you turn the steering wheel. Select On or Off.
5. Press BACK to exit the menu.

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display, which does not give you all information about conditions at the rear of your vehicle.

Refueling

Use the proper fuel and refueling procedure to ensure the best performance and safety of your vehicle.

■ Fuel Information

Use of unleaded gasoline of 87 octane or higher is recommended.



- Honda recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.

NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.

■ How to Refuel

1. The fuel fill door is located at the left rear of the vehicle. Park next to the service pump that is most accessible.
2. Turn off the engine.
3. Pull the fuel fill door release handle under the lower left corner of the dashboard. The fuel fill door opens.
4. Turn the fuel fill cap slowly to open. Place the fuel fill cap in the holder.
5. Insert the filler nozzle fully. When the tank is full, the fuel nozzle clicks off automatically.
6. Replace the fuel fill cap. Tighten it until you hear at least one click. Close the fuel fill door.

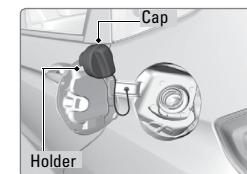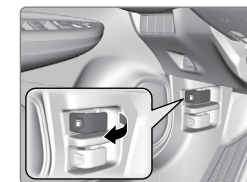**⚠ WARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


HANDLING THE UNEXPECTED

Learn about what to do in critical or emergency situations.

Smart Entry Remote Battery Strength*

If the battery life in your remote transmitter is weak, follow the below steps to start the engine.



1. Touch the back of the remote transmitter to the ENGINE START/STOP button while the indicator is flashing.
2. With the brake pedal pressed (and the clutch pedal for manual transmission), press the ENGINE START/STOP button within 10 seconds.

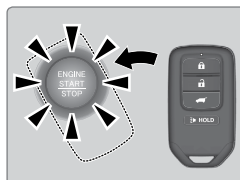

Jump Starting

Turn off the power to electric devices, such as audio and lights. Turn off the engine, then open the hood.

1. Remove the under-hood fuse box cover (see page 116). Connect the first jumper cable to your vehicle's battery (+) terminal.
2. Connect the other end of the first jumper cable to the booster battery (+) terminal. Use a 12-volt booster battery only.
3. Connect the second jumper cable to the booster battery (-) terminal.
4. Connect the other end of the second jumper cable to the stud bolt (as shown). Do not connect this jumper cable to any other part.
5. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
6. Attempt to start your vehicle's engine. If it turns over slowly, make sure that the jumper cables have good metal-to-metal contact.

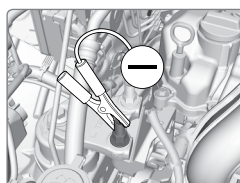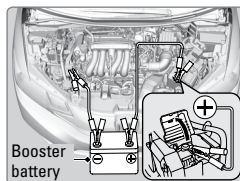

⚠ WARNING

A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

**if equipped*

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

■ After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order:



1. Disconnect the jumper cable from your vehicle's stud bolt.
2. Disconnect the other end of the jumper cable from the booster battery (-) terminal.
3. Disconnect the jumper cable from your vehicle's battery (+) terminal.
4. Disconnect the other end of the jumper cable from the booster battery (+) terminal.

Have your vehicle inspected by a nearby service station or a dealer.

Shift Lever Does Not Move*

Follow the procedure below if you cannot move the shift lever out of Park (P).

1. Set the parking brake.
2. Remove the key from the ignition or remove the built-in key from the remote transmitter.
3. Wrap a cloth around the tip of a small flat-tip screwdriver. Put it into the shift lock release slot (as shown) and remove the cover.
4. Insert the key into the shift release lock.
5. While pushing the key down, press the shift lever release button and place the shift lever into Neutral (N). The lock is now released. Have the shift lever checked by a dealer as soon as possible.

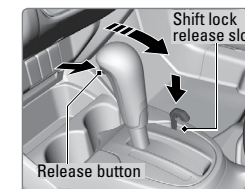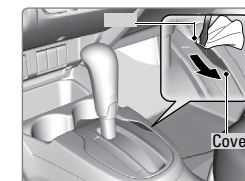


**if equipped*

Overheating

If the high temperature indicator comes on, the engine suddenly loses power, or steam or spray comes out from under the hood, your engine is overheating.

1. Immediately park the vehicle in a safe place. Turn off all accessories and turn on the hazard warning lights.
2. *If steam or spray is not present:* Keep the engine running and open the hood.
If steam or spray is present: Turn off the engine and wait until it subsides. Then open the hood.
3. Check that the cooling fan is operating and stop the engine once the high temperature indicator goes off. If the cooling fan is not operating, immediately stop the engine.
4. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks. If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark. If there is no coolant in the reserve tank, make sure the radiator is cool, then cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck and put the cap back on.

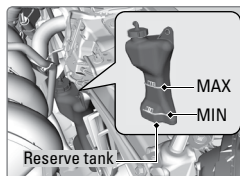

Once the engine has cooled sufficiently, restart it and check the high temperature indicator. If the indicator is off, resume driving. If it stays on, contact a dealer for repairs.

⚠ WARNING

Steam and spray from an overheated engine can seriously scald you.
Do not open the hood if steam is coming out.

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.
Always let the engine and radiator cool down before removing the radiator cap.


NOTICE

Continuing to drive with the temperature gauge needle at the H mark may damage the engine.

Emergency Engine Stop*

The ENGINE START/STOP button may be used to stop the engine due to an emergency situation even while driving. Do not press the button while driving unless it is absolutely necessary for the engine to be switched off. If you must stop the engine, choose one of the following operations:

- Press and hold the ENGINE START/STOP button for two seconds, or
- Firmly press the ENGINE START/STOP button three times.

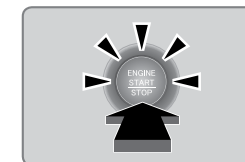

The steering wheel will not lock. However, because turning off the engine disables the power assist the engine provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place. With manual transmission models you can also downshift the transmission to utilize engine braking.

For CVT models, the power mode changes to ACCESSORY. To change the mode to VEHICLE OFF, move the shift lever to Park (P) after the vehicle comes to a complete stop. Manual transmission models change to OFF.

Canadian CVT models

Then press the ENGINE START/STOP button two times without pressing the brake pedal.

NOTICE

Do not press the button while driving unless it is absolutely necessary for the engine to be switched off.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

Flat bed equipment: The operator loads your vehicle on the back of a truck. **This is the best way to transport your vehicle.**

Wheel lift equipment: The tow truck uses two pivoting arms that go under the front tires and lift them off the ground. The rear tires remain on the ground. **This is an acceptable way to tow your vehicle.**

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

For towing behind a motorhome or other motor vehicle, see page 89.


*if equipped

Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving (U.S. models)

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator comes on.

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver's doorjamb.

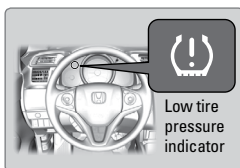


TPMS Calibration

Any time you inflate, change, or rotate one of more of the tires, you need to recalibrate the system.

Models with information display

Press and hold the TPMS button. The TPMS indicator blinks twice and calibration begins.

The calibration process requires approximately 30 minutes of cumulative driving at speeds between 30–60 mph (48–97 km/h). The process finishes automatically.

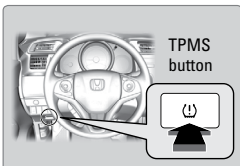

Models with multi-information display

Use the ▲ⓘ/▼ buttons and the SEL/RESET button to make your selections.

1. Select Vehicle Settings.
2. Select TPMS Calibration.
3. Select Calibrate. The process finishes automatically.

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.

Tire Pressure Monitoring System (TPMS)—Required Federal Explanation

U.S. models only

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.



Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.


Changing a Flat Tire

If a tire goes flat while driving, grasp the steering wheel firmly and brake gradually to reduce speed. Stop in a safe place. Replace the flat tire with the compact spare tire. Go to a dealer as soon as possible to have the full-size tire repaired or replaced.


■ Getting Ready to Change the Tire

Park the vehicle on a firm, level, and non-slippery surface. Apply the parking brake, shift to Park (CVT models) or Reverse (manual transmission models) and turn the vehicle off. Turn on the hazard warning lights.

1. Open the cargo area floor lid.

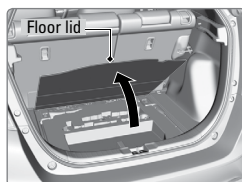


2. Take the tool case out of the cargo area. Take out the wheel nut wrench, jack handle bar, and jack.

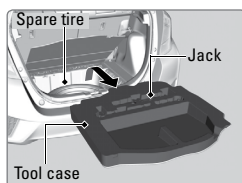


3. Unscrew the wing bolt and remove the spacer cone. Then remove the spare tire.

4. Place a wheel block or rock in front and rear of the wheel diagonal to the flat tire.

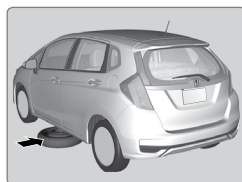

5. Place the compact spare tire (wheel side up) under the vehicle body, near the tire that needs to be replaced.

6. For models with a wheel cover, put the flat tip of the jack handle bar into the edge of the wheel cover and carefully pry the edge up to remove the cover.

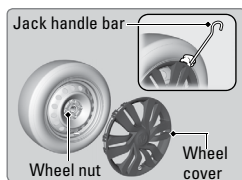


7. Loosen each wheel nut about one turn using the wheel nut wrench.




**if equipped*

■ Setting Up the Jack


1. Place the jack under the jacking point closest to the tire to be changed.

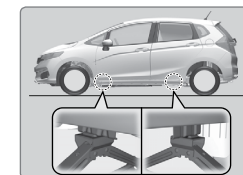

2. Turn the end bracket (as shown in the image) until the top of the jack contacts the jacking point. Make sure that the jacking point tab is resting in the jack notch.

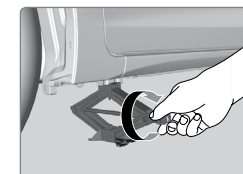

3. Raise the vehicle, using the jack handle bar and the jack handle, until the tire is off the ground.

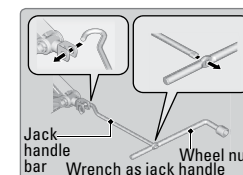

⚠ WARNING



The vehicle can easily roll off the jack, seriously injuring anyone underneath. Follow the directions for changing a tire exactly, and no person should place any part of their body under the vehicle when it is supported only by the jack.

The following instructions must be followed to use the jack safely:


- Do not use the jack with people or luggage in the vehicle.
- Use the jack provided in your vehicle. Other jacks may not support the weight ("load") or fit the jacking point.
- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.

■ Replacing the Flat Tire


1. Remove the wheel nuts and flat tire.
2. Mount the compact spare tire. Replace the wheel nuts and lightly tighten them.
3. Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around, tightening the nuts, two to three times in this order. Do not overtighten the wheel nuts.

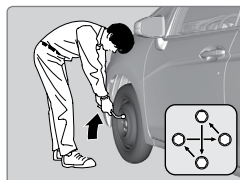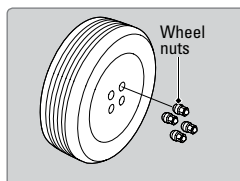

Models with wheel covers: Make sure the wire support ring is hooked into the clips around the edge of the wheel cover.

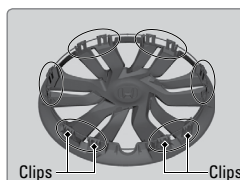

Align the valve mark on the wheel cover to the tire valve on the wheel, then install the wheel cover.

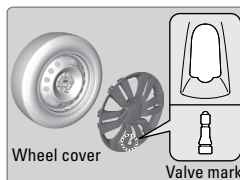


If you drive with the spare tire installed, the low tire pressure/TPMS indicator* appears. The indicator stays on until a regular tire is installed and the TPMS is calibrated.


*if equipped

■ Storing the Flat Tire

1. Remove the center cap, if necessary.
2. Place the flat tire face down in the spare tire well.
3. Remove the spacer cone from the wing bolt, flip it over and insert it back on the bolt. Secure the flat tire with the wing bolt.

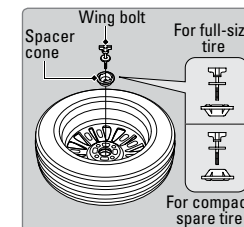

Models with wheel covers: Make sure the wire support ring is on the outer side of the tire valve (as shown).

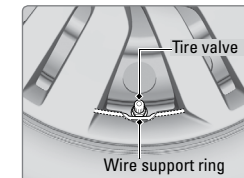

4. Securely store the wheel nut wrench, jack handle bar, and jack back in the tool case. Store the case in the cargo area under the cargo floor lid.

⚠ WARNING

Loose items can fly around the interior in a crash and can seriously injure the occupants.


Store the wheel, jack, and tools securely before driving.

Fuse Locations

If any electrical devices are not working, turn the vehicle off and check to see if any applicable fuse is blown. Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number.

Engine Compartment Fuse Boxes

Located under the hood near the brake fluid reservoir. Push the tabs to open the box.

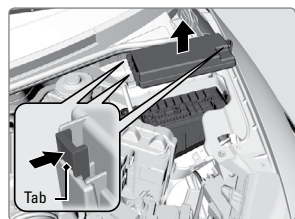

	Circuit Protected	Amps
1	Headlight Low Beam Main	20 A
2	CDC *	(30 A)
3	Hazard	10 A
4	DBW	15 A
5	Wiper	(30 A)
6	Stop	10 A
7	IGP	15 A
8	IG Coil	15 A
9	EOP*	(10 A)
10	INJ	(20 A)
11	—	—
12	Main Fan	30 A

	Circuit Protected	Amps
13	Starter SW	(30 A)
14	MG Clutch	(7.5 A)
15	Battery Sensor	(7.5 A)
16	—	—
17	Daytime Running Lights	(7.5 A)
18	Horn	10 A
19	Fog Light *	(15 A)
20	UB ECU *	(7.5 A)
21	Back Up Main	15 A
22	Interior Lights	7.5 A
23	Sub Fan	(30 A)
24	—	—
25	Smart Entry Auto Start * ²	(7.5 A)
26	ST MG * ³	(7.5 A)
27	—	—
28	—	—
29	Back Up	(10 A)
30	IGP LAF	(10 A)
31	IGPS	(7.5 A)
32	Right Headlight Low Beam	10 A
33	Left Headlight Low Beam	10 A


*1: Models with the smart entry system have an **ENGINE START/STOP** button instead of an ignition switch.

*2: Models with smart entry system

*3: Models without smart entry system

Fuse box B

Located on the (+) battery terminal. Pull up on the cover while pulling out the tab (as shown). Have a dealer replace these fuses.

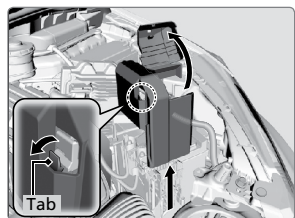


	Circuit Protected	Amps
a	Battery Main	100 A
b	RB Main 1	70 A
c	RB Main 2	80 A
d	CAP Main	70 A

**if equipped*

Interior Fuse Boxes

Fuse box A

Located behind the dashboard next to the steering wheel.

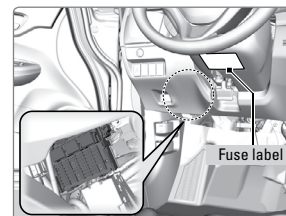



	Circuit Protected	Amps
1	Door Lock	(20 A)
2	—	—
3	Smart *	(10 A)
4	Driver Side Door Unlock	15 A
5	Passenger Side Door Unlock	15 A
6	Driver Door Unlock	(10 A)
7	Driver Door Lock	(10 A)
8	Driver's Power Window	20 A
9	Passenger's Power Window	20 A
10	Rear Left Power Window	20 A
11	Rear Right Power Window	20 A
12	Driver Side Door Lock	15 A
13	Passenger Side Door Lock	15 A
14	—	—
15	Right Headlight High Beam	10 A
16	STS*	(7.5 A)

	Circuit Protected	Amps
17	ACC Socket (Console*)	(20 A)
18	Moonroof *	(20 A)
19	Front Seat Heater *	(20 A)
20	—	—
21	—	—
22	Washer	15 A
23	Rear Wiper	(10 A)
24	A/C	7.5 A
25	Daytime Running Lights	7.5 A
26	Starter Cut	7.5 A
27	ABS/VSA	7.5 A
28	SRS	10 A
29	Left Headlight High Beam	10 A
30	ACG	10 A
31	Power Window	10 A
32	Fuel Pump	15 A
33	SRS	7.5 A
34	Meter	7.5 A
35	Mission SOL	7.5 A
36	Front ACC Socket	20 A
37	ACC	7.5 A
38	ACC Key Lock	7.5 A
39	Option	(10 A)
40	Rear Wiper	10 A
41	—	—
42	—	—

**if equipped*

Fuse box B

Located behind the dashboard next to the steering wheel. Remove the cover by putting a flat-tip screwdriver into the side slot as shown.

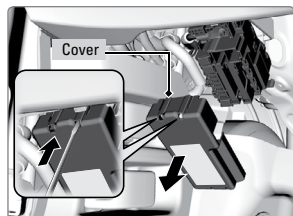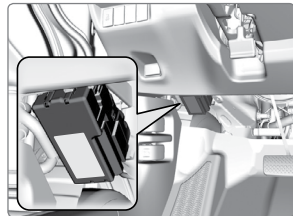

	Circuit Protected	Amps
1	EPS	70 A
	IG Main	30 A ^{*1}
	50 A ^{*2}	
	Fuse Box Main 2	50 A
	ABS/VSA Motor	40 A
	Fuse Box Main 1	30 A
2	Fuse Box Main 3	40 A
	—	—
	—	—
	—	—
	—	—
	—	—
3	Heater	30 A
4 ^{*1}	IG Main 2	30 A
4 ^{*2}	—	—
5	ABS/VSA FSR	30 A
6	—	(15 A) [*]
7	—	—
8	Front Sensor Camera	(7.5 A) [*]
9	Small Light	10 A
10	ACC Socket (Console) [*]	(20 A)
11	Rear Defogger	30 A
12 ^{*1}	—	—
12 ^{*2}	ACC Key Lock	(7.5 A)
13	Heated Door Mirror [*]	(10 A)
14	A/C Blower SW	(7.5 A)
15 ^{*1}	—	—
15 ^{*2}	Wiper	30 A

*1: Models with smart entry system

*2: Models without smart entry system




■ Inspecting and Changing Fuses

1. Turn the vehicle off, including all lights and accessories.
2. Check the fuses on the battery in the engine compartment. If the fuse is blown, have it replaced by a dealer.
3. Remove the fuse box cover.
4. Inspect the small fuses in the engine compartment and the vehicle interior.

If there is a burned-out fuse, remove it with the fuse puller and replace it with a new one.

5. Check the large fuse in the engine compartment.

If the fuse is blown, use a Phillips-head screwdriver to remove the screw and replace the fuse with a new one. Reinstall the screw.

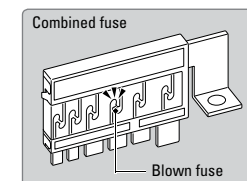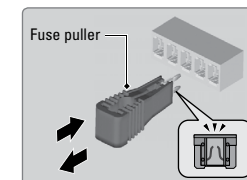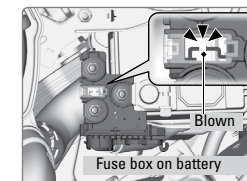**NOTICE**

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

*if equipped

MAINTENANCE

Learn about basic maintenance that you can perform on the vehicle yourself, as well as information about how to best maintain the vehicle.

Safety Precautions

Some of the most important safety precautions are listed below; however, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the battery and all fuel-related parts.
- Never leave rags, towels, or other flammable objects under the hood. Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

■ Vehicle Safety

- The vehicle must be stationary and parked on level ground with the parking brake set and the engine off.
- Be aware that hot parts can burn you.
- Be aware that moving parts can injure you.

⚠ WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed. Always follow the inspection and maintenance recommendations according to the schedules in this guide.


⚠ WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed. Always follow the procedures and precautions in this guide.

Maintenance Minder™

When maintenance is due, the Maintenance Minder indicator comes on and a message appears on the display every time you turn the vehicle on. Press the Select/reset knob (models with information display) or the ▲❏▼ steering-wheel buttons (models with multi-information display) to change displays.

See the service code tables on the following pages to check which items need maintenance based on the items shown in the display.

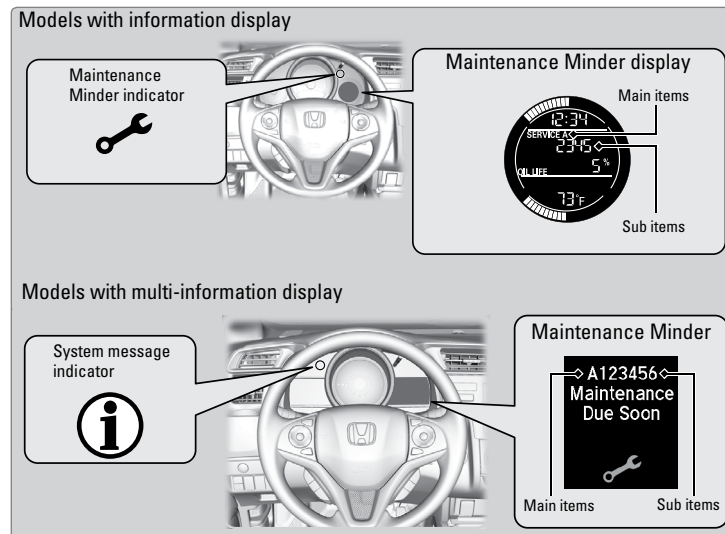

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display.

Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

CODE	Maintenance Main Items
A	Replace engine oil ^{*1}
B	Replace engine oil ^{*1} and oil filter Inspect front and rear brakes/service as necessary Check parking brake adjustment Inspect tie rod ends, steering gearbox, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (Including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system [#] Inspect fuel lines and connections [#]

^{*1}: If a message **SERVICE** (models without multi-information display) or **MAINTENANCE** (models with multi-information display) does not appear more than 12 months after the display is reset, change the engine oil every year.


[#]: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	Rotate tires
2	Replace air cleaner element ^{*2} Replace dust and pollen filter ^{*3} Inspect drive belt
3	Replace transmission fluid
4	Replace spark plugs Inspect valve clearance
5	Replace engine coolant

^{*2}: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).




^{*3}: If you drive primarily in urban areas with high concentrations of soot in the air from industry and diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

Under the Hood

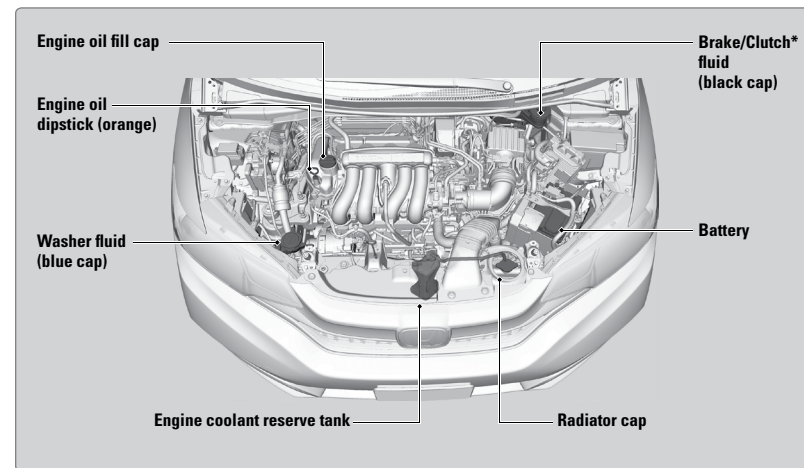

Opening the Hood

1. Park the vehicle on a level surface and set the parking brake.
2. Pull the hood release handle under the lower left corner of the dashboard.
3. Push up the hood latch lever in the center of the hood to release the lock mechanism and open the hood.
4. Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

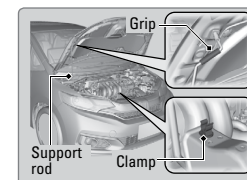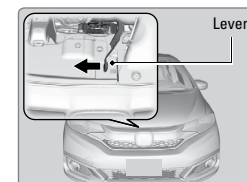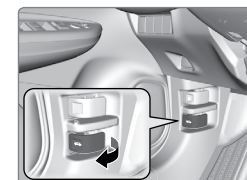

When closing, remove the support rod and stow it in the clamp, then gently lower the hood. Remove your hand at a height of approximately 12 inches (30 cm) and let the hood close.

NOTICE

Do not open the hood when the wiper arms are raised. The hood will strike the wipers and may damage either the hood or the wipers.



^{*if equipped}

Engine Oil

Park the vehicle on level ground and wait approximately three minutes after turning the engine off before you check the oil.

■ Checking the Oil

1. Remove the dipstick (orange).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick back all the way into its hole.
4. Remove the dipstick again and check the level. It should be between the upper and lower marks. Add oil if necessary.

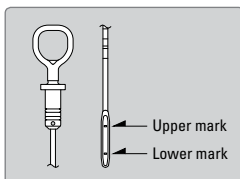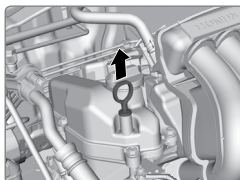


■ Recommended Engine Oil

- **Honda Genuine Motor Oil**
- **Premium-grade 0W-16 or 0W-20 detergent oil with an API Certification Seal on the container**

This seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.




Use Honda Genuine Motor Oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

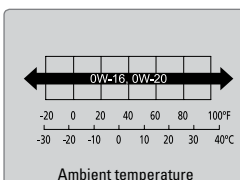

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is of the specified viscosity grade.

■ Adding Oil

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

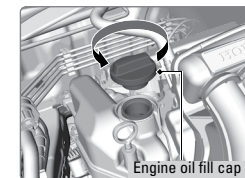

NOTICE


Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

■ Resetting the Engine Oil Life

If you change or replace the vehicle's engine oil yourself, you must reset the engine oil life.

Models with information display

1. Press the select/reset knob until the oil life screen is displayed.
2. Press and hold the knob for 10 seconds or until the maintenance codes and oil life blink.
3. Press and hold the knob for 5 seconds or until the maintenance codes disappear and the engine oil life display returns to 100%.

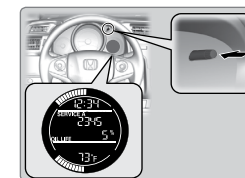

Models with multi-information display

1. Press the ▲①/▼ steering-wheel buttons until Maintenance Info appears, then press the Select/Reset button.
2. Press ▲①/▼ buttons to select Reset, then press the Select/Reset button.



NOTICE


Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

Engine Coolant

Park the vehicle on level ground. Check the reserve tank and the coolant level in the radiator. **We recommend Honda Long Life Antifreeze/Coolant Type 2.**

■ Checking the Reserve Tank

1. Check the amount of coolant in the reserve tank.
2. If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
3. Inspect the cooling system for leaks.


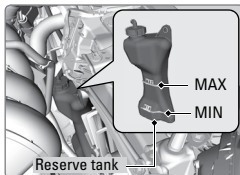


NOTICE

If Honda antifreeze/coolant is not available, you may use another major brand non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminum engines. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

■ Adding Coolant

1. Make sure the engine and radiator are cool.
2. Turn the radiator cap counterclockwise and relieve any pressure in the coolant system. Do not push the cap down when turning.
3. Push down and turn the radiator cap counterclockwise to remove it.
4. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
5. Put the radiator cap back on and tighten it fully.
6. Pour coolant into the reserve tank until it reaches the MAX mark. Put the cap back on the reserve tank.

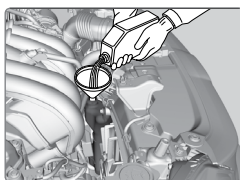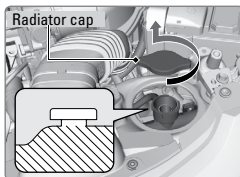

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

NOTICE


Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately, they can damage components in the engine compartment.

Brake/Clutch* Fluid

The fluid level should be between the MIN and MAX marks on the side of the reservoir. **We recommend using Honda Heavy Duty Brake Fluid DOT 3.**

Pour the fluid carefully.

If the fluid level is at or below the MIN mark, have a dealer inspect for leaks or worn brake pads as soon as possible.

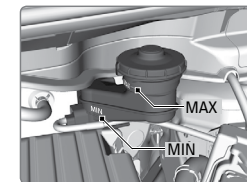


NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

Window Washer Fluid

Check the amount of window washer fluid by looking at the reservoir. If the washer fluid level is low, fill the washer reservoir. Pour the washer fluid carefully. Do not overflow the reservoir.

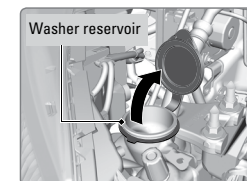

Canadian models

If the washer fluid level is low, the washer level indicator appears (see page 27).

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

*manual transmission models

Checking the Battery

The battery condition is monitored by a sensor on the negative terminal. If there is a problem with the battery, the charging system indicator appears (see page 24). Have your vehicle checked by a dealer.

Check the battery terminals for corrosion monthly.

For jump starting, see page 106.

⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.


WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

Changing Wiper Blades


If the wiper blades leave streaks across the windshield, try cleaning them first with a paper towel or soft cloth and wiper fluid. If the wiper blade rubber has deteriorated, you should change the wiper blades.

■ Changing the Front Wiper Blade Rubber


1. Lift the driver side wiper arm first, then the passenger side.

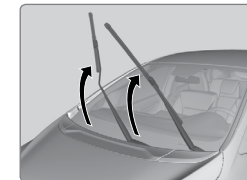


2. Press and hold the tab, then slide the blade from the wiper arm.

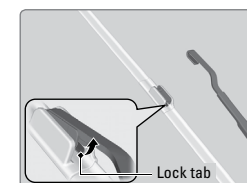

3. Slide the wiper blade out from its holder by pulling the tabbed end out.

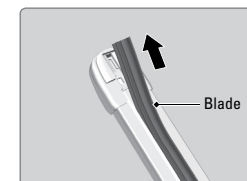

4. Slide the new wiper blade onto the holder from the bottom end. The tab on the blade should fit in the indent of the top of the wiper holder.

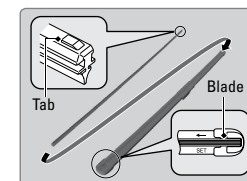

5. Slide the wiper blade onto the wiper arm securely.





6. Lower the passenger side wiper arm first, then the driver side.

NOTICE

Avoid dropping the wiper arm, as it may damage the windshield.

Changing the Rear Wiper Blade Rubber

1. Lift the wiper arm off the window.
2. Pivot up the bottom end of the wiper blade until it comes off from the wiper arm.
3. Slide the wiper blade out from the end with the indent.
4. Remove the retainers from the rubber blade that has been removed and mount to a new rubber blade.
5. Slide the new wiper blade onto the holder. Make sure it is engaged correctly, then install the wiper blade assembly onto the wiper arm.

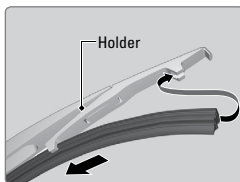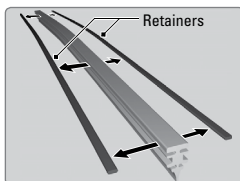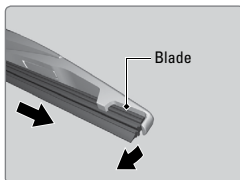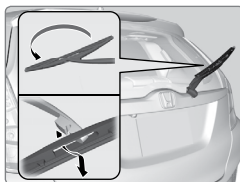

Tire Information

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

Inflation Guidelines

- Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or the specifications (see page 138) for the specified pressure.
- Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.
- Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.
- Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.
- Measure the air pressure when tires are cold. This means the vehicle has been parked for at least 3 hours, or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached and then calibrate the system (see page 110). If checked when hot, tire pressure can be as much as 4–6 psi (30–40 kPa, 0.3–0.5 kgf/cm²) higher than checked when cold.
- At least once a month or before long trips, use a gauge to measure the pressure in all tires, including the spare. Even tires in good condition can lose 1–2 psi (10–20 kPa, 0.1–0.2 kgf/cm²) per month.


Inspection Guidelines

Every time you inflate the tires, check for the following:

- Any damage to tires, including bumps, bulges, cuts, splits, or cracks in the side or tread. Remove any foreign objects and inspect for air leaks. Replace tires if you see fabric or cord.
- Uneven or excessive tread wear. Have a dealer check the wheel alignment.
- Cracks or other damage around the valve stems.

Wear Indicators

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so low that the indicator is exposed, replace the tire. **Worn out tires have poor traction on wet roads.**

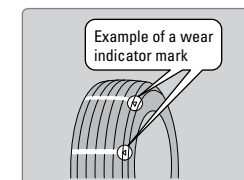

⚠️ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

■ Tire and Loading Information Label

The label attached to the driver's doorjamb provides necessary tire and loading information.

The diagram shows a sample of the 'TIRE AND LOADING INFORMATION' label. Callouts point to specific fields: 'Original tire sizes' points to the 'TIRE SIZE' column; 'Number of people your vehicle can carry' points to the 'SEATING CAPACITY' field; 'Proper cold tire pressure' points to the 'COLD TIRE PRESSURE' column; and 'Total weight your vehicle can carry (do not exceed)' points to the 'TOTAL X' field.

TIRE AND LOADING INFORMATION			
SEATING CAPACITY		TOTAL X	
The combined weight of occupants and cargo should never exceed XXXkg or XXXlbs.		FRONT X REAR X	
TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	XXXX/XXXXX XXX	XXXKPA, XXPSI	
REAR	XXXX/XXXXX XXX	XXXKPA, XXPSI	
SPARE	XXXX/XXXXX XXX	XXXKPA, XXPSI	

■ Tire and Wheel Replacement

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems such as ABS and Vehicle Stability Assist (VSA) to work incorrectly. It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

If you change or replace a wheel, make sure that the wheel's specifications match those of the original wheels.

⚠️ WARNING

Installing improper tires on your vehicle can affect handling and stability.

This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in the Owner's Manual.

■ Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires, including the spare, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

■ Winter Tires

If driving on snowy or frozen roads, mount all season tires marked "M+S", snow tires, or tire chains; reduce speed; and maintain sufficient distance between vehicles when driving. For winter tires, select the size and load ranges that are the same as the original tires and mount them to all four wheels.

■ Tire Chains

Install tire chains on the front tires only. Because your vehicle has limited tire clearance, we strongly recommend using the following chains:

Cable type: SCC Radial Chain SC1026

Mount chains as tightly as you can and make sure that they do not touch the brake lines or suspension.

NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

⚠️ WARNING

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this guide regarding the selection and use of tire chains.


Tire Labeling

The tires that came on your vehicle have a number of markings. Those you should be aware of are described below.

Here is an example of what each marking means:

P185/55R16 83V

- P: vehicle type (passenger)
- 185: tire width in millimeters
- 55: aspect ratio (tire section height as a percentage of its width)
- R: tire construction code (radial)
- 16: rim diameter in inches
- 83: load index (code indicating maximum load tire can carry)
- H: speed symbol (code indicating maximum speed rating)

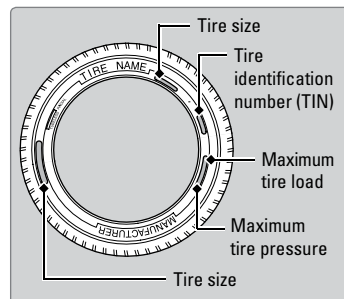

Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example shown. TIN is located on the sidewall of the tire.

DOT B97R FW6X 2209
 DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.
 B97R: Manufacturer's identification mark
 FW6X: Tire type code
 22 09: Date of Transportation
 Year
 Week

Glossary of Tire Terminology

Cold Tire Pressure – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

Load Rating – The maximum load that a tire is rated to carry for a given inflation pressure.

Maximum Inflation Pressure – The maximum tire air pressure that the tire can hold.

Maximum Load Rating – The load rating for a tire at the maximum permissible inflation pressure for that tire.

Recommended Inflation Pressure – The cold tire inflation pressure recommended by the manufacturer.

Treadwear Indicators (TWI) – The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

DOT Tire Quality Grading

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200
Traction AA
Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

WARNING: The traction grade assigned to this tire is based on straight-ahead braking traction tests and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

TABLE OF CONTENTS
VISUAL INDEX
SAFETY INFORMATION
INSTRUMENT PANEL
VEHICLE CONTROLS
AUDIO AND CONNECTIVITY
BLUETOOTH® HANDSFREELINK®
HONDALINK®

■ Temperature

The temperature grades are A (the highest), B, and C, representing the tire’s resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Testing of Readiness Codes

Your vehicle has readiness codes as part of the onboard self-diagnostic system. Some states use these codes for testing to verify whether your vehicle’s emissions components are working properly. The codes may not be read if you go through the emissions testing just after the battery has gone dead or been disconnected.

To check if they are set, turn the vehicle on without starting the engine. The malfunction indicator lamp will come on for several seconds. If it goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle emissions tested before the readiness codes are set, prepare the vehicle for retesting by doing the following:

1. Fill the gas tank to approximately 3/4 full.
2. Park the vehicle and leave the engine off for 6 hours or more.
3. Make sure the ambient temperature is between 40°F and 95°F (4°C and 35°C).
4. Start the engine without touching the accelerator pedal and let it idle for 20 seconds.
5. Keep the vehicle in Park (P) or Neutral (manual transmission). Increase the engine speed to 2,000 rpm and hold it there for about 3 minutes.
6. Let the engine idle with your foot off the accelerator for 20 seconds.
7. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway with the vehicle in Drive (D) or 6th gear (manual transmission). Do not use cruise control. When traffic allows, drive for 90 seconds without using the accelerator pedal. (Vehicle speed may vary slightly, this is OK.) If you cannot do this for a continuous 90 seconds because of traffic conditions, drive for at least 30 seconds, then repeat two more times (for a total of 90 seconds).
8. Drive in city or suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
9. Park the vehicle and leave the engine off for 30 minutes.

The readiness codes are erased when the battery is disconnected and set again only after several days of driving under a variety of conditions.

If an emissions testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test, or see your dealer.

NAVIGATION
DRIVING
HANDLING THE UNEXPECTED
MAINTENANCE
SPECIFICATIONS
CUSTOMER INFORMATION
VOICE COMMAND INDEX
INDEX

SPECIFICATIONS

Vehicle

Model	Fit
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle Weight Rating ^{*1}	U.S.: 3,461 lbs (1,570 kg) ^{*4,*5,*8} Canada: 1,570 kg ^{*3,*4} 1,590 kg ^{*5,*8}
Gross Vehicle Weight Rating ^{*2}	U.S.: 3,483 lbs (1,580 kg) ^{*4} Canada: 3,505 lbs (1,590 kg) ^{*5,*6,*7,*8} 1,580 kg ^{*4} 1,590 kg ^{*5,*6,*8}
Gross Axle Weight Rating (Front) ^{*1}	U.S.: 1,829 lbs (830 kg) ^{*4} 1,873 lbs (850 kg) ^{*5,*8} Canada: 830 kg ^{*3,*4} 850 kg ^{*5,*8}
Gross Axle Weight Rating (Front) ^{*2}	U.S.: 1,829 lbs (830 kg) ^{*4} 1,873 lbs (850 kg) ^{*5,*6,*7,*8} Canada: 830 kg ^{*4} 850 kg ^{*5,*6,*8}
Gross Axle Weight Rating (Rear)	U.S.: 1,664 lbs (755 kg) ^{*4,*5,*6,*7,*8} Canada: 755 kg ^{*3,*4,*5,*6,*8}

- ^{*1}: Manual transmission models
^{*2}: Continuously variable transmission models
^{*3}: DX
^{*4}: LX
^{*5}: EX
^{*6}: EX-L
^{*7}: EX-LNA
^{*8}: SPORT

Air Conditioning*

Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	13.2 – 15.0 oz (375 – 425 g)
Lubricant Type	ND-OIL8
Quantity	3.3 – 4.0 cu-in (55 – 67 cm³)

Engine and Fuel

Engine Specifications

Displacement	91.4 cu-in (1,498 cm³)
Spark Plugs	NGK DILZKAR7C11S DENSO DXE22HCR11S

Fuel

Fuel Type	Unleaded gasoline, Pump octane number of 87 or higher
Fuel Tank Capacity	10.6 US gal (40 L)

Tires

Regular	Size	185/60R15 84T ^{*1} 185/55R16 83H ^{*2}
	Pressure psi (kPa[kgf/cm²])	Front 33 (230 [2.3]) ^{*1} Rear 33 (230 [2.3]) ^{*1} 32 (220 [2.2]) ^{*2}
	Compact Spare	T135/80D15 99M
Wheel Size	Regular	15 x 6J ^{*1}
	Compact Spare	16 x 6J ^{*2} 15 x 4T

- ^{*1}: LX, Canadian DX, LX
^{*2}: EX, SPORT, EX-L, EX-LNA, Canadian EX, EX-L, SPORT

Light Bulbs

Headlights/Daytime Running Lights (High/Low Beam)	60/55W (H4LL/HB2LL [*] , H4/HB2 [*])
Fog Lights [*]	35W (H8)
Side Marker Lights	3CP
Front Turn Signal/Parking Lights	28/8W (Amber)
Brake/Tail/Side Marker Lights	LED
Back-Up Lights	21W
Rear Turn Signal Lights	21W
High-Mount Brake Light	LED
Side Turn Signal Lights	LED
Rear License Plate Lights	5W
Interior Lights	
Map Lights	8W
Ceiling Light	8W
Cargo Area Light	5W

Fluids

Engine Oil

Recommended	-Genuine Honda Motor Oil 0W-16, 0W-20 -API Premium-grade 0W-16, 0W-20 detergent oil
Capacity	Change 3.3 US qt (3.1 L) Change including filter 3.5 US qt (3.3 L)

Engine Coolant

Specified	Honda Long-Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	0.999 US gal (3.78 L) ^{*1} (change including the remaining 0.111 US gal (0.42 L) in the reserve tank) 0.999 US gal (3.78 L) ^{*2} (change including the remaining 0.111 US gal (0.42 L) in the reserve tank)

- ^{*1}: Continuously variable transmission models
^{*2}: Manual transmission models

Brake Fluid

Specified	Honda Heavy Duty Brake Fluid DOT 3
-----------	------------------------------------

Continuously Variable Transmission Fluid *

Specified	Honda HCF-2 Transmission Fluid
Capacity	Change 3.6 US qt (3.4 L)

Manual Transmission Fluid *

Specified	Honda Manual Transmission Fluid
Capacity	Change 1.5 US qt (1.4 L)

Washer Fluid

Tank Capacity	U.S.: 2.6 US qt (2.5 L) Canada: 4.2 US qt (4.0 L)
---------------	--

*if equipped

*if equipped

CUSTOMER INFORMATION

Learn about information specific to you as a Honda customer and how to get help.

Frequently Asked Questions/Troubleshooting

Below are some frequently asked questions and troubleshooting items that you may have about the vehicle.

- Q:** *How do I set the vehicle clock?*
- A:** For vehicles without navigation, see page 48. For vehicles with navigation, the time is automatically set using GPS signals.
- Q:** *Why doesn't the vehicle start when I press the ENGINE START/STOP button*?*
- A:** The brake pedal must be pressed to start the engine.
- Q:** *What is the AUTO* setting on my headlight lever?*
- A:** When in the AUTO position, the vehicle's exterior lights will automatically turn on or off depending on the ambient lighting.
- Q:** *Why won't the driver's door unlock when I grab the door handle, even though the keyless access remote* is within range?*
- A:** If you pull the handle too quickly, the system may not have time to confirm the door is unlocked. Wait to hear a beep to confirm the door is unlocked. If you are wearing gloves, the system may be slow to respond.
- Q:** *After my battery was disconnected or went dead, the audio system is asking for a code. Where do I find this?*
- A:** In most cases, you do not need to enter a code. Turn on the vehicle and the audio system, and press and hold the power button until the system reactivates.
- Q:** *Why can't I operate Pandora® through the audio system?*
- A:** Audio may be streaming through Bluetooth® Audio. Make sure Pandora mode is selected and the phone cable is properly connected to the USB adapter. Some phones may prompt you to "Allow" a connection.
- Q:** *Is my phone compatible with Bluetooth features?*
- A:** Visit automobiles.honda.com/handsfreelink (U.S.) to check phone compatibility for Bluetooth® Audio, Bluetooth® HandsFreeLink®, and SMS text messaging.
- Q:** *Every time I press the Talk button, the system gives me voice prompts*. Can I turn these off?*
- A:** From the Home screen, select Settings. Select the Voice Recog tab, then select Voice Prompt. Select Off.

*if equipped

- Q:** *Why can't I select an item using the selector knob or touchscreen*?*
- A:** To prevent driver distraction, certain items are limited or inoperable while the vehicle is moving. Use voice commands or pull over to select the items.
- Q:** *The amber indicator with a tire and an exclamation mark is on. What do I do?*
- A:** Either your tire pressure is low or you recently filled a tire. See page 110

Contact Us

Honda dealer personnel are trained professionals. They should be able to answer all your questions. If you encounter a problem that your dealership does not solve to your satisfaction, please discuss it with the dealership's service manager or general manager. If you are dissatisfied with the decision made by the dealership's management, contact Honda Automobile Customer Service.

U.S. owners

American Honda Motor Co., Inc.
Honda Automobile Customer Service
1919 Torrance Blvd.
Mail Stop 100-5E-8A
Torrance, CA 90501-2746
Tel: (800) 999-1009

**In Puerto Rico and
the U.S. Virgin Islands**
Bella International
P.O. Box 190816
San Juan, PR 00919-0816
Tel: (787) 620-7546

Canadian owners

Honda Canada, Inc.
Customer Relations
180 Honda Blvd.
Markham, ON
L6C 0H9
Tel: (888) 946-6329
Fax: (877) 939-0909
e-mail: honda_cr@ch.honda.com

When you call or write, please give us the following information:

- Vehicle Identification Number
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

*if equipped

Honda Roadside Assistance

24-hour emergency road service is available to you in the United States and Canada throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply).
Call (866) 864-5211 (U.S.) or (800) 465-7587 (Canada).

Warranty Coverages

Below is a brief summary of the warranties covering your new vehicle.

New Vehicle Limited Warranty: Covers your new vehicle, except for the emissions control system and accessories, against defects in materials and workmanship.

Emissions Control Systems Defects Warranty and Emissions Performance Warranty: Covers your vehicle’s emissions control systems. Time, mileage, and coverage are conditional.

Seat Belt Limited Warranty: Covers seat belts that fail to function properly.

Rust Perforation Limited Warranty: Covers all exterior body panels that rust through from the inside.

Accessory Limited Warranty: Covers Honda accessories.

Replacement Parts Limited Warranty: Covers all Honda replacement parts against defects in materials and workmanship.

Replacement Battery Limited Warranty: Provides prorated coverage for a replacement battery purchased from a Honda dealer.

Replacement Muffler Lifetime Limited Warranty: Covers a replacement muffler for the duration of the ownership.

Restrictions and exclusions apply to all these warranties. See the Warranty Booklet on the Warranty CD or at owners.honda.com (U.S.) or myhonda.ca (Canada) for complete descriptions of each warranty, including time, mileage, and other conditional limitations.

Your vehicle’s original tires are covered by their manufacturer. Tire warranty information can be found on the Warranty CD or at owners.honda.com (U.S.) or myhonda.ca (Canada).

EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

U.S. Environmental Protection Agency
Office of Transportation and Air Quality
Compliance Division,
Light-Duty Vehicles Group
Attn: Warranty Complaints
2000 Traverwood Drive
Ann Arbor, MI 48105
Email: complianceinfo@epa.gov

VOICE COMMAND INDEX

Learn about all available voice commands to help you operate the vehicle. Available on vehicles with navigation. The system recognizes only the commands listed here. Press the Talk button before you say a command. To view a list of available commands in the vehicle, say “Voice help.” Select a category to hear the commands read aloud.

General Commands

The system accepts these commands on any screen.

- Voice help
- Display menu
- Display setting
- Display navigation
- Display information
- Display audio
- Display phone
- Back/Cancel
- What is today's date?
- What time is it?

Navigation Commands

The system accepts these commands on the map/guidance screen.

General Commands

- Display map
- Display navigation
- Go home 1 (or 2)

Map Display Commands

- Display current location
- Display/Hide (specify icon type):
 - ATM
 - gas station
 - restaurant
 - post office
 - grocery store
 - lodging (hotel, motel)
 - parking garage
 - parking lot
 - school
 - hospital
 - freeway exit information
 - traffic*
 - traffic speeds*
 - traffic icons*
- Display north up
- Display heading up
- Display 3D map
- Display zoom in
- Display zoom out

Navigation Commands (continued)

Find Place Commands

- Find nearest (specify place):
 - Fuel and auto
 - Honda dealers
 - Gas station
 - Auto parts & electronics
 - Auto repair & maintenance
 - Car wash & detailing
 - Motorcycle dealers
 - Other car dealerships
 - Roadside assistance
 - ATM
 - Bank
 - Check cashing
 - Currency exchange
 - Community
 - Business
 - City hall
 - Civic center
 - Convention center
 - Court house
 - Higher education
 - Library
 - Post office
 - School
 - Emergency room
 - Hospital
 - Police station
 - Veterinarian
 - Lodging
 - Bed & breakfast
 - Hotel
 - Resort
 - Recreation
 - Amusement park
 - Golf course
 - Historical monument
 - Marina
 - Movie theater
 - Museum
 - Park
 - Performing arts
 - Sports complex
 - Tourist attraction
 - Restaurant
 - American restaurant
 - Californian restaurant
 - Chinese restaurant
 - Coffee shop
 - Continental restaurant
 - Fast food
 - French restaurant
 - German restaurant
 - Greek restaurant
 - Indian restaurant
 - Italian restaurant
 - Japanese restaurant
 - Korean restaurant
 - Mexican restaurant
 - Pizza
 - Seafood restaurant
 - Thai restaurant
 - Vegetarian restaurant
 - Vietnamese restaurant
 - Other restaurant
 - Shopping
 - Shopping area
 - Accessory store
 - Book store
 - Clothing store
 - Grocery store
 - Home improvement store
 - Mall
 - Office supply store
 - Pharmacy
 - Pet food store
 - Sewing store
 - Shoe store
 - Sporting goods store
 - Toy store

- Travel center
- Airport
- Automobile club
- Bus station
- Camping
- Commuter rail station
- Ferry terminal
- Named place
- Park & ride
- Parking garage
- Parking lot
- Rental car agency
- Rest area
- Ski area
- Tourist information
- Train station
- Travel agency
- Truck stop

Route Commands

The system accepts these commands when a route is set.

- How long to the destination?
- How far to the destination?
- Display destination map
- Display entire route
- Cancel route
- Repeat guidance
- Route menu

Climate Control Commands**

The system accepts these commands on most screens. **Available on Canadian models only.**

- Climate control automatic (maintains selected temperature)
- Climate control on*
- Climate control off*
- Air conditioner on*
- Air conditioner off*
- Rear defrost on*
- Rear defrost off*
- Climate control fresh air
- Climate control recirculate
- Climate control vent
- Climate control bi-level (vent and floor)
- Climate control floor
- Climate control floor and defrost
- Fan speed up
- Fan speed down
- Fan speed # (#: 1 to 7)
- Temperature # degrees (#: 57 to 87°F / 15 to 29°C)
- Temperature up
- Temperature down
- Driver temperature up
- Driver temperature down
- Temperature max heat
- Temperature max cool

*These commands toggle the function on and off, so the command may not match your intended action.
**if equipped

Audio Commands

The system accepts these commands on most screens. Audio volume levels cannot be controlled using voice commands.

FM/AM Radio Commands

- Audio on*
- Audio off*
- Radio on*
- Radio off*
- Radio select FM
- Radio select AM
- Radio tune to # FM (#: frequency, e.g., 95.5)
- Radio tune to # AM (#: frequency, e.g., 1020)
- Radio seek up
- Radio seek down
- Radio next station
- Radio preset # (#: 1 to 12)
- Radio FM preset # (#: 1 to 12)
- Radio AM preset # (#: 1 to 6)
- Radio scan*

SiriusXM® Radio Commands

- Radio select XM
- XM channel # (#: 0 to 255)
- XM channel up
- XM channel down
- XM category up
- XM category down
- XM preset # (#: 1 to 12)
- XM scan*
- XM category scan*
- XM channel scan*
- XM category mode
- XM channel mode

Disc Commands

- Disc play
- Disc play track # (#: 1 to 30)
- Disc skip forward
- Disc skip back
- Disc track random*
- Disc track repeat*
- Disc track scan*
- Disc folder up
- Disc folder down
- Disc folder random*
- Disc folder repeat*
- Disc folder scan*
- Disc normal play

Song By Voice™ Commands

Available for iPod and USB music search.

- Music search
- What am I listening to?
- Who am I listening to?
- Who is this?
- Who's playing?
- What's playing?
- What album is this?
- Play artist (name)
- Play track/song (name)
- Play album (name)
- Play genre/category (name)
- Play playlist (name)
- Play composer (name)
- List artist (name)
- List album (name)
- List genre/category (name)
- List playlist (name)
- List composer (name)

*These commands toggle the function on and off, so the command may not match your intended action.

Audio Commands (continued)

USB Commands

- Music search
- USB play
- USB play track # (#: 1 to 30)
- USB skip forward
- USB skip back
- USB track random*
- USB track repeat*
- USB track scan*
- USB folder up
- USB folder down
- USB folder random*
- USB folder repeat*
- USB folder scan*
- USB normal play

iPod® Commands

- Music search
- iPod play
- iPod play track # (#: 1-30)
- iPod skip forward
- iPod skip back
- iPod track shuffle*
- iPod album shuffle*
- iPod track repeat*
- iPod normal play
- What/Who am I listening to?
- Who is this?
- What's playing?
- Who's playing?
- What album is this?

Pandora® Commands**

- Pandora play*
- Pandora skip forward
- Pandora station up
- Pandora station down
- Pandora pause*
- Pandora resume*
- Pandora thumbs up
- Pandora thumbs down

Bluetooth® Audio Commands

- Bluetooth audio play
- Bluetooth audio skip forward
- Bluetooth audio skip back
- Bluetooth audio pause
- Bluetooth audio resume
- Bluetooth audio group up
- Bluetooth audio group down

Commands may not work on some phones or devices.

AUX Commands

- Auxiliary play

*These commands toggle the function on and off, so the command may not match your intended action.

**U.S. models only

Phone Commands

The system accepts these commands on most screens.

- Dial/call by number
- Dial/call by name
- Call (phone number or name)

Info Commands

The system accepts these commands on most screens.

- Trip computer
- Display clock
- Display traffic list*
- Display wallpaper
- Display traffic on my route*

On-screen Commands

The system accepts these commands on any screen where applicable. All available commands are highlighted in yellow when you press the Talk button.

- Next (or previous)
- Up (or down)
- Right (or left)
- Return
- OK (excluding Startup Confirmation screen)
- Delete

INDEX

ABS.....	25	Bluetooth Handsfreelink (HFL).....	69
ACC.....	26, 27	E-Mail.....	77
Accessory Power Socket.....	50	HFL Controls.....	69, 72
Adaptive Cruise Control (ACC) with Low Speed Follow (LSF).....	26	HondaLink Assist.....	76
Address.....	81	Making a Call.....	71, 75
Airbags.....	9	Pairing a Phone.....	70, 74
About Your Airbags.....	11	Phonebook.....	71, 75
Advanced Airbags.....	9	Siri Eyes Free.....	78
Airbag Care.....	14	SMS Text Messaging.....	77
Airbag System Components.....	13	Speed Dial.....	71, 76
Airbag System Indicators.....	11	Talk Button Tips.....	73
Front Airbags (SRS).....	9	Brake Assist System.....	94
Passenger Airbag Off Indicator.....	12	Brake Fluid.....	127
Side Airbags.....	10	Brake system.....	25
Side Curtain Airbags.....	10	Braking.....	93
SRS (Supplemental Restraint System) Indicator.....	11	Brightness Control.....	38
Android Auto™.....	61	Calibration.....	110
Anti-Lock Brake System (ABS).....	25, 94	Carbon Monoxide Gas.....	4
Apple CarPlay™.....	60	Changing a Flat Tire.....	112
Audio Commands.....	146	Changing Wiper Blades.....	129
Audio Operation.....	50	Charging system.....	25
Accessory Power Socket.....	50	Child Safety.....	15
Android Auto™.....	61	Childproof Door Locks.....	34
Apple CarPlay™.....	60	Installing a LATCH-Compatible Child Seat.....	18
Bluetooth Audio.....	58, 67	Child Seat.....	17
Changing Settings.....	49	Adding Security with a Tether.....	20
Color Audio System.....	53	Installing a LATCH-Compatible Child Seat.....	18
Compact Disc (CD).....	55	Selecting a Child Seat.....	17
FM/AM Radio.....	54, 63	Climate Control Commands.....	145
HondaLink.....	60	Climate Control System.....	47
iPod.....	56, 65	Clock.....	48
Pandora.....	68	Collision Mitigation Braking System™ (CMBS™).....	26, 101
SiriusXM Radio.....	64	Color Audio System.....	53
Sound.....	52	Compact Disc (CD).....	55
Steering Wheel Controls.....	51	Compact Disc (CD) Commands.....	146
Touchscreen Operation.....	59	Contact Us.....	141
USB Flash Drive.....	57, 66	Continuously Variable Transmission (CVT).....	91
USB Port.....	50	Coolant.....	126
Wi-Fi.....	62	Cruise control	
AUX Commands.....	147	Adaptive Cruise Control.....	97
Battery.....	128	Cruise Control.....	96
Bluetooth Audio.....	58, 67	CRUISE MAIN.....	27
Bluetooth Audio Commands.....	147	CUSTOMER Information.....	140
		Customized Features.....	49
		CVT.....	91
		Dashboard and Other Controls.....	2
		Destination.....	81
		Dialing a Number.....	71, 75
		Door Mirrors.....	45
		Door Operation.....	34
		Doors.....	31
		Door/tailgate open.....	26

*if equipped

INDEX	
DOT Tire Quality Grading	135
Driving.....	86
Braking.....	93
Collision Mitigation Braking System™ (CMBS™). 101	
Cruise Control	96
ECON button.....	95
Ignition	90
Lane Keeping Assist System (LKAS).....	99
LaneWatch	102
Maximum Load Limit.....	88
Multi-View Rear Camera.....	103
Paddle Shifters	92
Power Mode.....	91
Refueling.....	105
Road Departure Mitigation (RDM).....	100
Shifting	91
Vehicle Stability Assist (VSA).....	95
ECON button.....	95
ECON mode.....	27
Electric power steering.....	25
E-Mail.....	77
Emergency Engine Stop.....	109
Engine and Fuel.....	138
Engine Coolant.....	126
Engine Oil.....	124
ENGINE START/STOP button	91
Exterior Lights	27, 39
Fastening a Seat Belt.....	7
Find Place Commands.....	144
Flat Tire	112
Floor Mats	42
Fluids.....	139
FM/AM Radio.....	54, 63
FM/AM Radio Commands.....	146
Fog lights	27, 39
Foot Brake.....	93
Frequently Asked Questions	140
Front Airbags (SRS)	9
Front Door Inner Handle	34
Front Seats	41
Front Wipers	40
Fuel Information	105
Fuse Locations.....	116
Hang-Up/Back button.....	69, 72
Hazards.....	27
Headlight-Wiper Integration	40
Head Restraints.....	43
HFL Controls.....	69, 72
High beams	27
High temperature.....	26
Home Address.....	81
HondaLink.....	60
HondaLink Assist.....	76
Honda Roadside Assistance	142
Hood.....	123
Ignition	90
Immobilizer.....	26
Info Commands.....	148
Information Display.....	28
Instrument Panel.....	24
Condition Indicators.....	26
Malfunction Indicators.....	24
On/Off Indicators	27
Interior Lights.....	38
iPod.....	56, 65
iPod Commands.....	147
Jump Starting	106
Key.....	30
Lane Keeping Assist System (LKAS).....	26, 99
LaneWatch.....	102
Lap/Shoulder Seat Belts	5
LATCH-Compatible Child Seat.....	18
Light Bulbs.....	138
Lights.....	38
LKAS.....	27
Lock Tab.....	34
Low fuel	27
Low oil pressure	25
Low temperature.....	26
Low tire pressure	27
Maintenance.....	120
Battery.....	128
Brake Fluid.....	127
Engine Coolant.....	126
Engine Oil.....	124
Maintenance Minder.....	121
Safety Precautions.....	120
Service Codes.....	122
Under the Hood.....	123
Window Washer Fluid	127
Wiper Blades	129
Maintenance Minder.....	27
Making a Call.....	71, 75
Malfunction indicator lamp	25
Manual Transmission	93
Map Display Commands	143
Map Legend.....	84
Map Lights.....	38
Master Door Lock Switch.....	34
Maximum Load Limit.....	88
Mirrors	45
Moonroof.....	37
Multi-View Rear Camera	103

INDEX	
Navigation	79
Display and Controls.....	80
Entering a Destination.....	81
Home Address	81
Map Legend	84
Place Category	82
Recent Places.....	82
Routing	84
Saved Places	83
Steering Wheel Controls.....	79
Street Address.....	81
System Guidance Volume.....	79
Talk Button Tips	79
Traffic	85
Turn-by-turn directions	84
Navigation Commands	143
One-Touch Turn Signal	39
On-screen Commands.....	148
Opening the Hood	123
Overheating.....	108
Paddle Shifters	92
Pairing a Phone.....	70, 74
Pandora	68
Pandora Commands	147
Parking Brake	26, 94
Passenger Airbag Off Indicator	12
Phone	70, 74
Phonebook	71, 75
PHONE button.....	69
Phone Commands	148
Pick-Up button.....	69, 72
Place Category.....	82
Power Door Mirrors.....	45
Power Mode.....	91
Power Moonroof.....	37
Power Window.....	36
Radio	54, 63
Readiness Codes.....	137
Rear Camera	103
Rear Seats	44
Rearview Mirror	45
Rear Wiper	40
Recent Places.....	82
Refueling.....	105
Remote Battery Strength	106
Remote Transmitter	30
Reporting Safety Defects.....	23
Road Departure Mitigation (RDM)	26, 100
Roadside Assistance.....	142
Route Commands.....	145
Routing.....	84
Safety Information	3
Carbon Monoxide Gas.....	4
Childproof Door Locks	34
Child Safety	15
Reporting Safety Defects.....	23
Safety Label Locations.....	22
Safety Messages.....	3
Saved Places	83
Seat belt reminder	26
Seat Belts.....	5
Fastening a Seat Belt.....	7
Lap/Shoulder Seat Belts	5
Seat Belt Inspection	6
Seat Belt with Detachable Anchor.....	8
Shoulder Anchor	7
Seat Heaters	47
Seats	41
Front Seats	41
Rear Seats	44
Selector knob.....	69
Select/reset knob.....	28
Service Codes.....	122
Settings.....	49
Setting the Clock	48
Shifting.....	91
Shift Lever Does Not Move	107
Shoulder Anchor	7
Side Airbags.....	10
Side Curtain Airbags.....	10
Siri Eyes Free	78
SiriusXM Radio.....	64
SiriusXM Radio Commands.....	146
Smart Entry system.....	25, 31
SMS Text Messaging	77
Song By Voice™ Commands.....	146
Sound.....	52
Specifications.....	138
Speed Dial	71, 76
SRS (Supplemental Restraint System) Indicator	11
Starter system	26
Steering Wheel.....	45
Steering Wheel and Nearby Controls	1
Steering Wheel Controls.....	51, 79
Street Address.....	81
Supplemental Restraint System (SRS)	25
System Guidance Volume.....	79
System message	27
Tailgate	31
Tailgate Operation.....	35
Talk button.....	69, 72
Talk Button Tips	73, 79
Text Messaging	77

INDEX

Tire Information	131
DOT Tire Quality Grading.....	135
Inflation Guidelines	131
Tire and Loading Information Label.....	132
Tire and Wheel Replacement.....	132
Tire Chains.....	133
Tire Identification Number (TIN).....	134
Tire Labeling	134
Tire Service Life.....	133
Tire Terminology	134
Wear Indicators.....	131
Winter Tires.....	133
Tire Pressure Monitoring System (TPMS)....	25, 110
Tires.....	138
Touchscreen Operation	59
Towing.....	89, 109
TPMS.....	25, 110
Traffic	85
Troubleshooting.....	140
Turn-by-turn directions	84
Turn signals.....	27, 39
Under the Hood	123
USB Commands.....	147
USB Flash Drive.....	57, 66
USB Port.....	50
Vehicle	138
Vehicle Controls	30
Vehicle Stability Assist (VSA)	25, 95
Visual Index.....	1
Voice Command Index	143
VSA.....	25, 27, 95
Walk Away Auto Lock	33
Warranty Coverages	142
Washer fluid level	27
Wear Indicators	131
Wi-Fi.....	62
Window.....	36
Window Washer Fluid.....	127
Winter Tires.....	133
Wiper Blades.....	129
Wiper Operation.....	40

This page left intentionally blank

