

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

ACURALINK®



RLX

2018 SPORT HYBRID
OWNER'S GUIDE

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CLIENT INFORMATION

VOICE COMMAND INDEX

INDEX

DISCLOSURES

■ Devices That Emit Radio Waves

The following products and systems on your vehicle emit radio waves when in operation:

- AcuraLink
- Audio system
- Blind Spot Information (BSI)
- Bluetooth® Audio
- Tire Pressure Monitoring System
- Collision Mitigation Braking System™ (CMBS™)
- HomeLink® Universal Transceiver
- Immobilizer system
- Keyless Access System
- Bluetooth® HandsFreeLink®
- Remote Engine Start with Vehicle Feedback

Each of the above complies with the appropriate requirements or the required standards of FCC (Federal Communications Commission) and Industry Canada, described below:

As required by the FCC:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

As required by Industry Canada:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

■ Disclaimer

The information and data contained herein are believed to be accurate and reliable. American Honda Motor Co., Inc. makes no warranty of any kind and accepts no responsibility for the results obtained through application of this information.

■ Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit www.acuralink.com/vehicle-data-choices.

■ Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential. Some diagnostic and maintenance information is uploaded to Acura upon vehicle start up.

■ Event Data Recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. **The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:**

- **How various systems in your vehicle were operating;**
- **Whether or not the driver and passenger safety belts were buckled/fastened;**
- **How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,**
- **How fast the vehicle was traveling.**

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement that have the special equipment can read the information if they have access to the vehicle or the EDR.

The data belong to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

■ License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in this vehicle's Owner's Manual and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out of the arbitration provisions within 30 days of your initial use of the Software by sending a signed, written notice to Acura Client Relations, Mail Stop 100-5E-8F, 1919 Torrance Blvd., Torrance, CA 90501-2746.

continued on inside back cover

INTRODUCTION

This Owner's Guide is intended to help you quickly get acquainted with your **2018 Acura RLX Sport Hybrid**. It provides basic information and instructions on technology and convenience features, as well as emergency procedures and how to get assistance.

This guide is for vehicles sold in the United States and Canada. It covers all RLX Sport Hybrid models, so you may find descriptions of features and equipment that are not in your vehicle.

Images throughout this guide are from U.S. vehicles and represent features and equipment that are available on some, but not all, models. Images shown in this guide should be considered examples and used for demonstration purposes only.

This guide is not intended to be a substitute for the Owner's Manual and Navigation Manual at owners.acura.com. The Warranty Information CD enclosed in your glove box kit includes the vehicle and tire warranties in electronic format. This information can be viewed on a computer (PC or Mac platform) and saved or printed for your reference. You can also visit owners.acura.com to view the complete and most current information.

If you are the first registered owner of your vehicle, you may request a complimentary printed copy of the Owner's Manual, Navigation Manual, or Vehicle Warranty within the first six months of vehicle purchase. To request a copy, visit owners.acura.com and create or log in to your account. In Canada, please request a copy from your Acura dealer.

American Honda Motor Company strives to be proactive in protecting our environment and natural resources. By using electronic delivery for a considerable portion of the information typically found in a vehicle owner's manual, we are further reducing our impact on the environment.

■ Acura Total Luxury Care Roadside Assistance

Your Acura TLC Roadside Assistance representative is here to help you 24 hours a day, 7 days a week. Under your 4-year/50,000-mile (80,000 km) warranty, the following benefits are available:

- Towing services — full cost of towing to the closest Acura dealer
- Roadside assistance — jump starting, fuel delivery, lockout, and flat tire
- Trip planning — detailed trip routing, emergency services, and more

Call (800) 594-8500 (U.S.) or (800) 565-7587 (Canada)

■ Acura Client Relations

Your authorized Acura dealer should be able to answer any questions you have about your vehicle. However, if you are dissatisfied with the information you receive, you can call Acura Client Relations (see page 137).

Call (800) 382-2238 (U.S.) or (888) 922-8729 (Canada)

TABLE OF CONTENTS


VISUAL INDEX.....	1	AUDIO AND CONNECTIVITY	50
Steering Wheel and Nearby Controls.....	1	Basic Audio Operation	50
Dashboard and Ceiling Controls.....	2	On-Demand Multi-Use Display (ODMD)	52
SAFETY INFORMATION	3	FM/AM Radio	53
Important Safety Information	3	SiriusXM® Radio	54
Seat Belts.....	5	Compact Disc (CD) or USB Flash Drive	55
Airbags.....	8	Hard Disk Drive (HDD) Audio	56
Child Safety	14	iPod®	57
Safety Label Locations.....	20	Bluetooth® Audio	58
Reporting Safety Defects.....	21	Pandora®	59
AcuraLink featuring Aha™	60	AcuraLink featuring Aha™	60
INSTRUMENT PANEL.....	22	BLUETOOTH® HANDSFREELINK®	61
Malfunction Indicators.....	22	Basic HFL Operation	61
Condition Indicators	24	Pairing a Phone	63
On/Off Indicators.....	25	Making a Call.....	64
Gauges.....	25	SMS Text Messaging and E-Mail	67
Head-Up Display.....	26	Roadside Assistance*.....	67
Multi-Information Display.....	28	ACURALINK®**	68
VEHICLE CONTROLS	29	AcuraLink Messages	68
Using the Remote Transmitter.....	29	Subscription Features.....	69
Keyless Access System	30	NAVIGATION.....	70
Door Operation from Inside the Vehicle.....	31	Basic Navigation Operation	70
Walk Away Auto Lock.....	32	Entering a Destination.....	73
Power Window Operation	33	Routing.....	75
Power Moonroof Operation	34		
Interior and Exterior Lights.....	35		
Auto High-Beam System	36		
One-Touch Turn Signal.....	38		
Wiper Operation.....	38		
Adjusting the Seats	40		
Driving Position Memory System.....	43		
Adjusting the Steering Wheel	43		
Adjusting the Mirrors.....	44		
Customized Features	45		
HomeLink® Universal Transceiver	46		
Climate Control System.....	47		
Seat Heaters* and Ventilation*	49		

*if equipped

VISUAL INDEX

Quickly locate items in the vehicle's interior.

Steering Wheel and Nearby Controls

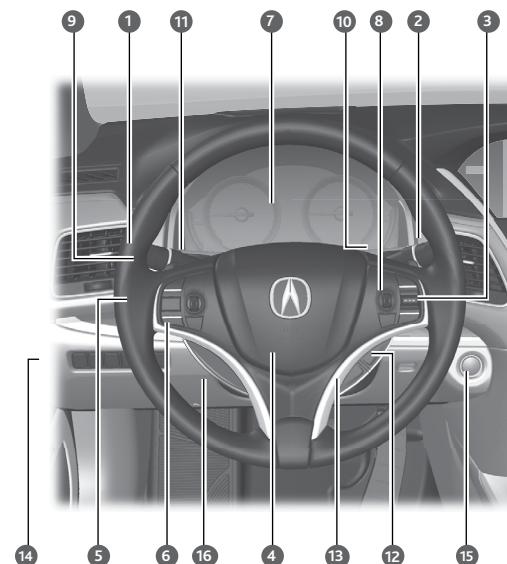


- | | |
|---|--|
| <ul style="list-style-type: none"> 1 Lights/turn signals/CAMERA button*/fog lights p. 32, p. 38, p. 99 2 Wipers/washers p. 38 3 Adaptive Cruise Control (ACC) with Low Speed Follow (LSF) buttons p. 89 4 Horn 5 Voice control/Bluetooth HandsFreeLink buttons p. 61 6 Audio controls p. 52 7 Instrument panel p. 22
Multi-information display p. 28 8 Right selector wheel
TRIP button p. 28 9 Paddle shifters p. 86 10 Brightness control p. 35 | <ul style="list-style-type: none"> 11 Head-up display buttons p. 26 12 Interval button p. 89 13 Lane Keeping Assist System (LKAS) button p. 91 14 Vehicle Stability Assist (VSA) System OFF button p. 97 Road Departure Mitigation (RDM) button p. 95 Parking sensor button* p. 97 Collision Mitigation Braking System (CMBS) OFF button p. 93 Headlight washer button* p. 39 15 POWER button p. 83 16 Heated steering wheel* button p. 48 |
|---|--|

*if equipped

DRIVING.....	77	MAINTENANCE.....	118
Before Driving.....	77	Safety Precautions.....	118
Maximum Load Limit.....	78	Maintenance Minder™.....	119
Improving Fuel Economy and Reducing CO2 Emissions.....	79	Under the Hood.....	121
Sport Hybrid System.....	80	Engine Oil.....	123
Remote Engine Start.....	82	Engine Coolant.....	125
Starting to Drive.....	83	Window Washer Fluid.....	126
Reactive Force Pedal.....	84	Checking the 12-Volt Battery.....	126
Shifting.....	84	Changing Wiper Blades.....	127
Braking.....	87	Tire Information.....	128
Adaptive Cruise Control (ACC) with Low Speed Follow (LSF).....	89	Tire Labeling.....	131
Lane Keeping Assist System (LKAS).....	91	DOT Tire Quality Grading.....	132
Traffic Jam Assist (TJA).....	92	Testing of Readiness Codes.....	134
Collision Mitigation Braking System™ (CMBS™).....	93	SPECIFICATIONS.....	135
Road Departure Mitigation (RDM).....	95	CLIENT INFORMATION.....	136
Blind Spot Information (BSI).....	96	Frequently Asked Questions/ Troubleshooting.....	136
Parking Sensor System*.....	97	Contact Us.....	137
Vehicle Stability Assist (VSA®).....	97	EPA Contact Information.....	137
Multi-View Rear Camera*.....	98	Acura Total Luxury Care Roadside Assistance.....	138
Surround View Camera*.....	99	Warranty Coverages.....	138
Cross Traffic Monitor.....	101	INDEX.....	141
Refueling.....	102	DISCLOSURES.....	145
HANDLING THE UNEXPECTED.....	103		
Keyless Access Remote Battery Strength.....	103		
Emergency Power System Off.....	103		
Jump Starting.....	104		
Overheating.....	105		
Tire Pressure Monitoring System (TPMS).....	106		
Handling a Flat Tire.....	108		
Tire Repair Kit.....	108		
Compact Spare Tire*.....	109		
Fuse Locations.....	112		
Emergency Towing.....	117		

Dashboard and Ceiling Controls

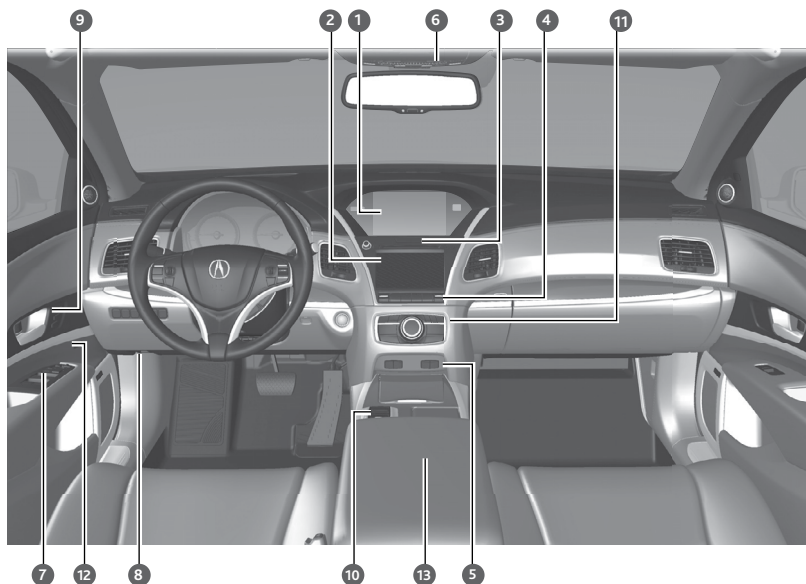

- | | |
|---|---|
| 1 Multi-information display | 9 Driving Position Memory System buttons p. 43 |
| 2 On-Demand Multi-Use Display p. 52 | 10 Electric parking brake switch p. 87 |
| 3 Hazard warning button | Shift button/
Electronic gear selector p. 84 |
| 4 Climate control buttons p. 47 | Automatic brake hold button p. 88 |
| 5 Front seat heater*/ventilation* p. 49 | SPORT button p. 86 |
| 6 Moonroof switch p. 34 | 11 Audio button p. 52 |
| Map lights p. 36 | Phone button p. 61 |
| AcuraLink buttons* p. 68 | Navigation button p. 70 |
| Homelink buttons p. 46 | CAMERA* button p. 99 |
| 7 Power window switches p. 33 | 12 Trunk opener p. 31 |
| Door lock switches p. 31 | Fuel fill door release button p. 102 |
| Door mirror controls p. 44 | 13 (inside center console) |
| 8 Hood release handle p. 121 | USB port p. 50 |
| | Auxiliary input jack p. 50 |
| | Accessory power socket p. 50 |

*if equipped

SAFETY INFORMATION

Your safety—and the safety of others—is very important, and operating this vehicle safely is an important responsibility. While we strive to help you make informed decisions about safety, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. Therefore, you must use your own good judgment.

Important Safety Information

This guide explains many of your vehicle's safety features and how to use them. Please read this information carefully. Following the instructions below will also help to keep you and your passengers safe.

■ Important Safety Precautions

- Always wear your seat belt.
- Secure all children in the proper restraint system.
- Be aware of airbag hazards.
- Don't drink and drive.
- Pay appropriate attention to the task of driving safely.
- Control your speed.
- Keep your vehicle in safe condition.

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

■ Safety Messages

When you see the following messages throughout this guide, pay close attention.

⚠ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

NOTICE

This information is intended to help you avoid damage to your vehicle, other property, or the environment.


■ Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle and follow the instructions set forth below, you will not accumulate dangerous levels of carbon monoxide gas in the vehicle interior.

Have the exhaust system inspected for leaks whenever:

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the trunk open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the trunk open, open all the windows and set the climate control system as shown below.

1. Select the fresh air mode.
2. Select the  mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

WARNING

Carbon monoxide gas is toxic. Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas. Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Seat Belts

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts and wear them properly.

■ Lap/Shoulder Seat Belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving, the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop, the retractor locks to restrain your body. The front passenger's and rear seat belts also have a lockable retractor for use with child seats.

The front seats are equipped with automatic seat belt tensioners to enhance safety. The tensioners automatically tighten the front seat belts during a moderate-to-severe front collision, sometimes even if the collision is not severe enough to inflate the front airbags or the driver's knee airbag.

Seat belt e-pretensioners are motor-powered and start to retract the front seat belts when the CMBS, brake assist system, or VSA system is in operation. They may also activate when you steer the vehicle hard or the vehicle is impacted. After retracting, the seat belts are slackened to their original positions.

■ Proper Use of Seat Belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduces the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.
- No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

⚠ WARNING

Not wearing a seat belt properly increases the chance of a serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

■ Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully and look for frays, cuts, burns, and wear.
- Check that the latches and buckles work smoothly and the belts retract easily. If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

⚠ WARNING




Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.

■ Fastening a Seat Belt

Adjust your seat to the proper position (see page 40), and then follow the below steps.

1. Pull the seat belt out slowly.
2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure. Make sure that the belt is not twisted or caught on anything.
3. Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
4. If necessary, pull up on the belt again to remove any slack, then make sure that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.
5. To release the belt, push the red PRESS button then guide the belt by hand until it has retracted completely.

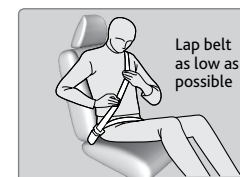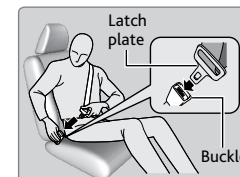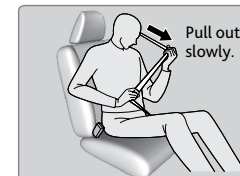**⚠ WARNING**


Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

■ Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.

1. Move the anchor up and down while holding the release button.
2. Position the anchor so that the belt rests across the center of your chest and over your shoulder.

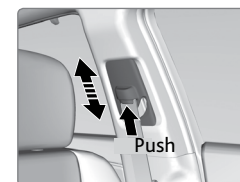

Airbags

Your vehicle is equipped with several types of airbags: front airbags, driver's knee airbag, side airbags, and side curtain airbags.

■ Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger. They are housed in the center of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

■ Driver's Knee Airbag

The driver's knee SRS airbag inflates with the driver's front airbag in a moderate-to-severe frontal collision to help keep the driver in the proper position and to help maximize the benefit provided by the vehicle's other safety features. It is housed under the steering column.



■ Advanced Airbags

The airbags have advanced features to help reduce the likelihood of airbag-related injuries to smaller occupants. The driver's advanced airbag system includes a seat position sensor.

Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag.

The front passenger's advanced airbag system has weight sensors.

We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, if you do allow a child age 12 or under to ride in the front passenger's seat, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

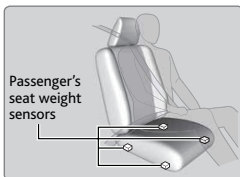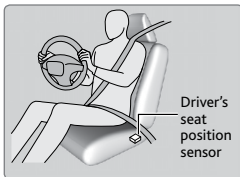

For the advanced airbags to work properly:

- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.
- Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors.

■ Side Airbags

The side airbags help protect the upper torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact. They are housed in the outside edge of the driver's and front passenger's seat-backs. Both are marked **SIDE AIRBAG**.

■ Side Curtain Airbags

Side curtain airbags help protect the head and torso of the driver and passengers in outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.



The side curtain airbags are designed to deploy in a rollover or moderate-to-severe side impact. If the SRS control unit senses that your vehicle is about to roll over, it immediately deploys both side curtain airbags and activates both front seat belt tensioners. If the impact is on the passenger's side, the passenger's side curtain airbag will inflate even if there are no occupants on that side of the vehicle.

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars, as they can interfere with the proper operation of the side curtain airbags.

When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may inflate in a moderate-to-severe angled frontal collision.

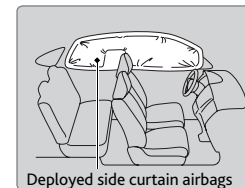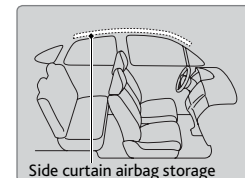

■ Important Facts About Your Airbags

Always wear your seat belt properly, and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Do not place hard or sharp objects between yourself and a front airbag.

Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front and driver's knee airbag covers.

Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Do not attach any objects to the side windows or roof pillars. They can interfere with the proper operation of the side curtain airbags.

Do not cover or replace the front seat-back covers. This can prevent your side airbags from properly deploying during a side impact.

⚠ WARNING

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.

■ Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the multi-information display.

SRS (Supplemental Restraint System) Indicator

If the indicator comes on at any other time besides vehicle start-up, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.




⚠ WARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Passenger Airbag Off Indicator

The indicator comes on to alert you that the front passenger's front airbag has been turned off. This occurs when the front passenger's weight sensors detect 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

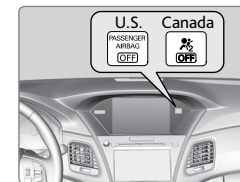

Infants and small children should always ride properly restrained in a back seat.

Objects placed on the front passenger's seat can also cause the indicator to come on.

If the front passenger's seat is empty, the passenger's front airbag will not deploy and the indicator will not come on.


If the indicator comes on with no occupant or objects in the front passenger's seat, something may be interfering with the weight sensors, such as:

- An object hanging on the seat or in the seat-back pocket.
- A child seat or other object pressing against the rear of the seat-back.
- A rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is forced against an object on the seat or floor behind it.
- An object placed under the front passenger's seat.

If none of these conditions exist, have your vehicle checked by a dealer as soon as possible.

The passenger airbag off indicator may come on and go off repeatedly if the total weight on the seat is near the airbag cutoff threshold.

Airbag System Components

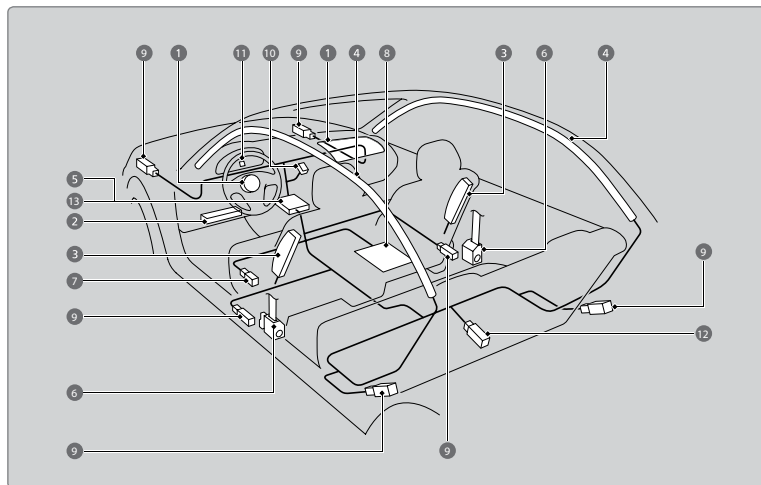

- 1 Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS AIRBAG**.
- 2 Driver's knee airbag. The knee airbag is stored under the steering column. It is marked **SRS AIRBAG**.
- 3 Two side airbags, one for the driver and one for the front passenger. The airbags are stored in the outer edges of the seat-backs. Both are marked **SIDE AIRBAG**.
- 4 Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked **SIDE CURTAIN AIRBAG**.
- 5 An electronic control unit that, when the vehicle is on, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners, and other vehicle information. During a crash even the unit can record such information.
- 6 Automatic front seat belt tensioners. The driver's and front passenger's seat belts incorporate sensors that detect whether or not they are fastened. The front seat belt tensioners also include the e-pretensioners.
- 7 A driver's seat position sensor. If the seat is too far forward, the airbag will inflate with less force.
- 8 Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is 65 lbs (29 kg) or less (the weight of an infant or small child).
- 9 Impact sensors that can detect a moderate-to-severe front or side impact.

- 10 An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
- 11 An indicator on the instrument panel that alerts you to a possible problem with the airbag system or seat belt tensioners.
- 12 Safing sensor
- 13 A rollover sensor that can detect if your vehicle is about to roll over and signal the control unit to deploy both side curtain airbags.

Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

Do not remove or modify a front seat without first consulting a dealer

This would likely disable the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact an Acura dealer. For U.S. vehicles, call Acura Client Relations at (800) 382-2238. For Canadian vehicles, call Acura Client Services at (866) 78-ACURA.

Child Safety

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle collisions are the number one cause of death of children ages 12 and under.

The National Highway Traffic Safety Administration and Transport Canada recommend that all children ages 12 and under be properly restrained in a rear seat. Some states or provinces/territories have laws restricting where children may ride.

To reduce the number of child deaths and injuries, every state, Canadian province, and territory requires that infants and children be properly restrained when they ride in a vehicle.

■ Protecting Child Passengers – Important Considerations

- An inflating front or side airbag can injure or kill a child sitting in the front passenger's seat.
- A child in the front passenger's seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.
- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the lap belt portion of the lap/shoulder belt or the lower anchors of the LATCH system.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows, or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls, causing it to move unexpectedly.

⚠️ WARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

⚠️ WARNING


Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

■ Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat maker's weight or height limit for the seat, and the infant is at least one year old. Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Child seats must be placed and secured in a rear seating position. Rear-facing child seats should never be installed in a forward-facing position.

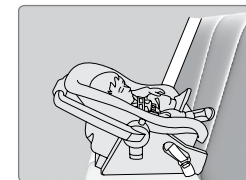

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position. Make sure that there is no contact between the child seat and the seat in front of it. It can also interfere with proper operation of the front passenger's advanced front airbag system. If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied. Or, you may wish to get a smaller rear-facing child seat.

⚠️ WARNING

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.


Always place a rear-facing child seat in the rear seat, not the front.

■ Protecting Smaller Children

If a child is at least one year old and within the weight range indicated by the child seat manufacturer, the child should be properly restrained in a firmly secured forward-facing child seat.

We strongly recommend placing a forward-facing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.

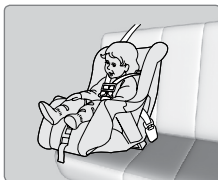

⚠️ WARNING

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible, and properly restrain the child.

■ Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for Children). Some have a rigid-type connector, while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions as well as the instructions in this guide. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

Important considerations when selecting a child seat





Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213 or Canadian Motor Vehicle Safety Standard 213.

■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.



1. Locate the lower anchors under the marks.
2. Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat. Make sure that the lower anchors are not obstructed by the seat belt or any other object.
3. Open the tether anchor cover behind the head restraint.
4. Raise the head restraint to its highest position, then route the tether strap between the head restraint legs, and secure the tether strap hook onto the anchor.
5. Tighten the tether strap as instructed by the child seat maker.
6. Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
7. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

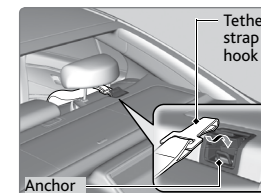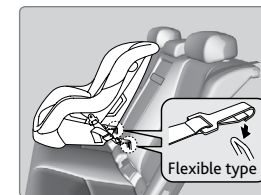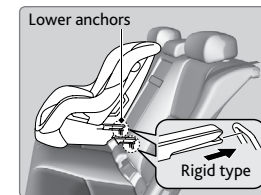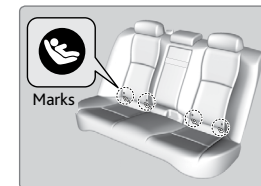

■ Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed with a lap/shoulder belt in any rear seat or, if absolutely necessary, the front passenger seat.

1. Place the child seat on the vehicle seat.
2. Route the seat belt through the child seat according to the seat manufacturer's instructions, and insert the latch plate into the buckle. Insert the latch plate fully until it clicks.
3. Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
4. Let the seat belt completely wind up into the retractor, then try to pull it out to make sure the retractor is locked. If you are able to pull the shoulder belt out, the lockable retractor is not activated. Pull the seat belt all the way out, and repeat steps 3 – 4.
5. Grab the shoulder part of the seat belt near the buckle, and pull up to remove any slack from the lap part of the belt. When doing this, place your weight on the child seat and push it into the vehicle seat.
6. Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt; less than one inch of movement should occur near the seat belt.
7. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.


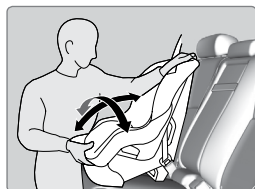
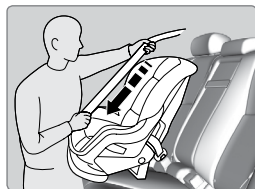


To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

■ Adding Security with a Tether

A tether anchorage point is provided behind each rear seating position. A child seat that is installed with a seat belt and comes with a tether can use the tether for additional security.

1. Locate the appropriate tether anchorage point and lift the cover.
2. Raise the head restraint to its highest position, then route the tether strap through the head restraint legs. Make sure the strap is not twisted.
3. Secure the tether strap hook onto the anchor.
4. Tighten the tether strap as instructed by the child seat manufacturer.

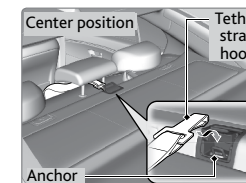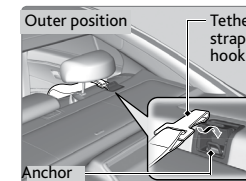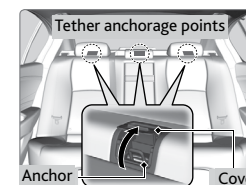

■ Protecting Larger Children

When a child is too big for a child seat, secure the child in a rear seat using the lap/shoulder seat belt.

Have the child sit upright and all the way back, then ensure the following:

- The child's knees bend comfortably over the edge of the seat.
- The shoulder belt crosses between the child's neck and arm.
- The lap part of the seat belt is as low as possible, touching the child's thighs.
- The child can stay seated for the whole trip.



If a lap/shoulder belt cannot be used properly, position the child in a booster seat in a rear seating position. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

Some U.S. states and Canadian provinces/territories require children to use a booster seat until they reach a given age or weight (e.g., 6 years or 60 lbs). Be sure to check current laws in the state or province/territory where you intend to drive.


⚠️ WARNING

Allowing a child age 12 or under to sit in the front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Safety Label Locations

Safety labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

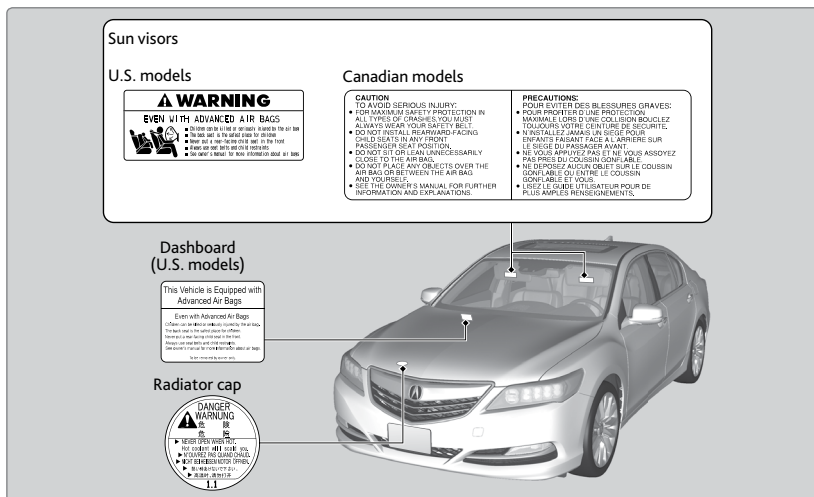

Reporting Safety Defects

In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada


If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Honda Canada, Inc., and you may also inform Transport Canada.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may lead to a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Honda Canada, Inc.

To contact Transport Canada's Defect Investigations and Recalls Division, you may call 1-800-333-0510. For more information on reporting safety defects or about motor vehicle safety, go to <http://www.tc.gc.ca/roadsafety>.

INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.

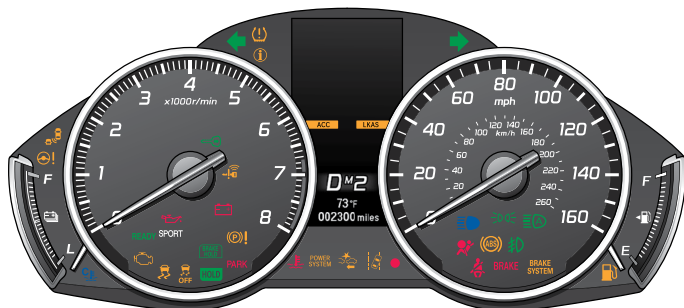

Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

BRAKE Brake system



- Brake fluid is low.
- There is a problem with the brake system.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using regenerative braking. Have your vehicle repaired immediately.



Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood and check the oil level, and add oil if necessary (see page 123). If the indicator does not turn off, have your vehicle repaired immediately.



Malfunction indicator lamp (check engine light)

- The emissions control system may have a problem.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place, and turn off the vehicle for 10 minutes or more.



Charging system

The 12-volt battery is not charging. Turn all electrical items off, but do not turn the vehicle off to prevent further battery discharge. Have your vehicle repaired immediately.



ABS (Anti-lock Brake System)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



Electric Power Steering (EPS)

There is a problem with the electric power steering system. Stop in a safe place and restart the vehicle.



Tire Pressure Monitoring System (TPMS)

(Blinks and stays on) There is a problem with the tire pressure monitoring system, or a spare tire* is installed.



Keyless Access system

There is a problem with the keyless access system.



Vehicle Stability Assist (VSA) system

There is a problem with the VSA system or hill start assist system.



Brake system

There is a problem with one of the braking systems. Avoid high speeds and sudden braking. Your vehicle still has normal braking ability.



Blind Spot Information (BSI)

There is a problem with the system or the sensor is blocked.



Adaptive Cruise Control (ACC) with Low Speed Follow

There is a problem with the system, or the radar sensor is blocked.



Lane Keeping Assist System (LKAS)

There is a problem with the system, or the camera is blocked.



Collision Mitigation Braking System (CMBS)

There is a problem with the system, the system is turned off, the temperature is too high, or the camera is blocked.



Road Departure Mitigation (RDM)

There is a problem with the system, the temperature is too high, or the camera is blocked.



Electric parking brake system

There is a problem with the electric parking brake system. Stop in a safe place and avoid using the parking brake.



Electric parking brake

(Blinks) There is a problem with the electric parking brake system.



High temperature

Blinks when the engine coolant temperature goes up, and stays on if the temperature continues to rise. Drive slowly or pull over to prevent overheating.

*if equipped




Low temperature

The engine coolant temperature is low. If the indicator stays on, there may be a problem with the temperature sensors.



Power system

There is a problem with the electric vehicle system. Have your vehicle checked by a dealer immediately.

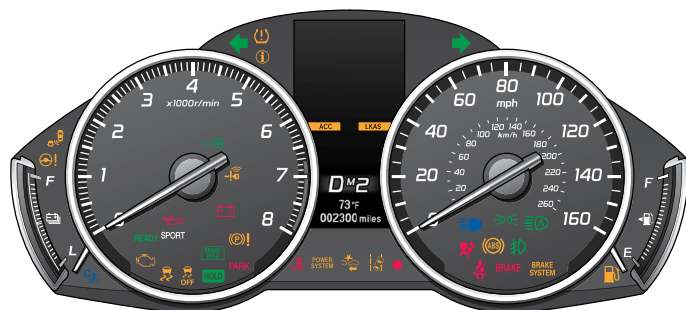

Condition Indicators

These indicators may require you to perform an action.



Electric parking brake

Release the parking brake before driving. You will hear a beep if you drive with it not fully released.



Seat belt reminder

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.



Low fuel

- Refuel as soon as possible.
- If the indicator blinks, there is a problem with the fuel gauge. See your dealer.



Low tire pressure

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary.



System message

When a condition or malfunction indicator comes on, a message also appears on the multi-information display. Check the display for more information.



Immobilizer

Your remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off, and then on again. If it continues to blink, there may be a problem with the system. See your dealer.



READY

The vehicle is ready to drive.

On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



BSI off



VSA engaged (blinks)



ACC on



Turn signals/hazards on



LKAS on



Exterior lights on



SPORT mode on



High beams on



Automatic brake hold on



Fog lights on



Automatic brake hold activated



CMBS™ off



Auto high beam on



Security system alarm set

Gauges

These gauges include real-time information about your driving.

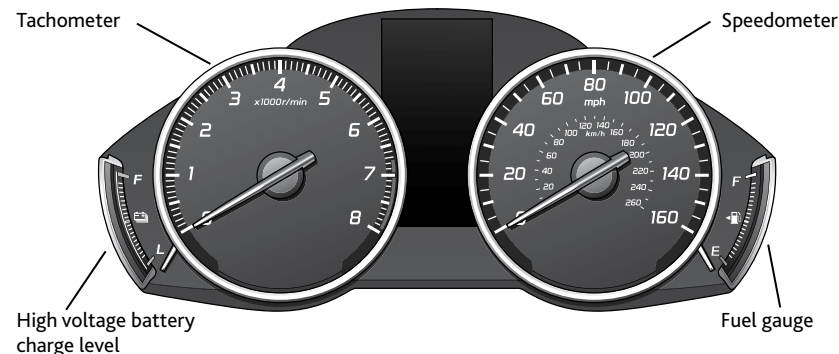


TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

ACURALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS


CLIENT INFORMATION

VOICE COMMAND INDEX

INDEX

Head-Up Display

Projects a virtual, transparent image onto the windshield when the vehicle is on which allows you to view information while keeping your eyes on the road.

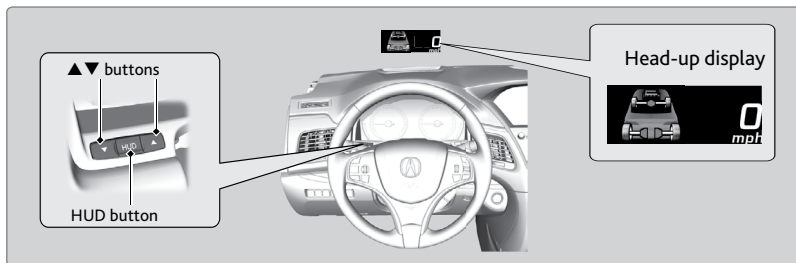

Turning the Display On or Off


Press the HUD button to turn the display on or off. Press the ▲ or ▼ button to adjust the display position on the windshield.

Press and hold the HUD button to display the brightness level. Press the ▲ or ▼ button to adjust the brightness.

Changing the Display

Choose what content to display. Use the right selector wheel on the steering wheel to make and enter selections.

1. Scroll to the Head-Up Display Content screen, and select it. Display options are shown in the head-up display and the MID.
2. Scroll through the display options, and select your choice.

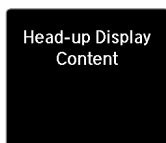

Driving-Related Displays

Below are the main display options shown on the head-up display.



 
Power distribution monitor, vehicle speed (main)




Adaptive Cruise Control with Low Speed Follow, vehicle speed



Tachometer, gear position indicator, vehicle speed



Vehicle speed

 

Turn-by-turn directions or compass, vehicle speed

Power Distribution Monitor


Displays the vehicle's hybrid power flow and Sport Hybrid Super Handling All-Wheel Drive™ torque distribution.

Power Distribution

	Head-up display	Indicator color
Power is supplied by the motors and the engine.	<p>Power flow indicator</p> <p>Engine icon (engine on)</p>	Blue
Power is only supplied by the motors.	<p>Power flow indicator</p> <p>Engine icon (engine off)</p>	Blue
Power is only supplied by the engine.	<p>Power flow indicator</p> <p>Engine icon (engine on)</p>	Blue
The motors charge the high voltage battery.	<p>Power flow indicator</p> <p>Engine icon (engine on)</p>	Green


Torque Distribution

This monitor can also be shown on the color information display. Press the INFO button and use the interface dial to select Power Distribution Monitor.

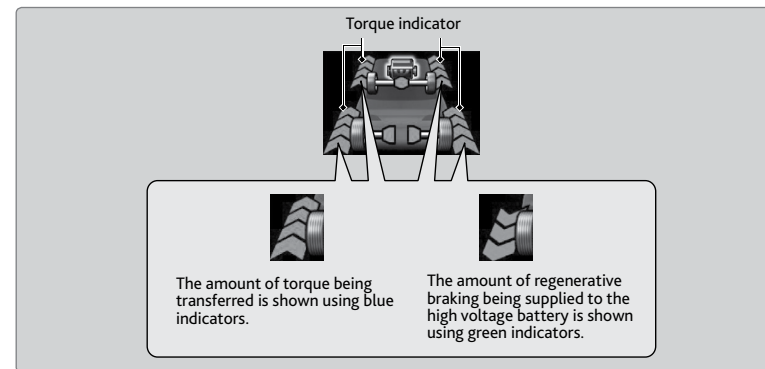


Multi-Information Display

Consists of several displays that provide you with useful information.

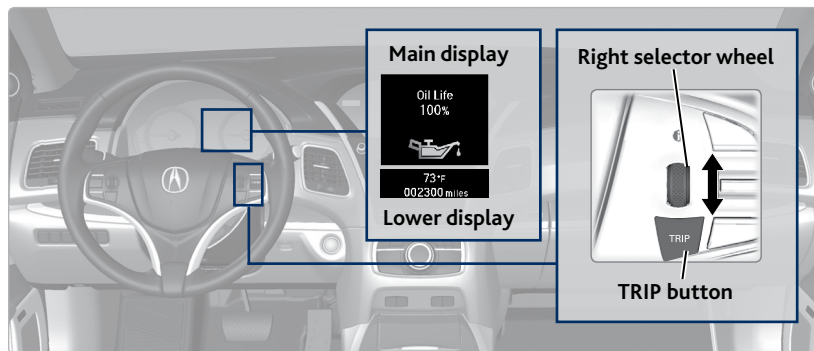


Main Displays

Roll the right selector wheel to scroll through the main displays.

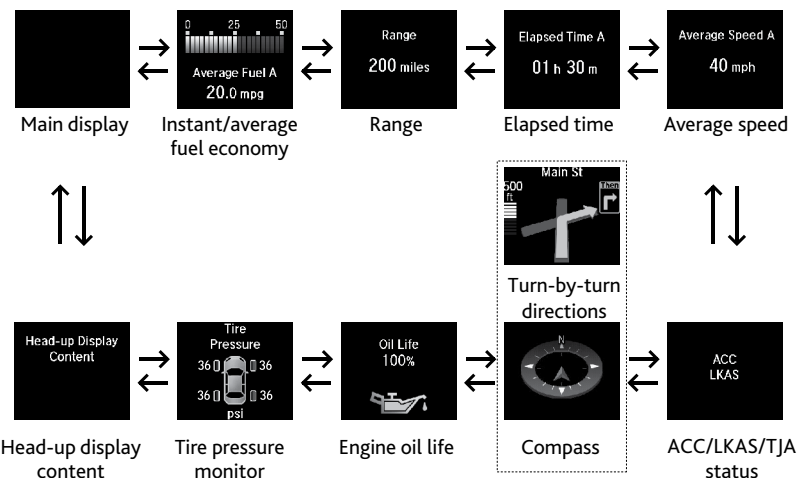

Lower Displays

Press the TRIP button to scroll through the lower displays.

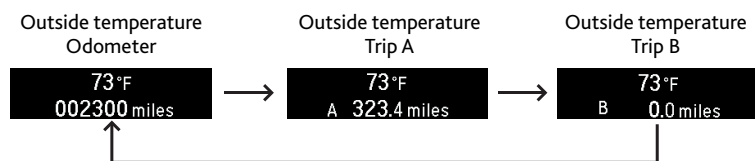

VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

Using the Remote Transmitter

Lock or unlock the doors and trunk.

ENGINE HOLD button*: After pressing the Lock button once, press and hold to remotely start the vehicle (see page 82).

LED indicators*: Check door lock or engine status (see page 82).

Lock button: Press to lock the doors and trunk. Press again for verification.

Unlock button: Press once to unlock the driver's door. Press again to unlock all doors and the trunk.

Trunk button: Press and hold to unlock and open the trunk.

Panic button: Press and hold to sound the alarm for 30 seconds. Press again to cancel.

Release knob (front or back of key): Slide the knob to release the built-in key for valet use.

Release Knob

Built-in Key

NOTICE

Leaving the remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.

*if equipped


Keyless Access System

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and trunk without handling the transmitter.


■ Unlocking/Locking the Doors

To unlock: Grab the driver's door handle when the vehicle is off to unlock the driver's door.

Grab the front passenger's or rear door handle when the vehicle is off to unlock all doors.

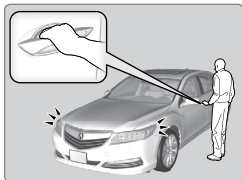


To lock: Press the door lock button on the front or rear door handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.

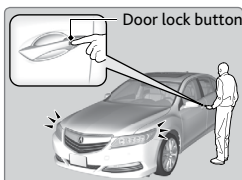

■ Opening the Trunk

Press the trunk release button under the trunk handle to unlock and open the trunk. The vehicle can be on or off.

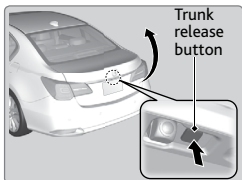


Door Operation from Inside the Vehicle

Use these methods to lock or unlock the doors.

■ Using the Lock Tab

To unlock: Pull the lock tab rearward. When you unlock the door using the lock tab on the driver's door, only the driver's door will unlock.


To lock: Push the lock tab forward. When you lock the door using the lock tab on the driver's door, all the other doors lock at the same time.

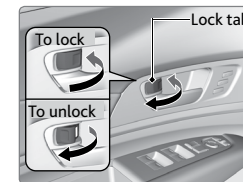

■ Using the Master Door Lock Switch

To unlock: Press the unlock side of the switch to unlock all doors.


To lock: Press the lock side of the switch to lock all doors.

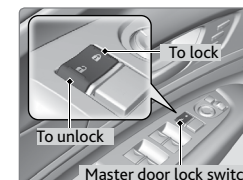

■ Using the Front Door Inner Handle

Pull the front door inner handle. The door unlocks and opens in one motion. Unlocking and opening the driver's door from the inner handle unlocks all other doors.

Do not pull a front door inner handle while the vehicle is moving.

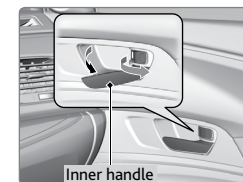


■ Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.


Slide the lever in the rear door to the lock position, and close the door.

Open the door using the outer door handle.

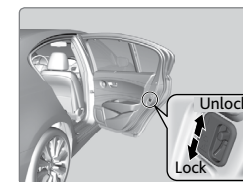

■ Using the Trunk Opener

Press the trunk release button on the driver's door to open the trunk.

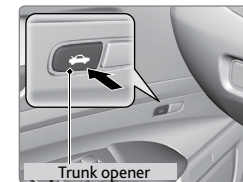


Walk Away Auto Lock

When you walk away from the vehicle while carrying the remote transmitter, the doors and trunk can automatically lock if the following conditions are met:

- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the hatch are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

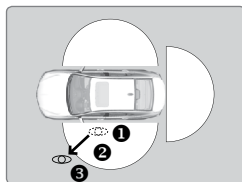

To turn on this feature, follow the steps below:

1. Press the SETTINGS button.
2. Select Vehicle Settings, then Keyless Access Setup, then Walk Away Auto Lock.
3. Select On.

Power Window Operation


The power windows can be opened and closed when the vehicle is on by using the switches on the doors. The switches on the driver's side can be used to open and close all the windows.

Automatic Operation

To open: Push the switch down firmly.

To close: Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch again briefly.

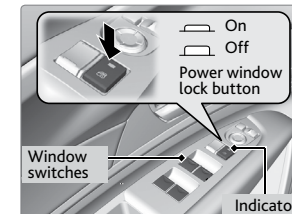

Manual Operation

To open: Push the switch down lightly.

To close: Pull the switch up lightly.

Release the switch when the windows reach the desired position.

Power Window Lock

Push in the power window lock button so only the driver's window can be operated. An indicator appears when the lock is on.

⚠ WARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

Power Moonroof Operation


The moonroof can be opened and closed when the vehicle is on by using the switch on the ceiling.

Automatic Operation

To open: Push the switch back firmly, then release.

To close: Push the switch forward firmly, then release.

The moonroof opens or closes completely. To stop the moonroof at any time, push the switch briefly.

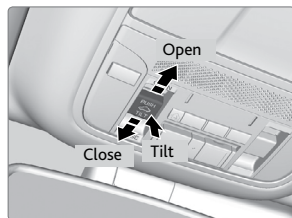

Manual Operation

To open: Push and hold the switch back until the desired position is reached.

To close: Push and hold the switch forward until the desired position is reached.

Moonroof Tilt

To tilt: Push the center of the switch.

To close: Push the switch forward firmly, then release.

NOTICE

Opening the moonroof in below freezing temperatures or when it is covered with snow or ice can damage the moonroof panel or motor.

WARNING

Closing the moonroof on someone's hands or fingers can cause serious injury. Make sure your passengers are away from the moonroof before closing it.

Interior and Exterior Lights

Operate interior and exterior lights when the vehicle is on or off.


Exterior Lights


Rotate the switches on the lever to operate the exterior lights. Push the lever forward to turn on the high beams. Return the lever to its original position for low beams.


OFF All exterior lights are off.

AUTO Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the vehicle is on. Headlights automatically come on after the wipers are engaged for a certain time.

 Turn on exterior lights except headlights.

 Turn on all exterior lights including headlights.

 Turn on fog lights.

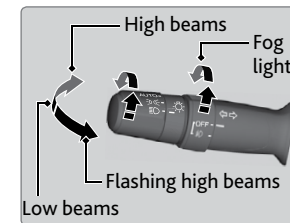


Brightness Control

Adjust instrument panel brightness when the vehicle is on.

To brighten: Press the + button.

To dim: Press the - button.

A beep sounds when the brightness reaches minimum or maximum.

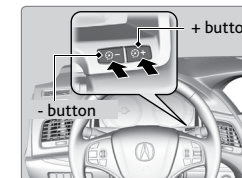


Interior Lights

Lights are located on the ceiling.

ON position: Interior lights remain on.


Door-activated position: Interior lights come on when any of the doors are opened, the driver's door is unlocked, or the vehicle is turned off.

OFF position: Interior lights remain off.

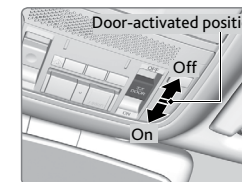

Map Lights

Press the map lights to turn them on or off.

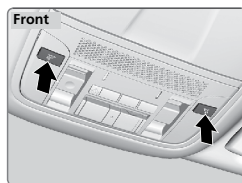


Auto High-Beam System

Automatically changes the low beam headlights to high beam headlights when necessary.

How It Works

When you are driving at night above 25 mph (40 km/h) and the headlight lever is in the low beam position with the switch rotated to AUTO, the system changes between low and high beams depending on the surrounding conditions.

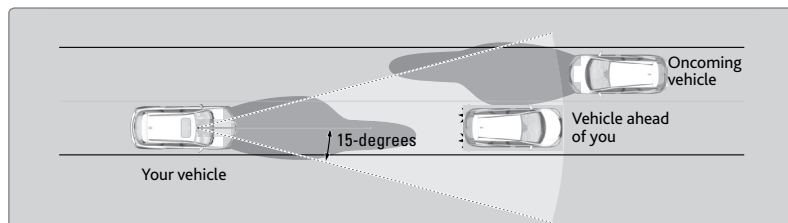

If a vehicle is detected ahead of you, the headlights stay in low beams. If the system does not detect any vehicles ahead of you, the headlights change to high beams.

Certain conditions, such as weather and brightness of other vehicles' lights, can affect system operation.

Turning the System On or Off

Make sure the headlight lever is in the low beam position with the switch rotated to the AUTO position. The auto high-beam system indicator appears when the system is on.

The system cancels temporarily when you drive at sustained speeds below 15 mph (24 km/h), the vehicle speed is below 6 mph (10 km/h), or the windshield wipers run at high speed for more than a few seconds.

To disable the system: When the vehicle is on and parked, pull the headlight lever towards you and hold it for 40 seconds. The auto high-beam indicator blinks twice.

To re-enable the system: When the vehicle is on and parked, pull the headlight lever towards you and hold it for 30 seconds. The auto high-beam indicator blinks once.

To temporarily cancel operation, do either of the following:

- Flash the high beams by moving the lever toward you. Flash the high beams again to resume auto high beam operation.
- Engage high beams by moving the lever into the high beam position. Return the lever to the low beam position to resume auto high beam operation.

If you find the timing of beam changes inconvenient for driving, change the beams manually.

For the system to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windshield around the camera clean. When cleaning the windshield, be careful not to apply windshield cleanser to the camera lens.
- Do not attach an object, sticker or film in the area around the camera.
- Do not touch the camera lens.

If the camera receives a strong impact or requires repair, consult a dealer. If the **Auto High-Beam Cannot Operate: Clean Windshield** message appears, park your vehicle in a safe place. Wipe away debris blocking the windshield, then start driving again. If the message remains on even after driving for a while with the clean windshield, have your vehicle checked by a dealer.


Enabling high sensitivity: Pull the light switch lever toward you and hold it for two minutes. The auto high-beam indicator in the meter will blink three times. When the power mode is set to VEHICLE OFF, sensitivity is returned to normal.



One-Touch Turn Signal


Use this quick and convenient method to signal a lane change.

- Lightly push the turn signal lever up or down for a three-blink sequence.
- For a continuous signal, push the lever up or down until it locks into place.

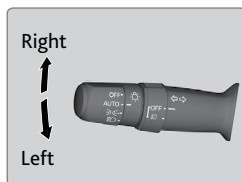

Wiper Operation

The windshield wipers and washers can be used when the vehicle is on. Move the wiper lever up or down to the desired position.

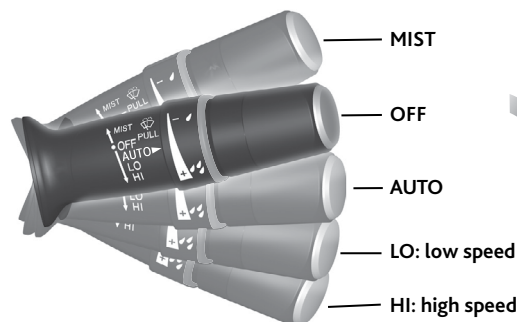

Pull toward you to spray washer fluid.

Headlight-Wiper Integration*

When the headlights are in the AUTO position, they automatically turn on when the front wipers operate several times within a certain interval. The headlights turn off shortly after the wipers are turned off, or if there is enough ambient light.


**if equipped*

Automatic Intermittent Wipers

When you move the lever to the AUTO position while driving in rainy weather, the wipers operate based on the amount of detected rainfall.

Put the lever in the AUTO position only when driving in rainy weather. Return the lever to the OFF position when rain stops.

Rotate the adjustment ring to adjust the rainfall sensor sensitivity.

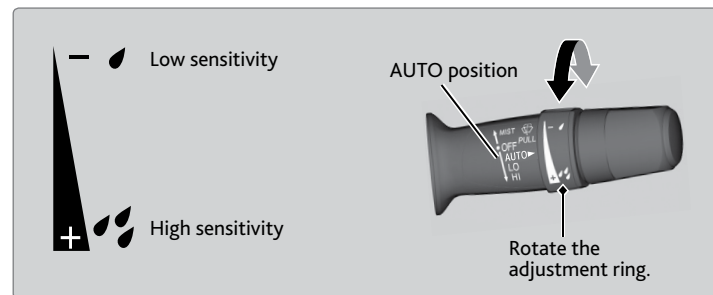

NOTICE

Always ensure the wiper lever is in the OFF position before entering a car wash to prevent severe damage to the windshield wiper system.

NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched, or the rubber blades will get damaged.


In cold weather, the blades may freeze to the windshield, becoming stuck. Operating the wipers in this condition may damage the wipers. Use the defroster to warm the windshield, or manually clear the windshield of ice and snow before turning on the wipers.

Headlight Washers

Canadian models

Turn the headlights on. Press the headlight washer button to operate the washers.

The headlight washers also operate when you first turn on the windshield wipers.

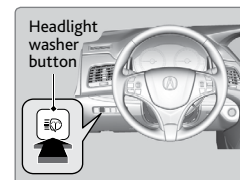


Adjusting the Seats


Make seat adjustments before driving to ensure the best comfort and safety.

■ Adjusting the Front Seats

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright and well back in the seat, adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted so that it is as far back from the front airbag in the dashboard as possible.

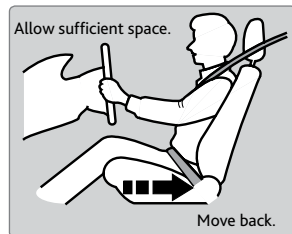

The National Highway Traffic Safety Administration and Transport Canada recommend that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.

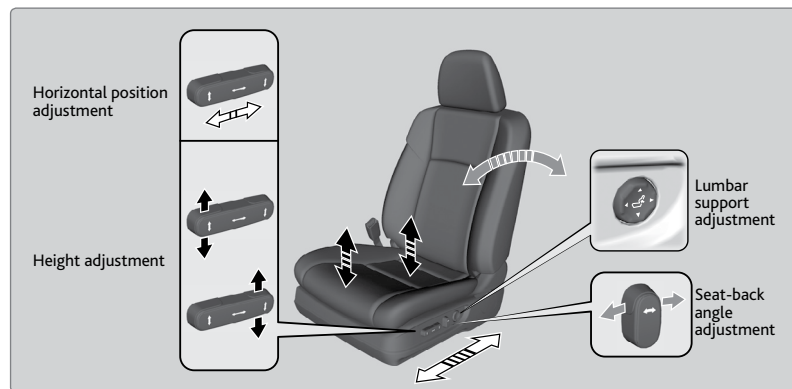

⚠ WARNING

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

⚠ WARNING

Reclining the seat-back too far can result in serious injury or death in a crash. Adjust the seat-back to an upright position, and sit well back in the seat.

**if equipped*

⚠ WARNING


Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

■ Adjusting the Head Restraints

Your vehicle is equipped with head restraints in all seating positions. Head restraints are most effective for protection against whiplash and other rear-impact crash injuries.

The center of the back of the occupant's head should rest against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.


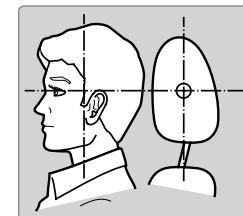


To raise the head restraint: Pull it upward.

To lower the head restraint: Push it down while pressing the release button.

To remove the head restraint: Pull the restraint up as far as it will go. Then push the release button, and pull the restraint up and out.

To reinstall a head restraint: Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

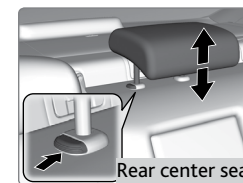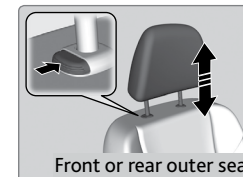

For a head restraint system to work properly:

- Do not hang any items on the head restraints or from the restraint legs.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

⚠ WARNING

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

⚠ WARNING


Failure to reinstall, or correctly reinstall, the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

■ Floor Mats


Position the front and rear seat floor mats properly, and anchor them. If they are not properly positioned, the floor mats can interfere with the front seat functions.

Do not put additional floor mats on top of the anchored mats.

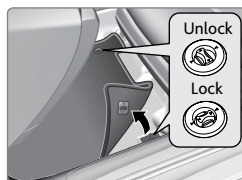**Driving Position Memory System**

You can store two driver's seat, steering wheel, and door mirror positions into memory when the vehicle is on. When you unlock and open the driver's door, the items adjust automatically to one of the two preset positions. Press one of the memory buttons to recall previously stored positions.

1. Adjust the seat, steering wheel, and mirrors to your preferred positions.
2. Press SET. You will hear a beep and the memory button indicator light will blink.
3. Press and hold memory button 1 or 2. The indicator light will stay lit and you will hear two beeps.

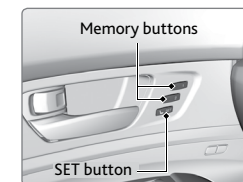


Lumbar positions cannot be stored.

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

Push and hold the adjustment switch to move the steering wheel in, out, up, or down.

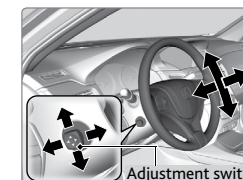**⚠ WARNING**

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.


Adjust the steering wheel only when the vehicle is stopped.

Adjusting the Mirrors

Adjust the angle of the mirrors for the best visibility when you are sitting in the correct driving position.

Automatic Dimming Rearview Mirror

When driving after dark, the automatic dimming function reduces the glare in the rearview mirror from headlights behind you. The feature is always active. The function cancels only when the gear position is in Reverse (R).

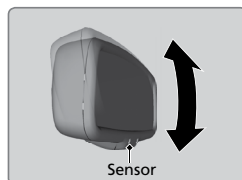


Power Door Mirrors

Adjust the power door mirrors when the vehicle is on.

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the center position.

Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

Folding door mirror button: Press to fold the door mirrors in or out.

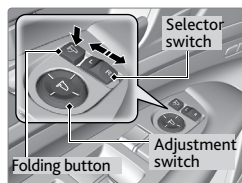

Automatic Dimming* Power Door Mirrors

When driving after dark, the automatic dimming* feature reduces glare from headlights behind you. The auto dimming function cancels only when the transmission is in Reverse (R).

Reverse Tilt Door Mirrors

Either side door mirror can tilt downward when you shift to Reverse (R) to improve visibility on the selected side of the vehicle when reversing.

When in Reverse, slide the selector switch to the left or right side. The selected door mirror tilts down.

The mirror returns to its original position when you shift out of Reverse.



**if equipped*

Customized Features

You can easily customize many features of your vehicle. The customized settings are recalled every time you unlock the driver's door with the remote (Driver 1 or Driver 2). Settings are unique to each remote.



How to Change a Setting


The vehicle must be in Park (P) and the power mode in ON. Use the interface dial to make and enter selections.

1. Press the SETTINGS button.
2. Select an option (System, Vehicle, Camera, Audio, Phone, Info, and Navi).
3. Select a setting option, and make your preferred changes.
4. Press BACK to exit out of the menus.

Setting the Clock


Use the Settings menu on the audio/information screen.

1. Press the SETTINGS button.
2. Select System Settings.
3. Select Clock, then Clock Adjustment.
4. Rotate the interface dial to change the hour value. Press the interface dial to select minutes, and rotate to change the value. Press the interface dial to exit the screen.
5. Press BACK to exit out of each menu.

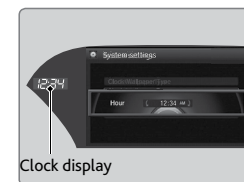


HomeLink® Universal Transceiver

Program your vehicle to operate up to three remote-controlled devices around your home—such as garage doors, lighting, or home security systems—using the buttons on the ceiling.

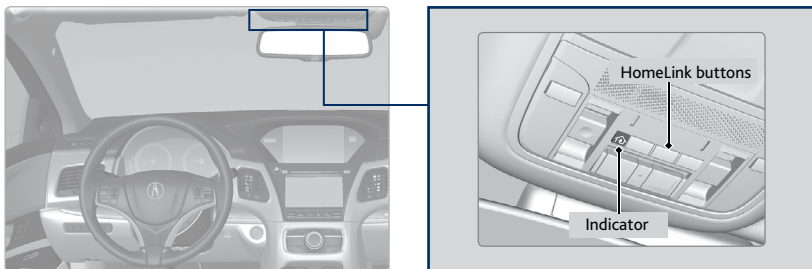

■ Training a Button

Park near the system you want to program, and follow the instructions in the flowchart below.

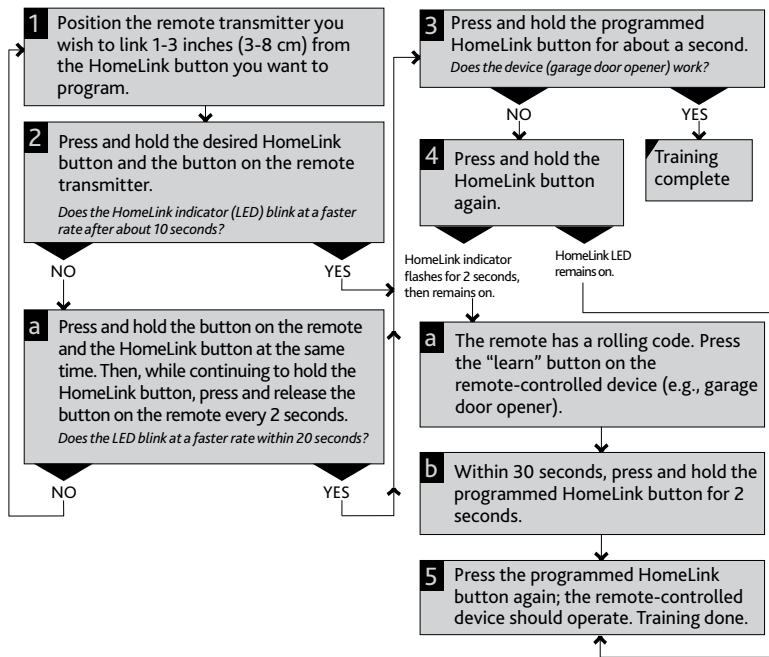

To retrain a button or erase codes, see the Owner's Manual at owners.acura.com (U.S.) or www.myacura.ca (Canada). If you need help, call HomeLink at (800) 355-3515 or visit www.homelink.com.

Climate Control System

Set your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the On-Demand Multi-Use Display (ODMD) touchscreen or buttons below the screen to operate the system.

On-Demand Multi-Use Display (ODMD)
When you select a climate control icon, a new screen appears where you can make adjustments or change settings.

Driver's side vent mode

Driver's side temperature control

A/C: Turn the air conditioning on or off.

SYNC: Set the passenger's side temperature to the same as the driver's side.


Fan speed

Recirculation/fresh air mode

Shortcuts (Climate tab): Store or select two climate control settings.

Passenger's side vent mode

Passenger's side temperature control

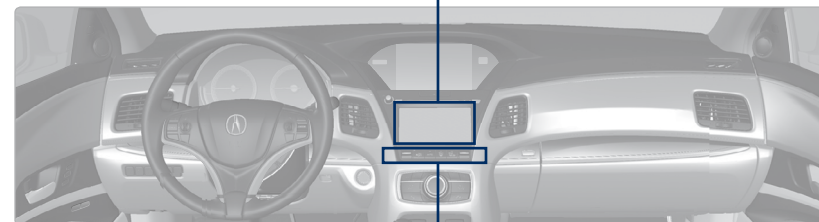

Climate control buttons

Driver's side temperature switch

ON/OFF button

Windshield defroster button


Rear window defogger/heated mirror button

Passenger's side temperature switch

AUTO button: Press, then adjust the temperature to your preferred setting.

Rear Temperature Control Dial


Adjust the rear temperature control dial to set the rear passenger temperature differently than the front passengers.

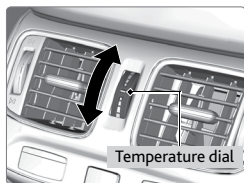

Heated Steering Wheel

Heat the steering wheel to a comfortable temperature when the vehicle is on.


Press the heated steering wheel button. Press the button again to turn it off.

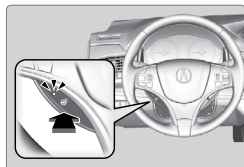

Power Rear Sunshade*

Press the button on the ceiling to raise or lower the sunshade when the vehicle is on. There is also a button on the back of the center console.

Use the sunshades only when the windows are fully closed. **If the window is open this may cause the shade to unhook and blow off, possibly injuring anyone sitting near the window.**

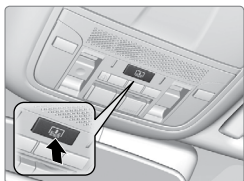

⚠ WARNING

Opening or closing the sunshade on someone's hands or fingers can cause serious injury.

Make sure all hands and fingers are clear of the sunshade before opening or closing it.

**if equipped*

Seat Heaters* and Ventilation*

Quickly warm or ventilate the seats when the vehicle is on.

Front Seat Heaters and Ventilation


Press the seat heater or ventilation button in the front console. An indicator (red for seat heater, blue for seat ventilation) appears for the selected setting.

Once: HI setting (three indicators)

Twice: MID setting (two indicators)

Three times: LO setting (one indicator)

Four times: OFF setting (no indicators)

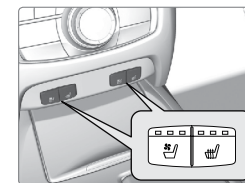

Rear Seat Heaters


Press the seat heater button on the back of the center console. An indicator appears for the selected setting.

Once: HI setting (three indicators)

Twice: MID setting (two indicators)

Three times: LO setting (one indicator)

Four times: OFF setting (no indicators)

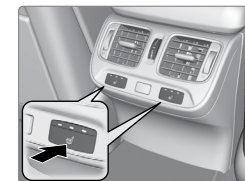

⚠ WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**if equipped*

AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.


Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.

■ USB Port

Connect a USB flash drive or other audio device, such as an iPod or iPhone®.

1. Open the center console. Open the USB port cover.
2. Install the flash drive or cable connector to the USB port.

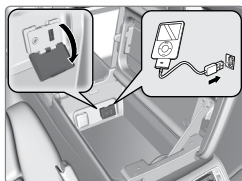


iPod and iPhone are trademarks of Apple, Inc.

■ Auxiliary Input Jack

Connect standard audio devices with a 1/8-inch (3.5 mm) stereo miniplug.

1. Open the center console. Open the AUX cover.
2. Connect the device to the input jack. Use the device to control the audio.

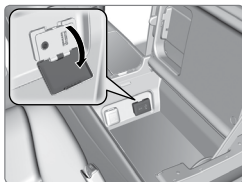


Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

■ Accessory Power Socket

Open the center console. Open the socket cover to use it when the vehicle is on.

There is an additional power socket located in the front center pocket.

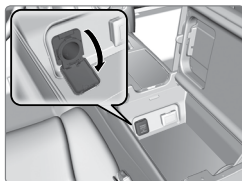

NOTICE


Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Steering Wheel Controls

Operate certain functions of the audio system using the steering wheel controls.

SOURCE button: Cycle through available audio modes.

Left selector wheel: Roll up or down to adjust volume. Press to mute. Move (or hold) left or right to change stations or tracks.

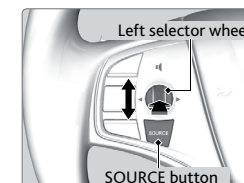

FM/AM/SiriusXM Radio

Move right or left for the next or previous station. Move and hold right or left for the next or previous strong station.

CD/HDD/iPod/USB/Bluetooth Audio

Move right or left for the next or previous track. Move and hold right or left for the next or previous folder (CD/USB).

Pandora

Move right for the next song. Move and hold right or left for the next or previous station.

■ Adjusting the Sound

Adjust various sound settings using one of the below methods.

From the ODDM

Touch items on the screen to make selections.


1. Select the sound icon.
2. Select the icons to adjust the setting for each item.



From the Settings menu

Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Audio Settings.
3. Select Sound.
4. Select the setting to adjust.
5. Adjust the setting to the desired level.
6. Press BACK to exit the menu.

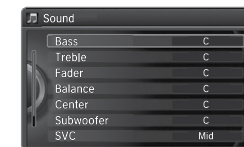

On-Demand Multi-Use Display (ODMD)

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

ODMD controls

Volume knob: Adjust the volume level.


Audio Source: Change the audio source. Select Edit Order to arrange audio icons to your preference.

Power button: Power on/off the system.

Sound: Adjust sound settings.

Shortcuts (Audio tab): Store or select up to six AM, FM, or XM stations or HDD tracks.

More: Change screen and sound settings, or display menu options.

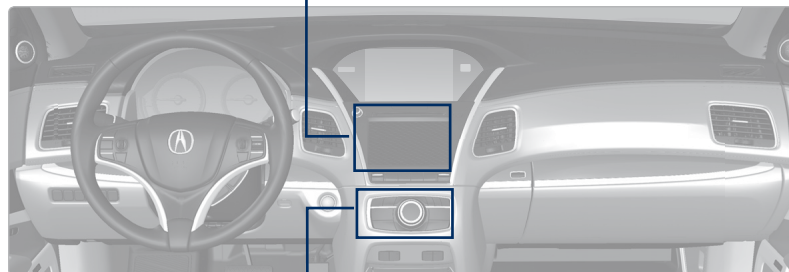

Audio buttons

AUDIO button: Display the audio screen.

BACK button: Return to the previous display.

***> button:** Adjust the upper screen brightness. Use the interface dial to make adjustments.

Interface dial: Move up, down, left, and right. Rotate and press ENTER to make selections in the upper display.

MENU button: Display menu items.

SETTINGS button: Choose Audio Settings.

FM/AM Radio

Play FM or AM radio stations.

Audio Source: Select the FM or AM icon.

Scan: Scan for stations with a strong signal.

Tune: Change the station.

Presets: To store a station, tune to the desired station, select Presets, and select and hold the desired preset number. Select a preset station once stored.

TAG*: Tag songs from HD Radio and store to a connected iPod or iPhone.

Skip/seek: Find a station with a strong signal.

Interface dial (from the Audio screen): Rotate and press to select the station list or presets in the upper display.

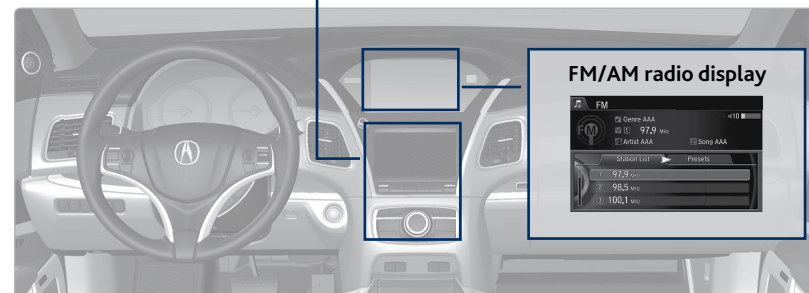


TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

ACURALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS



CLIENT INFORMATION

VOICE COMMAND INDEX

INDEX

SiriusXM® Radio

Available on a subscription basis only. For more information or to subscribe, contact your dealer or visit www.siriusxm.com/subscribenow (U.S.) or www.siriusxm.ca/subscribe-now (Canada).

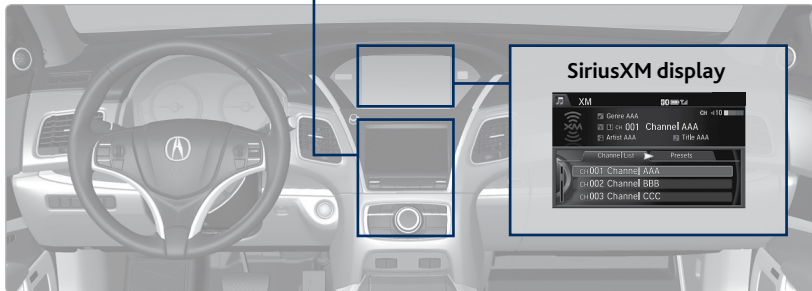
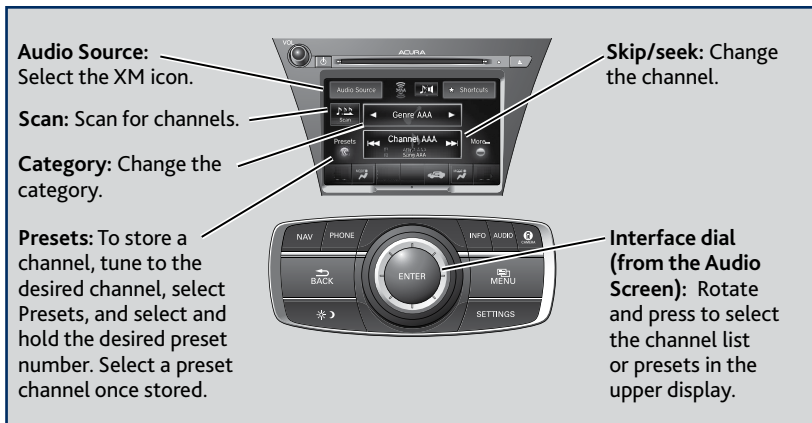


Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico. XM® is a registered trademark of Sirius XM Radio, Inc.

Compact Disc (CD) or USB Flash Drive

The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

For playing a USB flash drive, connect your device to the USB port (see page 50).

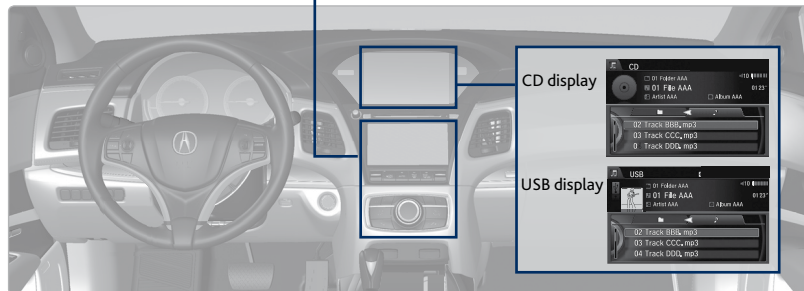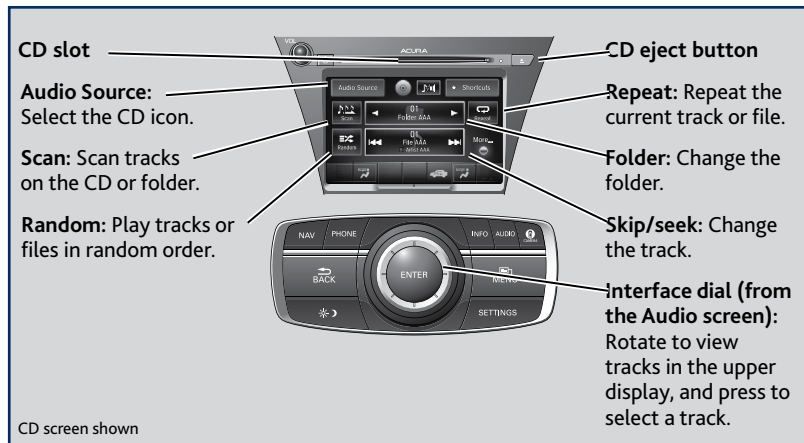

■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.) or folder.
4. Select the song you want to play.



NOTICE

Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck inside or damage the audio unit.

Hard Disk Drive (HDD) Audio

When music CDs are inserted, they are automatically recorded onto the built-in HDD for later playback.

Audio Source: Select the HDD icon.

Scan: Scan all tracks or the first track on each album.

Random: Play the artist, album, or tracks in random order.

Repeat: Repeat the artist, album, or track.

Album: Change the album.

Skip/seek: Change the track.

Interface dial (from the Audio screen): Rotate to view tracks in the upper display, and press to select a track.

HDD display

■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.).
4. Select the song you want to play.



You can also search for and play HDD music using Song By Voice (see page 139).

iPod®

Connect your device to the USB port (see page 50).

Audio Source: Select the iPod icon.

Play/pause

Random: Play tracks or albums in random order.

Album bar: Change the album.

Repeat: Repeat the current track or file.

Skip/seek bar: Change the track.


Interface dial (from the Audio screen): Rotate to view tracks in the upper display, and press to select a track.

iPod display

■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, press MENU.
2. Select Music Search.
3. Select a search type (artist, album, track, etc.) or folder.
4. Select the song you want to play.


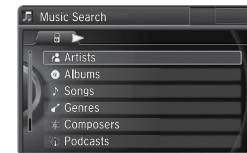


On vehicles with navigation, you can also search for and play iPod music using Song By Voice (see page 140).

iPod is a trademark of Apple, Inc.

Bluetooth® Audio

Play streaming or stored audio from your compatible phone when it is paired to *Bluetooth* HandsFreeLink (see page 63). Visit www.handsfreelink.com/Acura (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates may apply with your phone service provider.

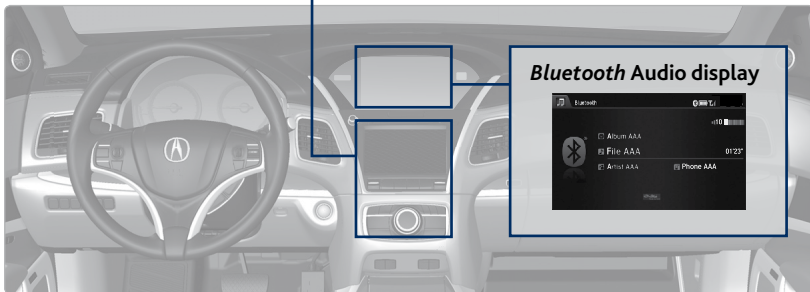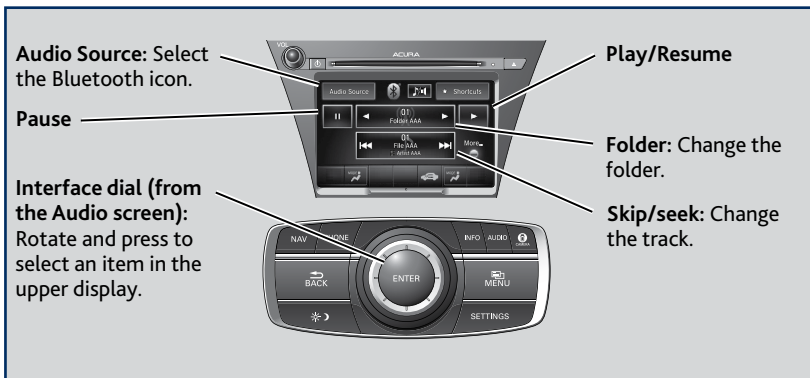

Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

Pandora®

Play and operate Pandora from your phone through the vehicle's audio system. Visit www.handsfreelink.com/Acura to check phone compatibility. Standard data rates apply with your phone service provider. **Available in the U.S. only.**



Connect your phone when the vehicle is stopped.

For iPhone:

- Connect via *Bluetooth* HandsFreeLink (see page 63) or USB (see page 50).
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If Pandora still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For other compatible smartphones:

- Connect via *Bluetooth* HandsFreeLink (see page 63).

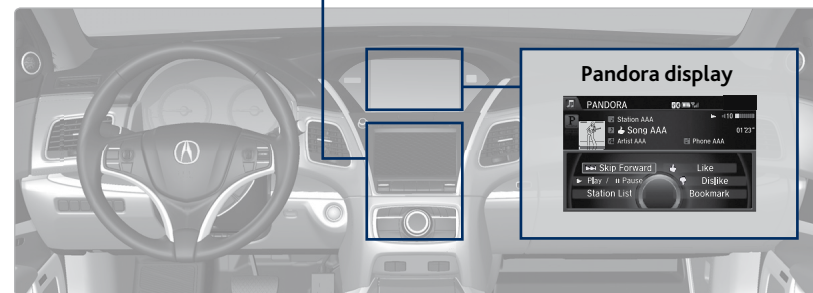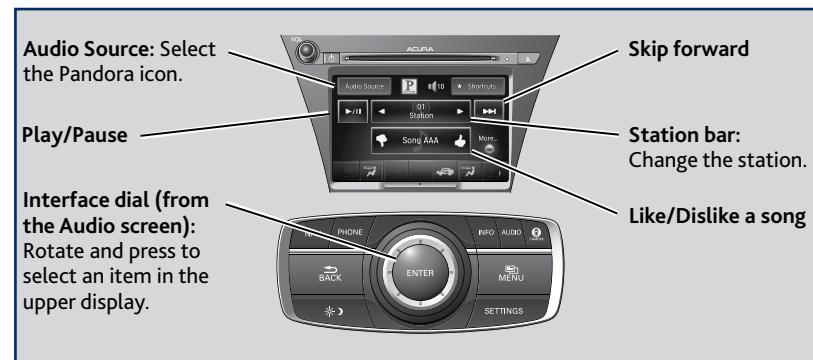

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

ACURALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CLIENT INFORMATION

VOICE COMMAND INDEX

INDEX

AcuraLink featuring Aha™

Access music and information programming, location-based services, and social media through the vehicle's audio system. Visit www.handsfreelink.com/Acura (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates apply with your phone service provider.



Visit owners.acura.com (U.S.) or www.myacura.ca (Canada) and download the AcuraLink app to your phone prior to using this feature. Make sure you have an active Aha account. Connect your phone when the vehicle is stopped.

For iPhone:

- Connect via *Bluetooth* HandsFreeLink (see page 63) or USB (see page 50).
- A pop-up may appear on your phone requesting you to allow access for Aha to be launched.
- If Aha still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For other compatible smartphones:

- Connect via *Bluetooth* HandsFreeLink (see page 63).

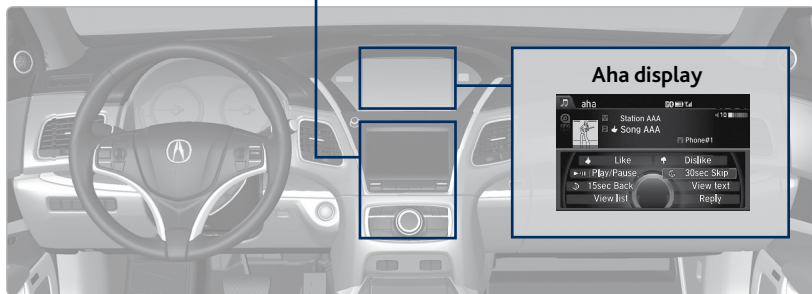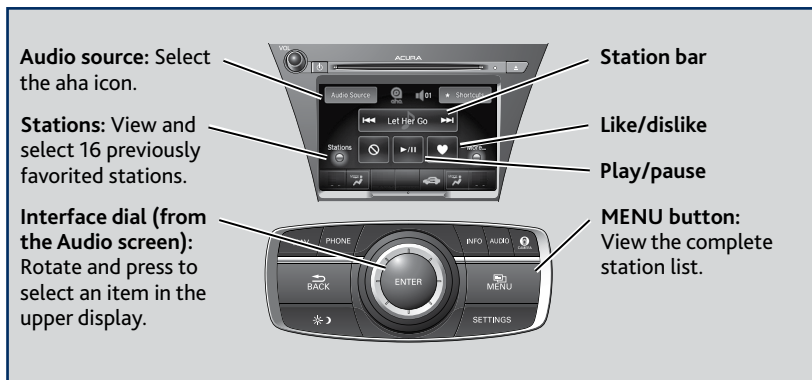

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

BLUETOOTH® HANDSFREELINK®

Learn how to operate the vehicle's hands-free calling system.



Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit www.handsfreelink.com/Acura (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

■ HFL Displays and Controls

Use the controls to enter information and make selections.

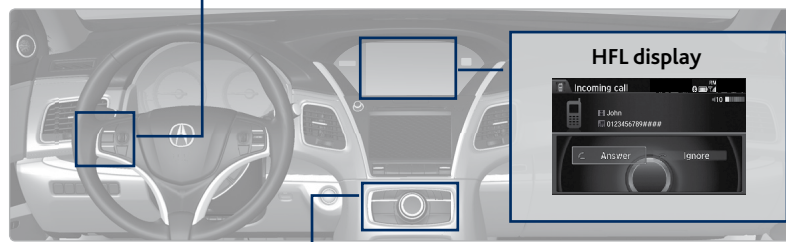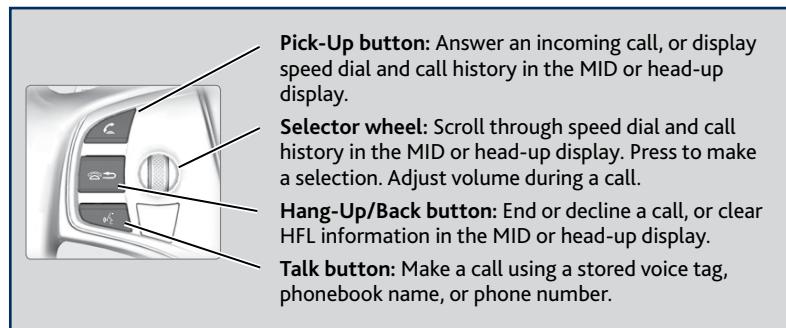

On-Demand Multi-Use Display (ODMD) screens



Select Shortcuts (Phone tab) to access Speed Dial and Call History.



When there is an incoming call, select the green Pick-Up or red Hang-Up icon.



When a number keypad is displayed, select numbers to enter.



When an alphabet keyboard is displayed, select letters to enter.

Talk Button Tips



For a list of available voice commands, see page 139.

- When using the Talk button, wait until you hear a beep before speaking.
- To bypass the system prompts, simply press the Talk button again to say your command.
- When the Talk button is pressed, all available voice commands are highlighted in yellow.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard vents away from the microphone in the ceiling.
- Close the windows and moonroof.

Pairing a Phone

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Phone Settings.
3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if pairing an additional phone).
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode.
6. HFL searches for your phone. Select your phone when it appears on the list.
If your phone does not appear: Select Phone Not Found? and search for HandsFreeLink from your phone.
7. HFL gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable Automatic Phone Sync, which imports your phone's call history and phonebook. Select On.
9. Press BACK to exit the menu.

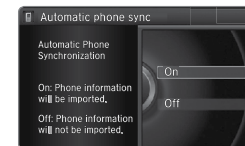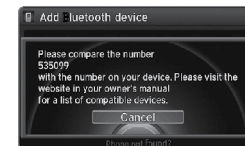

Making a Call

You can make calls using several methods.


■ Dialing a Number

Enter a 10-digit phone number to call.

Using Voice Commands

Press the Talk button before saying each command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-5-1-2-3-4." Say "Dial" if necessary.
3. The system begins to dial.

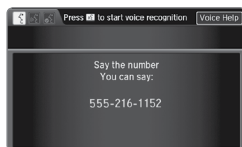

Using the Menu

Use the interface dial to make and enter selections. This is inoperable while the vehicle is moving.

1. Press PHONE.
2. Press MENU.
3. Select Dial.
4. From the navigation screen or the ODMD, enter the phone number. Select the green phone icon to call.



Using the ODMD

Select items on the screen by touching them. This is inoperable while the vehicle is moving.

1. Select Shortcuts.
2. Select Phone.
3. Select Dial.
4. Enter the phone number and select the green phone icon to call.




■ Using the Phonebook

When your phone is paired, its entire phonebook can be automatically imported to the system if you select On for Phone Synchronization.

Using Voice Commands

Press the Talk button before saying each command.

1. Say "Call by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."

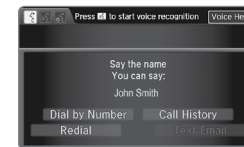

Using the Menu

Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call, and select it to call.



■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing.

1. Press PHONE.
2. Press MENU.
3. Select Speed Dial, then select New Entry.
4. Choose an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.



When a voice tag is created, you can press the Talk button and say "Call" and the stored voice tag.

When speed dial entries are stored, you can add them to the Shortcuts (Phone tab) in the ODMD for quick access.

■ Using Speed Dial and Call History

Make calls quickly using stored speed dial entries or call history numbers.

Using Voice Commands

Press the Talk button before saying each command.


1. Say "Call by name."
2. Say the name of the stored voice tag.
3. The system begins to dial.



Using the MID

Press the Pick-Up button on the steering wheel.

1. The speed dial list appears in the MID and head-up display. For Call History, move the left selector wheel to the right.
2. Use the left selector wheel to scroll through the list to find the entry you want to call, and select it to call.

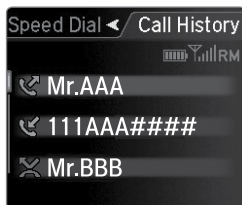

Using the Phone Screen

Use the interface dial to make and enter selections.

1. Press PHONE.
2. For Speed Dial, use the interface dial to scroll through the list to find the entry you want to call, and select it to call. For Call History, move the interface dial to the right and scroll through the list.



Using the ODM D

Select items on the screen by touching them.

1. Select Shortcuts.
2. Select Phone.
3. Select Speed Dial or Call History. Speed dial entries must be previously stored to the Shortcuts menu. Select Edit and follow the prompts.
4. Select the desired entry to call.



SMS Text Messaging and E-Mail

Receive and send text messages and e-mails from your paired and linked phone. Visit www.handsfreelink.com/Acura (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility. Standard message rates apply. This feature is limited while the vehicle is moving.

■ Selecting an Account

If your phone has both text message and mail accounts, you can select only one of them at a time to be active and receive notifications.

1. Press SETTINGS.
2. Select Phone Settings.
3. Select Select Account.
4. Select Text Messages or an e-mail account.



■ Receiving and Responding to Messages

When you receive a new message, a pop-up appears in the upper display. Use the interface dial to view the message when the vehicle is stopped. You can also reply to it using fixed phrases or call the sender.

1. When the prompt appears, select Read.
2. The message is displayed, and the system reads it aloud.
3. **To reply:** Select Reply, and choose one of the six available responses. Select Send to send the message. You cannot create a new message. **To call the sender:** Select Call.



Roadside Assistance*

Call for assistance for unexpected incidents from your paired and linked phone. Use the interface dial to make and enter selections.

1. From the Phone menu, press MENU.
2. Select Roadside Assistance.
3. Your vehicle's location and VIN are displayed. Select the phone number to begin the call.



*if equipped

ACURALINK®*

Learn about Acura's advanced connectivity services.


AcuraLink Messages

Receive messages on vehicle features, safety and emissions recall campaigns, maintenance reminders, and diagnostic information. Some message features require a phone connection. Visit www.handsfreelink.com/Acura (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility.

Viewing Messages

When you receive a new message, an envelope icon appears on the upper screen. Use the interface dial to make and enter selections.

1. Press INFO.
2. Select AcuraLink/Messages.
3. Select a message category.
4. Select a message.
5. Select Voice to hear the entire message details read aloud.

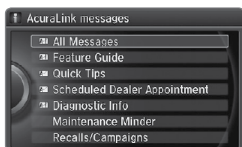


Message Options

When you receive certain messages, you can call your dealer if your phone is paired to the system, or find the nearest dealer.

U.S. only

You can also schedule service appointments from certain messages.

A current AcuraLink subscription is required to set up this feature and modify your message preferences. To subscribe or get more information, contact a dealer or visit owners.acura.com.

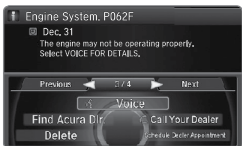


*if equipped

Subscription Features

A subscription-based service that provides convenient features, such as collision notification, emergency assistance, online security, and important messages about your vehicle. Requires enrollment and privacy agreement. To subscribe or get more information, contact a dealer or visit owners.acura.com (U.S.) or www.myacura.ca (Canada).

Emergency Assistance

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically attempts to connect to the AcuraLink operator if your phone is paired to the system and there is sufficient cellular coverage. Once connected, information about your vehicle, its positioning, and its condition will be sent to the operator. You can also speak to the operator when connected.

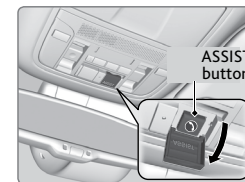

To manually connect to the operator, open the cover on the ceiling console and press ASSIST when the vehicle is on.

Security Features

To use security features, you need your user ID and personal identification number (PIN). Some of these features are also available with the AcuraLink smartphone app. Visit owners.acura.com/apps to download the app.

- *Stolen vehicle tracking:* Searches and tracks down your vehicle position.
- *Remote door lock/unlock:* Remotely lock or unlock doors.
- *Vehicle finder:* Locate your vehicle in large areas, such as a parking lot.
- *Security alarm notification:* If your vehicle's security system detects tampering, the provider notifies you.

Operator Assistance

Connect to the AcuraLink operator when trying to find a destination or for roadside assistance.

Press LINK to connect to an operator.



NAVIGATION

Learn how to enter a destination and operate the navigation system.


Basic Navigation Operation

A real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination. You can operate the system using voice commands or the system controls.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

Steering Wheel Controls

Use the steering wheel controls to give voice commands. For a full list of navigation voice commands, see page 139.

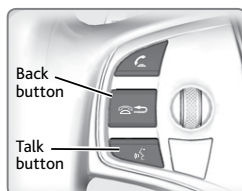

Hang-Up/Back button: Press to cancel a command or operation.

Talk button: Press to say voice commands.

Talk Button Tips


- When using the Talk button, wait until you hear a beep before speaking.
- To bypass the system prompts, simply press the Talk button again to say your command.
- When the Talk button is pressed, all available voice commands are highlighted in yellow.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard vents away from the microphone in the ceiling.
- Close the windows and moonroof.

WARNING



Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed. Only operate system controls when the conditions permit you to safely do so.

Navigation Display and Controls

Use the controls to enter information and make selections. Some manual functions are inoperable while driving.

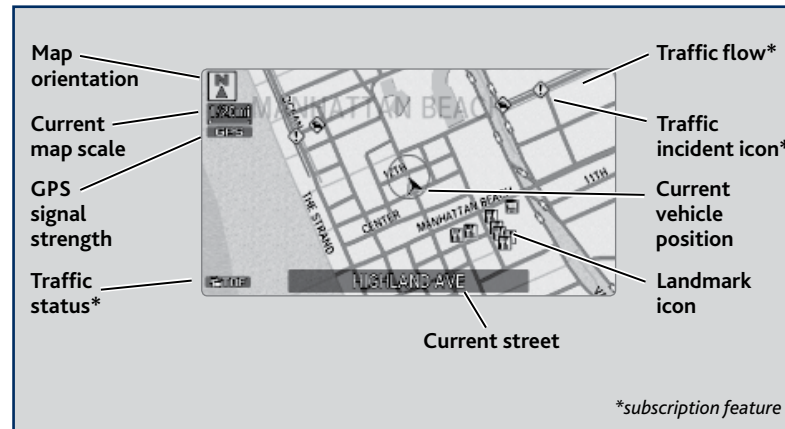

**subscription feature*

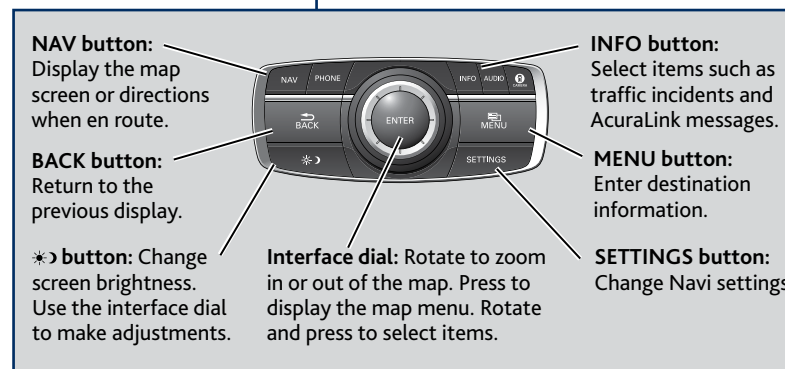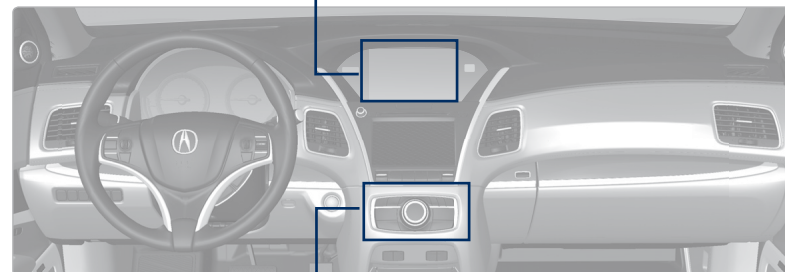

NAV button: Display the map screen or directions when en route.

BACK button: Return to the previous display.

*** button:** Change screen brightness. Use the interface dial to make adjustments.

Interface dial: Rotate to zoom in or out of the map. Press to display the map menu. Rotate and press to select items.

INFO button: Select items such as traffic incidents and AcuraLink messages.

MENU button: Enter destination information.

SETTINGS button: Change Navi settings.

Interface Dial Feedback

Configure the system to read aloud selections made using the interface dial. Use the interface dial to make and enter selections.

- 1. Press SETTINGS.
2. Select System Settings.
3. Select Interface Dial Feedback.



On: Always reads the selection.
Auto: Reads the selection only when the vehicle is moving.
Off: Turns interface dial feedback off.

System Guidance Volume

Adjust the navigation system guidance volume from the map menu. Use the interface dial to make and enter selections.

- 1. From the map screen, press the interface dial to display the map menu.
2. Select Guidance Volume.
3. Adjust the volume to your preferred level.
4. Press BACK to exit the menu.



During guidance, you can also use the audio volume knob or steering wheel controls to adjust the volume.

Voice Prompt

Turn the voice prompt feature on or off. Use the interface dial to make and enter selections.

- 1. Press SETTINGS.
2. Select System Settings.
3. Select Voice Prompt.



On: Provides voice prompts.
Off: Voice prompts are disabled.

Entering a Destination

Use several methods to enter a destination.

Home Address

Store your home address in the system so you can easily route to it. Use the interface dial to make and enter selections.

- 1. Press SETTINGS.
2. Select Navi Settings.
3. Select Edit Go Home.
4. Enter the address and select OK.



When your home address is stored, you can press the Talk button and say "Go home" at any time. You can also select Go Home from the destination menu.




Street Address

Enter a street address using voice commands. Press the Talk button before saying each command.

You can also enter the address manually when the vehicle is stopped. While on the map screen, press MENU and use the interface dial to select Address. Follow the prompts.

U.S. models

- 1. From the Voice Portal screen, say "Address."
2. The system prompts you to say the entire address. For example, say "1-2-3-4 Main Street, Los Angeles, California."
3. The system interprets the address by state, city, street, and address number. If necessary, you may have to clarify similar matches.
4. Say "Set as destination" to set the route.

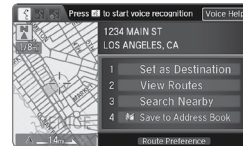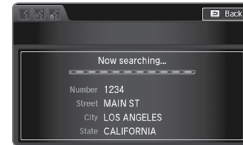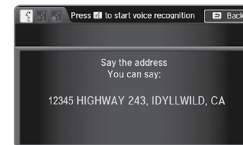



Canadian models

From the map screen, say "Display Menu," followed by "Address." Follow the prompts.

Place Category

Enter a point of interest using voice commands. Press the Talk button before saying each command.

1. From the Voice Portal, say "Place name."
2. Say a category. For example, "ATM/Bank."
3. Say the name of the point of interest. For example, "ABC Bank."
4. The system interprets the name. If necessary, you may have to clarify similar matches.

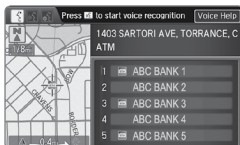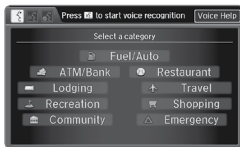

If there is more than one point of interest with the name, a list of matches appears in order of closest distance. Say the number next to the place you want.

5. Say "Set as destination" to set the route.

If the system does not recognize the specific name, you can enter it manually when the vehicle is stopped. While on the map screen, press MENU and use the interface dial to select Place Name. Enter the name one letter at a time, and follow the prompts.

Find Nearest Place

Enter a destination by category and distance using voice commands. Press the Talk button before saying each command.


1. Say "Find nearest" and a place. For example, "Find nearest ATM."
2. A list of the nearest places in your area is displayed by shortest distance to destination.
3. Say the number next to the destination you want to select.
4. Say "Set as destination" to set the route.



ODMD Shortcuts

You can add up to six destinations to the Shortcuts (Places tab) in the ODMD. The addresses must be previously stored in the navigation system address book.




1. Select Shortcuts.
2. Select Places.
3. Select No Entry to store a previously stored address book entry, or select a stored entry to route to it.

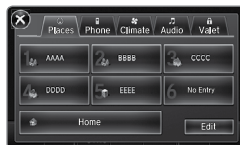

Routing

After a destination is set, you can alter or cancel your route.

Map Legend

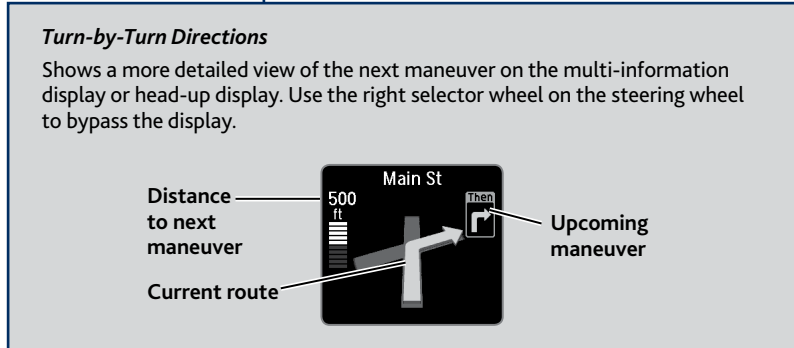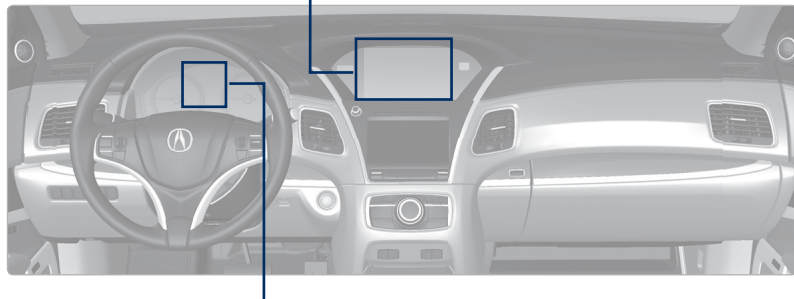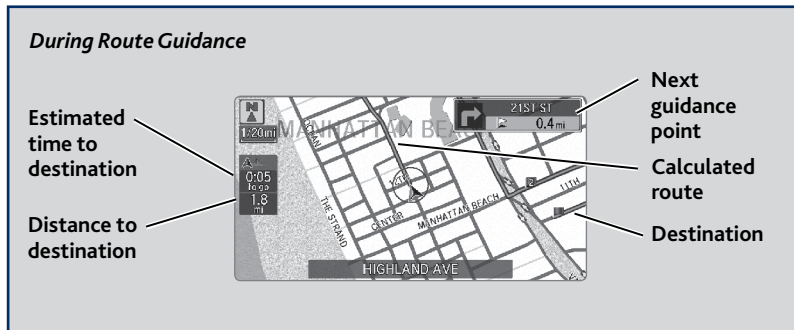

DRIVING

Learn about preparation for driving, as well as other features.

Before Driving

Check the following items before you begin driving.

■ Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
- Remove any frost, snow, or ice.
- Make sure the hood is securely closed.
- Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.
- Make sure the tires are in good condition.
- Make sure there are no people or objects behind or around the vehicle.

NOTICE

If the doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

■ Interior Checks

- Store or secure all items on board properly.
- Do not pile items higher than the seat height.
- Do not place anything in the front seat footwells. Secure the floor mats.
- If you have any animals on board, do not let them move freely in the vehicle.
- Securely close and lock all doors and the trunk.
- Adjust your seating position, mirrors, and steering wheel properly.
- Make sure items placed on the floor behind the front seats cannot roll under the seats.
- Everyone in the vehicle must fasten their seat belt.

Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after. In addition:

- During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as to not damage the engine or powertrain.
- Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

■ Taking a Detour

You can calculate a detour route manually if you encounter a road closure or other obstacle. Use the interface dial to make and enter selections.

1. When en route, press MENU.
2. Select Detour. The system attempts to calculate a new route by avoiding the next 5 miles (8 km) while on a freeway or 1 mile (1 km) while on a surface street.



■ AcuraLink Real-Time Traffic™*

View traffic flow, incidents, and construction in major metro areas. You can also route around congestion or incidents using voice commands. Press the Talk button before saying each command. **Available in the U.S. only.**

1. When en route, say "Display traffic on my route." A list of incidents on your route appears.
2. Say the number of the incident you want to avoid.
3. Say "Avoid" and the incident list returns.
4. Say "Reroute" to set the new route.



*Requires AcuraLink subscription.

■ Canceling Your Route

You can cancel your route at any time. Press the Talk button and say "Cancel route." You can also use the interface dial to make and enter selections.

1. When en route, press MENU.
2. Select Cancel Route. The route is cleared and the map screen returns.




Maximum Load Limit

Carrying too much cargo or improperly storing it can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe.

Your vehicle is not designed to tow a trailer. Attempting to do so can void your vehicle warranties.


The maximum load for your vehicle is 850 lbs (385 kg). See the Tire and Loading Information label on the driver's doorjamb.

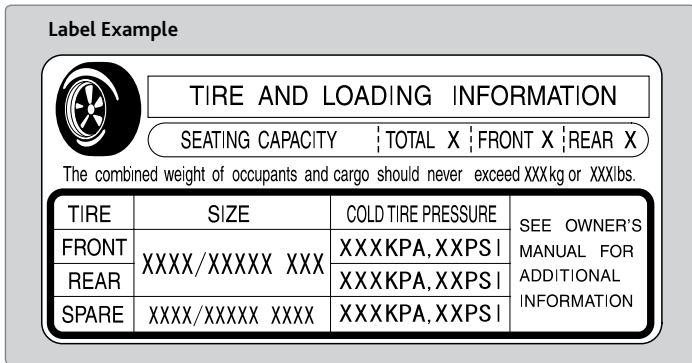

This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer. Below are the steps for determining the correct load limit:

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400 - 750 (5 x 150) = 650 lbs.)
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the Owner's Manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

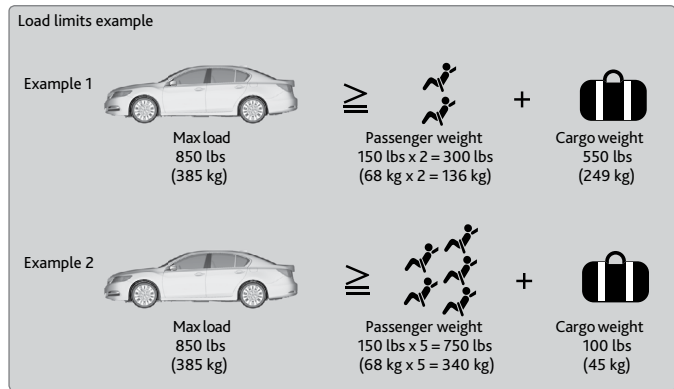

WARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

The headlight aim on your vehicle was set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk, have the aiming readjusted at your dealer or by a qualified technician.

NOTICE




Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

Improving Fuel Economy and Reducing CO2 Emissions

Achieving fuel economy and reducing CO2 emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Sport Hybrid System

Your vehicle uses both an electric motor and a gasoline engine as propulsion sources, with electric motors receiving electricity from an internal high voltage battery.

Operating mode	EV launch	Engine drive	EV cruising
Vehicle speed	Launch acceleration: Rear motor drive	Gentle acceleration: Engine drive	Low speed cruise: Rear motor drive
Power flow monitor			
Electric motors	Drive	- / Drive	Drive
Generators	-	Generate / -	-
Gasoline engine	Stopped	Running	Stopped
Battery	Discharges	Charges/discharges	Discharges

Energy Efficiency





Fuel efficiency and driving range is most impacted by your driving style. Aggressive acceleration and high-speed driving can easily trigger the system to switch the propulsion source to the gasoline-powered engine. In addition, heavy climate control system use negatively affects vehicle range and efficiency. Either of these use patterns will more quickly reduce the high voltage battery's state of charge.

Battery Types

There are two types of batteries in this vehicle: a standard 12-volt battery that powers the airbags, the interior and exterior lights, and other standard 12-volt systems; and a high voltage battery that powers the propulsion motors and recharges the 12-volt battery.

Regenerative Energy and Braking

When decelerating without the accelerator or brake pedal pressed, or while driving downhill, the electric motors act as generators that recover a portion of the electrical energy that was used to accelerate the vehicle. This regenerative braking slows the vehicle in a manner similar to engine braking in a gasoline-powered vehicle.

Power acceleration	Engine cruising	Regeneration	AWD mode
Aggressive acceleration: Engine drive Motor assist	High speed cruise: Engine drive	Deceleration: Front and rear regeneration	Slippery condition: Engine drive Front generation Rear motor drive
			
Drive	Drive	Regenerate	Drive
-	Generate	Regenerate	Generate
Running	Running	Stopped	Running
Discharges	Charges/discharges	Charges	Charges/discharges

Unique Hybrid Sounds

When you first start driving this vehicle, you may hear some unfamiliar sounds, particularly when turning on the vehicle, while driving, and just after parking. Some of these sounds are unique to this vehicle's powertrain, fuel, and climate control systems; others are similar to sounds generated by conventional automobiles that typically are masked by louder noises absent from a vehicle of this design. These sounds are not a cause for concern, and you will soon recognize them as normal and thus be able to detect any new or unusual noise should one develop.

Auto Engine Stop


Your vehicle's gasoline engine may automatically stop and start during vehicle operation as needed to meet driving and battery conditions. Auto engine stop does not activate in SPORT mode.

Safety Precautions

Do not touch the high voltage system. Attempting to take a high voltage system component apart or disconnect one of its wires can cause severe electrical shock. If the system needs regular maintenance or repair after a crash, it should be performed at an Acura dealer.

Remote Engine Start

Start your vehicle using the two-way remote transmitter from extended distances before you enter the vehicle.

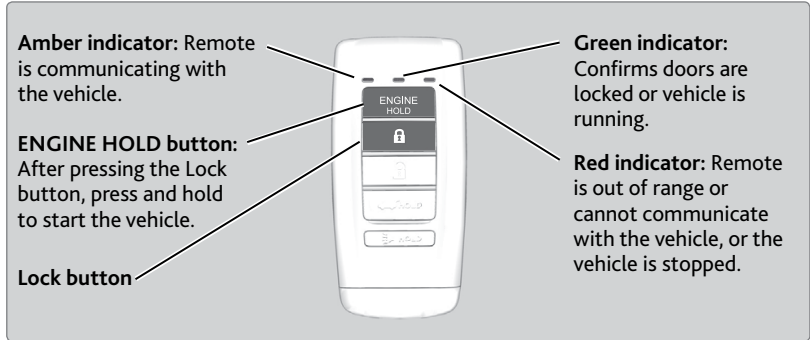

Make sure the vehicle is in a safe location when using remote engine start (i.e., a well ventilated area, away from flammable materials).

Starting the Vehicle

Press the LOCK button, then press and hold the ENGINE HOLD button to remotely start the engine.

The vehicle starts and remains on for up to 10 minutes. To extend the time for another 10 minutes, repeat the procedure during the initial 10 minutes.

While the vehicle is on, the climate control system adjusts the interior temperature, the security system remains on, and lights and accessories remain off.

Turning Off the Vehicle

Press and hold the ENGINE button.

The vehicle will also turn off if it has been running for more than 10 minutes, or if any door is opened without using the remote transmitter or keyless access.

WARNING


Engine exhaust contains toxic carbon monoxide.
Breathing carbon monoxide can kill you or cause unconsciousness.
Never use the remote engine starter when the vehicle is parked in a garage or other area with limited ventilation.

Starting to Drive

The keyless access system allows simple push-button start.

Before Starting the Engine


Press the brake pedal. Keep your foot firmly on the brake pedal when starting the vehicle.

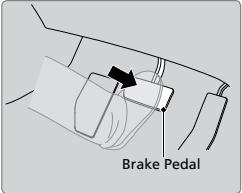

The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 m). When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce battery drain.

Changing the Power Mode

Accessory or On Mode: Press the POWER button once without pressing the brake pedal for Accessory mode. Press it again while pressing the brake pedal for On mode.

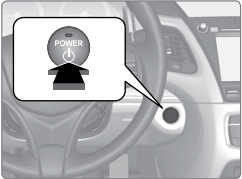

Starting the vehicle: Press and hold the brake pedal, then press the POWER button. Keep your foot firmly on the brake pedal when starting the vehicle. The green READY indicator comes on and a message appears in the MID to let you know the vehicle is ready to drive.

Turning the vehicle off: Select Park, then press the POWER button. If you press the button and Park is not selected, the vehicle goes into Accessory mode.


Acoustic Vehicle Alerting System

Canadian models

Alerts pedestrians when a vehicle is propelled solely by electricity, approaching at speeds around 20 km/h or less.

Press the button to turn the system on and off. An indicator in the button appears when the system is off.

The system is turned on every time you turn on the vehicle, even if you turned it off the last time you drove the vehicle.

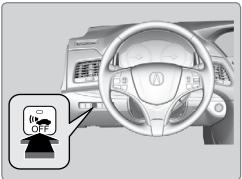

NOTICE

When you change from D to R and vice versa, come to a complete stop and keep the brake pedal pressed. Operating the shift button before the vehicle has come to a complete standstill can damage the transmission.

Auto park mode

For your convenience, Park (P) is automatically selected when all of the following conditions are met:

- The vehicle is stopped.
- The driver's seatbelt is unbuckled.
- The driver's door is opened.

Car wash mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps mwhile the engine is on:

1. Press and hold the brake pedal.
2. Select N.
3. Press the N button again and hold it for two seconds.

The vehicle will enter car wash mode. If the ENGINE STOP/START button is pressed after car wash mode has been activated, the power mode will change to ACCESSORY for 15 minutes, the gear position will remain in N and the power mode will remain in ACCESSORY. After 15 minutes, the position automatically changes to (P) and the power mode changes to OFF.

WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged. Always keep your foot on the brake pedal until you have confirmed that (P) is shown on the gear position indicator.

Reactive Force Pedal


Assists during driving by responding to the force of your foot on the accelerator pedal.

When you press the accelerator pedal, the system can provide slight resistance to prevent you from applying excessive throttle to the accelerator. Usually, the feedback is unnoticeable while driving.

As a result, this can yield better fuel efficiency and provide traction control while driving on slippery roads.


The system also can provide slight resistance through the accelerator during operation of the Collision Mitigation Braking System (see page 93).

Reactive force pedal is off in Sport mode.

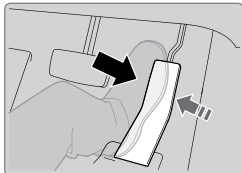**Changing Settings**

Adjust the pedal force level. Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Vehicle Settings.
3. Select Reactive Force Pedal.
4. Select one of the options.

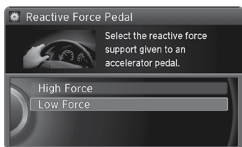

High Force: More pedal feedback.

Low Force: Less pedal feedback and natural acceleration feeling.

5. Press BACK to exit the menu.

Shifting

Change your vehicle's gears to begin driving.

Electronic Gear Selector


Select the vehicle's gear using a simple button interface.

Park (P): Used for parking or starting or turning off the vehicle. Press P with the brake pedal pressed. A red indicator appears.

Reverse (R): Used for reversing. Pull back R. A green indicator appears.

Neutral (N): Used for idling. Press N. A red indicator appears

Drive (D): Used for normal driving or sequential mode (see page 86). Press D. A green indicator appears. Release the electric parking brake to begin driving (see page 87).

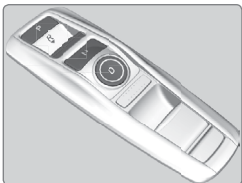

■ SPORT Mode


SPORT mode increases engine performance and handling, which is suitable for driving on hills or through curves on mountain roads.

Press the SPORT button behind the Drive (D) button to turn Sport mode on or off.



■ Sequential Mode

Use the paddle shifters to change between 1st and 7th gears without removing your hands from the steering wheel.

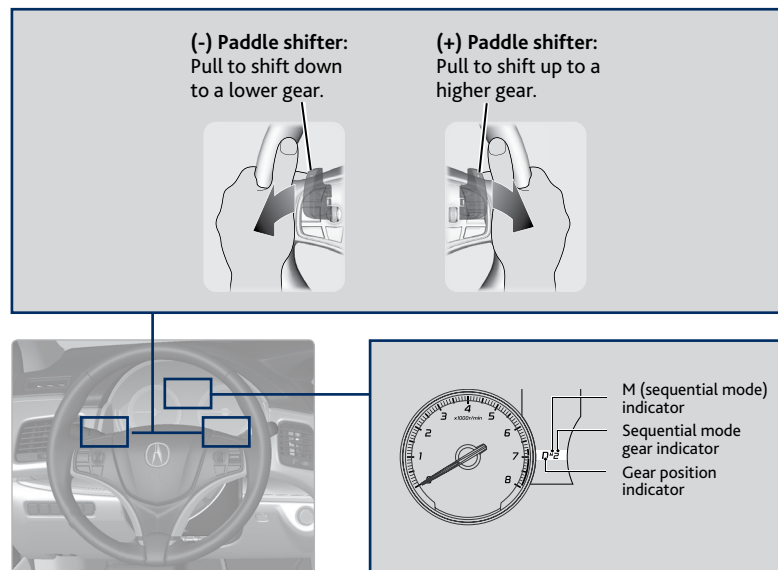

When D is selected: The vehicle goes into sequential shift mode momentarily, and the gear indicator comes on. When you start driving at a constant speed, sequential shift mode automatically switches off, and the gear indicator goes off. Hold the (+) paddle shifter for two seconds to return to normal drive.

When D is selected (with SPORT mode): The vehicle goes into sequential shift mode, and the M (sequential shift) indicator and gear indicator come on. Shift gears up or down using the paddle shifters.


To cancel this mode, press the SPORT button (see page 86) or pull the (+) paddle shifter for a few seconds. When sequential shift mode is canceled, the M indicator and gear indicator go off.

Braking

Slow down or stop your vehicle, and keep it from moving when parked.

■ Foot Brake

Press the brake pedal to slow down or stop your vehicle from moving.

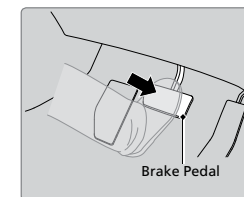

■ Brake Assist System

During hard or emergency braking, the system increases braking force. The brake pedal may move slightly or make a noise; this is normal. Continue to hold the brake pedal firmly down.

■ Anti-Lock Brake System (ABS)

During hard or emergency braking, the system rapidly pumps the brakes to prevent wheel lockup and help you maintain steering control. The brake pedal may pulsate slightly during ABS operation; this is normal. Do not pump the brake pedal, and continue to hold it firmly down.


NOTICE

The ABS may not function correctly if you use an incorrect tire type and size.

■ Electric Parking Brake

Keep your vehicle from moving while parked using a simple switch.

To apply: Pull up the switch. The PARK indicator appears in the instrument panel.

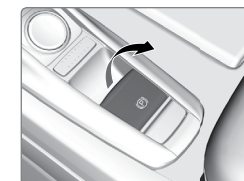

To release: Press the brake pedal and make sure your seat belt is fastened. Press the switch down to release.


You can also lightly press the accelerator pedal if your seat belt is fastened and the vehicle is on and in Drive (D) or Reverse (R).



Automatic Brake Hold

Maintains rear brake hold even after the brake pedal is released. Make sure the vehicle is on and your seat belt is fastened when operating this feature.

1. Press BRAKE HOLD. The BRAKE HOLD indicator appears in the instrument panel.
2. With the gear selector is in Drive (D), press the brake pedal and come to a complete stop. The HOLD indicator appears, and brake hold is applied. Release the brake pedal.

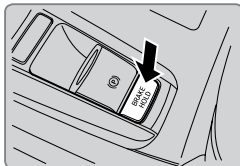

Press the accelerator pedal to cancel brake hold and start moving.

To turn off brake hold: Press the brake pedal and press BRAKE HOLD again.

Automatic brake hold cancels when:

- The electric parking brake is applied.
- The gear position is Park (P) or Reverse (R).
- Braking is applied for more than 10 minutes.
- The driver's seat belt is unfastened.
- The engine is turned off.

⚠ WARNING

Using the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never use the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.

⚠ WARNING


Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in Park (P) and applying the parking brake.

Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours.

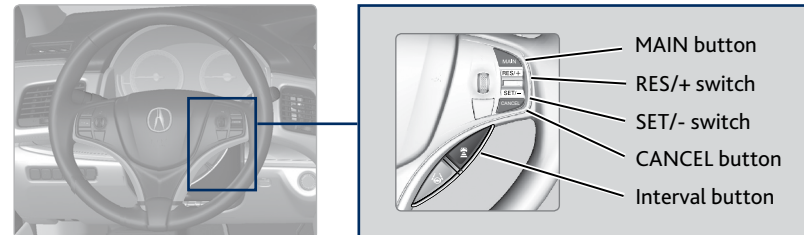

Activating and Setting the Vehicle Speed

1. Press MAIN. The ACC indicator appears.
2. Accelerate to the desired speed.

Above 25 mph (40 km/h): Take your foot off the accelerator pedal and press down the RES/+ / SET/- button to set the speed.

Below 25 mph (40 km/h) (Low Speed Follow): Press SET/- to set the speed at 25 mph (40 km/h) if a vehicle is detected in front of you.



Adjusting the Vehicle Speed

Press RES/+ to increase speed or SET/- to decrease speed.

Each time you press the switch up or down, the vehicle speed is increased or decreased by about 1 mph (1 km/h). If you keep the switch pressed up or down, the vehicle speed increases or decreases by 5 mph (5 km/h) until you release it.



Adjusting the Following Interval

Press the Interval button to change the following Interval. Each time you press the button, the following Interval setting cycles through short, middle, long, and extra long.

Interval	Short	Middle	Long	Extra Long
Approx. Gap (seconds)	1.1	1.5	2.1	2.8




Switching to Standard Cruise Control

Press and hold the Interval button. Cruise mode appears in the multi-information display. Press and hold the button again to switch back to ACC.

■ When in Operation

If a vehicle is detected ahead of you when ACC is turned on, the system maintains, accelerates, or decelerates your vehicle's set speed to keep the vehicle's set following interval from the vehicle ahead.

If a vehicle detected ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beep sounds, a head-up warnig display flashes, and BRAKE appears on the multi-information display to alert you.

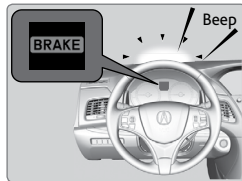

When a vehicle detected ahead is within ACC with low speed follow range and slows to a stop, your vehicle also will slow to a stop. The Stopped message appears on the multi-information display.

When the vehicle ahead of you starts again, the vehicle icon on the multi-information display blinks. Press RES/+ / SET/- up or down, or press the accelerator pedal to resume the prior set speed.



⚠ WARNING

Exiting a vehicle that has been stopped while the ACC with LSF system is operating can result in the vehicle moving without operator control. Always make sure Park (P) is selected before exiting the vehicle.

A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with LSF.

⚠ WARNING

ACC has limited braking capability.

Failure to pay attention to traffic can lead to a crash and result in injury or death.

Always be prepared to apply the brake pedal when conditions require.

⚠ WARNING

Improper use of ACC with LSF can lead to a crash.


Use ACC with LSF only when driving on expressways or freeways and in good weather conditions.

■ Canceling ACC

You can press CANCEL or MAIN, or press the brake pedal. The ACC indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, the amber ACC indicator appears on the multi-information display (see page 23).

After cruise control has been canceled, you can still resume the prior set speed by pressing RES/+.

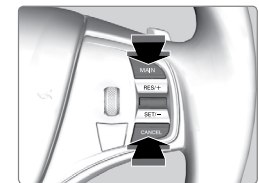

Lane Keeping Assist System (LKAS)

Provides steering input to help keep the vehicle in the middle of a detected lane and tactile and visual alerts if the vehicle is detected drifting out of its lane while driving between 45–89 mph (72–144 km/h).


The system applies steering torque to keep the vehicle in the middle of a detected lane. The applied torque becomes stronger as the vehicle gets closer to either of the lane lines.

If your vehicle gets too close to the left or right side lane markings of a detected lane without a turn signal activated, the steering wheel vibrates and a message appears in the MID..




■ Turning LKAS On or Off

- 1. Press MAIN. LKAS appears in the MID.

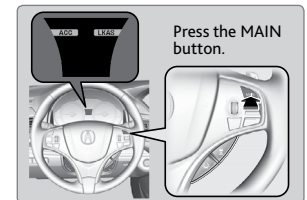

- 2. Press the LKAS button. Lane outlines appear in the MID. Dotted lane lines turn solid when the system operates.

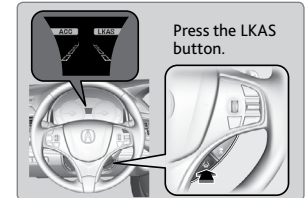

- 3. Press MAIN or the LKAS button to turn the system off.

Important Safety Reminder

The LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

The LKAS only alerts you when lane drift is detected without a turn signal in use. The LKAS may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition.

It is always your responsibility to safely operate the vehicle and avoid collisions.

Traffic Jam Assist (TJA)

If you are driving 40 mph (64 km/h) or below with LKAS active along with Adaptive Cruise Control with Low Speed Follow, the traffic jam assist system, upon detecting the traffic lane lines and a vehicle ahead, will apply steering torque and adjust your speed to help keep your vehicle in the center of the lane and maintain a set interval between your vehicle and the one detected ahead.


For more information, as well as limitations and warnings, see the Owner's Manual at owners.acura.com.



Collision Mitigation Braking System™ (CMBS™)

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours.

The system can alert you when a potential collision is determined, and reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

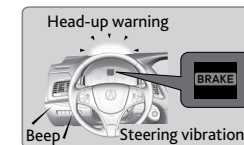

The system activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you is about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and there is a chance of a collision with an oncoming detected vehicle or a pedestrian in front of you.

■ Alert Stages


The system has three alert stages for a possible collision. Depending on the circumstances or CMBS settings, CMBS may not go through all of the stages before initiating the last stage.

- Stage 1:** Visual and audible warnings, increased accelerator pedal resistance
- Stage 2:** Visual and audible warnings, light seat belt retraction, and light brake application
- Stage 3:** Visual and audible warnings, strong seat belt retraction, and strong brake application

■ Changing Settings


Determine the warning timing. Use the interface dial to make selections.

1. Press SETTINGS.
2. Select Vehicle Settings. The vehicle must be in Park (P).
3. Select Forward Collision Warning Distance.
4. Select Long, Normal (default), or Short.
5. Press BACK to exit the menu.

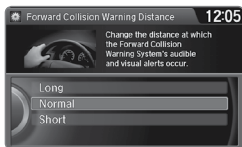

■ Turning CMBS On or Off

Press and hold the CMBS OFF button. A beep sounds and a message appears in the MID. The CMBS indicator appears when the system is off.

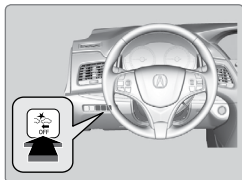


Important Safety Reminder

CMBS is designed to reduce the severity of an unavoidable collision. It does not prevent collision nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.

Road Departure Mitigation (RDM)

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings while driving between 45–89 mph (72–144 km/h).

If your vehicle is getting too close to detected lane markings without a turn signal activated, a message appears in the MID. Steering torque and rapid vibrations on the steering wheel are applied to help you remain within the detected lane.

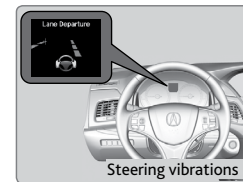


Braking may also be applied if the lane lines are solid and continuous.

If the system operates several times without detecting driver response, the system beeps to alert you.

■ Turning the System On or Off


Press the RDM button to turn the system on or off. A green indicator appears on the button when the system is on.

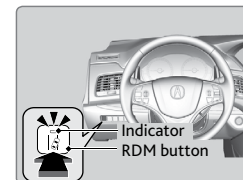

■ Changing Settings

Determine the warning timing, or turn the system off. Use the interface dial to make selections.

1. Press SETTINGS.
2. Select Vehicle Settings. The vehicle must be in Park (P).
3. Select Road Departure Mitigation System.
4. Select from the options.

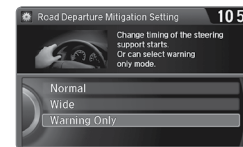

Normal (default): Steering control starts from inside the lane edge.

Wide: Steering control starts from outside the lane edge.

Warning Only: The system only provides a BRAKE message, but does not apply steering or braking.

5. Press BACK to exit the menu.

Important Safety Reminder


The system has limitations. Overreliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.

Blind Spot Information (BSI)

Alerts you to a detected vehicle in your left or right blind spot while driving between 20 mph (32 km/h) or higher.

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear.

When your turn signal is on and a vehicle is detected, the blind spot indicator blinks and a beep sounds until the area is clear or the turn signal is off.

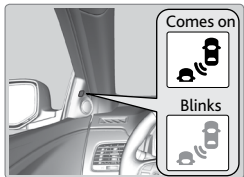

Changing BSI Settings

Change the alert type, or turn the system on or off. Use the interface dial to make selections.

1. Press SETTINGS.
2. Select Vehicle Settings. The vehicle must be in Park (P).
3. Select Blind Spot Info.
4. Select an alert type, or Off.
5. Press BACK to exit the menu.



⚠ WARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death. Do not rely only on the blind spot information system when changing lanes.


Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

Important Safety Reminder

Like all assistance systems, BSI has limitations. Over-reliance on BSI may result in a collision. The system is for your convenience only.


Parking Sensor System*

When the system senses an object when you are parking or backing up, an indicator appears on the upper display and a series of beeps will sound. As you get closer to the object, the beep rate increases.

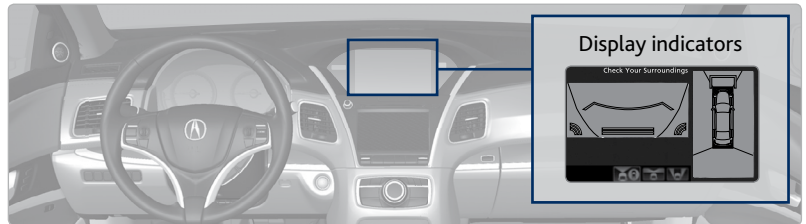

Turning the System On or Off

Press the parking sensor button. A green indicator light appears on the button when the system is on.

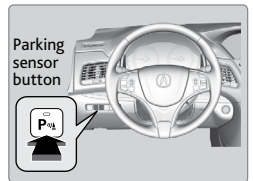

Vehicle Stability Assist (VSA®)


Also known as Electronic Stability Control (ESC), VSA helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It assists in maintaining traction on slippery surfaces by regulating engine output and selectively applying the brakes.

Turning VSA On or Off

VSA is turned on every time you turn on the vehicle. If you turn VSA off, your vehicle has normal braking and cornering ability, but VSA traction and stability enhancement become less effective.

Press and hold the VSA OFF button until you hear a beep to turn VSA on or off. The VSA OFF indicator appears when the system is off.


Traction control stops functioning, which allows the wheels to spin more freely at low speed. This can be helpful when trying to free your vehicle if it is stuck in mud or snow.

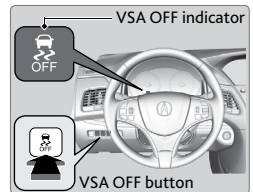

*if equipped


Multi-View Rear Camera*

When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the display, along with helpful parking guidelines.

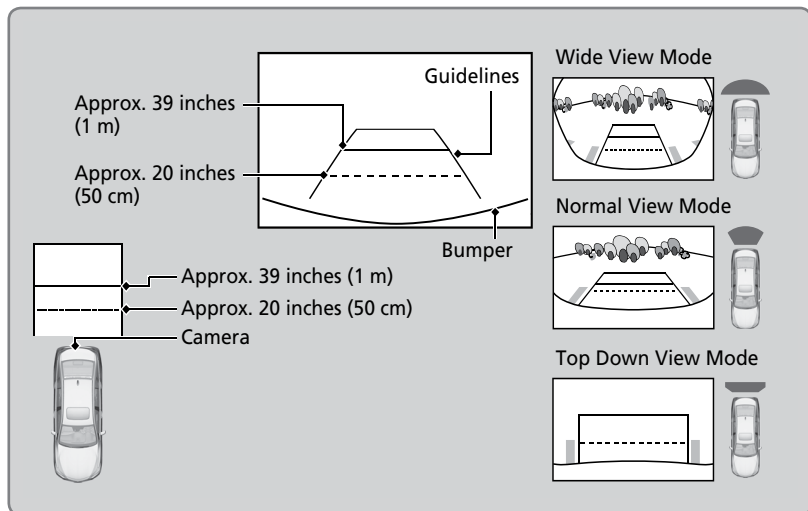

■ Changing Guidelines

1. Press **SETTINGS**.
2. Select **Camera Settings**.
3. Select **Rear Camera**.

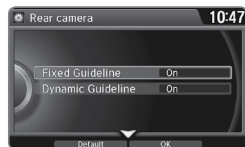

4. Select one of the options.

Fixed Guideline: Guidelines appear when you shift into Reverse. Select On or Off.

Dynamic Guideline: Guidelines move as you turn the steering wheel. Select On or Off.

5. Press **BACK** to exit the menu.



The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display, which does not give you all information about conditions at the rear of your vehicle.

*if equipped

Surround View Camera*



Four cameras assist in helping you view blind spots around the vehicle.

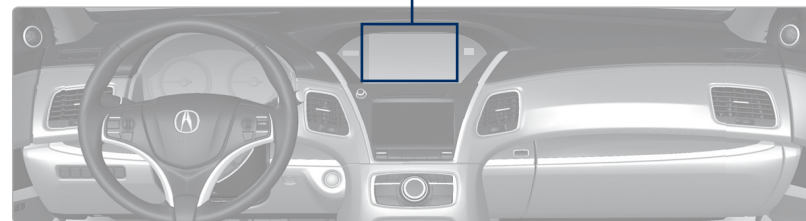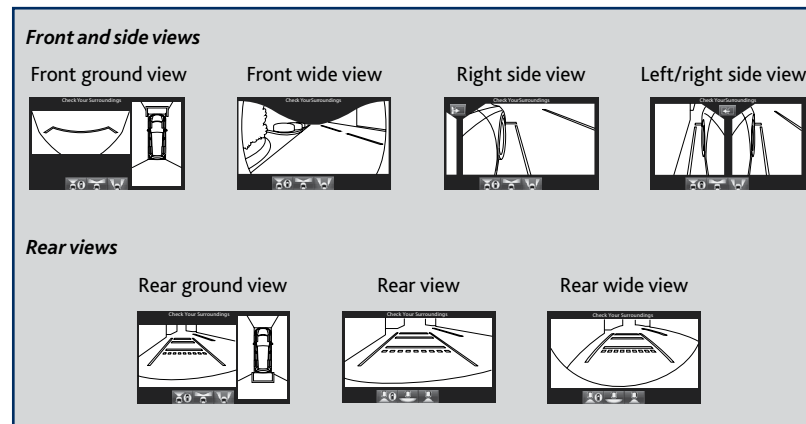

■ Displaying Front or Side Views

Press the **CAMERA** button on the dashboard or headlight lever when the vehicle is stopped or moving at 12 mph (20 km/h) or less. Press the button again or the interface dial to switch views.


Press any other button to turn off the camera view.

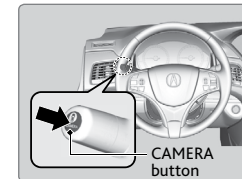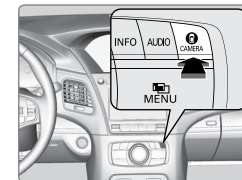

*if equipped

Cross Traffic Monitor

Alerts you if a detected vehicle is approaching from a rear corner when your vehicle is in Reverse (R) at speeds of 3 mph (5 km/h) or lower, which can be helpful when backing out of parking spaces.

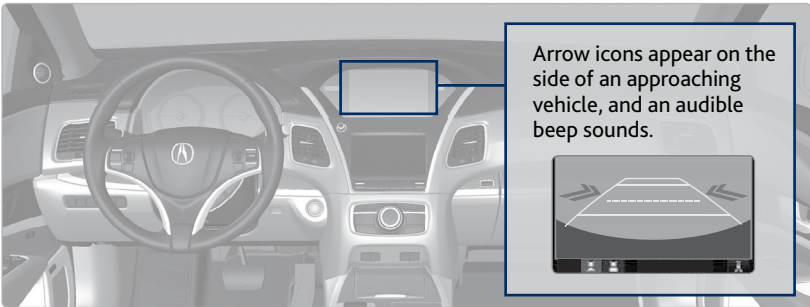

The system does not provide alerts for a vehicle that is moving away from your vehicle, and it may not detect pedestrians, bicycles, or stationary objects.

Turning the System On or Off

1. Press SETTINGS.
2. Select Camera Settings.
3. Select Cross Traffic Monitor.
4. Select On or Off.
5. Press BACK to exit the menu.



CAUTION

This system cannot detect all approaching vehicles and may not detect an approaching vehicle at all.

Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.


Displaying the Rear View

Shift into Reverse (R) to display the rear view. Press CAMERA or the interface dial to switch rear views.

Changing Camera Settings

Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Camera Settings.
3. Select Rear Camera.
4. Select Guidelines to turn guidelines on or off, or Preferences for additional settings.
5. Select Preferences.
6. Select one of the options, and make your preferred changes.
7. Press BACK to exit the menu.

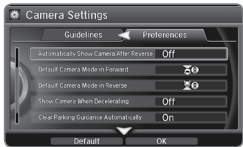

WARNING

Failure to visually assess the area around the vehicle (directly or by use of the mirrors) may result in a crash causing serious injury or death.

The areas shown in the surround view camera system display are limited. The display may not show all pedestrians or other objects around your vehicle.

Do not solely rely only on the surround view camera system display to assess whether it is safe to move your vehicle.

WARNING

Failure to pay proper attention to your surroundings while driving may result in a crash causing serious injury or death.

To help mitigate the chances of a collision, only look at the surround view camera system display when it is safe to do so.

The surround view camera does not eliminate all blind spots. Visually confirm safety around the vehicle with your own eyes and the mirrors. Do not rely on the camera view.

Refueling

Use the proper fuel and refueling procedure to ensure the best performance and safety of your vehicle.

Fuel Information

Use of unleaded premium gasoline of 91 octane or higher is recommended.

- Acura recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.


NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.

How to Refuel

Your fuel tank is not equipped with a fuel fill cap. You can insert the filler nozzle directly into the filler pipe. The tank seals itself again when you pull out the filler nozzle.

1. The fuel fill door is located at the left rear of the vehicle. Park next to the service pump that is most accessible, and turn off the engine.
2. Press the fuel fill door release button on the driver's door. The fuel fill door opens.
3. Place the end of the filler nozzle on the lower part of the filler opening, then insert it slowly and fully. Make sure that the end of the filler nozzle goes down along with the filler pipe.
4. After filling, wait about 5 seconds before removing the filler nozzle. Close the fuel fill door by hand.

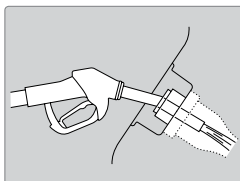

WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


HANDLING THE UNEXPECTED

Learn about what to do in critical or emergency situations.

Keyless Access Remote Battery Strength

If the battery life in your keyless access remote is weak, a message appears in the MID with information on how to start the vehicle.


1. Touch the back of the keyless access remote to the POWER button while the indicator is flashing.
2. With the brake pedal pressed, press the POWER button within 10 seconds.

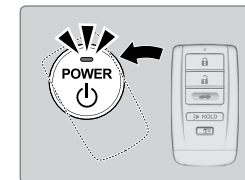

Emergency Power System Off

The POWER button may be used to turn off the vehicle due to an emergency situation even while driving. If you must turn off the vehicle, choose one of the following operations:

- Press and hold the POWER button for two seconds, or
- Firmly press the POWER button two times.

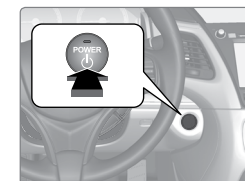

The steering wheel will not lock. However, because turning off the engine disables the power assist the engine provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place.

The gear position automatically changes to (P) after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.




NOTICE

Do not press the button while driving unless it is absolutely necessary for the engine to be switched off.

Jump Starting

Turn off the power to electric devices, such as audio and lights. Turn off the vehicle, then open the hood (see page 121).

1. Open the fuse box cover on your vehicle's 12-volt battery positive (+) terminal.
2. Connect the first jumper cable to your vehicle's 12-volt battery (+) terminal.
3. Connect the other end of the first jumper cable to the booster battery (+) terminal. Use a 12-volt booster battery only.
4. Connect the second jumper cable to the booster battery (-) terminal.
5. Connect the other end of the second jumper cable to the engine hanger (as shown). Do not connect this jumper cable to any other part.
6. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
7. Attempt to start your vehicle's engine. If it turns over slowly, make sure the jumper cables have good metal-to-metal contact.

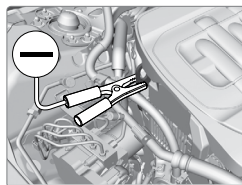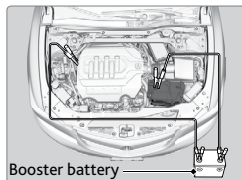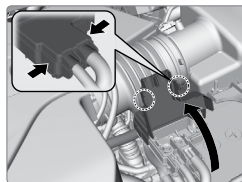

⚠️ WARNING

A 12-volt battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the 12-volt battery.

■ After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order:


1. Disconnect the jumper cable from your vehicle's ground.
2. Disconnect the other end of the jumper cable from the booster battery (-) terminal.
3. Disconnect the jumper cable from your vehicle's 12-volt battery (+) terminal.
4. Disconnect the other end of the jumper cable from the booster battery (+) terminal.

Have your vehicle inspected by a nearby service station or a dealer.

Overheating

If the high temperature indicator comes on, the engine suddenly loses power, or steam or spray comes out from under the hood, the engine is overheating.

1. Immediately park the vehicle in a safe place. Turn off all accessories and turn on the hazard warning lights.
2. **If no steam or spray is present:** Keep the vehicle on and open the hood (see page 121). **If steam or spray is present:** Turn off the vehicle and wait until it subsides. Then, open the hood.
3. Press the SPORT button to start the engine (see page 86).
4. Check that the cooling fan is operating and turn the vehicle off once the high temperature indicator goes off. If the cooling fan is not operating, immediately turn the vehicle off.
5. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks. If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark. If there is no coolant in the reserve tank, make sure the radiator is cool, then cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

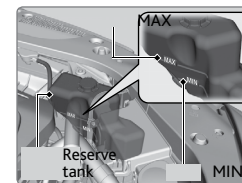

Once the engine has cooled sufficiently, turn on the vehicle and check the high temperature indicator. If the indicator is off, resume driving. If it stays on, contact a dealer for repairs.

⚠️ WARNING

Steam and spray from an overheated engine can seriously scald you. Do not open the hood or engine compartment if steam is coming out.

⚠️ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the radiator cap.


NOTICE

Continuing to drive with the high temperature indicator on may damage the engine.

Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving. Use the right selector wheel on the steering wheel to scroll to the tire pressure monitor to see pressure readings for each tire (see page 28).

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator appears with a message in the multi-information display.

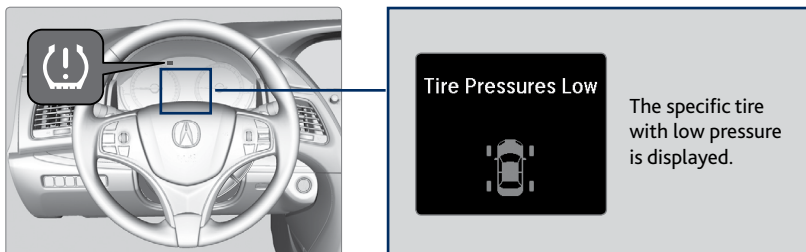

What to Do

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver's doorjamb.

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.

Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.



Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Handling a Flat Tire

If a tire goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Stop in a safe place. Use the tire repair kit or replace the flat tire with the compact spare tire*. Go to a dealer as soon as possible to have the full-size tire repaired or replaced.

Tire Repair Kit



If a tire has a small puncture, you can use the tire repair kit to temporarily repair it. The puncture must be smaller than 3/16-inch (4 mm) and not in the tire sidewall. Go to a dealer to have the full-size tire permanently repaired or replaced.

■ Before Repairing the Tire

1. Park the vehicle on a firm, level, and non-slippery surface.
2. Make sure the vehicle is in Park (P), and apply the electric parking brake.
3. Turn on the hazard warning lights, and turn the vehicle off.

■ Getting Ready to Repair the Tire

1. Pull the handle on the trunk floor lid and open the lid. Hook the handle to the edge of the trunk opening.
2. Take the kit out of the case.
3. Place the kit face up on flat ground near the punctured tire and away from traffic. Do not place the kit on its side.
4. Follow the instructions in the kit to repair the tire.

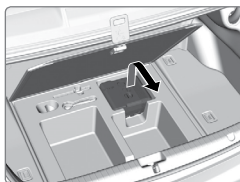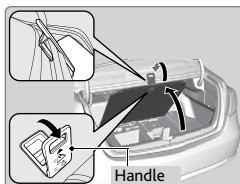

NOTICE

Do not use an unapproved puncture-repairing agent on a flat tire, as it can damage the tire pressure sensor.

*if equipped

Compact Spare Tire*



Replace the flat tire with the compact spare tire.

■ Before Changing the Tire

1. Park the vehicle on a firm, level, non-slippery surface.
2. Put the vehicle in Park (P), and apply the electric parking brake.
3. Turn on the hazard warning lights and turn the vehicle off.


■ Getting Ready to Change the Tire

1. Open the trunk floor lid.
2. Take the tool case out of the trunk. Take the jack and wheel nut wrench out of the tool case.
3. Unscrew the wing bolt, and remove the spacer cone. Then, remove the spare tire.
4. Place the compact spare tire (wheel side up) under the vehicle body, near the tire that needs to be replaced.
5. Loosen each wheel nut about one turn using the wheel nut wrench.

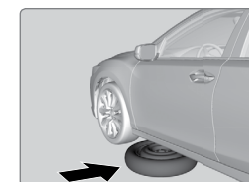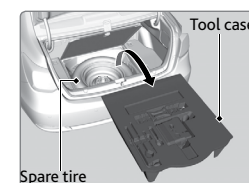


■ Setting Up the Jack


1. Place the jack under the jacking point closest to the tire to be changed.

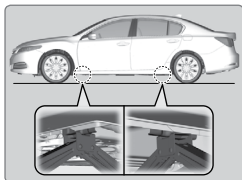

2. Turn the end bracket clockwise (as shown in the image) until the top of the jack contacts the jacking point. Make sure that the jacking point tab is resting in the jack notch.

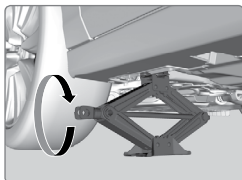

3. Raise the vehicle, using the jack handle bar and the jack handle, until the tire is off the ground.

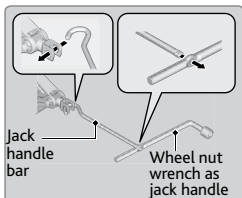

⚠️ WARNING

The vehicle can easily roll off the jack, seriously injuring anyone underneath. Follow the directions for changing a tire exactly, and never get under the vehicle when it is supported only by the jack.



The following instructions must be followed to use the jack safely:

- Do not use the jack with people or luggage in the vehicle.
- Use the jack provided in your vehicle. Other jacks may not support the weight ("load") or fit the jacking point.
- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.

Do not use the jack if it doesn't work properly. Call your dealer or a professional towing service.


■ Replacing the Flat Tire

1. Remove the wheel nuts and flat tire.
2. Mount the compact spare tire. Replace the wheel nuts, and lightly tighten them.
3. Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around, tightening the nuts, two to three times in this order. Do not over tighten the wheel nuts.

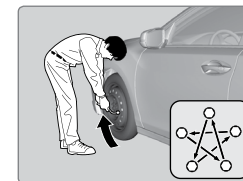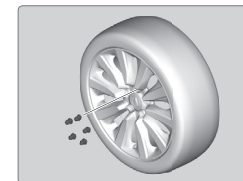

■ Storing the Flat Tire

1. Place the flat tire face down in the spare tire well.
2. Wrap the spacer cone and spare tire wing bolt with cloth or paper, and store them in the spare tire well.
3. Store the jack and tools in the tool case. Place the tool case and the trunk floor lid on the flat tire.
4. Close the trunk.

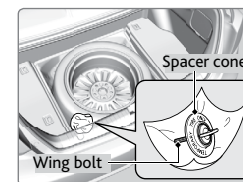

⚠️ WARNING


Loose items can fly around the interior in a crash and can seriously injure the occupants. Store the wheel, jack, and tools securely before driving.

Fuse Locations

If any electrical devices are not working, turn off the vehicle and check to see if any applicable fuse is blown. Fuse locations are shown on the fuse box cover. Locate the fuse by the fuse number and box cover number.

■ Engine Compartment Fuse Boxes


Located near the brake fluid reserve tank. Push the tabs to open the box.

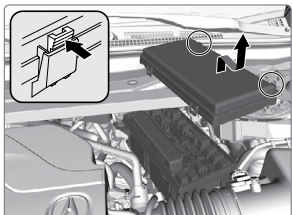

	Circuit Protected	Amps
1	IG1A ACG FR	15 A
2	IG1A MISS SOL1	10 A
3	-	-
4	-	-
5	SMART	7.5 A
6	IG1B ECU FR	7.5 A
7	IG1B OP FR	7.5 A
8	IGP2	15 A
9	DBW	15 A
10	IGP	15 A
11	IG Coil	15 A

	Circuit Protected	Amps
12	ACM	20 A
13	Headlight Washer*	(30 A)
14	Interior Lights	10 A
15	Back Up Radio	10 A
16	Back Up	10 A
17	AFP	10 A
18	Front Washer	15 A
19	Stop	7.5 A
20	Right Headlight High Beam	10 A
21	Trunk	10 A
22	Small	15 A
23	Front Fog Lights*	(7.5 A)
24	Left Headlight High Beam	10 A
25	IMA Motor	15 A
26	Right Headlight Low Beam	15 A
27	Left Headlight Low Beam	15 A
28	IGP2 Sub	7.5 A
29	Power Rear Sunshade *	(20 A)
30	Heated Windshield	20 A
31	Wiper	30 A


Located near the (+) terminal on the 12-volt battery. Push the tabs to open the box.

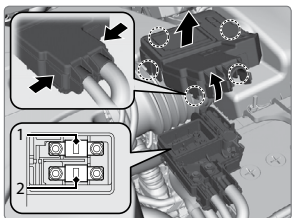

	Circuit Protected	Amps
1	Radiator Fan	50 A
2	EPS	80 A

*if equipped

Located near the 12-volt battery. Push the tabs to open the box.

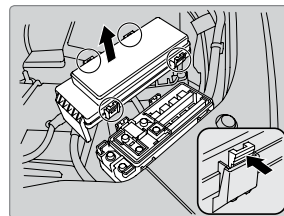


	Circuit Protected	Amps
1	Main Fuse	200 A
	-	40 A
	Rear Defroster	40 A
	DR F/B Main 1	60 A
2	AS F/B Main 1	60 A
	R/B Main 3	50 A
	AS F/B Main 2	60 A
	ABS/VSA RLY	30 A
	Heater Motor	40 A

	Circuit Protected	Amps
	R/B Main 1	60 A
	ESB	40 A
	IG Main	60 A
3	DR F/B Main 2	60 A
	SBW	60 A
	R/B Main 2	60 A
	Horn & Hazard	20 A
	ABS/VSA Motor	40 A
4	EOP	30 A
5	Left Electric Parking Brake	30 A
6	Right Electric Parking Brake	30 A
7	Injector	20 A
8	Hazard	15 A
9	IG 2	7.5 A
10	-	-
11	Horn	10 A



Front Bumper Fuse Box

Located on the the left side of the front bumper. Follow the steps below to access the fuses:



1. Turn the steering wheel all the way to the right. Turn off the power system.

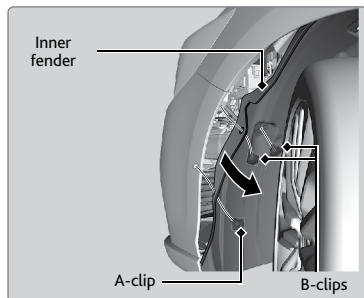

2. Remove the A-clip and the B-clips by inserting a flat-tip screwdriver and lifting the center pins up.

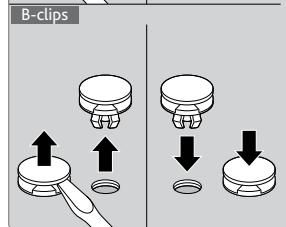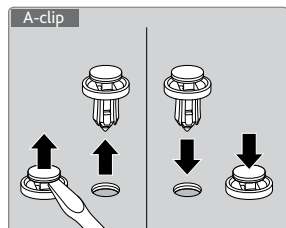


3. Pull the inner fender back.

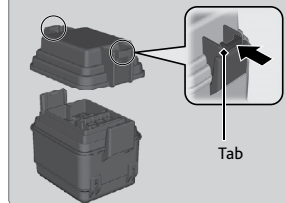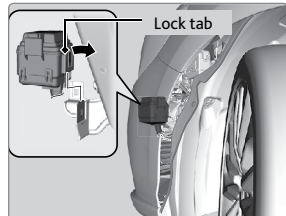

	Circuit Protected	Amps
1	HCA 1	20 A
2	TCU	30 A
3	HCA 2	20 A
4	STRG MOVE 1	20 A
5	-	-
6	-	-

Driver's Side Interior Fuse Boxes

Located under the dashboard.

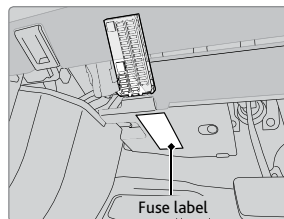


	Circuit Protected	Amps
1	Driver's Side Door Lock	10 A
2	Passenger's Side Door Lock	10 A
3	Driver's Door Lock	10 A
4	Driver's Side Door Unlock	10 A
5	Passenger's Side Door Unlock	10 A
6	Driver's Door Unlock	10 A
7	Door Lock	20 A
8	-	-
9	Power System 1	10 A
10	IG1 DR1	7.5 A
11	Meter	10 A
12	Passenger's Side Fuse Box	20 A
13	ACCESSORY	7.5 A


	Circuit Protected	Amps
14	-	-
15	Driver's Power Seat Sliding	20 A
16	Moonroof	20 A
17	Rear Driver's Side Power Window	20 A
18	STRG MOVE 2	20 A
19	Driver's Power Window	20 A
20	Power System 2	15 A
21	Fuel Pump	20 A
22	Power System 2	7.5 A
23	Starter Cut	7.5 A
24	IG1 DR2	7.5 A
25	Start DIAG	7.5 A
26	Air Conditioning	7.5 A
27	Daytime Running Lights	7.5 A
28	ACC Key Lock	7.5 A
29	Driver's Lumbar Support	7.5 A
30	SMART	10 A
31	-	-
32	Driver's Power Seat Reclining	20 A
33	Left e-pretensioner	(20 A)
34	IG1 Box	30 A

Located inside the driver's side outer panel. When you remove the outer panel, use the following procedure.

1. Pry on the lower edge of the panel using a cloth-wrapped flat-tip screwdriver.
2. Pull the outer panel towards you, then remove it.

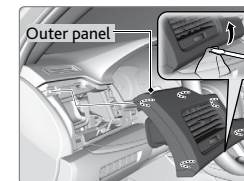


	Circuit Protected	Amps
1	IG Main 2	30 A
2	ST MG	30 A
3	IG Main 1	30 A

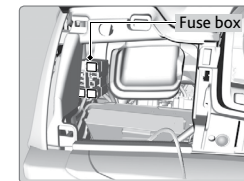

**if equipped*

■ Passenger's Side Interior Fuse Box

Located on the lower side panel. Remove the cover to open.

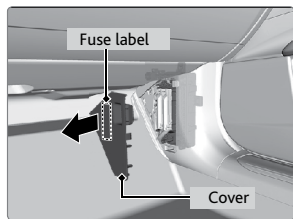

Circuit Protected	Amps
1	-
2	Front Seat Heaters/AVS* 20 A
3	Rear Passenger's Side Power Window 20 A
4	Front Passenger's Lumbar Support 7.5 A
5	Daytime Running Lights 7.5 A
6	A/C Water Pump 10 A
7	Passenger's Power Seat Sliding 20 A
8	Passenger's Power Seat Reclining 20 A
9	Rear Seat Heaters 20 A
10	-
11	Fly Start 15 A
12	Accessory Power Socket (Console Compartment) 20 A




Circuit Protected	Amps
13	Accessory Power Socket (Center Pocket) 20 A
14	AS ECU 7.5 A
15	Glove Box 7.5 A
16	-
17	-
18	Front Passenger's Power Window 20 A
19	SRS1 10 A
20	ABS/VSA 7.5 A
21	Battery ECU 7.5 A
22	e-pretensioner 7.5 A
23	-
24	SRS2 7.5 A
25	Illumination 7.5 A
26	Right e-pretensioner 20 A
27	Heated Steering Wheel 10 A
28	Audio AMP 30 A ^{*1} 40 A ^{*2}

*1: Models without surround view camera system

*2: Models with surround view camera system

■ Inspecting and Changing Fuses

1. Turn off the vehicle, including the headlights and all accessories.
2. Remove the fuse box cover.
3. Check all fuses inside the combined fuse case in the engine compartment. If any fuse is blown, use a Phillips-head screwdriver to remove the screw and replace the fuse with a new one.
4. Inspect the small fuses in the engine compartment and the vehicle interior. If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

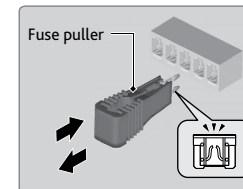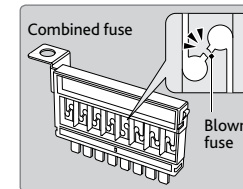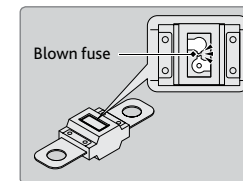

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

Flat bed equipment: The operator loads your vehicle on the back of a truck. **This is the only way you can safely transport your vehicle. Any other towing method will damage the vehicle's drive system.**

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

ACURALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CLIENT INFORMATION

VOICE COMMAND INDEX

INDEX

MAINTENANCE

Learn about basic maintenance that you can perform on the vehicle yourself, as well as information about how to best maintain the vehicle.

Safety Precautions

Some of the most important safety precautions are listed below; however, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the 12-volt battery and all fuel-related parts.
- Never leave rags, towels, or other flammable objects under the hood. Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the 12-volt battery or compressed air.
- Do not run the vehicle in confined spaces where carbon monoxide gas can accumulate.

■ Vehicle Safety

- The vehicle must be in a stationary condition, and parked on level ground with the parking brake set and the vehicle off.
- Be aware that hot parts can burn you.
- Be aware that moving parts can injure you.

⚠️ WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed. Always follow the inspection and maintenance recommendations according to the schedules in this guide.


⚠️ WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed. Always follow the procedures and precautions in this guide.

Maintenance Minder™

Reminds you when indicated maintenance service is due.

When maintenance is due, the system message indicator comes on and the Maintenance Minder appears on the multi-information display every time you turn the vehicle on.

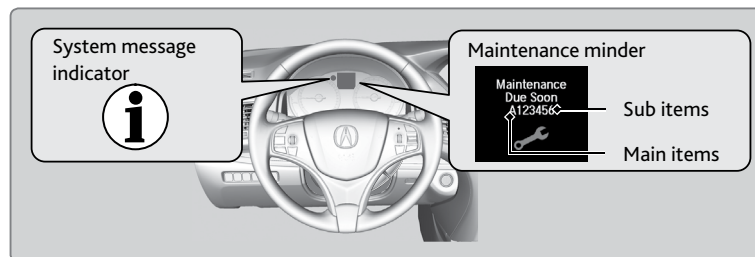

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. Models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display.

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

ACURALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CLIENT INFORMATION

VOICE COMMAND INDEX

INDEX

■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.


CODE	Maintenance Main Items
A	Replace engine oil*1
B	Replace engine oil*1 and oil filter Inspect front and rear brakes Check expiration date for temporary tire repair kit bottle (if equipped) Inspect tie rod ends, steering gearbox, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (Including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system# Inspect fuel lines and connections#

*1: If a message **Maintenance Due Now** does not appear more than 12 months after the display is reset, change the engine oil every year.
#: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	Rotate tires
2	Replace air cleaner element*2 Replace dust and pollen filter*3
3	Replace transmission fluid*4
4	Replace spark plugs Replace timing belt and inspect water pump*5 Inspect valve clearance
5	Replace engine coolant
6	Replace Twin Motor Unit fluid*6



*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).
*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).
*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperature. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under this condition, have the transmission fluid changed at 30,000 miles (48,000 km), then every 25,000 miles (40,000 km).
*5: If you drive regularly in very high temperatures (over 110°F, 43°C), in very low temperatures (under -20°F, -29°C), replace every 60,000 miles (100,000 km).
*6: Driving in mountainous areas at very low vehicle speeds results in higher level of mechanical (Shear) stress to fluid. This requires Twin Motor Unit fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under this condition, have the Twin Motor Unit fluid changed at 7,500 miles (12,000 km), then every 15,000 miles (24,000 km).

Under the Hood

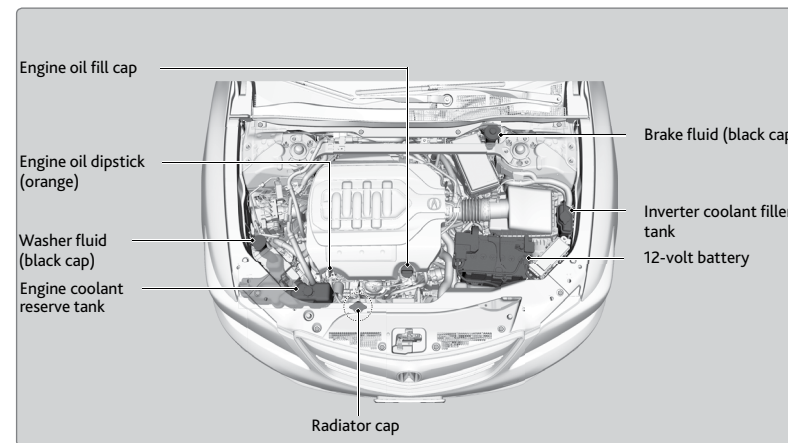

■ Opening the Hood

1. Park the vehicle on a level surface, and apply the electric parking brake.
2. Pull the hood release handle under the lower left corner of the dashboard.
3. Push up the hood latch lever in the center of the hood to release the lock mechanism, then open the hood.
4. Lift the hood up most of the way. The hydraulic supports lift it up the rest of the way and hold it up.

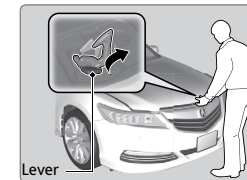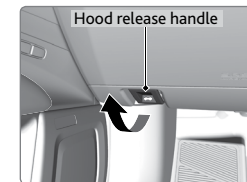


NOTICE

Do not open the hood when the wiper arms are raised. The hood will strike the wipers, and may damage either the hood or the wipers.


■ Engine Compartment Cover

You may need to remove the engine compartment cover when you perform certain maintenance work.

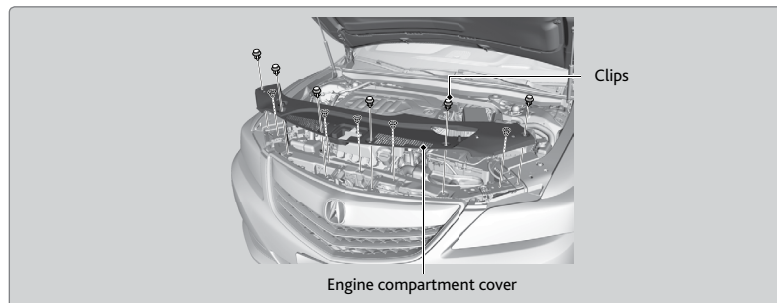


Removing the clips

To remove the clips, insert a flat-tip screwdriver (as shown) to lift and remove the center pin.

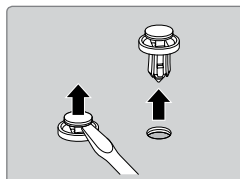

To reinstall the clip, insert the clip with the center pin raised, and push it down until it is flat.


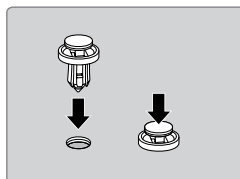


Engine Oil

Park the vehicle on level ground, and wait approximately three minutes after turning off the vehicle before you check the oil.

■ Checking the Oil

1. Open the hood (see page 121). Remove the dipstick (orange loop).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick all the way back into its hole.
4. Remove the dipstick again, and check the level. It should be between the upper and lower marks. Add oil if necessary.

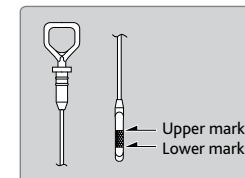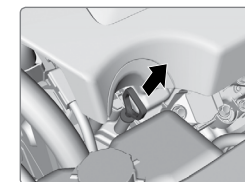

■ Recommended Engine Oil


- Genuine Acura Motor Oil
- Premium-grade 0W-20 detergent oil with an API Certification Seal on the container

This seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.




Use Genuine Acura Motor Oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is of the specified viscosity grade.

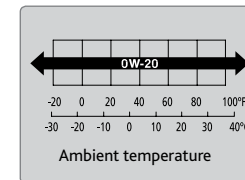

■ Adding Oil

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap, and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

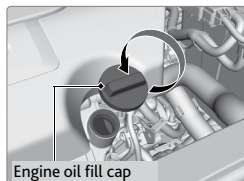

Engine oil fill cap


NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

■ Resetting the Engine Oil Life

If you change or replace the vehicle's engine oil yourself, you must reset the engine oil life. Use the interface dial to make selections.

1. Press Settings.
2. Select Vehicle Settings.
3. Move the interface dial left or right to select Maintenance Info.
4. Select Maintenance Reset.
5. Select Reset. The engine oil life returns to 100%.

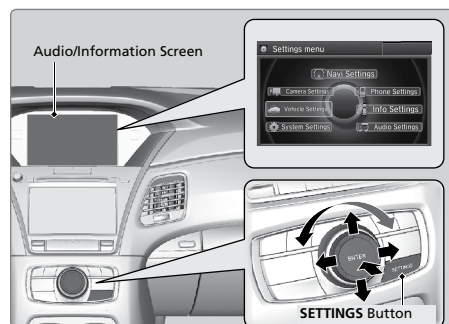

NOTICE


Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

Engine Coolant

Park the vehicle on level ground. Check the reserve tank and the coolant level in the radiator. **We recommend Acura Long Life Antifreeze/Coolant Type 2.**

■ Checking the Reserve Tank

1. Open the hood (see page 121). Check the amount of coolant in the reserve tank.
2. If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
3. Inspect the cooling system for leaks.


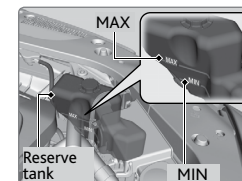


NOTICE

If temperatures consistently below -22°F (-30°C) are expected, the coolant mixture should be changed to a higher concentration. Consult a dealer for more information.

■ Adding Coolant

1. Make sure the engine and radiator are cool.
2. Remove the engine compartment cover (see page 122).
3. Turn the radiator cap counterclockwise and relieve any pressure in the coolant system. Do not push the cap down when turning.
4. Push down and turn the radiator cap counterclockwise to remove it.
5. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
6. Put the radiator cap back on, and tighten it fully.
7. Pour coolant into the reserve tank until it reaches the MAX mark. Put the cap back on the reserve tank.

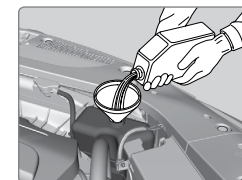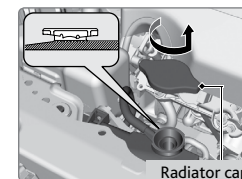

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.


NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Window Washer Fluid

If the washer fluid is low, a message appears on the multi-information display.

Pour the washer fluid carefully (see page 121). Do not overflow the reservoir.

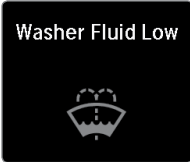


NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

Checking the 12-Volt Battery

The battery condition is monitored by the sensor on the negative terminal. If there is a problem with the sensor, a message appears on multi-information display. Have your vehicle checked by a dealer.

Check the battery terminals for corrosion monthly. For jump starting the battery, see page 99.

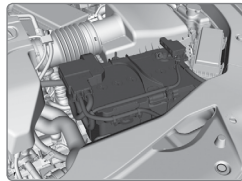

⚠ WARNING







The battery gives off explosive hydrogen gas during normal operation. A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you. When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

Changing Wiper Blades

If the wiper blades leave streaks across the windshield, try cleaning them first with a paper towel or soft cloth and wiper fluid. If the wiper blade rubber has deteriorated, you should change the wiper blades.

1. Turn the vehicle off.
2. Hold the wiper switch in the MIST position, then turn the vehicle on. Both wiper arms lift up. Turn the vehicle off.
3. Lift both wiper arms.
4. Press and hold the tab, then slide the holder out from the wiper arm.
5. Pull the end of the wiper blade to the direction of the arrow in the image until it unfastens from the holder's end cap.
6. Pull the wiper blade to the opposite direction to slide it out from its holder.
7. Insert the flat side of the new wiper blade onto the bottom part of the holder. Insert the blade all the way.
8. Install the end of the wiper blade into the cap.
9. Slide the holder onto the wiper arm until it locks.
10. Lower both wiper arms.
11. Turn the vehicle on, and hold the wiper switch in the MIST position until both wiper arms return to the standard position.

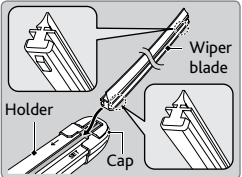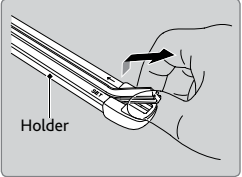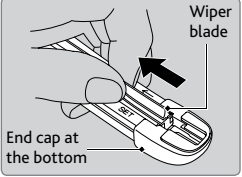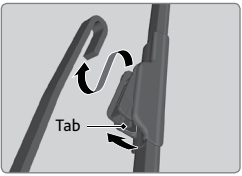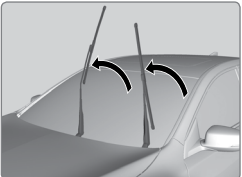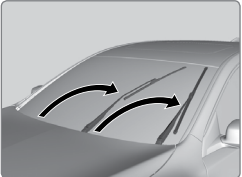

NOTICE

Avoid dropping the wiper arm, as it may damage the windshield.

Tire Information

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

Inflation Guidelines

- Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or the specifications (see page 135) for the specified pressure.
- Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.
- Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.
- Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.
- Measure the air pressure when tires are cold. This means the vehicle has been parked for at least 3 hours, or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached. If checked when hot, tire pressure can be as much as 4-6 psi (30-40 kPa, 0.3-0.5 kgf/cm²) higher than checked when cold.
- At least once a month or before long trips, use a gauge to measure the pressure in all tires, including the spare. Even tires in good condition can lose 1-2 psi (10-20 kPa, 0.1-0.2 kgf/cm²) per month.


Inspection Guidelines

Every time you inflate the tires, check for the following:

- Any damage to tires, including bumps, bulges, cuts, splits, or cracks in the side or tread. Remove any foreign objects and inspect for air leaks. Replace tires if you see fabric or cord.
- Uneven or excessive tread wear. Have a dealer check the wheel alignment.
- Cracks or other damage around the valve stems.

Wear Indicators

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so low that the indicator is exposed, replace the tire. **Worn out tires have poor traction on wet roads.**

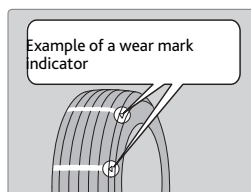

⚠ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed. Follow all instructions in this owner's manual regarding tire inflation and maintenance.

Tire and Loading Information Label

The label attached to the driver's doorjamb provides necessary tire and loading information.

TIRE AND LOADING INFORMATION			
SEATING CAPACITY		TOTAL X	FRONT X REAR X
The combined weight of occupants and cargo should never exceed XXXkg or XXXlbs.			
TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	XXXX/XXXXX XXX	XXXKPA, XXPSI	
REAR	XXXX/XXXXX XXX	XXXKPA, XXPSI	
SPARE	XXXX/XXXXX XXX	XXXKPA, XXPSI	

Tire and Wheel Replacement

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA®) system to work incorrectly. It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

If you change or replace a wheel, make sure that the wheel's specifications match those of the original wheels. Only use TPMS-specified wheels approved for your vehicle.

⚠ WARNING

Installing improper tires on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed. Always use the size and type of tires recommended in the Owner's Manual.

Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires, including the spare, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Winter Tires

If driving on snowy or frozen roads, mount all season tires marked “M+S”, snow tires, or tire chains; reduce speed; and maintain sufficient distance between vehicles when driving. For winter tires, select the size and load ranges that are the same as the original tires, and mount them to all four wheels.

Tire Chains

Install tire chains on the front tires only. Because your vehicle has limited tire clearance, we strongly recommend using the following chains:

Cable type: SCC Radial Chain SC1040.

Mount chains as tightly as you can, and make sure that they do not touch the brake lines or suspension.

NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle’s brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

WARNING

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed. Follow all instructions in this guide regarding the selection and use of tire chains.


Tire Labeling

The tires that came on your vehicle have a number of markings. Those you should be aware of are described below.

Here is an example of what each marking means:


P245/40R19 98W

- P: vehicle type (passenger)
- 245: tire width in millimeters
- 40: aspect ratio (tire section height as a percentage of its width)
- R: tire construction code (radial)
- 19: rim diameter in inches
- 98: load index (code indicating maximum load tire can carry)
- W: speed symbol (code indicating maximum speed rating)

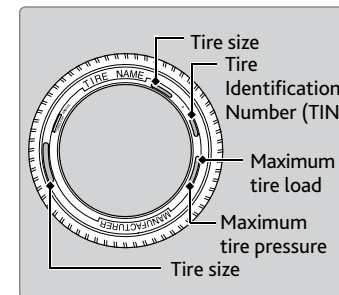

Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example shown. TIN is located on the sidewall of the tire.

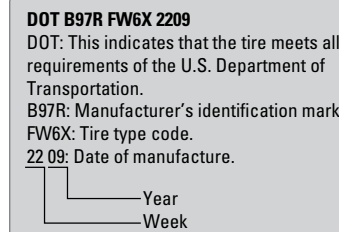

Glossary of Tire Terminology

Cold Tire Pressure – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

Load Rating – The maximum load that a tire is rated to carry for a given inflation pressure.

Maximum Inflation Pressure – The maximum tire air pressure that the tire can hold.

Maximum Load Rating – The load rating for a tire at the maximum permissible inflation pressure for that tire.

Recommended Inflation Pressure – The cold tire inflation pressure recommended by the manufacturer.

Treadwear Indicators (TWI) – The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

DOT Tire Quality Grading

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

■ Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200

Traction AA

Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

■ Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

WARNING: The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

■ Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Testing of Readiness Codes

Your vehicle has readiness codes as part of the onboard self diagnostic system. Some States use these codes for testing to verify whether your vehicle's emissions components are working properly. The codes may not be read if you go through the emissions testing just after the battery has gone dead or been disconnected.

To check if they are set, turn the vehicle on without starting it. The malfunction indicator lamp will come on for several seconds. If it goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle tested before the readiness codes are set, prepare the vehicle for retesting by doing the following:

1. Fill the gas tank to approximately 3/4 full.
2. Park the vehicle and leave the vehicle off for 6 hours or more.
3. Make sure the ambient temperature is between 40°F and 95°F (4°C and 35°C).
4. Turn the vehicle on.
5. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway with the vehicle in Drive in SPORT mode. Do not use cruise control.
6. Drive in city or suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
7. Park the vehicle and turn it off for 40 minutes.

The readiness codes are erased when the 12-volt battery is disconnected, and set again only after several days of driving under a variety of conditions.

If a testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test, or see your dealer.

SPECIFICATIONS

Vehicle

Model	Acura RLX Sport Hybrid
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle Weight Rating	U.S.: 5,379 lbs (2,440 kg) Canada: 2,440 kg
Gross Axle Weight Rating (Front)	U.S.: 2,822 lbs (1,280 kg) Canada: 1,280 kg
Gross Axle Weight Rating (Rear)	U.S.: 2,590 lbs (1,175 kg) Canada: 1,175 kg
Air Conditioning:	
Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	15.3 - 17.1 oz (435 - 485 g)
Lubricant Type	ND-OIL 11
Quantity	7.9 - 8.8 cu.-in. (130 - 145 cm ³)

Fluids

Engine Oil	
Recommended	Genuine Acura Motor Oil 0W-20 API Premium-grade 0W-20 detergent oil
Change	4.2 US qt (4.0 ℓ)
Capacity	Change including filter 4.5 US qt (4.3 ℓ)

Engine Coolant	
Specified	Acura Long Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	2.1 US gal (7.9 ℓ) (change including the remaining 0.225 US gal (0.85 ℓ) in the reserve tank)

Inverter Coolant	
Specified	Acura Long Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	0.32 US gal (1.23 ℓ) (change including the remaining 0.03 US gal (0.11 ℓ) in the reserve tank)

Brake Fluid	
Specified	Acura Heavy Duty Brake Fluid DOT 3

Dual Clutch Transmission Fluid	
Specified	Acura Automatic Transmission Fluid ATF DW-1
Capacity	Change 3.7 US qt (3.5 ℓ)

Twin Motor Unit Fluid	
Specified	Acura Automatic Transmission Fluid ATF DW-1
Capacity	Change 2.56 US qt (2.42 ℓ)

Washer Fluid	
Tank Capacity	U.S.: 2.6 US qt (2.5 ℓ) Canada: 5.3 US qt (5.0 ℓ)

Light Bulbs

Headlights (Low Beam)	LED
Headlights (High Beam)	LED
Fog Lights*	LED
Front Turn Signal/Parking Lights	LED
Front Side Marker Lights	2 CP
Side Turn Signal Lights (on Door Mirrors)	LED
Brake/Tailights/Rear Side Marker Lights	LED
Taillights	LED
Back-Up Lights	LED
Rear Turn Signal Lights	LED
High-Mount Brake Light	LED
Rear License Plate Lights	LED
Door Outer Handle Ambient Lights	LED
Interior Lights	
Front and Rear Map Lights	LED
Front and Rear Ambient Lights	LED
Vanity Mirror Lights	2.1 W
Front Door Pocket Lights	LED
Center Pocket Light	LED
Beverage Holder Light	LED
Door Courtesy Lights	3.4 W
Console Compartment Light	LED
Glove Box Light	LED
Front and Rear Foot Lights	LED
Door Inner Handle Lights	LED
Trunk Light	5 W

Engine and Fuel

Engine	
Displacement	212 cu-in (3,471 cm ³)
Spark Plugs	NGK DILZKR7B11G

Fuel	
Type	Unleaded premium gasoline, Pump octane number of 91 or higher
Fuel Tank Capacity	15.1 US gal (57 ℓ)

Tires

Regular		Size	245/40R19 98W
		Pressure psi (kPa [kgf/cm ²])	36 (250 [2.5])
Compact Spare ^{*1}		Size	T155/70D17 110M
		Pressure psi (kPa [kgf/cm ²])	60 (420 [4.2])
Wheel Size		Regular	19 x 8J
		Compact Spare ^{*1}	17 x 4T

*1: Vehicles with optional spare tire kit

*if equipped

CLIENT INFORMATION

Learn about information specific to you as an Acura client and how to get help.

Frequently Asked Questions/Troubleshooting

Below are some frequently asked questions and troubleshooting items that you may have about the vehicle.

Q: *How do I set the vehicle clock?*

A: You can adjust the clock time from the Settings menu (see page 45).

Q: *Why doesn't the vehicle start when I press the ENGINE START/STOP button?*

A: The brake pedal must be pressed to start the engine.

Q: *What is the AUTO setting on my headlight lever?*

A: When in the AUTO position, the vehicle's exterior lights will automatically turn on or off depending on the ambient lighting.

Q: *Why won't the driver's door unlock when I grab the door handle, even though the keyless access remote is within range?*

A: If you pull the handle too quickly, the system may not have time to confirm the door is unlocked. Wait to hear a beep to confirm the door is unlocked. If you are wearing gloves, the system may be slow to respond.

Q: *After my battery was disconnected or went dead, the audio system is asking for a code. Where do I find this?*

A: In most cases, you do not need to enter a code. Turn on the vehicle and the audio system, and press and hold the power button until the system reactivates.

Q: *Why can't I select an item using the interface dial?*

A: To prevent driver distraction, certain items are limited are inoperable while the vehicle is moving. Use voice commands or pull over to select the items.

Q: *Where can I find the vehicle identification number (VIN)?*

A: Check the label on the driver's doorjamb.

Q: *Why can't I operate Pandora through the audio system?*

A: Audio may be streaming through *Bluetooth* Audio. Make sure Pandora mode is selected and the phone cable is properly connected to the USB adapter (if applicable). Some phones may prompt you to "Allow" a connection.

Q: *Is my phone compatible with Bluetooth features?*

A: Visit www.handsfreelink.com/Acura (U.S) or www.handsfreelink.ca (Canada) to check phone compatibility for *Bluetooth* Audio, *Bluetooth* HandsFreeLink, and SMS text messaging and/or e-mail.

Q: *Every time I press the Talk button, the system gives me voice prompts. Can I turn these off?*

A: Press SETTINGS. Use the interface dial to select System Settings then Voice Prompt. Select Off.

Contact Us

Acura dealer personnel are trained professionals. They should be able to answer all your questions. If you encounter a problem that your dealership does not solve to your satisfaction, please discuss it with the dealership's service manager or general manager. If you are dissatisfied with the decision made by the dealership's management, contact Acura Client Relations/Services.

U.S. Owners:

American Honda Motor Co., Inc.
Acura Client Relations
1919 Torrance Blvd.
Mail Stop 100-5E-8F
Torrance, CA 90501-2746
Tel: (800) 382-2238

In Puerto Rico and the U.S. Virgin Islands:

Bella International
P.O. Box 190816
San Juan, PR 00919-0816
Tel: (787) 620-7546

Canadian Owners:

Honda Canada, Inc.
Acura Client Services
180 Honda Blvd.
Markham, ON
L6C 0H9
Tel: (888) 922-8729
Fax: (877) 939-0909
E-Mail: acura_cr@ch.honda.com

When you call or write, please give us the following information:

- Vehicle Identification Number
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

U.S. Environmental Protection Agency
Office of Transportation and Air Quality
Compliance Division,
Light-Duty Vehicles Group
Attn: Warranty Complaints
2000 Traverwood Drive
Ann Arbor, MI 48105
Email: complianceinfo@epa.gov

Acura Total Luxury Care Roadside Assistance

Your Acura TLC Roadside Assistance representative is here to help you 24 hours a day, 7 days a week by calling (800) 594-8500 (U.S.) or (800) 565-7587 (Canada). Under your 4-year/50,000-mile (80,000 km) warranty, the following benefits are available:

- Towing services — full cost of towing to the closest Acura dealer
- Roadside assistance — jump starting, fuel delivery, lockout, and flat tire
- Trip planning — detailed trip routing, emergency services, and more

Warranty Coverages

Below is a brief summary of the warranties covering your new vehicle.

New Vehicle Limited Warranty: Covers your new vehicle, except for the emissions control system and accessories, against defects in materials and workmanship.

Emissions Control Systems Defects Warranty and Emissions Performance Warranty: Covers your vehicle's emissions control systems. Time, mileage, and coverage are conditional.

Seat Belt Limited Warranty: Covers seat belts that fail to function properly.

Rust Perforation Limited Warranty: Covers all exterior body panels that rust through from the inside.

Accessory Limited Warranty: Covers Acura accessories.

Replacement Parts Limited Warranty: Covers all Acura replacement parts against defects in materials and workmanship.

Replacement 12-Volt Battery Limited Warranty: Provides prorated coverage for a replacement battery purchased from an Acura dealer.

Replacement Muffler Lifetime Limited Warranty: Covers a replacement muffler for the duration of the ownership.

Restrictions and exclusions apply to all these warranties. See the Warranty CD or visit owners.acura.com (U.S.) or www.myacura.ca (Canada) for complete descriptions of each warranty, including time, mileage, and other conditional limitations.

Your vehicle's original tires are covered by their manufacturer. Tire warranty information can be found on the Warranty CD or owners.acura.com (U.S.) or www.myacura.ca (Canada).

VOICE COMMAND INDEX

Learn about all available voice commands to help you operate the vehicle.

To view a list of available commands in the vehicle, press the INFO button and use the interface dial to select Voice Info. Select a category to hear the commands read aloud.

■ Voice Portal Commands

When you press the Talk button, the Voice Portal screen appears. Say one of the options, and follow the system prompts.

- Phone call
- Music search
- Voice help
- Navigation
- Audio
- Climate control
- What is today's date?
- What time is it?
- Call (number)
- Call (contact name)

■ Navigation Commands

When you press the Talk button and say "Navigation," you can say one of the options below. Follow the system prompts.

- Address (U.S. only)
- Place name (U.S. only)
- Find nearest POI category
- Go home
- Previous destination
- Address book
- Place phone number

■ Climate Control Commands

When you press the Talk button and say "Climate control," you can say one of the options below. Follow the system prompts.

- Climate control automatic
- Climate control on*
- Climate control off*
- Air conditioner on*
- Air conditioner off*
- Defrost on*
- Defrost off*
- Fan speed up
- Fan speed down
- Fan speed # (#: 1 to 7)
- Temperature # (#: 57 to 87°F, 18 to 32°C) degrees
- Temperature up
- Temperature down
- Temperature max heat
- Temperature max cool
- Vent
- Dash and floor
- Floor vents
- Floor and defrost

■ Phone Commands

When you press the Talk button and say "Phone call," you can say one of the options below. Follow the system prompts.

- Call/dial (contact name)
- Dial by number
- Redial
- Call history

*These commands toggle the function on and off, so the command may not match your intended action.

Audio Commands

When you press the Talk button and say “Audio,” you can say one of the options below. Follow the system prompts. Volume levels cannot be controlled using voice commands.

FM/AM Radio Commands

- Audio on*
- Audio off*
- FM
- AM
- Radio tune to # FM (#: frequency, e.g., 95.5)
- Radio tune to # AM (#: frequency, e.g., 1020)
- Radio FM preset # (#: 1 to 12)
- Radio AM preset # (#: 1 to 6)

Hard Disc Drive (HDD) Commands

- HDD
- HDD play
- HDD play track # (#: 1-30)

iPod Commands

- iPod
- iPod play
- iPod play track # (#: 1-30)

Bluetooth Audio Commands

Commands may not work on some phones or devices.

- *Bluetooth* audio
- *Bluetooth* audio play

Song By Voice Commands

Available for tracks stored on the HDD or iPod.

- Music search
- What/Who am I listening to?
- Who is this?
- What’s playing?
- Who’s playing?
- What album is this?
- Play artist <Name>
- Play album <Name>
- Play song <Name>
- Play composer <Name>
- Play genre <Name>
- Play playlist <Name>
- List artist <Name>
- List album <Name>
- List composer <Name>
- List genre <Name>
- List playlist <Name>

**These commands toggle the function on and off, so the command may not match your intended action.*

SiriusXM Radio Commands

- SXM
- SXM channel # (#: 0 to 255)
- SXM preset # (#: 1 to 12)

Disc Commands

- Disc
- Disc play
- Disc play track # (#: 1 to 30)

USB Commands

- USB
- USB play
- USB play track # (#: 1 to 30)

Pandora Commands

- Pandora
- Pandora play

Aha Radio Commands

- Aha
- Aha radio play

INDEX

ABS (Anti-lock Brake System) indicator.....22	Automatic Rain-Sensing Wipers.....39
ACC indicator.....23, 25	Auto park mode.....85
Acoustic Vehicle Alerting System.....83	Auxiliary Input Jack.....50
AcuraLink®.....68	Battery.....126
ASSIST button.....69	Battery Types.....80
Emergency Assistance.....69	Blind Spot Information (BSI) System.....96
LINK button.....69	Blind Spot Information system indicator.....23
Messages.....68	Bluetooth® Audio.....58
Operator Assistance.....69	Bluetooth® Audio Commands.....140
Security Features.....69	Bluetooth® Handsfreelink®.....61
Subscription Features.....69	Call History.....66
AcuraLink featuring Aha.....60	Dialing a Number.....64
AcuraLink Real-Time Traffic.....76	Displays and Controls.....61
Acura Total Luxury Care Roadside Assistance..138	E-Mail.....67
Adaptive Cruise Control (ACC).....89	Making a Call.....64
Adaptive Cruise Control indicator.....23	On-Demand Multi-Use Display (ODMD).....62
Advanced Airbags.....8	Pairing a Phone.....63
Aha.....60	Phonebook.....65
Aha Radio™ Commands.....140	Roadside Assistance.....67
Airbags.....8	SMS Text Messaging.....67
Advanced Airbags.....8	Speed Dial.....65, 66
Airbag Care.....13	Talk Button Tips.....62
Airbag System Components.....12	Brake Assist System.....87
Airbag System Indicators.....10	Brake Hold.....88
Driver’s Knee Airbag.....8	Brake system indicator.....22, 23
Front Airbags (SRS).....8	Braking.....87
Important Facts About Your Airbags.....10	Brightness Control.....35
Side Airbags.....9	BSI indicator.....23
Side Curtain Airbags.....9	BSI off indicator.....25
Anti-Lock Brake System (ABS).....87	Call History.....66
Anti-lock Brake System indicator.....22	Carbon Monoxide Gas.....4
ASSIST button.....69	Car wash mode.....85
Audio Commands.....140, 146	Change a Setting.....45
Audio Operation.....50	Changing a Flat Tire.....109
Aha.....60	Changing Fuses.....117
Auxiliary Input Jack.....50	Charging system indicator.....22
Bluetooth® Audio.....58	Childproof Door Locks.....31
Compact Disc (CD).....55	Child Safety.....14
FM/AM Radio.....53	Childproof Door Locks.....31
Hard Disk Drive (HDD) Audio.....56	Child Seat.....16
iPod.....57	Adding Security with a Tether.....19
On-Demand Multi-Use Display (ODMD).....52	Installing a Child Seat.....18
Pandora.....59	Installing a LATCH-Compatible Child Seat.....17
SiriusXM® Radio.....54	LATCH-Compatible Child Seat.....17
Sound.....51	Selecting a Child Seat.....16
Steering Wheel Controls.....51	Client Information.....136
USB Flash Drive.....55	Climate Control Commands.....139
USB port.....50	Climate Control System.....47
Auto Engine Stop.....81	Clock.....45
Automatic Brake Hold.....88	CMBS indicator.....23, 25
Automatic Brake Hold indicator.....25	Collision Mitigation Braking System™.....93
Automatic Dimming Rearview Mirror.....44	Compact Disc (CD).....55

TABLE OF CONTENTS
VISUAL INDEX
SAFETY INFORMATION
INSTRUMENT PANEL
VEHICLE CONTROLS
AUDIO AND CONNECTIVITY
BLUETOOTH® HANDSFREELINK®
ACURALINK®

NAVIGATION
DRIVING
HANDLING THE UNEXPECTED
MAINTENANCE
SPECIFICATIONS
CLIENT INFORMATION
VOICE COMMAND INDEX
INDEX

Compact Disc Commands.....	140	Engine Coolant.....	125
Condition Indicators.....	24	Engine Oil.....	123
Contact Us.....	137	Engine Oil Life.....	124
Customized Features.....	45	Engine Power Button.....	83
Dashboard and Ceiling Controls.....	2	EPS indicator.....	23
Destination.....	73	Exterior Lights.....	35
Detour.....	76	Exterior lights indicator.....	25
Dialing a Number.....	64	Fastening a Seat Belt.....	7
Door Mirrors.....	44	FCW off indicator.....	25
Door Operation.....	31	Find Nearest Place.....	74
Walk Away Auto Lock.....	32	Floor Mats.....	42
Doors.....	30	Fluids.....	135
Childproof Door Locks.....	31	FM/AM Radio.....	53
Front Door Inner Handle.....	31	FM/AM Radio Commands.....	140
Lock Tab.....	31	Fog lights indicator.....	25
Master Door Lock Switch.....	31	Foot Brake.....	87
DOT Tire Quality Grading.....	132	Frequently Asked Questions.....	136
Driver's Knee Airbag.....	8	Front Airbags (SRS).....	8
Driver's Side Interior Fuse Boxes.....	115	Front Door Inner Handle.....	31
Driving.....	77	Front Seats.....	40
Adaptive Cruise Control (ACC).....	89	Fuel gauge.....	25
Blind Spot Information (BSI).....	96	Fuel Information.....	102
Braking.....	87	Fuse Locations.....	112
Collision Mitigation Braking System.....	93	Passenger's Side Interior Fuse Box.....	114
Exterior Checks.....	77	Garage Opener.....	46
Interior Checks.....	77	Gauges.....	25
Lane Keeping Assist System (LKAS).....	91	Hang-Up/Back button.....	61
Maximum Load Limit.....	78	Hard Disc Drive (HDD) Audio.....	56
Multi-View Rear Camera.....	98	Hard Disc Drive (HDD) Commands.....	140
Parking Sensor System.....	97	Headlight Washers.....	39
Power Mode.....	83	Headlight-Wiper Integration.....	38
Reactive Force Pedal.....	84	Head Restraints.....	41
Refueling.....	102	Head-Up Display.....	26
Remote Engine Start.....	82	Heated Steering Wheel.....	48
Road Departure Mitigation (RDM).....	95	High beams indicator.....	25
Shifting.....	84	High temperature indicator.....	23
Sport Hybrid System.....	80	High voltage battery charge level.....	25
SPORT Mode.....	86	Home Address.....	73
Surround View Camera.....	99	HomeLink Garage Opener.....	46
Traffic Jam Assist.....	92	Hybrid Sounds.....	81
Driving Position Memory System.....	43	Immobilizer indicator.....	25
Electric Parking Brake.....	87	Installing a Child Seat.....	18
Electric Parking Brake indicator.....	23, 24	Installing a LATCH-Compatible Child Seat.....	17
Electric Parking Brake System indicator.....	23	Instrument Panel.....	22
Electric Power Steering indicator.....	23	Condition Indicators.....	24
Electronic Gear Selector.....	84	Gauges.....	25
Electronic Stability Control (ESC).....	97	Head-Up Display.....	26
E-Mail.....	67	Malfunction Indicators.....	22
Emergency Assistance.....	69	Multi-Information Display.....	28
Emergency Power System Off.....	103	On/Off Indicators.....	25
Emergency Towing.....	117	Interface Dial Feedback.....	72
Energy Efficiency.....	80	Interior Fuse Boxes.....	115, 116
Engine and Fuel.....	135	Interior Lights.....	35, 36
Engine Compartment Cover.....	122	iPod.....	57
Engine Compartment Fuse Boxes.....	112	iPod® Commands.....	140

Jump Starting.....	104	Routing.....	75
Keyless Access System.....	30	Steering Wheel Controls.....	70
Keyless Access system indicator.....	23	Street Address.....	73
Lane Keeping Assist System indicator.....	23	System Guidance Volume.....	72
Lane Keeping Assist System (LKAS).....	91	Talk Button Tips.....	70
Lap/Shoulder Seat Belts.....	5	Traffic.....	76
LATCH-Compatible Child Seat.....	17	Turn-by-Turn Directions.....	75
Light Bulbs.....	135	Voice Prompt.....	72
Lights.....	35	Navigation Commands.....	139
Brightness Control.....	35	On-Demand Multi-Use Display (ODMD).....	52
Exterior Lights.....	35	One-Touch Turn Signal.....	38
Interior Lights.....	35, 36	On/Off Indicators.....	25
Map Lights.....	36	Opening the Hood.....	121
Lights indicator.....	25	Opening the Trunk.....	30
LINK button.....	69	Operator Assistance.....	69
LKAS indicator.....	23, 25	Overheating.....	105
Locking the Doors.....	30	Pairing a Phone.....	63
Lock Tab.....	31	Pandora.....	59
Low fuel indicator.....	24	Pandora® Commands.....	140
Low oil pressure indicator.....	22	Parking Brake.....	87
Low Speed Follow (LSF).....	89	Parking Sensor System.....	97
Low temperature indicator.....	24	Passenger Airbag Off Indicator.....	11
Low tire pressure indicator.....	24	Passenger's Side Interior Fuse Box.....	114, 116
Maintenance.....	118	Phone.....	63
Battery.....	126	Phonebook.....	65
Engine Coolant.....	125	Phone Commands.....	139
Engine Oil.....	123	Pick-Up button.....	61
Maintenance Minder.....	119	Place Category.....	74
Opening the Hood.....	121, 122	POWER button.....	83
Safety Precautions.....	118	Power Distribution Monitor.....	27
Service Codes.....	120	Power Door Mirrors.....	44
Under the Hood.....	121	Power Mode.....	83
Window Washer Fluid.....	126	Power Moonroof.....	34
Making a Call.....	64	Power Rear Sunshade.....	48
Malfunction indicator lamp.....	22	Power System indicator.....	24
Malfunction Indicators.....	22	Power Window.....	33
Map Legend.....	75	RDM indicator.....	23
Map Lights.....	36	Reactive Force Pedal.....	84
Master Door Lock Switch.....	31	Readiness Codes.....	134
Maximum Load Limit.....	78	READY indicator.....	25
Mirrors.....	44	Rear Camera.....	98
Moonroof.....	34	Rear Sunshade.....	48
Multi-Information Display.....	28	Rear Temperature Control Dial.....	48
Multi-View Rear Camera.....	98	Rearview Mirror.....	44
Navigation.....	70	Refueling.....	102
AcuraLink Real-Time Traffic.....	76	Regenerative Energy and Braking.....	80
Detour.....	76	Remote Battery Strength.....	103
Display and Controls.....	71	Remote Engine Start.....	82
Entering a Destination.....	73	Remote Transmitter.....	29
Find Nearest Place.....	74	Reporting Safety Defects.....	21
Home Address.....	73	Reserve Tank.....	125
Interface Dial Feedback.....	72	Reverse Tilt Door Mirrors.....	44
Map Legend.....	75	Road Departure Mitigation (RDM) System.....	95
ODMD Shortcuts.....	74	Roadside Assistance.....	67, 138
Place Category.....	74	Routing.....	75

Safety Information.....	3	Tire Information.....	128
Carbon Monoxide Gas.....	4	Inflation Guidelines.....	128
Child Safety.....	14	Inspection Guidelines.....	128
Reporting Safety Defects.....	21	Tire and Loading Information Label.....	129
Safety Label Locations.....	20	Tire and Wheel Replacement.....	129
Safety Messages.....	3	Tire Chains.....	130
Seat Belts.....	5	Tire Service Life.....	130
Adjusting the Shoulder Anchor.....	7	Tire Terminology.....	131
Fastening a Seat Belt.....	7	Wear Indicators.....	128
Lap/Shoulder Seat Belts.....	5	Winter Tires.....	130
Proper Use of Seat Belts.....	5	Tire Labeling.....	131
Seat Belt Inspection.....	6	Tire Identification Number (TIN).....	131
Seat belt reminder indicator.....	24	Tire Pressure Monitoring System indicator.....	23
Seat Heaters.....	49	Tire Pressure Monitoring System (TPMS).....	106
Seats.....	40	Tire Repair Kit.....	108
Seat Ventilation.....	49	Tires.....	135
Sequential Shift Mode.....	86	Tire Service Life.....	130
Service Codes.....	120	TPMS indicator.....	23
Setting the Clock.....	45	Traffic.....	76
Shifting.....	84	Traffic Jam Assist.....	92
Electronic Gear Selector.....	84	Troubleshooting.....	136
Sequential Shift Mode.....	86	Trunk.....	30
Shoulder Anchor.....	7	Trunk Release Button.....	31
Side Airbags.....	9	Turn-by-Turn Directions.....	75
Side Curtain Airbags.....	9	Turn Signal.....	38
SiriusXM® Radio.....	54	Turn signal indicator.....	25
SiriusXM® Radio Commands.....	140	Under the Hood.....	121
SMS Text Messaging.....	67	Unique Hybrid Sounds.....	81
Song By Voice™ Commands.....	140	Unlocking the Doors.....	30
Sound.....	51	USB Commands.....	140
SOURCE button.....	51	USB Flash Drive.....	55
Specifications.....	135	USB Port.....	50
Speed Dial.....	65, 66	Vehicle Controls.....	29
Speedometer.....	25	Vehicle Specs.....	135
Sport Hybrid System.....	80	Vehicle Stability Assist system indicator.....	23
SPORT Mode.....	86	Vehicle Stability Assist (VSA®).....	97
SPORT mode indicator.....	25	Visual Index.....	1
SRS indicator.....	10, 23	Voice Command Index.....	139
Steering Wheel.....	43	Voice Prompt.....	72
Steering Wheel and Nearby Controls.....	1	VSA indicator.....	23, 25
Steering Wheel Controls.....	51, 70	VSA off indicator.....	25
Street Address.....	73	Walk Away Auto Lock.....	32
Supplemental Restraint System indicator.....	23	Warranty Coverages.....	138
Surround View Camera.....	99	Wear Indicators.....	128
System Guidance Volume.....	72	Window.....	33
System message indicator.....	24	Window Washer Fluid.....	126
Tachometer.....	25	Winter Tires.....	130
Talk Button.....	61	Wiper.....	38
Talk Button Tips.....	62, 70	Wiper Blades.....	127
Text Messaging.....	67		
Tire Chains.....	130		


DISCLOSURES

■ California Proposition 65 Warning

⚠️WARNING: Operating, servicing and maintaining a passenger vehicle or offroad vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

■ California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR-type batteries in this vehicle may contain perchlorate materials—special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate/ for more information.

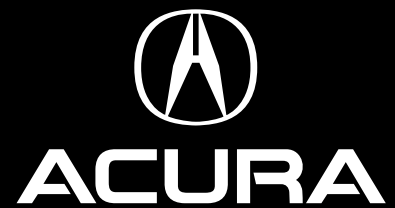

31TY3G20
OG-09065
00X31-TY3-G201

owners.acura.com

2018 Acura RLX Sport Hybrid Owner's Guide
©2018 Honda Motor Co., Ltd. — All Rights Reserved

Printed in U.S.A.