TECHNOLOGY
REFERENCE
GUIDE





www.owners.honda.com



TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of the technology items.

This guide is not intended as a substitute for the Owner's Manual. For complete information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

As with the Owner's Manual, this guide covers all trim levels of the Insight. Therefore, you may find descriptions of equipment and features that are not on your particular vehicle.

Auto Door Locks	<mark>2</mark>
Fuel Fill Door	3
Instrument Panel Indicators	<mark>4</mark>
Multi-Information Display (MID)	6
Eco Assist TM	
Auto Idle Stop	11
Paddle Shifting (if equipped)	
Tire Pressure Monitoring System (TPMS)	
IMA Charge/Assist Gauge	





PC Card (models with navigation)	14
Pod® or USB Flash Memory (if equipped)	
Voice Recognition (if equipped)	16
Navigation (if equipped)	<mark>22</mark>
Bluetooth® HandsFreeLink® (HFL) (if equipped)	
Owner Link	
Safety Reminder	28
Fuel Recommendation	28

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Default Lock/Unlock Setting

Default Lock Setting

All doors and the hatch are preset to lock when your vehicle reaches about 10 mph.







Default Unlock Setting

Only the driver's door and the hatch are preset to unlock when you shift into Park (P).







Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See your owner's manual for additional instructions on programming these settings.

AUTO DOOR LOCK

10-**Auto Lock**





out of Park

Turn off **Auto Lock**



Operate manually

AUTO DOOR UNLOCK

Auto Unlock (all doors and hatch)





When you turn the ignition OFF

Auto Unlock (only driver's door and hatch)





When you turn the ignition OFF

When you shift into Park

Turn off **Auto Unlock**



Operate manually

Programming the Auto Door Unlock Setting

Press and hold either Info (\triangle/∇) button on the steering wheel to activate the "Customize Settings" display on the MID, then press SEL/RESET to activate the menu.

I. Select "CHG SETTING."



2. Select "DOOR SETUP"



3. Select "AUTO DOOR UNLOCK."



4. **Select** "ALL DOORS WITH SHIFT TO P."



5. The display returns to the AUTO DOOR UNLOCK menu.



FIIFI FILL DOOR

Easy-to-open fuel door keeps your fuel cap covered.

Opening and Closing the Fuel Fill Door

To open, push and release the fuel door in the area shown until it pops open.







To close, **push** the fuel door until it is flush with the body.





INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.




Malfunction Indicators If an indicator remains on, there may be a problem; see a dealer.






ABS (anti-lock brake system)

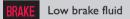



IMA system

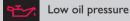



Malfunction indicator lamp (check engine light)



SRS (supplemental restraint system)



VSA (vehicle stability assist)*





TPMS (blinks and stays on) (tire pressure monitoring system)



Low temperature



Brake system

Condition Indicators Action is needed by driver.






Seat belt reminder:



Door/Hatch open: Close door(s) / hatch



Low fuel: Refill

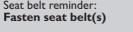



Low tire pressure on: Add air



High temperature indicator: Pull over and cool down engine



Message indicator: **See MID**

On/Off Indicators



SIDE AIRBAG OFF



ECON mode on



PASSENGER AIRBAG OFF (center audio panel)

Auto Idle Stop on (blinking)



Immobilizer Flashes: improperly coded key; use correct key



VSA OFF*



Exterior lights on

Turn signals/hazards on



CRUISE MAIN on*



High beams on



CRUISE CONTROL on*

* if equipped

MULTI-INFORMATION DISPLAY (MID)

Accessing the Multi-Information Display

DX



LX, EX



When you start the engine, the MID shows the main display.



To toggle between the MID displays, **press** the Info button (▲/▼) for the main displays, and **press** the SEL/RESET button for the sub-displays.




When you start the engine, the MID shows the main display.



To toggle between the MID displays, **press** either Info button $(\blacktriangle/\blacktriangledown)$ for the main displays, and **press** the SEL/RESET button for the sub-displays.



Consists of several displays that provide you with useful information.

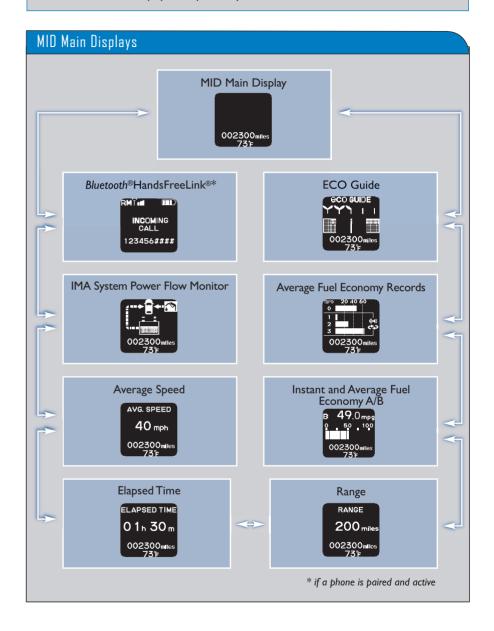

ECO ASSIST™


Monitors your driving style, then provides real-time feedback you can use to develop a style that maximizes fuel economy. It is always on and consists of the ECO Guide (on the MID), Ambient Meter, ECON button, and ECON indicator.

Activating the ECON Mode

Helps you further maximize your fuel economy by modifying some vehicle functions.

I. Press the ECON button.



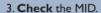





2. The **ECON** mode indicator comes on.




4. **Press** either INFO (▲/▼) button and **toggle** to the Eco Guide Feedback Monitor.



Driver Feedback



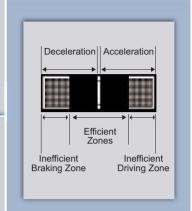

Real-time Fuel Efficiency Coach				
Driving Style	Eco Drive Bar (on the MID)	Ambient Meter Background Color Changes	Fuel Efficiency	
Smooth, steady acceleration maximizes fuel efficiency		CO	High	
Smooth, steady deceleration maximizes fuel efficiency		BU mph		
Moderate acceleration		E/I		
Moderate deceleration		L L moh		
Rapid acceleration lowers fuel efficiency		EII		
Rapid deceleration lowers fuel efficiency		U mpli	Low	

Goals:

- Keep the Eco Drive bar near the center.
- Keep the Ambient Meter at GREEN.
- Develop a driving style that maximizes fuel efficiency.

NORMAL/ECON mode shown

ECO Assist Scoring

Monitors the fuel efficiency of your driving style in real time and converts results into leaves, which are displayed in a series of five "plant" icons on the MID.

Once you start your vehicle, make sure the MID shows the **Eco Guide** Monitor on the display to view your Eco Assist score in real time.



As you drive, you earn leaves if you drive in a fuel-efficient manner, or lose them if you drive inefficiently.







When you turn the ignition off, your drive cycle and lifetime score are displayed on the MID.








Eco Score

Each time you reach a new stage, a Stage Up Recognition icon briefly appears on the MID. When you reach the highest ranking, a Trophy icon briefly appears.

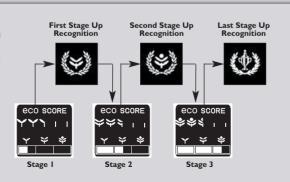

AUTO IDLE STOP

Shuts the engine off at a stop in order to maximize fuel efficiency. Idle stop duration varies depending on certain conditions, such as climate control operation, IMA battery level, and outside temperature.

How It Works







While driving, the engine is on.

While at a stop, with the brake pedal pressed, the engine turns off.

When you take your foot off the brake pedal, the engine turns back on.

Note: Auto Idle Stop only functions if you come to a stop with the shift lever in the D or N position.

PADDLE SHIFTING (if equipped)

Manually shift your vehicle's speeds up or down. Useful for engine braking, when driving in hilly terrain, or cornering.

Paddle Modes

Pull (-) to shift down.







D-Paddle Shift Mode

- Put the shift lever in the D position.
- **Pull** (+) or (-) to temporarily switch from automatic to manual shift mode.
- The speed number is displayed on the shift indicator.
- When the vehicle's speed is constant, the mode returns to automatic.

7-Speed Manual Shift Mode

- Put the shift lever in the S position.
- Pull (+) or (-) to switch to manual shift mode.
- The M indicator and speed number are displayed on the shift indicator.
- Pull and hold (+) to cancel this mode.

L (Low) Mode

- Pull and hold (+) and (-) at the same time until L is displayed on the shift indicator.
- Use this mode to get higher torque when climbing steep hills.
- Pull and hold again to cancel this mode.







TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





Each tire valve stem contains a TPMS sensor.





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on and "CHECK TIRE PRESSURE" appears on the MID.

What to Do

- 1. Visually inspect the tires for damage.
- Use a tire air pressure gauge to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.







12)


IMA CHARGE/ASSIST GAUGE

Shows the status of the Integrated Motor Assist (IMA) sytem.

IMA Gauge

The gauge shows you when the IMA motor is assisting the engine or charging the battery.

Note: The IMA assist may not operate under certain conditions.

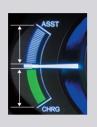



PC CARD (models with navigation)

Play audio files from your compatible PC card through your vehicle's audio system.

Connecting Devices and Playing Audio Files

I. Press OPEN.





3. **Insert** the PC card into the slot and **press** CLOSE.



2. If necessary, **insert** your PC card into a PC card adapter.



 4. Press AUDIO to show the audio display. Press the |◄◄ and ▶►| buttons to skip through tracks on the card.



IPOD® OR USB FLASH MEMORY (if equipped)

Play audio files from your compatible iPod or USB flash memory device through your vehicle's audio system.

Connecting Devices and Playing Audio Files

1. **Pull out** the USB adapter cable from the center console.





2. **Connect** the USB connector to your iPod dock connector or flash drive.





3. **Push** the AUX button or **touch** the USB icon to begin playing.

without navigation







4. **Press** the SKIP buttons to change tracks.

without navigation





with navigation





 $iPod\ is\ a\ registered\ trademark\ of\ Apple\ Computer,\ Inc.,\ registered\ in\ the\ U.S.\ and\ other\ countries.\ iPod\ not\ included.$

VOICE RECOGNITION (if equipped)

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of all system commands, **say** "Information" and "Voice Command Help."

Key Functions by Voice Command

Control four different systems with the steering wheel buttons and the ceiling microphone.






HFL Talk button: Give HFL commands or answer incoming calls.

Navi Talk button: Give navigation, audio, and climate control commands.

HFL Back button: End a call, go back tothe previous command, or cancel an operation

Navi Back button: Cancel a command orreturn to the previous screen.

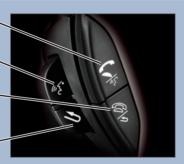

Voice Command Tips

- **Press and release** the HFL or Navi Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, **press and release** the HFL Talk button and **say** "Hands-free help."
- For a list of available navigation commands, **press and release** the Navi Talk button and **say** "Help."
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

$NAVIGATION_{p.22}$



BLUETOOTH B HANDSFREELINK B p. 24



AUDIO p. 21



CLIMATE p. 21



Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Navi Talk button before you give a command.

Locate Points of Interest

Say a command like "Display restaurant" to see restaurant icons appear on the map.



Say a command like "Display gas stations" to see gas station icons appear on the map.



Press and release the Navi Talk button before you give a command.

Get Navigation Route Information

After a destination is entered, say "How far to destination?" to hear the remaining distance.



Say "Display entire route" to see the routing method the system mapped for your destination.



Press and release the Navi Talk button before you give a command.

Make Audio Selections

Say a command like "Radio 97.1 FM" to select that station.



Say a command like "CD play track I" to hear that song on a currently inserted CD.



Press and release the Navi Talk button before you give a command.

Adjust the Vehicle's Climate Setting

Say a command like "Air conditioner on" to start the air conditioning system.

Say a command like "Fan speed 4" to adjust the fan speed.



Commonly Used Voice Commands (continued)

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Navi Talk button before you give a command.

General Commands (Accepted on most screens to change displays)

- Display map
- Display menu
- Information
- Display audio screen
- What time is it?



Find Place Commands (Accepted on Map screen)

- Find nearest:
- ATM
 - Honda dealer
- gas station airport
- Mexican - hospital
- restaurant bank
- post office



Navigation Commands (Accepted on Map screen)

- How long/far to destination?
- Display destination
- · Display entire route



Display Commands (Accepted on Map screen)

- Display/Hide:
 - ATM
 - gas station
 - restaurant
- post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location



405 N/SAN DIEGO FWY % 10 10 15 to go 400 ft AUDIO INFO

Press and release the Navi Talk button before you give a command.

Audio Commands (Accepted on most screens)

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- CD play
- CD play track #CD skip forward/back
- Auxiliary (AUX) play



Climate Control Commands (Accepted on most screens)

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/ fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold

Setup Commands (Accepted on Setup screen)

- Brightness up/down
- Volume up/down/min/max/off
- Guidance prompts min/max/normal



Help Commands (Accepted on most screens)

- Help (list of available commands for current screen)
- · Voice command help from INFO screen (list of all available navigation, audio, and climate control commands)



NAVIGATION (if equipped)

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

Entering a Destination

Using Voice Control

Press and release the Navi Talk button before you give a command.

1. Say "Display menu" and "Address."



4. **Say** the entire street address number. For example, "1-2-3-4."



 Say "Street" followed by the street name. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).



5. If the street address is in more than one city, a list of city names appears. **Say** the number next to the city you want to select.



 A list of street names appears.
 Say the number next to the street you want to select.



6. The system calculates the route and displays the "Calculate route to" screen. **Say** "OK" to set the route



Using the Find Nearest Command

Try these simple steps to find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Navi Talk button before you give a command.

1. Say "Find nearest ATM."



 A list of the nearest ATMs in your area is displayed by shortest distance to destination.



3. **Say** the number next to the destination you want to select.



4. The system calculates the route and displays the "Calculate route to" screen. **Say** "OK" to set the route.





BLUETOOTH® HANDSFREELINK® (HFL) (if equipped)

Pairing Your Phone



HFL Talk button: Give HFL commands or answer incoming calls.

HFL Back button: End a call, go back to the previous command, or cancel an operation.



Press and release the HFL Talk button before you give a command.

- I. **Enable** "Discovery" or "Search" mode on your compatible phone.
- 2. **Say** "Phone setup," then **say** "Pair."



3. HFL gives you a four-digit code (that also appears on the MID) and begins to search for your phone.



4. **Search** for a HandsFreeLink device from your phone, and connect to HFL.





- 5. **Enter** the four-digit code on your phone when prompted.
- 6. HFL asks you to name the phone. For example, say "Mary's phone."



Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

Making a Call

Press and release the HFL Talk button before you give a command.

I. Press the HFL Talk button.



2. **Say** "Call" or "Dial" and the desired phone number.



3. **Press** the HFL Talk button, and say "Call" or "Dial" to continue.



4. The call is connected and heard through the vehicle's speakers.



Receiving a Call

 A notification is heard and the incoming phone number appears on the MID.





2. **Press** the HFL Talk button to accept the call.



3. **Press** the HFL Back button to end or decline the call.



HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dials.

Press and release the HFL Talk button before you give a command.

I. Say "Phonebook."



2. Say "Store."



3. **Say** the name of the contact, and then the phone number.



4. To call a contact once an entry is stored, say "Call Mike."



Cellular Phonebook*

Import your entire cell phone's address book to the navigation system.

Press and release the Navi Talk button before you give a command.

1. **Say** "Display Information" and "Cellular Phone."



2. Say "Import Cellular Phonebook."



3. HFL begins to import your contacts to the system.




4. To call a contact, say "Search Imported Phonebook" and select the name and number.

Se	lect a name:	HITS 86 NAME	8
1	Contact 1	A	Δ
2	Contact 2	[8]	
3	Contact 3	[8]	
4	Contact 4	1	
5	Contact 5	F	
6	Contact 6	0	

*not available on all bhones

NWNFRIINK

Owner Link allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information. Register at www.owners.honda.com to ensure that you continue to enjoy the experience of owning a Honda.

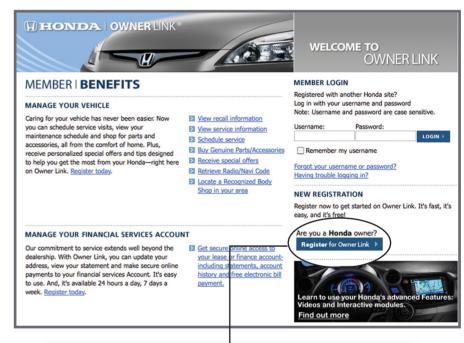



SAFFTY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at www.owners.honda.com.