



## **Instrument Panel Indicators**

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators: If an indicator remains on, there may be a problem; see your dealer.



<u>=</u> c

Charging system

BRAKE

Low brake fluid

47

Low oil pressure



SRS (supplemental restraint system)

(ABS)

ABS (anti-lock brake system)

DRL

DRL (daytime running lights)

H\_2.

Malfunction lamp (check engine light)

IFMS

TPMS (tire pressure monitoring system)

VSA

VSA (vehicle stability assist)

## Condition Indicators: Action is needed by driver.



Parking brake on: Release



Door/Trunk open: Close door(s) / trunk

Seat belt reminder:

Fasten seat belt(s) Low fuel: Refill

Low tire pressure: Add air

Maintenance minder: Make appointment

#### On/Off Indicators



### PASSENGER AIRBAG **OFF** (above Hazard Warning button)



SIDE AIRBAG OFF



VSA solid: off

Blinks: activated



CRUISE CONTROL on



CRUISE MAIN on



ECO on\* **ECO** 



Fog lights on\*



Immobilizer Flashes: improperly coded key; use correct key



Headlights on



Turn signals/hazards on



High beams on

\* if equipped

# Information Display

Consists of several displays that provide you with useful information.

## Accessing the Information Display


Once you start the engine, the information display shows your last active selection from the previous drive cycle.



To toggle between the different displays, **press** and release the select/reset knob repeatedly.



## Information Displays

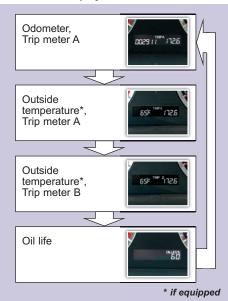

### Tire Pressure Monitoring System (TPMS)-

Monitors the vehicle's tire pressures.

How It Works

Each tire valve stem contains a TPMS sensor.





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.





#### What to Do

**Visually inspect** the tires and **use** a tire air pressure gauge to check which tire(s) have low pressure.





**Inflate** the tire(s) to the recommended pressures listed on the label on the driver's doorjamb.







Indicators/Info Display/TPMS

# Auto Door Locking/Unlocking

### **Default Lock Setting**

The doors are preset to lock when your vehicle reaches about 9 mph.







### **Default Unlock Setting**

Only the driver's door is preset to unlock when you shift into Park (P).







## Modifying the Auto Door Unlock Setting

Follow these steps to program all doors to unlock when you shift to Park:

- Close the driver's door. Shift into Park.
- 2. **Turn** the ignition to the ON (II) position.
- Press and hold the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.
- 4. Within 5 seconds, **turn** the ignition to the LOCK (0) position.












See Auto Door Locking/Unlocking in your owner's manual for other programmable settings.

## HomeLink® (EX-L V6)

The HomeLink Universal Transceiver built into your vehicle can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

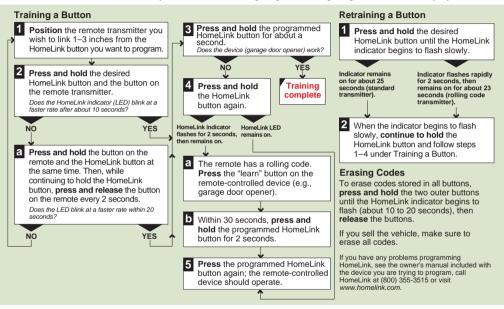

Auto Door Locks/HomeLink®

## Voice Command (if equipped)

## Using the Voice Command System

To reduce driver distraction, use voice commands for hands-free calling, navigation, audio, and climate control functions. A full list of these commands is in the navigation system manual.

**HFL Talk button:** Give HFL commands or answer incoming calls.

#### **NAVI Talk button:**

Give navigation, audio, and climate control commands.

### NAVI Back button:

Cancel a command or return to the previous screen.

**HFL Back button:** End a call, go back to the previous command, or cancel an operation.




### **Voice Command Tips:**


- Press and release the HFL or NAVI Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, press and release the HFL Talk button and say "Hands-free help."
- For a list of available navigation commands, press and release the NAVI Talk button and say "Voice command help."
- · Speak in a clear, natural voice.
- Reduce all background noise.
  - Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

# 2010 Accord Coupe

## Bluetooth® HandsFreeLink® (if equipped)

Pairing Your Phone

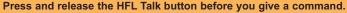

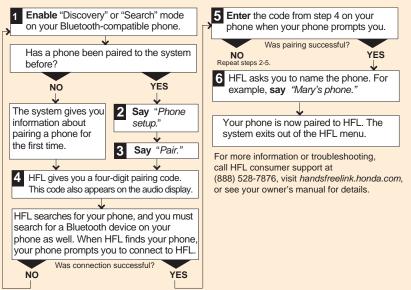

## Making a Call

 Press the HFL Talk button.



2. **Say** "Call" or "Dial" and the desired phone number.



3. **Press** the HFL Talk button, and **say** "Call" or "Dial" to continue.



4. The call is connected and heard through the vehicle's speakers.



## Receiving a Call

 A notification is heard and the incoming phone number appears on the audio display.



2. **Press** the HFL Talk button to accept the call.




3. **Press** the HFL Back button to end or decline the call.



## Navigation (if equipped)

**Entering a Destination Using Voice Commands** 

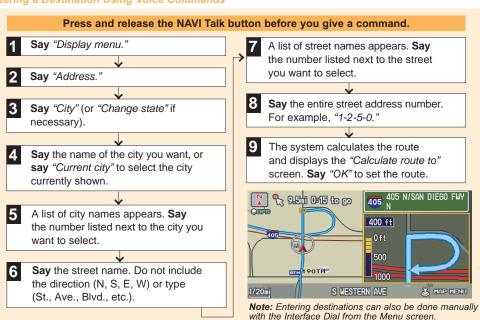

## Entering a Destination Using the "Find Nearest" Command

Try these simple steps to find a nearby point of interest, such as a gas station, movie theater, or restaurant.

### Press and release the NAVI Talk button before you give a command.

1. Say "Find nearest ATM."



A list of the nearest ATMs are displayed by shortest distance to destination.



3. **Say** the number you want to select.



 The system calculates the route and displays the "Calculate route to" screen.
Say "OK" to set the route.



### **Commonly Used Voice Commands**

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

## Press and release the NAVI Talk button before you give a command.

#### Look for Restaurants in Your Location

**Say** a command like "Display restaurants" to see restaurant icons appear on the map.



## Adjust the Vehicle's Climate Setting

**Say** a command like "Air conditioner on" and "Fan speed 4" to adjust the setting to your preference.



#### Make Audio Selections

**Say** a command like "Radio 97.1 FM" or "CD play track 5" to select that station or song.



## Get Estimated Distance to Destination

After a destination is entered, **say** "How far to destination?" to hear the remaining distance.



## Commonly Used Voice Commands (continued)

# Press and release the NAVI Talk button before you give a command.

### General Commands

(Accepted on most screens to change displays)



- Display map
- · Display menu
- Information
- · Display audio screen
- Setup · What time is it?

### Find Place Commands (Accepted on Map screen)



- Find nearest:
  - ATM
  - gas station
  - Mexican restaurant
  - post office

- bank
- Honda dealer
- airport
- hospital

# **Navigation Commands**

(Accepted on Map screen after a destination is entered)



- · How long/far to the destination?
- Display destination
- · Display entire route

### Display Commands (Accepted on Map screen)



- · Display (or hide):
  - ATM
  - gas station
  - restaurant
  - post office
- · Display north up/ heading up
- · Zoom in/out · Go home
- · Display current location

### Commonly Used Voice Commands (continued)

## Press and release the NAVI Talk button before you give a command.

#### **Audio Commands**

(Accepted on most screens)



- · Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- · XM channel #
- XM preset 1/2/3/4/5/6
- CD play
- CD play track/disc #
- · CD skip forward/back
- Auxiliary (AUX) play

### Setup Commands

(Accepted on the Setup screen)



- · Brightness up/down · Interface dial
- Volume up/down/ min/max/off
- Interface dial feedback on/off
- Guidance prompts min/max/normal

# **Climate Control Commands**

(Accepted on most screens)



- Air conditioner on/off
- · Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57–87)
- Temperature max hot/cold

# Help Commands

(Accepted on most screens)



- Help (list of available commands for current screen)
- Voice command help (list of all available navigation, audio, and climate control commands)

## **About This Technology Reference Guide**

This Technology Reference Guide has been prepared to help you get quickly acquainted with your new Honda, and to provide reference instructions on driving controls and convenience items.

However, this guide is not intended as a substitute for the Owner's Manual. For complete information on operating the vehicle safely, please refer to the Owner's Manual.

As with the Owner's Manual, this guide covers all models of the Honda Accord 2-Door. Therefore, you may find descriptions of equipment and features that are not on your particular model.

## Safety Reminder

Your vehicle is equipped with airbags. Airbags do not replace your seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but the do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

#### **Fuel Recommendation**

- Use only unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emissions control system. Always use MMT-free gasoline if alternatives exist. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at www.hondacars.com.





2010 Honda Accord 2-Door Technology Reference Guide © 2009 American Honda Co., Inc. – All Rights Reserved