T E C H N O L O G Y R E F E R E N C E G U I D E





owners.honda.com

31SJCQ60 00X31-SJC-Q600 2012 Honda Ridgeline Technology Reference Guide ©2011 American Honda Motor Co., Inc. — All Rights Reserved Printed in U.S.A. HONDA

2012 RIDGELINE

TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of its technology and convenience features.

This guide is not intended as a substitute for the Owner's Manual. For complete information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

As with the Owner's Manual, this guide covers all trim levels of the Ridgeline. Therefore, you may find descriptions of equipment and features that are not on your particular vehicle.

Ridgeline Sport shown on cover

Auto Door Locks	2
Instrument Panel Indicators	4
Information Display	<mark>6</mark>
Multi-Information Display (MID)	7
Rearview Camera [*]	<mark>8</mark>
Tire Pressure Monitoring System (TPMS)	9
Voice Recognition*	10





Navigation*	
Bluetooth [®] HandsFreeLink [®] (HFL) [*]	
HomeLink ^{®*}	21
Owner Link	22
Safety Reminder	23
Fuel Recommendation	23
	*if equipped

AUTO DOOR LOCKS

Default Lock/Unlock Setting

Default Lock Setting

All doors are preset to lock when your vehicle reaches about 10 mph.





Only the driver's door is preset to unlock when you shift into Park (P).

Default Unlock Setting

Programmable Auto Door Lock/Unlock Settings

Below are the different programmable options you can choose. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

AUTO DOOR LOCK	AUTO DOOR UNLOCK		
Auto Lock When you reach 10 mph	Auto Unlock (all doors) When you turn the ignition OFF		
Turn off Auto Lock Operate manually	Auto Unlock (only driver's door) When you turn the ignition OFF		
	Turn off Auto Unlock Operate manually		

Program how and when the vehicle doors automatically lock and unlock.

Modifying the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

I. **Close** the driver's door. **Shift** into Park.



2. Turn the ignition switch to ON (II).

3. **Press and hold** the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.




4. Within 20 seconds, **turn** the ignition switch to LOCK (0).



INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



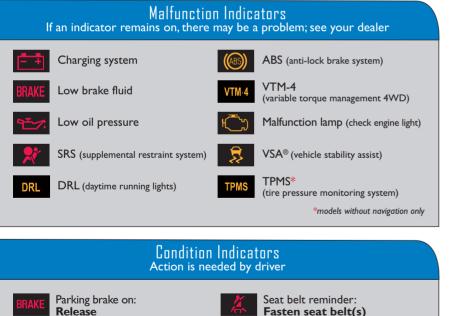



Door/Tailgate open: Close door(s)/tailgate







Back window open:

Close back window

Low tire pressure: Maintenance Minder: Add air Make dealer appointment Washer Level (if equipped): A/T Temperature: Pull over and let engine idle Add fluid Message indicator*: Press Info button VTM-4 (blinks): Pull over and let engine idle *models with navigation only On/Off Indicators PASSENGER AIRBAG OFF Bed lights **on** (located on center panel) Immobilizer SIDE AIRBAG OFF Flashes: improperly coded key; use correct key VSA OFF Headlights on CRUISE MAIN on Turn signals/hazards on CRUISE CONTROL on High beams **on**

INFORMATION DISPLAY (models without navigation)

Consists of several displays that provide you with useful information.




Information Displays Outside Outside temperature, temperature, 002,300 1000_ Odometer, Instant and Trip meter average MPG, Trip meter Oil life Outside temperature, 8 ເຕີດີ Instant MPG. Fuel range, Trip meter

MULTI-INFORMATION DISPLAY (MID) (models with navigation)


Displays various information and messages to help you maintain your vehicle.

Accessing the Multi-Information Display



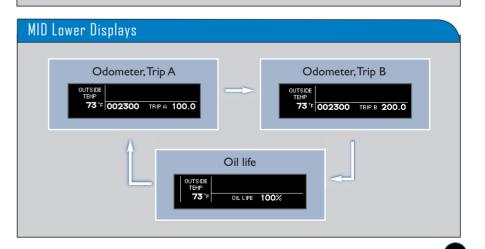

MID Upper Displays

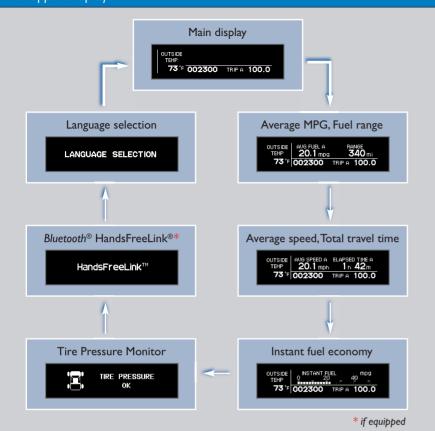

REARVIEW CAMERA (models with navigation)

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

How It Works

- When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the navigation display.
- The display turns off when you shift out of Reverse.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





TPMS

Each tire valve stem contains a TPMS sensor.



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

NOTE: On vehicles with MID, a message also appears on the display.

If the TPMS indicator* appears, there may be a problem with the system. See your dealer.


*on models without MID

What to Do

- I. **Visually inspect** the tires for damage.
- 2. **Use** a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

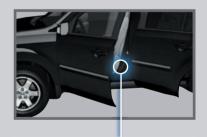



VOICE RECOGNITION (models with navigation)

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of commands, **say** *"Information"* and *"Voice Command Help."*

Key Functions by Voice Command

Control four different systems with the steering wheel buttons and the ceiling microphone.





HFL Talk button: Give HFL commands or answer incoming calls.

Navi Talk button: Give navigation, audio, and climate control commands.

Navi Back button: Cancel a command or <u>return to the previous screen.</u>

HFL Back button: End a call, go back to _ the previous command, or cancel an operation.

Voice Command Tips

- **Press and release** the HFL or Navi Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, **press and release** the HFL Talk button and **say** "Hands-free help."
- For a list of available navigation commands, **press and release** the Navi Talk button and **say** *"Help."*
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.



NAVIGATION p. 16

BLUETOOTH R HANDSFREELINK P. 18





Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Navi Talk button before you give a command.

Locate Points of Interest

Say a command like "Display restaurant" to see restaurant icons appear on the map.



Say a command like "Display gas stations" to see gas station icons appear on the map.



Press and release the Navi Talk button before you give a command.

Get Navigation Route Information

After a destination is entered, **say** "How far to the destination?" to hear the remaining distance.

Say "Display entire route" to see the routing method the system mapped for your destination.





Press and release the Navi Talk button before you give a command.

Make Audio Selections

Say a command like *"Radio 97.1 FM"* to select that station.

STEHED	97,	1 1912
		-
-		
1 89.3	2 93.1	3 98,7

Say a command like *"CD play track 1"* to hear that song on a currently inserted CD.

DISC ALBU TRAC TIPE	m ⊮ 01	∎—voi. 5
10	2 O No Disc	30000
	NO DISC	7 C No Disc
Mich No Disc	5 O No Disc	O No Bran

Press and release the Navi Talk button before you give a command.

Adjust the Vehicle's Climate Setting

Say a command like "Air conditioner on" to start the air conditioning system.

Say a command like *"Fan speed* 4" to adjust the fan speed.



Commonly Used Voice Commands (continued)

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Navi Talk button before you give a command.

General Commands (Accepted on most screens to change displays)

- Display map
- Display menu
- Information
- Display audio screen
- What time is it?

C Address	S Intersection
12 Places	Map Input
Destinations	> January
Address Book	Go Home

Select a place:

(123) 456-7891


1234 CRV BLVD., TORRANCE, CA

Find Place Commands (Accepted on Map screen)

- Find nearest:
- ATM - Honda dealer
- gas station airport
- Mexican hospital
- restaurant bank
- post office

Navigation Commands (Accepted on Map screen)

- How long/far to the destination?
- Display destination map
- Display entire route

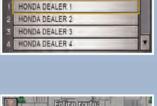

1.36mi *



Display Commands (Accepted on Map screen)

- Display (or hide): - ATM
- gas station - restaurant
- post office
- Display north up/heading up • Zoom in/out
- Go home
- Display current location



Press and release the Navi Talk button before you give a command.

Audio Commands (Accepted on most screens)

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- CD play
- CD play track #
- CD skip forward/back
- Auxiliary (AUX) play

Setup Commands (Accepted on Setup screen)

- Brightness up/down
- Volume up/down/min/max/off
- Guidance prompts min/max/normal

FM1 me	6473 W2H1 H2H2	2 <mark>076</mark> AUK
STERED	97.	1.000
	และและเสียงสาย	inter wou
1 89.3	2 93.1	3 98,7
¹ 89.3 ⁴ 100.3	² 93,1 ⁵ 102,3	³ 98,7 ⁴ 106,7



Climate Control Commands (Accepted on most screens)

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/ fresh air
- Fan speed up/down
- Temperature # degrees
- (# = 57 87)
- Temperature max hot/cold

Helo Commands (Accepted on most screens)

- Help (list of available commands for current screen) • Voice command help (from INFO screen - list of all
- available navigation, audio, and climate control commands)





NAVIGATION (if equipped)

Entering a Destination Using Voice Commands

Set a destination using a street address. For other destination options, see your Navigation Manual.

Press and release the Navi Talk button before you give a command.

1. Say "Display menu." Say "Address."

ŀ.	Say the entire street address
	number. For example, "1-2-3-4."
	If necessary, say "Done" to
	proceed.

234567890

iter street number:



2.	Say "Street," then say the street
	name on the following screen.
	Do not include the direction (N,
	S, E, W) or type (St., Ave., Blvd.,
	etc.).

Say street name:	CHWHOE Spell Mode
	et types & direction: Way, North, South, etc.

5. If the street address is in more than one city, a list of city names appears. **Say** the number next to the city you want to select.

	Same address appears in mo	re than	one city.
1	VENICE	[13mi 🔌
2	LOS ANGELES	1	15mi 🖌
3	ALHAMBRA	1	20mi 🖌
4	HUNTINGTON BEACH	1	21mi 🛰
5	BURBANK	1	23mi 4

3. A list of street names appears. **Say** the number next to the street you want to select.

ect a street:	TO Spell Mode
MAIN	
MAINE	
MANE	
MAYNE	Contraction in the
MEYN	A CONTRACTOR
MAYNES	-
	MAINE MANE MAYNE MEYN

6. The system displays the "Calculate route to" screen. **Say** "OK" to set the route.



Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

Using the Find Nearest Command

Find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Navi Talk button before you give a command.

 From the map screen, say "Find nearest ATM."



2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.




3. **Say** the number next to the destination you want to select.

1234 PILOT BLVD, ANAHEIM, CA				
	0,40mi 🔌			
	CIVIC BANK			
	CR-V BANK	1		
5	PILOT BANK			
1	ACCORD BANK	1.		

 The system displays the "Calculate route to" screen.
Say "OK" to set the route.

1234 P ANAHE		4		
CHUNCE HE THOD	•	Direct	Route	

Map Screen Legend

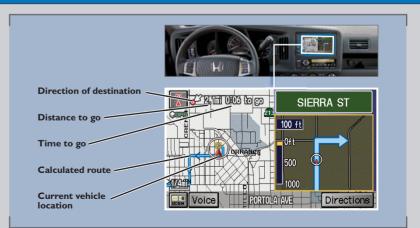

$\textit{BLUETDOTH}^{\mathbb{R}}$ HANDSFREELINK $^{\mathbb{R}}$ (models with navigation)

Pairing Your Phone



HFL Talk button: Give HFL commands or answer incoming calls.⁵

HFL Back button: End a call, go back to the previous command, or cancel an operation.

Press and release the HFL Talk button before you give a command.

- 1. **Enable** "Discovery" or "Search" mode on your compatible phone.
- 2. **Say** "Phone setup," then **say** "Pair."



3. HFL gives you a four-digit code that appears on the MID.

PAIR 0000 4. Search for HandsFreeLink from your phone, and enter the code when prompted. Connect to HFL.



5. HFL asks you to name the phone. For example, **say** *"Mary's phone.*" The phone is now added.



Place and receive phone calls through your vehicle's audio system. Visit *handsfreelink.honda.com* to check if your phone is compatible with the system.

Making a Call

Press and release the HFL Talk button before you give a command.

I. **Press** the HFL Talk button.



2. **Say** "Call" or "Dial" and the desired phone number.



3. **Say** "*Call*" or "*Dial*" to continue.



4. The call is connected and heard through the vehicle's speakers.




Receiving a Call 1. A notification is heard and the incoming phone number appears on the MID. Image: Image of the MID. Image: Image of the MID. Image: Image of the MID. Image of th




HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dials.

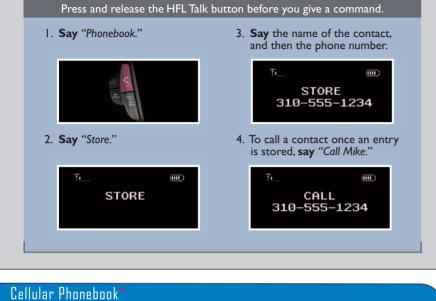

Import your entire cell phone's address book to the navigation system.

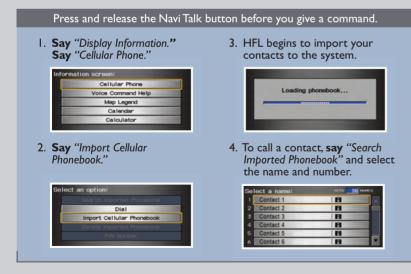


*not available on all phones

HOMELINK[®] (if equipped)

The HomeLink Universal Transceiver can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button

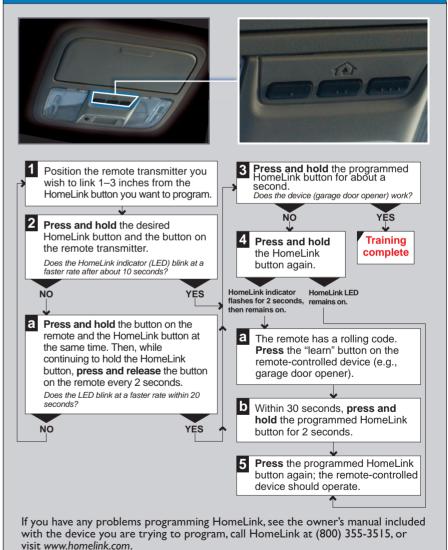

DWNER LINK

Owner Link allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information. Register at *owners.honda.com* to ensure that you continue to enjoy the experience of owning a Honda.



SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at *owners.honda.com*.