



owners.acura.com

2013 Acura TL Technology/Advance Package Advanced Technology Guide ©2012 Honda Motor Co., Ltd. – All Rights Reserved


31TK4B40 00X31-tk4-B400 Printed in U.S.A.



ADVANCED TECHNOLOGY GUIDE

The Advanced Technology Guide is designed to help you get acquainted with your new Acura and provide basic instructions on technology and convenience features. This guide covers the TL with Technology and Advance Packages.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual or Navigation Manual.

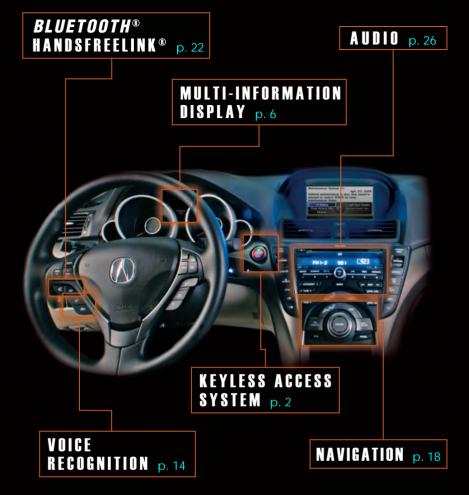

Technology Package shown

Keyless Access System2	
Instrument Panel Indicators4	
Multi-Information Display (MID)6	
Driving Position Memory System (DPMS)10	
Rearview Camera10	
Reverse Tilt Door Mirrors11	
Blind Spot Information (BSI) System*12	
HomeLink [®] 13	
Voice Recognition14	
Navigation	

Bluetooth® HandsFreeLink® (HFL)	22
Bluetooth® Audio	26
Hard Disc Drive (HDD) Audio	27
iPod® or USB Flash Drive	28
Song By Voice™ (SBV)	29
AcuraLink [®] Messages	31
My Acura	32
Safety Reminder	33
Fuel Requirement	33

KEYLESS ACCESS SYSTEM

Operate certain functions of your vehicle by simply having the remote within operating range.

Unlocking the Doors





Locking the Doors





Opening the Trunk



Press the trunk release button under the spoiler.



Engine Start/Stop Button

Accessory or On Mode

Use audio, power sockets, etc., without turning the engine on.



Press the ENGINE START/STOP button once (without pressing the brake pedal). Press it again for On mode.



Starting the Engine



Turning the Vehicle Off



Press and hold the brake pedal*, then press the ENGINE START/STOP button.



* For manual transmissions, press and hold the clutch.

Shift to Park*, then press the ENGINE START/STOP button.





Note: If you press the button and the shift lever is not in Park, the vehicle goes into Accessory mode.

* For manual transmissions, apply the emergency brake.

2

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.

- +	Charging system	SHAWD	SH-AWD* (Super Handling All-
BRAKE	Low brake fluid, Brake system	$\mathbf{\tilde{C}}$	Malfunction indic (check engine light
17	Low oil pressure	2	VSA® (Vehicle Stability As
*	SRS (Supplemental Restraint System)		TPMS (blinks) (Tire Pressure Monite
(ABS)	ABS (Anti-lock Brake System)	$\bigcirc!$	EPS (Electronic Power S
-jâ	Keyless Access System	 8	BSI* (Blind Spot Informa



 


*if equipped

Condition Indicators

 
Action is needed by driver.

 













On/Off Indicators









 



CRUISE CONTROL on

Message indicator: See MID







Low tire pressure (stays on): Add air

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the MID




When you start the engine, the MID shows the last active display from the previous drive cycle.




To toggle between the MID main displays, press either Info button (\blacktriangle/∇).

To toggle between the lower displays, press SEL/RESET.



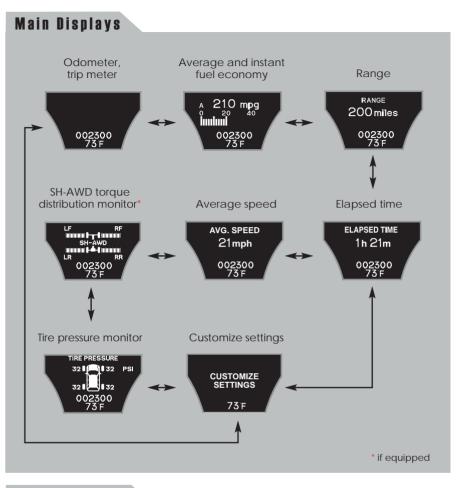

Lower Displays

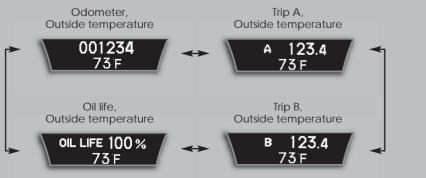

Customizing Settings Using the MID

Five groups of settings can be programmed using the MID*: Meter Setup, Position Setup, Keyless Access Setup, Lighting Setup, and Door Setup.

Programming the Auto Door Unlock Setting



Press either Info button to toggle to the "Customize Settings" display, then press SEL/RESET to enter the menu.



1. Select CHANGE SETTINGS.



2. Select DOOR SETUP.



3. Select AUTO DOOR UNLOCK.



* See "Customize Settings" in your Owner's Manual for other programmable settings.

4. Select ALL DOORS With SHIFT TO P.



5. Once the setting has been saved, **select** EXIT.



Tire Pressure Monitoring System

Alerts you when one or more of your tires has significantly low pressure. Toggle to the tire pressure monitor display to view pressure readings on the MID.

How It Works



- If the tire pressure drops significantly below recommended levels: • The low tire pressure indicator comes on.
- A "CHECK TIRE PRESSURE" message appears on the MID, showing
- which tire(s) have low pressure.



What to Do

- 1. Visually inspect the tires for damage.
- 2. Use a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.





DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat and side mirror positions into memory for each corresponding keyless remote (1 or 2), which are recalled when you unlock the driver's door with the remote and enter the vehicle.

Programming the DPMS

1. Turn the vehicle on. Shift into Park (P), or set the parking brake for manual transmission vehicles.





beep.

3. Press SET. You will hear a

2. Adjust your preferred seat and outside mirror settings.



 Press the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.



Note: Stored positions can also be recalled by pressing one of the memory buttons (1 or 2) on the door.

REARVIEW CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

How It Works

- When you shift into Reverse, a real-time image of the area behind your vehicle is shown in the navigation display.
- Yellow parking guidelines appear to help you judge distance.
- Adjust the screen brightness by turning the Interface Dial.
- The display turns off when you shift out of Reverse.



REVERSE TILT DOOR MIRRORS

When you shift into Reverse (R), you can tilt either outside door mirror down slightly to improve your view as you parallel park. Shifting out of Reverse returns the tilted mirror to its original position.

How It Works



- To tilt the driver's door mirror, move the mirror selector switch to the left (L) position.
- To tilt the passenger's side door mirror, move the mirror selector switch to the right (R) position.
- To turn the feature off, move the switch to the middle position.

 


BLIND SPOT INFORMATION (BSI) SYSTEM (Advance Package)

Assists you in determining if there are vehicles in your blind spots.

How It Works

A radar sensor on each corner of the rear bumper alerts you to a detected vehicle in your blind spot.

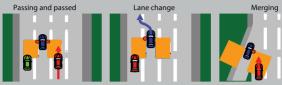

Minimum operating speed: 6-7 mph

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear.



When your turn signal is on and a vehicle is detected, the blind spot indicator blinks until the area is clear or the turn signal is turned off.



Turning BSI Off/On





2

Press and hold the BSI OFF button on the

dashboard to

A message briefly appears on the MID screen showing the system status.


turn BSI off or on.

Conflict

HOMELINK[®]

Program your vehicle to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button

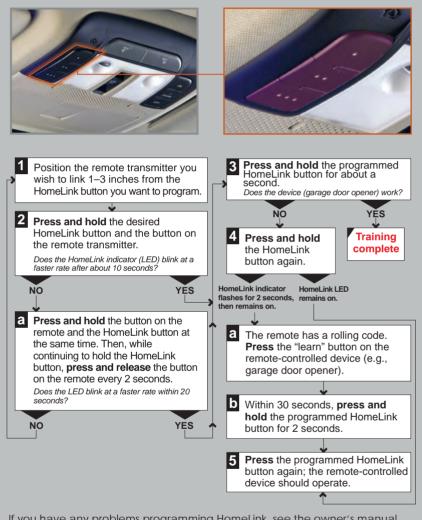

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit www.homelink.com.

the area is cle



VOICE RECOGNITION

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, climate control, and AcuraLink functions. For a full list of commands, say "*Display information*" and "Voice Info."

Key Functions Operational by Voice Command

Control five different systems with the steering wheel buttons and the ceiling microphone.





Pick-Up button: Answer an incoming call, or go directly to the Cellular Phone screen.

Hang-Up button: End a call or decline a - call.

Talk button: Give HFL, navigation, audio, - climate control, or AcuraLink commands.

Back button: Cancel a command and - return to the previous screen.

Voice Command Tips

- To hear a list of available commands at any time, press and release the Talk button, then say "Help."
- When using the Talk button, wait for a beep, then say a command.
- When the Talk button is pressed, all available voice commands are highlighted in blue.
- Speak in a clear, natural voice without pausing between words.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.





BLUETOOTH * HANDSFREELINK * p. 22



ACURALINK p. 31



AUDIO p. 17



CLIMATE p. 17



Commonly Used Voice Commands

MENU

-

Addres

Previou

Destinatio

Select a place

1234 TL AVE, TORRANCE, CA

1 III TL BANK

2 I TSX BANK

3 I RL BANK

4 INDX BANK


1 Getting started

Navigation command help

On screen command help

Climate control help

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

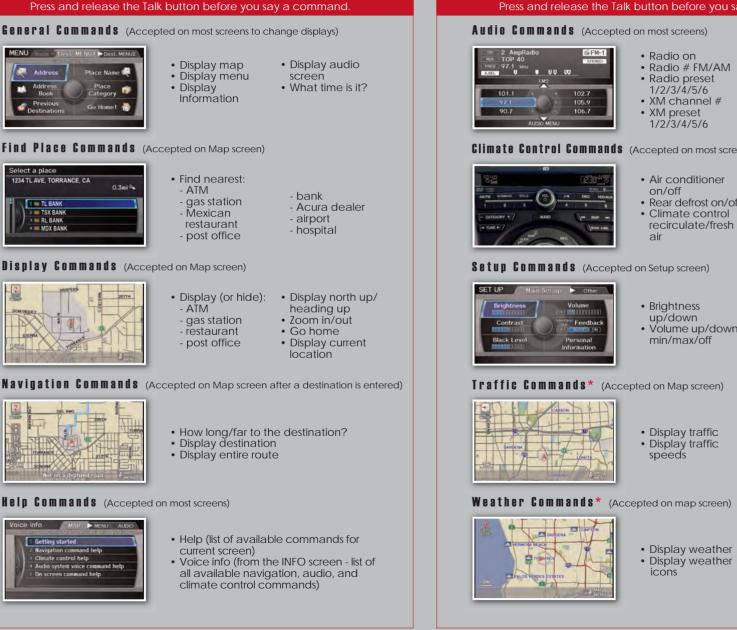

Press and release the Talk button before you say a command.

- CD play • Radio # FM/AM
 - CD play track # CD skip
 - forward/back • iPod/USB/HDD
 - play

• Fan speed

Climate Control Commands (Accepted on most screens)

- Air conditioner on/off
- up/down Rear defrost on/off
 Temperature # degrees (# = 57-87)
 - Temperature max hot/cold
- **Setup Commands** (Accepted on Setup screen)
 - Brightness up/down Volume up/down/
 - Interface dial feedback on/off
 - min/max/off

Traffic Commands* (Accepted on Map screen)

- Display traffic Display traffic
- Display traffic icons Display traffic incidents/list

Weather Commands* (Accepted on map screen)

- Display weather • Display weather Display weather warning icons
 - *subscription required

16

NAVIGATION

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

Entering a Destination Using Voice Commands

Set a destination using a street address. For other destination options, see your Navigation Manual.

Press and release the Talk button before you say a command.

- 1. Say "Display menu" and "Address."
 - MENU Posts MENUI > best MENUI Address Place Name Address Place Category Previous Go Home1 Destinations Go Home1




4. Say the entire street address number. For example, "1-2-3-4."

2. Say "Street," then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).



3. A list of street names appears. Say the number next to the street you want.

	MAYNARD
	2 MAIN
1 13	3 MAYVIEW
1 20	A MAEMURRAY
	5 MAYO
100	6 MAY

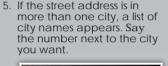 



 The system calculates the route and displays the "Calculate route to" screen. Say "OK" to set the route.

Calculate route to	임HAX B HAX B HB
1234 MAIN ST LOS ANGELES, CA	Carrent 3PM 6PM 13mi 🔊
# Address Book	View Routes
Ho Dest. List	Route Pref.
C Call	ОК

Using the "Find Nearest" Command

Find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Talk button before you say a command.

1. From the map screen, say "Find nearest ATM."



2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.




3. Say the number next to the destination you want to select.



 The system calculates the route and displays the "Calculate route to" screen. Say "OK" to set the route.



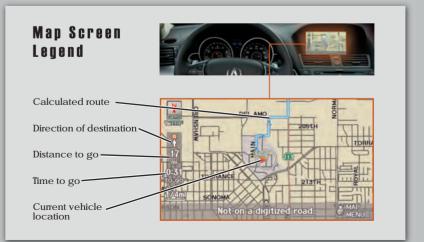

ACURALINK REAL-TIME TRAFFIC^{TM*} (if equipped)

Provides continuously updated info, including traffic speed, incidents, and construction in major metro areas.

Press and release the Talk button before you say a command.

Displaying Traffic Information

Say "Display traffic" to view highway flow data.





Road

closed

Weather

Heavy traffic

Moderate traffic

Free-flow traffic

Note: Traffic flow and incident icons are displayed on map scales of 5 miles (8 km) or less.

Traffic Rerouting™

When a destination is already set, you can create a detour to avoid traffic incidents or congestion (if Traffic Rerouting is set to ON in Setup).

Incident Icons

Incident

Congestion

Construction

1. Say "Display traffic list" to view a list of incidents on your route.



2. Say the number of the incident you want to avoid. When the incident appears, say "Traffic detail."



CONCESTION - 110 N between 111TH PL and 37TH ST, average speed of 25 mph Avoid Return

3. Say "Avoid" and the

incident list returns.

4. Say "Reroute" to set the new route.



* Subscription-based service through Sirius XM Radio® (free 90-day trial upon vehicle purchase)

ACURALINK REAL-TIME WEATHER™* (if equipped)

Provides continuously updated weather conditions, warnings, and forecasts in major metro areas.

Press and release the Talk button before you say a command.

Displaying Weather Icons

Say "Display weather" to view weather icons for each city.







Radar Image Map

Note: Weather icons are available on all map scales.

Displaying Weather Information

Say "Information," then "Weather information" for the following options:

Weather Forecast

Say "Weather forecast" to view a 1-day or 3-day forecast of your current position or city vicinity.



Weather Warning List

Say "Warning list sorted by distance" to view a list of all U.S. weather warnings by distance.



Treaming Some Radar map (Market) (Market)

Say "Radar map" to view color-

coded rain or snow systems.

Weather Warning Map Say "Waming map" to view colorcoded severe weather systems.

Tornado Hurricane Storn Flood Storn Hood Kreeze Wind Heat	
160mi	Warning map

* Subscription-based service through Sirius XM Radio® (free 90-day trial upon vehicle purchase)

BLUETOOTH® HANDSFREELINK® (HFL)

Place and receive phone calls through your vehicle's navigation and audio systems. Visit www.acura.com/handsfreelink to check if your phone is compatible.

How to Use HFL

Pick-Up button: Answer an incoming call, or go directly to the Cellular Phone screen.

Hang-Up button: End a call or - decline an incoming call.

Talk button: Give HFL commands.-

Back button: Cancel a command and return to the previous screen.

Pairing Your Phone

Use this pairing method when no phone has ever been paired to the system. You can pair your compatible phone only when the vehicle is stopped.

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to go to the Phone screen. A prompt appears. Say "Yes."



2. Make sure your phone is in discovery mode, and say "OK."



3. HFL searches for your phone. Say the number next to the phone when it appears on the list.

15		Stroh LX160	
6	2	HAA-J0415787VT	
	- 3	Josh's LX160	
	4	Steinmeyer's iPhone	
	1.0	BlackBerry 9530	
12		ODC-68521M1-LT	

If your phone does not appear: Select "Phone Not Found?"

and search for a HandsFreeLink device from your phone. Connect to HFL.



4. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.



Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to go to the Phone screen.



If a prompt appears asking to connect to a phone, say "No."

2. Say "Phone setup."



3. Say "Connection."



4. Say "Add New Phone."



5. Make sure your phone is in discovery mode, and say "OK."



6. HFL searches for your phone. Say the number next to the phone when it appears on the list.



If your phone does not appear.

Say "Find Another Phone" and search for HandsFreeLink from your phone. Connect to HFL.



7. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.



Making a Call

Dialing a Number

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to go to the Cellular Phone screen.



2. Say "Dial."





4. The call is connected and heard through the speakers.



Using the Imported Phonebook*

Press and release the Talk button before you say a command.

- 1. Press the Pick-Up button to go to the Cellular Phone screen.
- 3. Scroll the list to find the name and number you want to call.



2. Say "Phonebook."



ct a name A-E Feul K-O Contact M 11 Contact A 11 Contact L Contact V 10120 Contact I 11 Contact N 101 4. Say the number of the entry to begin the call. t Tuni (M/) Contact I 3101234567 FOF CALL 00'09 **Dial Tones** Phone Book Transfer Call History Hang-up Mute

* Visit www.acura.com/handsfreelink to check if this feature is available on your phone.

Using Speed Dial and Voice Tags Press and release the Talk button before you say a command. 1. Press the Pick-Up button to go If an entry has a stored voice to the Cellular Phone screen. tag, say "Dial by voice tag," followed by the voice tag name and "Dial" from any Cellular Phone screen. Josh's LX160 Say the name or number to dial Call History Contact I No entry IN No entry d Dial A No entry 2. Say the number next to one of the first four entries. For 3. The call is connected and example, "One." For the heard through the complete list of speed dial speakers. entries, say "More speed dial." 1 Tatl (MV) Calling Cellular Phone Contact | 3101234567 COMMECHIE Josh's LX160 CAL 00.09 Call History Contact I Dial Tones Phone Book Phone Book OND entry Transfer Call History Hang-up More Speed Dial G No entry Mute

Note: See your Owner's Manual for instructions on storing speed dial entries and accompanying voice tags.

Receiving a Call

When you receive an incoming call, you hear a notification and see the following pop-up message:



Press the Pick-Up button to accept the call.



Press the Hang-Up button to end or decline the call.



BLUETOOTH® AUDIO

 
Play audio files from your compatible phone through your vehicle's audio system. Visit www.acura.com/handsfreelink to check if this feature is available on your phone.

Playing *Bluetooth* Audio

- Make sure your phone is on and paired to Bluetooth® HandsFreeLink® (see page 22).
- 2. Press HDD/AUX until Bluetooth Audio appears.



 Press "play" on your phone; sound is redirected to the audio system. Make sure the volume on your phone is properly adjusted.

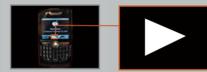

4. Press (₩)(₩) or (+)(-) to

change tracks.



Notes:

- You may need to enable additional Bluetooth settings on your phone for playback.
- The play/pause function and remote audio controls may not be supported on all phones.
- Operate your phone only when your vehicle is stopped.

HARD DISC DRIVE (HDD) AUDIO

Automatically record CDs onto your vehicle's hard drive (by system default). Songs begin to record once a CD is inserted into the disc slot.

Playing HDD Audio

1. Press HDD/AUX until HDD appears.



 The first song of the last recorded album or the last song selected plays. Press (IM)(IM) or (+)(-) to change tracks.







Searching for Music

1. Press AUDIO.



2. Push the selector up to select MUSIC SEARCH.



3. Select one of the categories.



4. Select a track and press ENTER to begin play.



iPod®*or USB FLASH DRIVE

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system. See your Owner's Manual for a list of compatible devices.

Connecting and Playing Audio

1. Open the center console, and pull out the USB adapter cable.











2. Press HDD/AUX until iPod or USB appears.







Note: Operate your phone only when your vehicle is stopped.

*iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.


SONG BY VOICE™ (SBV)

Play songs from your iPod and HDD from most navigation/audio screens by using simple voice commands.

Playing Audio Files Using Voice Commands

Press and release the Talk button before you say a command.

Using the "Play" Command Say "iPod search" or "HDD search." Say "Play" HDD search mode E HDD and one of the options on the Search Mode screen. For example, say "Play Artist XÝZ if exact if exact match match found not found The system lect an artist provides voice 1 Artist M 7 Artist A feedback and lists possible Artist matches. Artist N Say the elect an artist number of the corresponding Artist M Artist A Artist L selection you Artist V wish to play. Antist For example, say "Four." The system HDD search mode I HDD plays the selection and returns to the Search Mode screen.

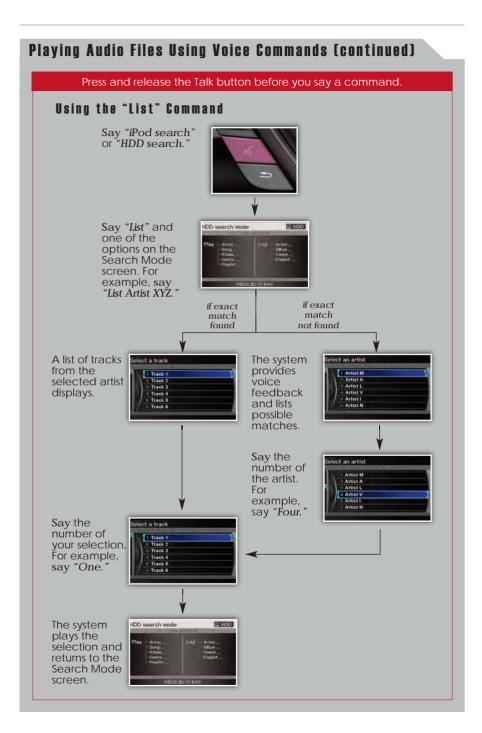

A CURALINK[®] MESSAGES

Acura periodically sends you messages on vehicle features, recall and safety information, maintenance reminders, and diagnostic information.

Viewing New Messages

Press and release the Talk button before you say a command.

- 1. When you receive a new message, an envelope icon appears on the map screen.
- 3. Say the number of the



- 2. Say "Messages," and a list of messages appears.
 - E Airbag System: 31-E Airbag System: 32-

message you want to hear.





Scheduling a Dealer Appointment

To use this feature, you must register at My Acura (www.myacura.com), and make sure your compatible phone is paired and correctly set up (see page 22).

1. Using the Interface Dial, open a maintenance or product update message.



2. Select Schedule Dealer

Apr. 27, 2011

Call Your De

Appt.

ind Acura Dir.

3. The system searches for the next available appointment at your dealer. Select Confirm Appointment if you are satisfied with the date.

Note: If you are not satisfied with the available date, use the Call option to call vour dealer directly.



4. Select OK to set the appointment.



REGISTER AT WWW.MYACURA.COM

My Acura enhances your ownership experience by allowing you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information.



egister for My Acura		
*Required fields Note: Username and passwo	rd are case sensitive,	
*Username:	*Password (min. 6 char): *Confirm Password:	
Need help with registration?		
*First Name:	*Last Name:	
*Email Address:	Please note: email spam filters may block our emails from being	
*Confirm Email Address:	delivered. If you have a spam blocker, please set it to accept emails from "Owners@acura.com"	
VIN:		
	Where can I find my VIN?	
Promo:	Cancel Submit	

SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat, as the force of a deploying airbag can seriously injure an infant.

FUEL REQUIREMENT

- Only use unleaded gasoline of 91 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Acura endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit My Acura at www.myacura.com.