TECHNOLOGY
REFERENCE
GUIDE





www.owners.honda.com

TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of the technology items. This guide covers the Odyssey LX and EX trim levels.

This guide is not intended as a substitute for the Owner's Manual. For complete information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

Odyssey LX shown on cover

Auto Door Locks	2
nstrument Panel Indicators	4
nformation Display6	6
Fire Pressure Monitoring System (TPMS)	7
HomeLink® (EX only)	8





CD Library (EX only)	•
Owner LinkI	
Safety Reminder	
Fuel RecommendationI	

AUTO DOOR LOCKS

Default Lock/Unlock Setting

Default Lock Setting

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.







Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).







EX shown

Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See Auto Door Locking/Unlocking in your owner's manual for instructions on programming these settings.

AUTO DOOR LOCK

Auto Lock

Turn off

Auto Lock









out of Park

reach 10 mph



Operate manually

AUTO DOOR UNLOCK

Auto Unlock (all doors)





When you turn the ignition OFF

When you shift

Auto Unlock (only driver's door)





When you turn the ignition OFF

When you shift into Park

Turn off **Auto Unlock**



Operate manually

Program how and when the vehicle doors automatically lock and unlock.

Programming the Auto Door Unlock Setting

To program all doors and the tailgate to unlock when you shift to Park:

I. Close the driver's door. Shift into Park.





10 seconds. In that time, you will hear three clicks.





2. Turn the ignition switch to ON (II).



4. Within 5 seconds, turn the ignition switch to LOCK (0).

3. Press and hold the unlock side of

the master lock switch for about




INSTRUMENT PANEL INDICATORS


Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.




Malfunction Indicators If an indicator remains on, there may be a problem; see your dealer

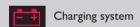

DRL (daytime running lights)

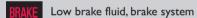

ABS (anti-lock brake system)

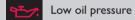

Malfunction lamp (check engine light)



VSA (vehicle stability assist)

Power tailgate

TPMS (tire pressure monitoring system)

SLIDE DOOR Power sliding door*

Starter system

*EX only

Condition Indicators Action is needed by driver

Parking brake on: **Release**

Seat belt reminder: Fasten seat belt(s)

Door/Tailgate open:
Close door(s)/tailgate

Low fuel: Refill



Low tire pressure: Add air

On/Off Indicators

PASSENGER AIRBAG **OFF**(located on center panel)

ECO Fuel economy on

SIDE AIRBAG OFF

Immobilizer
Flashes: improperly coded key;
use correct key

VSA **OFF**

Headlights on

CRUISE MAIN on

Turn signals/hazards on

CRUISE CONTROL on

High beams on

4

INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

Accessing the Information Display





When you start the engine, the display shows your last active selection from the previous drive cycle.



To toggle between the different displays, **press and release** the select/reset knob repeatedly.

Information Displays

Odometer, Outside temperature*



Fuel range, Instant fuel economy



Oil life



Trip meter, Average fuel economy



*EX only

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





Each tire valve stem contains a TPMS sensor.





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



If the TPMS indicator appears, there may be a problem with the system. See your dealer.

What to Do

- 1. Visually inspect the tires for damage.
- 2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.







HOMELINK® (EX ONLY)

The HomeLink Universal Transceiver can be programmed to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button



- Position the remote transmitter you wish to link 1-3 inches from the HomeLink button you want to program.
- Press and hold the desired HomeLink button and the button on the remote transmitter.

Does the HomeLink indicator (LED) blink at a faster rate after about 10 seconds?

NO

- a Press and hold the button on the remote and the HomeLink button at the same time. Then, while continuing to hold the HomeLink button, press and release the button on the remote every 2 seconds. Does the LED blink at a faster rate within 20
 - seconds?

NO

Press and hold the programmed HomeLink button for about a second.

Does the device (garage door opener) work?

NO

Press and hold the HomeLink button again.

Training complete

YĚS

HomeLink indicator HomeLink LED flashes for 2 seconds, remains on. then remains on.

- The remote has a rolling code. Press the "learn" button on the remote-controlled device (e.g., garage door opener).
- **b** Within 30 seconds, press and hold the programmed HomeLink button for 2 seconds.
- Press the programmed HomeLink button again; the remote-controlled device should operate.

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit www.homelink.com.

YES

YĚS

CD LIBRARY (EX ONLY)

Store up to 18 audio CDs in the system memory.

Recording an Audio CD

L. Insert an audio CD.



2. The system asks if you want to record the CD to memory. Select Yes or No.



3. Choose the location to store the CD.



4. The CD records. If available. album information is displayed.



Using the CD Library

1. **Press** the CDL button. The last album 2. To view the CD library, **press** recorded begins playing.





To change tracks, press the SKIP (M) or (M) button, or rotate the selector knob.

To change albums, press the CATEGORY (+) or (-) button. LIST on the selector knob.




3. A list of recorded CDs appears. Select the album and track you want to hear.



NWNFRIINK

Owner Link allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information. Register at www.owners.honda.com to ensure that you continue to enjoy the experience of owning a Honda.



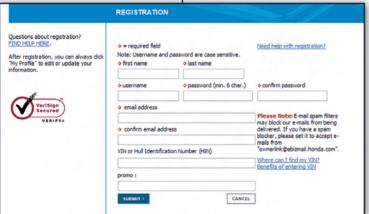

SAFFTY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FIIFI RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at www.owners.honda.com.

10