

TECHNOLOGY
REFERENCE
GUIDE



ODYSSEY

owners.honda.com

31TK8030
00X31-TK8-D300

2014 Honda Odyssey Touring and Touring Elite
Technology Reference Guide
©2013 American Honda Motor Co., Inc. — All Rights Reserved

Printed in U.S.A.



2014

TECHNOLOGY REFERENCE GUIDE

This Technology Reference Guide is designed to help you get acquainted with your 2014 Honda Odyssey Touring or Touring Elite and provide basic instructions on some of its technology and convenience features.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual or Navigation Manual.

Smart Entry with Push Button Start.....	2
Instrument Panel Indicators	4
Multi-Information Display (MID)	6
Tire Pressure Monitoring System (TPMS).....	8
Driving Position Memory System (DPMS).....	9
Auto Door Locks	10
Settings for Your Vehicle	11
Multi-View Rear Camera	12
Reverse Door Tilt Mirrors	13
One-Touch Turn Signal.....	14
Auto Headlights with Wiper Integration.....	14
HondaVAC™*	15
Cool Box	16
LaneWatch™*	17
Lane Departure Warning (LDW)	18
Forward Collision Warning (FCW)	19
Blind Spot Information (BSI) System*	20
Parking Sensor System	21



HomeLink®	22
Intelligent Multi-Information Display (i-MID)	23
Voice Recognition	24
Navigation.....	28
Bluetooth® HandsFreeLink® (HFL).....	31
SMS Text Messaging and E-Mail.....	35
Basic Audio Operation	36
iPod® or USB Flash Drive	37
Hard Disc Drive (HDD) Audio	38
Song By Voice™ (SBV)	39
Pandora®	40
HondaLink featuring Aha™	41
Bluetooth® Audio	42
Rear Entertainment System (RES)	43
Honda Owners	46
Safety Reminder	46
Fuel Recommendation.....	47

*if equipped

SMART ENTRY WITH PUSH BUTTON START

Unlocking/Locking the Doors



To unlock, grab any of the door handles when the vehicle is off. Wait until the doors unlock, then pull the handle to enter.



To lock, press the door lock button on either front door handle when the vehicle is off.



Opening the Tailgate




Press the tailgate release button under the tailgate handle when all doors are unlocked. The vehicle can be on or off.



Note: If there is not enough clearance for the tailgate to fully open, press and hold the tailgate release button until you hear two beeps. The tailgate unlatches, and you can open it manually.

Operate certain functions of your vehicle by simply having the remote within operating range.

Engine Start/Stop Button

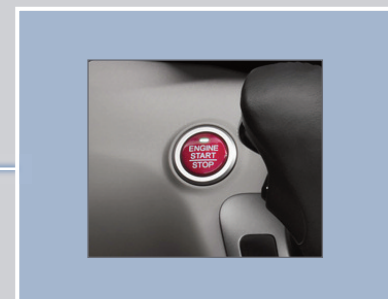

Accessory or On Mode

Press ENGINE START/STOP once without pressing the brake pedal for Accessory mode. Press it again for ON mode.

Starting the Engine

Press and hold the brake pedal, then press ENGINE START/STOP.


Turning the Vehicle Off

Shift to Park, then press ENGINE START/STOP.

Note: If you press the button when the vehicle is stopped and the shift lever is not in Park, the vehicle goes into Accessory mode.





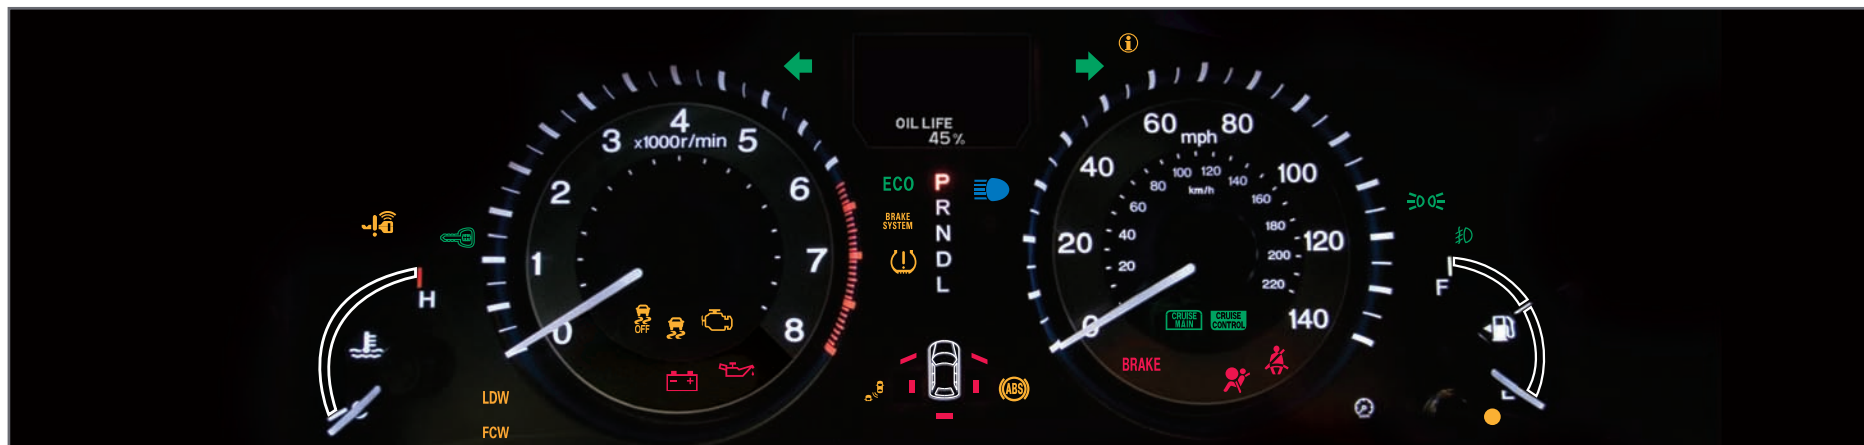







INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators


If an indicator remains on, there may be a problem; see your dealer


 Charging system	 Anti-Lock Brake System (ABS)
 BRAKE Low brake fluid, brake system	 Malfunction lamp (check engine light)
 Low oil pressure	 Vehicle Stability Assist® (VSA)
 Supplemental Restraint System (SRS)	 Blind Spot Information (BSI)*
 FCW Forward Collision Warning (FCW)	 Brake override system
 LDW Lane Departure Warning (LDW)	 Smart Entry system


Condition Indicators

Action is needed by driver

 BRAKE Parking brake on: Release	 Low fuel: Refill
 Door/Tailgate open: Close door(s)/tailgate	 System message indicator: See MID

 Seat belt reminder:
Fasten seat belt(s)

 Low tire pressure:
Add air

 Immobilizer (blinks):
Use other vehicle key and see your dealer


On/Off Indicators

 PASSENGER AIRBAG **OFF**
(located on center panel)


 VSA **OFF**

 BSI* **off**

 FCW **off**


 High beams **on**


 Fog lights **on**

 **ECO** Fuel economy **on**

 Exterior lights **on**

 Turn signals/hazards **on**

 CRUISE MAIN **on**

 CRUISE CONTROL **on**

*Elite only

MULTI-INFORMATION DISPLAY (MID)

Displays various information and messages to help you maintain your vehicle.

Accessing the Multi-Information Display




When you start the engine, the MID shows your last active selection from the previous drive cycle.

002300 miles
73°F

To toggle between the different displays:

- Press either Info button for the upper display.
- Press SEL/RESET for the lower display or to switch from Trip A to Trip B on the upper displays.

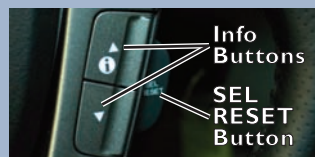

MID Upper Displays

Main display

002300 miles
73°F

Average fuel economy,
Instant fuel economy

A 20.5 mpg
0 20 40
A 323.4 miles
73°F

Customize settings

CUSTOMIZE
SETTINGS

Fuel range

RANGE
200 miles
A 323.4 miles
73°F

Average speed

AVG. SPEED
40 mph
A 323.4 miles
73°F

Elapsed time

ELAPSED TIME
01 h 30 m
002300 miles
73°F

MID Lower Displays

Odometer,
Outside temperature

002300 miles
73°F

Trip A,
Outside temperature

A 0.0 miles
73°F

Oil life

OIL LIFE
45%

Trip B,
Outside temperature

B 0.0 miles
73°F

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on and a message appears in the MID.

What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.




DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat and side mirror positions into memory for each corresponding remote transmitter (1 or 2).

Programming the DPMS

1. Turn the vehicle on. Shift into Park (P).
3. Press SET. You will hear a beep.

2. Adjust the seat and outside mirrors to your preferred positions.

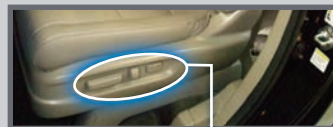

4. Within 5 seconds, press the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.



Notes:

- Once set, stored positions can be recalled by pressing one of the memory buttons (1 or 2) on the door.
- Lumbar positions cannot be stored.

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Door Lock Operation



Default Lock Setting

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.

Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).

Changing Settings

Follow the steps below to change your door settings. Make sure you are using the key you want to change the settings for (Driver 1 or Driver 2) and the vehicle is in On mode. See your Owner's Manual for complete setting options.

1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Door Setup.
4. Select Auto Door Lock or Auto Door Unlock.
5. Select from the options.
6. Press BACK to exit the menu.



SETTINGS FOR YOUR VEHICLE

Change different settings for many features in your vehicle. See your Owner's Manual for detailed information on settings and options.

Adjusting Vehicle Settings



Press SETTINGS to enter the Settings Menu. Use the interface dial to make and enter selections.

Choose from the available options:



System Settings

Adjust the display, clock, system language, and more.

Phone Settings

Pair a phone, change call options, and more.

Vehicle Settings

Change lighting and door setup, and more.

Info Settings

Import wallpaper and select clock type.

Camera Settings

Change LaneWatch settings and rear camera guidelines.

Audio Settings

Adjust the sound, and change various settings for audio modes.

Rear Ent Settings

Change settings for the rear entertainment system.

Navi Settings

Change navigation, routing, and map settings.

MULTI-VIEW REAR CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

How It Works

- When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the navigation display, along with helpful parking guidelines.
- Press the interface dial to toggle between views.
- The display turns off when you shift out of Reverse.



Wide (default)



Normal



Top down



Changing Settings

Turn the guidelines on or off.

1. Press **SETTINGS**. Use the selector knob to make and enter selections.
2. Select **Camera Settings**.
3. Select **Rear Camera**.
4. Select **Fixed Guidelines**.
5. Select **On or Off**.
6. Press **BACK** to exit the menu.



REVERSE TILT DOOR MIRRORS

When you shift into Reverse (R), you can tilt either door mirror down slightly to improve your view as you parallel park. Shifting out of Reverse returns the tilted mirror to its original position.

How It Works



- To tilt the driver's door mirror, move the mirror selector switch to the left (L) position.
- To tilt the passenger's door mirror, move the mirror selector switch to the right (R) position.
- To turn the feature off, move the switch to the middle position.




ONE-TOUCH TURN SIGNAL

Use this quick and convenient method to signal a lane change.

How It Works

- Lightly push the turn signal lever up or down for a three-blink sequence.
- For a continuous signal, push the lever up or down until it locks into place.

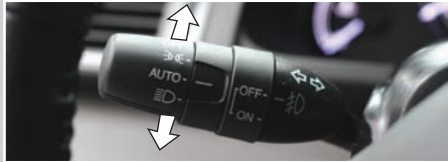

AUTO HEADLIGHTS WITH WIPER INTEGRATION

For your convenience, your vehicle's headlights automatically turn on when you activate the windshield wipers.

How It Works



Make sure your headlights are in the AUTO position.




Turn on your windshield wipers. The headlights also turn on. When you turn off the windshield wipers, the headlights turn off shortly after.

HONDAVAC™

Clean up dry spills and debris inside your vehicle with the in-car vacuum system. Available on Touring Elite.

How It Works

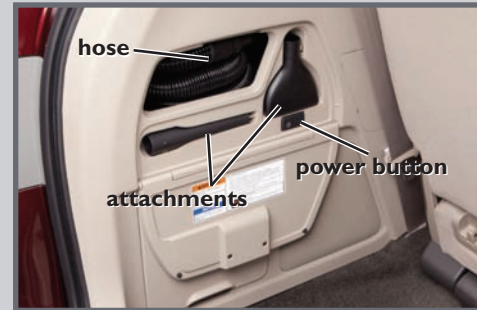

1. Make sure the vehicle is in Park (P). Set the power mode to Accessory, or start the engine.
2. Open the vacuum storage lid in the driver's side rear cargo area.
3. Pull out the vacuum hose, and install one of the attachments if desired.
4. Press the power button and begin to vacuum (dry use only).

Accessory mode operation

- After 7 minutes, an intermittent beep begins to sound as a time limit alert.
- After 8 minutes, a beep sounds, PWR SAVE comes on, and the vacuum turns off. You must start the engine if you want to continue using the vacuum. The vacuum will restart after the engine has been running for about one minute.

Engine on operation



Make sure you are using the vacuum in a well ventilated, open area to minimize the likelihood of carbon monoxide exposure.

See your Owner's Manual for instructions on canister or bag removal.

COOL BOX

Store beverages in a conveniently located box to keep them cool.

How It Works



- Store up to four 20-ounce bottles or six 12-ounce cans. Keep already cold drinks from becoming warm.
- Press COOL BOX to turn the system on or off. A green indicator light appears when the Cool Box is on. Cold air from the air conditioning system flows into and circulates within the box.



Usage Tips


- The Cool Box is not a refrigerator or cooler. It does not cool down warm drinks.
- Do not use ice.
- Do not store perishable items inside for an extended amount of time.
- Keep the box closed for best results.
- The box cannot be removed for cleaning.
- Because the air conditioning system is always on when the Cool Box is in use, fuel economy may be slightly reduced.
- If the ignition switch is turned to LOCK (0), the box maintains its temperature for one hour.

LANEWATCH™

Helps you check your right blind spot when you make a lane change to the right. Available on Touring.

How It Works


When the right turn signal is activated, a camera located in the passenger side door mirror shows the right rear area outside your vehicle on the display.

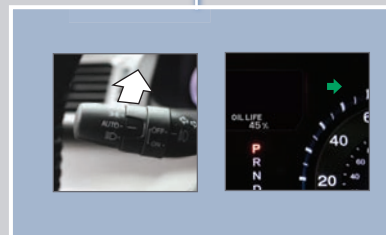

Display





Visibility Area

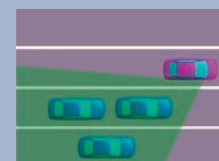

LaneWatch Display

Press the LaneWatch button on the turn signal switch to view a constant real-time display. Press it again to turn the display off. The display still appears when the right turn signal is activated.

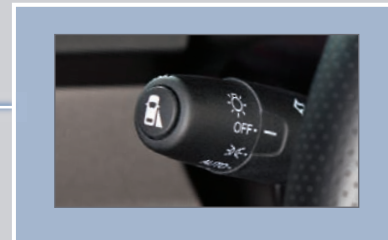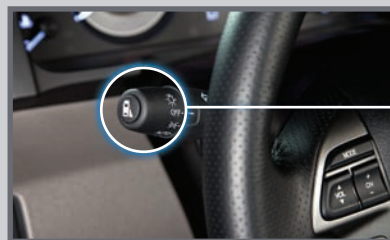

See your Owner's Manual for more information on adjusting LaneWatch settings.

LANE DEPARTURE WARNING (LDW)

Alerts you if your vehicle begins to move out of a detected lane without the turn signal activated.

How It Works

A camera mounted between the windshield and the rearview mirror determines if your vehicle begins to move away from the center of a detected lane while driving between 40–90 mph.



If you cross a detected lane line without using your turn signal, a message appears in the MID and a beep sounds. Steer the vehicle to return to your lane.



LDW may not activate under certain conditions. See your Owner's Manual for more information.

Turning LDW On or Off

Press the LDW button to turn the system on or off. A green indicator light appears on the button when the system is on.




FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision.

How It Works

At 10 mph or higher, if the camera mounted in the center of the upper windshield detects a vehicle in front of you and the system determines a collision is likely, the system warns you with the following visual and audible alerts:

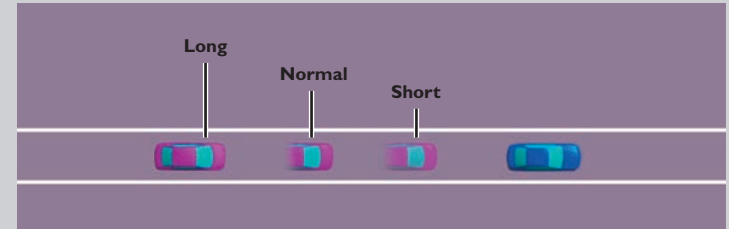

If you do not brake in time or take preventive action, a message appears in the MID and a beep sounds.



FCW may not activate under certain conditions. See your Owner's Manual for more information.

Changing Settings

Determine the warning timing, or turn the system off.

1. Press **SETTINGS**. Use the interface dial to make and enter selections.
2. Select **Vehicle Settings**.
3. Select **Driver Assist System Setup**.
4. Select **Forward Collision Warning Distance**.
5. Select **Long**, **Normal**, **Short**, or **Off**.
6. Press **BACK** to exit the menu.




BLIND SPOT INFORMATION (BSI) SYSTEM

Assists you in determining if there are detected vehicles in your blind spots. Available on Touring Elite.

How It Works

A radar sensor on each corner of the rear bumper alerts you when it detects a vehicle in your left or right blind spots. Minimum operating speed is 20 mph.

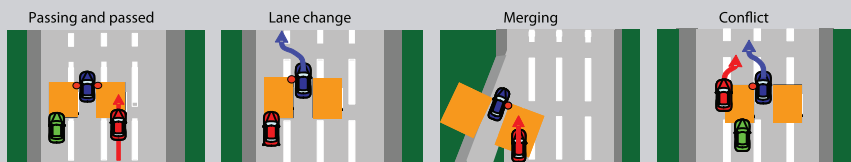

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear.



When your turn signal is on and a vehicle is detected, the blind spot indicator blinks and a beep sounds until the area is clear or the turn signal is off.



Left BSI indicator shown

Changing Settings

Determine the warning type, or turn the system off.

1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Driver Assist System Setup.
4. Select Blind Spot Info.
5. Select an alert type, or turn the system off.
6. Press BACK to exit the menu.



 
PARKING SENSOR SYSTEM

Warns you of the proximity between your vehicle and nearby surrounding objects when parking or backing up.

How It Works

When the system senses an object, an indicator appears on the MID and center display screen and a beep sounds. As you get closer to the object, the beep rate increases.


Corner sensors



Within about 2 ft.



 Rear center sensors




Within about 3.5 ft.



Turning the System On and Off

Press the parking sensor button. A light appears when the system is on.

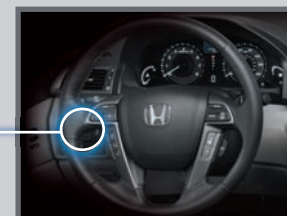

HOMELINK®

Program your vehicle to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button



1 Position the remote transmitter you wish to link 1–3 inches from the HomeLink button you want to program.

2 Press and hold the desired HomeLink button and the button on the remote transmitter.
Does the HomeLink indicator (LED) blink at a faster rate after about 10 seconds?

NO

YES

a Press and hold the button on the remote and the HomeLink button at the same time. Then, while continuing to hold the HomeLink button, press and release the button on the remote every 2 seconds.
Does the LED blink at a faster rate within 20 seconds?

NO

YES

3 Press and hold the programmed HomeLink button for about a second.
Does the device (garage door opener) work?

NO

YES

4 Press and hold the HomeLink button again.

Training complete

HomeLink indicator flashes for 2 seconds, then remains on.

HomeLink LED remains on.

a The remote has a rolling code. Press the "learn" button on the remote-controlled device (e.g., garage door opener).

b Within 30 seconds, press and hold the programmed HomeLink button for 2 seconds.

5 Press the programmed HomeLink button again; the remote-controlled device should operate.

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit www.homelink.com.

INTELLIGENT MULTI-INFORMATION DISPLAY (i-MID)


Choose what to display in the upper screen.

Changing the Display



Press the display button to change the main displays.

You can also press each display's corresponding button on the audio system.

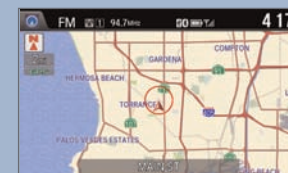

Display Options

Navigation
Shows map or navigation information.




Phone
Shows phone screen.



Audio*
Shows current audio information.



Info
Shows trip computer and other options.

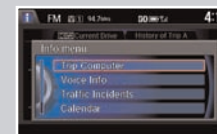


*Front audio information is shown by default. Press REAR AUDIO to display rear audio information.

VOICE RECOGNITION

How It Works

The voice control system uses the steering wheel buttons and the ceiling microphone.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

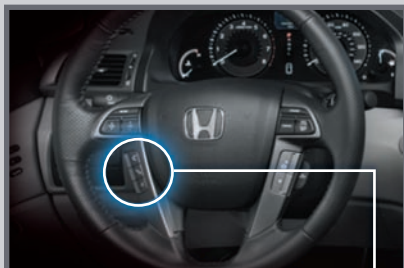

Pick-Up button: Answer an incoming call.

Hang-Up/Back button: End a call, decline an incoming call, or cancel an operation.

Talk button: Give phone, navigation, audio, or climate control commands.





Voice Command Tips

- When the Talk button is pressed, all available voice commands are highlighted in yellow.
- To bypass the system prompts, press and release the Talk button again to give a command.
- To hear a list of available commands at any time, press and release the Talk button, then say "Voice help."
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.



To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of commands, say "Voice Help."

Voice Command Portal

When you press the Talk button from any of the main screens (NAV, PHONE, INFO, AUDIO), the voice portal screen appears and the system gives you examples of voice commands that can be used. For more examples, see [page 26](#).

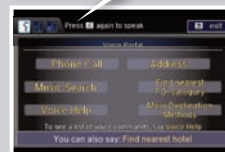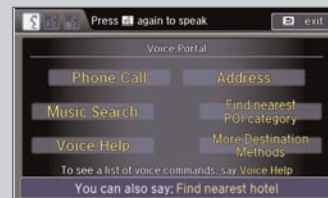

 Press the Talk button again, and the system waits for you to say a command.

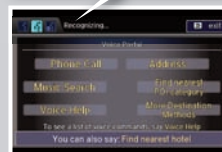

The system recognizes your command.



The system confirms the command.

Commonly Used Voice Commands

Here are some examples of commonly used voice commands, most of which are accepted on the Voice Portal screen. Try some of these to familiarize yourself with the voice command system.

Press and release the Talk button before you say a command.

General Commands

- Display map
- Display menu
- Display phone
- Display information
- Display audio screen
- What time is it?




Find Place Commands

- Find nearest:
 - ATM
 - Honda dealer
 - gas station
 - airport
 - Mexican restaurant
 - hospital
 - bank
 - post office
 - charging station
 - 120V/240V




Navigation Commands

- How long/far to the destination?
- Display destination map
- Display entire route

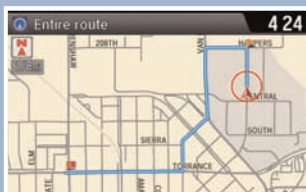

Display Commands

- Display (or hide):
 - ATM
 - gas station
 - restaurant
 - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location

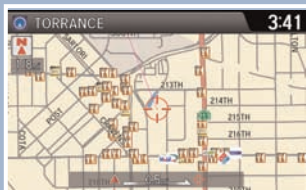

Press and release the Talk button before you say a command.

Audio Commands

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- DISC play
- DISC play track #
- DISC skip forward/back
- iPod/USB/HDD play



Phone Commands

- Call by name
- Call by number



Climate Control Commands

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



Help Commands

- Voice help (list of all available commands by category)



NAVIGATION

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.




Entering a Destination Using Voice Commands

For information on setting other destination options, see your Navigation Manual.

Entering a Street Address

Press and release the Talk button before you say a command.


1. Say "Address."
2. Say "Street," then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
3. A list of street names appears. Say the number next to the street you want to select.
4. Say the entire street address number. For example, "1-2-3-4." If necessary, say "OK" to proceed.
5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.
6. Say "Set as destination" to set the route.

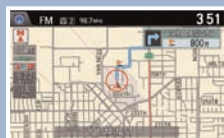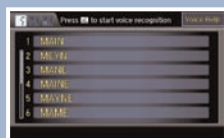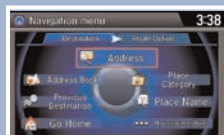

Using the "Find Nearest" Command



Press and release the Talk button before you say a command.

1. From the map screen, say "Find nearest ATM."
2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
3. Say the number next to the destination you want to select.
4. Say "Set as destination" to set the route.

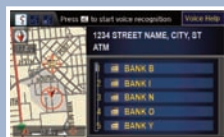

Note: It is recommended that you enter your destination before driving or when the vehicle is stopped.

Map Screen Legend

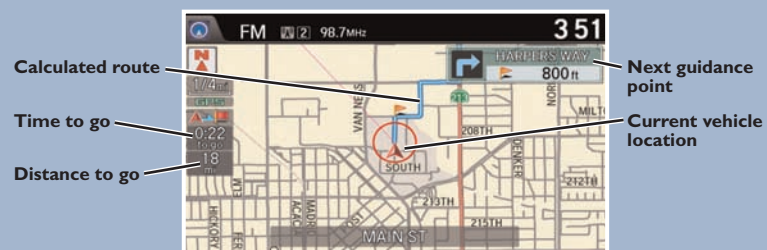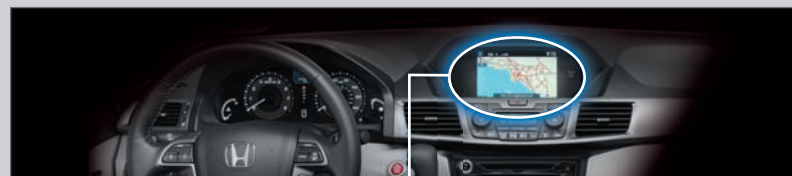


FM Traffic

Provides continuously updated information, including traffic speed, incidents, and construction in major metro areas.

Press and release the Talk button before you say a command.

Displaying Traffic Information

Say "Display traffic" to view traffic flow and incident icons.

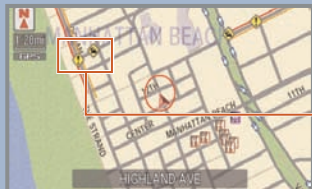

Heavy traffic

Moderate traffic

Note: Traffic flow and incident icons are displayed on map scales of 5 miles (8 km) or less.

Incident Icons



Incident



Road closed



Congestion



Weather




Construction

Traffic Rerouting™

The system can automatically provide detours around traffic or incidents when a destination is set and Traffic Rerouting is turned on in Navi Settings (see [page 11](#)) or you can choose to manually reroute.

1. Say "Display traffic on my route" to view a list of incidents on your route.
2. Say the number of the incident you want to avoid.
3. Say "Avoid" and the incident list returns.
4. Say "Reroute" to set the new route.

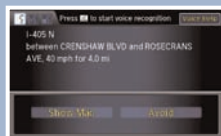

BLUETOOTH® HANDSFREELINK® (HFL)

Make and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

How to Use HFL

Pick-Up button: Answer an incoming call.

Hang-Up/Back button: End a call, decline an incoming call, or cancel an operation.

Talk button: Make a call using a stored voice tag, phonebook name, or phone number.



Use these buttons to navigate through the HFL menus.

PHONE button: Go directly to the phone screen.

BACK button: Press to cancel an operation or return to the previous screen.

Interface dial: Rotate or move up/down/left/right to scroll through selections, and press to make a selection.

MENU button: From the Phone screen, access Speed Dial, Phonebook, Dial, Redial, Call History, and Text/E-mail.

SETTINGS button: Go to Phone Settings to pair a phone and select other options.



Pairing Your Phone




Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

Use the interface dial to make and enter selections.

1. Press **SETTINGS**.
2. Select **Phone Settings**.
3. Select **Bluetooth Device List** (if no phone has been paired) or **Connect Phone** (if pairing an additional phone).
4. Select **Add Bluetooth Device**.
5. Make sure your phone is in discovery mode and select **OK**.
6. HFL searches for your phone. Select your phone when it appears on the list.

If your phone does not appear:
Select **Phone Not Found** and search for HandsFreeLink from your phone.

7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable **Phone Synchronization**. Select **On** for automatic phonebook and call history importing.

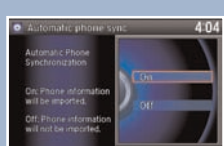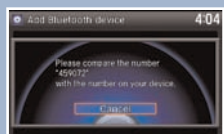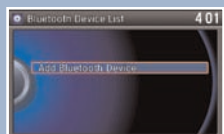

Receiving a Call

A notification is heard and the incoming call information appears on the display.

Press the **Pick-Up** button to answer the call.



Press the **Hang-Up** button to end or decline the call.




Dialing a Number

Enter a 10-digit phone number to call.

Using the Menu*

Use the interface dial to make and enter selections.

1. Press **PHONE**.
2. Press **MENU**.
3. Select **Dial**.
4. Enter the phone number. Select the green **Dial** icon to call.

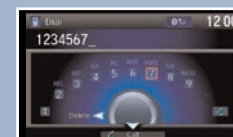


**This feature is inoperable when the vehicle is moving.*

Using Voice Commands

Press and release the **Talk** button before you say a command.

1. Say "Dial by number."
2. Say the complete phone number without pausing. For example, "3-1-0-5-5-5-1-2-3-4."
3. The system begins to dial.

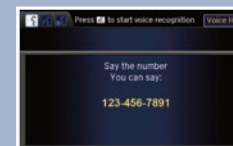

Using Speed Dial and Call History

Store 20 speed dial entries for quick calling, or view the last 20 calls.

Use the interface dial to make and enter selections.

1. Press **PHONE**.
2. From the **Speed Dial** tab, scroll through the list to find the entry you want to call, and select it to call.

For **Call History**, move the interface dial to the right and scroll through the list.



*When a voice tag is stored for a speed dial entry, you can make a call using voice commands. Press the **Talk** button and follow the prompts. See your Navigation Manual for instructions on storing speed dials and voice tags.*


Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. Phone synchronization must be on for this feature to work.

Using the Menu*

Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call, and select it to call.

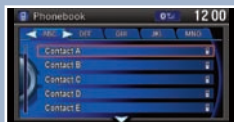


*This feature is inoperable when the vehicle is moving.

Using Voice Commands

Press and release the Talk button before you say a command.

 1. Say "Call by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."




SMS TEXT MESSAGING AND E-MAIL

Receive and send text messages and e-mails when your phone is paired to HFL (see [page 32](#)). Visit handsfreelink.honda.com to see if this feature is compatible with your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

Receiving Messages

Use the interface dial to make and enter selections.


1. A notification appears on the display. Select Read to open the message.
2. The message is displayed, and the system reads it aloud.

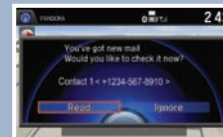

Replying to Messages

Use the interface dial to make and enter selections.


1. With the message open, move the interface dial down to select Reply.
2. Select one of the six available reply messages.
3. Select Send to send the message.

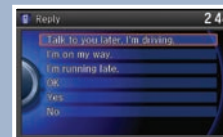

Calling the Sender

Use the interface dial to make and enter selections.

1. With the message open, move the interface dial down to select Call.
2. The system begins dialing the number.

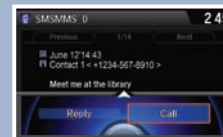

Note: Notifications and operation for SMS Text and E-mail are separate. Choose your desired account in Phone Settings (see [page 11](#)).

BASIC AUDIO OPERATION

Operate basic controls of your audio system using several convenient methods.

Steering Wheel Controls

MODE button:
Change audio source.

VOL (▲) button:
Increase volume.

VOL (▼) button:
Decrease volume.



CH (+) button:
Go to next station or track.

CH (-) button:
Go to previous station or track.

Touchscreen Controls

Audio Source:
Select audio sources by their icons.

Preset: Select preset stations.



Shortcuts: Store AM, FM, or XM stations.

Skip/Seek: Change stations, albums, tracks, etc.

More: Select menu options, play modes, and sound settings.

USB Connection



Connect an iPhone or iPod dock connector or a USB flash drive to the USB port below the system.

 
iPod® OR USB FLASH DRIVE

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

Playing Audio Files



Select the iPod or USB icon from Audio Source.



1. Connect the iPod dock connector or USB flash drive to the USB port (see USB Connection on the left).
2. Select Audio Source and select the iPod or USB icon.
3. Use the touchscreen or steering wheel controls to change tracks.

Note: Connect your device only when your vehicle is stopped.

iPod is a trademark of Apple, Inc. iPod not included.

Searching for Music

Use the interface dial to make and enter selections.

1. Press FRONT AUDIO.
2. Press MENU.
3. Select Music Search.
4. Select a category or folder.
5. Select a track and press ENTER to begin playing.



HARD DISC DRIVE (HDD) AUDIO

Record CDs onto your vehicle's hard disc drive. Songs are automatically recorded once a CD is inserted into the disc slot.

Playing HDD Audio



Select the HDD icon from Audio Source.



1. Select Audio Source and select the HDD icon. The last recorded album begins playing.
2. Use the touchscreen or steering wheel controls to change tracks.

Searching for Music

Use the interface dial to make and enter selections.

1. Press FRONT AUDIO.
2. Press MENU.
3. Select Music Search.
4. Select one of the categories.
5. Select a track and press ENTER to begin playing.




SONG BY VOICE™ (SBV)

Play songs from your iPod and HDD from most screens by using simple voice commands.

Using the "Play" Command

Press and release the Talk button before you say a command.

1. Say "Music search."
2. Say "Play" and a search option. For example, "Play artist XYZ" or "Play song XYZ."
3. The system plays the first song by the artist or the specified song and returns to your original screen.

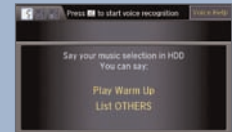

Using the "List" Command

Press and release the Talk button before you say a command.

1. Say "Music search."
2. Say "List" and a search option. For example, "List artist XYZ" or "List album XYZ."
3. A list of tracks by the artist or album is displayed. Say the number of your selection. For example, "One."
4. The system plays the selected song and returns to your original screen.



 
PANDORA®

Play and operate Pandora from your phone through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone. Standard data rates apply.

Playing Pandora



Select the Pandora icon from Audio Source.



1. *For Bluetooth connection:* Make sure your phone is paired to *Bluetooth® HandsFreeLink®* (see [page 32](#)) and the screen is on and unlocked.
For USB connection: Connect the dock connector to the USB port (see [page 36](#)).
2. Select Audio Source and select the Pandora icon. Streaming begins.
3. Use the touchscreen to like/dislike songs, and the touchscreen or steering wheel controls to change tracks.

Notes:

- iPhone® can connect via *Bluetooth* or USB; Android and BlackBerry can connect via *Bluetooth* only.
- If you cannot operate Pandora through the audio system, it may be streaming through *Bluetooth® Audio*. Make sure the Pandora source on your audio system is selected.
- Connect your phone only when your vehicle is stopped.

iPhone is a trademark of Apple, Inc.

HondaLink featuring Aha™

Access music and information programming, location-based services, and social media through your vehicle's audio system. Download the HondaLink app to your phone from owners.honda.com/apps before using this feature. Visit handsfreelink.honda.com to check if this feature is compatible with your phone. Standard data rates apply.

Playing Aha



Select the aha icon from Audio Source.



Select Stations to select from 16 favorite stations.

Press MENU to view the entire station list.

1. *For Bluetooth connection:* Make sure your phone is paired to *Bluetooth® HandsFreeLink®* (see [page 32](#)) and the screen is on and unlocked.
For USB connection: Connect the dock connector to the USB port (see [page 36](#)).
2. Select Audio Source and select the aha icon. Streaming begins.
3. Use the touchscreen to like/dislike songs, and the touchscreen or steering wheel controls to change tracks.

Notes:

- iPhone can connect via *Bluetooth* or USB; Android can connect via *Bluetooth* only.
- If you cannot operate Aha through the audio system, it may be streaming through *Bluetooth® Audio*. Make sure the Aha source on your audio system is selected.
- Connect your phone only when your vehicle is stopped.

iPhone is a trademark of Apple, Inc.

 
BLUETOOTH® AUDIO

Stream audio wirelessly from your phone through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is compatible with your phone.

Playing Bluetooth Audio



Select the Bluetooth icon from Audio Source.



1. Make sure your phone is on and paired to *Bluetooth® HandsFreeLink®* (see [page 32](#)) and the screen is on and unlocked.
2. Select Audio Source and select the Bluetooth icon.
3. From your phone, open the desired audio player or app and begin playing. Sound is redirected to the audio system. Make sure the volume on your phone is properly adjusted.
4. Use the touchscreen or steering wheel controls to change tracks.

Notes:

- You may need to enable additional settings on your phone for playback.
- The play/pause function and remote audio controls are not supported on all phones.
- Connect your phone only when your vehicle is stopped.

REAR ENTERTAINMENT SYSTEM (RES)

 
Rear passengers can enjoy a different entertainment source than front passengers.

Front System Operation



Press REAR AUDIO to display and control rear audio from the front.

Select an audio icon from Rear Audio Source.



Rear power button DVD slot Eject button

Front Controls

1. Press REAR POWER to turn the system on.
2. Press REAR AUDIO.
3. Use the touchscreen or front audio controls to choose a media source for the rear system.
4. Press FRONT AUDIO to return to the front audio source.

Rear System Operation



Press the release button to detach the remote control, if desired.

To open, press OPEN to release the screen.*



Pull down the bottom edge of the screen, and extend it until it locks into place.



To close, fold the screen back into the ceiling until you hear a click to lock it into place.

*Touring Elite only

Rear Controls

1. Make sure REAR POWER is on in the front audio controls.
2. Open the overhead screen and lock it into place. Retrieve the wireless headphones.
3. On the remote control, press DVD/AUX, CD, XM, or FM/AM.
4. Press (▲) (▼) (◀) (▶) to navigate menu options. Press ENTER to make a selection.

Headphone Operation

Your vehicle comes with two sets of wireless headphones. Pivot the earpieces to turn them on or off. Wireless headphones work only in the rear seats.



Wired headphones may also be used. Plug them into the headphone connector jacks above the driver's side third-row seat armrest.



Ultrawide Rear Entertainment System

Play two different media sources side by side on the ultrawide rear screen. Available on Touring Elite.



One screen can play a media source from the front audio system (FM, HDD, DVD, etc.). The other screen can play a media source from rear AUX or HDMI input (external DVD player, video game console, etc.).

The HDMI input is located above the passenger's side third-row armrest.



Operating Dual Screen Mode

1. On the remote control, press DUAL.
2. Follow the onscreen prompts to select which side the second media source plays on.
3. On the remote control, press SOURCE to select a media source.
4. Press (▲) (▼) (◀) (▶) or rotate the round dial to navigate menu options. Press ENTER to make a selection.

Changing the Sound Source


While in dual screen mode, you can switch the sound source of the wireless headphones between the left or right screen.

Slide the tab to L for the left side or R for the right side.



HONDA OWNERS

Visit owners.honda.com and register to explore features and technologies specific to your vehicle, obtain and update maintenance and service records, manage your financial services account, and access other useful information. For added convenience, Honda Owners can also be accessed on a mobile device.

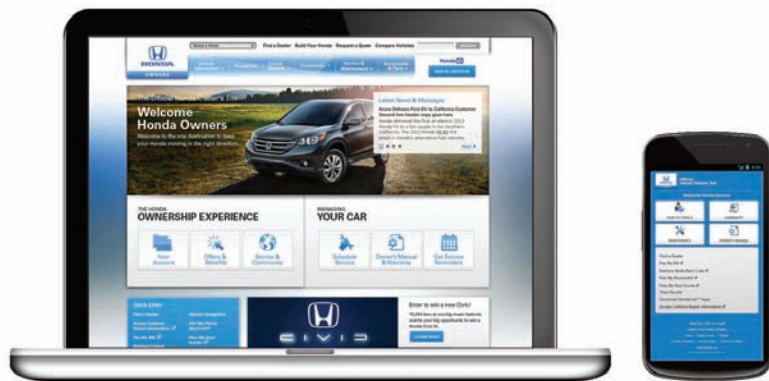

SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant. See your Owner's Manual for more information.

FUEL RECOMMENDATION

Use of unleaded gasoline of 87 octane or higher is recommended.

- Honda recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.
- See your Owner's Manual for more information.

Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under your new vehicle warranty.

TOP TIER Detergent Gasoline (recommended) never contains MMT and has detergent additives to keep your engine clean. For further information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit owners.honda.com.