TECHNOLOGY
REFERENCE
GUIDE





owners.honda.com




TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of its technology and convenience features. This guide covers the Insight, Insight LX, and Insight EX.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

Auto Door Locks	2
Fuel Fill Door	3
Instrument Panel Indicators	4
Multi-Information Display (MID)	6
Eco Assist TM	8
Paddle Shifting*	.12

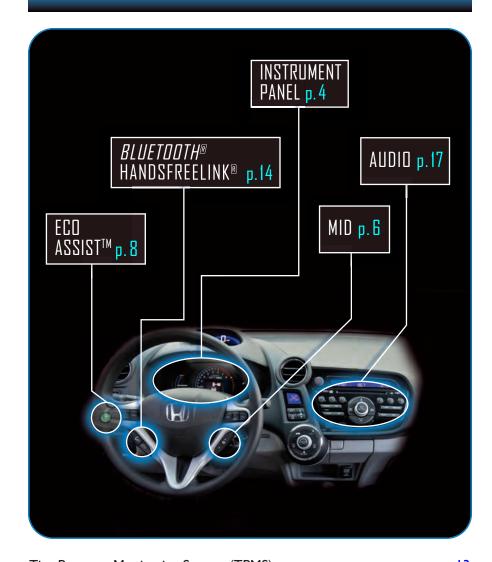

Tire Pressure Monitoring System (TPMS)	I 3
Bluetooth® HandsFreeLink® (HFL)*	14
Pod® or USB Flash Drive*	17
Owner Link	18
Safety Reminder	18
uel Recommendation	19

*if equipped

AUTO DOOR LOCKS

Program how and when the vehicle doors automatically lock and unlock.

Default Lock/Unlock Setting

Default Lock Setting

All doors and the hatch are preset to lock when your vehicle reaches about 10 mph.





Default Unlock Setting

Only the driver's door and the hatch are preset to unlock when you shift into Park (P).





Programmable Auto Door Lock/Unlock Settings

Below are the different programmable options you can choose. See your Owner's Manual for additional instructions on programming these settings.

AUTO DOOR LOCK

Auto Lock



When you reach 10 mph



out of Park





Operate manually

AUTO DOOR UNLOCK

Auto Unlock (all doors and hatch)







When you turn the ignition OFF

When you shift into Park

Auto Unlock (only driver's door and hatch)







When you turn the ignition OFF

When you shift into Park

Turn off **Auto Unlock**





Operate manually

Programming the Auto Door Unlock Setting

Press and hold either Info (\triangle / ∇) button on the steering wheel to activate the "Customize Settings" display on the MID, then press SEL/RESET to activate the menu.

I. Select CHG SETTING.



2. Select DOOR SETUP.



3. Select AUTO DOOR UNLOCK.



4. Select ALL DOORS WITH SHIFT



5. The display returns to the AUTO DOOR UNLOCK menu.



FIIFI FILL DOOR

Easy-to-open fuel door keeps your fuel cap covered.

Opening and Closing the Fuel Fill Door

To open, push and release the fuel door in the area shown until it pops open.







To close, **push** the fuel door until it is flush with the body.





INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Malfunction Indicators If an indicator remains on, there may be a problem; see a dealer.



Charging system



ABS (anti-lock brake system)



Low brake fluid, Brake system



IMA system



Low oil pressure



Malfunction indicator lamp (check engine light)



SRS (supplemental restraint system)



VSA® (vehicle stability assist)*



EPS (electronic power steering)



TPMS (blinks and stays on) (tire pressure monitoring system)



Low temperature



Brake system

Condition Indicators Action is needed by driver.



Parking brake on:



Door/Hatch open: Close door(s) / hatch



Seat belt reminder: Fasten seat belt(s)



Low fuel: Refill



Low tire pressure on: Add air



Message indicator: See MID



High temperature indicator: Pull over and cool down engine



Immobilizer (blinks): Use correct key

On/Off Indicators



SIDE AIRBAG OFF



ECON mode on



PASSENGER AIRBAG OFF (center audio panel)



Exterior lights on



VSA OFF*



Turn signals/hazards on



Auto Idle Stop on (blinking)



High beams on



CRUISE MAIN on*



CRUISE CONTROL on*

* if equipped

MULTI-INFORMATION DISPLAY (MID)

Accessing the Multi-Information Display

Insight



LX/EX




When you start the engine, the MID shows the main display.



To toggle between the MID displays:

- Press the Info button
 (▲/▼) for the main displays.
- Press SEL/RESET for the sub-displays.

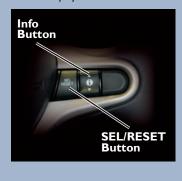

When you start the engine, the MID shows the main display.




To toggle between the MID displays:

- Press the Info button

 (▲/▼) for the main displays.
- Press SEL/RESET for the sub-displays.



Consists of several displays that provide you with useful information.

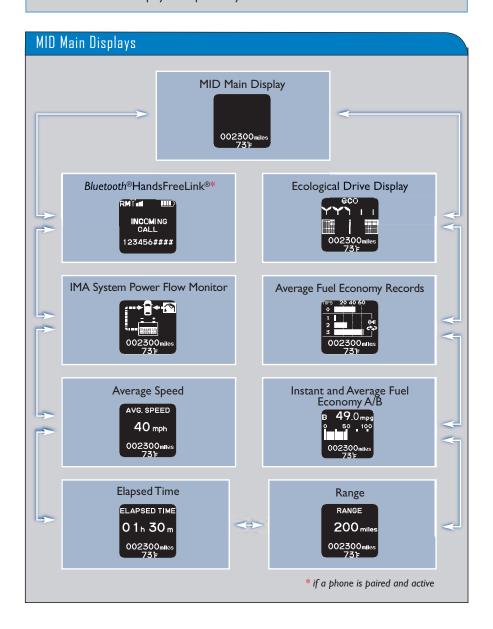

7

ECO ASSIST™

Provides real-time feedback on your driving style so you can learn how to maximize fuel efficiency. It consists of the Ecological Drive Display (on the MID), Ambient Meter, ECON button, and ECON indicator.

Activating the ECON Mode

I. Press ECON.



3. Check the MID.





2. The **ECON** mode indicator comes on.




4. Press either INFO (▲/▼) button and toggle to the Ecological Drive Display.



Note: When turned on, performance of the vehicle's engine, transmission, cruise control, and air conditioning system are adjusted to maximize fuel efficiency.

Driver Feedback



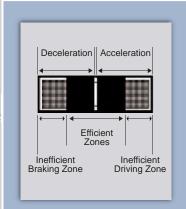

Real-time Fuel Efficiency Coach				
Driving Style	Eco Drive Bar (on the MID)	Ambient Meter Background Color Changes	Fuel Efficiency	
Smooth, steady acceleration maximizes fuel efficiency			High	
Smooth, steady deceleration maximizes fuel efficiency		БИпри		
Moderate acceleration		En		
Moderate deceleration				
Rapid acceleration lowers fuel efficiency		En.		
Rapid deceleration lowers fuel efficiency			Low	

- Keep the Eco Drive bar near the center.
 Keep the Ambient Meter at GREEN.
- Develop a driving style that maximizes fuel efficiency.

NORMAL/ECON mode shown

ECO Assist Scoring

Monitors the fuel efficiency of your driving style in real time and converts results into leaves, which are displayed in a series of five "plant" icons on the MID.

Once you start your vehicle, make sure the MID shows the Ecological Drive Display on the display to view your Eco Assist score in real time.



As you drive, you earn leaves if you drive in a fuel-efficient manner, or lose them if you drive inefficiently.






When you turn the ignition off, your drive cycle and lifetime score are displayed on the MID.





Eco Score


Each time you reach a new stage, a Stage Up Recognition icon briefly appears on the MID. When you reach the highest ranking, a Trophy icon briefly appears.

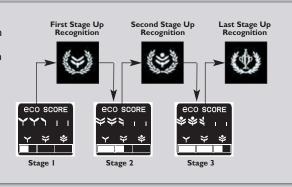

Auto Idle Stop

Shuts the engine off at a stop in order to maximize fuel efficiency. Idle stop duration varies depending on certain conditions, such as climate control operation, IMA battery level, and outside temperature.

Hnw It Wnrks

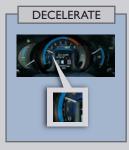





While driving, the engine is on.

While at a stop, with the brake pedal pressed, the engine turns off.

When you take your foot off the brake pedal, the engine turns back on.

Note: Auto Idle Stop only functions if you come to a stop with the shift lever in the D or N position.

IMA Gauge

Shows the status of the Integrated Motor Assist (IMA) system.

The gauge shows you when the IMA motor is assisting the engine or charging the battery.

Note: The IMA assist may not operate under certain conditions.





PADDLE SHIFTING (if equipped)

Manually shift your vehicle's speeds up or down. Useful for engine braking, when driving in hilly terrain, or cornering.

Paddle Modes

Pull (-) to shift down.







D-Paddle Shift Mode

- **Shift** into Drive (D).
- Pull (+) or (-) to temporarily switch from automatic to manual shift mode.
- The speed number is displayed on the shift indicator.
- When the vehicle's speed is constant, the mode returns to automatic.



7-Speed Manual Shift Mode

- Shift into Second (S).
- Pull (+) or (-) to switch to manual shift mode.
- The M indicator and speed number are displayed on the shift indicator.
- Pull and hold (+) to cancel this mode.



L (Low) Mode

- **Shift** into Second (S).
- Pull and hold (+) and (-) at the same time until L is displayed on the shift indicator.
- Use this mode to get more power when going up hills and more engine braking when going down hills.
- Pull and hold again to cancel this mode.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works





Each tire valve stem contains a TPMS sensor.





When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on and "CHECK TIRE PRESSURE" appears on the MID

What to Do

- 1. **Visually inspect** the tires for damage.
- Use a tire air pressure gauge to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.







BLUETOOTH® HANDSFREELINK® (HFL) (if equipped)

Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

How to Use HFL

HFL Talk button: Give HFL commands or answer incoming calls.

HFL Back button: End a call, go back to the previous command, or cancel an operation.



Pairing Your Phone

Press and release the HFL Talk button before you say a command.

- I. **Enable** discovery mode on your compatible phone.
- 2. If no phone has been paired before, the system gives you instructions.

If you are pairing an additional phone, say "Phone setup," then say "Pair."

3. HFL gives you a four-digit code that also appears on the MID.



 Search for HandsFreeLink from your phone, and enter the code when prompted. Connect to HFL.





5. HFL asks you to name the phone. For example, **say** "Mary's phone." The phone is now added.



Making a Call

Press and release the HFL Talk button before you say a command.

1. **Say** "Call" or "Dial" and the phone number.



2. **Say** "Call" or "Dial" to continue.



3. The call is connected and heard through the vehicle's speakers.



Receiving a Call

A notification is heard and the following appears on the MID:





Press the HFL Talk button to accept the call.



Press the HFL Back button to end or decline the call.



HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dials.

Press and release the HFL Talk button before you say a command.

1. Say "Phonebook."



2. Say "Store."



3. **Say** the name of the contact, and then the phone number.



4. To call a contact once an entry is stored, **say** "Call Mike."



iPod® OR USB FLASH DRIVE (if equipped)

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

Connecting Devices and Playing Audio

1. **Pull out** the USB adapter cable from the center console.





Connect the USB connector to your iPod dock connector or flash drive.

2. **Press** AUX until iPod or USB mode appears.



3. **Press** (|◄◄) (▶▶|) or (+) (-) to change tracks









Note: Only connect your device when your vehicle is stopped.

iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

16

DWNER LINK

Owner Link allows you to explore features and technologies specific to your vehicle, obtain and update maintenance and service records, and access other useful information. Register at owners.honda.com to ensure that you continue to enjoy the experience of owning a Honda. For added convenience, Owner Link can also be accessed on a mobile device.





SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FIIFI RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emissions control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at owners.honda.com.

18