2 0 1 0 Technology Reference Guide



Indicators/Info Display/TPMS

Instrument Panel Indicators

Indicators briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



Condition Indicators: Action needed by driver.



Information Display

Consists of several displays that provide you with useful information.


Accessing the Information Display

Information Displays

Once you start the engine, the information display shows your last active selection from the previous drive cycle.

To toggle between the different displays, **press** and **release** the select/reset button repeatedly.



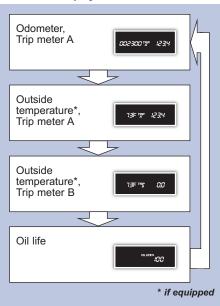

Tire Pressure Monitoring System (TPMS)-

Monitors the vehicle's tire pressures.

How It Works

Each tire valve stem contains a TPMS sensor.



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.



What to Do

Visually inspect the tires and **use** a tire air pressure gauge to check which tire(s) have low pressure.



Inflate the tire(s) to the recommended pressures listed on the label on the driver's doorjamb.



Indicators/Info Display/TPMS

Auto Door Locking/Unlocking

Default Lock Setting



Modifying the Auto Door Unlock Setting

Follow these steps to program all doors to unlock when you shift to Park:

- 1. Close the driver's door Shift into Park
- 2. Turn the ignition to the ON (II) position.
- 3. Press and hold the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.



4. Within 5 seconds. turn the ignition to the LOCK (0) position.



Programmable Auto Door Lock/Unlock Settings

Below are the different programmable options you can choose. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

A	UTO DOOR UNLO	ск		AUTO DOOR LOCI	٢
Auto Uniock (all doors)	When you turn the ignition OFF	When you shift into Park	Auto Lock	When you reach 9 mph	When you shift out of Park
Auto Unlock (only driver's door)	When you turn the ignition OFF	When you shift into Park	Turn off Auto Lock	Operate	manually
Turn off Auto Unlock	Operate	manually			

Auto Door Locks

Voice Command/ HFL/Navigation

Voice Command

Using the Voice Command System

To reduce driver distraction, use voice commands for hands-free calling, navigation, and audio functions. A full list of these commands is in the navigation system manual.




Voice Command Tips:

- Press and release the HFL or NAVI Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, press and release the HFL Talk button and say "Hands-free help."
- For a list of available navigation commands, press and release the NAVI Talk button and say "Voice command help."
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- · Close the windows.

Bluetooth® HandsFreeLink® (if equipped)

Pairing Your Phone

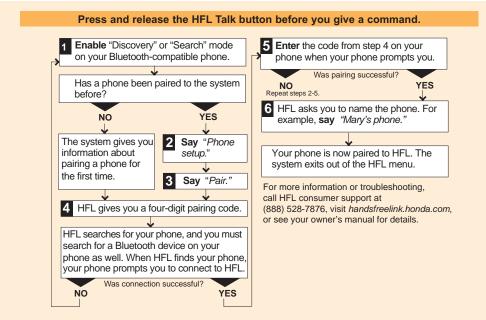

Making a Call

1. **Press** the HFL Talk button, and **say** *"Call"* or *"Dial"* and the desired phone number.



2. **Press** the HFL Talk button, and **say** *"Call"* or *"Dial"* to continue.



3. The call is connected and heard through the vehicle's speakers.



Receiving a Call

1. A notification is heard, and the following screen appears on the navigation display.





2. **Press** the HFL Talk button to accept the call.




3. **Press** the HFL Back button to end or decline the call.



Navigation (if equipped)

Entering a Destination Using Voice Commands

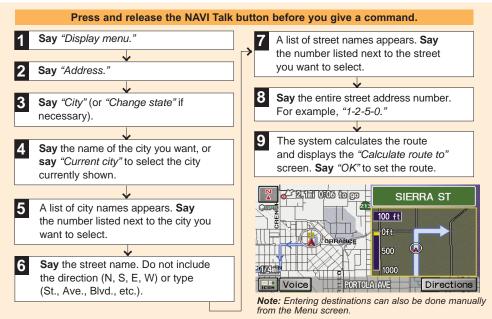

Entering a Destination Using the "Find Nearest" Command

Try these simple steps to find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the NAVI Talk button before you give a command.

1. Say "Find nearest ATM."



2. A list of the nearest ATMs are displayed by shortest distance to destination.

Se	lect a place:	
34	56 CIVIC AVE, TORRANCE, CA	
	0.30mi 🛰	
1	CIVIC BANK	
2	CR-V BANK	
3	PILOT BANK	
4	ACCORD BANK	-

3. Say the number you want to select.

12	34 PILOT BLVD, ANAHEIM, CA	
C	0,40mi k	E
	CIVIC BANK	1
2	CR-V BANK	
3	PILOT BANK	
4	ACCORD BANK	1

 The system calculates the route and displays the "Calculate route to" screen.
 Say "OK" to set the route.



Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the NAVI Talk button before you give a command.

Look for Restaurants in Your Location

Say a command like *"Display restaurants"* to see restaurant icons appear on the map.



Adjust the System Volume

Say "display setup" then "volume up" to increase the volume of the system voice response.

Bright.	• 1	T	0.0	T I	1	111	TIME
Volume	Off	•	11	11	11	1111	THE PART
Display		AL	rto	Da	y	Night	Clock
Guidance	Prompt	5	M	in	N	lorma1	Маж
Contrast			-			Ad	just

Make Audio Selections

Say a command like *"Radio 97.1 FM"* or *"CD play track 5"* to select that station or song.


STEREO	97.	1 rotz
	2 93.1	3 94.7
1 89,9		
¹ 89,9 ⁴ 100,3	5 103,5	4 106.7

Get Estimated Distance to Destination

After a destination is entered, **say** *"How far to destination?"* to hear the remaining distance.



Commonly Used Voice Commands (continued)

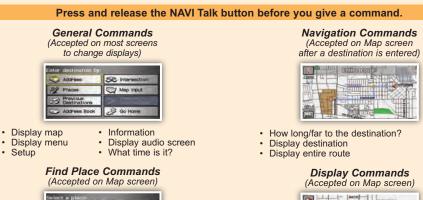



- Find nearest:
 - ATM
 - gas station
 - Mexican restaurant
 - post office

- bank
- Honda dealer
- airport
- hospital



- · Display (or hide):
 - ATM
 - gas station
 - restaurant
 - post office
- · Display north up/ heading up
- Zoom in/out
- · Go home
- Display current location

Commonly Used Voice Commands (continued)

Press and release the NAVI Talk button before you give a command.

Audio Commands

(Accepted on most screens)

	97.	1
1 89.9	# 93.1	3 94.7
4 100 3	5 103.5	# 106.7

Radio Commands

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
 Radio seek up
- CD play track/disc #
 CD skip forward/back
- CD skip lotward/b
 CD track random
- CD track repeat

CD Commands

CD play

Radio seek down

XM Commands

- XM channel #
- · XM channel up
- XM channel down
- XM preset 1/2/3/4/5/6

- PC Card Commands
- Card play
- · Card play track #
- Card skip forward
- · Card skip back

Auxiliary Commands

Auxiliary (AUX) play

Help Commands

(Accepted on most screens)

ť	Getting started
٢Ì	Navigation general command help
5	Navigation display command help
1	Find place help.
6	Keyboard entry help

- Help (list of available commands for current screen)
- Voice command help (list of all available navigation, audio, and climate control commands)

Setup Commands

(Accepted on the Setup screen)



- · Brightness up/down · Guidance prompts
- Volume up/down/ min/max/off
- min/max/normal

Voice Command/ HFL/Navigation

Audio Components

Playing an iPod® or USB Flash Memory Device (if equipped)

Some of the same controls used to operate your in-dash CD player are used to operate an iPod or USB flash memory device.

Connecting and Beginning Play

1. **Open** the center console, and **pull out** the USB adapter cable.



2. **Connect** your USB connector to your flash drive or iPod dock connector.







iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

PC Card Instructions (models with navigation)

Connecting and Beginning Play

1. Press OPEN.



2. If necessary, **insert** your PC card into a PC card adapter.



3. **Insert** the PC card into the slot and **press** CLOSE.



4. **Press** AUDIO to show the audio display. **Use** the I◀◀ and ►►I buttons to skip through tracks on the card.



Audio Components

About This Technology Reference Guide

This Technology Reference Guide has been prepared to help you get quickly acquainted with your new Honda, and to provide reference instructions on driving controls and convenience items.

However, this guide is not intended as a substitute for the Owner's Manual. For complete information on operating the vehicle safely, please refer to the Owner's Manual.

As with the Owner's Manual, this guide covers all models of the Honda Civic 4-Door. Therefore, you may find descriptions of equipment and features that are not on your particular model.

Safety Reminder

Your vehicle is equipped with airbags. Airbags do not replace your seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

Fuel Recommendation

- Use only unleaded gasoline of 87 octane or higher (except Si).
- Use only unleaded gasoline of 91 octane or higher for Si.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emissions control system. Always use MMT-free gasoline if alternatives exist. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at www.hondacars.com.



The Power of Dreams



31SNAQ40 00X31-SNA-Q400 2010 Honda Civic 4-Door Technology Reference Guide 0 2009 American Honda Co., Inc. – All Rights Reserved

Printed in U.S.A.