

TECHNOLOGY REFERENCE GUIDE



www.owners.honda.com

31SNC050
00X31-SNC-0501

2011 Honda Civic Hybrid Technology Reference Guide
©2010 American Honda Motor Co., Inc. — All Rights Reserved

Printed in Japan



2011 CIVIC HYBRID

 
TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of the technology items.

This guide is not intended as a substitute for the Owner's Manual. For complete information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

As with the Owner's Manual, this guide covers all trim levels of the Civic Hybrid. Therefore, you may find descriptions of equipment and features that are not on your particular vehicle.


Auto Door Locks	2
Instrument Panel Indicators	4
Information Display	6
Tire Pressure Monitoring System (TPMS).....	7
Auto Idle Stop	8
Integrated Motor Assist (IMA).....	9
Voice Recognition (if equipped)	10

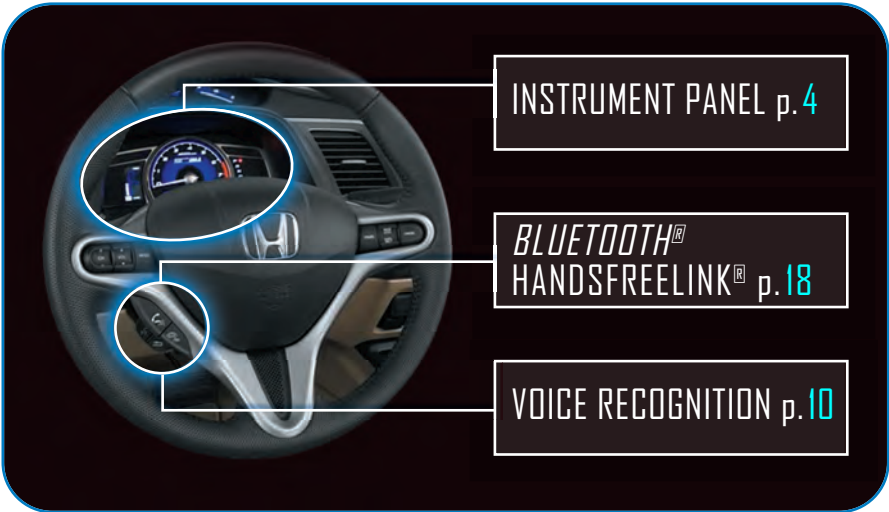

Navigation (if equipped)	16
Bluetooth® HandsFreeLink® (HFL) (if equipped)	18
iPod® or USB Flash Memory	21
PC Card (models with navigation).....	22
Owner Link.....	23
Safety Reminder	24
Fuel Recommendation.....	24


AUTO DOOR LOCKS

 Default Lock Setting

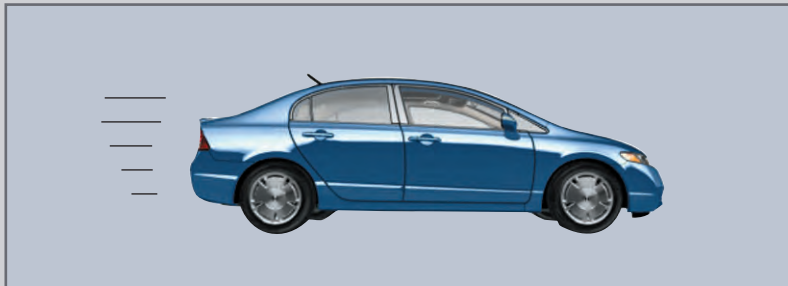

The doors are preset to lock when your vehicle reaches about 10 mph.

 Default Unlock Setting

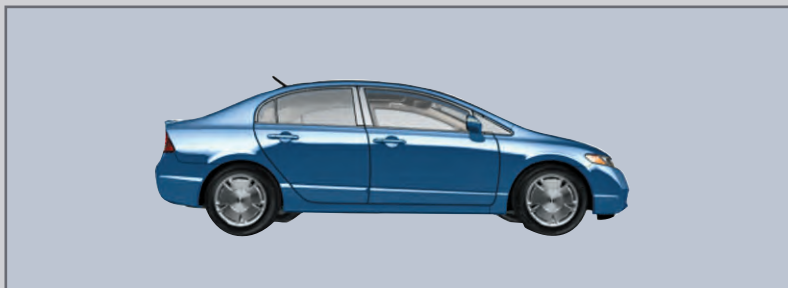

Only the driver's door is preset to unlock when you shift into Park (P).

Program how and when the vehicle doors automatically lock and unlock.

Programming the Auto Door Unlock Setting

To program all doors to unlock when you shift to Park:

1. **Close** the driver's door. **Shift** into Park.



2. **Turn** the ignition switch to ON (II).



3. **Press and hold** the unlock side of the master lock switch for about 10 seconds. In that time, you will hear three clicks.



4. Within 5 seconds, **turn** the ignition switch to LOCK (0).



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose from. See *Auto Door Locking/Unlocking* in your owner's manual for instructions on programming these settings.

AUTO DOOR LOCK			AUTO DOOR UNLOCK		
Auto Lock		When you reach 10 mph	Auto Unlock (all doors)		When you turn the ignition OFF
		When you shift out of Park			When you shift into Park
Turn off Auto Lock		Operate manually	Auto Unlock (only driver's door)		When you turn the ignition OFF
					When you shift into Park
Turn off Auto Unlock		Operate manually	Turn off Auto Unlock		Operate manually
					













INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.






 
Malfunction Indicators


If an indicator remains on, there may be a problem; see your dealer


	Charging system		ABS (anti-lock brake system)
	Low brake fluid		DRL (daytime running lights)
	Low oil pressure		Malfunction indicator lamp (check engine light)
	SRS (supplemental restraint system)		TPMS (tire pressure monitoring system)
	EPS (electric power steering)		VSA (vehicle stability assist)*
	Brake system		IMA system indicator

Condition Indicators

Action is needed by driver

	Parking brake on: Release		Low fuel: Refill
	Door/Trunk open: Close door(s) / trunk		Low tire pressure: Add air

 Seat belt reminder:
Fasten seat belt(s)

 Maintenance Minder™:
Make appointment

On/Off Indicators

	PASSENGER AIRBAG OFF (above Hazard Warning button)		Immobilizer Flashes: improperly coded key; use correct key
	SIDE AIRBAG OFF		Headlights on
	VSA OFF *		Turn signals/hazards on
	CRUISE CONTROL on		High beams on
	CRUISE MAIN on		
	Auto Idle Stop on		

*if equipped

INFORMATION DISPLAY

Consists of several displays that provide you with useful information.

Accessing the Information Display



002300 TRIP A miles
1234

When you start the engine, the information display shows your last active selection from the previous drive cycle.

SEL
RESET mph-km/h

To toggle between the different displays, **press and release** the SEL/RESET button repeatedly.

Information Displays

002300 TRIP A miles
1234

Odometer, Trip meter A

73°F TRIP A miles
1234

Outside temperature,
Trip meter A

OIL LIFE %
100

Oil life

mpg 23 TRIP A miles
1234

MPG (fuel economy),
Trip meter A

mpg 23 TRIP B miles
1234

MPG (fuel economy),
Trip meter B

 
TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



Each tire valve stem contains a TPMS sensor.

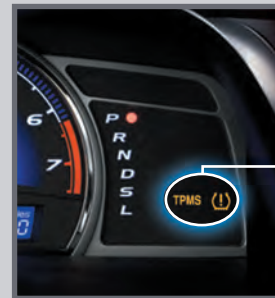

When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on.

TPMS

 
If the TPMS indicator appears, there may be a problem with the system. See your dealer.

What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.




3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

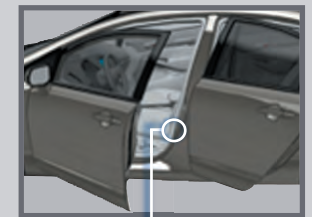

AUTO IDLE STOP

Shuts the engine off at a stop in order to maximize fuel efficiency. Auto idle stop duration varies depending on certain conditions, such as climate control operation, IMA battery level, and outside temperature.

 How It Works

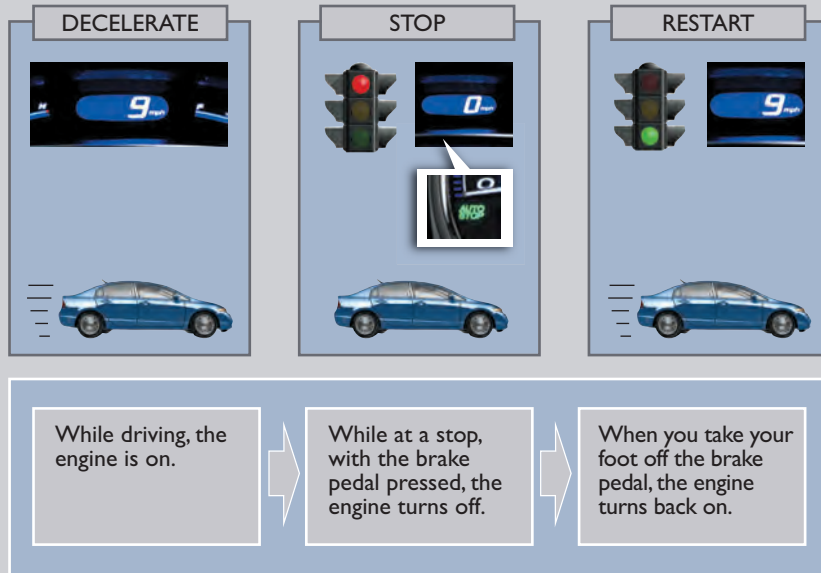

Note: Auto Idle Stop only functions if you come to a stop with the transmission in D or N position.

INTEGRATED MOTOR ASSIST (IMA)

Shows the status of the Integrated Motor Assist (IMA) system.

How It Works



Battery Level Gauge

This gauge shows you the state of charge of the IMA battery.



Charge/Assist Gauge

The gauge shows you when the IMA system is assisting or charging the battery.

Note: IMA Assist operation varies under certain conditions.

VOICE RECOGNITION (if equipped)

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of commands, say "Information" and "Voice Command Help."

Key Functions by Voice Command

Control four different systems with the steering wheel buttons and the ceiling microphone.



HFL Talk button: Give HFL commands or answer incoming calls.

Navi Talk button: Give navigation, audio, and climate control commands.

Navi Back button: Cancel a command or return to the previous screen.

HFL Back button: End a call, go back to the previous command, or cancel an operation.



Voice Command Tips

- **Press and release** the HFL or Navi Talk button, wait for a beep, then give a command.
- For a list of available HFL commands, **press and release** the HFL Talk button and say "Hands-free help."
- For a list of available navigation commands, **press and release** the Navi Talk button and say "Help."
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

NAVIGATION p. 16



BLUETOOTH® HANDSFREELINK® p. 18



AUDIO p. 15



CLIMATE CONTROL p. 15



Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

 
Press and release the NaviTalk button before you give a command.

Locate Points of Interest

Say a command like “Display restaurant” to see restaurant icons appear on the map.



Say a command like “Display gas stations” to see gas station icons appear on the map.

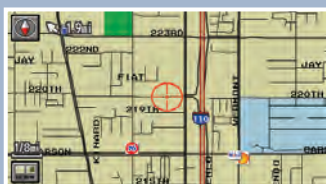


Press and release the NaviTalk button before you give a command.

Get Navigation Route Information

After a destination is entered, **say** “How far to destination?” to hear the remaining distance.



 Say “Display entire route” to see the routing method the system mapped for your destination.

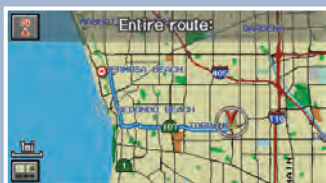

Press and release the NaviTalk button before you give a command.

Make Audio Selections

Say a command like “Radio 97.1 FM” to select that station.



Say a command like “CD play track 1” to hear that song on a currently inserted CD.



Press and release the NaviTalk button before you give a command.

Adjust the Vehicle's Climate Setting

Say a command like “Air conditioner on” to start the air conditioning system.



Say a command like “Fan speed 4” to adjust the fan speed.



Commonly Used Voice Commands (continued)

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the NaviTalk button before you give a command.

General Commands

(Accepted on most screens to change displays)

- Display map
- Display menu
- Information
- Display audio screen
- What time is it?



Find Place Commands

(Accepted on Map screen)

 
- Find nearest:
 - ATM
 - gas station
 - Mexican restaurant
 - post office
 - Honda dealer
 - airport
 - hospital
 - bank



Navigation Commands

(Accepted on Map screen)

- How long/far to destination?
- Display destination
- Display entire route

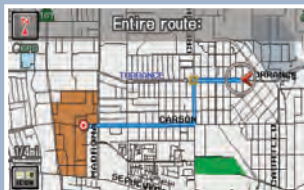

Display Commands

(Accepted on Map screen)

- Display/Hide:
 - ATM
 - gas station
 - restaurant
 - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location



Press and release the NaviTalk button before you give a command.

Audio Commands

(Accepted on most screens)

 
- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- CD play
- CD play track #
- CD skip forward/back
- Auxiliary (AUX) play



Setup Commands

(Accepted on Setup screen)

- Brightness up/down
- Volume up/down/min/max/off
- Guidance prompts min/max/normal

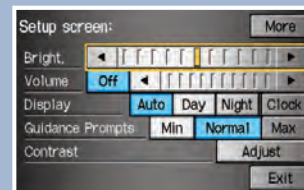

Climate Control Commands

(Accepted on most screens)

 
- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



Help Commands

(Accepted on most screens)

- Help (list of available commands for current screen)
- Voice command help (from INFO screen - list of all available navigation, audio, and climate control commands)

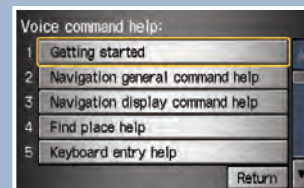

NAVIGATION (if equipped)

 
 
 
 
Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

Entering a Destination

Using Voice Control

Press and release the Navi Talk button before you give a command.

1. Say "Display menu" and "Address."
2. Say "Street" followed by the street name. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
3. A list of street names appears. Say the number next to the street you want to select.
4. Say the entire street address number. For example, "1-2-3-4."
5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.
6. The system calculates the route and displays the "Calculate route to" screen. Say "OK" to set the route.

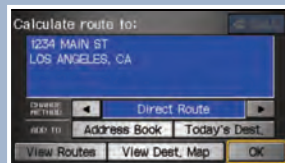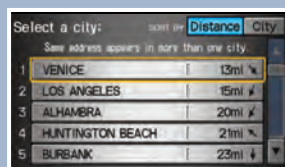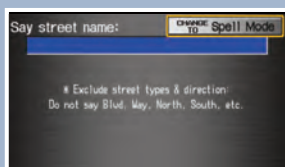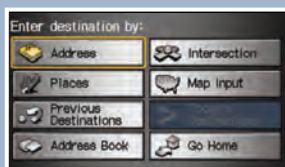


Using Find Nearest Command


Try these simple steps to find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Navi Talk button before you give a command.

 1. Say "Find nearest ATM."
2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
3. Say the number next to the destination you want to select.
4. The system calculates the route and displays the "Calculate route to" screen. Say "OK" to set the route.

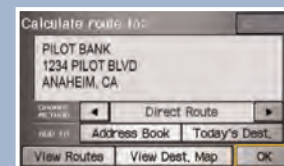


Map Screen Legend

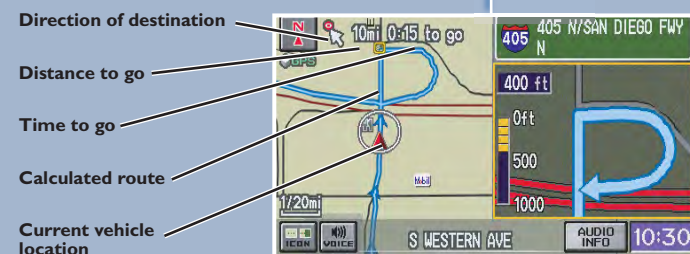 

BLUETOOTH® HANDSFREELINK® (HFL) (if equipped)

Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

 Pairing Your Phone

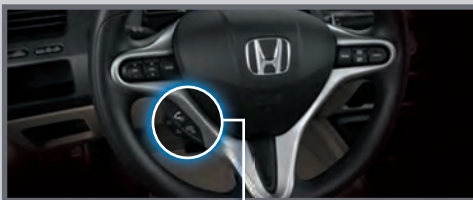

HFL Talk button: Give HFL commands or answer incoming calls.

HFL Back button: End a call, go back to the previous command, or cancel an operation.



Press and release the HFL Talk button before you give a command.

 
1. **Enable** "Discovery" or "Search" mode on your compatible phone.
2. **Say** "Phone setup," then **say** "Pair."



3. HFL gives you a four-digit code and begins to search for your phone.



4. **Search** for a HandsFreeLink device from your phone, and connect to HFL.

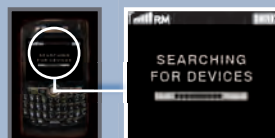

5. **Enter** the four-digit code on your phone when prompted.
6. HFL asks you to name the phone. For example, **say** "Mary's phone."



Making a Call

Press and release the HFL Talk button before you give a command.

 
1. **Press** the HFL Talk button, and **say** "Call" or "Dial" and the desired phone number.



2. **Press** the HFL Talk button, and **say** "Call" or "Dial" to continue.



3. The call is connected and heard through the vehicle's speakers.

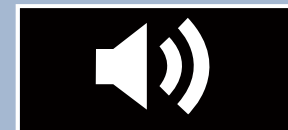

Receiving a Call

1. A notification is heard and the HandsFreeLink display appears on the screen.



2. **Press** the HFL Talk button to accept the call.



3. **Press** the HFL Back button to end or decline the call.



HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dials.

Press and release the HFL Talk button before you give a command.

1. **Say** "Phonebook."



 
3. **Say** the name of the contact, and then the phone number.



2. **Say** "Store."



4. To call a contact once an entry is stored, **say** "Call Mike."

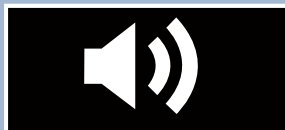


Cellular Phonebook* (models with navigation)


Import your entire cell phone's address book to the navigation system.

Press and release the NaviTalk button before you give a command.

 
1. **Say** "Display Information" and "Cellular Phone."

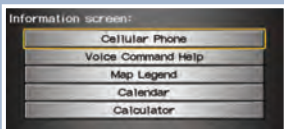

 3. HFL begins to import your contacts to the system.

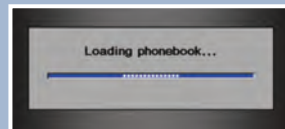

 2. **Say** "Import Cellular Phonebook."

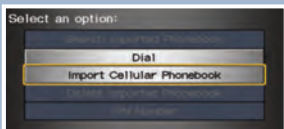

4. To call a contact, **say** "Search Imported Phonebook" and select the name and number.



*not available on all phones

IPOD® OR USB FLASH MEMORY

Play audio files from your compatible iPod or USB flash memory device through your vehicle's audio system.

Connecting Devices and Playing Audio Files

1. **Pull out** the USB adapter cable from the center console.



4. **Press** the SKIP buttons to change tracks.

without navigation



2. **Connect** the USB connector to your iPod dock connector or flash drive.



with navigation



3. **Push** AUX or **touch** the USB icon to begin playing.

without navigation



with navigation



iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

PC CARD (models with navigation)

Play audio files from your compatible PC card through your vehicle's audio system.

Connecting Devices and Playing Audio Files

1. Press OPEN.



3. Insert the PC card into the slot and press CLOSE.



2. If necessary, insert your PC card into a PC card adapter.



4. Press AUDIO to show the audio display. Press the ◀ and ▶ buttons to skip through tracks on the card.



OWNER LINK

Owner Link allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information. Register at www.owners.honda.com to ensure that you continue to enjoy the experience of owning a Honda.

The screenshot shows the Honda Owner Link website. At the top, there's a banner for the 2010 Honda Insight Model Information Guide. Below this, the 'MEMBER | BENEFITS' section lists various services like viewing recall information, scheduling service, and buying genuine parts. The 'MEMBER LOGIN' section includes a login form with fields for Username and Password, and a 'Remember my username' checkbox. The 'NEW REGISTRATION' section encourages users to register now. A 'Are you a Honda owner?' section features a 'Register for Owner Link' button, which is circled in red. Other links include 'Forgot your username or password?' and 'Having trouble logging in?'.

REGISTRATION

Questions about registration? [FIND HELP HERE.](#)

After registration, you can always click "My Profile" to edit or update your information.

VeriSign Secured VERIPHY

Note: Username and password are case sensitive.

first name: last name:

username: password (min. 6 char.): confirm password:

email address: confirm email address:

VIN or Hull Identification Number (VIN):

promo:

Please Note: E-mail spam filters may block our e-mails from being delivered. If you have a spam blocker, please set it to accept e-mails from "ownerlink@ebizmail.honda.com".

Where can I find my VIN? [Benefits of entering VIN](#)

SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emissions control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at www.owners.honda.com.