

[owners.acura.com](http://owners.acura.com)

2014 Acura ILX Hybrid  
Advanced Technology Guide  
©2013 Honda Motor Co., Ltd. — All Rights Reserved

31TX8A10  
00X31-TX8-A100

Printed in U.S.A.

ILX



2014 ADVANCED TECHNOLOGY GUIDE

## ADVANCED TECHNOLOGY GUIDE

This Advanced Technology Guide is designed to help you get acquainted with your new Acura ILX Hybrid and provide basic instructions on some of its technology and convenience features.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.



Keyless Access System .....	2
Instrument Panel Indicators .....	4
Multi-Information Display (MID) .....	6
Eco Assist™ .....	10
Color Information Display .....	13
One-Touch Turn Signal .....	14
Auto Headlights with Wiper Integration .....	14
Bluetooth® HandsFreeLink® .....	15

SMS Text Messaging .....	20
Bluetooth® Audio .....	22
iPod® or USB Flash Drive .....	23
Pandora® .....	24
Multi-View Rear Camera .....	25
Acura Owners .....	26
Safety Reminder .....	26
Fuel Recommendation .....	26

# KEYLESS ACCESS SYSTEM

Operate certain functions of your vehicle by simply having the remote transmitter within operating range.

## Unlocking the Doors



Grab either one of the front door handles when the vehicle is off.




## Locking the Doors



Press the door lock button on either front door handle when the vehicle is off.



## Opening the Trunk

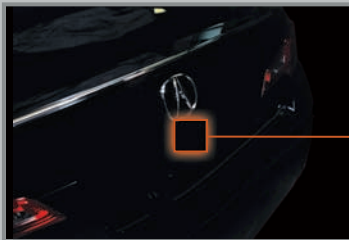

Press the trunk release button under the spoiler when all doors are unlocked. The vehicle can be on or off.



## Engine Start/Stop Button

### Accessory or On Mode

Operate audio or other electrical features without turning the engine on.



Press ENGINE START/STOP once without pressing the brake pedal for Accessory mode. Press it again for On mode.



### Starting the Engine



Press and hold the brake pedal, then press ENGINE START/STOP.



### Turning the Vehicle Off




Shift to Park, then press ENGINE START/STOP.



**Note:** If you press ENGINE START/STOP when the vehicle is stopped and the shift lever is in Park, the vehicle goes into Accessory mode.





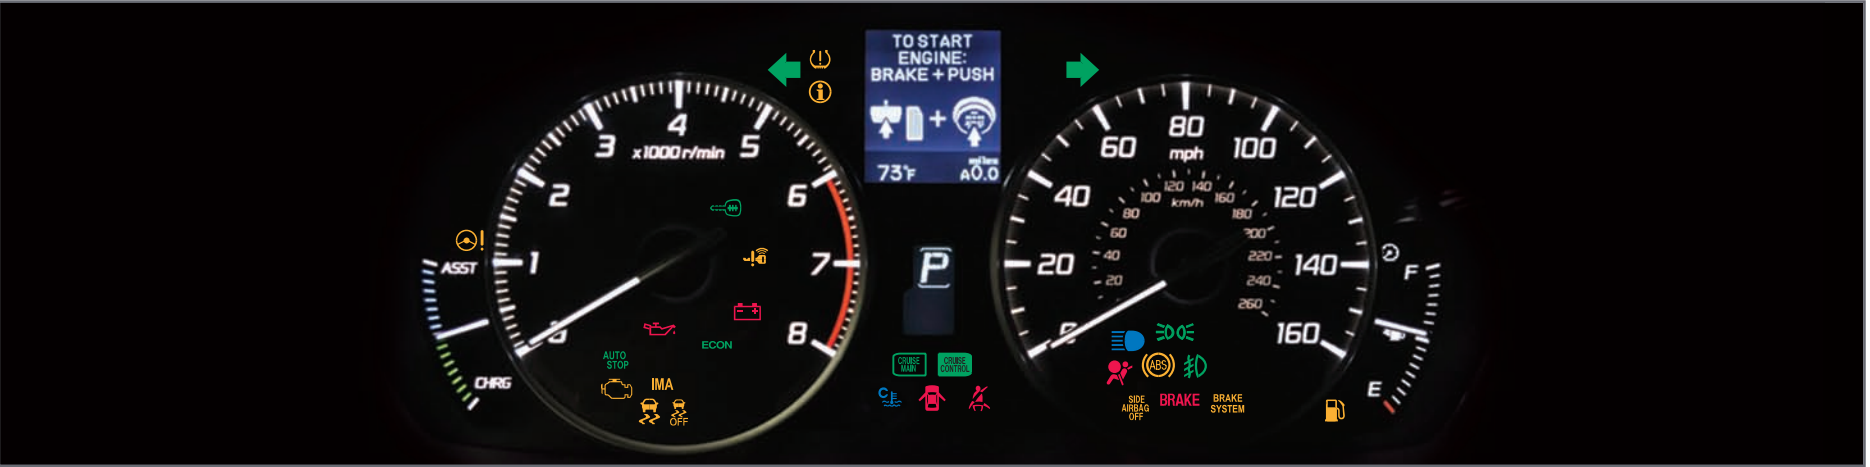








# INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.




## Malfunction Indicators






If an indicator remains on, there may be a problem; see your dealer.

- |  |   |
|--|---|
|  Charging system                         |  Vehicle Stability Assist® (VSA) system                                |
|  <b>BRAKE</b> Low brake fluid            |  Tire Pressure Monitoring System (TPMS) ( <i>blinks and stays on</i> ) |
|  Low oil pressure                        |  Electric Power Steering (EPS) system                                  |
|  Supplemental Restraint System (SRS)    |  <b>IMA</b> Hybrid system   |
|  Anti-lock Brake System (ABS)          |  Low temperature ( <i>stays on</i> )                                 |
|  Keyless Access System                 |  <b>BRAKE SYSTEM</b> Brake system                                    |
|  Malfunction lamp (check engine light) |   |











## Condition Indicators

Action is needed by driver.

- |   |   |
|---|---|
|  <b>BRAKE</b> Parking brake on: Release |  Seat belt reminder: Fasten seat belt(s) |
|---|---|

- |   |  |
|---|--|
|  Door/trunk open indicator: Close door/trunk                         |  Message indicator: See MID |
|  Low tire pressure ( <i>stays on</i> ): Add air                      |  Low fuel: Refill           |
|  Immobilizer ( <i>blinks</i> ): Use other vehicle key and see dealer |  |

## On/Off Indicators

- |  |   |
|--|---|
|  PASSENGER AIRBAG OFF (next to display) |  Exterior lights on                  |
|  SIDE AIRBAG OFF                        |  Turn signals/hazards on             |
|  VSA OFF                                |  Fog lights on                       |
|  CRUISE MAIN on                         |  High beams on                       |
|  CRUISE CONTROL on                      |  Auto Idle Stop on ( <i>blinks</i> ) |
|  ECON mode on                           |   |

# MULTI-INFORMATION DISPLAY (MID)


Consists of several displays that provide you with useful information.

## Accessing the MID


When you start the engine, the MID shows the last active display from the previous drive cycle.




- To toggle between the different displays:
- Press either Info button (▲/▼) for the main displays.
  - Press SEL/RESET for the lower displays.

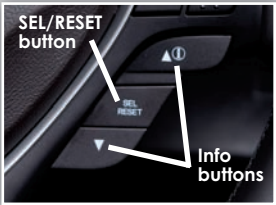

## Main Displays

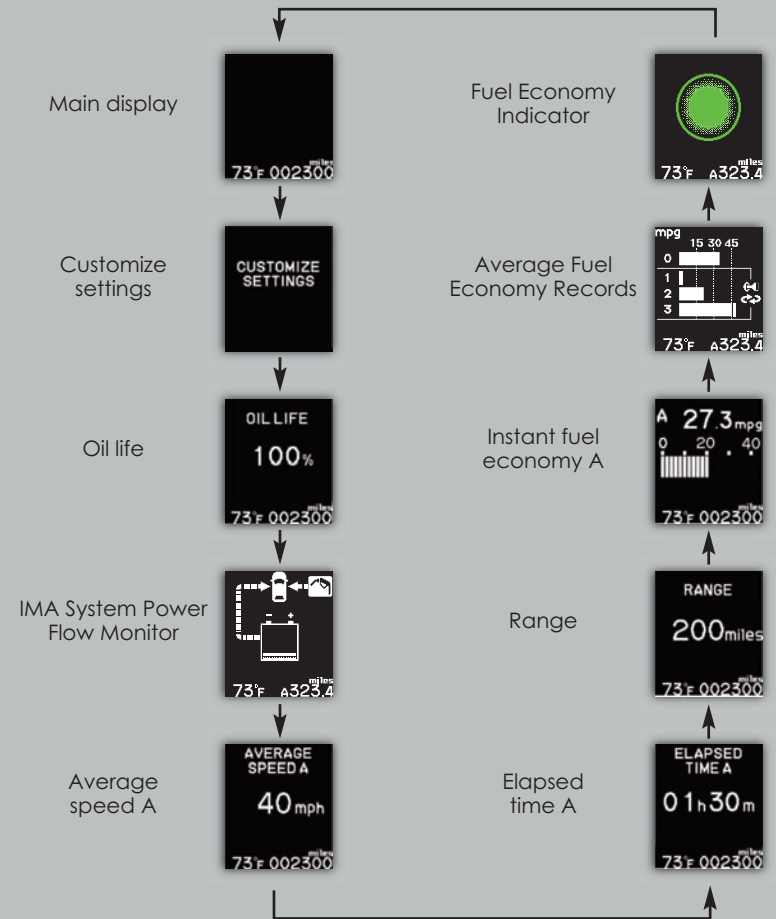

## Lower Displays

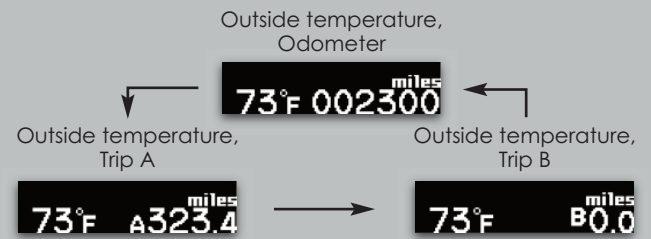


## Customizing Settings Using the MID


Program various vehicle settings using the MID. One example is shown below. See your Owner's Manual for other customizable settings.

### Programming the Auto Door Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P). You can change this to a different setting.

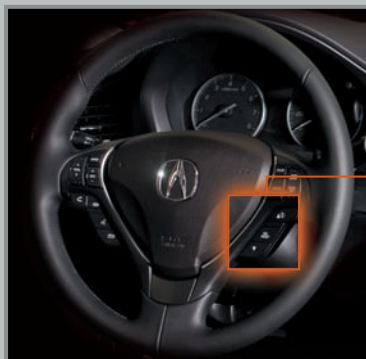

Press either Info button (▲/▼) on the steering wheel to toggle to the Customize Settings display, then press SEL/RESET to activate the menu.

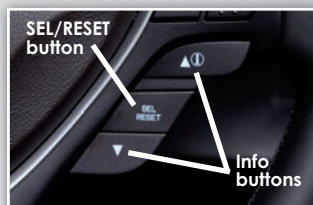

1. Select DOOR SETUP.



2. Select AUTO DOOR UNLOCK.



3. Select the option you want.



4. The setting is displayed, and the display returns to the AUTO DOOR UNLOCK menu.



Press either INFO button to exit the menu.

**Note:** The driver's and front passenger's doors can be opened by pulling the inner front door handle, regardless of the setting. Changing the setting to "All Doors" is useful for rear passengers.

## Tire Pressure Monitoring System


Alerts you when one or more of your tires have significantly low pressure.

### How It Works




If the tire pressure drops significantly below recommended levels:

- The low tire pressure indicator comes on.
- A "CHECK TIRE PRESSURE" message appears on the MID.
- If a "CHECK TPMS SYSTEM" message appears, there may be a problem with the system. See your dealer.

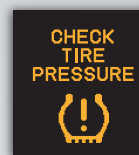

### What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge to check which tire(s) have low pressure.

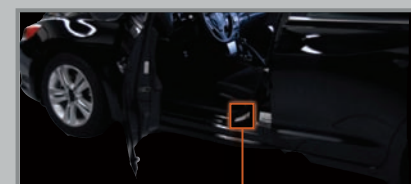

3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.





# ECO ASSIST™

Provides various ways to monitor your fuel efficiency and driving style.

## Activating ECON Mode

Helps you further maximize your fuel efficiency by modifying some vehicle functions.

1. Press ECON.



2. The ECON mode indicator comes on.



3. Check the MID.



Press ECON again to turn the system off.

**Note:** When turned on, performance of the vehicle's engine, transmission, cruise control, and air conditioning system are adjusted to maximize fuel efficiency.

## Driver Feedback

Indicates real-time fuel efficiency. Results are displayed on the MID, where sphere size increases or decreases based on your driving style.



Press either Info button (▲/▼) to toggle to the Fuel Economy Indicator.



Real-time Fuel Efficiency Coach	
Driving Style	Fuel Economy Indicator (on the MID)
Smooth, steady acceleration <b>maximizes fuel efficiency</b>	
Smooth, steady deceleration <b>maximizes fuel efficiency</b>	
Moderate acceleration	
Moderate deceleration	
Rapid acceleration <b>lowers fuel efficiency</b>	
Rapid deceleration <b>lowers fuel efficiency</b>	

### ECO Score

Every time your vehicle is turned off, your lifetime driving score appears on the MID. Depending on your driving style, your lifetime points can increase or decrease.



Stage 1




Stage 2



Stage 3

## Auto Idle Stop

Shuts the engine off at a stop in order to maximize fuel efficiency. Idle stop duration varies depending on certain conditions, such as climate control operation, hybrid battery level, and outside temperature.

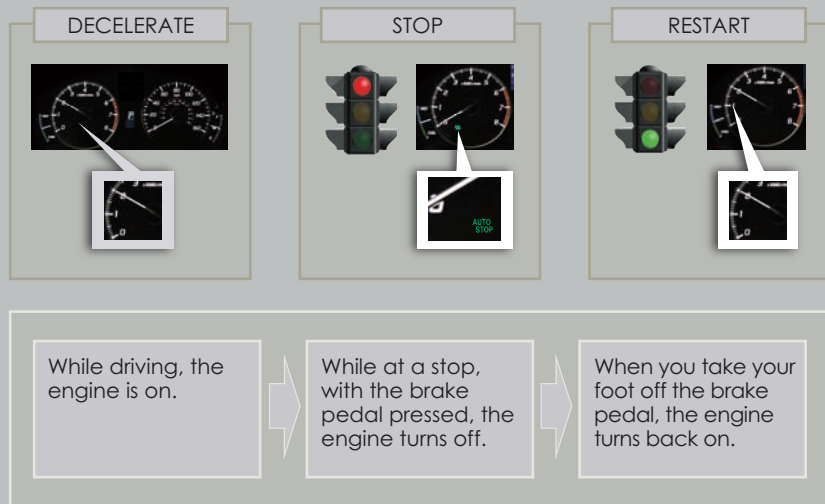

**Note:** Auto Idle Stop only functions if you come to a stop with the shift lever in the D or N position.

## Charge/Assist Gauge

Shows the status of the hybrid system.

The gauge shows you when the hybrid motor is assisting the engine or charging the battery.

**Note:** The hybrid assist may not operate under certain conditions.



## COLOR INFORMATION DISPLAY

Choose what to display in the upper screen.

 
### Changing the Display



Press DISPLAY. Rotate the selector knob to choose and enter your selection.

### Display Options


**Audio/Phone**  
Show current audio or phone call information.



**Clock (or wallpaper)**  
Show the clock or an imported image.\*



 **Minimum**  
Show a blank screen with the clock.



\*See your Owner's Manual for instructions on how to upload a wallpaper image.




## ONE-TOUCH TURN SIGNAL

Use this quick and convenient method to signal a lane change.

### How It Works

- Lightly push the turn signal lever up or down for a three-blink sequence.
- For a continuous signal, push the lever up or down until it locks into place.

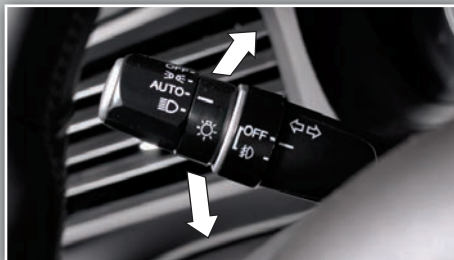

## AUTO HEADLIGHTS WITH WIPER INTEGRATION

For your convenience, your vehicle's headlights automatically turn on when the windshield wipers operate.

### How It Works

- Make sure your headlights are in the AUTO position.
- **Turn on** your windshield wipers. The headlights also turn on.
- When you turn off the windshield wipers, the headlights turn off shortly after.



## BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if this feature is compatible with your phone.

**To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### Using HFL

**Pick-Up button:** Answer an incoming call or go directly to the Phone screen.

**Hang-Up button:** End a call or decline an incoming call.

**Talk button:** Make a call using a stored voice tag.

**Back button:** Press to cancel an operation or return to the previous screen.



Use these three buttons to navigate through the HFL menus.

**PHONE button:** Go directly to the Phone screen.

**Back button:** Press to cancel an operation or return to the previous screen.



 
**Audio selector knob:** Rotate to scroll through selections and press to make a selection.

## Pairing Your Phone


Use this pairing method if no phone has ever been paired to the system. You can pair your phone only when the vehicle is stopped.

Use the audio selector knob to make and enter selections.

1. Press the Pick-Up button to go to the Phone screen. A prompt appears. Select Yes.



 
3. HFL searches for your phone. Select it when it appears on the list.




*If your phone does not appear:*

Select Phone Not Found, and search for HandsFreeLink from your phone. Connect to HFL.

 2. Make sure your phone is in discovery mode. Select OK.



 4. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.



Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

 
Use the audio selector knob to make and enter selections.

1. Press the Pick-Up button to go to the Phone screen.




If a prompt appears asking to connect to a phone, select No.


2. Select Phone setup.



 
3. Select Connection.



 4. Select Add a New Phone.




 5. Select an empty location for the phone.




6. Make sure your phone is in discovery mode, and select OK.

 7. HFL searches for your phone. Select your phone when it appears on the list.



*If your phone does not appear:*

 Select Phone Not Found and search for HandsFreeLink from your phone. Connect to HFL.



8. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.







## Dialing a Number

    Enter a 10-digit phone number to call. This feature is inoperable when the vehicle is moving.


Use the audio selector knob to make and enter selections.

1. Press the Pick-Up button to go to the Phone screen.
2. Select Dial.
3. Enter the phone number. Select the green Dial icon or press the Pick-Up button to call.
4. The call is connected and heard through the vehicle speakers.



## Receiving a Call

When you receive an incoming call, you hear a notification and see the following pop-up message:

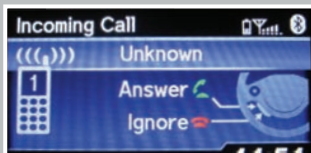

Press the Pick-Up button to accept the call.



Press the Hang-Up button to end or decline the call.





## Using the Phonebook

 
 
When your phone is paired, its entire phonebook is automatically imported to the system. This feature is inoperable when the vehicle is moving.

Use the audio selector knob to make and enter selections.

1. Press the Pick-Up button to go to the Phone screen.
2. Select Phonebook.
3. Scroll through the list to find the name and number you want to call, and select it.
4. The call is connected and heard through the vehicle speakers.



  
2. Select Phonebook.




## Using Speed Dial

When a speed dial entry is stored with a voice tag, you can make a call using voice commands at any time. See your Owner's Manual for more information.

 1. Press the Talk button. The system asks which name you want to call.
2. Say the stored voice tag name.
3. The call is connected and heard through the vehicle speakers.



 2. Say the stored voice tag name.




# SMS TEXT MESSAGING

Receive and send text messages from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if this feature is compatible with your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

## Receiving Text Messages

Use the audio selector knob to make and enter selections.




- 1. A notification appears on the multi-information display. Select Yes to open the message.
- 2. The message is displayed, and the system reads it aloud.

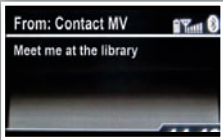

## Replying to Text Messages

Use the audio selector knob to make and enter selections.

  
 
- 1. With the message open, press the selector knob to enter the Text Message menu.
- 2. Select Reply.
- 3. Select one of the six available reply messages.
- 4. Select Yes to send the message.



## Calling the Sender

Use the audio selector knob to make and enter selections.


 
 
- 1. With the message open, press the selector knob to enter the Text Message menu.
- 2. Select Call.
- 3. HFL begins dialing the number.



## Displaying Messages

Use the audio selector knob to make and enter selections.

- 1. Press PHONE or the Pick-Up button to go to the Phone menu.
- 2. Select Text Message. The 20 most recent text messages from your phone are displayed.
- 3. Select a message to open it and hear it read aloud.

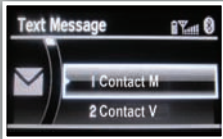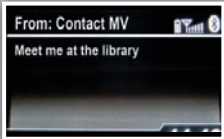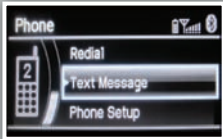

## BLUETOOTH® AUDIO

Play audio files from your compatible phone through your vehicle's audio system. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if this feature is compatible with your phone.

### Playing Bluetooth Audio

1. Make sure your phone is on and paired to Bluetooth® HandsFreeLink® (see [page 15](#)).

2. Press AUX until Bluetooth Audio appears.



3. From your phone, open the desired audio player or app and begin playback. Sound is redirected to the audio system.

Make sure the volume on your phone is properly adjusted.

#### Notes:

- You may need to enable additional Bluetooth settings on your phone for playback.
- Remote audio controls and the play/pause function may not be supported on all phones.
- Operate your phone only when your vehicle is stopped.

4. Press (⏮) (⏭) or (+) (-) to change tracks.



## iPod® or USB Flash Drive

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

### Connecting Devices and Playing Audio

1. Open the front console, and pull out the USB adapter cable.



Connect the cable to your iPod dock connector or flash drive.

2. Press AUX until iPod or USB appears.



3. Press (⏮) (⏭) or (+) (-) to change tracks.



**Note:** Connect your device only when your vehicle is stopped.

*iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.*



# PANDORA®

Play and operate Pandora from your iPhone® through your vehicle's audio system. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if this feature is compatible with your phone. Standard data rates apply.

## Playing Pandora

1. Open the front console, and pull out the USB adapter cable.



Connect the cable to your iPhone dock connector.


2. Open Pandora from your phone. Press AUX until Pandora appears and streaming begins.



3. Press the selector knob to enter the Pandora menu.



You can select items such as the Station List, SKIP, Like/Dislike, and Pause/Resume.\*

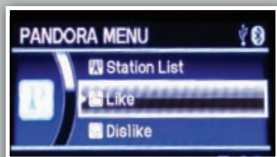

### Notes:

- If the Pandora app is not selected on your phone, iPod music is played.
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If you shut down the Pandora app, you must reopen it on your phone to resume play.
- If you cannot operate Pandora through the audio system, it may be streaming through Bluetooth® Audio. Make sure to select Pandora mode on the audio system. If Pandora still does not operate, you may have to reconnect the cable.
- Connect your phone only when your vehicle is stopped.

\*Menu functions not available on all phones  
iPhone is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries.

# MULTI-VIEW REAR CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

## How It Works

- When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the upper display.
- Yellow parking guide lines also appear to help you judge distance.
- The rearview display turns off when you shift out of Reverse.



## Switching Views

There are three rearview modes: wide, normal, and top down. Press the selector knob to toggle between views.



Wide (default)



Normal




Top down





# ACURA OWNERS

Visit [owners.acura.com](http://owners.acura.com) and register to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information.

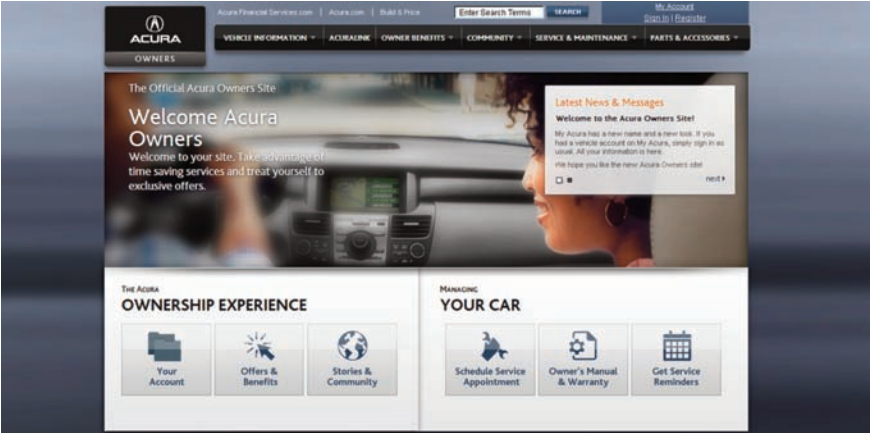

# SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat, as the force of a deploying airbag can seriously injure an infant.

# FUEL RECOMMENDATION

Use of unleaded premium gasoline of 91 octane or higher is recommended.

- Acura recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.
- See your Owner's Manual for more information.

Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under your new vehicle warranty.

TOP TIER Detergent Gasoline (recommended) never contains MMT and has detergent additives to keep your engine clean. For further information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit [owners.acura.com](http://owners.acura.com).