

TECHNOLOGY
REFERENCE
GUIDE



PILOT

owners.honda.com

31SZAC40
00X31-SZA-C400

2013 Honda Pilot Touring
Technology Reference Guide
©2012 American Honda Motor Co., Inc. — All Rights Reserved

Printed in U.S.A.



2013 Pilot Touring

TECHNOLOGY REFERENCE GUIDE

The Technology Reference Guide is designed to help you get acquainted with your new Honda and provide basic instructions on some of its technology and convenience features. This guide covers the Pilot Touring.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.



Auto Door Locks	2
Instrument Panel Indicators	4
Multi-Information Display (MID)	6
Tire Pressure Monitoring System (TPMS).....	8
Driving Position Memory System (DPMS).....	9
Multi-View Rear Camera	10
Reverse Tilt Door Mirrors	11
Voice Recognition.....	12
Navigation.....	16
Bluetooth® HandsFreeLink® (HFL).....	19

Bluetooth® Audio	23
iPod® or USB Flash Drive.....	24
Hard Disc Drive (HDD) Audio	25
Song By Voice™ (SBV)	26
Rear Entertainment System (RES).....	28
HomeLink®.....	30
Parking Sensor System	31
Owner Link.....	32
Safety Reminder	32
Fuel Recommendation.....	33

AUTO DOOR LOCKS

Default Lock/Unlock Setting

Default Lock Setting

All doors and the tailgate are preset to lock when your vehicle reaches about 10 mph.











Default Unlock Setting

Only the driver's door is preset to unlock when you shift into Park (P).



Programmable Auto Door Lock/Unlock Settings

Below are the options you can choose. See *Auto Door Locking/Unlocking* in your Owner's Manual for instructions on programming these settings.

AUTO DOOR LOCK		AUTO DOOR UNLOCK		
Auto Lock	 When you reach 10 mph	 When you shift out of Park	 When you turn the ignition OFF	 When you shift into Park
Turn off Auto Lock	 Operate manually		 When you turn the ignition OFF	 When you shift into Park
Turn off Auto Unlock	 Operate manually			

Program how and when the vehicle doors and the tailgate automatically lock and unlock.

 
Programming the Auto Door Unlock Setting

Press either Info (▲/▼) button on the steering wheel to toggle to the “Keyless Memory Settings” display on the MID, then press SEL/RESET to enter the menu.


1. Select CHANGE SETTING.



2. Select DOOR/WINDOW SETUP.



 
3. Select AUTO DOOR UNLOCK.



4. Select SHIFT TO P.



 5. Select ALL DOORS.




6. Select EXIT to save the setting and exit the menu.







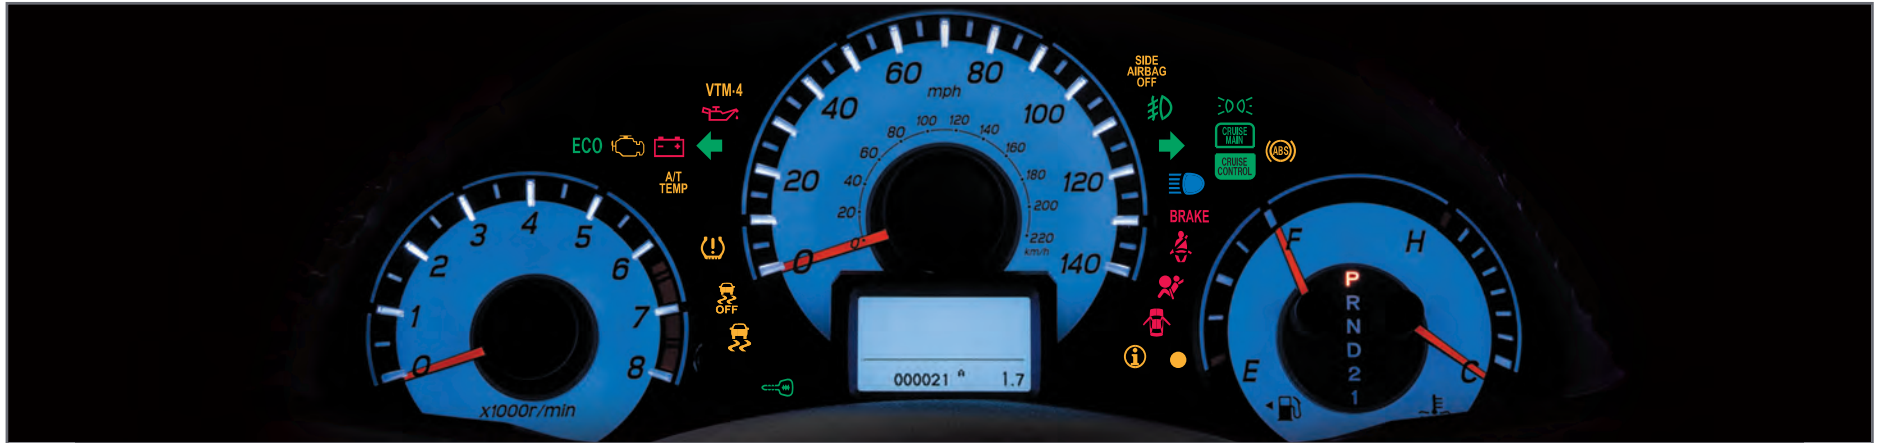




INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.









Malfunction Indicators



If an indicator remains on, there may be a problem; see your dealer

 Charging system	 VTM-4 (4WD only)
 Low brake fluid, Brake system	 Malfunction lamp (check engine light)
 Low oil pressure	 VSA® (vehicle stability assist)
 SRS (supplemental restraint system)	 TPMS (blinking) (tire pressure monitoring system)
 ABS (anti-lock brake system)	











Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Low fuel: Refill
 Door/Tailgate open: Close door(s) / tailgate	 Low tire pressure (stays on): Add air
 Seat belt reminder: Fasten seat belt(s)	 Message indicator: See MID

 A/T Temperature (4WD only): Pull over and let engine idle	 Immobilizer (blinks): Use correct key
---	---

On/Off Indicators

 PASSENGER AIRBAG OFF (located on center panel)	 Fog lights on
 SIDE AIRBAG OFF	 Headlights on
 VSA OFF	 Turn signals/hazards on
 CRUISE MAIN on	 High beams on
 CRUISE CONTROL on	
 Fuel economy on	

MULTI-INFORMATION DISPLAY (MID)



Consists of several displays that provide you with useful information.

Accessing the Multi-Information Display




To toggle between the MID displays:

- Press either Info button (▲/▼) for the main displays.
- Press SEL/RESET for the sub-displays.

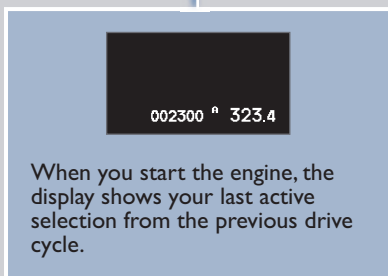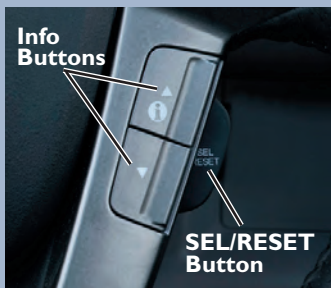

MID Main Displays

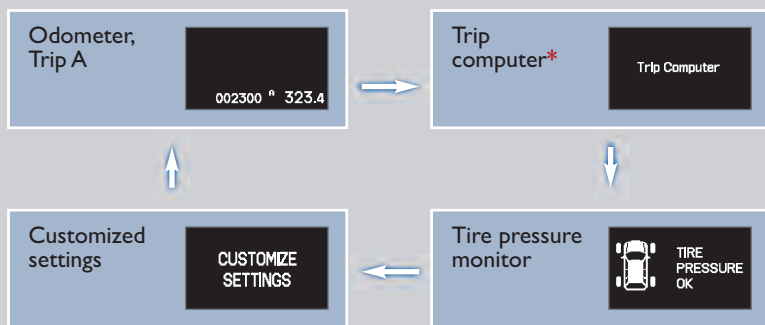

* see next page



Trip Computer



While on the Trip Computer display, **press** the SEL/RESET button to access trip information. **Press** either Info (▲/▼) button to toggle through the various screens, or SEL/RESET for sub-displays.

➔ Press the **Info** button

➔ Press **SEL/RESET**

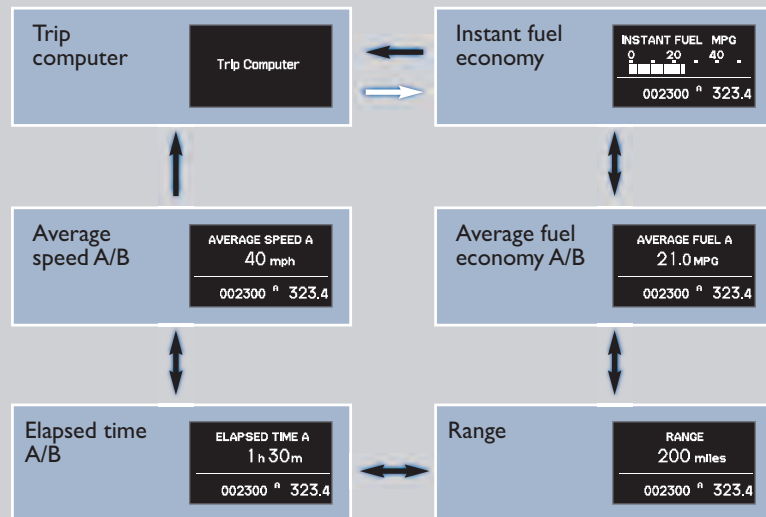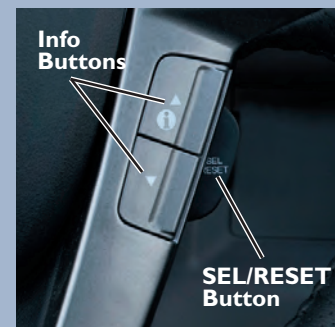

TIRE PRESSURE MONITORING SYSTEM (TPMS)

Monitors the vehicle's tire pressures.

How It Works



Each tire valve stem contains a TPMS sensor.



When the tire pressure drops significantly below recommended levels, the low tire pressure indicator comes on and a message appears on the MID.

What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge to check which tire(s) have low pressure.



3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.




DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat and side mirror positions into memory for each corresponding keyless remote (1 or 2), which are recalled when you unlock the driver's door with the remote and enter the vehicle.

Programming the DPMS

1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).

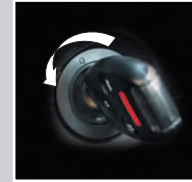

3. **Press** SET. You will hear a beep.



2. **Adjust** the seat and outside mirrors to your preferred settings.



4. **Press** the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.



Note: Stored positions can also be recalled by pressing one of the memory buttons (1 or 2) on the door.

MULTI-VIEW REAR CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

How It Works

- When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the navigation display.
- Yellow parking guide lines also appear to help you judge distance.
- The rearview display turns off when you shift out of Reverse.



Adjusting the View

Turning the Guide Lines On or Off

Press and hold CANCEL for about 3 seconds.



Switching Views

There are three rearview modes: wide, normal, and top down.

- Press ENTER to toggle between views.
- Rotate the Interface Dial to adjust the screen brightness.



REVERSE TILT DOOR MIRRORS

When you shift into Reverse (R), you can tilt either outside door mirror down slightly to improve your view as you parallel park. Shifting out of Reverse returns the tilted mirror to its original position.

How It Works

- To tilt the driver's door mirror, **move** the mirror selector switch to the left (L) position.
- To tilt the passenger's side door mirror, **move** the mirror selector switch to the right (R) position.
- To turn the feature off, **move** the switch to the middle position.



VOICE RECOGNITION

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, and climate control. For a full list of commands, say "Information" and "Voice Help."

Key Functions by Voice Command

Control four different systems with the steering wheel buttons and the ceiling microphone.



Pick-Up button: Answer an incoming call, or go directly to the Phone screen.

Talk button: Give HFL, navigation, audio, or climate control commands.

Back button: Cancel a command and return to the previous screen.

Hang-Up button: End a call or decline a call.



Voice Command Tips

- To hear a list of available commands at any time, press and release the Talk button, then say "Help."
- When using the Talk button, wait for a beep, then say a command.
- When the Talk button is pressed, all available voice commands are highlighted in blue.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

NAVIGATION p. 16



BLUETOOTH® HANDSFREELINK® p. 19



AUDIO p. 15



CLIMATE p. 15



Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Talk button before you say a command.

General Commands

(Accepted on most screens to change displays)


- Display map
- Display menu
- Display phone
- Information
- Display audio screen
- What time is it?



Find Place Commands

(Accepted on Map screen)


- Find nearest:
 - ATM
 - Honda dealer
 - gas station
 - airport
 - Mexican restaurant
 - hospital
 - bank
 - post office

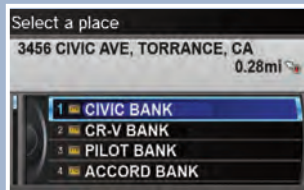

Navigation Commands

(Accepted on Map screen)


- How long/far to the destination?
- Display destination map
- Display entire route

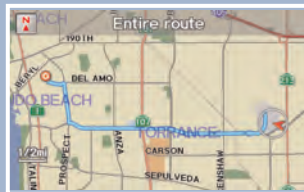

Display Commands

(Accepted on Map screen)

- Display (or hide):
 - ATM
 - gas station
 - restaurant
 - post office
- Display north up/heading up
- Zoom in/out
- Go home
- Display current location

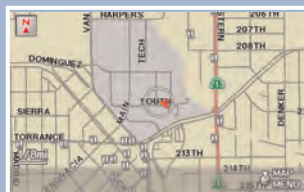


Press and release the Talk button before you say a command.

Audio Commands

(Accepted on most screens)

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM preset 1/2/3/4/5/6
- DISC play
- DISC play track #
- DISC skip forward/back
- iPod/USB/HDD play

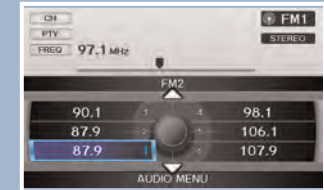

Setup Commands

(Accepted on Setup screen)

- Brightness up/down
- Volume up/down/min/max/off
- Interface dial feedback off/auto/on



Climate Control Commands

(Accepted on most screens)


- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57-87)
- Temperature max hot/cold



Help Commands

(Accepted on most screens)

- Help (list of available commands for current screen)
- Voice help (from INFO screen – list of all available navigation, audio, and climate control commands)

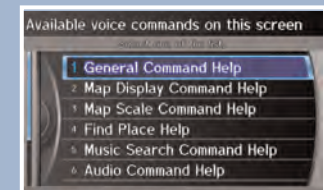




NAVIGATION

Entering a Destination Using Voice Commands

Set a destination using a street address. For other destination options, see your Navigation Manual.

Press and release the Talk button before you say a command.

1. Say "Display menu." Say "Address."
2. Say "Street," then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).
3. A list of street names appears. Say the number next to the street you want.
4. Say the entire street address number. For example, "1-2-3-4." If necessary, say "OK" to proceed.
5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want to select.
6. The system displays the "Calculate route to" screen. Say "OK" to set the route.

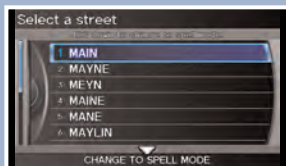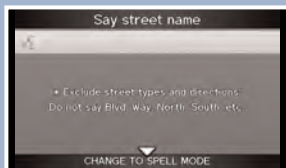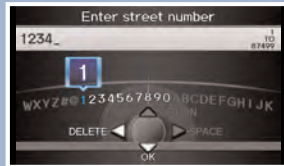


Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

Using the "Find Nearest" Command



Find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

Press and release the Talk button before you say a command.

1. From the map screen, say "Find nearest ATM."
2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.
3. Say the number next to the destination you want to select.
4. The system calculates and displays the route.

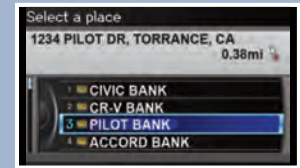

2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.

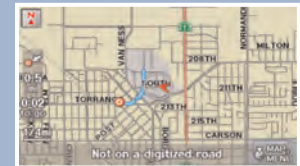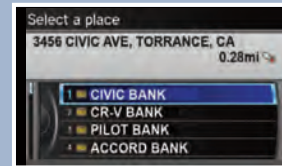

Map Screen Legend




FM Traffic

Provides continuously updated info, including traffic speed, incidents, and construction in major metro areas. Works in cities where a clear FM traffic signal is available.

Press and release the Talk button before you say a command.

Displaying Traffic Information

Say “Display traffic” to view traffic flow and icons.

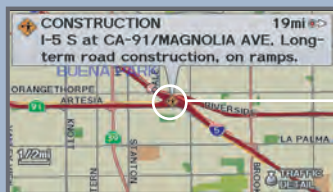

Heavy traffic

Moderate traffic

Occasionally, a green line may appear indicating free-flow traffic.

Note: Traffic flow and incident icons are only displayed on map scales of 5 miles (8 km) or less.

Incident Icons:



Incident



Road closed



Congestion



Weather




Construction

Traffic Rerouting

When a destination is already set, you can create a detour to avoid traffic incidents or congestion.


1. Say “Display traffic incidents” to view a list of incidents on your route.

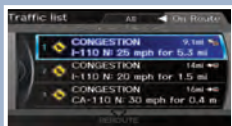


2. Say the number of the incident you want to avoid. When the incident appears, say “Traffic detail.”



3. Say “Avoid” and the incident list returns.

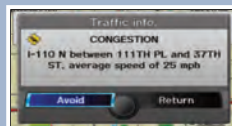

4. Say “Reroute” to set the new route.

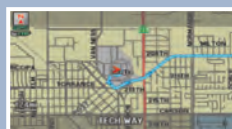

BLUETOOTH® HANDSFREELINK® (HFL)

Place and receive phone calls through your vehicle's audio system. Visit handsfreelink.honda.com to check if your phone is compatible.

How to Use HFL

Pick-Up button: Answer an incoming call, or go directly to the Phone screen.

Talk button: Give HFL commands.

Back button: Cancel a command and return to the previous screen.

Hang-Up button: End a call or decline a call.

 


Pairing Your Phone


Use this pairing method when no phone has ever been paired to the system. You can pair your compatible phone only when the vehicle is stopped.

Press and release the Talk button before you say a command.


1. Press the Pick-Up button to go to the Phone screen. A prompt appears. Say “Yes.”



 2. Make sure your phone is in discovery mode, and say “OK.”



 3. HFL searches for your phone. Say the number next to the phone when it appears on the list.



If your phone does not appear:

Say “Phone Not Found?” and search for a HandsFreeLink device from your phone. Connect to HFL.



4. HFL gives you a four-digit code. Enter it on your phone when prompted. The phone is now paired.

 


Pairing Your Phone (continued)

Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

Press and release the Talk button before you say a command.

1. **Press** the Pick-Up button to go to the Phone screen.
2. Make sure your phone is in discovery mode, and **say** "OK."



If a prompt appears asking to connect to a phone, **say** "No."

2. **Say** "Phone setup."



 
3. **Say** "Connection."




4. **Say** "Add New Phone."




5. **Say** the number of the location (1-6) to add the phone.



 6. Make sure your phone is in discovery mode, and **say** "OK."



 7. HFL searches for your phone. **Say** the number next to the phone when it appears on the list.




If your phone does not appear:

Say "Find Another Phone" and **search** for HandsFreeLink from your phone. **Connect** to HFL.



 8. HFL gives you a four-digit code. **Enter** it on your phone when prompted. The phone is now paired.





Making a Call

Dialing a Number



Press and release the Talk button before you say a command.

1. **Press** the Pick-Up button to go to the Phone screen.
3. **Say** the entire phone number.

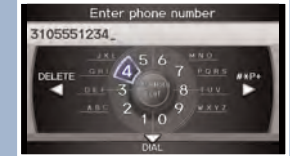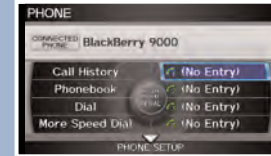

2. **Say** "Dial."



4. **Say** "Dial" to begin the call.

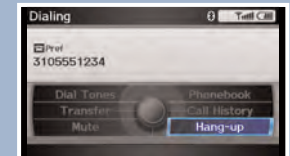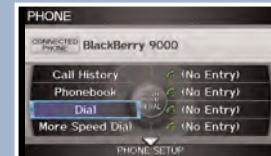

Using the Imported Phonebook*



Press and release the Talk button before you say a command.

1. **Press** the Pick-Up button to go to the Phone screen.
3. **Scroll** the list to find the name you want to call.

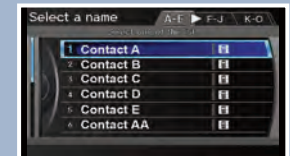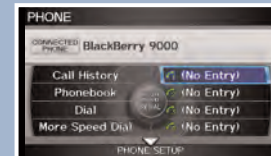

2. **Say** "Phonebook."

4. **Say** the number of the entry to begin the call.

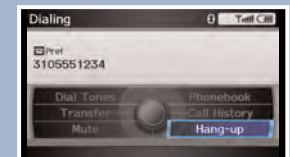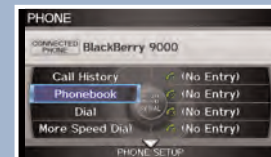

*Visit handsfreelink.honda.com to check if this feature is available on your phone.


Using Speed Dial and Voice Tags

Press and release the Talk button before you say a command.

1. **Press** the Pick-Up button to go to the Phone screen.




If an entry has a stored voice tag, say **“Dial by voice tag,”** followed by the voice tag name and **“Dial”** from any screen.

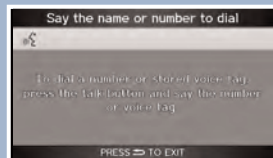

2. **Say** the number next to one of the first four entries. For example, **“One.”** For the complete list of speed dial entries, say **“More speed dial.”**




3. The call is connected and heard through the speakers.

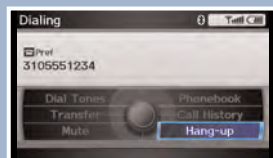

Note: See your Owner's Manual for instructions on storing speed dial entries and voice tags.

Receiving a Call

A notification is heard and the following screen appears:

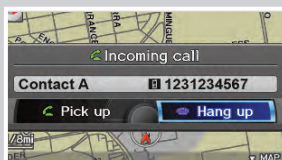

Press the Pick-Up button to accept the call.



Press the Hang-Up button to end or decline the call.



BLUETOOTH® AUDIO

Play audio files from your compatible phone through your vehicle's audio system. Visit handsfreelink.honda.com to check if this feature is available on your phone.


Playing Bluetooth Audio

1. Make sure your phone is on and paired to **Bluetooth® HandsFreeLink®** (see [page 19](#)).

2. **Press** USB/AUX until **“Bluetooth Audio”** appears.



4. **Press** (⏮) (⏭) or (+) (-) to change tracks.

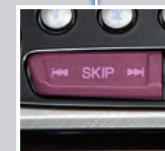

3. From your phone, **open** the desired audio player or app and begin playing. Sound is redirected to the audio system. Make sure the volume on your phone is properly adjusted.



Notes:

- You may need to enable additional Bluetooth settings on your phone for playback.
- The play/pause function and remote audio controls may not be supported on all phones.
- Operate your phone only when your vehicle is stopped.

iPod® OR USB FLASH DRIVE

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system.

Connecting Devices and Playing Audio

1. **Open** the center console, and **pull out** the USB adapter cable.



Connect the USB connector to your iPod dock connector or flash drive.

2. **Press** USB/AUX until iPod or USB appears.



Note: Connect your device only when your vehicle is stopped.

3. **Press** (⏮) (⏭) or (+) (-) to change tracks.



HARD DISC DRIVE (HDD) AUDIO


Record CDs onto your vehicle's hard disc drive. Songs are automatically recorded once a CD is inserted into the disc slot.

Playing HDD Audio

1. **Press** HDD.




2. The first song of the last recorded album plays. **Press** (⏮) (⏭) or (+) (-) to change tracks.

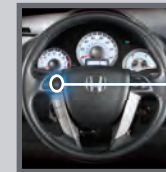

Searching for Music

1. **Press** AUDIO.

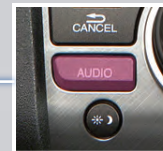

3. **Select** one of the categories.



2. **Push** the interface dial up to select MUSIC SEARCH.



4. **Select** a track and **press** ENTER to begin playing.



SONG BY VOICE™ (SBV)

Play songs from your iPod and HDD from most navigation/audio screens by using simple voice commands.

Playing Audio Files Using Voice Commands


Press and release the Talk button before you say a command.

Using the "Play" Command

Say "iPod search" or "HDD search."




Say "Play" and one of the options on the Search Mode screen. For example, say "Play Artist XYZ."

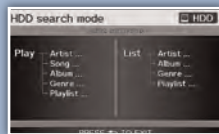


if exact match found

if exact match not found


The system provides voice feedback and lists possible matches.

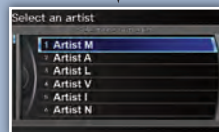

Say the number of the corresponding selection you wish to play. For example, say "Four."

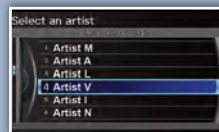

The system plays the selection and returns to the Search Mode screen.

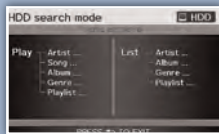

Playing Audio Files Using Voice Commands (continued)

Press and release the Talk button before you say a command.

Using the "List" Command

Say "iPod search" or "HDD search."




Say "List" and one of the options on the Search Mode screen. For example, say "List Artist XYZ."




if exact match found

if exact match not found


A list of tracks from the selected artist displays.

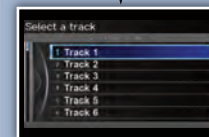

The system provides voice feedback and lists possible matches.

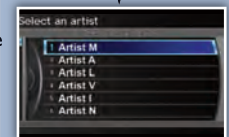


Say the number of the artist. For example, say "Four."

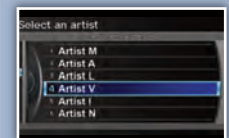

Say the number of your selection. For example, say "One."



The system plays the selection and returns to the Search Mode screen.

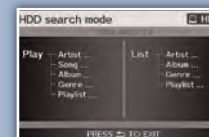


REAR ENTERTAINMENT SYSTEM (RES)

With the rear entertainment system and headphones, rear passengers can enjoy a different entertainment source than the front seat occupants.

RES Front Panel Controls




Rear Entertainment System

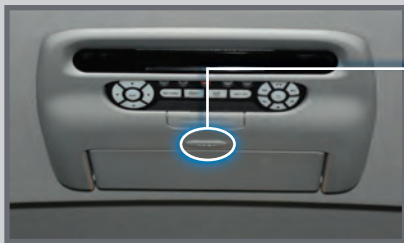

Press OPEN to release the overhead screen.



Pivot the overhead screen to fully open it.

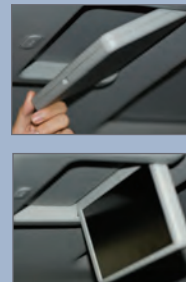

Pivot the earpieces to turn on or off. Wireless headphones only work in the rear seats.



Wired headphones may also be used.

Operating the RES from the Front

1. **Press REAR POWER.** Rear passengers will hear audio through the headphones.
3. **Press REAR SOURCE** again to return to the front audio controls.



2. **Press REAR SOURCE.** Select an entertainment source for the rear passengers.



Operating the RES from the Rear

1. **Press REAR POWER** on the front audio panel. **Open** the overhead screen.
3. **Press** the (▲) (▼) (◀) (▶) buttons to navigate the menu options. **Press ENTER** to select an option.



2. **Press DVD/AUX, CD/CDL, XM, or FM/AM.**




4. The rear control panel can be detached and used as a remote control. **Press RELEASE** to remove it.



HOMELINK®

Program your vehicle to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button

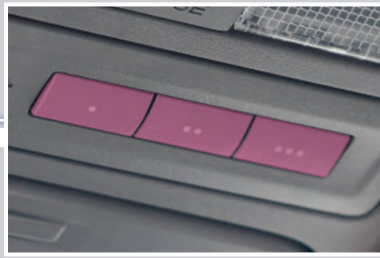

1 Position the remote transmitter you wish to link 1–3 inches from the HomeLink button you want to program.

2 Press and hold the desired HomeLink button and the button on the remote transmitter.
Does the HomeLink indicator (LED) blink at a faster rate after about 10 seconds?

NO YES

a Press and hold the button on the remote and the HomeLink button at the same time. Then, while continuing to hold the HomeLink button, **press and release** the button on the remote every 2 seconds.
Does the LED blink at a faster rate within 20 seconds?

NO YES

3 Press and hold the programmed HomeLink button for about a second.
Does the device (garage door opener) work?

NO YES

4 Press and hold the HomeLink button again.

Training complete

HomeLink indicator flashes for 2 seconds, then remains on. HomeLink LED remains on.

a The remote has a rolling code. Press the “learn” button on the remote-controlled device (e.g., garage door opener).

b Within 30 seconds, **press and hold** the programmed HomeLink button for 2 seconds.

5 Press the programmed HomeLink button again; the remote-controlled device should operate.

If you have any problems programming HomeLink, see the owner’s manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit www.homelink.com.

 
PARKING SENSOR SYSTEM

Warns you of the proximity between your vehicle and nearby surrounding objects when parking or backing up.

How It Works

When the system senses an object, an indicator appears on the MID and center display screen and a beep sounds. As you get closer to the object, the beep rate increases.


Corner sensors



Within about 2 ft.



 Rear center sensors



Within about 3.5 ft.



Turning the System On and Off

Press the parking sensor button. A light appears when the system is on.



OWNER LINK

Owner Link allows you to explore features and technologies specific to your vehicle, obtain and update maintenance and service records, and access other useful information. Register at owners.honda.com to ensure that you continue to enjoy the experience of owning a Honda. For added convenience, Owner Link can also be accessed on a mobile device.



SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL RECOMMENDATION

- Only use unleaded gasoline of 87 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Honda endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit www.toptiergas.com.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit Owner Link at owners.honda.com.