


# Setting the Clock

**DX model**

**CLOCK BUTTON**

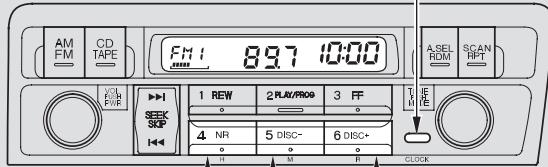


**H BUTTON**

**M BUTTON**

**R BUTTON**

**U.S.: LX, EX, models  
Canada: LX, Si models**

**CLOCK BUTTON**

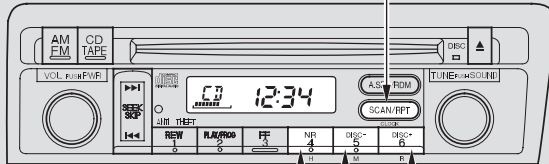


**H BUTTON**

**M BUTTON**

**R BUTTON**

**Special Edition models**

**CLOCK DISPLAY**

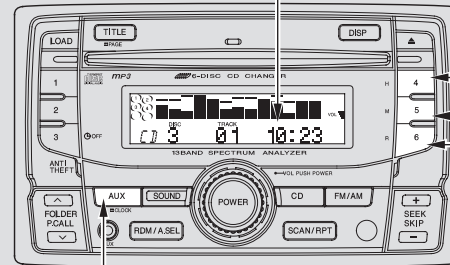

**H BUTTON**

**M BUTTON**

**R BUTTON**

**CLOCK  
BUTTON**

CONTINUED

## Setting the Clock

---

If your vehicle's battery is disconnected or goes dead, you will need to set the clock.

To set the time, press the CLOCK (SCAN/RPT, AUX) button until you hear a beep, then release the button. The displayed time begins to blink.

Change the hours by pressing the H (preset 4) button until the numbers advance to the desired time. Change the minutes by pressing the M (preset 5) button until the numbers advance to the desired time.

Press the CLOCK (SCAN/RPT, AUX) button again to enter the set time. On Special Edition models, press the CLOCK button until you hear a beep.

You can quickly set the time to the nearest hour. If the displayed time is before the half hour, pressing the CLOCK (SCAN/RPT, AUX) button until you hear a beep, then pressing the R (preset 6) button sets the clock back to the previous hour. If the displayed time is after the half hour, the clock sets forward to the beginning of the next hour.

### *On Special Edition models* **Canceling Clock Display**

To turn off the clock display, press the CLOCK (AUX) button until you hear a beep, then press the Preset 3 (Clock Off) button. The displayed time will be turned off.

To show the time again, press the CLOCK (AUX) button again until you hear a beep.