 


Warning and Indicator Lights (cont'd)

CIVIC WAGON

4WD

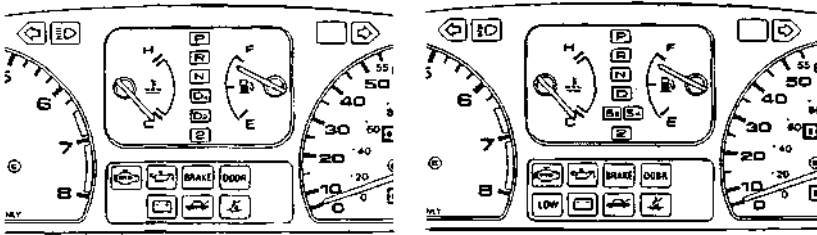

Brake Parking Brake/Brake Failure Warning Light

Check the brake warning light every time you start the car. With the parking brake set, the warning light should go on when the ignition switch is turned to II or III. With the parking brake released, the light should go on when the ignition switch is turned to III. If the light goes on at any other time, it means the brake fluid level in the master cylinder reservoir is too low; add fluid and have your dealer check for leaks and brake pad wear immediately. (See page 76)



Tailgate-open Indicator Light

This light will go on when you turn on the ignition switch if the tailgate is not fully closed.



Seat Belt Warning Light

The seat belt warning light comes on when the ignition switch is turned on. If the front seat belts are fastened, it goes off in about six seconds. Otherwise, it stays on. (See page 11)

LOW LOW Indicator Light(4WD Automatic only)

This indicator light is on while you are driving in the LOW mode (see page 55).

When the ignition switch is turned to the "II", this indicator light comes on for a couple of seconds; this is normal.

DOOR Door Warning Light

 
If a door is open when the ignition is switched on, this light will go on and stay on until the door is closed.

Tilt Steering

Tilt Steering


The steering wheel position can be adjusted to suit the driver preference.

1. Push the lever located on the left side of the steering column all the way down and hold it while adjusting the steering wheel to the desired position.

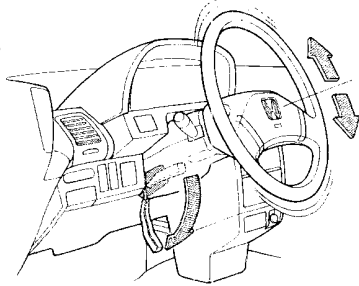

Push down

 2. Hold the steering wheel in the desired position and pull the lever all the way up to lock it in place.

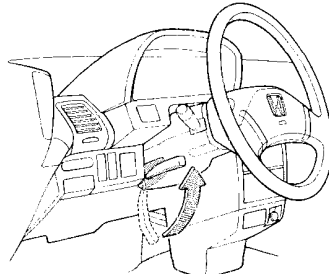

Pull up

▲WARNING

 
 
- Do not adjust the steering wheel position while driving.
- After adjusting the steering wheel position, make sure it is securely locked in place by "rocking" it up and down slightly.

Windshield Wipers/Washer/Defogger

Windshield Wipers



Switch the wipers to INT for intermittent operation; LO for low speed operation; and HI for high speed operation.

In fog or very light rain, push the lever down to the MIST position for temporary high speed operation of the wipers. The wipers will return to the rest position and the motor will shut off as soon as you release the lever.

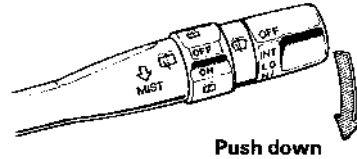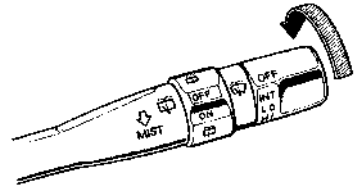

Windshield Washer

  Pull the wiper switch lever toward you to turn on the washer. Check the washer fluid regularly, especially during bad weather or whenever the washer has been in frequent use.

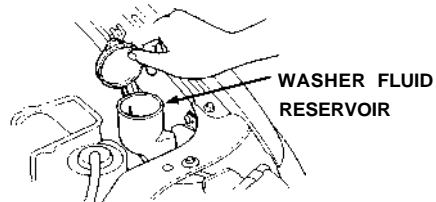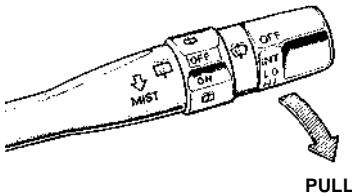

Use a good quality commercial washer fluid for all-weather cleaning.

CAUTION:


- Do not use radiator antifreeze in the windshield washer; it will damage the paint.
- Do not use a vinegar/water combination in the windshield washer; it will damage the pump.
- Prolonged operation of the washer without fluid may damage the pump.

 
In freezing weather, warm the windshield with the defrosters before using the washer. This will help prevent icing which could seriously impair visibility.

WINDSHIELD WASHER

RESERVOIR CAPACITY: 2.5 ℓ (2.6 US qt , 2.2 Imp qt)


Rear Window Wiper/Washer

Switch to "ON" to activate the rear wiper. Turn and hold the switch one more step clockwise to "  " to activate the washer and wiper; or turn and hold the switch one step counterclockwise from "OFF" to activate the washer only. The rear washer uses the same fluid reservoir as the front washer.

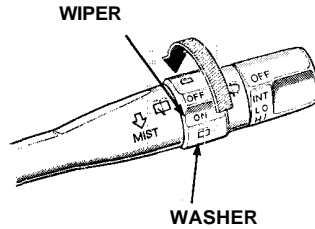

Rear Window Defogger

 Push the switch to turn the defogger on or off. The indicator will light when the defogger is on. The switch will turn off automatically 25 minutes after it is turned on.

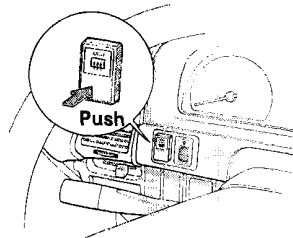


CAUTION:

When cleaning the inside of the rear window, be careful not to damage the printed heater wires on the rear window. Wipe the window horizontally along the wires, not up and down.

Parking Brake and Mirrors


Parking Brake

 To apply the parking brake, pull up on the lever. To release it, pull up slightly, push the button, and lower the lever; when fully released, the BRAKE warning light will go out.

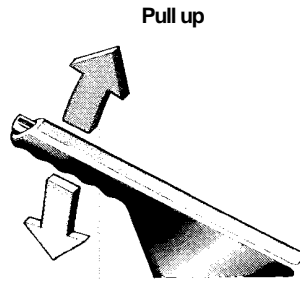

Rearview Mirrors

 Keep the inside and outside mirrors clean and adjusted for best visibility. Be sure to adjust mirror angles before you start driving. The outside mirror can be adjusted by moving the knob on the inside of the driver's door.

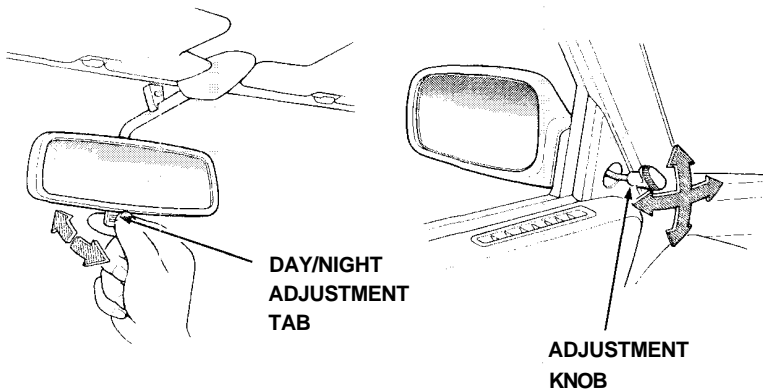

The inside mirror has day and night positions. The night position reduces glare from the headlights of vehicles behind you. Flip the small tab on the bottom of the mirror forward or backward to select day or night position.