



# Information for First & Second Responders Emergency Response Guide For Vehicle:

Li-ion

**2025–26 Civic Hybrid**  
Hybrid Vehicle

# *CIVIC*



Version 2

This guide has been prepared to assist emergency response professionals in identifying a 2025–26 Honda Civic Hybrid vehicle and safely respond to incidents involving this vehicle.

Copies of this guide and other emergency response guides are available for reference or downloading at <https://techinfo.honda.com>.

For questions, please contact your local Honda dealer or Honda Automobile Customer Service at **(800) 999-1009**.

Honda wishes to thank emergency response professionals for their concern and efforts in protecting Honda customers and the general public.



## Contents

<b>1. Identification / Recognition</b>	<b>Page 04</b>
--	----------------

<b>2. Immobilization / Stabilization / Lifting</b>	<b>Page 10</b>
--	----------------

<b>3. Disable Direct Hazards / Safety Regulations</b>	<b>Page 14</b>
---	----------------

<b>4. Access to the Occupants</b>	<b>Page 17</b>
-----------------------------------	----------------

<b>5. Stored Energy / Liquids / Gases / Solids</b>	<b>Page 21</b>
--	----------------

<b>6. In Case of Fire</b>	<b>Page 23</b>
---------------------------	----------------

<b>7. In Case of Submersion</b>	<b>Page 24</b>
---------------------------------	----------------

<b>8. Towing / Transportation / Storage</b>	<b>Page 25</b>
---	----------------

<b>9. Important Additional Information</b>	<b>Page 36</b>
--	----------------

<b>10. Explanation of Pictograms Used</b>	<b>Page 41</b>
---	----------------

### Body Type

The Civic Hybrid comes in two variations, a 4-door or 5-door model.

4-Door Model



5-Door Model




## By Emblem

The Civic Hybrid can be identified by the **Hybrid** emblem mounted on the trunk (4-door models) or the tailgate (5-door models).





## By Emblem

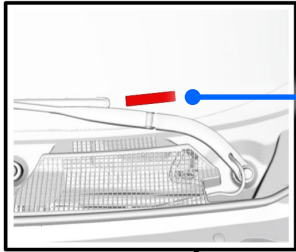


The Civic Hybrid can also be identified by inspecting the VIN at the three locations shown below.

VIN plate located on the lower-right corner of the front windshield



Characters 4 thru 5 of the VIN will show either:

**FE4** (4-Door) or a **FL4** (5-Door)

\*\*\***FE4**\*\*\*\*\*000001

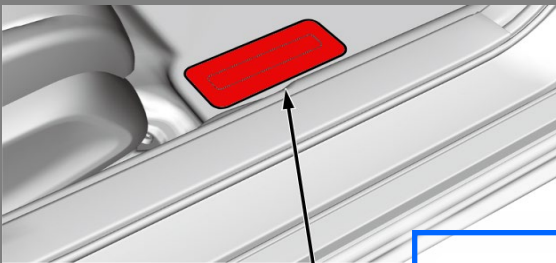

Stamped onto the floor panel in front of the passenger's side seat under a plastic panel

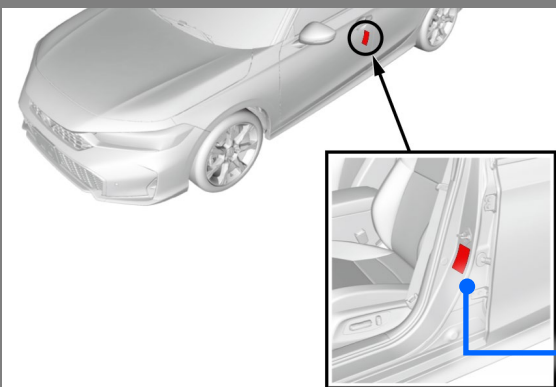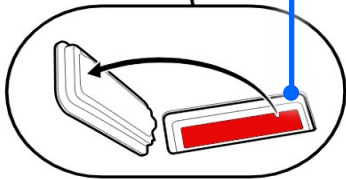

Printed on the VIN label on the driver's side doorjamb

## Warning Labels


Air Conditioning Information

Emission Control Information &  
Engine Coolant Information


Support Rod Warning

12-Volt Battery Caution

Radiator Cap Danger

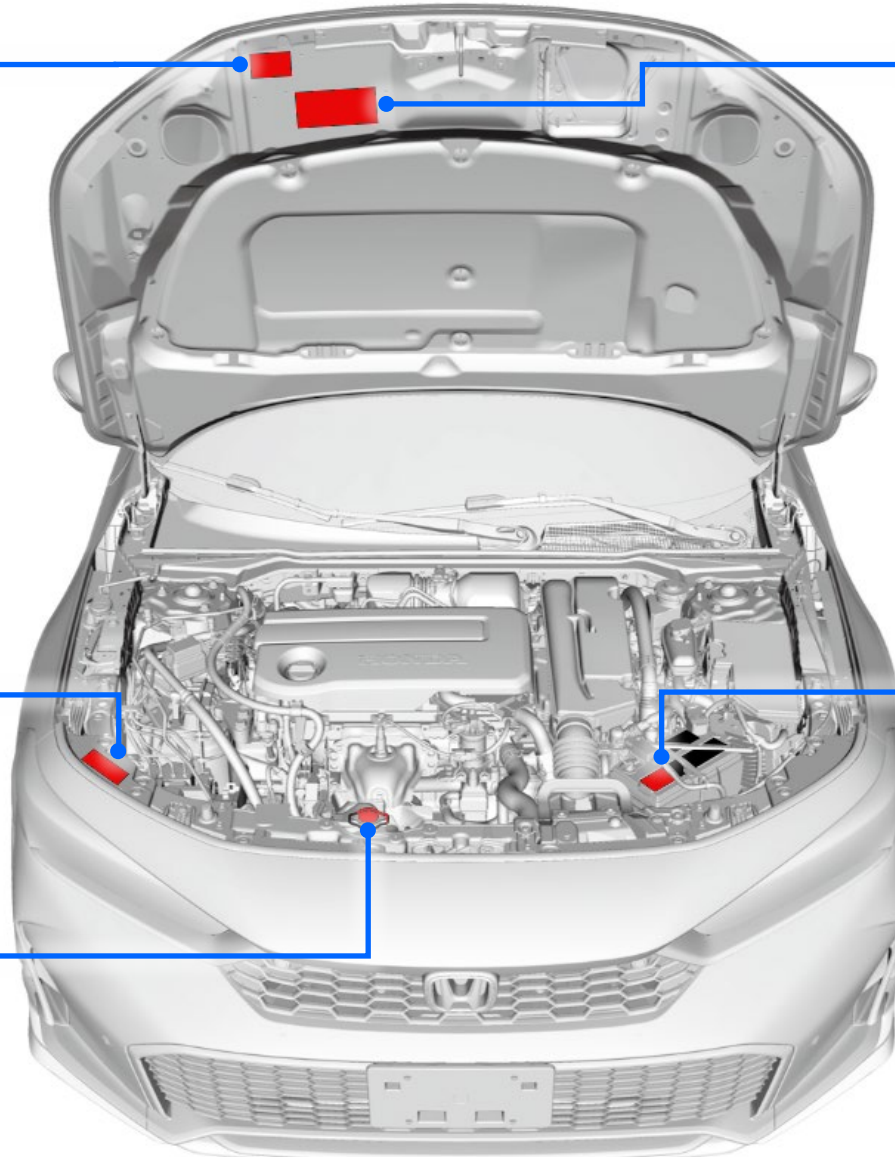


## Warning Labels (continued)

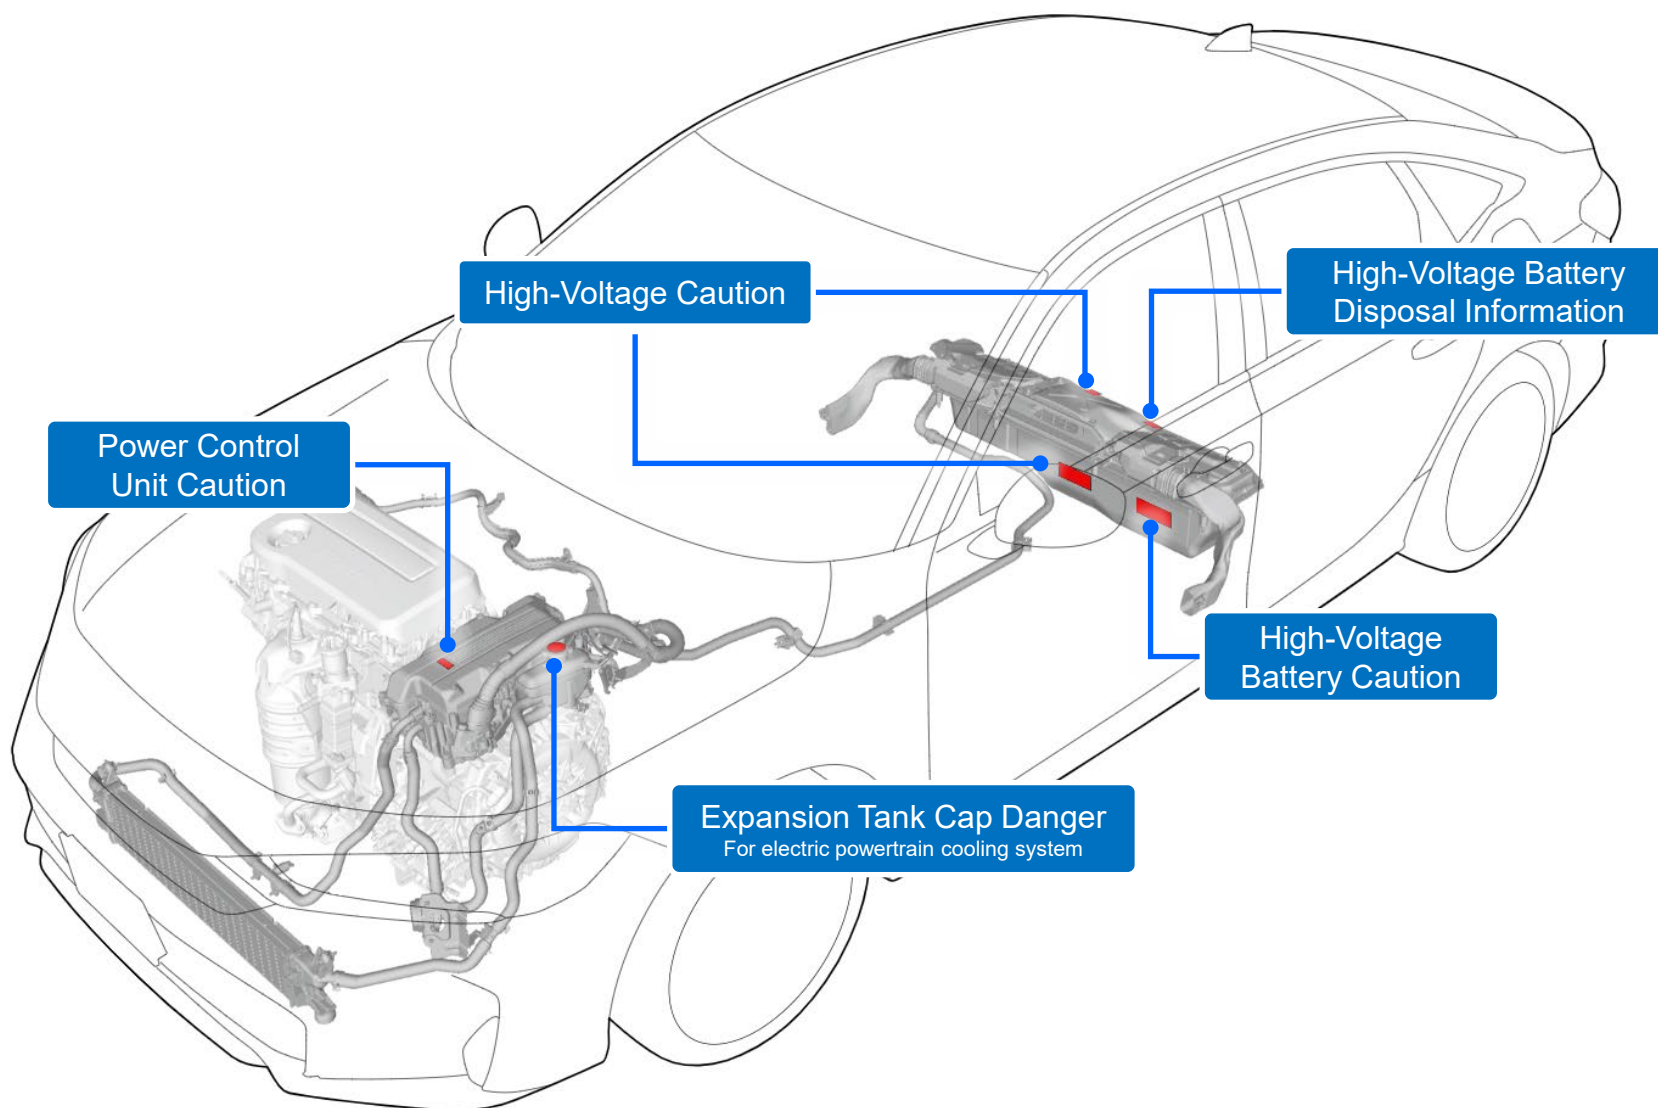



## High-Voltage Battery Location

The high-voltage battery is a 72 cell (2 modules), Li-ion battery that is mounted under the rear seats with an output of 262-volts.

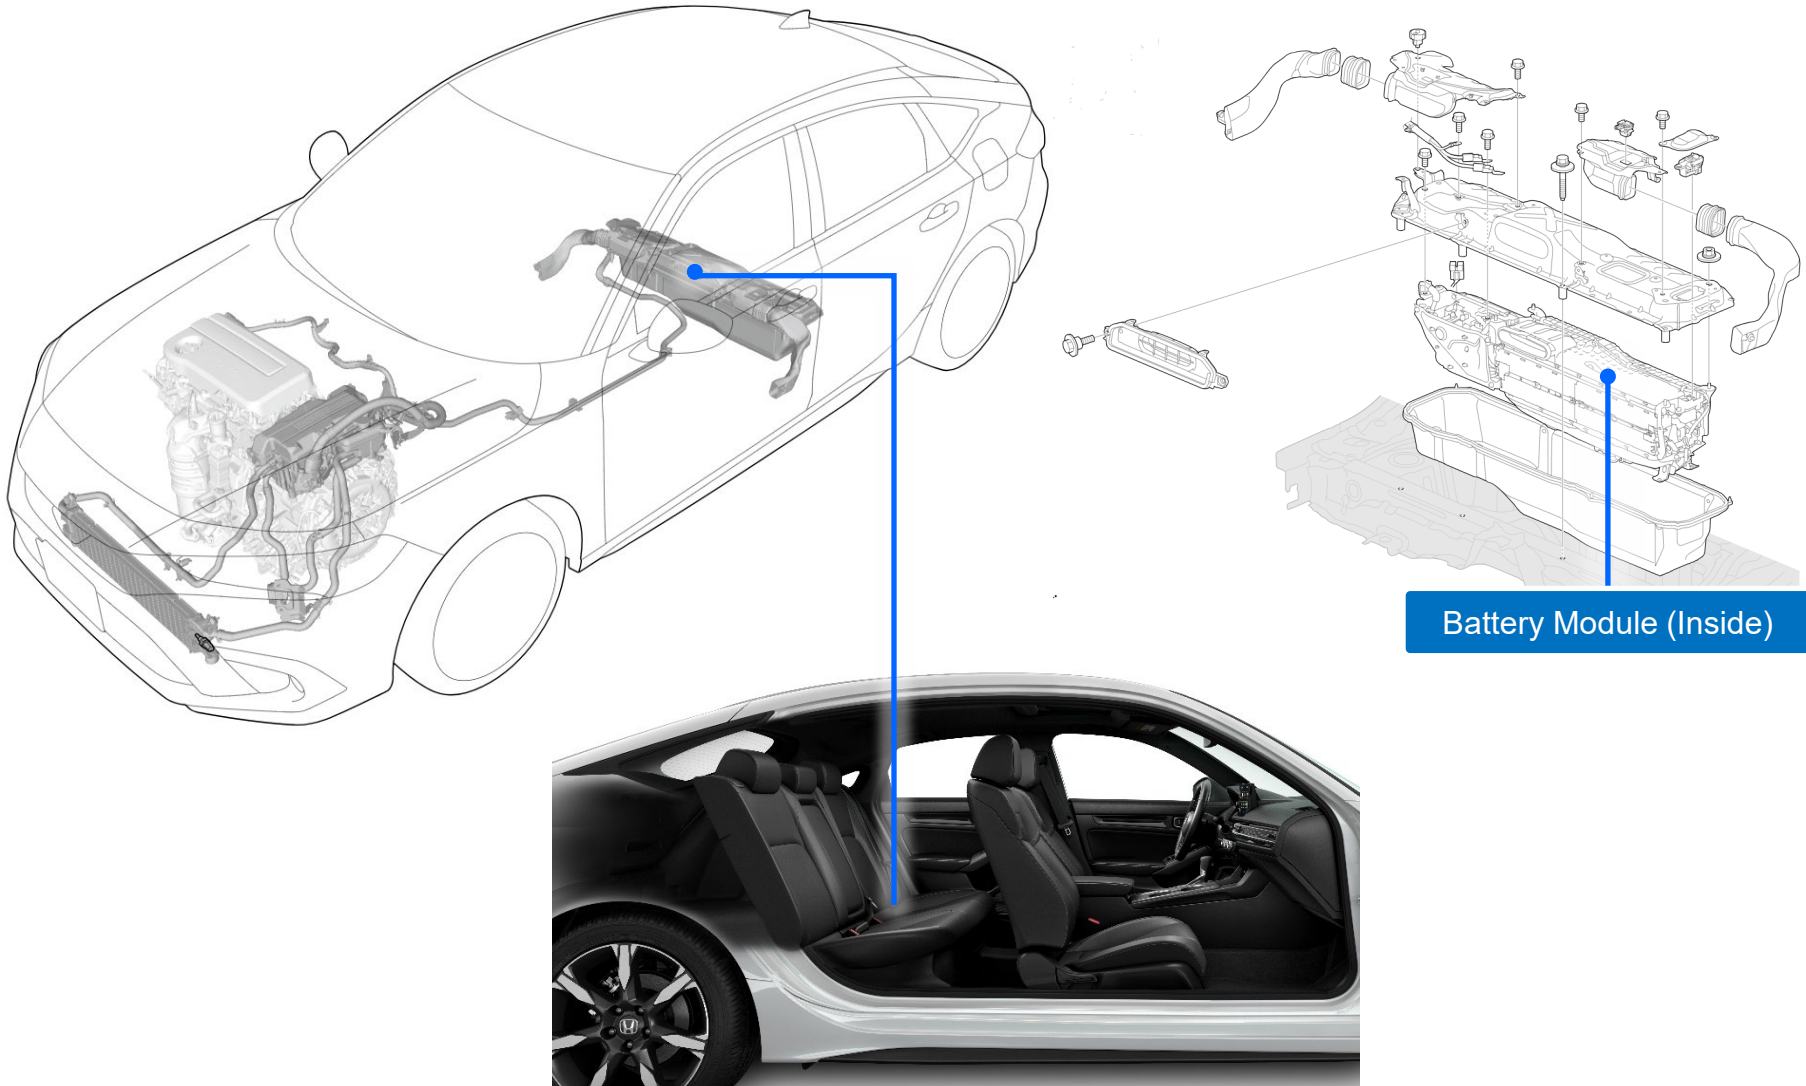

## How to Determine if Vehicle is in ON / OFF Mode

Check the **POWER** button and the gauges for the vehicle status.

### Vehicle is OFF

The power to all electrical components is turned off.

- The **POWER** button is **OFF**.
- Pressing the **POWER** button once will change to the Accessory mode.



### Vehicle is in Accessory

You can operate the audio system and other accessories in this position.

- The **POWER** button is blinking.
- Press the **POWER** button twice to turn off the vehicle.
- While in accessory mode, pressing the **POWER** button once will change to the ON mode.



### Vehicle is ON

The engine/hybrid system is **OFF** but all electrical components can be used.


- The **POWER** button is blinking.
- Press the **POWER** button once to turn the vehicle OFF.
- While pressing the brake pedal, pressing the **POWER** button once will turn on the **READY** indicator on the gauge.



### Vehicle is Ready to Drive

The **READY** indicator is shown on the gauge.

- The **POWER** button is **ON**.
- Depending on the high-voltage battery state of charge, the **EV** indicator may be **ON** or the Engine may be **ON**.
- Press the **POWER** button once to turn the vehicle **OFF**.

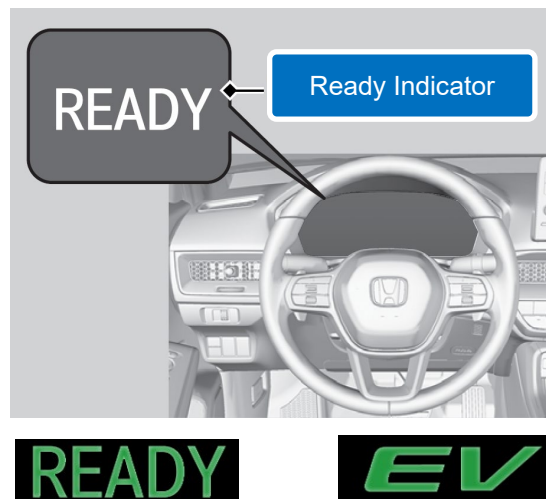

## Parking the Vehicle

### Applying the Parking Brake

- Block the wheels if the 12-volt battery power is **NOT** available.
- The parking brake cannot be applied or released if the 12-volt battery is not available.



#### To Apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the power mode is in.

1. Pull the electric parking brake switch up gently and securely.
  - ▶ The indicator in the switch comes on.
  - ▶ The parking brake and brake system indicator (red) comes on.



#### To Release

The power mode must be in ON in order to release the electric parking brake.

1. Depress the brake pedal.
2. Press the electric parking brake switch.
  - ▶ The indicator in the switch goes off.
  - ▶ The parking brake and brake system indicator (red) goes off.



## Parking the Vehicle



### Shifting the Vehicle into Park or Neutral

1. Press the **POWER** button twice to turn the vehicle **ON**. **NOTE:** This action will not turn the engine/hybrid system on.



2. Press and hold the brake pedal, press the release button, then shift to the **P** position on the Gear Selector to shift the transmission to Park, or **N** to shift the transmission to Neutral.


**NOTE:** The gear selector can be shifted into the **P** or **N** position without the **POWER** on or pressing the brake pedal if the 12-volt system is not available.

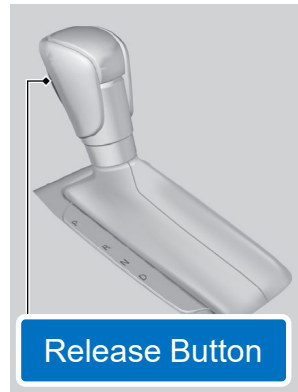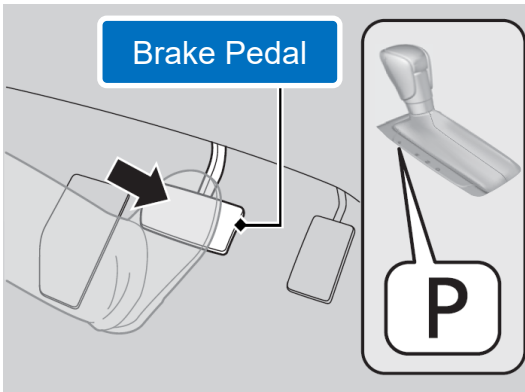


## Lifting the Vehicle

Use the indicated lifting points to raise the vehicle.



### Front Lifting Point (If Necessary)

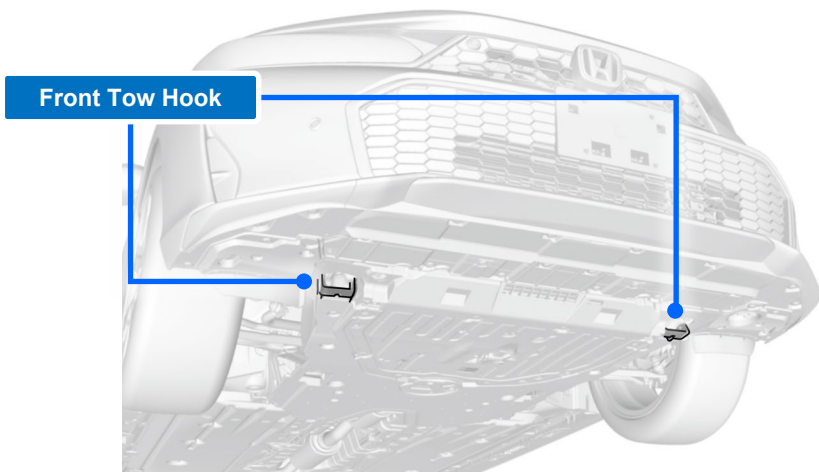

### Recommended Lifting Points

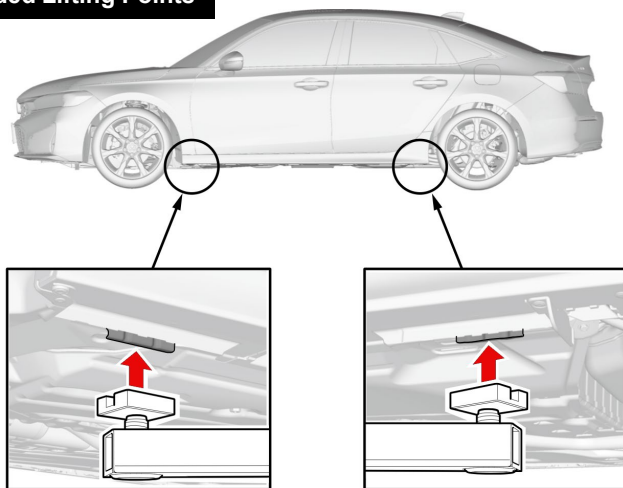

### Floor Jack Lifting Points

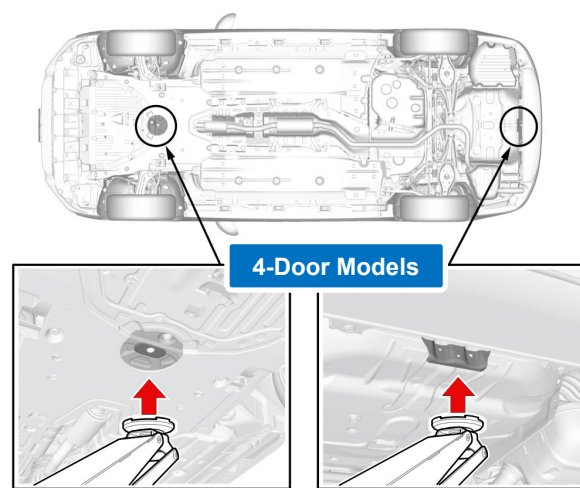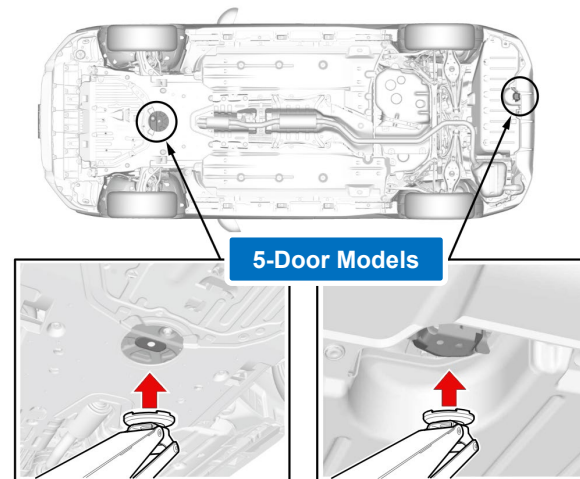



## Preventing Current Flow Through the High-Voltage Cables

Before attempting to rescue occupants or move a damaged Civic Hybrid, you should reduce the potential of current flowing from the electric motor or the high-voltage battery through the high-voltage cables.

There are **two recommended methods** for preventing current flow. These are discussed in the following pages:

### **PREFERRED METHOD for High-Voltage Shutdown**

**Push and hold the POWER button for 3 seconds.**

This simple action turns the vehicle **OFF** and immediately shuts down the high-voltage system controllers, preventing current flow into the cables. It also cuts power to the airbags and front seat belt tensioners, though these pyrotechnic devices have up to a **3-minute** deactivation time.

To prevent accidental restarting, you must remove the keyless remote from the vehicle and move it at least **20 feet** away.

If you cannot locate the keyless remote, disconnect the negative terminal from the 12-volt battery to prevent electrical fires and accidental restarting of the vehicle.



**Push and Hold = 3 Sec.**



**20 FEET**



## **HIGH-VOLTAGE SHUTDOWN PROCEDURE (PREFERRED)**





**ALTERNATIVE BEST METHOD** for High-Voltage Shutdown

Locate and cut the negative 12-volt battery cable and the Power Control Unit (PCU) cable in the engine compartment.


Cutting both the negative 12-volt battery cable and PCU cable immediately turns off and shuts down the high-voltage system controllers and engine, preventing current flow into the high-voltage cables.

1. Pull the hood release handle under the driver's side lower corner of the dashboard. The hood will open slightly.
3. Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

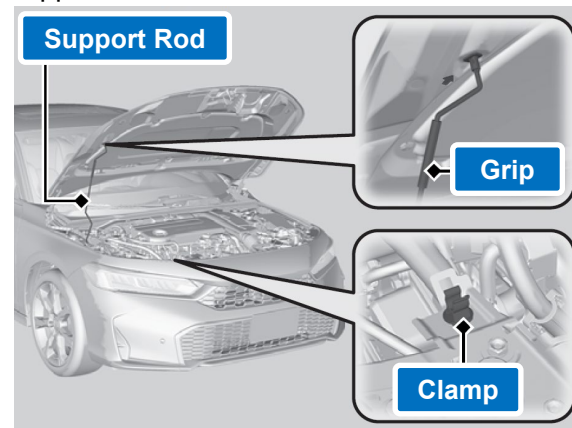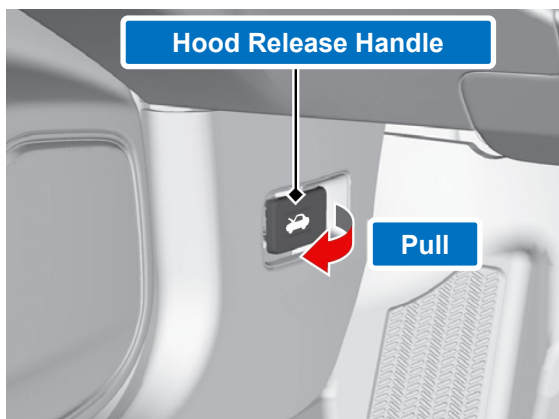

*Continued on the next page.*

2. Push the hood latch lever (located under the front edge of the hood to the center) to the side and raise the hood. Once you have raised the hood slightly, you can release the lever.

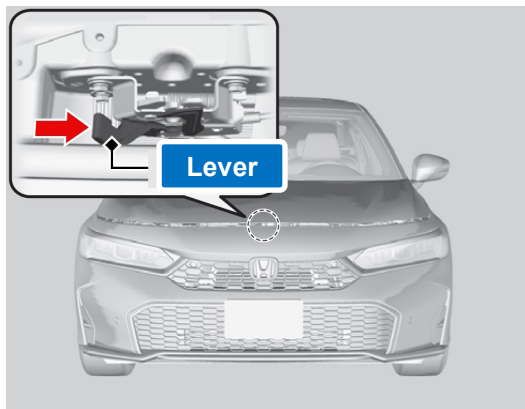

If you need to cut the hood to open it, be sure to stay within the cut zone as shown



**ALTERNATIVE BEST METHOD** for High-Voltage Shutdown (continued)

4. Locate the two cut point labels as shown, and cut them.


*If touching high-voltage cables and/or other high-voltage components is unavoidable, personal protective equipment (insulating gloves, goggles, and boots) should always be worn.*

This also cuts power to the airbags and the front seat belt tensioners, but remember these pyrotechnic devices have up to a **3-minute** deactivation time.

NOTE: When cutting the cables, do not allow the cutting tool to contact any surrounding metal parts; electrical arcing could occur, igniting any flammable vapors.

If you cannot do either method to stop the engine and prevent current flow into the high-voltage cables, use extreme care and do not touch damaged cables as they may be electrically charged.

High-Voltage Cables

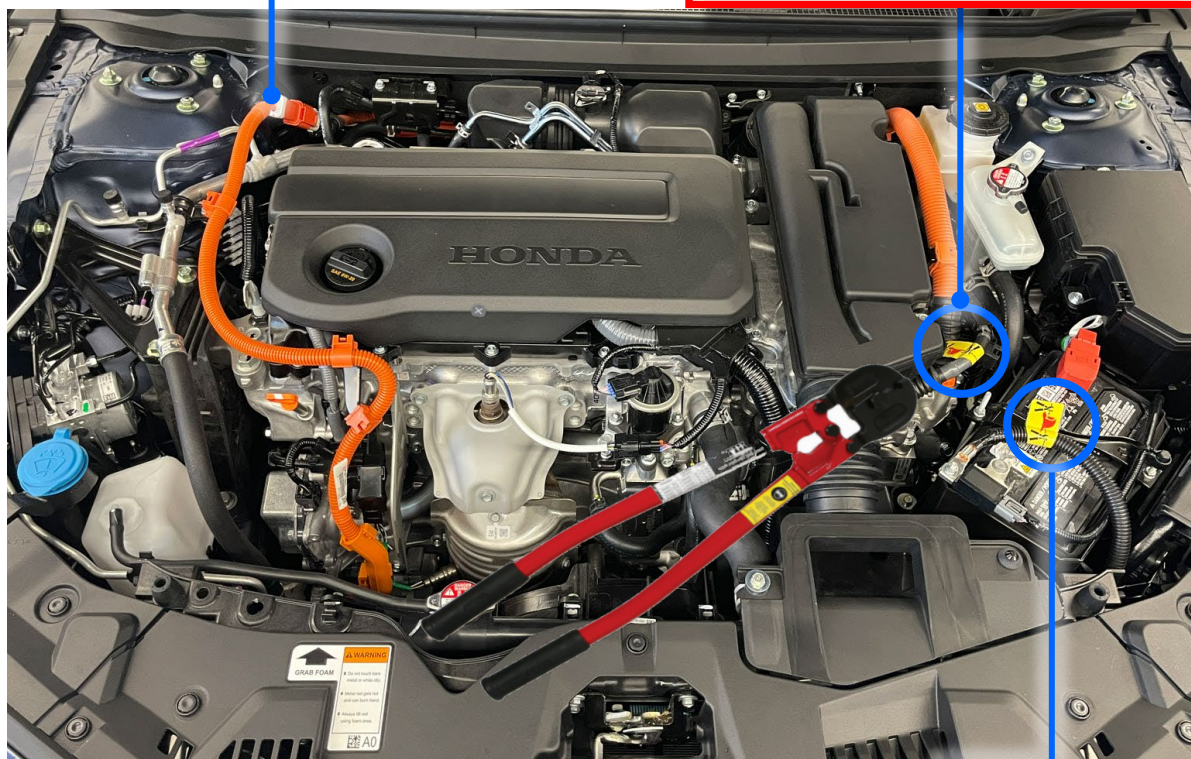


NOTE: Accord Hybrid model shown. Civic Hybrid similar

**HIGH-VOLTAGE SHUTDOWN PROCEDURE (ALTERNATIVE)**



## High-Strength and Ultra-High-Strength Steel

The body of the Civic Hybrid is made of high-strength steel and ultra-high-strength steel indicated in the colored areas.

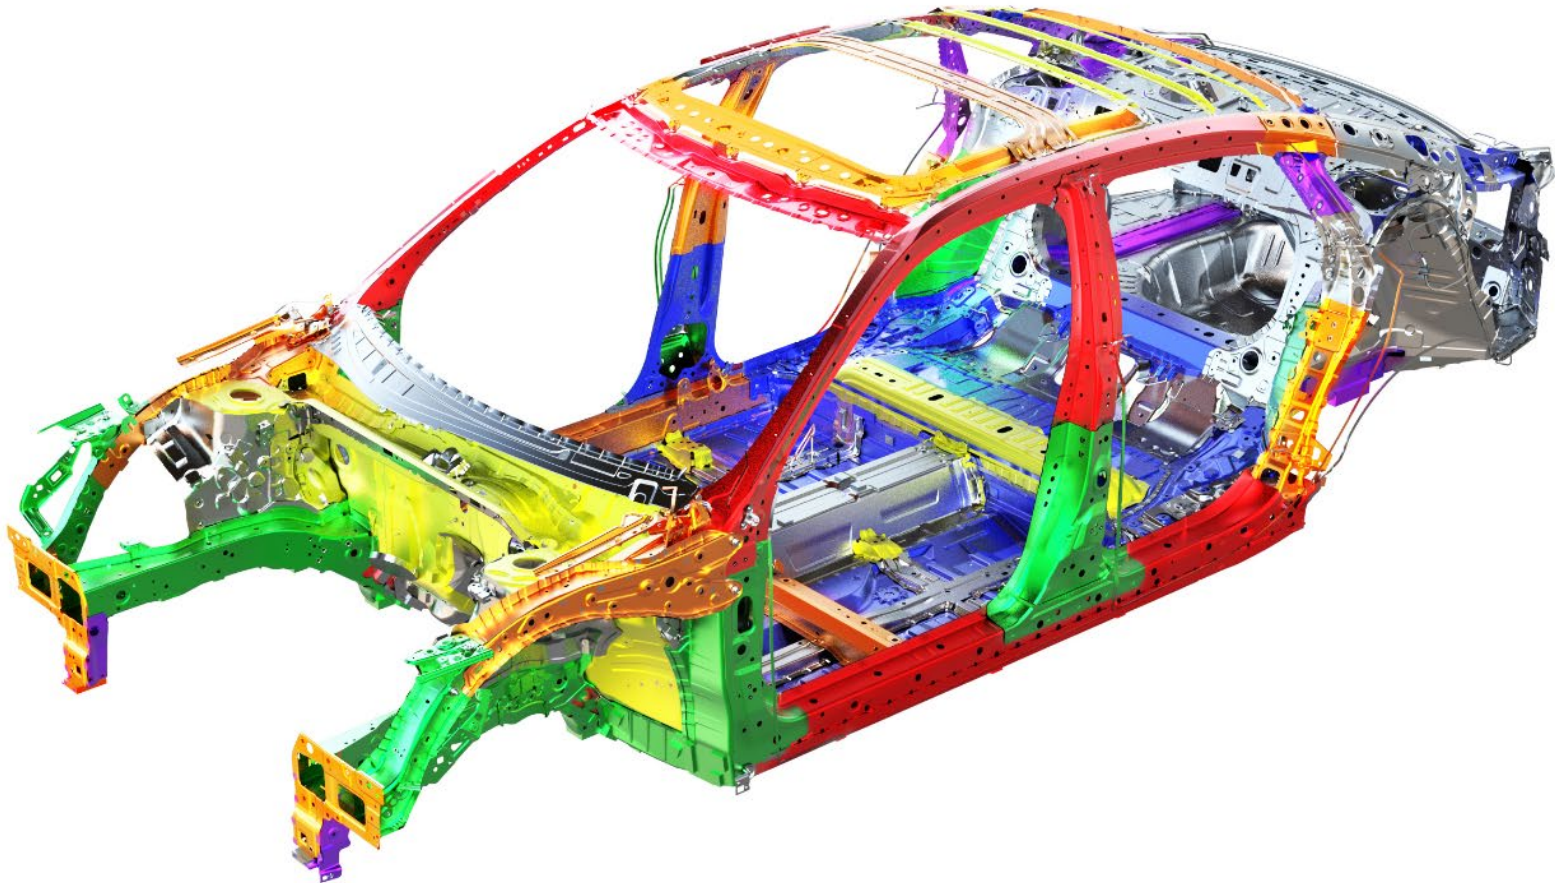

NOTE: Non-hybrid model shown. Hybrid model similar

## High-Strength and Ultra-High-Strength Steel

The body of the Civic Hybrid is made of high-strength steel and ultra-high-strength steel indicated in the colored areas.



NOTE: Non-hybrid model shown. Hybrid model similar




## Extricating Occupants

If you need to cut the hood to open it, be sure to stay within the cut zone as shown.

***When cutting the vehicle body, personal protective equipment (insulating gloves, goggles, and boots) should always be worn.***



If you need to cut the vehicle body or use Jaws-of-Life equipment to remove occupants, be sure to stay within the cut zone as shown.

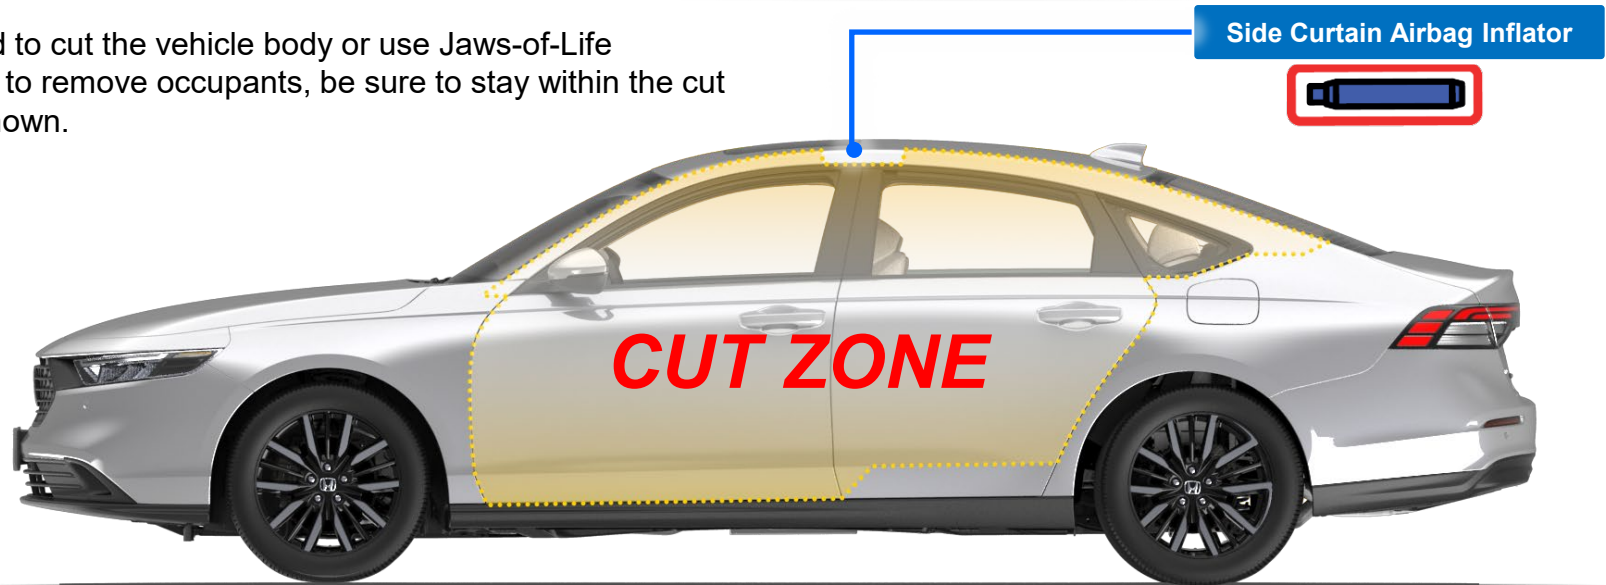


NOTE: Accord Hybrid model shown. Civic Hybrid similar

### Moving the Seats, Head Restraints & Steering Wheel

#### Power Seats Adjustment




#### Head Rest Adjustment

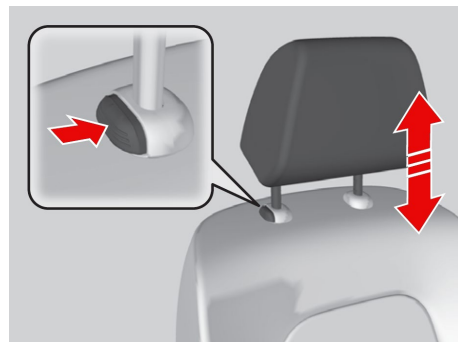


**To raise the head restraint:** Pull it upward.

**To lower the head restraint:** Push down while pressing the release button.

#### Manual Seats Adjustment

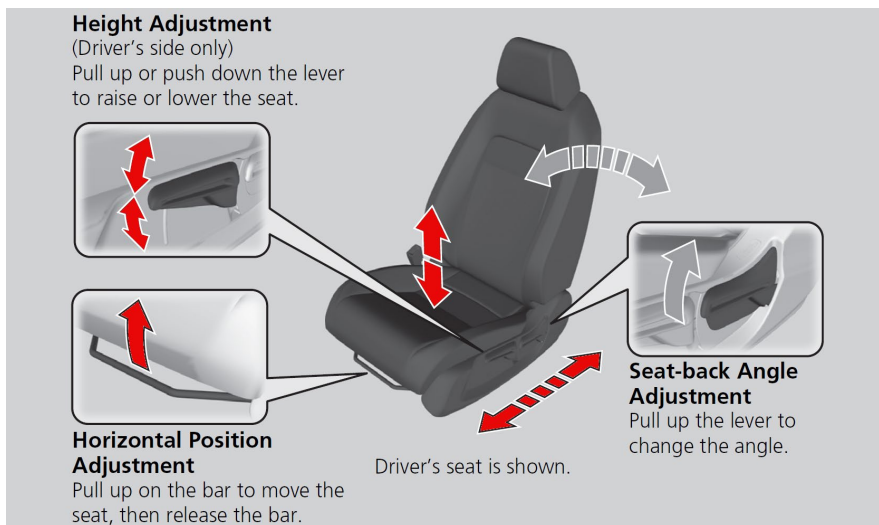




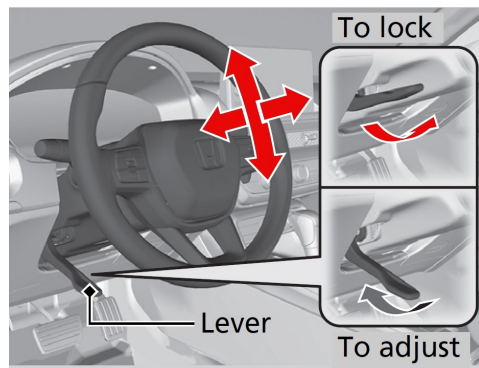 











#### Steering Column Adjustment



1. Pull the steering wheel adjustment lever down. The steering wheel adjustment lever is under the steering column.
2. Move the steering wheel up or down, and in or out.
3. Push the steering wheel adjustment lever up to lock the steering wheel in position.



Type	Capacity	Content	Dangers
<b>12-Volt Battery</b> 	12 V—45 Ah/20 HR (12 V—36 Ah/5 HR)	<ul style="list-style-type: none"> <li>▪ <b>Lead</b> 34%</li> <li>▪ <b>Lead Peroxide</b> 31%</li> <li>▪ <b>Lead Sulfate</b> 1%</li> <li>▪ <b>Sulfuric Acid</b> (35%) 34%</li> </ul>	 
<b>Lithium-Ion, High-Voltage Battery</b> 	262 V 72 cells (36 cells × 2 modules)	<ul style="list-style-type: none"> <li>• <b>Lithium Metal Oxide</b> 15-25%</li> <li>• <b>Aluminum</b> 20-30%</li> <li>• <b>Graphite</b> 5-15%</li> <li>• <b>Copper</b> 15-25%</li> <li>• <b>Organic electrolyte</b> 15-25% (Maximum volume: 50cc)</li> </ul>	 
<b>Engine Oil</b>	5.4 US qt (5.1 L)	Distillates, petroleum, hydrotreated heavy paraffinic.	 
<b>Gasoline Tank</b> 	10.6 US gal (40.36 L)	<ul style="list-style-type: none"> <li>• <b>Gasoline</b> 88-100%</li> <li>• <b>Ethanol</b> Less than 10%</li> <li>• <b>Toluene</b> Less than 10%</li> <li>• <b>1,2,4-Trimethylbenzene</b> Less than 5%</li> <li>• <b>Benzene</b> Less than 5%</li> <li>• <b>N-Hexane</b> Less than 3%</li> </ul>	 
<b>Engine Coolant</b>	1.95 US gal (7.4 L)	<ul style="list-style-type: none"> <li>• <b>Ethylene Glycol</b> 43 - 49 %</li> <li>• <b>Diethylene Glycol</b> Less than 3%</li> <li>• <b>Hydrated inorganic acid, organic acid salts</b> Less than 5%</li> <li>• <b>Water</b> 45 - 55 %</li> </ul>	
<b>High-Voltage Battery Coolant</b>	About 0.29 US gal (1.1 L)		

Type	Capacity	Content	Dangers
Transmission Fluid	2.3 US qt (2.2 L)	<ul style="list-style-type: none"> <li>• <b>Lubricating base stocks</b> 80-90%</li> <li>• <b>2,6 Di-tert-butyl-p-cresol</b> &lt;0.1 to 1.0%</li> </ul>	Not provided on SDS
Brake Fluid	N/A	<ul style="list-style-type: none"> <li>• <b>Diethylene Glycol</b> Less than 10%</li> <li>• <b>Mixture of glycol ether, glycol derivative, glycol ether borate ester (except diethylene glycol)</b> 89 - 99 % None</li> </ul>	Not provided on SDS
Air Conditioning Refrigerant 	HFO-1234yf 15.34 – 17.11 oz (435 – 485 g)	<ul style="list-style-type: none"> <li>• <b>Tetrafluoroprop-1-ene</b> 100%</li> </ul>	
Windshield Washer Fluid	1.6 US qt (1.5 L)	<b>Concentrate</b> <ul style="list-style-type: none"> <li>• <b>Methyl Alcohol (methanol)</b> more than 99%</li> </ul> <b>Tablet</b> <ul style="list-style-type: none"> <li>• <b>Sodium carbonate</b> (2:1) 40 to 55%</li> <li>• <b>Citric acid</b> 20 to 40%</li> <li>• <b>Ethoxylated fatty alcohols</b> 0.1 to 3%</li> <li>• <b>Alkoxylated alcohols</b> 0.1 to 2%</li> </ul>	

## Fire Extinguishing Methods

In case of a vehicle high-voltage battery fire, the fire should be extinguished using the following procedure if possible.

***If touching high-voltage cables and/or other high-voltage components is unavoidable, personal protective equipment (insulating gloves, goggles, and boots) should always be worn.***

1. Extinguish the fire using a large volume of water such as from a fire hydrant, well water, or pond water. If water is not available, an ABC powder fire extinguisher may be used as an alternative.
2. If it is safe to do so, open the passenger's side rear door and direct water from the right side into the high-voltage battery vent under the rear seat cushion.
3. Continue extinguishing until a complete suppression of fire and smoke is observed from the battery area.
4. Once signs of active fire have completely subsided (e.g. no visible smoking), a thermal camera should be used to evaluate and monitor the temperature of the battery unit.

NOTE: The battery temperature should continue to be monitored. If the battery temperature begins to increase, a possibility for reignition exists, and additional water or a fire extinguisher should be used to mitigate reignition.

NOTE: Accord Hybrid model shown. Civic Hybrid similar



### **WARNING:**

- Do NOT attempt to open the battery cover at this time.
- Never use seawater or any water containing salt.
- Always assume the high voltage battery contains stranded energy and a possibility for reignition exists.

See Section 8 (Towing/Transportation/Storage) for additional procedures including discharging the high voltage battery.






## Submerged Vehicle

If a Civic Hybrid is submerged or partly submerged in water, first pull the vehicle out of the water, then shut down the high-voltage system. **See Section 3 (Disable Direct Hazards / Safety Regulations for the high-voltage shutdown procedures).**

***If touching high-voltage cables and/or other high-voltage components is unavoidable, personal protective equipment (insulating gloves, goggles, and boots) should always be worn.***

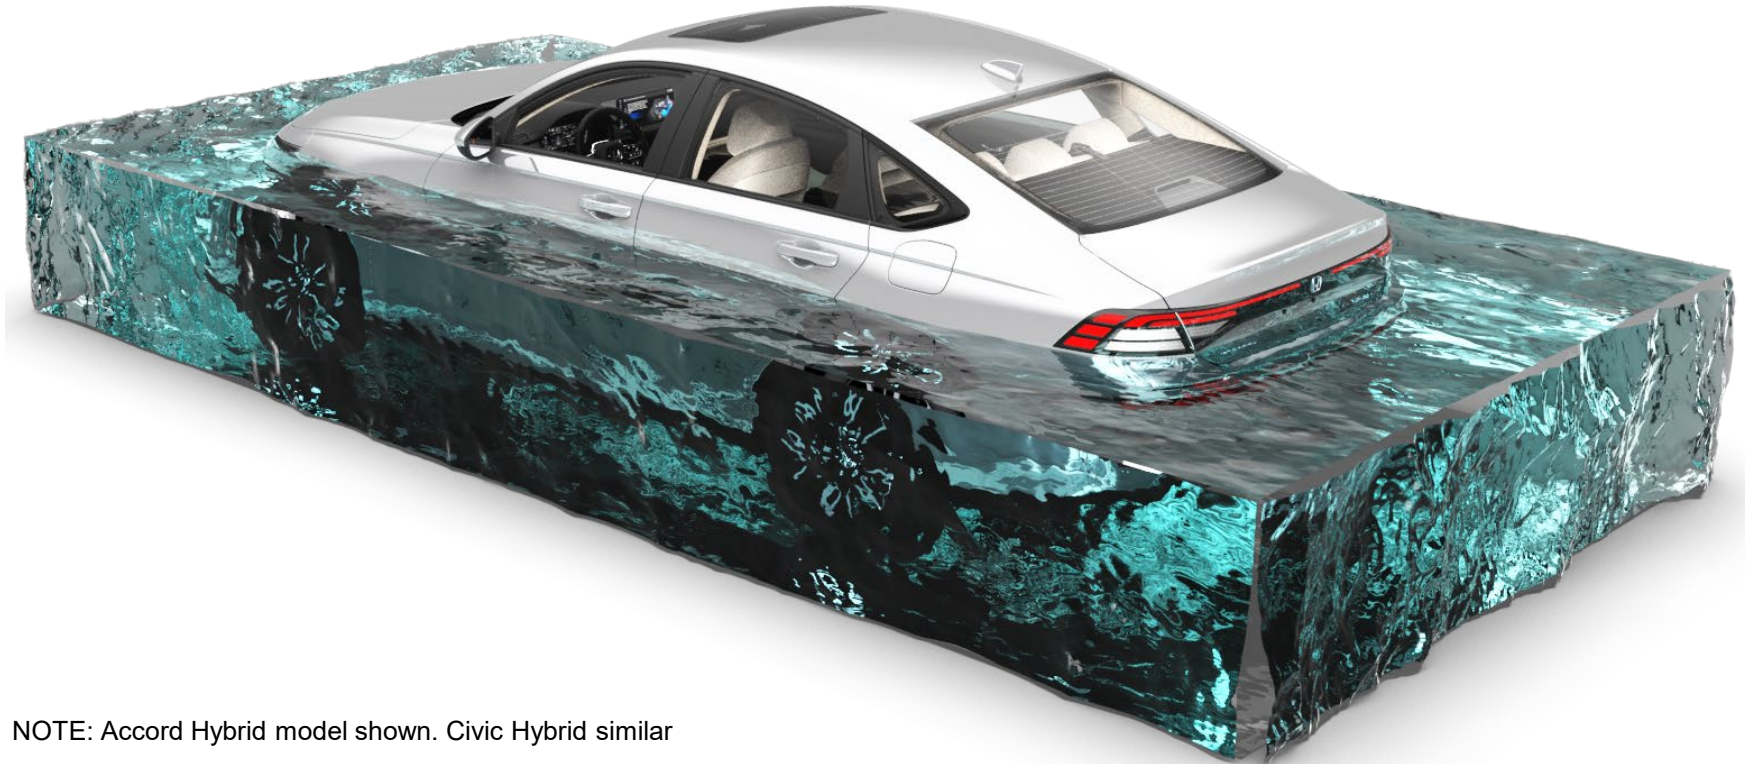

NOTE: Accord Hybrid model shown. Civic Hybrid similar

Aside from severe damage to the vehicle, there is no risk of an electric shock from touching the vehicle's body or framework - in or out of the water. If the high-voltage battery was submerged, you may hear noises from the battery as the cells are being discharged from shorting.

**See Section 8 (Towing/Transportation/Storage) for additional procedures including discharging the high voltage battery.**

## Shifting the Vehicle into Neutral

### If the 12-volt battery power **IS** available

Refer to page 12, Parking the Vehicle to turn the vehicle to the ON mode and follow the instructions to get the vehicle into neutral.

### If the 12-volt battery is **NOT** available

1. Set the parking brake. See Section - Parking the Vehicle on page 12.
2. Turn to the vehicle to the **OFF** mode. See Section - How to Determine if Vehicle is in ON / OFF Mode on page 10.
3. Remove the built-in key from the keyless remote. (Image 1)
4. Wrap a cloth around the tip of the built-in key. Put it into the shift lock release slot as shown in the image, and remove the cover. (Image 2)
5. Insert the key into the shift lock release slot.
6. While pushing the key in, press the shift lever release button, and place the shift lever into **N**. The lock is now released. (Image 3)

Image 1

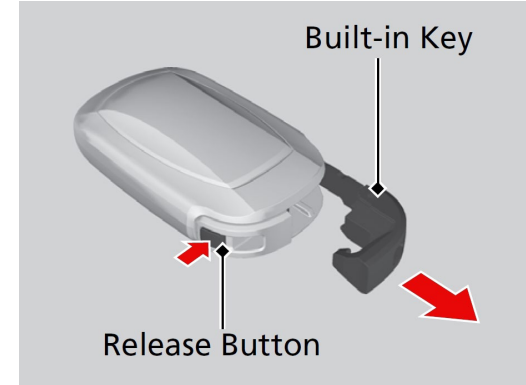


Image 2

**NOTE:** A pocket screwdriver can also be used.


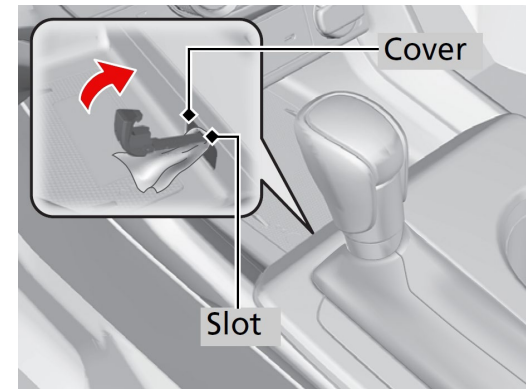





Image 3

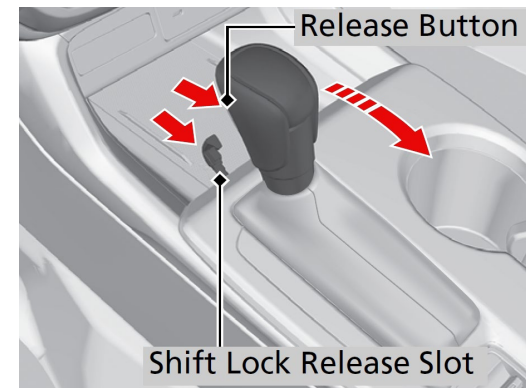

Emergency Towing

The preferred method for emergency towing is to use a flat-bed tow truck. If wheel lift equipment must be used, be sure to suspend the front wheels and release the parking brake. **DO NOT** use cable-type tow equipment.

NOTE: If there is a 12-volt power failure, the vehicle cannot be shifted into neutral. Use available wheel dollies.

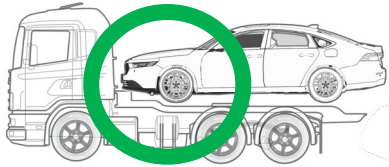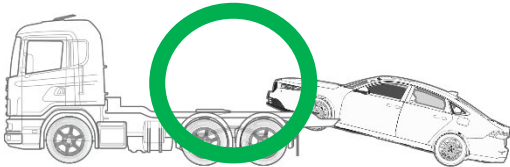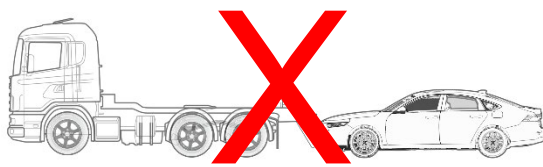Flat-Bed	Front Wheel Type	Cable-type
		
<div>1. Secure the vehicle on the flat-bed tow truck.</div> <div>2. Apply the parking brake.</div>	<div>1. Lift the front wheels.</div> <div>2. Release the parking brake.</div>	<div>Never tow this vehicle with cable-type equipment.</div>

Be aware that when rolling a Civic Hybrid with the front (drive) wheels on the ground, the electric motor can produce electricity and remains a potential source of electric shock even when the high-voltage system is turned off.

Carry a fire extinguisher during transportation for enhanced safety, and have the flat-bed tow truck with the damaged vehicle followed by another support vehicle for monitoring. After transportation, discharge the battery if necessary. See the Battery Discharging information on this section.

⚠️ WARNING

If the orange high-voltage cables or high-voltage covers have been damaged exposing wiring, terminals, and/or other components, the exposed parts should never be touched. Doing so could result in serious injury or death due to severe burns or electric shock.

If it is not clear whether the exposed wires and terminals are high-voltage components or not, do not touch them.

*If touching high-voltage cables and/or other high-voltage components is unavoidable, personal protective equipment (insulating gloves, goggles, and boots) should always be worn.*

Acoustic Vehicle Alerting System

The Civic Hybrid is equipped with an acoustic vehicle alerting system that alerts pedestrians with an audible sound that it is approaching when the speed is about **14 mph** or less. When pushing the Civic Hybrid with the ignition turned to ON, you will hear this sound as the vehicle is being moved.



### Lifting the Vehicle

Use the indicted lifting points to raise the vehicle.

Front Lifting Point (If Necessary)

Front Tow Hook

Recommended Lifting Points

Floor Jack Lifting Points

5-Door Models

4-Door Models






## Securing the Vehicle

The recommended tie-down locations for securing the vehicle are indicated below.

- Four tie-down slots (covered by rubber plugs) - Two behind the front wheels and two in front of the rear wheels

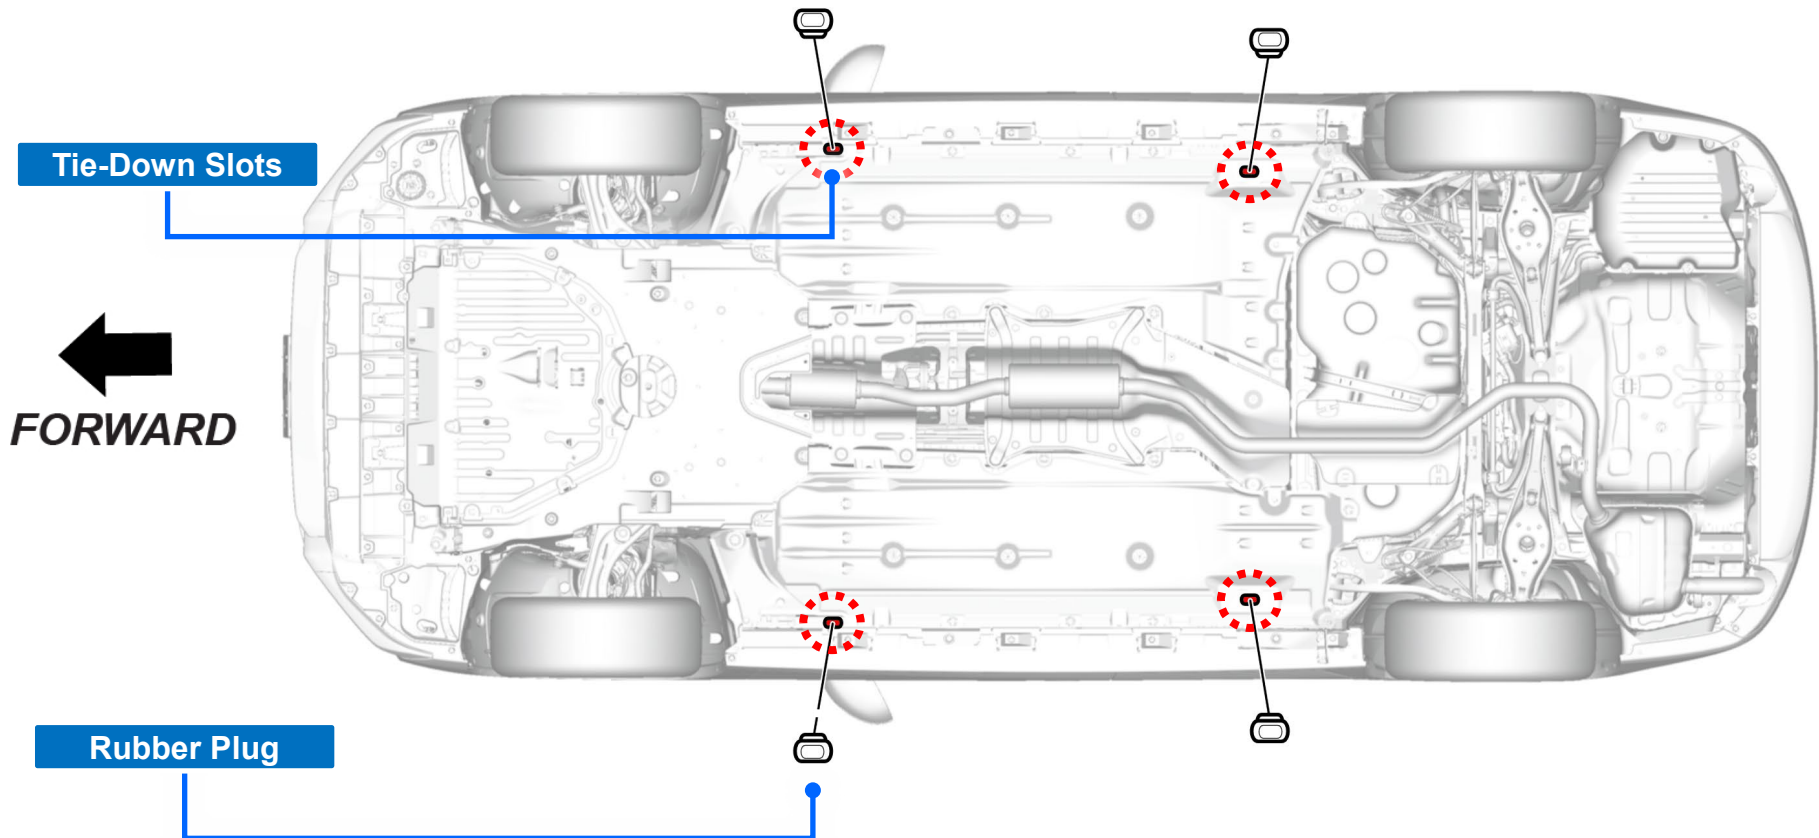



Dimensions & Weight

4-Door Model	
Wheelbase (in.)	107.7
Length (in.)	184.0
Height (in.)	55.7
Width (in.)	70.9

5-Door Model	
Wheelbase (in.)	107.7
Length (in.)	179.0
Height (in.)	55.7
Width (in.)	70.9

## Storing the Vehicle

The damaged vehicle can be stored in either Open Perimeter Isolation or Barrier Isolation.

### Open Perimeter Isolation

Store the vehicle in an outdoor area separated from all combustibles and structures by a minimum distance of **50 feet (15.2 m)** from all sides.



NOTE: Accord Hybrid model shown.




### Barrier Isolation

- Store the vehicle in an outdoor area separated from all combustibles and structures with a barrier constructed of earth, steel, concrete or solid masonry designed to contain a fire or prevent the fire from extending to adjacent vehicles.
- The barriers should be of sufficient height to direct any flame or heat away from adjacent vehicles.
- If the barrier is only on three of the four sides of the vehicle, the open side must maintain the separation distance referenced above.
- It is not recommended to fully enclose the vehicle in a structure due to the risk of post-incident fire extending to the structure and the possibility of trapped explosive or harmful gases. Therefore, a roof is not recommended for barrier isolation.

## High-Voltage Battery Access

See Section 8 (Battery Discharging) for procedures to remove the rear seat and turning off the high-voltage service plug.

NOTE: In the event of an emergency, remove the seat cushion with extrication equipments as necessary.

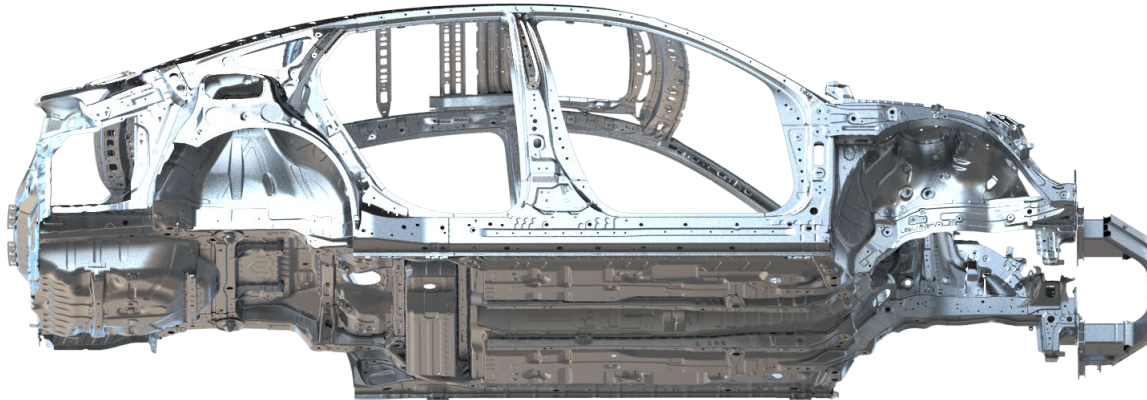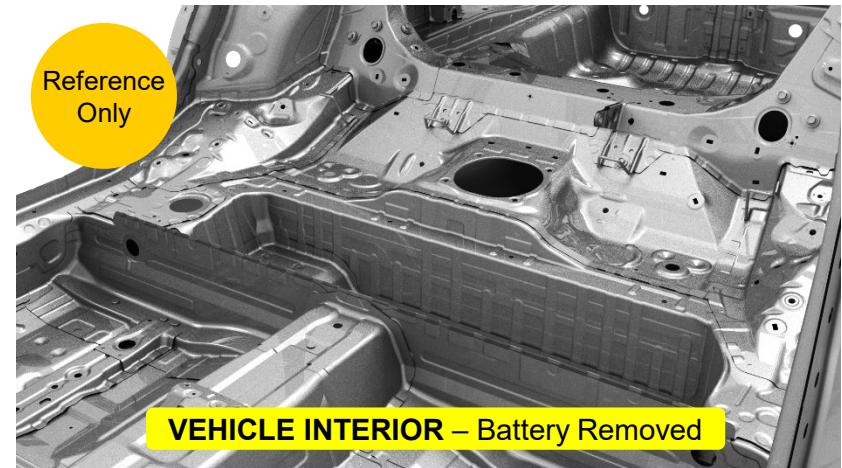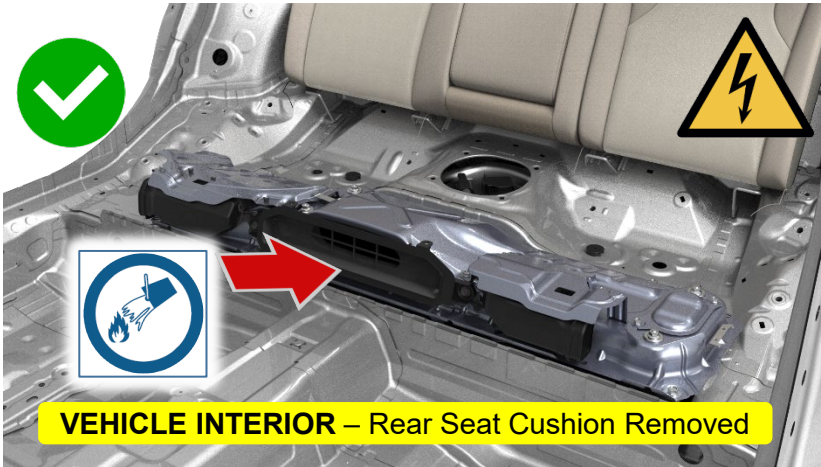

**VEHICLE UNDERSIDE – No Battery Access**

NOTE: Accord Hybrid model shown. Civic Hybrid similar


## Battery Discharging

If the high-voltage battery is severely damaged or burned, or the vehicle has been submerged, and **water has entered and accumulated on the floor of passenger compartment**, the battery must be discharged. Failure to discharge stored or stranded energy remaining in the battery may result in a fire or re-ignition due to damage or short circuit.

See Section 3 (Disable Direct Hazards / Safety Regulations) for procedures to disconnect the 12-volt battery.

*If touching high-voltage cables and/or other high-voltage components is unavoidable, personal protective equipment (insulating gloves, goggles, and boots) should always be worn.*



1. Disconnect the 12-volt battery.
2. Remove the rear seat cushion bolts (A).
3. While pushing down on the rear seat cushion, pull the seat hook handles (B) to release the hooks (C). Disconnect the rear seat heater connectors (if equipped).

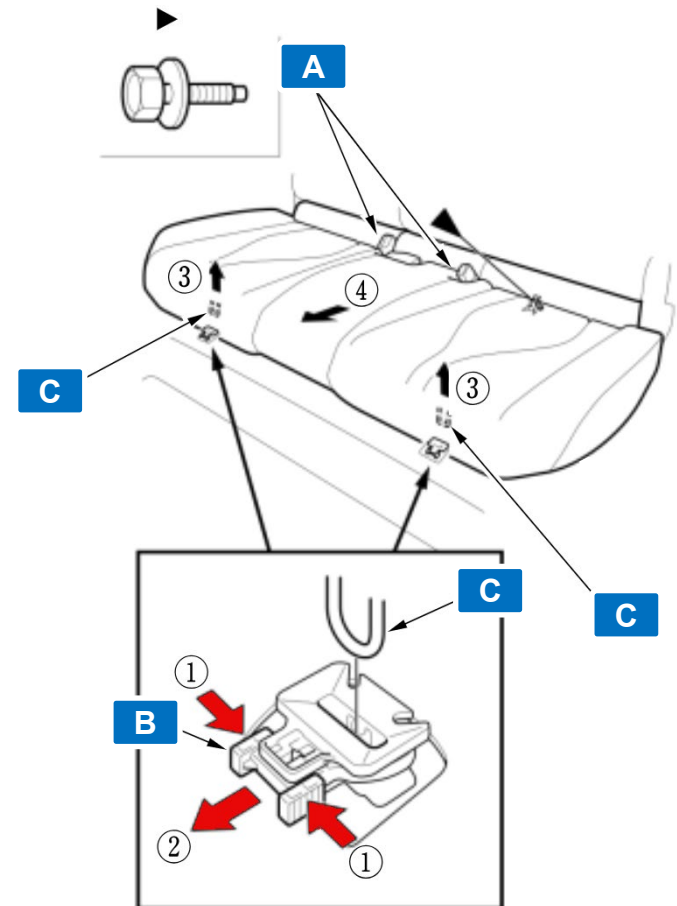





## Battery Discharging (Continued)

5. Remove the rear seat cushion.

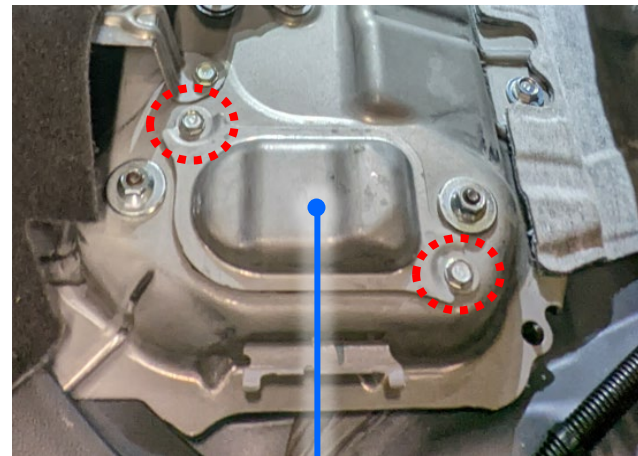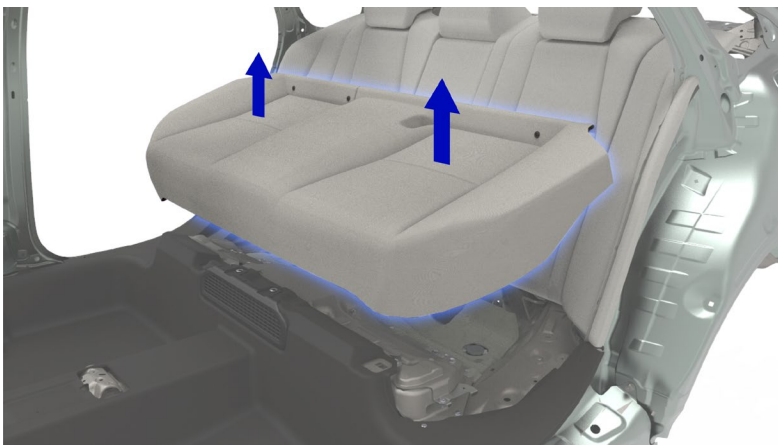

6. Remove the service plug cover **10 mm** bolts, then remove the service plug cover.

7. Push and slide the tab on the service plug until you hear a click.

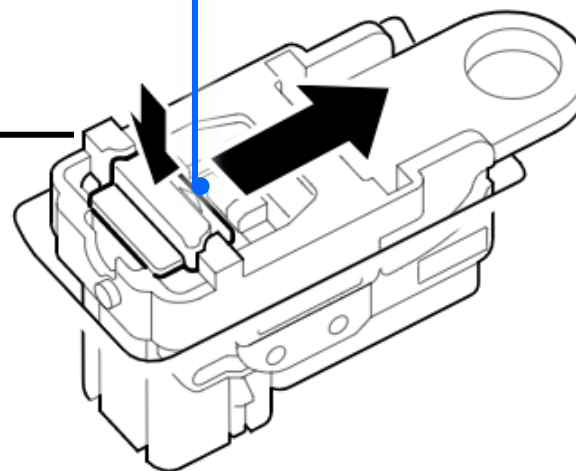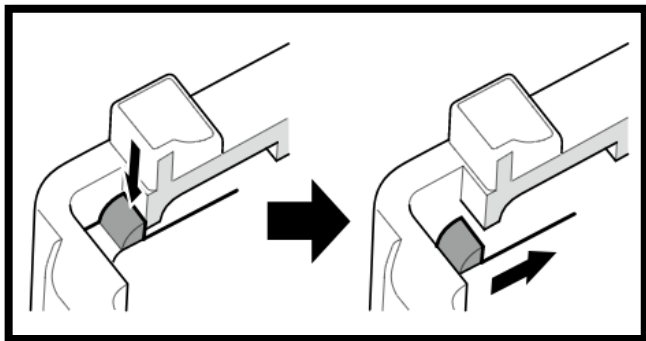


*Continued on the next page.*





## Battery Discharging (Continued)

8. Raise the lever and remove the service plug.

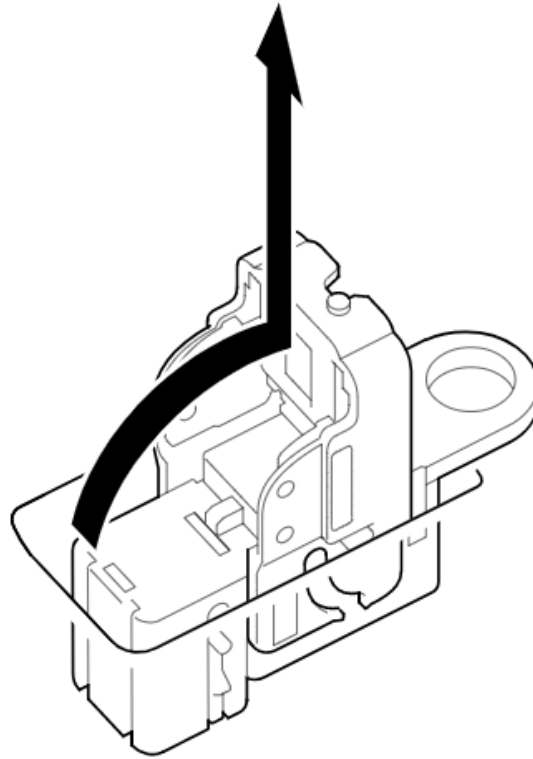

9. Set up a pool approximately **18 feet long x 9 feet wide x 3 feet high** in a well-ventilated outdoor area.
10. Use a forklift or similar equipment to place the vehicle in the center of the pool.

*Continued on the next page.*




## Battery Discharging (Continued)

11. Fill the pool with water from a fire hydrant, well water, or pond water until the high voltage battery is completely submerged. If there is a risk of water leakage from the pool, place a thick plastic sheet under the pool.

***Never use seawater or any water containing salt.***



12. Continue filling the pool to a minimum depth of **1.71 ft (522 mm)** until the high voltage battery is completely submerged.

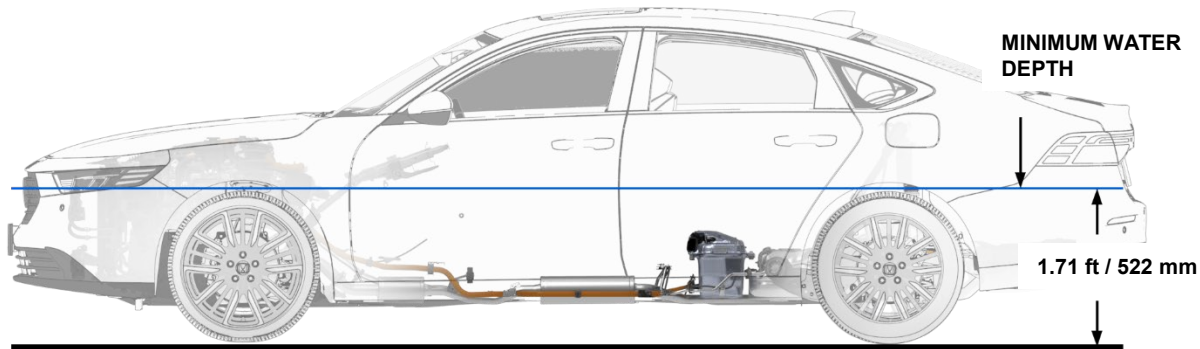

13. Maintain this water level for at least **3.5 days**. If the water level drops below the minimum specified level, add fresh water.

***Since the water used for discharging the battery is converted to an aqueous solution containing metals such as Phosphorus (P) and Lithium (Li), dispose of it properly as an industrial waste according to local regulations.***

NOTE: Accord Hybrid model shown



### Lithium-Ion Battery Fumes or Fire

A damaged high-voltage lithium-ion battery can emit toxic fumes, and the organic solvent used as electrolyte is flammable and corrosive. Responders should wear appropriate personal protective equipment. Even after a lithium-ion battery fire appears to have been extinguished, a renewed or delayed fire can occur. The battery manufacturer cautions responders that extinguishing a lithium-ion battery fire will take a large and sustained volume of water.

***In order to minimize the possibility of collateral fire damage, responders should always ensure that a Civic Hybrid with a damaged battery is kept outdoors and far away from other flammable objects.***



### Lithium-Ion Battery Fluid

Avoid contact with the high-voltage battery fluid. The high-voltage battery contains a flammable electrolyte that could leak as a result of a severe crash. Avoid any skin or eye contact with the electrolyte as it is corrosive. If you accidentally touch it, flush your eyes or skin with a large quantity of water for at least **5 minutes** and seek medical attention immediately.

### Electric Shock

Unprotected contact with any electrically charged high-voltage component can cause serious injury or death. Receiving an electric shock from a Civic Hybrid, however, is highly unlikely because of the following:

- Contact with the battery module or other high-voltage components can only occur if they are damaged and the contents are exposed, or if they are accessed without following proper precautions.
- Contact with the electric motor can only occur after one or more components are removed.
- The high-voltage cables can be easily identified by their distinctive orange color, and contact with them can be avoided.



***If severe damage causes high-voltage components to become exposed, responders should take appropriate precautions and wear appropriate insulated personal protective equipment.***

### Disposal

The lithium-ion battery, the high-voltage battery fluid, and the water used to discharge the battery must be properly disposed of as industrial waste according to local regulations.

## Seat Belts and Airbags

The Civic Hybrid is equipped with lap/shoulder belts in all seating positions. The front seat belts are equipped with pyrotechnically activated tensioners that help tighten the seat belt in a sufficient crash.



In addition, the Civic Hybrid is equipped with the following airbags:

- **Front Airbags** – Driver/Front Passenger
- **Knee Airbags** – Driver/Front Passenger
- **Side Airbags** – Front/Rear
- **Side Curtain Airbags** – Driver's Side/Passenger's Side

It takes up to **3 minutes** for the airbags and tensioners to power off after the 12-volt system has been turned off by following the emergency shutdown procedures described in this guide.

In a collision severe enough to deploy one or more of the airbags, the Civic Hybrid electrical system is designed to automatically open the high-voltage electrical contactors. This disconnects the high-voltage battery from the other high-voltage components and stops the flow of electricity in the high-voltage cables.

***However, responders should always assume that the high-voltage system is powered on and take the appropriate action described in this guide to power off the system.***

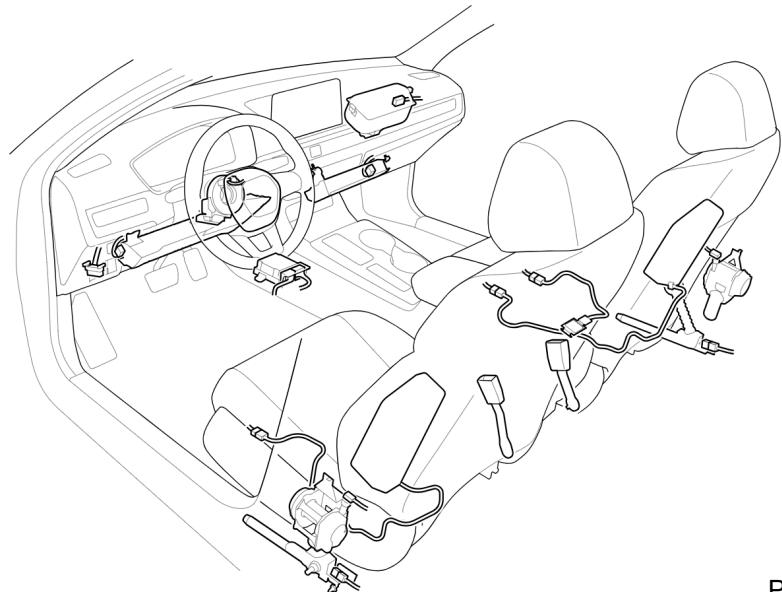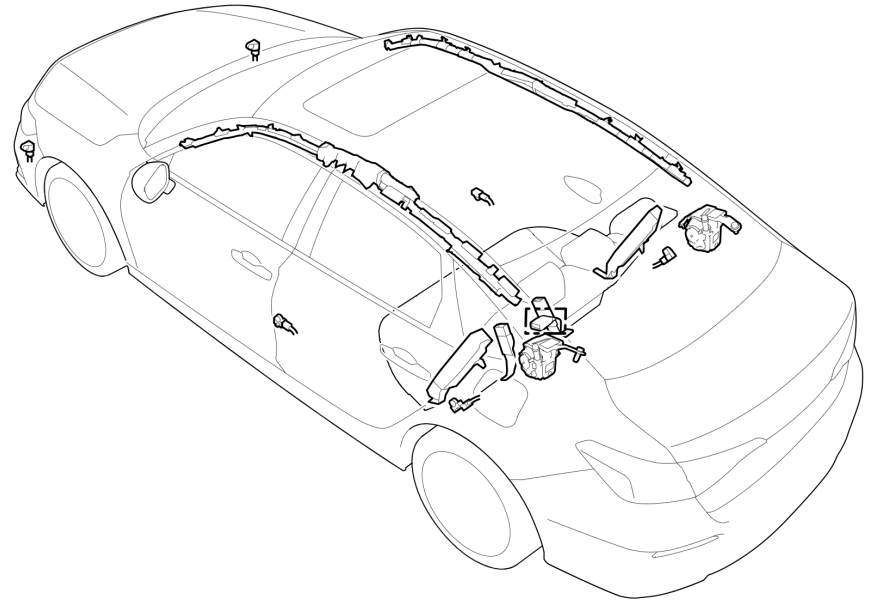

## Vehicle Collisions

In the event of a crash, the supplemental restraint system (SRS) unit makes a judgment based on input from the impact sensors. If the input values meet various threshold requirements, the SRS unit sends a signal to the high-voltage battery electronic control unit (ECU). The high-voltage battery ECU then turns off the high-voltage battery contactors, stopping the flow of electrical current from the high-voltage battery.

When responding to an incident involving a Civic Hybrid, we recommend that emergency personnel follow their organization's standard operating procedures for assessing and dealing with vehicle emergencies.

Honda recommends that responders follow the procedures in this guide to avoid potentially lethal shock from high voltage.



NOTE: Accord Hybrid model shown



### Dealer Inspection and Repair

A damaged Civic Hybrid should be taken to an authorized Honda dealer for a thorough inspection and repairs. For questions or to locate an authorized Honda dealer, please contact your local Honda dealer or Honda Automobile Customer Service at **(800) 999-1009**.



### High-Voltage Battery Recycling

The high-voltage lithium-ion battery requires special handling and disposal. If disposal is necessary, please contact your local Honda dealer or American Honda's Hybrid Battery Consolidation Center at **(800) 555-3497**.



BLUE SKIES FOR  
OUR CHILDREN

### Components

High-Voltage  
Components



12-Volt Battery



SRS  
Components




Fuel Tank



Reinforcement



Seat Belt  
Pretensioners

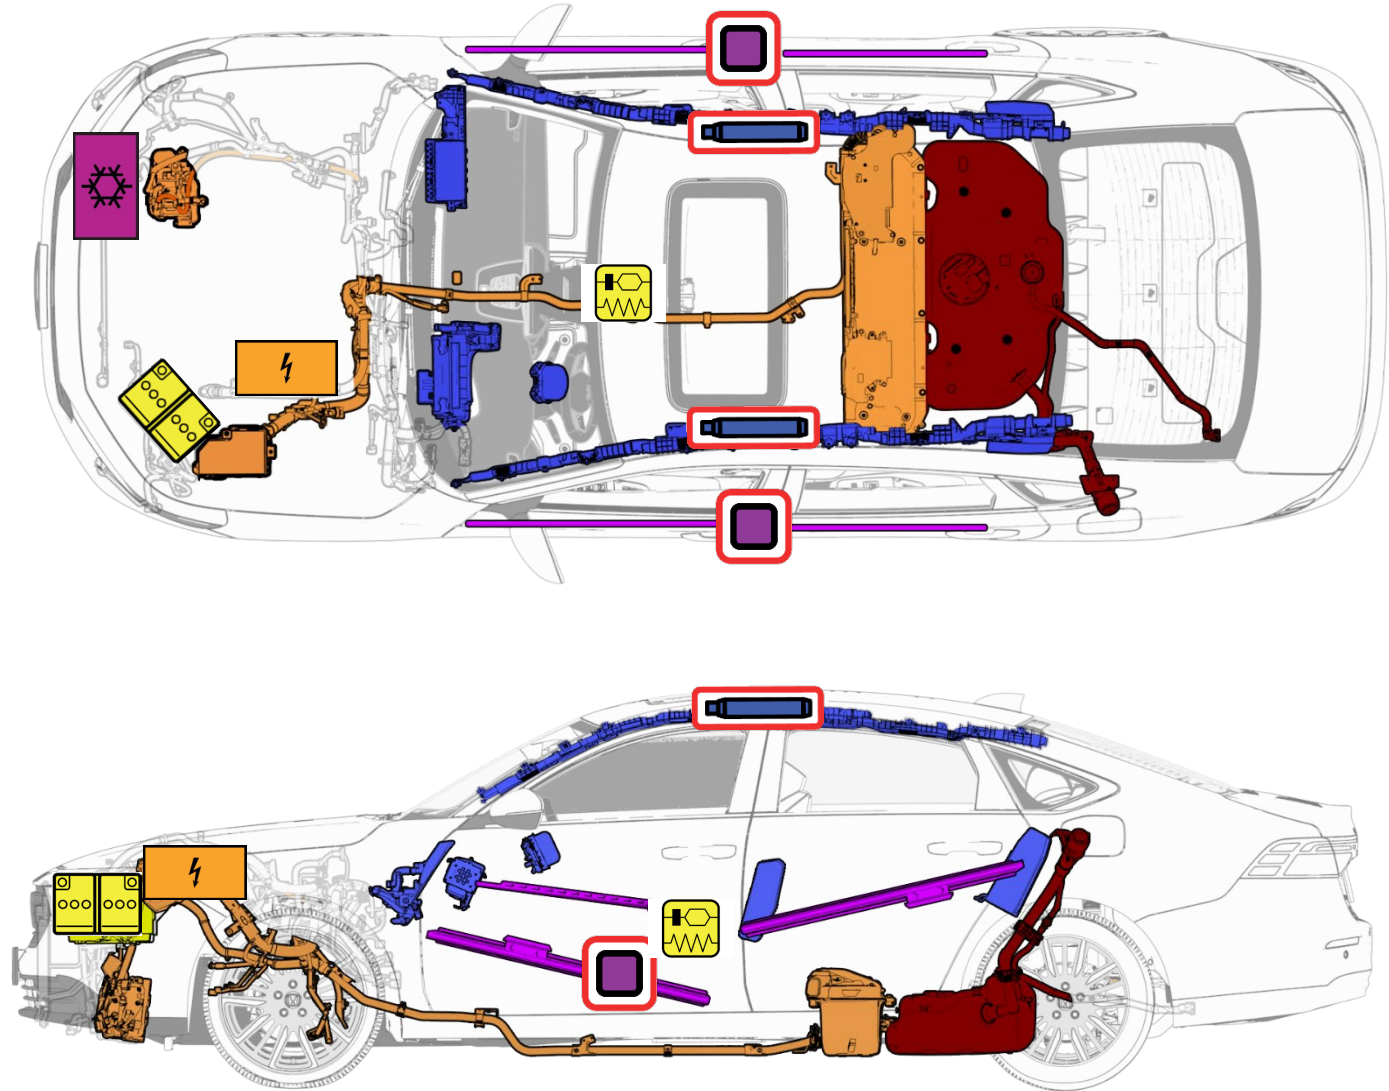

NOTE: Accord Hybrid model shown. Civic Hybrid similar

Pictogram	Name	Pictogram	Name
	Hood release/opener control		High-voltage battery pack
	Tailgate/cargo area opener control		High-voltage component
	Power switch		High-voltage power cable
	Keyless operation key distance		Fuel tank (gasoline)
	Fuse box disabling high-voltage		Air-conditioning component
	Cable to cut to disconnect high-voltage		General warning
	High-voltage service plug		Electricity or dangerous voltage
	Steering wheel height adjustment control		Use a thermal infrared camera
	Seat height adjustment control		Use water to extinguish the fire
	Forward or backward seat adjustment control		Use ABC powder to extinguish the fire
	Lifting point		Flammable
	Airbag		Gases under pressure
	Airbag inflator		Corrosive
	Seat belt pretensioner		Hazardous to human health
	12-volt battery		Environmental hazard
	SRS control unit		

# CIVIC

This guide has been prepared to assist emergency response professionals in identifying a 2025–26 Honda Civic Hybrid vehicle and safely respond to incidents involving this vehicle.

Copies of this guide and other emergency response guides are available for reference or downloading at <https://techinfo.honda.com>.

For questions, please contact your local Honda dealer or Honda Automobile Customer Service at **(800) 999-1009**.

Honda wishes to thank emergency response professionals for their concern and efforts in protecting Honda customers and the general public.





# **HONDA**