

Service the items listed at the indicated distance (or time, if given).																
	miles x 1,000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1,000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Check engine oil and coolant		Check oil and coolant at each fuel stop														
Check tires		Check inflation and condition once a month														
Replace engine oil		Every 10,000 miles (16,000 km) or every 1 year, whichever comes first														
Rotate tires (follow pattern on page 214)		Every 10,000 miles (16,000 km)														
Replace engine oil filter		Every 20,000 miles (32,000 km) or every 1 year, whichever comes first														
Check front and rear brakes																
Check parking brake adjustment																
Inspect the following items:																
Tie-rod ends, steering gearbox, and boots																
Suspension components																
Driveshaft boots																
Brake hoses and lines (including ABS)																
All fluid levels and condition of fluids																
Exhaust system [#]																
Fuel lines and connections [#]																
Inspect drive belt		Every 30,000 miles (48,000 km) or every 2 years, whichever comes first														
Replace dust and pollen filter																
Replace air cleaner element				●			●			●			●			●
Replace spark plugs												●				
Inspect valve clearance		Inspect every 110,000 miles (176,000 km), otherwise adjust only if noisy														
Replace automatic transmission fluid*													●			
Replace manual transmission fluid		Every 120,000 miles (192,000 km) or every 6 years, whichever comes first														
Replace rear differential fluid		Every 90,000 miles (144,000 km) or every 5 years, whichever comes first														
Inspect idle speed		Every 160,000 miles (256,000 km)														
Replace engine coolant		At 120,000 miles (192,000 km) or 10 years, then every 60,000 miles (96,000 km) or 5 years														
Replace brake fluid		Every 3 years (independent of mileage)														

: See information on maintenance and emissions warranty, middle column, page 186.

* : Replace at 120,000 miles (192,000 km) or 6 years, then every 90,000 miles (144,000 km) or 5 years.

Service the items listed at the indicated distance (or time, if given).																
	miles x 1,000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1,000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Check engine oil and coolant		Check oil and coolant at each fuel stop														
Check tires		Check inflation and condition once a month														
Replace engine oil		Every 5,000 miles (8,000 km) or every 6 months, whichever comes first														
Rotate tires (follow pattern on page 214)		Every 10,000 miles (16,000 km)														
Replace engine oil filter		Every 10,000 miles (16,000 km) or every 1 year, whichever comes first														
Check front and rear brakes																
Lubricate all hinges, locks and latches																
Inspect the following items:																
Tie-rod ends, steering gearbox, and boots																
Suspension components																
Driveshaft boots																
Check parking brake adjustment		Every 20,000 miles (32,000 km) or every 1 year, whichever comes first														
Inspect the following items:																
Brake hoses and lines (including ABS)																
All fluid levels and condition of fluids																
Exhaust system [#]																
Fuel lines and connections [#]																
Lights and controls/vehicle underbody																
Inspect drive belt		Every 30,000 miles (48,000 km) or every 2 years, whichever comes first														
Replace dust and pollen filter ^{*1}		Clean every 15,000 miles (24,000 km), and replace every 30,000 miles (48,000 km) (Use normal schedule except in dusty condition)														
Clean and replace air cleaner element																
Replace spark plugs												●				
Inspect valve clearance		Inspect every 110,000 miles (176,000 km), otherwise adjust only if noisy														
Replace automatic transmission fluid ^{*2}							●			●			●			●
Replace manual transmission fluid		Every 60,000 miles (96,000 km) or every 3 years, whichever comes first														
Replace rear differential fluid		Every 60,000 miles (96,000 km) or every 4 years, whichever comes first														
Inspect idle speed		Every 160,000 miles (256,000 km)														
Replace engine coolant		At 120,000 miles (192,000 km) or 10 years, then every 60,000 miles (96,000 km) or 5 years														
Replace brake fluid		Every 3 years (independent of mileage)														

: See information on maintenance and emissions warranty, middle column, page 186.

* 1: See dust and pollen filter on page 209 for replacement information under special driving conditions.

* 2: Replace at 60,000 miles (96,000 km) or 3 years, then every 30,000 miles (48,000 km) or 2 years.

Maintenance Record *(for Normal and Severe Schedules)*

You or the servicing dealer can record all completed maintenance here, whether you follow the schedule for normal conditions (page 187) or severe conditions (page 188). Keep the receipts for all work done on your vehicle.

5,000 mi 8,000 km	Signature or dealer stamp	mi/km
		Date
10,000 mi 16,000 km		mi/km
		Date
15,000 mi 24,000 km		mi/km
		Date
20,000 mi 32,000 km		mi/km
		Date
25,000 mi 40,000 km		mi/km
		Date

30,000 mi 48,000 km	Signature or dealer stamp	mi/km
		Date
35,000 mi 56,000 km		mi/km
		Date
40,000 mi 64,000 km		mi/km
		Date
45,000 mi 72,000 km		mi/km
		Date
50,000 mi 80,000 km		mi/km
		Date

Maintenance Record *(for Normal and Severe Schedules)*

55,000 mi 88,000 km	Signature or dealer stamp	mi/km
		Date
60,000 mi 96,000 km		mi/km
		Date
65,000 mi 104,000 km		mi/km
		Date
70,000 mi 112,000 km		mi/km
		Date
75,000 mi 120,000 km		mi/km
		Date

80,000 mi 128,000 km	Signature or dealer stamp	mi/km
		Date
85,000 mi 136,000 km		mi/km
		Date
90,000 mi 144,000 km		mi/km
		Date
95,000 mi 152,000 km		mi/km
		Date
100,000 mi 160,000 km		mi/km
		Date

Maintenance Record *(for Normal and Severe Schedules)*

105,000 mi 168,000 km	Signature or dealer stamp	mi/km
		Date
110,000 mi 176,000 km		mi/km
		Date
115,000 mi 184,000 km		mi/km
		Date
120,000 mi 192,000 km		mi/km
		Date
125,000 mi 200,000 km		mi/km
		Date

130,000 mi 208,000 km	Signature or dealer stamp	mi/km
		Date
135,000 mi 216,000 km		mi/km
		Date
140,000 mi 224,000 km		mi/km
		Date
145,000 mi 232,000 km		mi/km
		Date
150,000 mi 240,000 km		mi/km
		Date