

## Maintenance Schedule

---

The Maintenance Schedule specifies how often you should have your Civic GX serviced and what things need attention. It is essential that you have your vehicle serviced as scheduled to retain its high level of safety, dependability, and emissions control performance.

Refer to the important safety precautions and instructions in the primary owner's manual.

The fuel system is under high pressure (maximum 3,600 psi/24,800 kPa). It has no user-serviceable parts, and its components must not be modified. Whenever maintenance is required, take your vehicle to an authorized Honda Civic GX dealer, or a qualified NGV technician.

### **WARNING**

Tampering with, or improperly maintaining the high-pressure fuel system can cause a dangerous condition in which you can be seriously hurt or killed.

Never attempt to modify the fuel system, and always have maintenance performed by an authorized Honda Civic GX dealer.

The services and time or distance intervals shown in the maintenance schedule assume you will use your vehicle as normal transportation for passengers and their possessions. You should also follow these recommendations:

- Avoid exceeding your vehicle's load limit. This puts excess stress on the engine, brakes, and many other parts of your vehicle. The load limit is shown on the label on the driver's doorjamb.
- Operate your vehicle on reasonable roads within the legal speed limit.
- Drive your vehicle regularly over a distance of several miles (kilometers).

#### **Which Schedule to Follow:**

Service your vehicle according to the time and mileage periods on one of the Maintenance Schedules on the following pages.

Follow the Maintenance Schedule for Severe Conditions if you drive your vehicle **MAINLY** under one or more of the following conditions.

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot [over 90°F (32°C)] conditions.
- Extensive idling or long periods of stop-and-go driving, such as a taxi or a commercial delivery vehicle.
- Driving with a roof rack, or driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE: If you only OCCASIONALLY or NEVER, drive under a “severe” condition, you should follow the Maintenance Schedule for Normal Conditions.

Your authorized Honda dealer knows your vehicle best and can provide competent, efficient service.

However, service at a dealer is not mandatory to keep your warranties in effect. Maintenance may be done by any qualified service facility or person who is skilled in this type of automotive service. Keep all the receipts as proof of completion, and have the person who does the work fill out the Maintenance Record. Check your warranty booklet for more information.

We recommend the use of Honda parts and fluids whenever you have maintenance done. These are manufactured to the same high-quality standards as the original components, so you can be confident of their performance and durability.

**Maintenance, replacement or repair of emissions control devices and systems may be done by any automotive repair establishment or individual using parts that are “certified” to EPA standards.**

According to state and federal regulations, failure to perform maintenance on the items marked with # will not void your emissions warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Service at the indicated distance or time – whichever comes first.	miles x 1,000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180
	km x 1,000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240	256	272	288
	months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216
Replace engine oil																			
Inspect fuel filter (high pressure)* <sup>1</sup>																			
Replace fuel filter element (low pressure)		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Rotate tires (Check tire inflation and condition at least once per month)																			
Replace engine oil filter																			
Inspect front and rear brakes																			
Check parking brake adjustment																			
Visually inspect the following items:																			
Tie rod ends, steering gear box, and boots			•		•		•		•		•		•		•		•		•
Suspension components, Driveshaft boots																			
Brake hoses and lines (including ABS)																			
All fluid levels and condition of fluids																			
<sup>#</sup> Exhaust system																			
<sup>#</sup> Fuel lines and connections																			
Inspect spark plugs* <sup>2</sup>																			
Inspect valve clearance																			
Replace fuel filter element (high pressure)				•			•			•			•			•			•
Inspect and adjust drive belts																			
Replace dust and pollen filter* <sup>3</sup>																			
Replace transmission fluid							•				•				•				•
Replace spark plugs												•							
<i>Service the following items at the recommended intervals.</i>																			
Replace air cleaner element	Every 30,000 miles (48,000 km)																		
Replace timing belt, inspect auto-tensioner and water pump	Every 110,000 miles (176,000 km) or 7 years																		
<sup>#</sup> Inspect idle speed																			
Replace engine coolant	At 120,000 miles (192,000 km) or 10 years, then every 60,000 miles (96,000 km) or 5 years																		
Replace brake fluid	Every 3 years																		
Inspect fuel tank* <sup>4</sup>	Inspect every 3 years or 36,000 miles. Whichever comes first, after the production date of the fuel tank																		

\* 1: Including drain.

\* 2: See Spark Plugs on page 35 for inspection information.

\* 3: See Dust and Pollen Filter in the Civic Sedan owner's manual for replacement information under special driving conditions.

\* 4: See Fuel Tank on page 34 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured.

This 15-year replacement interval is part of scheduled maintenance; it is not covered by the emissions warranty.

# : See information on maintenance and emissions warranty, last column, page 21.

Service at the indicated distance or time, whichever comes first.  
Refer to page 20 to determine which schedule to use.

10,000 mi/16,000 km/1 yr	Do items in A.
20,000 mi/32,000 km/1 yr	Do items in A, B.
30,000 mi/48,000 km	Do item in D.
30,000 mi/48,000 km/2 yrs	Do items in A, C.
36,000 mi/57,600 km/3 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>3</sup> .
40,000 mi/64,000 km/2 yrs	Do items in A, B.
50,000 mi/80,000 km/3 yrs	Do items in A.
60,000 mi/96,000 km	Do item in D.
60,000 mi/96,000 km/3 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B, C.
3 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
70,000 mi/112,000 km/4 yrs	Do items in A.
72,000 mi/115,200 km/6 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>3</sup> .
80,000 mi/128,000 km/4 yrs	Do items in A, B.
90,000 mi/144,000 km	Do item in D.
90,000 mi/144,000 km/5 yrs	Do items in A, C.
100,000 mi/160,000 km/5 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B.
108,000 mi/172,800 km/9 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>3</sup> .
110,000 mi/176,000 km/6 yrs	<input type="checkbox"/> Replace spark plugs. Do items in A.
110,000 mi/176,000 km/7 yrs	<input type="checkbox"/> Replace timing belt, inspect auto-tensioner, and water pump. <input type="checkbox"/> <sup>†</sup> Inspect idle speed.
120,000 mi/192,000 km	Do item in D.
120,000 mi/192,000 km/6 yrs	Do items in A, B, C.
6 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
120,000 mi/192,000 km/10 yrs	<input type="checkbox"/> Replace engine coolant.
130,000 mi/208,000 km/7 yrs	Do items in A.
140,000 mi/224,000 km/7 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B.
144,000 mi/230,400 km/12 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>3</sup> .
150,000 mi/240,000 km	Do item in D.

<b>A</b>	<input type="checkbox"/> Replace engine oil. <input type="checkbox"/> Rotate tires. <input type="checkbox"/> Inspect fuel filter (high pressure), including drain. <input type="checkbox"/> Replace fuel filter element (low pressure).
<b>B</b>	<input type="checkbox"/> Replace engine oil filter. <input type="checkbox"/> Inspect front and rear brakes. <input type="checkbox"/> Check parking brake adjustment. <input type="checkbox"/> Inspect tie rod ends, steering gearbox and boots. <input type="checkbox"/> Inspect suspension components. <input type="checkbox"/> Inspect driveshaft boots. <input type="checkbox"/> Inspect brake hoses and lines (including ABS). <input type="checkbox"/> Check all fluid levels, condition of fluids, and check for leaks. <input type="checkbox"/> <sup>‡</sup> Inspect exhaust system. <input type="checkbox"/> <sup>‡</sup> Inspect fuel lines and connections.
<b>C</b>	<input type="checkbox"/> Inspect spark plug* <sup>1</sup> . <input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Replace fuel filter element (high pressure). <input type="checkbox"/> Inspect and adjust drive belts. <input type="checkbox"/> Replace dust and pollen filter* <sup>2</sup> .
<b>D</b>	<input type="checkbox"/> Replace air cleaner element every 30,000 mi/48,000 km (independent of time).

\* 1: See Spark Plug on page 35 for inspection information.

\* 2: See Dust and Pollen Filter in the Civic Sedan owner's manual for replacement information under special driving conditions.

\* 3: See Fuel Tank on page 34 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured. This 15-year replacement interval is part of scheduled maintenance; it is not covered by the emissions warranty.

# : See information on maintenance and emissions warranty, last column page 21.

NOTE: Check engine oil and coolant at each fuel stop.

150,000 mi/240,000 km/8 yrs	Do items in A, C.
160,000 mi/256,000 km/8 yrs	Do items in A, B.
170,000 mi/272,000 km/9 yrs	Do items in A.
180,000 mi/288,000 km	Do item in D.
180,000 mi/288,000 km/9 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B, C.
9 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
180,000 mi/288,000 km/15 yrs	<input type="checkbox"/> Replace engine coolant. <input type="checkbox"/> Replace fuel tank* <sup>3</sup> .

- \*1 : See Spark Plug on page 35 for inspection information.
- \*2 : See Dust and Pollen Filter in the Civic Sedan owner's manual for replacement information under special driving conditions.
- \*3 : See Fuel Tank on page 34 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured. This 15-year replacement interval is part of scheduled maintenance; it is not covered by the emissions warranty.
- # : See information on maintenance and emissions warranty, last column, page 21.

NOTE : Check engine oil and coolant at each fuel stop.

Service at the indicated distance or time – whichever comes first.	miles x 1,000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	
	km x 1,000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240	256	272	288	
	months	12	24	36	48	60	72	84	96	108										
Replace engine oil	Replace every 5,000 miles (8,000 km) or 6 months																			
Replace engine oil filter																				
Rotate tires (Check tire inflation and condition at least once per month)																				
Inspect fuel filter (high pressure)*1																				
Replace fuel filter element (low pressure)	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Inspect front and rear brakes																				
Lubricate all hinges, locks and latches																				
Visually inspect the following items: Tie rod ends, steering gear box, and boots Suspension components, Driveshaft boots																				
Check parking brake adjustment																				
Visually inspect the following items: Brake hoses and lines (including ABS) All fluid levels and condition of fluids ‡ Exhaust system ‡ Fuel lines and connections Light and controls, vehicle underbody		•		•		•		•		•		•		•		•		•		•
Inspect valve clearance																				
Inspect spark plugs*2																				
Replace fuel filter element (high pressure)			•		•		•		•		•		•		•		•		•	
Inspect and adjust drive belts																				
Replace dust and pollen filter*3																				
Replace transmission fluid							•				•				•					•
Replace spark plugs												•								
<i>Service the following items at the recommended intervals.</i>																				
Replace air cleaner element	Every 15,000 miles (24,000 km) in dusty conditions, otherwise use normal schedule																			
Replace timing belt*4; inspect auto-tensioner and water pump	Every 110,000 miles (176,000 km) or 7 years																			
*5 Inspect idle speed																				
Replace engine coolant	At 120,000 miles (192,000 km) or 10 years, then every 60,000 miles (96,000 km) or 5 years																			
Replace brake fluid	Every 3 years																			
Inspect fuel tank*5	Inspect every 3 years or 36,000 miles, whichever comes first, after the production date of the fuel tank																			

\*1: Including drain.

\*2: See Spark Plugs on page 35 for inspection information. \*3: See Dust and Pollen Filter in the Civic Sedan owner's manual for replacement information under special driving conditions.

\*4: See Timing Belt in the Civic Sedan owner's manual to determine need for replacement.

\*5: See Fuel Tank on page 34 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured.

This 15-year replacement interval is part of scheduled maintenance; it is not covered by the emissions warranty.

‡: See information on maintenance and emissions warranty, last column, page 21.

Service at the indicated distance or time, whichever comes first.

Refer to page 20 to determine which schedule to use.

5,000 mi/8,000 km/6 mos	Do item in A.
10,000 mi/16,000 km/1 yr	Do items in A, B.
15,000 mi/24,000 km	Do item in E.
15,000 mi/24,000 km/1-½ yrs	Do item in A.
20,000 mi/32,000 km/1 yr	Do items in A, B, C.
25,000 mi/40,000 km/2 yrs	Do item in A.
30,000 mi/48,000 km	Do item in E.
30,000 mi/48,000 km/2 yrs	Do items in A, B, D.
35,000 mi/56,000 km/2-½ yrs	Do item in A.
36,000 mi/57,600 km/3 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>4</sup> .
40,000 mi/64,000 km/2 yrs	Do items in A, B, C.
45,000 mi/72,000 km	Do item in E.
45,000 mi/72,000 km/3 yrs	Do item in A.
50,000 mi/80,000 km/3 yrs	Do items in A, B.
3 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
55,000 mi/88,000 km/3-½ yrs	Do item in A.
60,000 mi/96,000 km	Do item in E.
60,000 mi/96,000 km/3 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B, C, D.
65,000 mi/104,000 km/4 yrs	Do item in A.
70,000 mi/112,000 km/4 yrs	Do items in A, B.
72,000 mi/115,200 km/6 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>4</sup> .
75,000 mi/120,000 km	Do item in E.
75,000 mi/120,000 km/4-½ yrs	Do item in A.
80,000 mi/128,000 km/4 yrs	Do items in A, B, C.
85,000 mi/136,000 km/5 yrs	Do item in A.
90,000 mi/144,000 km	Do item in E.
90,000 mi/144,000 km/5 yrs	Do items in A, B, D.
95,000 mi/152,000 km/5-½ yrs	Do item in A.
100,000 mi/160,000 km/5 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B, C.
105,000 mi/168,000 km	Do item in E.
105,000 mi/168,000 km/6 yrs	Do item in A.
108,000 mi/172,800 km/9 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>4</sup> .
110,000 mi/176,000 km/6 yrs	<input type="checkbox"/> Replace spark plugs. Do items in A, B.

<b>A</b>	<input type="checkbox"/> Replace engine oil.
<b>B</b>	<input type="checkbox"/> Replace engine oil filter. <input type="checkbox"/> Inspect front and rear brakes. <input type="checkbox"/> Rotate tires. <input type="checkbox"/> Inspect fuel filter (high pressure), including drain. <input type="checkbox"/> Replace fuel filter element (low pressure). <input type="checkbox"/> Lubricate all hinges, locks, and latches. <input type="checkbox"/> Inspect tie rod ends, steering gearbox and boots. <input type="checkbox"/> Inspect suspension components. <input type="checkbox"/> Inspect driveshaft boots.
<b>C</b>	<input type="checkbox"/> Check parking brake adjustment. <input type="checkbox"/> Inspect brake hoses and lines (including ABS). <input type="checkbox"/> Check all fluid levels, condition of fluids, and check for leaks. <input type="checkbox"/> Inspect exhaust system. <input type="checkbox"/> Inspect fuel lines and connections. <input type="checkbox"/> Check all lights. <input type="checkbox"/> Inspect the underbody.
<b>D</b>	<input type="checkbox"/> Inspect valve clearance. <input type="checkbox"/> Replace fuel filter element (high pressure). <input type="checkbox"/> Inspect spark plugs* <sup>1</sup> . <input type="checkbox"/> Inspect and adjust drive belts. <input type="checkbox"/> Replace dust and pollen filter* <sup>3</sup> .
<b>E</b>	<input type="checkbox"/> Replace air cleaner element every 15,000 mi/24,000 km (independent of time) under dusty conditions, otherwise use the normal schedule.

\* 1 : See Spark Plug on page 35 for inspection information.

\* 2 : See Timing Belt in the Civic Sedan owner's manual to determine need for replacement.

\* 3 : See Dust and Pollen Filter in the Civic Sedan owner's manual for replacement information under special driving conditions.

\* 4 : See Fuel Tank on page 34 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured. This 15-year replacement interval is part of scheduled maintenance; it is not covered by the emissions warranty.

# : See information on maintenance and emissions warranty, last column, page 21.

NOTE : Check engine oil and coolant each fuel stop.

6 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
110,000 mi/176,000 km/7 yrs	<input type="checkbox"/> # Replace timing belt* <sup>2</sup> , inspect auto-tensioner, and water pump. <input type="checkbox"/> # Inspect idle speed.
115,000 mi/184,000 km/6-½ yrs	Do item in A.
120,000 mi/192,000 km	Do item in E.
120,000 mi/192,000 km/6 yrs	Do items in A, B, C, D.
120,000 mi/192,000 km/10 yrs	<input type="checkbox"/> Replace engine coolant.
125,000 mi/200,000 km/7 yrs	Do item in A.
130,000 mi/208,000 km/7 yrs	Do items in A, B.
135,000 mi/216,000 km	Do item in E.
135,000 mi/216,000 km/7-½ yrs	Do item in A.
140,000 mi/224,000 km/7 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B, C.
144,000 mi/230,400 km/12 yrs	<input type="checkbox"/> Inspect fuel tank* <sup>4</sup>
145,000 mi/232,000 km/8 yrs	Do item in A.
150,000 mi/240,000 km	Do item in E.
150,000 mi/240,000 km/8 yrs	Do items in A, B, D.
155,000 mi/248,000 km/8-½ yrs	Do item in A.
160,000 mi/256,000 km/8 yrs	Do items in A, B, C.
165,000 mi/264,000 km	Do item in E.
165,000 mi/264,000 km/9 yrs	Do item in A.
170,000 mi/272,000 km/9 yrs	Do items in A, B.
9 yrs	<input type="checkbox"/> Replace brake fluid (independent of mileage).
175,000 mi/280,000 km/9-½ yrs	Do item in A.
180,000 mi/288,000 km	Do item in E.
180,000 mi/288,000 km/9 yrs	<input type="checkbox"/> Replace transmission fluid. Do items in A, B, C, D.
180,000 mi/288,000 km/15 yrs	<input type="checkbox"/> Replace engine coolant. <input type="checkbox"/> Replace fuel tank* <sup>4</sup> .

\* 1 : See Spark Plug on page 35 for inspection information.

\* 2 : See Timing Belt in the Civic Sedan owner's manual to determine need for replacement.

\* 3 : See Dust and Pollen Filter in the Civic Sedan owner's manual for replacement information under special driving conditions.

\* 4 : See Fuel Tank on page 34 for inspection and replacement information. Fuel tank should be replaced 15 years after it was manufactured. This 15-year replacement interval is part of scheduled maintenance; it is not covered by the emissions warranty.

# : See information on maintenance and emissions warranty, last column, page 21.

NOTE: Check engine oil and coolant at each fuel stop.



## Required Maintenance Record (for Normal and Severe Schedules)

---

You or the servicing dealer can record all completed maintenance here, whether you follow the schedule for normal conditions (page 22 ) or severe conditions (page 25 ). Keep the receipts for all work done on your vehicle.

<b>5,000 mi</b> 8,000 km	Signature or dealer stamp	mi/km
		Date
<b>10,000 mi</b> 16,000 km		mi/km
		Date
<b>15,000 mi</b> 24,000 km		mi/km
		Date
<b>20,000 mi</b> 32,000 km (or 1 year)		mi/km
		Date
<b>25,000 mi</b> 40,000 km		mi/km
		Date
<b>30,000 mi</b> 48,000 km		mi/km
		Date

<b>35,000 mi</b> 56,000 km	Signature or dealer stamp	mi/km
		Date
<b>40,000 mi</b> 64,000 km (or 2 years)		mi/km
		Date
<b>45,000 mi</b> 72,000 km		mi/km
		Date
<b>50,000 mi</b> 80,000 km		mi/km
		Date
<b>55,000 mi</b> 88,000 km		mi/km
		Date
<b>60,000 mi</b> 96,000 km (or 3 years)		mi/km
		Date

## Required Maintenance Record (for Normal and Severe Schedules)

<b>65,000 mi</b> 104,000 km	Signature or dealer stamp	mi/km
		Date
<b>70,000 mi</b> 112,000 km		mi/km
		Date
<b>75,000 mi</b> 120,000 km		mi/km
		Date
<b>80,000 mi</b> 128,000 km (or 4 years)		mi/km
		Date
<b>85,000 mi</b> 136,000 km		mi/km
		Date
<b>90,000 mi</b> 144,000 km		mi/km
		Date

<b>95,000 mi</b> 152,000 km	Signature or dealer stamp	mi/km
		Date
<b>100,000 mi</b> 160,000 km (or 5 years)		mi/km
		Date
<b>105,000 mi</b> 168,000 km		mi/km
		Date
<b>110,000 mi</b> 176,000 km		mi/km
		Date
<b>115,000 mi</b> 184,000 km		mi/km
		Date
<b>120,000 mi</b> 192,000 km (or 6 years)		mi/km
		Date

## Required Maintenance Record (for Normal and Severe Schedules)

---

<b>125,000 mi</b> 200,000 km	Signature or dealer stamp	mi/km
		Date
<b>130,000 mi</b> 208,000 km		mi/km
		Date
<b>135,000 mi</b> 216,000 km		mi/km
		Date
<b>140,000 mi</b> 224,000 km		mi/km
		Date
<b>145,000 mi</b> 232,000 km		mi/km
		Date
<b>150,000 mi</b> 240,000 km		mi/km
		Date

<b>155,000 mi</b> 248,000 km	Signature or dealer stamp	mi/km
		Date
<b>160,000 mi</b> 256,000 km		mi/km
		Date
<b>165,000 mi</b> 264,000 km		mi/km
		Date
<b>170,000 mi</b> 272,000 km		mi/km
		Date
<b>175,000 mi</b> 280,000 km		mi/km
		Date
<b>180,000 mi</b> 288,000 km		mi/km
		Date