

Entering a Destination

Adding Addresses to the Personal Address Book

There are two ways to enter addresses to the personal Address Book:

- Entering them in the personal Address Book feature in Set up (see page 74).
- Adding them in the Address Book directly from the Calculate route to screen (see page 43).

The personal Address Book can be edited (see *Address Book* on page 74).

NOTE:

- *Destinations chosen from the Address Book do not show in Previous Destinations.*
- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 84.*
- *For information of the available voice commands, see Voice Command Index on page 113.*

By Go Home

Selecting **Go Home** from the Enter destination by screen takes you home or to a frequently used address you have chosen.

If a **Go Home PIN** has been set in Set up, the system prompts you to enter your PIN. Say or enter your PIN, and say or select **Done**. The system will then display the Calculate route to screen (see *Driving to Your Destination* on page 43).

If a **Go Home PIN** has not been set, the system displays the Calculate route to screen after you select **Go Home** (see *Driving to Your Destination* on page 43).

NOTE:

- *To edit Home Address, see Home Address in Home Address on page 78.*
- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 84.*
- *PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, your dealer will have to reset it for you.*
- *If a PIN is desired, enter it using the Personal preference PIN number feature in Set up. See page 78 for information on entering your Go Home PIN.*
- *For information of the available voice commands, see Voice Command Index on page 113.*