 


Controls Near the Steering Wheel

The two levers on the steering column contain controls for driving features you use most often. The left lever controls the turn signals, headlights, and high beams. The right lever controls the windshield washers and wipers.

 
The tilt adjustment lever on the underside of the steering column allows you to tilt the steering wheel.

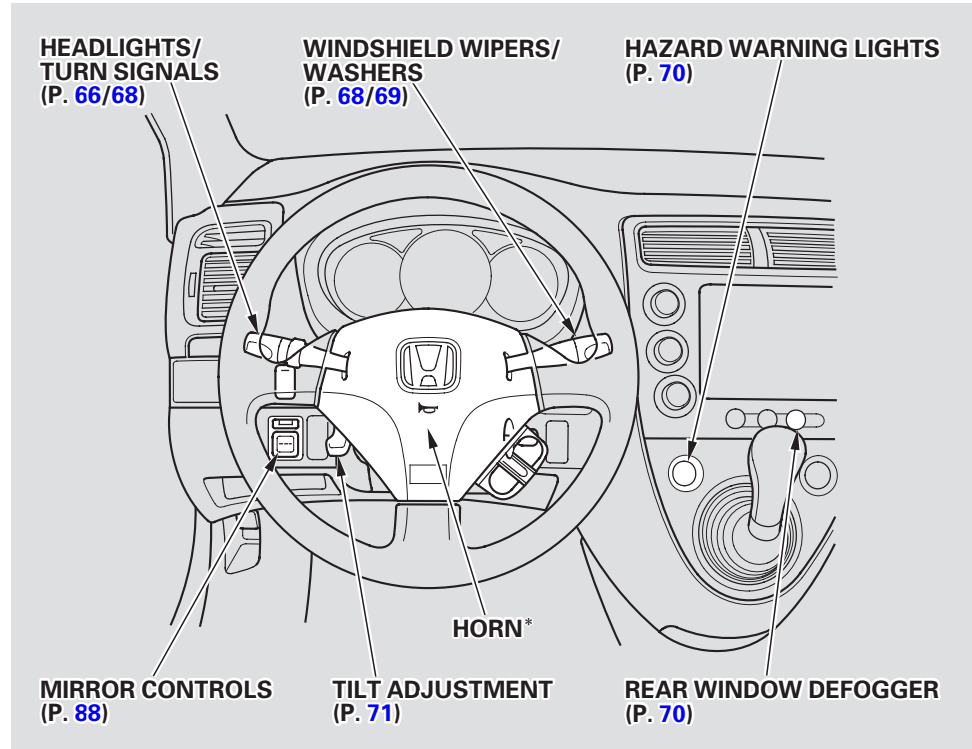

* To use the horn, press the pad around the “H” logo.


Controls Near the Steering Wheel

Headlights

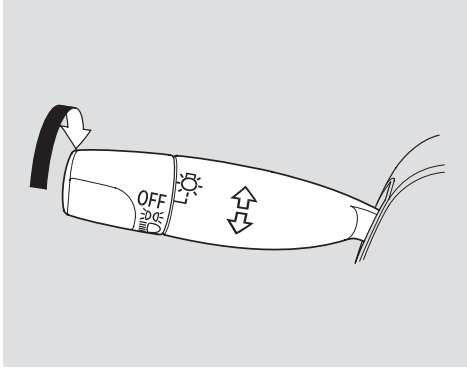


The rotating switch on the left lever controls the lights. Turning this switch to the “☀” position turns on the parking lights, taillights, instrument panel lights, side-marker lights, and rear license plate lights. Turning the switch to the “☀” position turns on the headlights.

 If you leave the lights on with the ignition switch in ACCESSORY (I) or LOCK (0), you will hear a reminder beeper when you open the driver’s door.

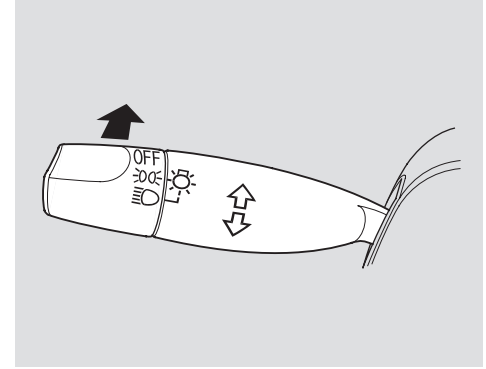

 To change from low beams to high beams, push the turn signal lever forward until you hear a click. The blue high beam indicator will light (see page 59). To return to low beams, pull the turn signal lever back.

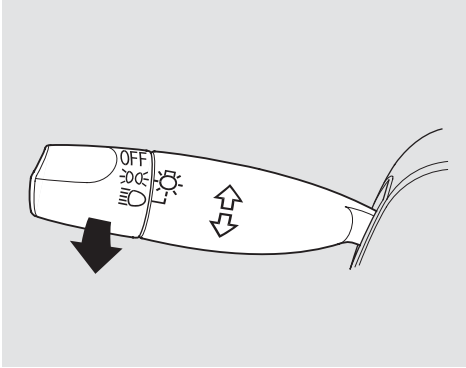


Daytime Running Lights (Canadian Models)

The daytime running lights come on automatically when the ignition switch is turned to the ON (II) position. They go out automatically when the light switch is ON.

To flash the high beams, pull the turn signal lever back lightly, then release it. The high beams will come on and go off.

The high beams will stay on for as long as you hold the lever back, no matter what position the headlight switch is in.

 
Instrument Panel Brightness

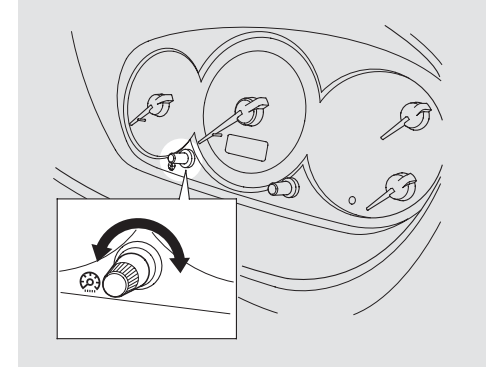

The knob on the instrument panel controls the brightness of the instrument panel lights. Turn the knob to adjust the brightness.

Controls Near the Steering Wheel

 
Turn Signals

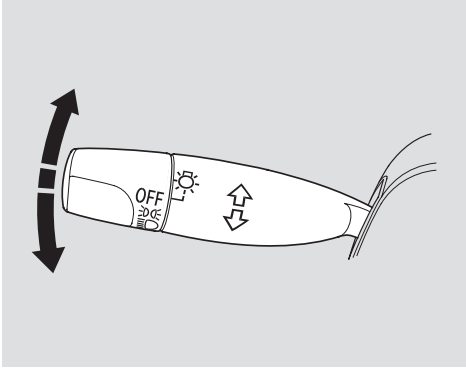

Signal a turn or lane change with this lever. Push down on the lever to signal a left turn, and up to signal a right turn. If you push it up or down all the way, the turn signal continues to blink even when you release the lever. It shuts off automatically as you complete the turn.

To signal a lane change, push lightly on the turn signal lever in the proper direction and hold it. The lever will return to the center position as soon as you release it.

 
Windshield Wipers

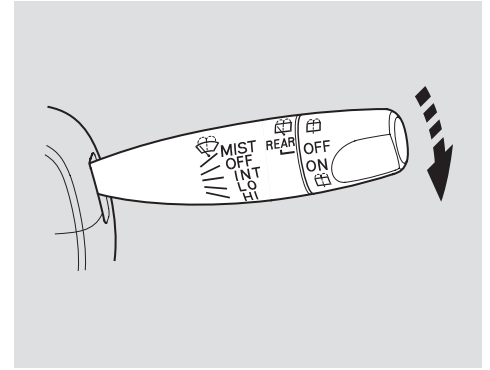

The right lever controls the windshield wipers and washers. The rotary switch at the end of the lever has five positions;


- MIST: mist
- OFF: off
- INT: intermittent
- LO: low speed
- HI: high speed

 Windshield Washers

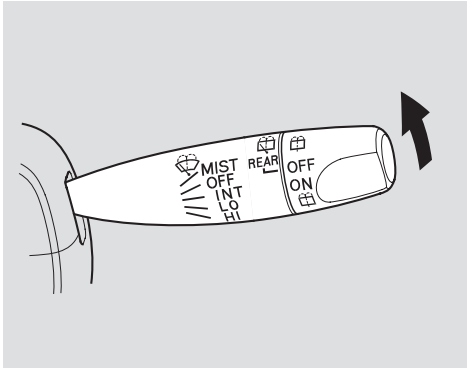

In intermittent, the wipers operate every few seconds. In low speed and high speed, the wipers run continuously.

 
To operate the wipers in mist mode, push the control lever up from the OFF position. The wipers run at high speed until you release the lever. This gives you a quick way to clear the windshield.

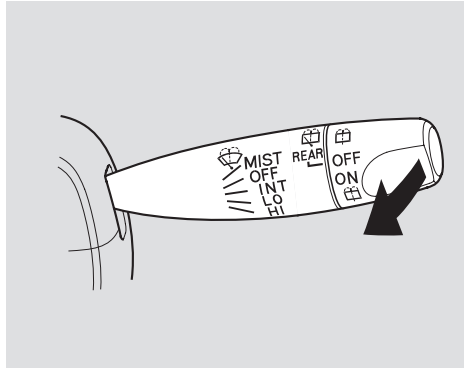

To clean the windshield, pull back on the wiper control lever. The washers spray until you release the lever.

The wipers run at low speed while you're pulling the lever, then complete one more sweep of the windshield after you release it.

 Rear Window Wiper and Washer

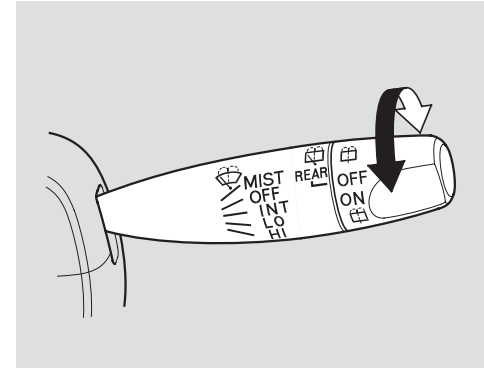


The rotating switch on the right lever controls the rear window wiper and washer.

To turn on the rear window wiper, rotate the switch to "ON". The wiper will complete two sweeps to clear the window, then operate every 7 seconds. When you turn the wiper switch to the "OFF" position or turn off the ignition switch, the wiper returns to its parked position.

Controls Near the Steering Wheel


To clean the rear window, rotate and hold the switch one position up from “ON”, or rotate and hold it one position down from “OFF”. The washer sprays while you hold the switch. The wiper operates while you hold the switch, then completes two more sweeps after you release it.

 Hazard Warning

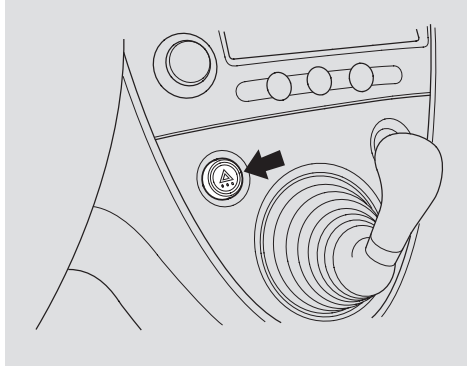

Push the red button to turn on the hazard warning lights (four-way flashers). This causes all four outside turn signals and both indicators in the instrument panel to flash. Use the hazard warning lights if you need to park in a dangerous area near heavy traffic, or if your car is disabled.

 Rear Window Defogger

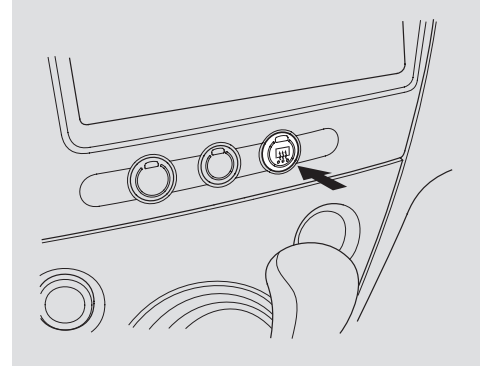

The rear window defogger will clear fog, frost, and thin ice from the window. Push the defogger button to turn it on and off. The light in the button lights to show the defogger is on. If you do not turn it off, the defogger will shut itself off after about 15 minutes. It also shuts off when you turn off the ignition. You have to turn it on again when you restart the car.

Make sure the rear window is clear and you have good visibility before starting to drive.

The defogger wires on the inside of the rear window can be accidentally damaged. When cleaning the glass, always wipe side to side.

Steering Wheel Adjustment

See page 17 for important safety information about how to properly position the steering wheel.

Make any steering wheel adjustment before you start driving.

 
⚠ WARNING

Adjusting the steering wheel position while driving may cause you to lose control of the car and be seriously injured in a crash.

Adjust the steering wheel only when the car is stopped.

To adjust the steering wheel upward or downward:

1. Push the lever under the steering column all the way down.

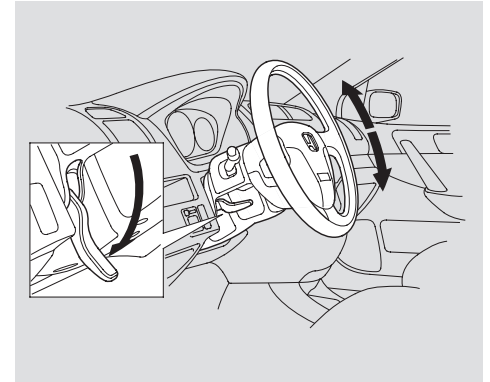

2. Move the steering wheel to the desired position, making sure the wheel points toward your chest, not toward your face. Make sure you can see the instrument panel gauges and the indicator lights.
3. Push the lever up to lock the steering wheel in that position.
4. Make sure you have securely locked the steering wheel in place by trying to move it up and down.