


Getting Started

System Controls

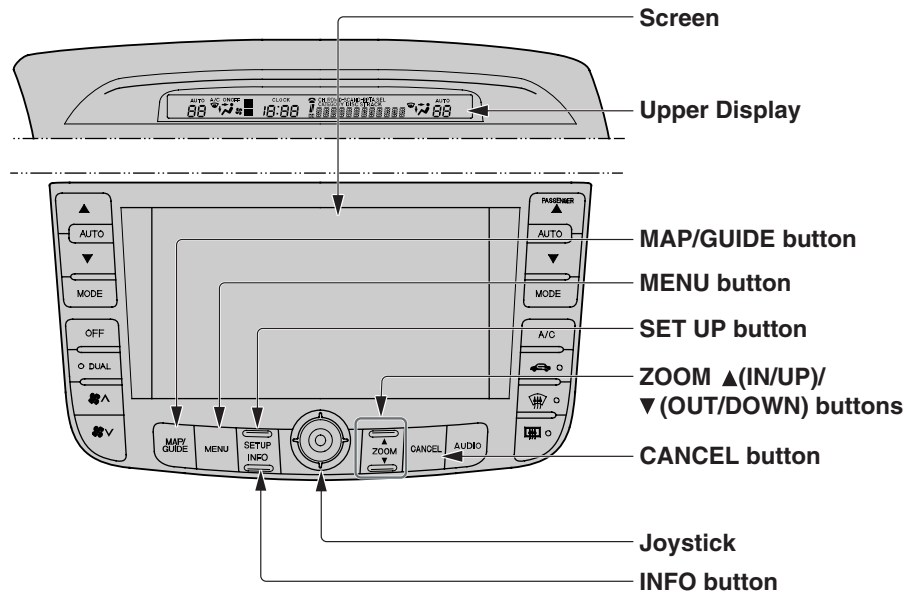

MAP/GUIDE button

Pressing this button switches the display between a map screen and the guidance or direction list screen.

MENU button

Pressing this button changes the display from the current instructions to the Entering a destination by screen or the Calculate route to screen.

SET UP button

Pressing this button displays the Set-up screens to change and update information in the system.

ZOOM ▲ (IN/UP)/ ▼ (OUT/DOWN) buttons

When you are displaying a map, these buttons allow you to change the scale. ZOOM IN reduces the scale, showing less area with greater detail. It is also used to scroll UP a page in a list. ZOOM OUT increases the scale, showing more area with less detail. It is also used to scroll DOWN a page in a list.

CANCEL button

Pressing this button cancels the current screen and returns to the previous screen display.

INFO button

Pressing this button displays the screen for selecting, Calendar, Calculator, or Voice Command Help.

Other buttons (Audio and Climate Control functions)

See the vehicle owner's manual for information on the rest of the buttons. Most of the audio and climate control functions may be controlled by voice.

Screen

All selections and instructions are displayed on the screen. In addition, the display is a "touch screen" — you can enter information into the system by touching the images (icons) on the screen with your finger.

For example, when you need to enter a street name, a keyboard will be displayed. You can "type in" the street name by touching the individual characters on the screen.

Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for eyeglasses or computer screens. Harsher chemicals may damage the screen.

Upper Display

Shows the radio band, frequency, volume, the climate control status, and the time.

Joystick


The joystick moves left, right, up, and down. Use the joystick to move the highlighting around the display, to scroll through a list, or to look around a displayed map. After making a selection in a menu or list, push in on the joystick to enter the selection into the system.

In almost all cases, you can enter a selection into the system by pushing in on the joystick, or by touching the appropriate image on the screen.


Getting Started

Voice Control Basics

Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions. You can also control the audio system and the climate control system. The voice control system uses the **TALK** and **BACK** buttons on the steering wheel and a microphone near the map light on the ceiling.

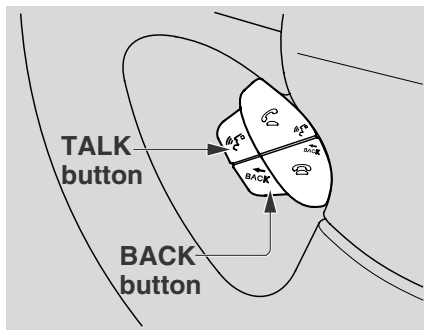

NOTE: While using the voice control system, all of the speakers are muted.

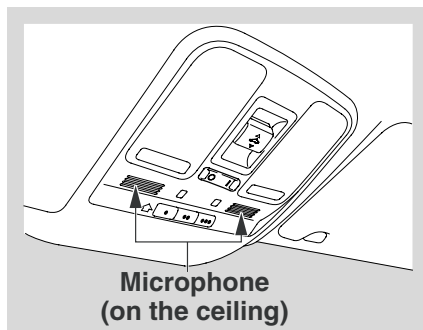

TALK button

This button activates the voice control system. Press it when you want to give a voice command. See the *Voice Command Index* on page 85 for a list of voice commands.

BACK button

This button has the same function as the **CANCEL** button. When you press it, the display returns to the previous screen. When the previous screen appears, the system replays the last prompt. This button is enabled for the navigation system commands only. However, it can be used to cancel an audio or climate control voice command up to one second after the command confirmation.

Using the Voice Control System

Most of the system's functions can be controlled by voice commands. The voice control system is activated with the TALK button. To control your navigation system by voice, press and release the TALK button, wait for the beep, then give a voice command. Once the microphone picks up your command, the system changes the display in response to the command and prompts you for the next command. Answer the prompts as required.

If you hear a prompt such as “Please use the touch screen to...” or “Please choose an area with the joystick.” the system is asking for input that cannot be performed using the voice control system.

If the system does not understand a command or you wait too long to give a command, it responds with “Pardon,” “Please repeat,” or “Would you say again?” If the system cannot perform a command or the command is not appropriate for the screen you are on, it sounds a beep.

Anytime you are not sure of what voice commands are available on a screen, you can always say “Help.” at any screen. The system then reads the list of commands to you.

When you speak a command, the system generally either repeats the command as a confirmation or asks you for further information. If you do not wish to hear this feedback, you can turn it off. See **Voice Feedback** setting on *Set-up Screen 3* on page 59.

Getting Started

Improving Voice Recognition

To achieve optimum voice recognition, the following guidelines should be followed:

***NOTE:** Make sure the correct screen is displayed for the voice command that you are using. See Voice Command Index on page 85.*

- Close the windows and the sunroof.
- Set the fan speed to low (1 or 2).
- Adjust the air flow from the dashboard vents so they do not blow against the microphone on the ceiling.
- After pressing the **TALK** button, wait for the beep, then give a voice command.
- Give a voice command in a clear, natural speaking voice without pausing between words.
- If the system cannot recognize your command, speak louder.

- If the microphone picks up voices other than yours, the system may not interpret your voice commands correctly.
- If you speak a command with something in your mouth, or your voice is either too high or too husky, the system may misinterpret your voice commands.

Selecting an Item (Button) on the Screen

On most screens, there are items that can be selected (like buttons with titles such as **OK** or **Return**). To select an item on any screen, do one of the following:

- Use the voice control system and say the name of the desired item. Every selectable item on the screen, except keyboard keys and some listed items, is recognized by the voice control system.
- Touch the desired item on the screen.
- Move the highlighting to the desired item with the joystick, then push in on the joystick.

***Tip:** If buttons are very dark colored, this means that they cannot be selected.*

Selecting an Item in a List

To scroll through a list, do one of the following:

- Use the joystick to scroll through the list item by item.
- Use the voice control system and say “*Next.*” or “*Previous.*” or use the triangles in the upper right corner of the screen or the **ZOOM** buttons to scroll through the list page by page.

If you cannot find the desired name, or have made an error, return to the previous screen by pressing the **CANCEL** or the **BACK** button.

To select the desired item in the list, do one of the following:

- Use the voice control system, and say the number of the desired item.
- Touch the item on the screen.
- Use the joystick to move the highlighting to the item, then push in on the joystick.