


Entering a Destination

By Personal Address

After you select **Personal Address** from the Enter destination by screen, the display changes to:

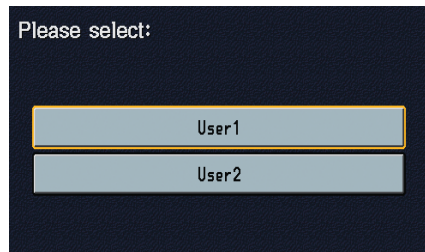

If the Personal Address PIN has been set on the **Set-up** screen, the system prompts you to enter your PIN after you select **User 1** or **User 2**. Enter your PIN, and select **Done**.

If the Personal Address PIN has not been set, the system displays the list after you select **User 1** or **User 2**.

The system then displays a list of places entered with **Personal Address** on the **Set-up** screen. See page 53 . You can sort the displayed addresses by **Name** or **Category**.



Scroll through the list to find your desired destination. After you select it, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 33).

NOTE: Destinations chosen from *Personal Address* do not show up in *Previous Destinations*.

By Go Home

Selecting **Go Home** from the Enter destination by screen takes you home or to a common place from your current location.

If a **Go HOME PIN** has been set, the system prompts you to enter your PIN. Enter your PIN, and select **Done**. The system will then display the **Calculate route** to screen (see *Driving to Your Destination* on page 33).

If a **Go HOME PIN** has not been set, the system displays the **Calculate route** to screen after you select **Go Home** (see *Driving to Your Destination* on page 33).

NOTE: To edit Home Address, see *Edit Personal Information: Home Address in System Set-up* on page 56.