 
 


## Multi-Information Display

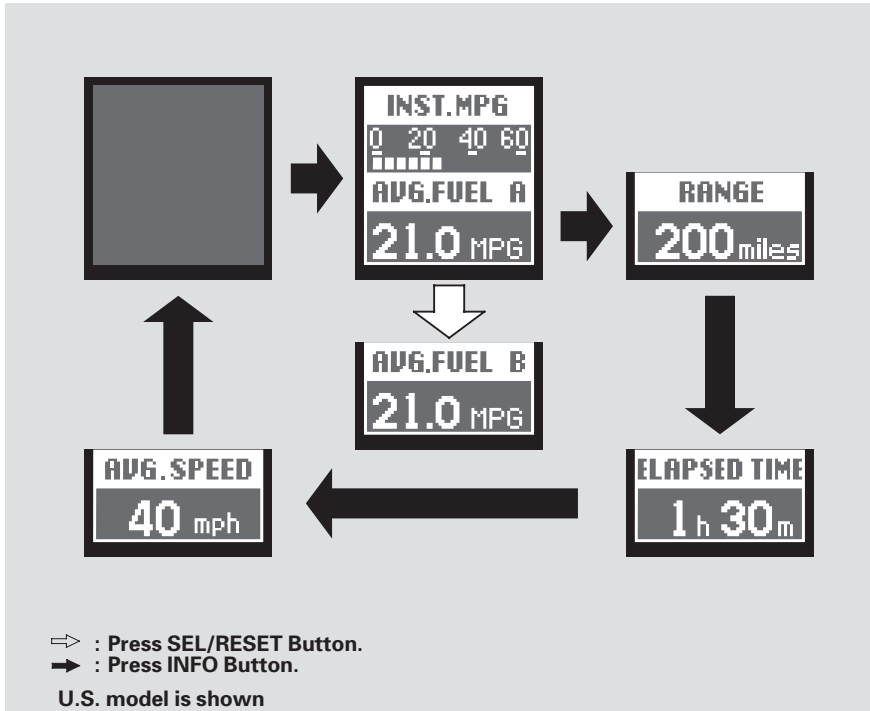 


- **RANGE:** The estimated distance you can travel on the fuel remaining in the tank. This distance is estimated from the fuel economy you received over the last several miles, so it will vary with changes in speed, traffic, etc.
- **ELAPSED TIME:** The time traveled since you last reset the trip computer. When you turn the ignition switch to the ON (II) position, ELAPSED TIME is reset.
- **AVG. SPEED:** The average speed you are traveling.

## Multi-Information Display

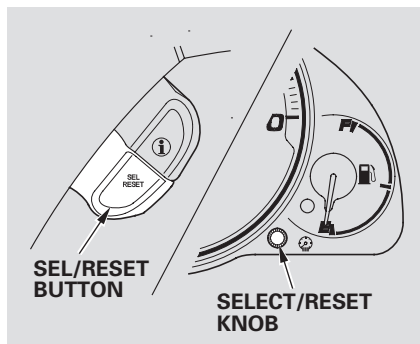

In the lower segment, each time you press the SEL/RESET button on the steering wheel, the display changes from “Trip A/Odometer” to “Trip A/ Outside Temperature” to “Trip B/ Outside Temperature” to “Engine Oil Life”, and then back to the “Trip A/Odometer” as shown in the next column.

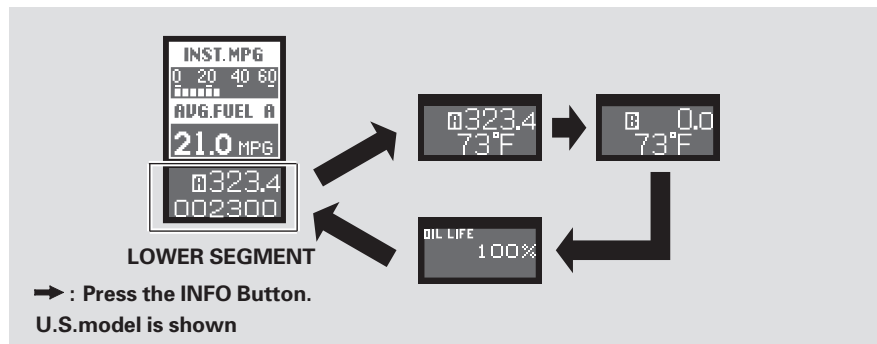

You can also change the display by pushing the Select/Reset knob in the instrument panel.

When you turn the ignition switch to the ON (II) position, what you last selected is displayed.


### Trip Meter

 While a trip meter is displayed, you can change the display between “TRIP A” and “TRIP B” by pressing the SEL/RESET button on the steering wheel, or the Select/Reset knob in the instrument panel.

To reset a trip meter, display it, and press and hold the SEL/RESET button or Select/Reset knob until the number resets to “0.0.” When you reset “Trip B”, “AVG. FUEL B” is also reset. If you reset “Trip A”, “AVG. FUEL A” and “AVG. SPEED” will be reset at the same time.

In the customizing mode, you can set “Trip A” and “AVG. FUEL A” to reset at the same time when you refuel your vehicle (see page 97).

### Outside Temperature

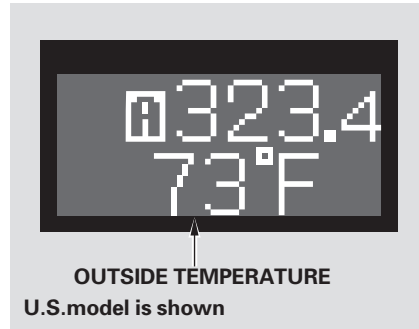

This shows the outside Fahrenheit temperature in U.S. models, and Centigrade temperature in Canadian models.


The temperature sensor is in the front bumper. The temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from surrounding traffic. This can cause an incorrect temperature reading when your speed is under 19 mph (30 km/h). When you start your trip, the sensor is not fully acclimatized, therefore it may take several minutes until the proper temperature is displayed.

In certain weather conditions, temperature readings near freezing (32°F, 0°C) could mean that ice is forming on the road surface.

You can adjust the outside temperature display (see page 95).


## Multi-Information Display
 
### Engine Oil Life

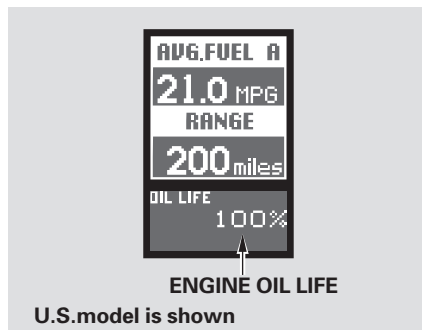

This shows the remaining life of the engine oil. It shows 100% after the engine oil is replaced and the display is reset. The engine oil life is calculated based on engine operating conditions and accumulated engine revolutions. For more information, see page [266](#).

### Maintenance Messages

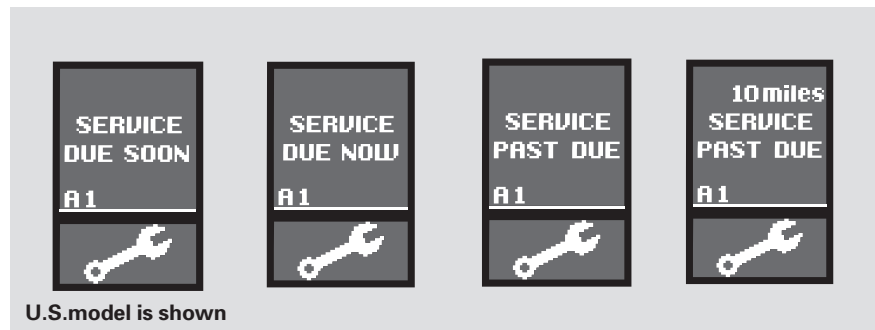 

When the engine oil life reaches 15 %, the display shows “SERVICE DUE SOON” and the code for the maintenance items to be performed.

When the engine oil life reaches 5 %, the display shows “SERVICE DUE NOW” along with the same maintenance items.

Have your dealer do the indicated maintenance as soon as you see this message, and have them reset the display after completing the service.

If you do not perform the indicated maintenance or do not reset the display, the message changes to “SERVICE PAST DUE” when the engine oil life becomes 0 %.


These messages appear in the multi-information display each time you turn the ignition switch to the ON (II) position.

For more information about Maintenance Messages, see “**Maintenance Minder**” on page [266](#).

Also refer to page [264](#) for important maintenance safety precautions.

### System Messages

 If there is a problem with your vehicle, for example, the engine oil level is low or a door is not fully closed, the multi-information display will show you the problem. It does this by interrupting the current message with one or more messages.

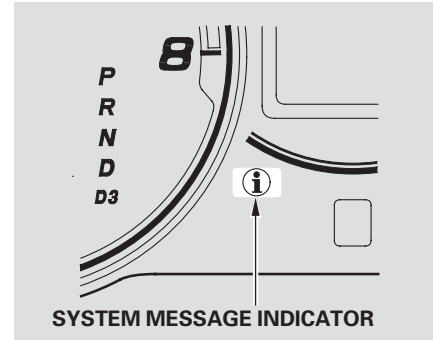

These messages also trigger the appropriate indicator(s) on the instrument panel and cause the system message indicator to come on. The system message indicator does not go off until the problem(s) are corrected.

























*CONTINUED*

## Multi-Information Display






When there are several warnings to be shown, the system switches the messages every 5 seconds. The message is shown until you push the INFO button.


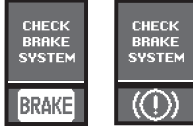


To see the message again, press the INFO button, 5 seconds after the display disappears.

Here is a list of messages shown in the multi-information display:

 	See page 78	
 	See page 78	
 	 	See page 78
	See page 79	
 	 	See page 79
	See page 79	
 	See page 80	
 	See page 80	
 	 	See page 81
 	See page 81	

# Multi-Information Display

	See page 81
	See page 82
	See page 82
	See page 82
	See page 83

	See page 83
	See page 83
	See page 84
	See page 121

CONTINUED