

Power Seat Adjustments

The Premium model has power adjustments for both front seats.

The two power seat adjustment switches are on the outside edge of the seat bottom. The long horizontal switch adjusts the seat bottom in several directions. The short vertical switch adjusts the seat-back angle.

You can adjust the seats with the ignition switch in any position. Adjust the seat before you start driving.

Driver's Seat Adjustment


Push the horizontal switch forward or backward to adjust the distance to the steering wheel and pedals.



Pull up or push down on the front of the switch to move the seat bottom's front edge up or down. Pull up or push down on the rear of the switch to move the rear of the seat bottom up or down.



Pull the center of the horizontal switch up to raise the seat. Push it down to lower the seat.

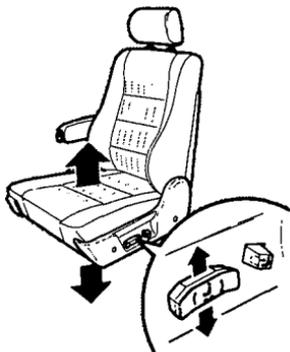

Adjust the seat-back angle by pushing the rear switch in the direction you want to move.



▲ WARNING

Reclining the seat back can decrease the protection you get from your seat belt in a crash.

You can slide under the seat belt and be seriously injured.

Adjust the seat-back to an upright position and sit well back in the seat.

Front Passenger's Seat Adjustment

The seat adjustment switches are on the right side of the seat bottom. Push the long horizontal switch forward or backward to move the seat bottom in that direction. Adjust the seat-back

angle by pushing the vertical switch in the direction you want to move.



Head Restraints


The front head restraints help protect you and your passenger from whiplash and other injuries. They are most effective when you adjust them so the top of the

restraint is even with the top of your ears.

The front head restraints adjust for tilt and height. You need both hands to adjust the restraint. Do not attempt to adjust it while driving. To adjust the tilt, pivot the head restraint to the desired position. To raise it, pull upward.



To lower the restraint, press the release button and push the restraint down.

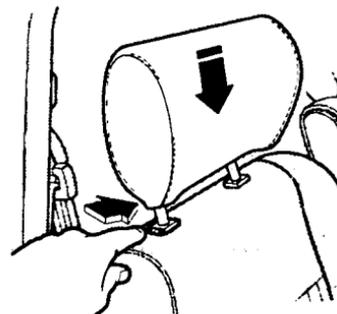

To remove a head restraint for cleaning or repair, pull it up as far as it will go. Press the release button and pull the restraint out of the seat-back.


⚠ WARNING

Driving your vehicle without head restraints can lead to serious injury to you and your passengers in a crash.

Make sure the head restraints are in place and adjusted properly before driving.

Armrest

To lower the armrest, push the lock knob up and pull the armrest down. Release the knob when the armrest is in the desired position.

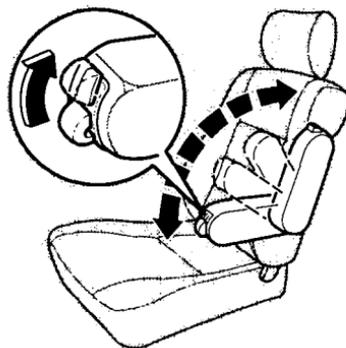


To raise the armrest, pull it up.

Rear Seat

The rear seat-backs can be reclined for more comfort, and the rear seat can be folded up in sections to provide more cargo area.

Reclining

Pull up on the seat-back release knob on top of the seat-back. Push the seat-back to the desired position and release the knob. Push and pull on the seat-back to make sure it is locked.

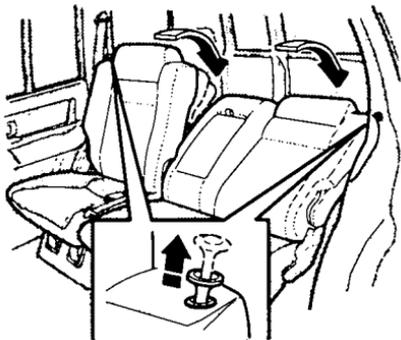

WARNING


Reclining the seat back can decrease the protection you get from your seat belt in a crash.

You can slide under the seat belt and be seriously injured.


Adjust the seat-back to an upright position and sit well back in the seat.

Folding


1. If you are folding up the rear seat on the passenger's side, roll up the lap belt and insert it in the seat belt holder.

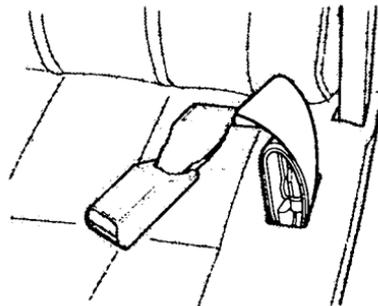


2. Push the headrests down to their lowest position.

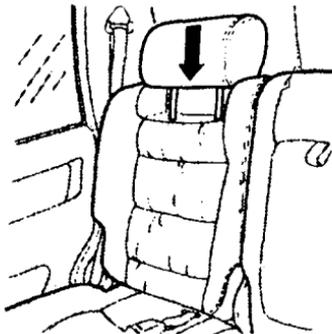


3. Remove the cover on the back of the center console. Pull out the straps.

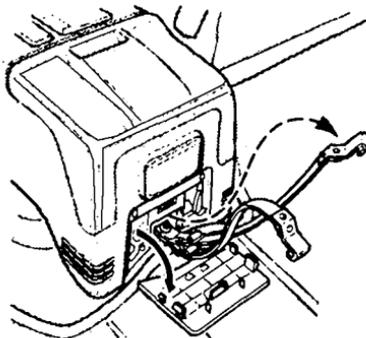


4. Pull up the seat-back release knob and fold the seat-back forward.

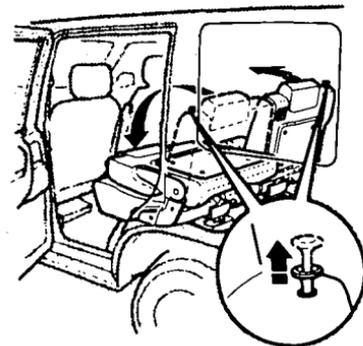


5. Push the seat release lever down to release the seat. Pivot the seat forward.

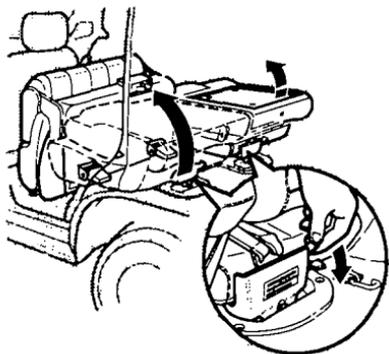

6. The tail and the main part of the strap are held together with Velcro. Pull them apart, then lengthen the strap by feeding it through the loop in the center console.

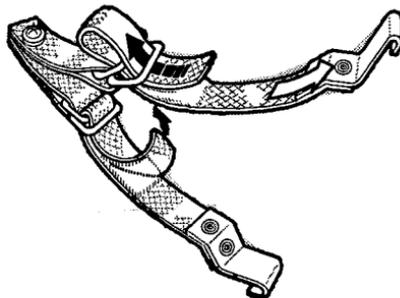

7. Hook the strap to the bar in the folded seat. Pull up on the tail of the strap to remove the slack.

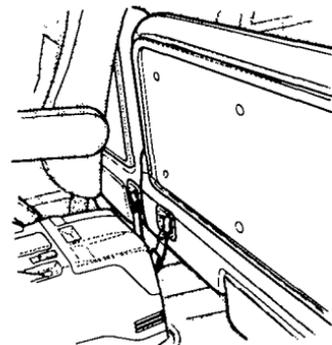

Never let passengers ride in the cargo area or on top of the folded-down seat. Carry passengers in the rear only when they are sitting on the locked, upright seat and properly restrained by seat belts.

Unfolding

1. Unhook the strap from the seat.
2. Pivot the seat backward and push it down into the lock. Make sure it is securely locked to the floor by trying to pull it up.
3. Pull the seat-back release knob, then pivot the seat-back up. Make sure the seat-back is locked in position.

4. Fold up the straps and replace the cover on the rear of the center console.

