

MDX

DISCLOSURES

■ Devices That Emit Radio Waves

The following products and systems on your vehicle emit radio waves when in operation:

- AcuraLink®*
- Audio system
- Blind Spot Information system*
- Bluetooth® Audio
- Bluetooth® HandsFreeLink®
- Collision Mitigation Braking System™
- HomeLink® Universal Transceiver
- Immobilizer system
- Remote transmitter
- Remote Engine Start with Vehicle Feedback*
- Keyless Access System
- Tire Pressure Monitoring System

Each of the above complies with the appropriate requirements or the required standards of FCC (Federal Communications Commission) and Industry Canada, described below:

As required by the FCC:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

As required by Industry Canada:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

■ Disclaimer

The information and data contained herein are believed to be accurate and reliable. American Honda Motor Co., Inc. makes no warranty of any kind and accepts no responsibility for the results obtained through application of this information.

■ Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit www.acuralink.com/vehicle-data-choices.

■ Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential. Some diagnostic and maintenance information is uploaded to Acura upon vehicle start up.

■ Event Data Recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. **The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:**

- **How various systems in your vehicle were operating;**
- **Whether or not the driver and passenger safety belts were buckled/fastened;**
- **How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,**
- **How fast the vehicle was traveling.**

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement that have the special equipment can read the information if they have access to the vehicle or the EDR.

The data belong to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

■ License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in this vehicle's Owner's Manual and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out of the arbitration provisions within 30 days of your initial use of the Software by sending a signed, written notice to Acura Client Relations, Mail Stop 100-5E-8F, 1919 Torrance Blvd., Torrance, CA 90501-2746.

INTRODUCTION

This Owner's Guide is intended to help you quickly get acquainted with your **2018 Acura MDX**. It provides basic information and instructions on technology and convenience features, as well as emergency procedures and how to get assistance.

This guide is for vehicles sold in the United States and Canada. It covers all MDX models, so you may find descriptions of features and equipment that are not in your vehicle. Images throughout this guide are from U.S. vehicles and represent features and equipment that are available on some, but not all, models.

This guide is not intended to be a substitute for the Owner's Manual at owners.acura.com. The Warranty Information CD enclosed in your glove box kit includes the vehicle and tire warranties in electronic format. This information can be viewed on a computer (PC or Mac platform) and saved or printed for your reference. You can also visit owners.acura.com to view the complete and most current information

If you are the first registered owner of your vehicle, you may request a complimentary printed copy of the Owner's Manual, Navigation Manual, or Vehicle Warranty up to six months after vehicle purchase. To request a copy, visit *owners.acura.com* and create or log in to your account.

American Honda Motor Co., Inc., strives to be proactive in protecting our environment and natural resources. By using electronic delivery for a considerable portion of the information typically found in a vehicle owner's manual, we are further reducing our impact on the environment.

Acura Total Luxury Care Roadside Assistance

Your Acura TLC Roadside Assistance representative is here to help you 24 hours a day, 7 days a week. Under your 4-year/50,000-mile (80,000-km) warranty, the following benefits are available:

- - Towing services — full cost of towing to the closest Acura dealer
- - Roadside assistance — jump starting, fuel delivery, lockout, and flat tire
- - Trip planning — detailed trip routing, emergency services, and more

Call (800) 594-8500 (U.S.) or (800) 565-7587 (Canada)

Acura Client Relations

Your authorized Acura dealer should be able to answer any questions you have about your vehicle. However, if you are dissatisfied with the information you receive, you can call Acura Client Relations (see page 121).

Call (800) 382-2238 (U.S.) or (888) 922-8729 (Canada)

TABLE OF CONTENTS


VISUAL INDEX	1	AUDIO AND CONNECTIVITY	56
Steering Wheel and Nearby Controls	1	Basic Audio Operation	56
Dashboard and Ceiling Controls.....	2	FM/AM Radio.....	59
SAFETY INFORMATION	3	SiriusXM® Radio.....	60
Important Safety Information.....	3	Compact Disc (CD).....	61
Seat Belts.....	5	USB Flash Drive	62
Airbags.....	9	iPod®	63
Child Safety.....	15	Bluetooth® Audio.....	64
Safety Label Locations.....	24	Hard Disc Drive (HDD) Audio.....	65
Reporting Safety Defects.....	25	Pandora®* (U.S. models).....	66
INSTRUMENT PANEL	26	Siri™ Eyes Free	67
Malfunction Indicators.....	26	Apple CarPlay™	68
Condition Indicators.....	28	Android Auto™	69
On/Off Indicators	29	Rear Entertainment System (RES)*	70
Multi-Information Display	30	Basic HFL Operation.....	74
VEHICLE CONTROLS	31	Pairing a Phone.....	76
Using the Remote Transmitter	31	Making a Call.....	77
Keyless Access System.....	32	SMS Text Messaging and E-Mail.....	80
Power Tailgate Operation.....	33	ACURALINK®*	81
Door Operation from Inside the Vehicle.....	34	AcuraLink Messages.....	81
Power Window Operation.....	35	Subscription Features.....	82
Interior and Exterior Lights	36	NAVIGATION*	83
Auto High-Beam System.....	37	Basic Navigation Operation.....	83
One-Touch Turn Signal.....	39	Entering a Destination	86
Wiper Operation	40	Routing.....	88
Adjusting the Seats.....	42		
Adjusting the Mirrors	44		
Adjusting the Steering Wheel.....	45		
Driving Position Memory System	46		
Rear Seats.....	47		
HomeLink® Universal Transceiver.....	49		
Climate Control System	50		
Seat Heaters or Ventilation*	53		
Customized Features.....	54		

DRIVING	90	MAINTENANCE	136
Before Driving.....	90	Safety Precautions.....	136
Maximum Load Limit.....	92	Maintenance Minder™.....	137
Towing a Trailer.....	94	Under the Hood.....	139
Remote Engine Start*.....	98	Engine Oil.....	140
Starting to Drive.....	99	Engine Coolant.....	142
Shifting.....	100	Window Washer Fluid.....	143
Auto Idle Stop*.....	102	Checking the Battery.....	143
Integrated Dynamics System.....	103	Changing Wiper Blades.....	144
Vehicle Stability Assist (VSA®).....	103	Tire Information.....	146
Braking.....	104	Tire Labeling.....	149
Adaptive Cruise Control (ACC) with Low Speed Follow.....	106	DOT Tire Quality Grading.....	150
Collision Mitigation Braking System™ (CMBS™).....	109	Testing of Readiness Codes.....	152
Lane Keeping Assist System (LKAS).....	111	SPECIFICATIONS	153
Road Departure Mitigation (RDM).....	112	CLIENT INFORMATION	154
Blind Spot Information (BSI)*.....	113	Frequently Asked Questions/ Troubleshooting.....	154
Parking Sensor System*.....	114	Contact Us.....	155
Multi-View Rear Camera*.....	115	Acura Total Luxury Care Roadside Assistance.....	156
Cross Traffic Monitor*.....	116	Warranty Coverages.....	156
Surround View Camera*.....	117	EPA Contact Information.....	156
Refueling.....	119	INDEX	159
Improving Fuel Economy and Reducing CO ₂ Emissions.....	120	DISCLOSURES	165
HANDLING THE UNEXPECTED	121		
Keyless Access Remote Battery Strength.....	121		
Jump Starting.....	121		
Emergency Engine Stop.....	122		
Overheating.....	123		
Tire Pressure Monitoring System (TPMS).....	124		
Handling a Flat Tire.....	126		
Using the Spare Tire*.....	126		
Tire Repair Kit*.....	130		
Fuse Locations.....	131		
Emergency Towing.....	135		

VISUAL INDEX

Quickly locate items in the vehicle's interior.

Steering Wheel and Nearby Controls

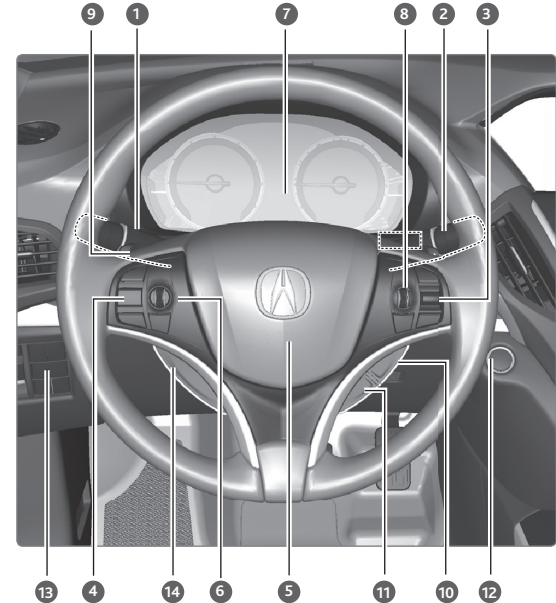


- | | |
|--|---|
| 1 Lights/turn signals/fog lights*
p. 36 | 12 ENGINE START/STOP button p. 99 |
| 2 Wipers/washers p. 40 | 13 Vehicle Stability Assist (VSA®) OFF
button p. 103 |
| 3 Adaptive Cruise Control (ACC) with
Low Speed Follow (LSF) buttons
p. 106 | Road Departure Mitigation (RDM)
button p. 112 |
| 4 Voice control*/Bluetooth®
HandsFreeLink® buttons p. 74 | Parking Sensor System Button* p. 114 |
| 5 Horn | Collision Mitigation Braking
System™ (CMBS™) OFF button p. 109 |
| 6 Audio controls p. 57 | Heated Windshield button* p. 52 |
| 7 Instrument panel p. 26 | Headlight Washer button* p. 36 |
| Multi-information display p. 30 | Electric Parking brake switch p. 104 |
| 8 Right selector wheel p. 30 | Automatic Brake Hold button p. 105 |
| TRIP button p. 30 | 14 Heated Steering Wheel button* p. 52 |
| 9 Paddle shifters p. 101 | |
| 10 Interval (ACC) button p. 106 | |
| 11 Lane Keeping Assist System
(LKAS) button p. 111 | |

*if equipped

*if equipped

Dashboard and Ceiling Controls

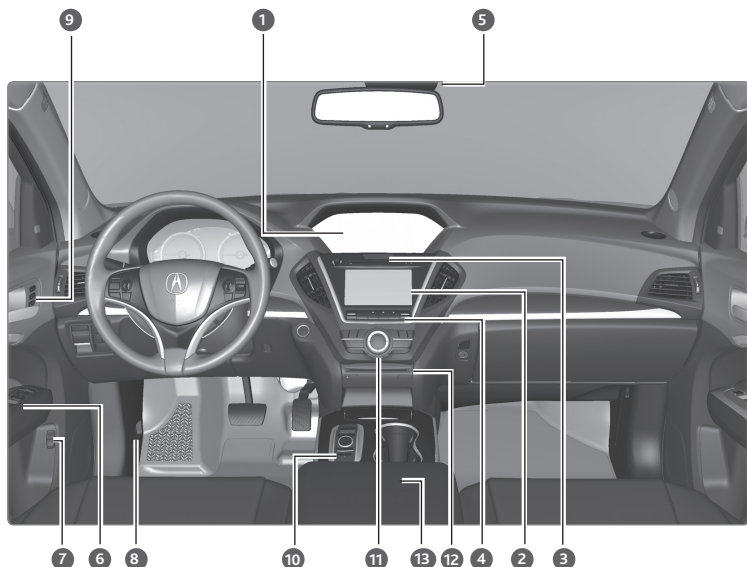

- 1 Color information display
- 2 On-Demand Multi-Use Display™ (ODMD) p. 58
- 3 Hazard warning button
- 4 Climate control buttons p. 50
- 5 Moonroof switch
Map lights p. 39
HomeLink® buttons p. 49
AcuraLink® buttons* p. 81
- 6 Power window switches p. 35
Door lock switches p. 34
Door mirror controls p. 44
Power folding mirror button* p. 45
- 7 Power tailgate button p. 33
Fuel fill door release button p. 119
- 8 Hood release handle p. 139
- 9 Driving Position Memory System buttons p. 46
- 10 Integrated Dynamics System (DYNAMIC MODE) button p. 103
Electronic Gear Selector p. 100
Auto Idle Stop OFF button* p. 102
- 11 Audio/phone/navigation/Surround View Camera* buttons p. 56, 74, 83, 119
- 12 Rear entertainment system* p. 70
- 13 (inside center console)
USB ports p. 57
Auxiliary input jack p. 57
Accessory power socket* / AC power outlet* p. 57

SAFETY INFORMATION

Your safety—and the safety of others—is very important, and operating this vehicle safely is an important responsibility. While we strive to help you make informed decisions about safety, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. Therefore, you must use your own good judgment.

Important Safety Information

This guide explains many of your vehicle's safety features and how to use them. Please read this information carefully. Following the instructions below will also help to keep you and your passengers safe.

■ Important Safety Precautions

- Always wear your seat belt.
- Secure all children in the proper restraint system.
- Be aware of airbag hazards.
- Don't drink and drive.
- Pay appropriate attention to the task of driving safely.
- Control your speed.
- Keep your vehicle in safe condition.

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

■ Important Handling Information

Your vehicle has a higher ground clearance than a passenger vehicle designed for use only on pavement. Higher ground clearance has many advantages for off-highway driving. It allows you to travel over bumps, obstacles, and rough terrain. It also provides good visibility so you can anticipate problems earlier.

These advantages come at some cost. Because your vehicle is taller and rides higher off the ground, it has a higher center of gravity, making it more susceptible to tipping or rollover if you make abrupt turns. Utility vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. As a reminder, make sure you and your passengers always wear seat belts.

**if equipped*

⚠️ WARNING

Improperly operating this vehicle on or off pavement can cause a crash or rollover in which you and your passengers can be seriously injured or killed.

- Follow all instructions and guidelines in this guide.
- Keep your speed low and don't drive faster than conditions permit.

■ Safety Messages

When you see the following messages throughout this guide, pay close attention.

⚠️ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠️ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠️ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

NOTICE

This information is intended to help you avoid damage to your vehicle, other property, or the environment.


■ Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle and follow the instructions set forth below, you will not accumulate dangerous levels of carbon monoxide gas in the vehicle interior.

Have the exhaust system inspected for leaks whenever:

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the tailgate open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the tailgate open, open all the windows and set the climate control system as shown below.

1. Select the fresh air mode.
2. Select the  mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

⚠️ WARNING

Carbon monoxide gas is toxic. Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas. Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

Seat Belts

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts and wear them properly.

■ Lap/Shoulder Seat Belts

All six or seven seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving, the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop, the retractor locks to restrain your body. The front passenger's, second-row, and third-row seat belts also have a lockable retractor for use with child seats.

The front seats are equipped with automatic seat belt tensioners to enhance safety. The tensioners automatically tighten the front seat belts during a moderate-to-severe front collision, sometimes even if the collision is not severe enough to inflate the front airbags or the driver's knee airbag.

■ Proper Use of Seat Belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduces the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.
- No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

⚠ WARNING

Not wearing a seat belt properly increases the chance of a serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

■ Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily. If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

⚠ WARNING



Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.

■ Fastening a Seat Belt


Adjust your seat to the proper position (see page 42) and then follow the below steps:

1. Pull the seat belt out slowly.
2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure. Make sure that the belt is not twisted or caught on anything. The front seat belts retract automatically.
3. Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.

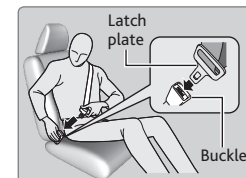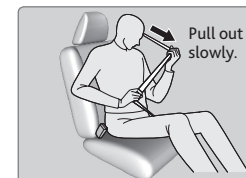

4. If necessary, pull up on the belt again to remove any slack, then make sure that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

To release the belt, push the red PRESS button then guide the belt by hand until it has retracted completely.

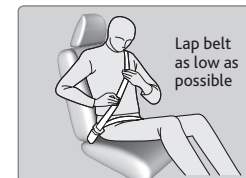**⚠ WARNING**


Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

■ Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.

1. Move the anchor up and down while holding the release button.
2. Position the anchor so that the belt rests across the center of your chest and over your shoulder.




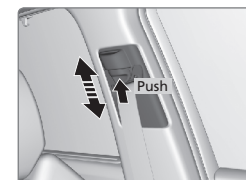


■ Seat Belt with Detachable Anchor

Models with second-row bench seat

1. Pull out the seat belt's small latch plate and the latch plate from each holding slot in the ceiling.
2. Line up the triangle marks on the small latch plate and anchor buckle. Make sure the seat belt is not twisted. Attach the belt to the anchor buckle.
3. Insert the latch plate into the buckle. Properly fasten the seat belt the same way you fasten the lap/shoulder seat belt.

To unlatch the detachable anchor, insert the latch plate into the slot on the side of the anchor buckle.

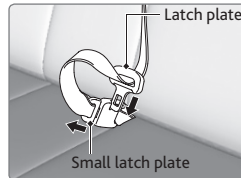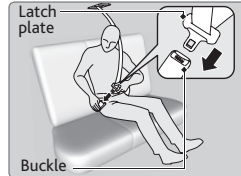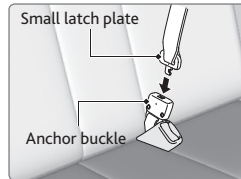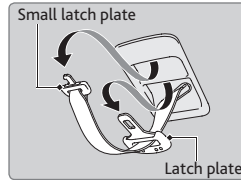

⚠ WARNING

Using the seat belt with the detachable anchor unlatched increases the chance of serious injury or death in a crash.

Before using the seat belt, make sure the detachable anchor is correctly latched.

Airbags

Your vehicle is equipped with several types of airbags: front airbags, driver's knee airbag, side airbags, and side curtain airbags.

■ Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger. They are housed in the center of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

■ Driver's Knee Airbag

The driver's knee SRS airbag inflates with the driver's front airbag in a moderate-to-severe frontal collision to help keep the driver in the proper position and to help maximize the benefit provided by the vehicle's other safety features.

■ Advanced Airbags

The airbags have advanced features to help reduce the likelihood of airbag related injuries to smaller occupants.

The driver's advanced airbag system includes a seat position sensor.



Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag.

The front passenger's advanced airbag system has weight sensors.

We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, if you do allow a child age 12 or under to ride in the front passenger's seat, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

For the advanced front airbags to work properly:

- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.
- Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors.

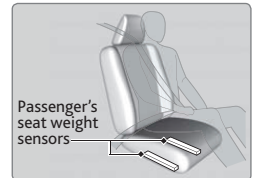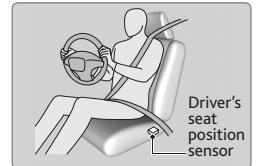

■ Side Airbags

The side airbags help protect the upper torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact. They are housed in the outside edge of the driver's and front passenger's seat-backs. Both are marked **SIDE AIRBAG**.

■ Side Curtain Airbags

The side curtain airbags help protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.



The side curtain airbags are designed to deploy in a rollover or moderate-to-severe side impact. If the SRS control unit senses that your vehicle is about to roll over, it immediately deploys both side curtain airbags and activates both front seat belt tensioners. If the impact is on the passenger's side, the passenger's side curtain airbag will inflate even if there are no occupants on that side of the vehicle.

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars, as they can interfere with the proper operation of the side curtain airbags.

When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may inflate in a moderate-to-severe angled frontal collision.

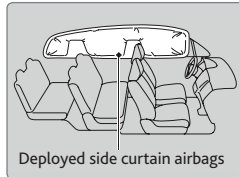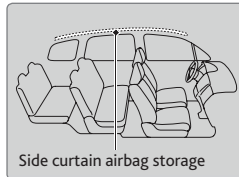

■ Important Facts About Your Airbags

Always wear your seat belt properly, and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Do not place hard or sharp objects between yourself and a front airbag.

Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front and driver's knee airbag covers.

Objects on the covers marked SRS AIRBAG could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Do not attach any objects to the side windows or roof pillars. They can interfere with the proper operation of the side curtain airbags.

Do not cover or replace the front seat-back covers. This can prevent your side airbags from properly deploying during a side impact.

⚠ WARNING

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.


Always keep the glove box closed while driving.

■ Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator comes on and a message appears on the multi-information display.

SRS (Supplemental Restraint System) Indicator

If the indicator comes on at any other time besides vehicle start-up, or does not come on at all, have the system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

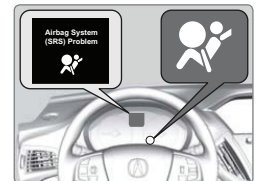

⚠ WARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Passenger Airbag Off Indicator

The indicator comes on to alert you that the front passenger's front airbag has been turned off. This occurs when the front passenger's weight sensors detect 65 lbs (29 kg) or less, the weight of an infant or small child on the seat.

Infants and small children should always ride properly restrained in a back seat.

Objects placed on the front passenger's seat can also cause the indicator to come on.

If the front passenger's seat is empty, the passenger's front airbag will not deploy and the indicator will not come on.

If the indicator comes on with no occupant or objects in the front passenger's seat, something may be interfering with the weight sensors, such as:


- An object hanging on the seat or in the seat-back pocket.
- A child seat or other object pressing against the rear of the seat-back.
- A rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is forced against an object on the seat or floor behind it.
- An object placed under the front passenger's seat.

If none of these conditions exist, have your vehicle checked by a dealer as soon as possible.

The passenger airbag off indicator may come on and go off repeatedly if the total weight on the seat is near the airbag cutoff threshold.



Airbag System Components

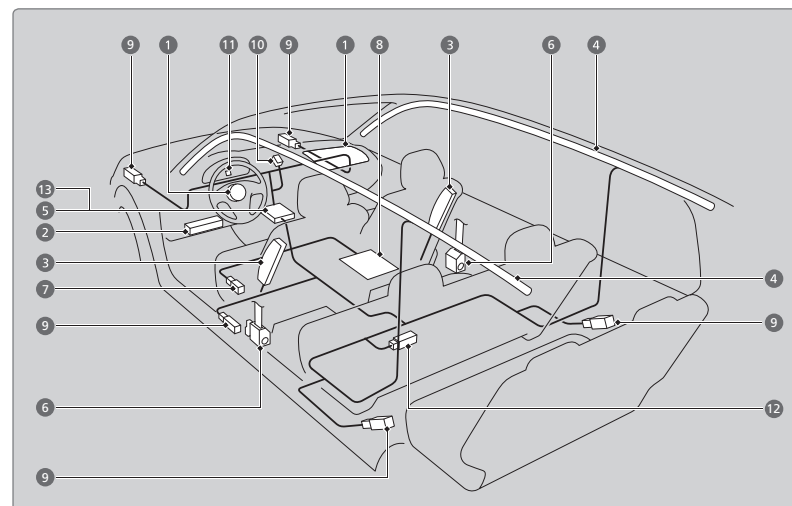

- 1 Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS AIRBAG**.
- 2 Driver's knee airbag. The knee airbag is stored under the steering column. It is marked **SRS AIRBAG**.
- 3 Two side airbags, one for the driver and one for the front passenger. The airbags are stored in the outer edges of the seatbacks. Both are marked **SIDE AIRBAG**.
- 4 Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked **SIDE CURTAIN AIRBAG**.
- 5 An electronic control unit that, when the vehicle is on, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners, and other vehicle information. During a crash event the unit can record such information.
- 6 Automatic front seat belt tensioners. The driver's and front passenger's seat belts incorporate sensors that detect whether or not they are fastened.
- 7 A driver's seat position sensor. If the seat is too far forward, the driver's front airbag will inflate with less force.
- 8 Weight sensors in the front passenger's seat. The front passenger's front airbag will be turned off if the weight on the seat is approximately 65 lbs (29 kg) or less (the weight of an infant or small child).
- 9 Impact sensors that can detect a moderate-to-severe front or side impact.

- 10 An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
- 11 An indicator on the instrument panel that alerts you to a possible problem with the airbag system or seat belt tensioners.
- 12 Safing sensor
- 13 A rollover sensor that can detect if your vehicle is about to roll over and signal the control unit to deploy both side curtain airbags.

■ Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

Do not remove or modify a front seat without first consulting a dealer

This would likely disable the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact an Acura dealer. For U.S. vehicles, call Acura Client Relations at (800) 382-2238. For Canadian vehicles, call Acura Client Services at (888) 922-8729.

Child Safety

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle collisions are the number one cause of death of children ages 12 and under.

The National Highway Traffic Safety Administration and Transport Canada recommend that all children ages 12 and under be properly restrained in a rear seat. Some states or provinces/territories have laws restricting where children may ride.

To reduce the number of child deaths and injuries, every state, Canadian province, and territory requires that infants and children be properly restrained when they ride in a vehicle.

■ Protecting Child Passengers—Important Considerations

- An inflating front or side airbag can injure or kill a child sitting in the front passenger's seat.
- A child in the front passenger's seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.
- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the lap belt portion of the lap/shoulder belt or the lower anchors of the LATCH system.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows, or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls, causing it to move unexpectedly.

WARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

⚠ WARNING

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.


Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

■ Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat manufacturer's weight or height limit for the seat, and the infant is at least one year old. Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Child seats must be placed and secured in a rear seating position. Rear-facing child seats should never be installed in a forward-facing position.

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position. Make sure that there is no contact between the child seat and the seat in front of it. It can also interfere with proper operation of the front passenger's advanced front airbag system. If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied. Or, you may wish to get a smaller rear-facing child seat.

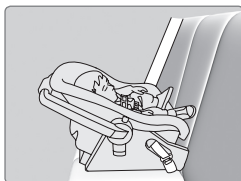**⚠ WARNING**

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.

Always place a rear-facing child seat in the rear seat, not the front.

■ Protecting Smaller Children

If a child is at least one year old and within the weight range indicated by the child seat manufacturer, the child should be properly restrained in a firmly secured forward-facing child seat until they exceed the weight and height limitations for the forward-facing child seat.

We strongly recommend placing a forward-facing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.

**⚠ WARNING**

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible, and properly restrain the child.

■ Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for Children). Some have a rigid-type connector, while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH-compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

Important considerations when selecting a child seat



Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213 or Canadian Motor Vehicle Safety Standard 213.



■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer-rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.

1. Locate the lower anchors under the marks.

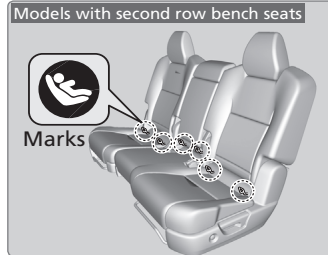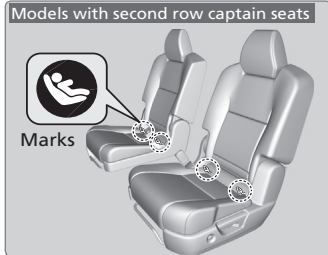


2. Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat. When installing the child seat, make sure that the lower anchors are not obstructed by the seat belt or any other object.

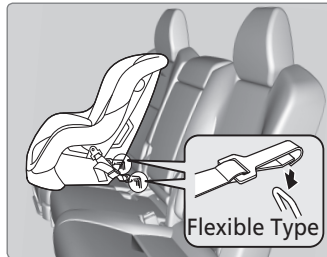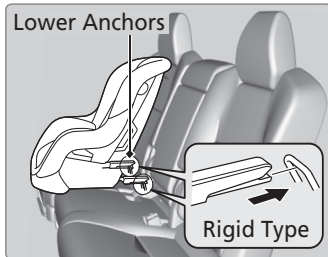


Second Row Captain Seats Straight Top Tether Type:

3. Put the outer head restraint to its uppermost position, then route the tether strap between the head restraint legs and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

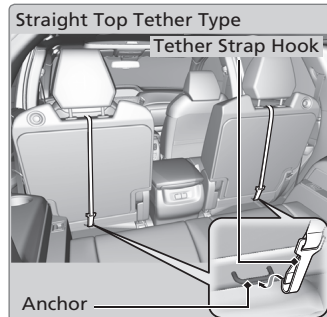

Other Top Tether Type:


3. Put the outer head restraint to its uppermost position, then route the tether strap outside the head restraint legs and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

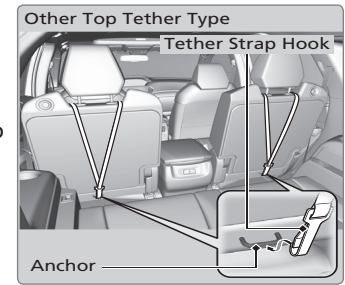

Second Row Bench Seats


Outer Position - Straight Top Tether Type:

3. Put the outer head restraint to its uppermost position, then route the tether strap between the head restraint legs and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

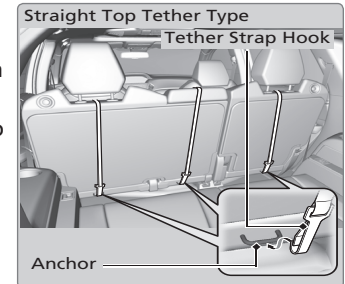

Outer Position - Other Top Tether Type:

3. Put the outer head restraint to its uppermost position, then route the tether strap outside the head restraint legs and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

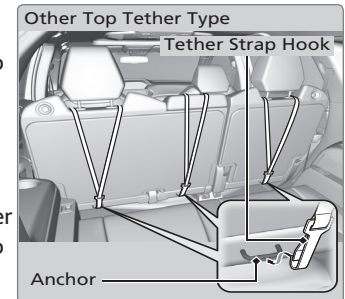

Center Position :

3. Put the center head restraint to its lowest position, then route the tether strap over the top of the head restraint and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

All Types and Positions


4. Tighten the tether strap as instructed by the child seat manufacturer.
5. Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
6. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

■ Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed with a lap/shoulder belt in any rear seat or, if absolutely necessary, the front passenger seat.

1. Place the child seat on the vehicle seat.
2. Route the seat belt through the child seat according to the seat manufacturer's instructions, and insert the latch plate into the buckle. Insert the latch plate fully until it clicks.
3. Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
4. Let the seat belt completely wind up into the retractor, then try to pull it out to make sure the retractor is locked. If you are able to pull the shoulder belt out, the lockable retractor is not activated. Pull the seat belt all the way out and repeat steps 3 – 4.
5. Grab the shoulder part of the seat belt near the buckle, and pull up to remove any slack from the lap part of the belt. When doing this, place your weight on the child seat and push it into the vehicle seat.
6. Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt; less than one inch of movement should occur near the seat belt.
7. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.



To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

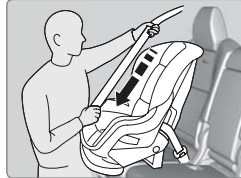

■ Adding Security with a Tether

A tether anchorage point is provided behind each second- and third-row seating position. A child seat that is installed with a seat belt and comes with a tether can use the tether for additional security.

Second-row seats

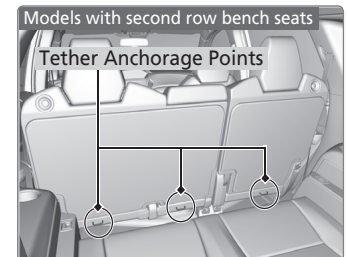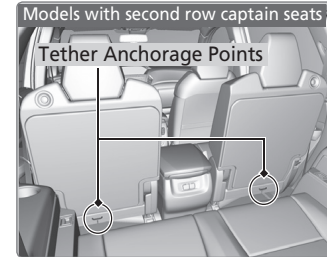

Outer Positions:



Straight Top Tether Type

1. Put the outer head restraint to its uppermost position, then route the tether strap between the head restraint legs and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

Outer Positions:

Other Top Tether Type

1. Put the outer head restraint to its uppermost position, then route the tether strap between the head restraint legs and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

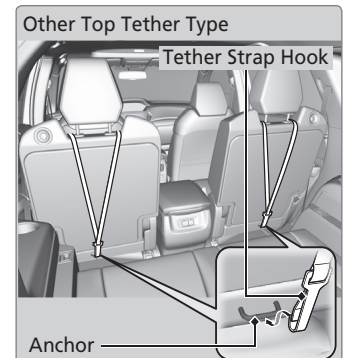
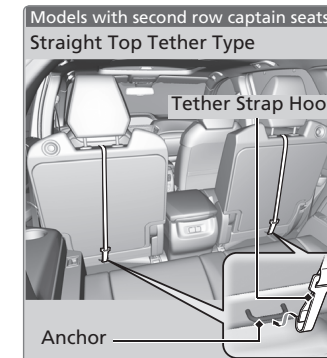


Center Position of the Second Row Bench Seat:


1. Put the center head restraint to its lowest position, then route the tether strap over the top of the head restraint and secure the tether strap hook to the anchor. Make sure the strap is not twisted.

All positions:

2. Tighten the tether strap as instructed by the child seat manufacturer.

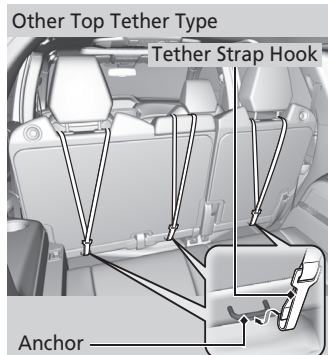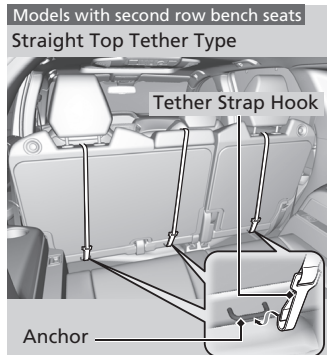


Third-row seats

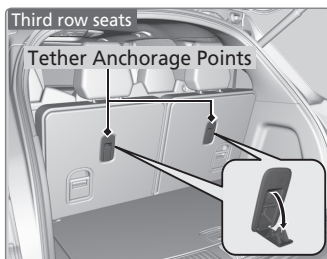

Straight Top Tether Type

1. Pull up the head restraint and push rearwards until it latches, then route the tether strap through the head restraint legs. Make sure the strap is not twisted.

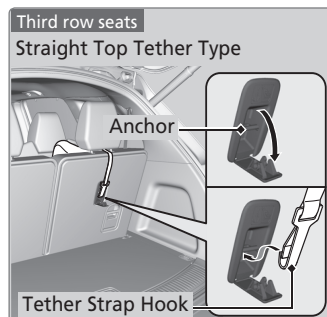


Other Top Tether Type

1. Pull up the head restraint and push it rearwards until it latches, then route the tether strap outside the head restraint legs. Make sure the strap is not twisted.

All Types:

2. Open the anchor cover.
3. Secure the tether strap hook to the anchor.
4. Tighten the tether strap as instructed by the child seat manufacturer.

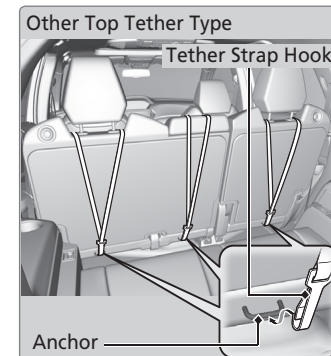

■ Protecting Larger Children

When a child is too big for a child seat, secure the child in a rear seat using the lap/shoulder seat belt.

Have the child sit upright and all the way back, then ensure the following:

- The child's knees bend comfortably over the edge of the seat.
- The shoulder belt crosses between the child's neck and arm.
- The lap part of the seat belt is as low as possible, touching the child's thighs.
- The child can stay seated for the whole trip.



If a lap/shoulder belt cannot be used properly, position the child in a booster seat in a rear seating position. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

Some U.S. states and Canadian provinces/territories require children to use a booster seat until they reach a given age or weight (e.g., 6 years or 60 lbs). Be sure to check current laws in the state or province/territory where you intend to drive.


⚠ WARNING

Allowing a child age 12 or under to sit in the front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Safety Label Locations

Safety labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

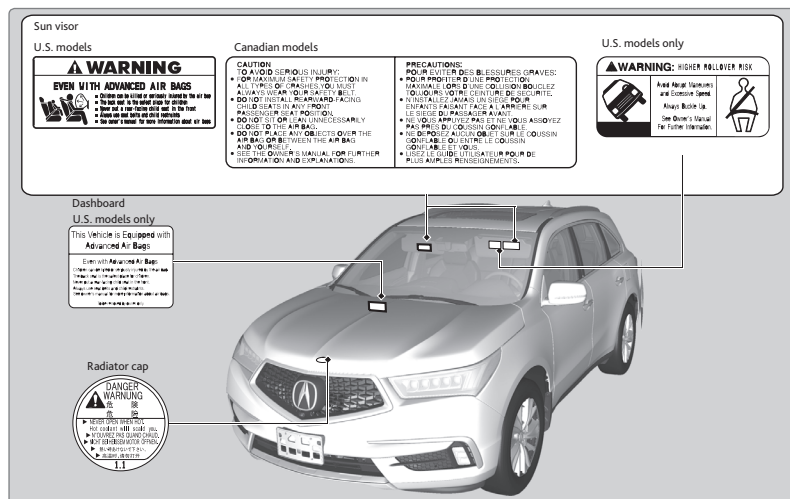

Reporting Safety Defects

In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada


If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Honda Canada, Inc., and you may also inform Transport Canada.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may lead to a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Honda Canada, Inc.

To contact Transport Canada's Defect Investigations and Recalls Division, you may call 1-800-333-0510. For more information on reporting safety defects or about motor vehicle safety, go to <http://www.tc.gc.ca/roadsafety>.

INSTRUMENT PANEL

Learn about the indicators and displays related to driving the vehicle.

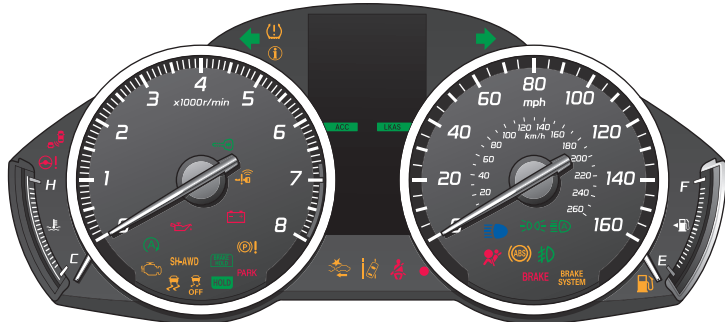

Malfunction Indicators

These are the most critical indicators. They briefly appear with each engine start and then go out. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

BRAKE Brake system



- Brake fluid is low.
- There is a malfunction in the brake system.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood, check the oil level (see page 140) and add oil if necessary. If the indicator does not turn off, have your vehicle repaired immediately.



Malfunction indicator lamp (check engine light)

- The emissions control system may have a problem.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place and wait for the engine to cool down.



Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



ABS (Anti-lock Brake System)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



Speed-Sensitive Electric Power Steering (EPS)

There is a problem with the electric power steering system. Stop in a safe place and restart the engine.



Tire Pressure Monitoring System (TPMS)

(Blinks and stays on) There is a problem with the tire pressure monitoring system, or a spare tire* is installed.



Keyless Access system

There is a problem with the keyless access system.



Vehicle Stability Assist (VSA®) system

There is a problem with the VSA system or the hill start assist system.



Brake system

There is a problem with one of the braking systems. Avoid high speeds and sudden braking. Your vehicle still has normal braking ability.



Super-Handling All-Wheel Drive™ (SH-AWD®)*

- There is a problem with the SH-AWD system.
- (Blinks) Stop in a safe place, change the gear to Park, and idle until the indicator goes off.



Blind Spot Information (BSI)*

There is a problem with the BSI system or the sensor is blocked.



Electric Parking Brake system

There is a problem with the system. Have your vehicle checked by a dealer.



Collision Mitigation Braking System™ (CMBS™)

There is a problem with the system, the temperature is too high, or the camera is blocked.



Lane Departure Warning (LDW)

Road Departure Mitigation (RDM)

There is a problem with the system, the temperature is too high, or the camera is blocked.



Auto idle stop*


There is a problem with the auto idle stop system.



Immobilizer/security system

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off, press and hold the brake pedal, and restart the vehicle. If it continues to blink, there may be a problem with the system. See your dealer. Canadian models: To reset the immobilizer system, follow the steps above after the battery has been disconnected then reconnected.

*if equipped

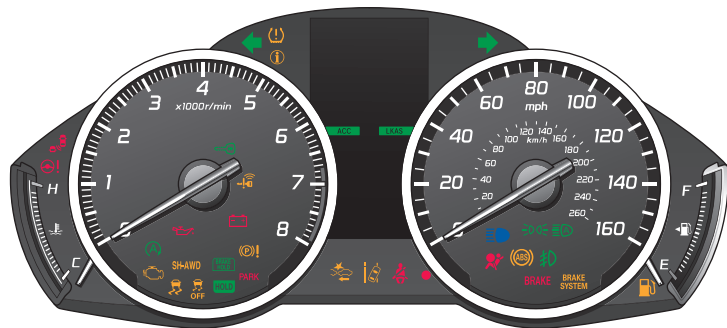

Condition Indicators

These indicators may require you to perform an action.



Parking brake

Release the parking brake before driving.



Seat belt reminder

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you and/or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.



Low fuel

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.



Low tire pressure

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. Blinks for a minute then remains lit: the spare tire* is fitted. Otherwise, there is a problem with the TPMS system. See your dealer.



System message

When a condition or malfunction indicator comes on, a message also appears on the multi-information display. Check the display for more information.



Immobilizer

Your remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

**if equipped*

On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



VSA engaged (blinks)



Turn signals/hazards on



High beams on



Exterior lights on



Fog lights* on



FCW/CMBST™ off



BSI* off



Auto high-beam on



Auto idle stop* on



Auto idle stop* off



Automatic brake hold on




Automatic brake hold activated


**if equipped*

Multi-Information Display


Consists of several displays that provide you with useful information.

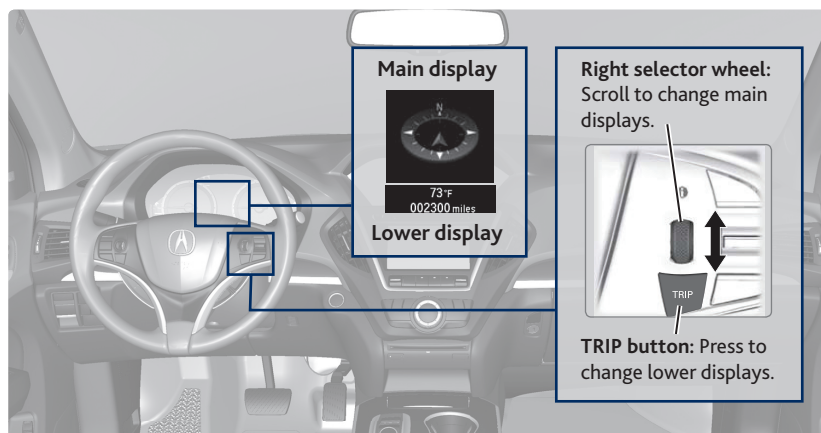

Main Displays

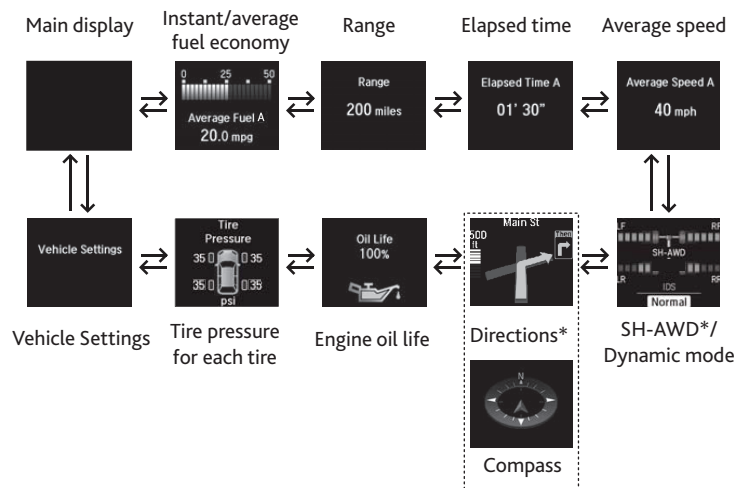

Lower Displays

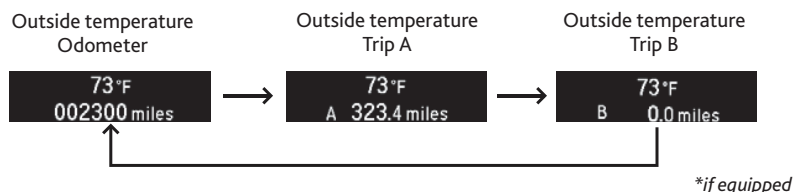

VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

Using the Remote Transmitter

Lock or unlock the doors and tailgate.

ENGINE HOLD button*:

After pressing the Lock button once, press and hold to remotely start the engine.

Unlock button:

Press once to unlock the driver's door. Press again to unlock all doors and the tailgate.

Power tailgate button:


Press and hold to unlock and open the power tailgate. Press again to close it.

LED indicators*: Check door lock or engine status (see page 98).

Lock button: Press to lock the doors and tailgate. Press again for verification.

Panic button: Press and hold to sound the alarm for 30 seconds. Press again to cancel.

Release knob (front or back of key): Slide the knob to release the built-in key for valet use.

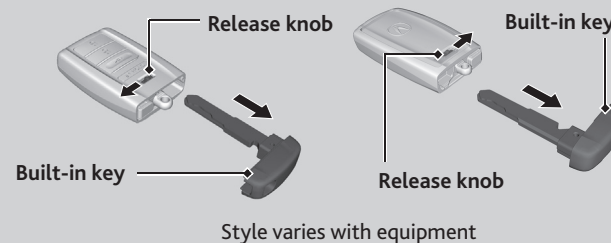

NOTICE

Leaving the keyless access remote in the vehicle can result in the theft or accidental movement of the vehicle. Always take the key with you whenever you leave the vehicle unattended.

**if equipped*

Keyless Access System


When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and tailgate without handling the transmitter.

■ Unlocking/Locking the Doors

To unlock: Grab the driver's door handle when the vehicle is off to unlock the driver's door. Grab the front passenger's (or rear*) door handle to unlock all doors and the tailgate.



To lock: Press the door lock button on any front (or rear*) door handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.

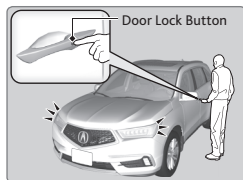


■ Walk Away Auto Lock

When you walk away from the vehicle while carrying the remote transmitter, the doors and trunk can automatically lock if the following conditions are met:

- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the hatch are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Exit the vehicle, close the door and stay near it. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

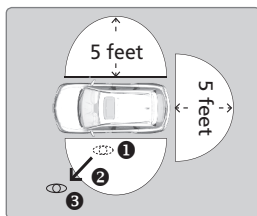

To turn on this feature, follow the steps below:


1. Press the SETTINGS button.
2. Select Vehicle Settings, then Keyless Access Setup, then Walk Away Auto Lock.
3. Select On.

**Models with rear door keyless access.*

■ Unlocking the Tailgate

Press and hold the tailgate release button under the tailgate handle to unlock and open the tailgate. The vehicle can be on or off.

If there is not enough clearance for the tailgate to fully open, press and hold the tailgate release button until you hear two beeps. The tailgate unlatches and you can open it manually.

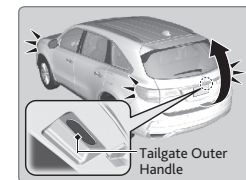

Power Tailgate Operation


Use these methods to operate the power tailgate.

■ Power Tailgate Release Button

The vehicle must be in Park (P).

Press and hold the power tailgate button on the inside of the driver's door to open the tailgate.

Press it again at any time to close it.

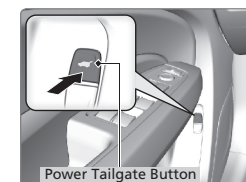

■ Power Tailgate Button (exterior)

Automatic operation

Press the tailgate release button. You will hear one beep and then the tailgate opens automatically.

Manual operation

Press and hold the tailgate release button until you hear three beeps. The tailgate unlatches and you can open it manually.

■ Power Tailgate Inner Button

Press the power tailgate inner button to automatically close the tailgate. Press it again at any time to reverse the tailgate direction.



⚠ WARNING

Closing or opening the power tailgate while anyone is in the path of the tailgate can cause serious injury.

Make sure everyone is clear before operating the tailgate.


Door Operation from Inside the Vehicle

Use these methods to lock or unlock and open or close the doors.

■ Using the Lock Tab

To unlock: Pull the lock tab rearward. When you unlock either front door using the lock tab, the specific door (driver's or passenger's) unlocks.


To lock: Push the lock tab forward. When you lock the door using the lock tab on the driver's door, all the other doors and tailgate lock at the same time.

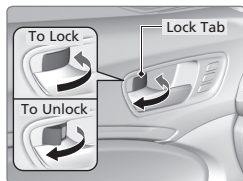

■ Using the Master Door Lock Switch

To unlock: Press the unlock side of the switch to unlock all doors and the tailgate.


To lock: Press the lock side of the switch to lock all doors and the tailgate.

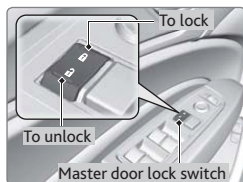

■ Using the Front Door Inner Handle

Pull the front door inner handle. The door unlocks and opens in one motion. Unlocking and opening the driver's door from the inner handle unlocks all other doors.

Do not pull a front door inner handle while the vehicle is moving.

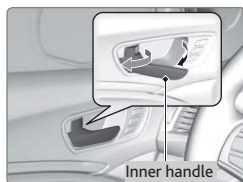


■ Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

Slide the lever in the rear door to the lock position and close the door.

Open the door using the outer door handle.

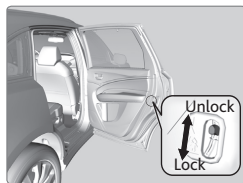

Power Window Operation

The power windows can be opened and closed by using the switches on the doors when the vehicle is on. The switches on the driver's side can be used to open and close all the windows.

■ Automatic Operation

To open: Push the switch down firmly.

To close: Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch again briefly.



■ Manual Operation

To open: Push the switch down lightly.

To close: Pull the switch up lightly.

Release the switch when the windows reach the desired position.



■ Power Window Lock

Push in the power window lock button so only the driver's window can be operated.

■ Remote Operation

To open the windows and moonroof: Press and release the unlock button, then press and hold it down.



⚠ WARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.




Interior and Exterior Lights


Operate interior and exterior lights when the vehicle is on or off.

■ Exterior Lights

Rotate the switch on the headlight lever to operate the exterior lights. Push the lever forward to turn on the high beams. Return the lever to its original position for low beams.

- OFF All exterior lights are off.
- AUTO Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the vehicle is on. Headlights automatically come on after the wipers are engaged for a certain time.

-  Turn on exterior lights except headlights.
-  Turn on all exterior lights including headlights.
-  Turn on fog lights.*

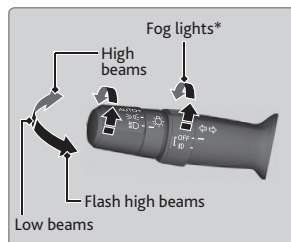


■ Brightness Control

Adjust instrument panel brightness when the vehicle is on.

To brighten: Press the + button.

To dim: Press the - button.


A beep sounds when the brightness reaches minimum or maximum.

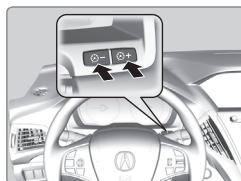

■ Headlight Washers*

Turn the headlights on. Press the headlight washer button to operate the washers.

The headlight washers also operate when you first turn on the windshield wipers.

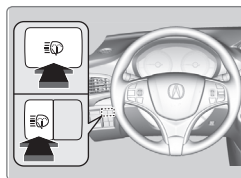


*if equipped

Auto High-Beam System

Automatically changes the low beam headlights to high beam headlights when necessary.

■ How It Works

When you are driving at night above 35 mph (56 km/h) and the headlight lever is in the low beam position with the switch rotated to AUTO, the system changes between low and high beams depending on the surrounding conditions.

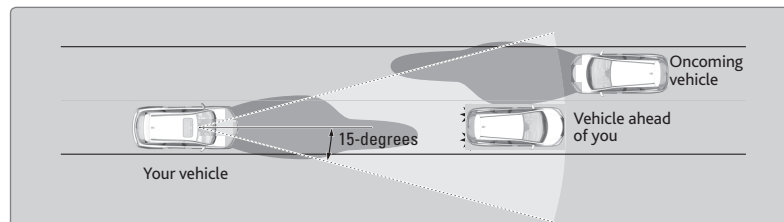

If a vehicle is detected ahead of you, the headlights stay in low beams. If the system does not detect any vehicles ahead of you, the headlights change to high beams.

Certain conditions, such as weather and brightness of other vehicles' lights, can affect system operation.

■ Turning the System On or Off


Make sure the headlight lever is in the low beam position with the switch rotated to the AUTO position. The auto high-beam system indicator appears when the system is on.

The system is canceled temporarily when you drive at speeds below 25 mph (40 km/h) for extended periods of time, the vehicle speed is below 15 mph (24 km/h), or the windshield wipers run at high speed for more than a few seconds.

To disable the system: Pull and hold the headlight lever toward you until the indicator flashes twice.

To re-enable the system: Pull and hold the headlight lever toward you until the indicator flashes once.

To manually cancel the system temporarily: You can cancel the operation when you manually change the headlights to high beams. Push the lever forward until you hear a click or lightly pull the lever towards you to flash high beams. The auto high-beam system indicator goes off. If you want the auto high-beam system operation at once, pull the lever towards you

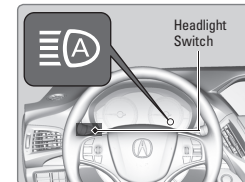

Enabling high sensitivity: Pull the light switch lever towards you and hold it for 2 minutes. The auto high-beam indicator in the meter will blink three times. When the power mode is set to VEHICLE OFF (LOCK), sensitivity is returned to normal.

If you want the auto high-beam system operation to resume at once, pull the lever towards you.

If you find the timing of beam changes inconvenient for driving, change the beams manually.

For the system to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windshield around the camera clean. When cleaning the windshield, be careful not to apply windshield cleanser to the camera lens.
- Do not attach an object, sticker, or film in the area around the camera.
- Do not touch the camera lens.

If the camera receives a strong impact or repairs of the area near the camera are required, consult a dealer.

If the Some Driver Assist Systems Cannot Operate:

Clean Front Windshield message appears, park your vehicle in a safe place. Wipe away debris blocking the windshield, then start driving again.

If the message remains on even after driving for a while with the clean windshield, have your vehicle checked by a dealer.



■ Interior Lights


Change the interior light settings using the switches on the ceiling.

Front lights


On position: Interior lights remain on.

Door-activated position: Interior lights come on when any of the doors are opened, the driver's door is unlocked, or the vehicle is turned off.

Off position: Interior lights remain off.

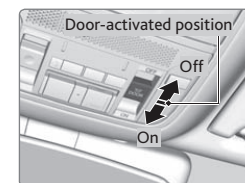

Press the map light button to turn lights on or off.

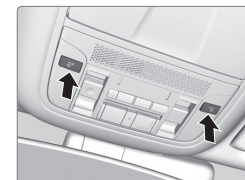


Cargo lights

Located on the inside of the tailgate door.

On position: The light comes on when the tailgate is open and goes off when it is closed.

Off position: The light stays off.

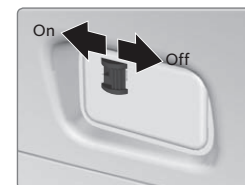


One-Touch Turn Signal

Use this quick and convenient method to signal a lane change.


Lightly push the turn signal lever up or down for a three-blink sequence.

For a continuous signal, push the lever up or down until it locks into place.

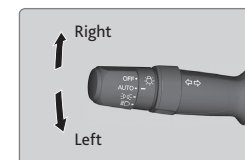

Wiper Operation

The windshield wipers and washers can be used when the vehicle is on. Move the wiper lever up or down to the desired position.

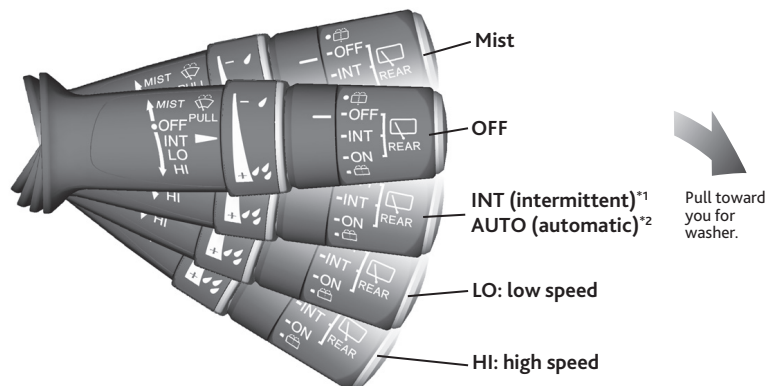


Headlight-Wiper Integration

When the headlights are in the AUTO position, they automatically turn on when the front wipers operate several times within a certain interval. The headlights turn off shortly after the wipers are turned off or if there is enough ambient light.

Intermittent Wipers*

When you move the lever to the INT position, the wipers operate based on the delay adjustment.

Rotate the adjustment ring to adjust the wiper delay.

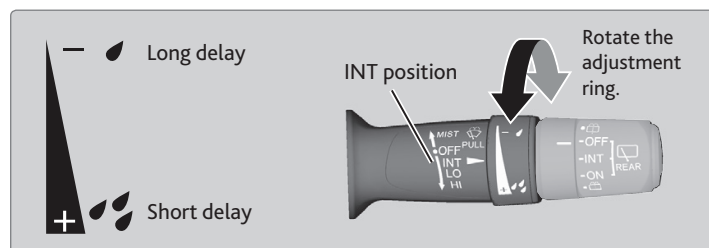


Automatic Intermittent Wipers*

When you move the lever to the AUTO position while driving in rainy weather, the wipers operate based on the amount of detected rainfall.

Put the lever in the AUTO position only when driving in rainy weather. Return the lever to the OFF position when rain stops.

Rotate the adjustment ring to adjust the rainfall sensor sensitivity. Return the lever to the OFF position when rain stops.

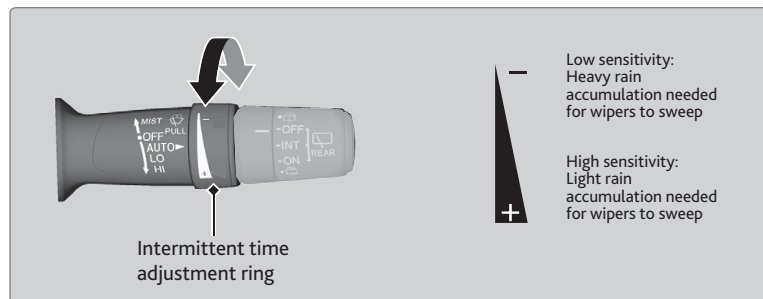


NOTICE

Always ensure the wiper lever is in the OFF position before cleaning the windshield or entering a car wash to prevent damage to the wiper system.

Rear Wiper

Rotate the end of the wiper lever to operate the rear wiper.

When you change the gear to Reverse (R) and the front wipers are activated, the rear wiper activates even if the switch is off.

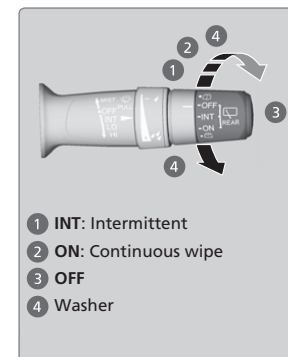

NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched or the rubber blades will get damaged.

In cold weather, the blades may freeze to the windshield, becoming stuck. Operating the wipers in this condition may damage the wipers. Use the defroster to warm the windshield, or manually clear the windshield of ice and snow before turning on the wipers.


^{*1}: models without automatic intermittent wipers; ^{*2}: models with automatic intermittent wipers

Adjusting the Seats


Make seat adjustments before driving to ensure the best comfort and safety.

■ Adjusting the Front Seats

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright and well back in the seat, adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted so that it is as far back from the front airbag in the dashboard as possible.

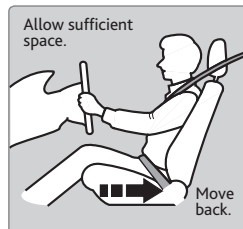

The National Highway Traffic Safety Administration and Transport Canada recommend that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.

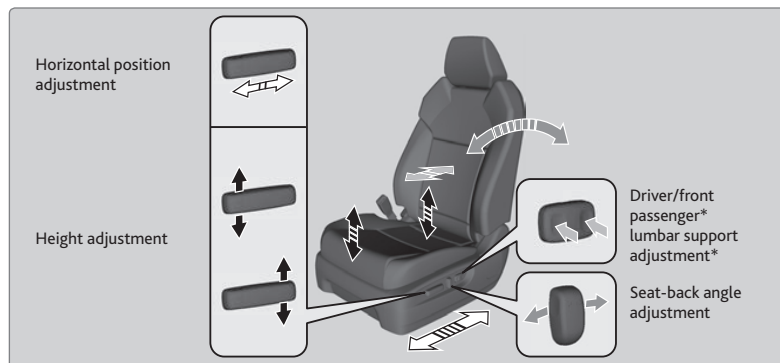

⚠ WARNING

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

⚠ WARNING

Reclining the seat-back too far can result in serious injury or death in a crash. Adjust the seat-back to an upright position and sit well back in the seat.

**if equipped*

⚠ WARNING


Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

■ Adjusting the Head Restraints

Your vehicle is equipped with head restraints in all seating positions. Head restraints are most effective for protection against whiplash and other rear-impact crash injuries.

The center of the back of the occupant's head should rest against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.

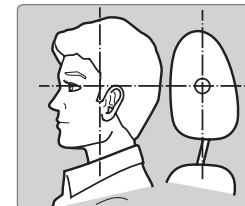



Front and second-row seats

To raise the head restraint: Pull it upward.

To lower the head restraint: Push it down while pressing the release button.

To remove the head restraint: Pull the restraint up as far as it will go. Then push the release button, and pull the restraint up and out.


To reinstall a head restraint: Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

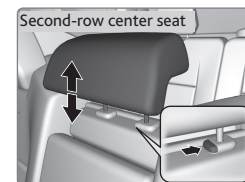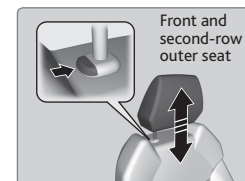

Third-row seats

To fold down the head restraint: Pull the handle.

To fold up the head restraint: Pull up the head restraint and push it back until it latches into place.

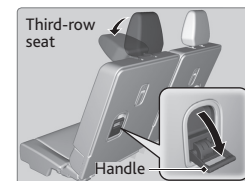

For a head restraint system to work properly:

- Do not hang any items on the head restraints or from the restraint legs.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

⚠ WARNING

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

⚠ WARNING


Failure to reinstall or correctly reinstall the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

■ Floor Mats

Position the front and rear seat floor mats properly and anchor them. If they are not properly positioned, the floor mats can interfere with the front seat functions.

Do not put additional floor mats on top of the anchored mats.

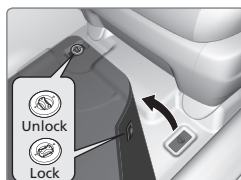**Adjusting the Mirrors**

Adjust the angle of the mirrors for the best visibility when you are sitting in the correct driving position.

■ Automatic Dimming Rearview Mirror

When driving after dark, the automatic dimming function reduces the glare from headlights behind you. Power door mirrors* also dim.

The auto-dimming function cancels only while the gear is set in Reverse (R).


**■ Power Door Mirrors**

Adjust the power door mirrors when the vehicle is on.

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the center position.

Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

Folding door mirror button*: Press to fold the door mirrors in or out.

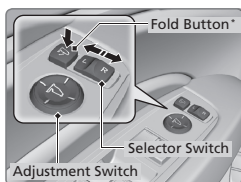


**if equipped*

■ Reverse Tilt Door Mirrors


Either side door mirror can tilt downward when you change the gear to Reverse (R) to improve visibility on the selected side of the vehicle when reversing. The mirror returns to its original position when you change the gear out of Reverse (R).

When in Reverse (R), slide the selector switch to the left or right side.

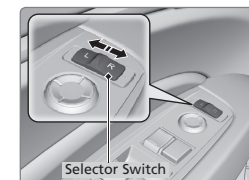**Adjusting the Steering Wheel**

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

Press and hold the adjustment switch to move the steering wheel in, out, up, or down.

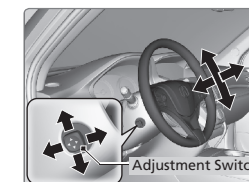**⚠ WARNING**

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.


Adjust the steering wheel only when the vehicle is stopped.

Driving Position Memory System

You can store two driver's seat (except for power lumbar), steering wheel and door mirror positions with the driving position memory system. When you unlock and open the driver's door with a remote transmitter or keyless access system, door mirrors adjust to one of the two preset positions and the seat adjusts to retracted positions of one of the two preset positions automatically. The steering wheel and the seat will move to the stored position when you set the power mode to ACCESSORY.

When you enter the vehicle, the MID briefly shows you which remote transmitter you used to unlock the vehicle.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.

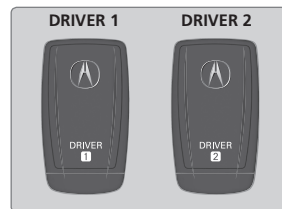


The driver's seat moves rearward and steering wheel fully up depending on the set seating position once you

- Stop the vehicle.
- Put the transmission in Park (P).
- Turn the engine off.
- Then open the driver's door.

Once the power mode is in the ACCESSORY position, the driver's seat and steering wheel moves to the **DRIVER 1** or **2** preset position.

1. Adjust the seat, steering wheel, and mirrors to your preferred positions.
2. Press **SET**. The memory indicator light will blink and a beep will sound.
3. Press and hold memory button 1 or 2 within 5 seconds. The memory button indicator will stay lit once the positions are memorized. The positions are now linked to the corresponding **Driver 1** or **Driver 2** remote transmitter.

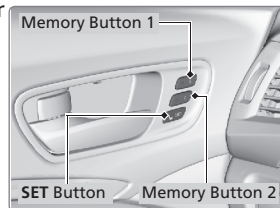

To recall a stored position, shift to Park (P) and apply the parking brake. Then, press one of the memory buttons.

Lumbar positions cannot be stored.

Rear Seats


Adjust second-row seats, access third-row seats, or fold down seats for additional cargo space.

■ Adjusting the Second-Row Seats

with second-row bench seats



with second-row captain seats

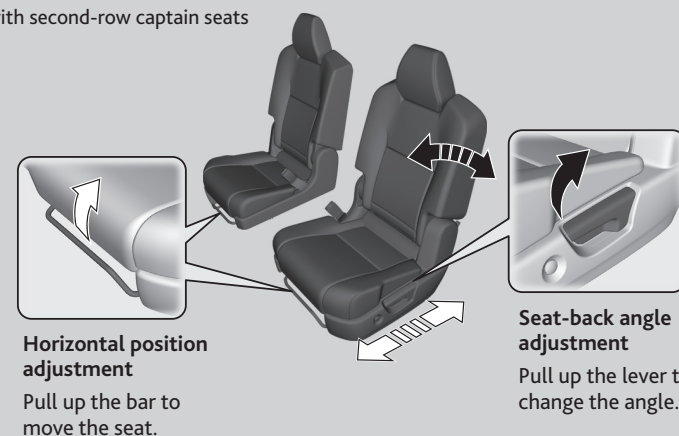


Folding Down the Second-Row Seats

Separately fold down the left and right halves of the second-row seat to make room for cargo.

Models with second-row bench seat

1. Store the center seat belt by inserting the latch plate into the slot on the side of the anchor buckle.
2. Retract the seat belt into the holder on the ceiling.
3. Lower the center head restraint to its lowest position. Put the armrest back into the seat-back.

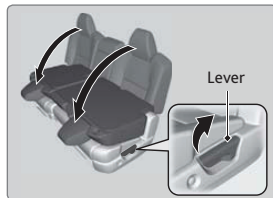

All models

4. Pull up the seat-back angle adjustment lever.

To return the seat to its original position, pull up the seat-back to an upright position until it is securely latched into place. Reposition the seat belts as necessary.

Folding Down the Third-Row Seats

Separately fold down the left and right halves of the third-row seat to make room for cargo.

1. Pull the handle on the seat-back. The head restraint folds down.
2. Push the seat-back forward while pulling the handle.




To return the seat to its original position, pull up the seat-back while pulling up the handle. Push the head restraint up to its original position.

Accessing the Third-Row Seats


Press the button on the second-row seat back or outer seat side. The second-row seat slides forward to allow easy access to the third row.

The button is inoperable when the vehicle is moving.

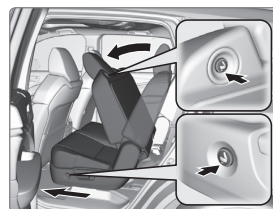


HomeLink® Universal Transceiver

Program your vehicle to operate up to three remote-controlled devices around your home—such as garage doors, lighting, or home security systems—using the buttons on the ceiling.

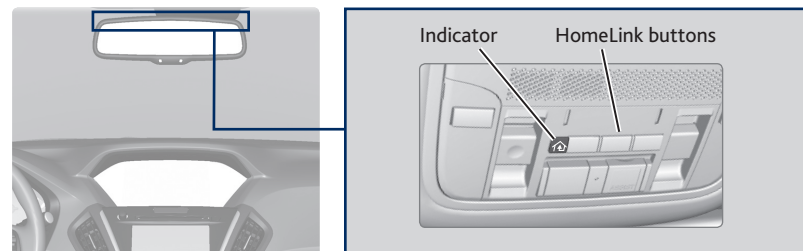

Training a Button

Park near the system you want to program, and follow the instructions in the flowchart below.

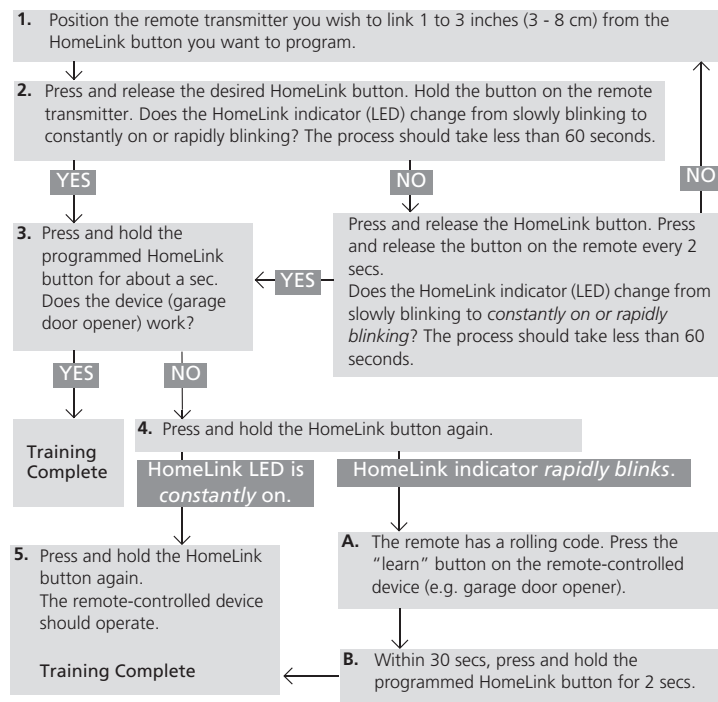

To retrain a button or erase codes, see the Owner's Manual at owners.acura.com (U.S.) or myacura.ca (Canada). If you need help, call HomeLink at (800) 355-3515 or visit www.homelink.com

Climate Control System

Set your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed.

Front Operation

Use the On-Demand Multi-Use Display (ODMD) touchscreen or the buttons below the screen to operate the system.

On-Demand Multi-Use Display (ODMD)

When you select a climate control icon, a new screen appears where you can make adjustments or change settings.

Vent mode icon

Driver's side temperature

Passenger's side temperature

A/C: Turn the air conditioning on or off.

SYNC: Set the passenger's side temperature to the same as the driver's side.

Fan speed

Recirculation/fresh air mode



Climate control buttons

Driver's side temperature switch

AUTO button: Press, then adjust the temperature to your preferred setting.

Passenger's side temperature switch

ON/OFF button

Windshield defroster button

Rear window defogger/heated mirror button

Rear Operation

Use the On-Demand Multi-Use Display (ODMD) touchscreen to operate the system.

On-Demand Multi-Use Display (ODMD)

Rear AUTO

Rear Climate

Rear temperature up/down

Mode


Fan speed

Rear ON/OFF

Close the menu

Airflow control mode

Rear Lock: Disable operation from the rear.

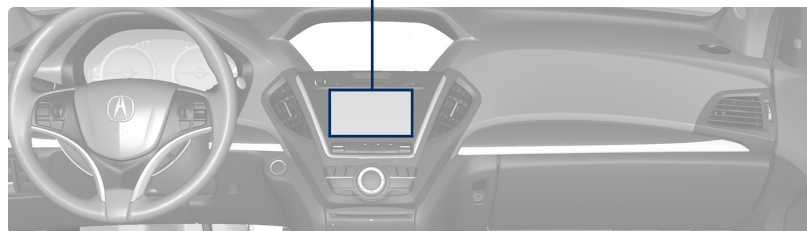

Rear Climate Control Buttons

Use the buttons on the back of the center console to operate the rear system.

Temperature control

Rear AUTO

ON/OFF button

Airflow control mode


Fan speed buttons

If Rear Lock is turned on in the front, rear controls cannot be operated.

■ Heated Steering Wheel*

Heat the steering wheel to a comfortable temperature when the vehicle is on.


Press the heated steering wheel button. Press the button again to turn it off.

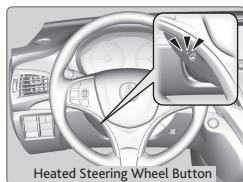

■ Heated Windshield Button*

Turn the vehicle on. Press the heated windshield button to de-ice the windshield.


When the outside temperature is below 39°F (4°C), the heated windshield may automatically activate. The system deactivates itself once the outside temperature reaches 43°F (6°C).

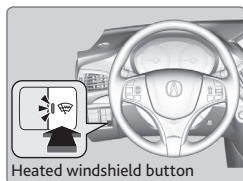

■ Integrated Sunshades*

Pull the tab and roll up the sunshade all the way. Use the hooks to hang it.

Use the sunshades only when the windows are fully closed. Using the shade while a window is open can unhook and blow the shade off, risking injuries to anyone sitting near the window.

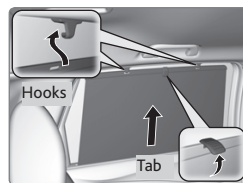

**if equipped (Canadian models)*

Seat Heaters or Ventilation*

Quickly warm or ventilate the seats when the vehicle is on.

■ Front Seat Heaters or Ventilation*

Use the On-Demand Multi-Use Display (ODMD) touchscreen to operate the front seat heaters or ventilation.



ODMD screen



Select to enter the seat heating or ventilation* screen.

OFF: Turn off heat and ventilation*.

Select LO, MID, or HI ventilation level.*



Close the menu

Select LO, MID, or HI heat level.

AUTO: The system selects the best setting based on ambient temperature.

When the vehicle is turned off, the heating or ventilation* setting returns to off at the next vehicle start. If AUTO is selected, the setting remains in AUTO.

■ Second-Row Outer Seat Heaters*

Press the seat heater button on the back of the center console to cycle through settings: HI, MID, LO, and OFF. Indicators appear for each setting.



⚠ WARNING


Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

**if equipped*

Customized Features

You can easily customize many features of your vehicle. The customized settings are recalled every time you unlock the driver's door with the remote (Driver 1 or Driver 2). Settings are unique to each remote.

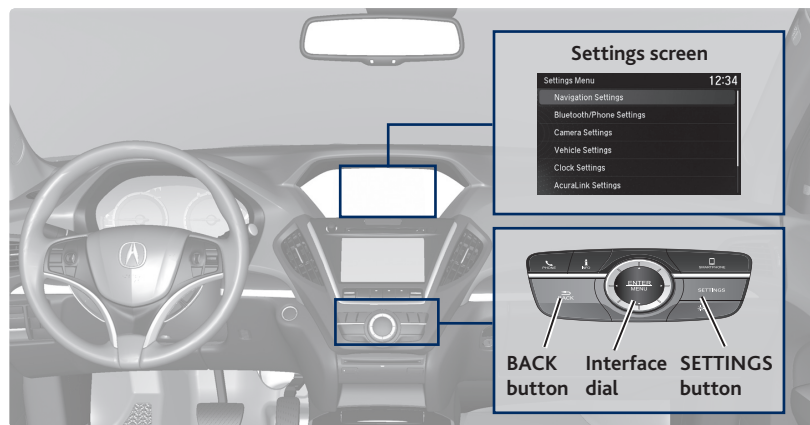

■ How to Change a Setting

The vehicle must be in Park (P) to select Vehicle Settings. Use the interface dial to make and enter selections. For models with navigation, see the navigation manual for most customized features.

1. Press SETTINGS.
2. Select an option.
3. Select a setting option and make your preferred changes.
4. Press BACK to exit out of the menus.

■ Setting the Clock

On vehicles without navigation, use the interface dial to adjust the time in the clock display. On vehicles with navigation, the time is automatically set using GPS signals.

1. Press SETTINGS.
2. Select System Settings.
3. Select Clock Adjustment.
4. Rotate the interface dial to change the hour value. Press the interface dial to select minutes, and rotate to change the value. Press the interface dial to exit the screen.
5. Press BACK to exit out of the menus.

Customization Example: Door Lock/Unlock Settings

To customize the door lock/unlock settings, use the interface dial to make and enter selections. With the vehicle in Park (P) and the power mode ON, follow the steps below:

1. Press SETTINGS.
2. Press Vehicle Settings.
3. Press Door Setup.
 - To customize door lock settings, press Auto Door Lock.
 - To customize door unlock settings, press Auto Door Unlock.
4. Choose a setting:
 - The default lock setting is With Vehicle Speed.
 - The default unlock setting is All Doors when Driver's Door Opens.
5. Press the BACK or HOME button when you are done.

AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.


Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.

■ USB Ports


The center console has three USB ports. All of them can charge a device. Connect an audio device to the right-hand port for audio playback.

1. Slide back the center console cover. Open a USB port cover.
2. Install the device to charge or for playback.

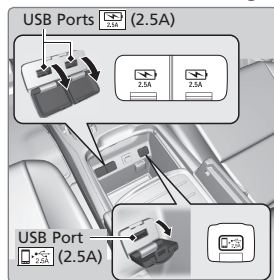

The back of the second-row console* has two USB ports. They are for charging devices.

Models with rear console compartment

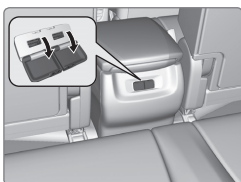

Models without rear console compartment



*if equipped

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

■ Auxiliary Input Jack

Connect standard audio devices with a 1/8-inch (3.5 mm) stereo miniplug.

1. Slide back the center console cover. Open the AUX cover.
2. Connect the device to the input jack.
3. Use the device to control the audio.



■ Accessory Power

12-volt outlets are in the front pocket and rear cargo area. Open the socket cover to use power when the vehicle is on.

An outlet in the center console is either a 150-watt AC-power outlet or an additional 12-volt outlet, depending on the vehicle.



Front console compartment shown

NOTICE


Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

■ Steering Wheel Controls

Operate certain functions of the audio system using the

Left selector wheel: Roll up or down to adjust volume. Press to mute. Move (or hold) left or right to change stations or tracks.

SOURCE button: Cycle through available audio modes.

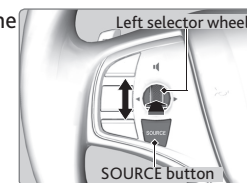

FM/AM/SiriusXM® Radio

Move right or left for the next or previous station. Move and hold right or left to scan the next or previous strong station.

CD/HDD*/iPod*/USB/Bluetooth® Audio

Move right or left for the next or previous track. Move and hold right or left for the next or previous folder (CD/HDD*/USB).


Pandora®*/Aha™

Move right for the next song. Move and hold right or left for the next or previous station.

■ Adjusting the Sound

Adjust various sound settings. Use the interface dial to make and enter selections.

1. Select Audio Menu, then select Sound Settings.
2. Select the Bass, Treble, Fader, Balance, Center*, Subwoofer, SVC (Speedsensitive Volume Compensation), or DTS Neural Surround*.
3. Use the +, -, or other icons to adjust the setting.


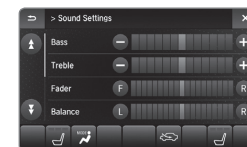


*if equipped

■ On-Demand Multi-Use Display (ODMD) and Controls

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

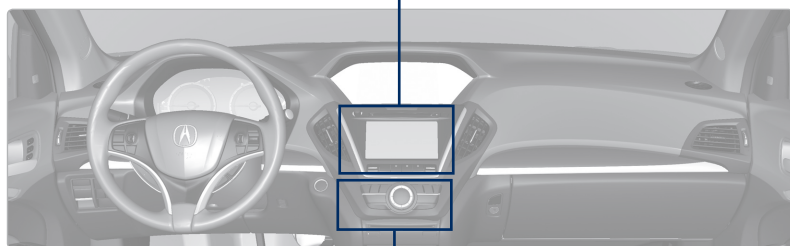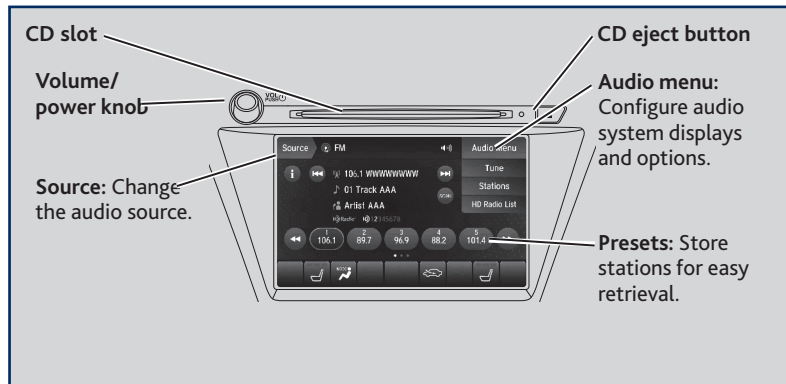



Audio buttons



**if equipped*



FM/AM Radio

Play FM or AM radio stations.

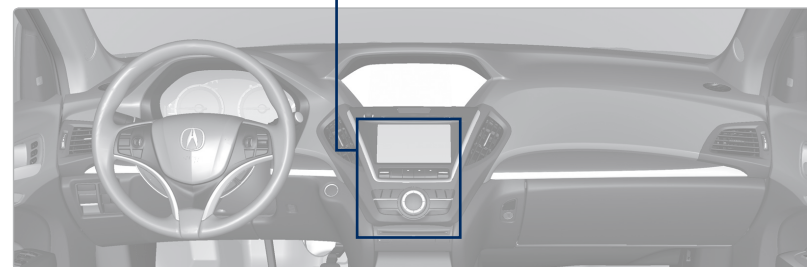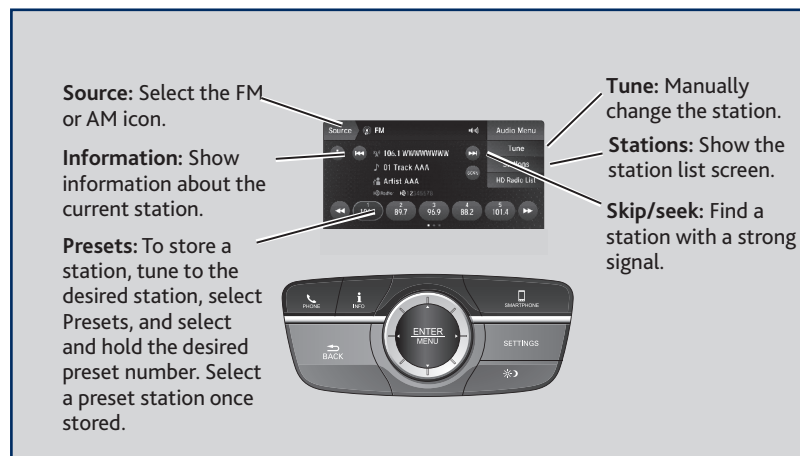

SiriusXM® Radio



Available on a subscription basis only. For more information or to subscribe, contact your dealer or visit www.siriusxm.com/subscribe-now (U.S.) or www.siriusxm.ca/subscribe-now (Canada).

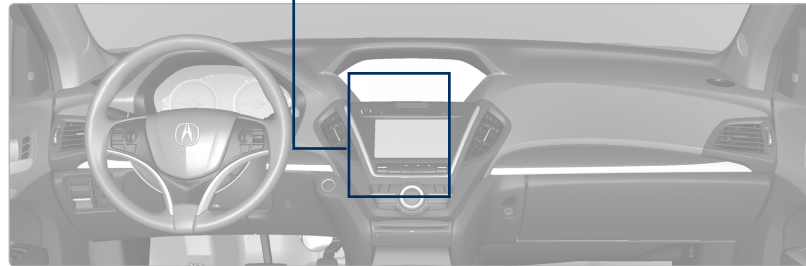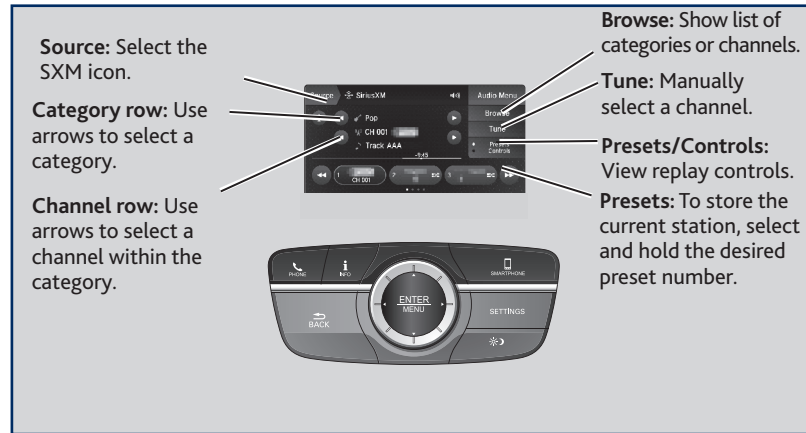

Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.
 XM® is a registered trademark of Sirius XM Radio, Inc.

Compact Disc (CD)

The audio system supports audio CDs, CD-Rs, and CD-RWs in MP3, WMA, or AAC formats.

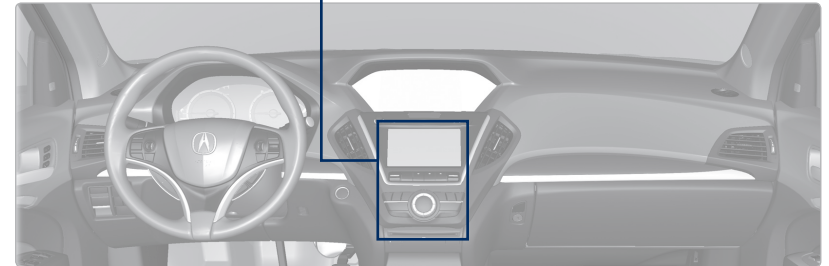
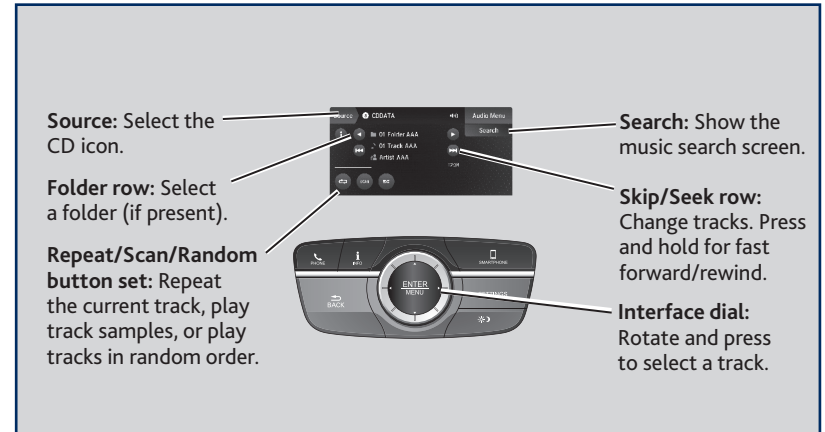


NOTICE

Do not use CDs with adhesive labels or insert a damaged CD. Inserting these types of CDs may cause them to get stuck inside or damage the audio unit.

USB Flash Drive

Connect your device to the USB port (page 56).

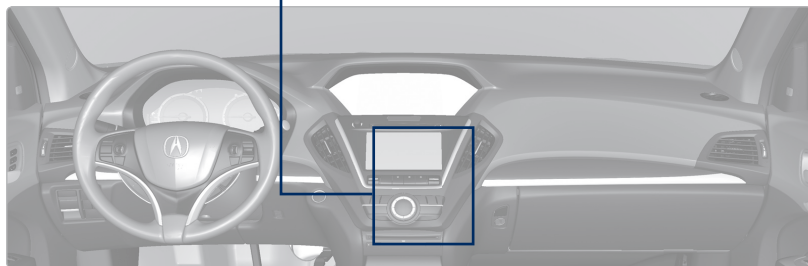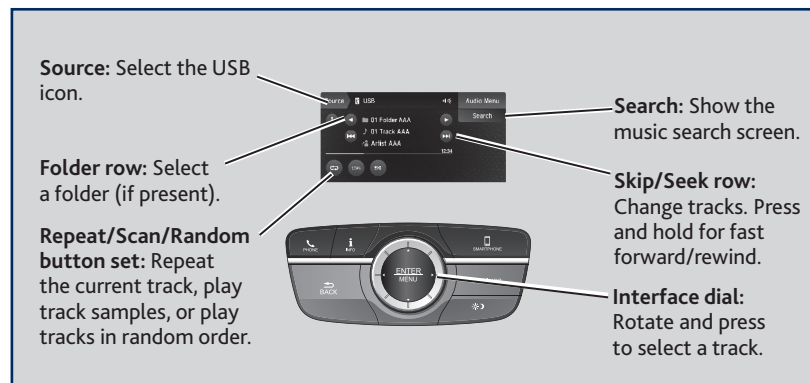


■ Searching for Music

Use the touchscreen to search for tracks.



1. From the audio screen, select Search.
2. Select a folder.
3. Select the song you want to play.

On vehicles with navigation, you can also search for and play iPod music using Song By Voice™ (see page 71).

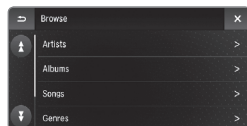

iPod®

Connect your iPod to the USB port (see page 56).

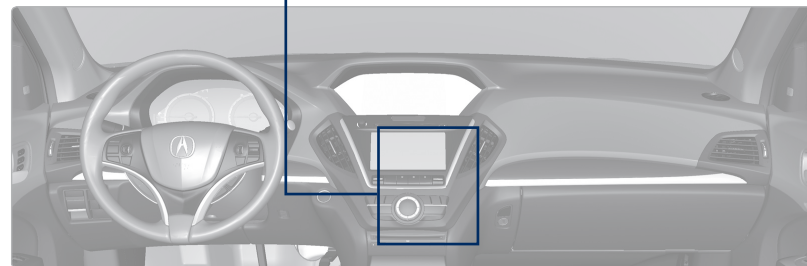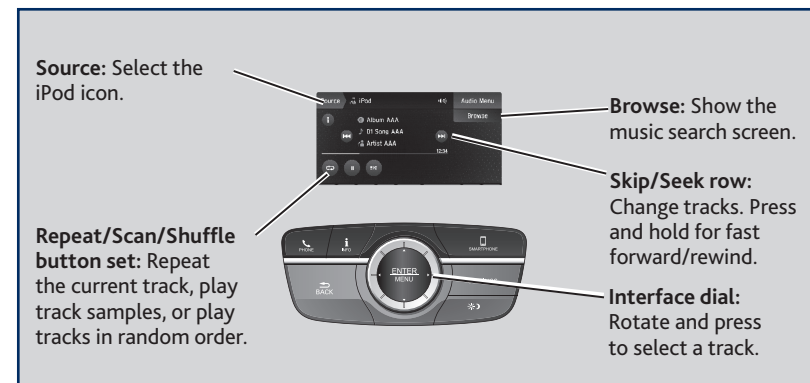


■ Searching for Music

Use the touchscreen to search for tracks.

1. From the audio screen, select Browse.
2. Select a category.
3. Select the song you want to play.



On vehicles with navigation, you can also search for and play iPod music using Song By Voice™ (see page 71).

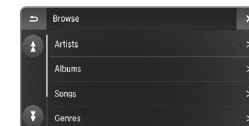

iPod is a registered trademark of Apple, Inc.

Bluetooth® Audio

Play streaming or stored audio from your compatible phone when it is paired to **Bluetooth® HandsFreeLink®** (see page 96). Visit www.handsfreelink.com/Acura (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility. Standard data rates may apply.

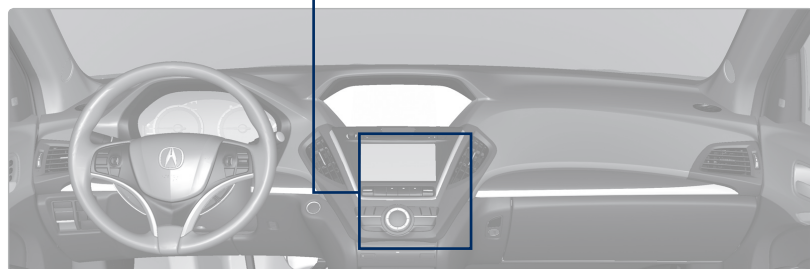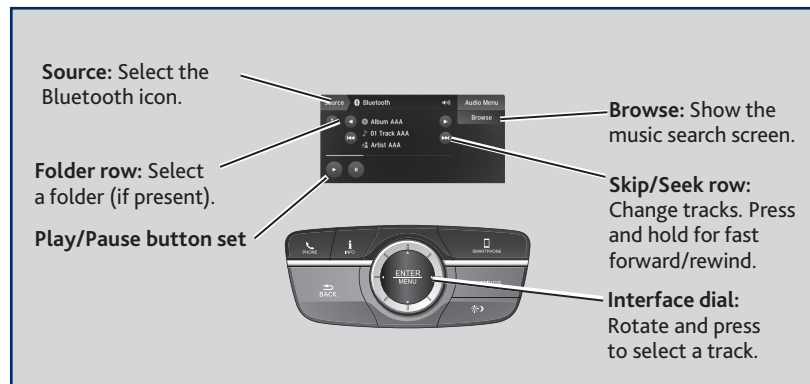



Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

Hard Disc Drive (HDD) Audio


When music CDs are inserted, they are automatically recorded by system default onto the built-in HDD for later playback.

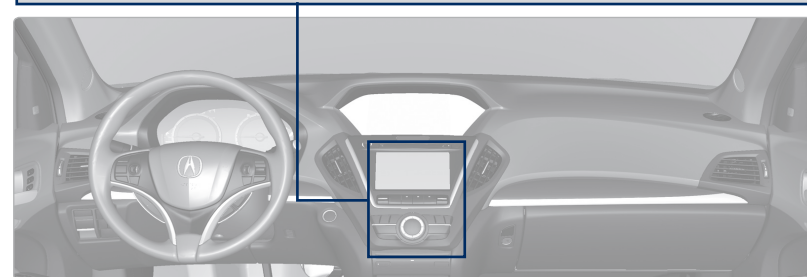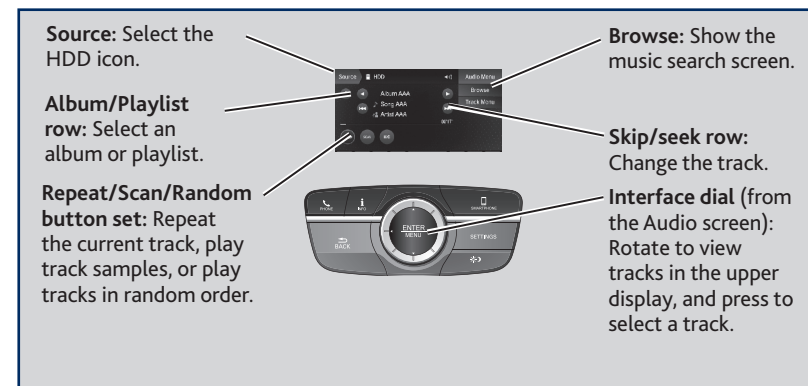

■ Searching for Music

Use the interface dial to search for tracks using several methods.

1. From the audio screen, select Browse.
2. Select a search type (artist, album, track, etc.).
3. Select the song you want to play.



You can also search for and play HDD music using Song By Voice™ (see page 71).

Pandora®* (U.S. models)

Play and operate Pandora from your phone through the vehicle's audio system. Visit www.handsfreelink.com/Acura to check phone compatibility. Standard data rates apply.



Connect your phone when the vehicle is stopped.

For iPhone:

- Connect via **Bluetooth®** HandsFreeLink® (see page 96) or USB (see page 56).
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If Pandora still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For Android and BlackBerry:

- Connect via **Bluetooth®** HandsFreeLink® (see page 96).

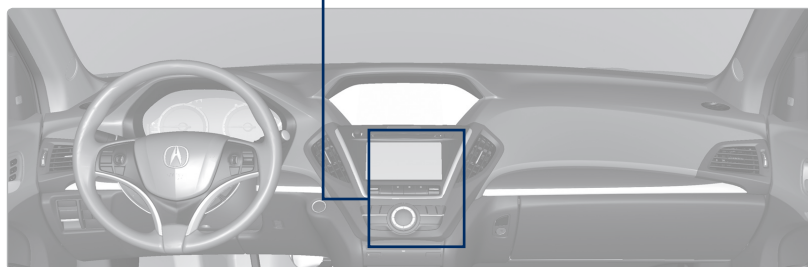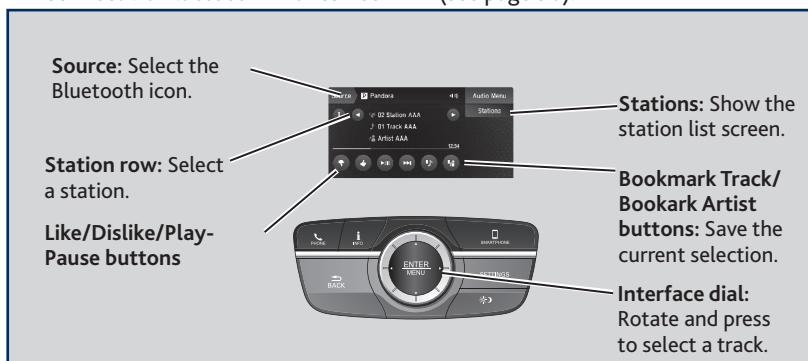


Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when it is safe to do so.

Siri™ Eyes Free

Activate Siri through your vehicle when an iPhone is paired to the system. Visit www.handsfreelink.com/Acura (U.S.) or www.acura.ca/siri (Canada) to check phone compatibility.

Talk button: Press and hold to activate Siri Eyes Free mode. The Smartphone screen appears. Say your command after you hear the Siri tone. If you only press and release the Talk button, the standard voice recognition system is activated.

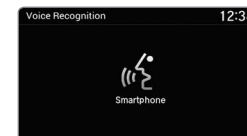

Back button: Exit Siri Eyes Free mode, or cancel a command.

Here are some examples of Siri commands:

"Call John Smith"

"Remind me to pick up dinner"

"Read my new text message"

"Set up a meeting today at 3 p.m."

"Find a nearby sushi restaurant"

"Play song XYZ"

Notes:

- Any requests that include visual feedback from Siri on your phone are not displayed in the vehicle.
- Certain commands rely on the iPhone's features and existing apps.
- To hear turn-by-turn directions or songs through the vehicle, set the audio source to **Bluetooth Audio**.

Siri and iPhone are trademarks of Apple, Inc.

**if equipped*



**if equipped*

Apple CarPlay™

Connect an Apple CarPlay-compatible iPhone to the system. Use the interface dial to make a phone call, listen to music, and more. Visit the Apple CarPlay website for more information.

Park in a safe place before connecting your iPhone and launching any compatible apps.

1. Connect the iPhone to the USB port (2.5A) (see page 30).
2. Apple CarPlay requires you to send vehicle information to Acura. Select Enable Once, Always Enable, or Cancel. Your phone may prompt you to allow access for CarPlay to be launched.

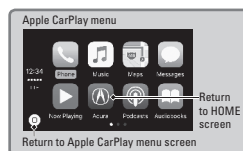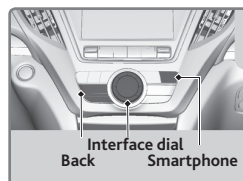

Use these buttons to control Apple CarPlay:

- **Smartphone:** Enter Apple CarPlay.
- **Interface dial:** Move the dial to select an item. Press the dial to make the selection.
- **Back:** Return to the previous screen.

Once connected, you can press and hold the Talk button on the steering wheel (see page 74) to operate the system using voice commands with Siri Eyes Free. In Apple CarPlay, you have these options:

- **Phone:** Access your contacts, make phone calls, or listen to voicemail. While connected to Apple CarPlay, calls can only be made through Apple CarPlay, not through *Bluetooth* HandsFreeLink.
- **Music:** Play music stored on your iPhone.
- **Maps:** View a map and operate navigation. You can only use Apple Map or the pre-installed navigation system to set a destination with routing guidance.
- **Messages:** View and reply to text messages, or have messages read to you aloud by the system.

Depending on use, Apple CarPlay can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with the connected iPhone. See Apple's privacy policy for details regarding Apple's use and handling of data uploaded by CarPlay. Use of CarPlay is at user's own risk, and is subject to agreement to the CarPlay terms of use, which are included as part of the Apple iOS terms of use. CarPlay vehicle integration is provided "as is," and Acura cannot guarantee CarPlay operability or functionality now or in the future due to, among other conditions, changes in CarPlay software/Apple iOS, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Only use CarPlay when conditions allow you to do so safely. See your Owner's Manual at owners.Acura.com for further license and warranty terms.

Android Auto™



Connect a compatible Android phone to the system. Use the interface dial to make a phone call, listen to music, and more. Visit the Android Auto website for more information.

Park in a safe place before connecting your Android smartphone and launching any compatible apps.

1. Download the Android Auto app to your phone.
2. Connect the phone to the USB port (2.5A) (see page 30). The phone is automatically paired. A tutorial also appears.

Use these buttons to control Android Auto:

- **Smartphone:** Enter Android Auto.
- **Interface dial:** Select an item. Press the dial to make the selection.
- **Back:** Return to the previous screen.

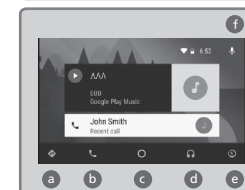
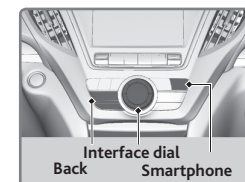


- a Maps (Navigation):** View Google Maps and operate navigation. You can only use this system or the pre-installed navigation system to set a destination with routing guidance. You cannot enter destinations using the keyboard while the vehicle is moving.
- b Phone:** Make phone calls or listen to voicemail. While connected to Android Auto, calls can only be made through Android Auto, not through *Bluetooth* HandsFreeLink.
- c Home (Google Now):** Display useful information organized by Android Auto into simple cards that appear only when needed.
- d Music:** Play music from compatible apps. Select this icon to switch between music apps.
- e Return to HOME screen:** Go back to the vehicle system HOME screen.
- f Voice:** Use voice commands via Google Voice Search to operate Android Auto. You can also press and hold the Talk button on the steering wheel (see page 74) to say voice commands.

Depending on use, Android Auto can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with Google and its service providers. See Google privacy policy for details regarding Google's use and handling of data uploaded by Android Auto. Use of Android Auto is at user's own risk, and is subject to agreement to the Android Auto terms of use, which are presented to the user when the Android Auto application is downloaded to the user's Android phone. Android Auto vehicle integration is provided "as is," and Acura cannot guarantee Android Auto operability or functionality now or in the future due to, among other conditions, changes in Android Auto software/Android operating system, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Only use Android Auto when conditions allow you to do so safely. See your Owner's Manual at owners.Acura.com for further license and warranty terms.

Rear Entertainment System (RES)*

Operate the Rear Entertainment System (RES) from the On Demand Multi-Use Display™.

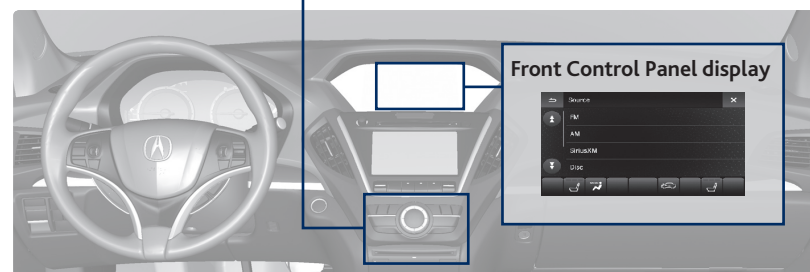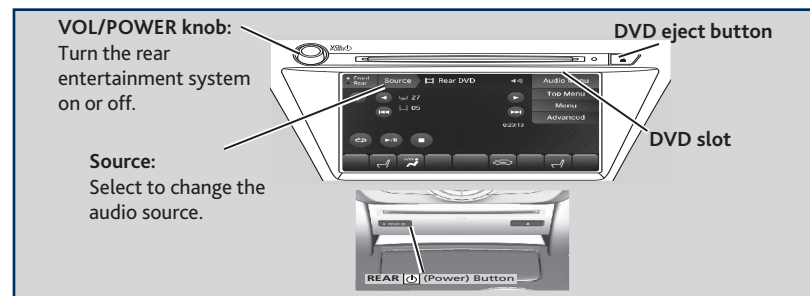

Selecting the Audio Source using the Front Control Panel

1. Press REAR power button on the front control panel.
2. Select Front/Rear to switch Rear mode.
3. Select Source.
The rear source is display on the On Demand Multi-Use Display™.
4. Select the audio source on the On Demand Multi-Use Display™.
The rear source is heard from the front speakers.
5. Select a station, channel, track, or chapter in the same way as the front audio system.

Playing a DVD

Insert a DVD into the DVD slot. It begins playing automatically. Use the front or rear controls to navigate the DVD.

System Components

Retrieve the wireless headphones and open the overhead screen to use the system.



Overhead screen

Models with RES*: Pull down the bottom edge of the screen, and extend it until it locks into place.

Models with Ultrawide RES*: Press OPEN. Extend the screen until it locks into place.


Fold the screen back into the ceiling when not in use.

Press the release button to detach the rear remote control panel, if desired.

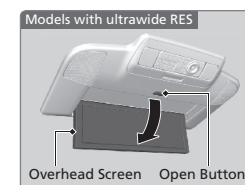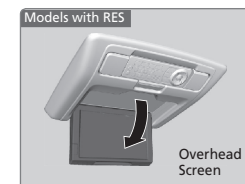

Auxiliary/HDMI* inputs


Auxiliary inputs can be used for video game systems and other devices. Wired headphones can also be used.

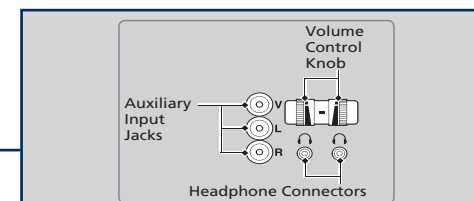

Wireless headphones

Your vehicle comes with two sets of wireless headphones.

For each, the power button and volume dial are on the right earpiece.

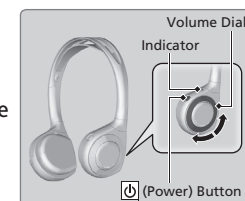


**if equipped*

**if equipped*

■ Remote Control and Rear Operation

You can operate the system using the rear remote control panel.

Models with RES

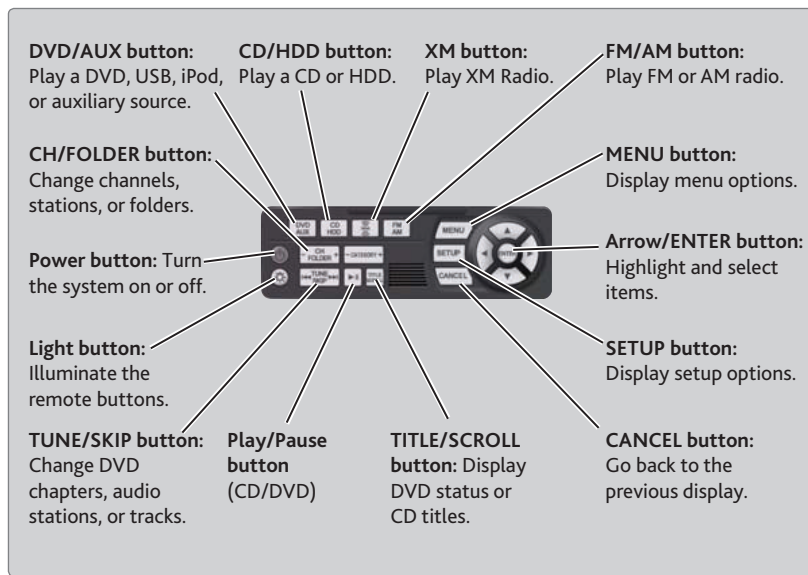

1. From the rear control panel, press the desired audio source button (or the SOURCE button for Ultrawide RES).
2. Press the arrow/ENTER buttons to highlight options on the screen and select them. Use the other rear control panel buttons to operate the system.
3. Press the MENU button to display the menu screen.




NOTICE

This vehicle's overhead mounted display includes mercury-containing components. Upon removal or replacement, please reuse, recycle, or dispose of as hazardous waste.

■ Ultrawide Dual Screen Operation*

Play two different sources side by side on the ultrawide screen. One side of the screen can play a source from the front audio system (FM, DVD, etc.). The other side of the screen can play a connected device, such as a video game system.

Models with Ultrawide RES

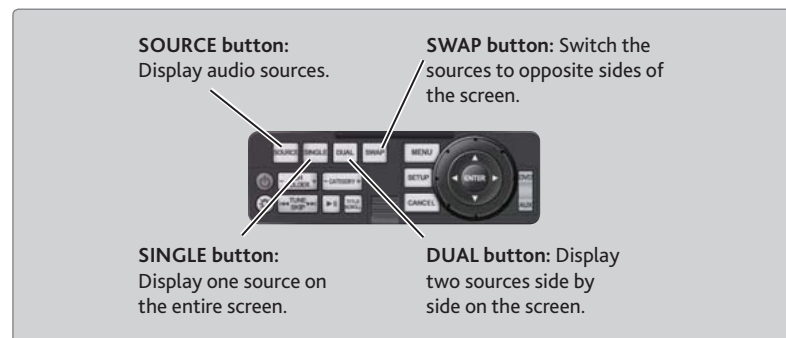

1. Connect a second source through the rear auxiliary jacks or HDMI input (see page 71).
2. From the rear control panel, press DUAL.
3. Select which side the second source plays on.
4. Press SOURCE to select AUX-VIDEO or AUX-HDMI.

BLUETOOTH® HANDSFREELINK®

Learn how to operate the vehicle's hands-free calling system.



Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit www.handsfreelink.com/Acura (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility.



To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

HFL Displays and Controls

Use the controls to enter information and make selections.

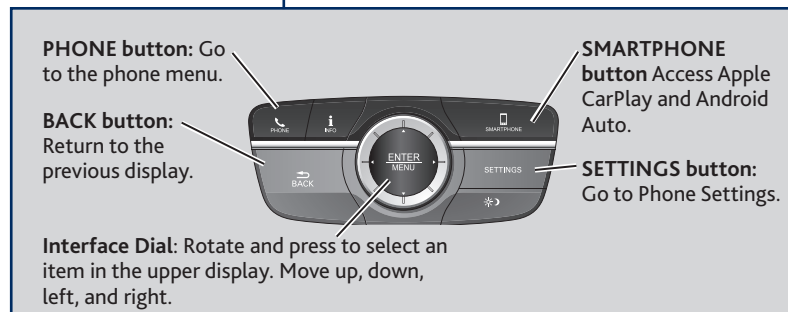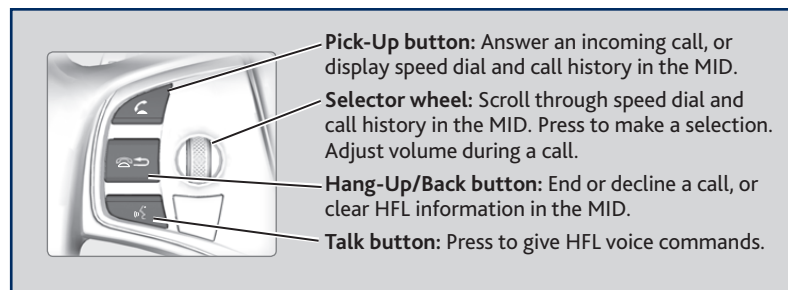

On-Demand Multi-Use Display (ODMD) screens

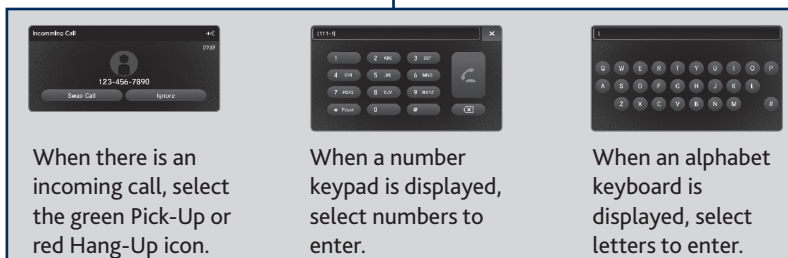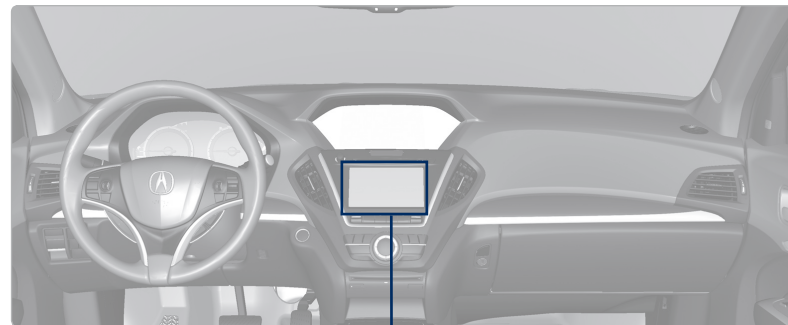

Talk Button Tips



When using the Talk button, wait for the beep before saying a command. The system recognizes only the commands in the Voice Command Index (see page 126)

- To bypass the system prompts, simply press the Talk button again to say your command.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling. Fan speed may be temporarily reduced during voice recognition operation.
- Close the windows and moonroof.

Pairing a Phone

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the interface dial to make and enter selections.

1. Press the PHONE button.
2. Select Yes.
3. Confirm your phone is discoverable, then select Yes.
4. HFL searches for your phone. Select your phone when it appears on the list.
If your phone does not appear:
Select Refresh to search again. If your phone still does not appear, select Options, then Device Not Found? and search for HandsFreeLink from your phone.
5. HFL gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
6. The system asks if you want to enable Automatic Phone Sync, which imports your phone's call history and phonebook. Select On if you want to enable sync.
7. Press BACK to exit the menu.

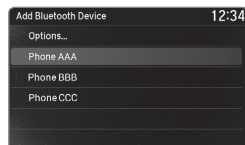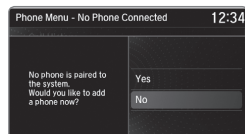

Making a Call


You can make calls using several methods.

■ Dialing a Number

Enter a 10-digit phone number to call.

Using voice commands

1. Press the Talk button.
2. Say "Dial" and the number. For example, "Dial 3-1-0-5-5-5-1-2-3-4."
3. The system begins to dial.

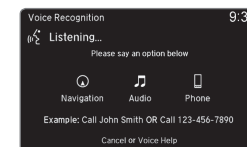

Using the touchscreen

Use the interface dial and the touchscreen. This is inoperable while the vehicle is moving.

1. Press PHONE.
2. Use the interface dial to select Dial.
3. Use the touchscreen to enter the phone number.
4. Select the green phone icon to call.




■ Using the Phonebook

When your phone is paired, its entire phonebook can be automatically imported to the system if you select On for Automatic Phone Sync.

Using voice commands


1. Press the Talk button.
2. Say “Call” and the contact name. For example, “Call John Smith.”

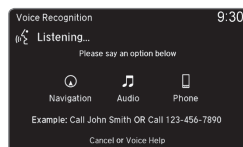

Using the menu

Use the interface dial to make and enter selections.


1. Press PHONE.
2. Select Phonebook.
3. Scroll through the list to find the name you want to call, then select the number to call.

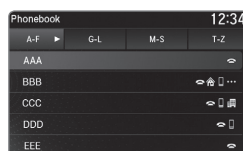

■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing.

1. Press PHONE.
2. Select Speed Dial, then select New Entry.
3. Choose an entry method.
4. If desired, you can create a voice tag for the number. Follow the prompts.

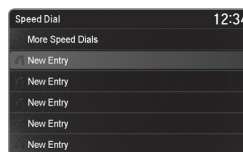


When a voice tag is created, you can press the Talk button and say “Call” and the stored voice tag.

■ Using Speed Dial and Call History

Make calls quickly using stored speed dial entries or call history numbers.

Using voice commands


1. Press the Talk button.
2. Say “Call” and the stored voice tag name. For example, “Call John Smith.”
3. The system begins to dial.

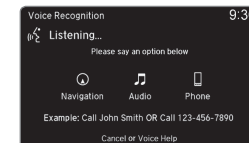

Using the MID

Press the Pick-Up button on the steering wheel.


1. The speed dial list appears in the MID. For Call History, move the left selector wheel to the right.
2. Use the left selector wheel to scroll through the list to find the entry you want to call, and select it to call.

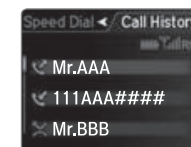

Using the menus

Use the interface dial to make and enter selections.

1. Press PHONE.
2. Select Speed Dial, then use the interface dial to scroll through the list to find the entry you want to call, and select it to call.
For Call History, move the interface dial to the right and scroll through the list (All, Dialed, Received or Missed).

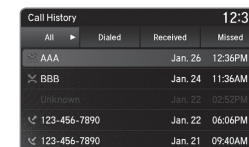


SMS Text Messaging and E-Mail

Certain phones can receive and send text messages and e-mails while paired and linked. Visit www.handsfreelink.com/Acura (U.S.) or phone (888) 528-7876 (U.S. and Canada) to check phone compatibility. Standard message rates apply. This feature is limited while the vehicle is moving.

■ Selecting an Account

If your phone has both text message and mail accounts, you can select only one of them at a time to be active and receive notifications. Use the interface dial to make and enter selections.


1. Press the PHONE button.
2. Select Bluetooth/Phone Settings.
3. Select Text Messages or an e-mail account.
4. Select Select Account.

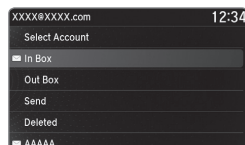

■ Receiving and Responding to Messages

When you receive a new message, a pop-up appears. Use the interface dial to view the message. You can also reply to it using fixed phrases or call the sender.

1. When the prompt appears, select Read.
2. The message is displayed (if you are stopped), and the system reads it aloud.
3. **To reply:** Select Reply, and select one of the available responses. You cannot create a new message.
To call the sender: Select Call.

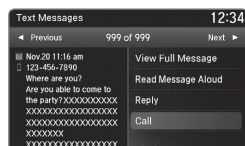

ACURALINK®*

Learn about Acura's advanced connectivity services.

AcuraLink Messages


Receive messages on vehicle features, safety and emissions recall campaigns, maintenance reminders, and diagnostic information.

Some message features require a phone connection. Visit www.handsfreelink.com/Acura (U.S.) or phone (888) 528-7876 (Canada) to check phone compatibility.

■ Viewing Messages

When you receive a new message, an envelope icon appears at the top of the upper display. Use the interface dial to make and enter selections.

1. Press INFO.
2. Select AcuraLink/Messages.
3. Select AcuraLink messages.
4. Select the message category (Feature Guide, Quick Tips, Scheduled Dealer Appointment, Diagnostic Info, Maintenance Minder, or Recalls/Campaigns).
5. Select the message you want to hear read aloud.

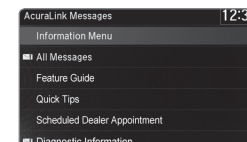

■ Message Options

When you receive certain messages, you can call your dealer if your phone is paired to the system, find the nearest dealer, or schedule service appointments. A current AcuraLink subscription is required to set up this feature and modify your message preferences.

*if equipped

Subscription Features

In addition to standard service, receive benefits such as collision notification, emergency assistance, online security, enhanced navigation searches, and important messages about your vehicle. Requires enrollment and privacy agreement. To subscribe or get more information, visit owners.acura.com (U.S.) or myacura.ca (Canada) or contact a dealer.

■ Emergency Assistance

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically attempts to connect to the AcuraLink operator if your phone is paired to the system and there is sufficient cellular coverage.

If you need to manually connect to the operator, open the cover on the ceiling console and press ASSIST when the vehicle is on.

Once connected, information about your vehicle, its positioning, and its condition will be sent to the operator; you can also speak to the operator when connected.



■ Security Features

To use security features, you need your user ID and personal identification number (PIN). Some of these features are also available with the AcuraLink smartphone app. Visit owners.acura.com/apps (U.S.) or myacura.ca (Canada) to download.

- *Stolen vehicle tracking:* Searches and tracks down your vehicle position.
- *Remote door lock/unlock:* Remotely lock or unlock doors.
- *Vehicle finder:* Locate your vehicle in large areas, such as a crowded parking lot.
- *Security alarm notification:* If your vehicle's security system detects tampering, the provider notifies you.

■ Operator Assistance

Press LINK on the ceiling console to connect to an operator when trying to find a destination or for roadside assistance.



NAVIGATION*

Learn how to enter a destination and operate the navigation system.

Basic Navigation Operation

A real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination. You can operate the system using voice commands or the system controls.


To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

■ Steering Wheel Controls

Use the steering wheel controls to give voice commands.

Hang-Up/Back button: Press to cancel a command or operation.

Talk button: Press to say navigation commands from the Voice Portal screen.

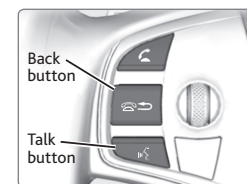

■ Voice Command Tips

When using the Talk button, wait for the beep before saying a command. The system recognizes only the commands in the Voice Command Index (see page 126)

- To bypass the system prompts, simply press the Talk button again to say your command.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling. Fan speed may be temporarily reduced during voice recognition operation.
- Close the windows and moonroof.

⚠ WARNING



Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

*if equipped

Navigation Display and Controls


Use the controls to enter information and make selections. Some manual functions are inoperable while driving.

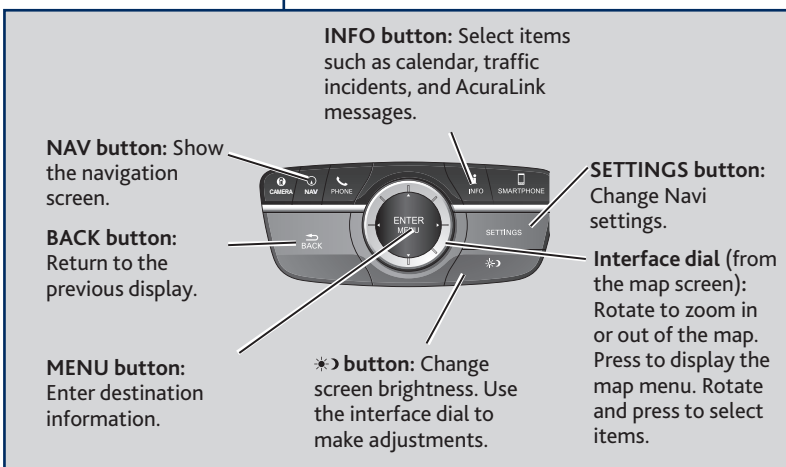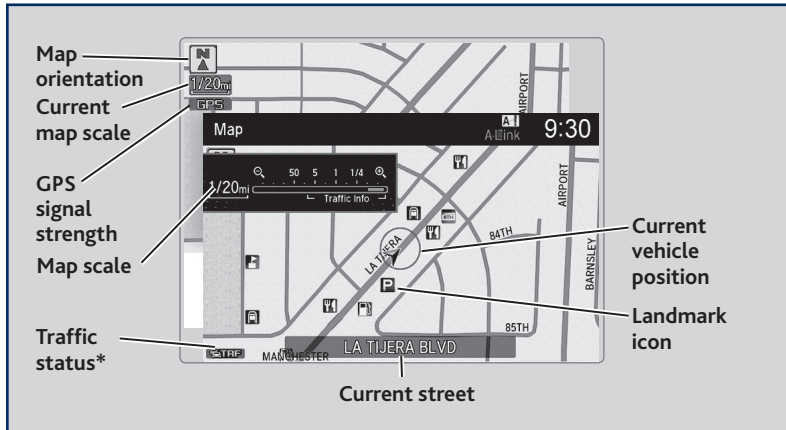

System Guidance Volume

Adjust the navigation system guidance volume. This does not affect audio or *Bluetooth*® HandsFreeLink® volume, which is controlled by the volume knob. Use the interface dial to make and enter selections.


1. Press **SETTINGS**.
2. Select **System Settings**.
3. Select **Voice Reco**.
4. Adjust the volume to your preferred level.
5. Press **BACK** to exit the menu.

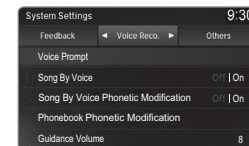

Voice Prompt

Turn the voice prompt feature on or off. Use the interface dial to make and enter selections.

1. Press **SETTINGS**.
2. Select **System Settings**.
3. Select **Voice Prompt**.
4. Select **Off** or **On**.
On: Provides voice prompts.
Off: Voice prompts are disabled.

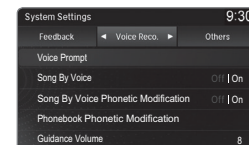


Entering a Destination

Use several methods to enter a destination.

■ Home Address

Store your home address in the system so you can easily route to it. Use the interface dial to make and enter selections.

1. Press the SETTINGS button.
2. Select Navigation Settings.
3. Select Edit Go Home.
4. Select Address and enter it.
5. Select Save.

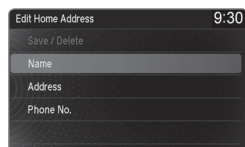


When your home address is stored, you can press the Talk button and say *"Navigation"* and then *"Go home"* at any time. You can also press the MENU button and select Go Home.

■ Street Address

Enter a street address using voice commands (U.S. models only). Press the Talk button to enter the Voice Portal screen.

You can also enter the address manually when the vehicle is stopped. While on the map screen, press the MENU button and use the interface dial to select Address. Follow the prompts.


1. From the Voice Portal screen, say *"Navigation"* and then *"Address."*
2. The system prompts you to say the entire address. For example, say *"1-2-3-4 Main Street, Los Angeles, California."*
3. The system interprets the address by state, city, street, and address number. If necessary, you may have to clarify similar matches.
4. Say *"Set as destination"* to set the route.

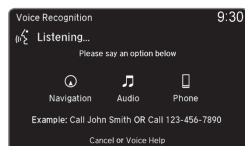

■ Place Name

Enter a place name stored in the navigation database using voice commands (U.S. models only). Press the Talk button to enter the Voice Portal screen.

1. From the Voice Portal, say *"Navigation"* and then *"Place name."*
2. Say a category. For example, *"ATM/Bank."*
3. Say the name of the point of interest. For example, *"ABC Bank."*
4. The system interprets the name. If necessary, you may have to clarify similar matches. If there is more than one point of interest with the name, a list of matches appears in order of closest distance. Use the interface dial to select an entry.
5. Use the interface dial to select *"Set as destination"* to set the route.

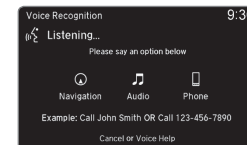


You can also enter the place name manually when the vehicle is stopped. While on the map screen, press the MENU button and use the interface dial to select Place Name. Enter the name and follow the prompts.

■ Find Nearest Place

Enter a destination by category and distance using voice commands. Press the Talk button to enter the Voice Portal screen.



1. Say *"Navigation"* and then *"Find nearest (POI category)"* and a place. For example, *"Find nearest ATM."*
2. A list of the nearest places in your area is displayed by shortest distance to destination.
3. Use the interface dial to select an entry.
4. Use the interface dial to select *"Set as destination"* to set the route.

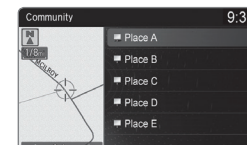

Routing


After a destination is set, you can alter or cancel your route.

■ Map Legend

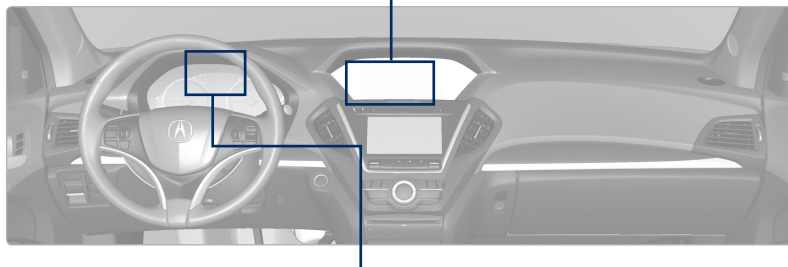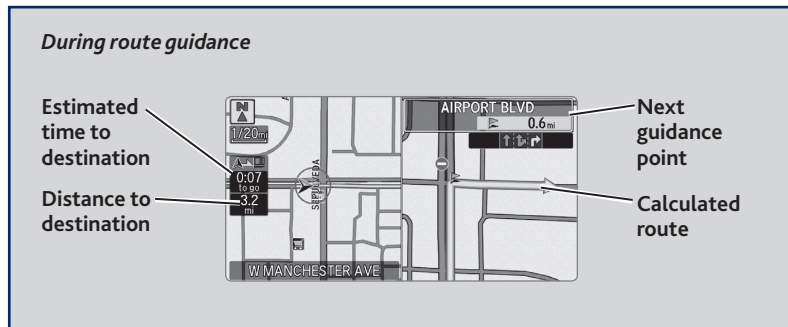

Turn-by-Turn Directions

Shows a more detailed view of the next maneuver on the multi-information display. Use the right selector wheel on the steering wheel to bypass the display.

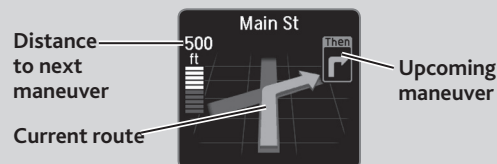

■ Taking a Detour

You can calculate a detour route manually if you encounter a road closure or other obstacle. Use the interface dial to make and enter selections.

1. When en route, press the ENTER/MENU button.
2. Select Detour. The system attempts to calculate a new route by avoiding the next 5 miles (8 km) while on a freeway or 1 mile (1 km) while on a surface street.

■ Traffic Information*/AcuraLink Real-Time Traffic™*

View traffic flow, incidents, and construction in major metro areas. You can also route around congestion or incidents when you have a destination set. Use the interface dial to make and enter selections.

1. From the map screen, press the interface dial. Select Map/Route. Select Traffic Incidents.
2. A list of incidents on your route appears. Select the incident you want to avoid.
3. Select Avoid. Repeat as necessary to select other incidents.
4. Select Recalculate Route.



Canadian models

NOTE: AcuraLink Real-Time Traffic™ is a subscription service. For more information, contact an Acura dealer or visit www.acura.ca/owners/acuralink.

■ Canceling Your Route

You can cancel your route at any time.

1. When en route, press the ENTER/MENU button.
2. Select Cancel Route. The route is cleared and the map screen returns.

*if equipped

DRIVING

Learn about preparation for driving, as well as other features.

Before Driving

Check the following items before you begin driving.

■ Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
- Remove any frost, snow, or ice.
- Make sure the hood is securely closed.
- Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.
- Make sure the tires are in good condition.
- Make sure there are no people or objects behind or around the vehicle.

NOTICE

If the doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

■ Interior Checks

- Store or secure all items on board properly.
- Do not pile items higher than the seat height.
- Do not place anything in the front seat footwells. Make sure to secure the floor mats.
- If you have any animals on board, do not let them move freely in the vehicle.
- Securely close and lock all doors and the tailgate.
- Adjust your seating position, mirrors, and steering wheel properly.
- Make sure items placed on the floor behind the front seats cannot roll under the seats.
- Everyone in the vehicle must fasten their seat belt.
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.

■ Driving Guidelines for Your Utility Vehicle

Utility vehicles have a significantly higher rollover rate than other types of vehicles. To prevent rollovers or loss of control:

- Take corners at slower speeds than you would with a passenger vehicle.
- Avoid sharp turns and abrupt maneuvers whenever possible.
- Do not modify your vehicle in any way that raises its center of gravity.
- Never carry more than 165 lbs (75 kg) of cargo on the roof rack (Acura accessory).

In addition:

- During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.
- Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

⚠ WARNING

Improperly operating this vehicle on or off pavement can cause crash or rollover in which you and your passengers can be seriously injured or killed. Follow all instructions and guidelines in this guide. Keep your speed low, and don't drive faster than conditions permit.

⚠ WARNING


Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed. Follow all instructions in the vehicle owner's manual regarding accessories and modifications.

Maximum Load Limit

Carrying too much cargo or improperly storing it can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe. See the Tire and Loading Information label on the driver's doorjamb.

Maximum load for a vehicle with with second-row bench seats: 1,173 lbs (532 kg).


Maximum load for a vehicle with with second-row captain seats: 1,005 lbs (456 kg).

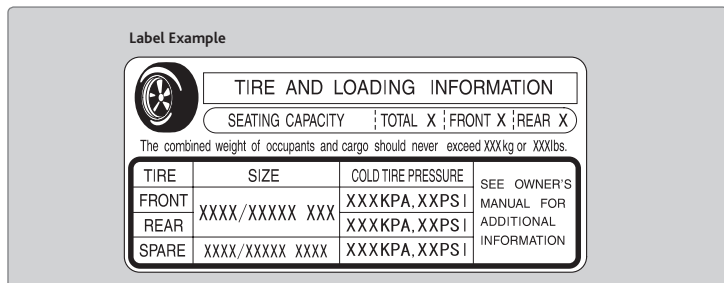

This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer. Below are the steps for determining the correct load limit:

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400 - 750 (5 x 150) = 650 lbs.)
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the Owner's Manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

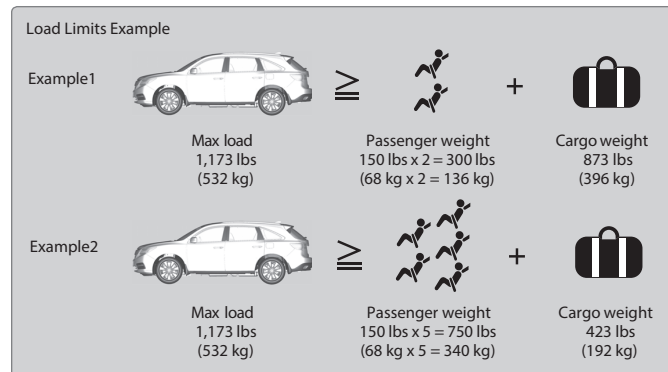

⚠ WARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

The headlight aim on your vehicle was set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the cargo area or pull a trailer, have the aiming readjusted at your dealer or by a qualified technician.

Towing a Trailer


Your vehicle can tow a trailer if you carefully observe the load limits, use the proper equipment, and follow the towing guidelines. See the Owner's Manual at owners.acura.com for more information.

Towing Load Limits

Total trailer weight

Do not exceed the maximum allowable weight of the trailer, cargo, and everything in or on it shown in the table below.

Towing loads in excess of this can seriously affect vehicle handling and performance and can damage the engine and drivetrain.

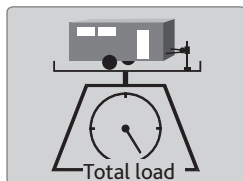

Number of occupants	AWD models with ATF cooler	AWD models without ATF cooler	2WD models
2	5,000 lbs (2,268 kg)	3,500 lbs (1,588 kg)	3,500 lbs (1,588 kg)
3	4,750 lbs (2,155 kg)	3,250 lbs (1,474 kg)	3,250 lbs (1,474 kg)
4	4,500 lbs (2,041 kg)	3,000 lbs (1,361 kg)	3,000 lbs (1,361 kg)
5	4,250 lbs (1,928 kg)	2,750 lbs (1,247 kg)	2,750 lbs (1,247 kg)
6	4,000 lbs (1,814 kg)	2,500 lbs (1,134 kg)	2,500 lbs (1,134 kg)
7	Towing not recommended		

Each weight limit is calculated based on the following conditions:

- Occupants fill seats from the front of the vehicle to the back.
- Each occupant weighs 150 lbs (68 kg).
- Each occupant has 15 lbs (7 kg) of cargo in the cargo area.

Any additional weight, cargo or accessories reduce the maximum trailer weight and maximum tongue load.

WARNING

Exceeding any load limit or improperly loading your vehicle and trailer can cause a crash in which you can be seriously hurt or killed.


Check the loading of your vehicle and trailer carefully before starting to drive.

Tongue load

The weight of the tongue with a fully loaded trailer on the hitch should be approximately:

Boat trailers: 5-15% of the total trailer weight.

Other trailers: 10-15% of total trailer weight.

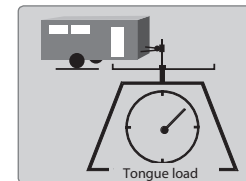

Number of occupants	AWD models	2WD models
2	500 lbs (227 kg)	350 lbs (159 kg)
3	475 lbs (215 kg)	325 lbs (147 kg)
4	380 lbs (172 kg)	300 lbs (136 kg)
5	290 lbs (132 kg)	260 lbs (118 kg)
6	165 lbs (75 kg)	140 lbs (63 kg)
7	Towing not recommended	

Estimate tongue load

Excessive tongue load reduces front tire traction and steering control. Too little tongue load can make the trailer unstable and cause it to sway.

You can estimate the tongue load by measuring the trailer hitch height from the ground in the following steps:

1. Park the vehicle on level ground.
2. Measure the distance between the ground and the bottom of the trailer hitch.
3. Connect the fully loaded trailer to the hitch.
4. Measure the distance between the ground and the bottom of the trailer hitch again.
5. Subtract the second measurement from the first measurement, then refer to the following table.


If the difference is	AWD models	2WD models
1 inches (2.5 cm)		150 lbs (68 kg)
1 1/2 inches (3.8 cm)		250 lbs (114 kg)
2 inches (5.1 cm)		350 lbs (159 kg)
2 3/8 inches (6.0 cm)	450 lbs (205 kg)	—
2 5/8 inches (6.7 cm)	500 lbs (227 kg)	—

If the difference becomes more than indicated in the table, distribute the load or remove cargo as needed.

Weigh trailer loads using a public scale

Check each weight in the order indicated as shown.

Refer to the table below for each weight's limit except for the tongue load.

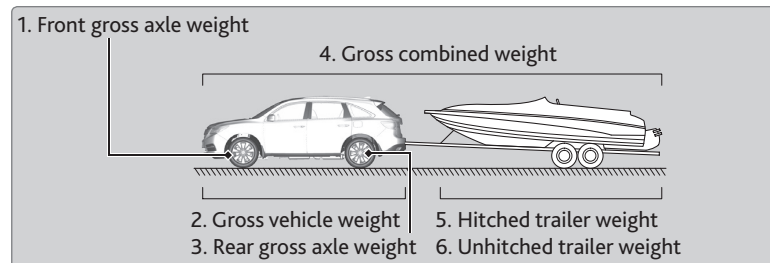

- If you cannot weigh the rear axle, subtract 1 from 2.
- The maximum gross combined weight (4) decreases by 2% for every 1,000 feet (305 meters) of elevation.
- To calculate the tongue load, subtract 5 from 6.
- Refer to the trailer owner's manual for additional information.

Weight limit for	2WD models	AWD models
Front gross axle	2,811 lbs (1,275 kg)	2,910 lbs (1,320 kg)
Gross vehicle	5,368 lbs (2,435 kg)	5,677 lbs (2,575 kg)
Rear gross axle	2,734 lbs (1,240 kg)	2,965 lbs (1,345 kg)
Gross combined	8,036 lbs (3,645 kg)	9,833 lbs (4,460 kg)

■ Pre-Tow Checklist

When preparing to tow, and before driving away, be sure to check the following:

- Avoid towing a trailer during your vehicle's first 600 miles (1,000 km).
- The vehicle and trailer have been properly serviced and are in good condition. Lights and brakes work properly, and the tires are properly inflated.
- All weights and loads are within limits. Never exceed the gross weight ratings.
- When towing more than 3,500 lbs (1,590 kg), use of gasoline with an octane rating of 91 or higher is recommended.
- Check if all loads are within limits at a public scale (see page 96). If a public scale is not available, add the estimated weight of your cargo load to the weight of the trailer (as quoted by the manufacturer) and the tongue load.
- The hitch, safety chains, and any other attachments are secure.
- All items in or on the trailer are properly secured and cannot shift while you drive.


WARNING

Exceeding any load limit or improperly loading your vehicle and trailer can cause a crash in which you can be seriously hurt or killed.

Check the loading of your vehicle and trailer carefully before starting to drive.

Remote Engine Start*

Start your vehicle's engine from extended distances using the two-way remote transmitter before you enter the vehicle.

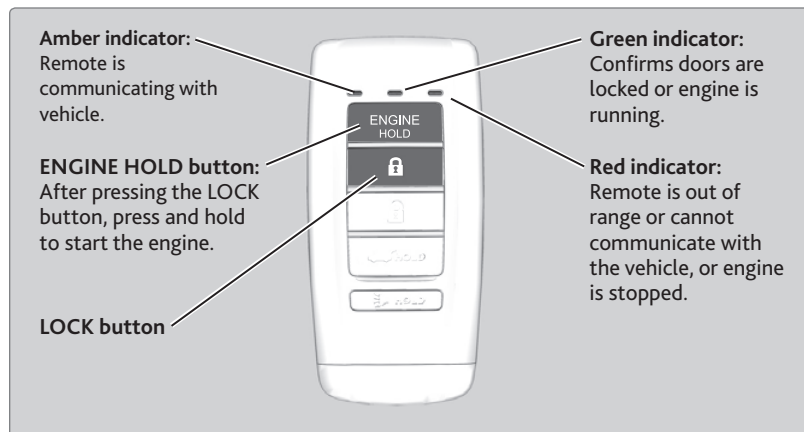

Make sure the vehicle is in a safe location when using remote engine start (i.e., a well ventilated area, away from any flammable materials).

Starting the Engine

Press the LOCK button, then press and hold the ENGINE HOLD button to remotely start the engine.

The engine runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.

While the engine is running, the climate control system adjusts the cabin temperature, the security system remains on, and lights and accessories remain off.

Stopping the Engine

Press and hold ENGINE.

The engine will also stop if it has been running for more than 10 minutes, or if any door is opened without using the remote or keyless access.

WARNING

Engine exhaust contains toxic carbon monoxide gas.

Breathing carbon monoxide can kill you or cause unconsciousness.

Never use the remote engine starter when the vehicle is parked in a garage or other area with limited ventilation.

**if equipped*


Starting to Drive

The keyless access system allows simple push-button start.

Before Starting the Engine

Keep your foot firmly on the brake pedal when starting the engine.

The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 m). When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce battery drain.

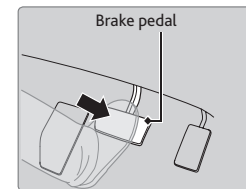

Changing the Power Mode

Accessory or On Mode: Press the ENGINE START/STOP button once without pressing the brake pedal for Accessory mode. Press it again for On mode.

Starting the engine: Press and hold the brake pedal, then press the ENGINE START/STOP button. Keep your foot firmly on the brake pedal when starting the engine.



Turning the vehicle off:

You can turn the engine off when the vehicle is completely stopped.

1. Put the transmission into Park (P).
2. Press the ENGINE START/STOP button with your foot on the brake pedal.

Shifting

Change your vehicle's gears to begin driving.

■ Electronic Gear Selector

Select the vehicle's gear using a simple button interface.

Park (P): Used for parking or starting or turning off the vehicle. Press P with the brake pedal pressed. A red indicator appears.

Reverse (R): Used for reversing. Pull back R. A green indicator appears.

Neutral (N): Used for idling. Press N. A red indicator appears

Drive (D/S): Used for normal driving (D) or driving in sequential mode (S) (see page 101). Press D/S once for normal driving. Press D/S twice for sequential mode driving. A green indicator appears. Make sure the parking brake is released (see page 104).



⚠ WARNING

The vehicle can roll away if left unattended without confirming that Park is engaged. Always keep your foot on the brake pedal until you have confirmed that P is shown on the gear position indicator.

NOTICE

When you change from D to R and vice versa, press the brake pedal and come to a complete stop, then select the intended gear position while maintaining brake pressure.

Auto park mode

For your convenience, Park (P) is automatically selected when all of the following conditions are met:

- The vehicle is stopped.
- The driver's seatbelt is unbuckled.
- The driver's door is opened.




Car wash mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps while the engine is on:

1. Press and hold the brake pedal.
2. Select N.
3. Within 5 seconds, press the ENGINE START/STOP button. The gear position remains in Neutral with the power mode in Accessory for 15 minutes. After 15 minutes (or if the vehicle is turned off at any time), the gear position changes to Park and the vehicle turns off.

■ Sequential Mode

Use the paddle shifters to change gears from 1st through 9th without removing your hands from the steering wheel.

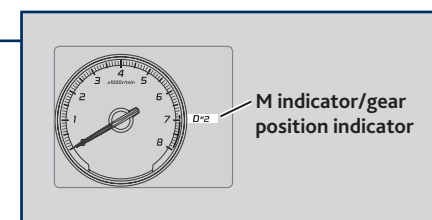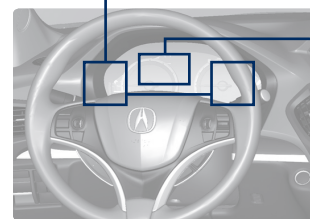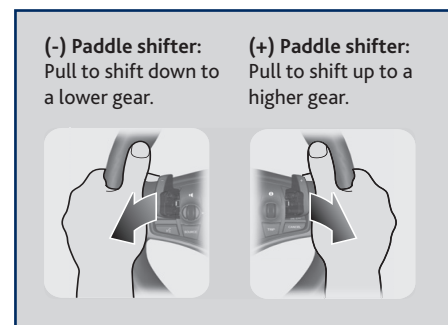

When the transmission is in D: The vehicle goes into sequential shift mode momentarily, and the gear position indicator comes on. When you start traveling at a constant speed, sequential mode and the gear position indicator automatically go off.

When the transmission is in S: The vehicle goes into sequential mode, and the M (sequential mode) indicator and gear position indicator come on. Use the paddle shifters to change gears.

To cancel this mode, hold the + paddle shifter for two seconds or push D. The M indicator and gear position indicator go off.

Auto Idle Stop*


Automatically stops and restarts the engine to help maximize your fuel economy, depending on environmental and vehicle conditions.

■ Activating Auto Idle Stop

When the vehicle stops with the gear position in Drive (D) and the brake pedal is pressed, the engine turns off and the auto idle stop indicator appears if conditions permit.

When you release the brake pedal, turn the steering wheel, or press the accelerator pedal, the engine restarts and the vehicle begins to move.

Auto idle stop may not activate (or the engine may automatically restart) when the engine is warming up, the air conditioning system is on, the 12V battery is charging, or when other conditions are met. For a complete list of conditions, see your Owner's Manual at owners.honda.com.

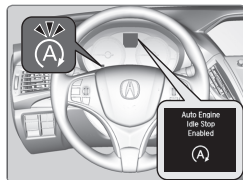


■ Turning the System On or Off

Press the Auto Idle Stop Off button to turn the system off. Press the button again to turn it on. The system defaults to On every time you start the engine.



Integrated Dynamics System

Choose a driving mode for your preference based on road conditions, vehicle speed, and handling.

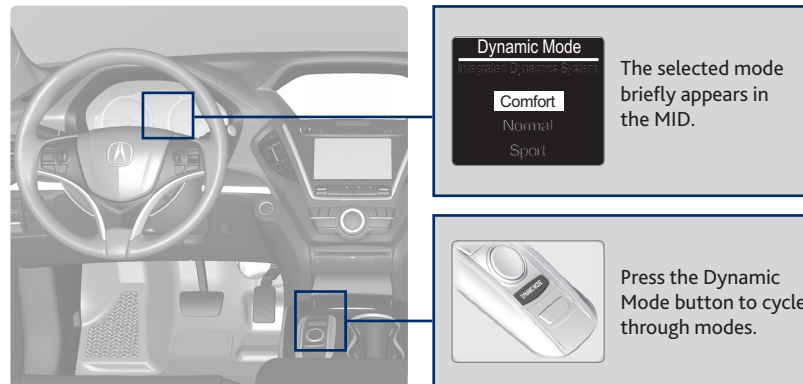

Comfort: Maximizes driver comfort through increased steering assist.

Normal: Balances performance for everyday driving.

Sport: Enhances vehicle response and feel through decreased steering assist, enhanced throttle response and torque biasing.

Vehicle Stability Assist (VSA®)


Also known as Electronic Stability Control (ESC), this helps stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It assists in maintaining traction on slippery surfaces by regulating engine output and selectively applying the brakes.

■ Turning VSA On or Off

VSA is turned on every time you start the vehicle. If you turn VSA off, your vehicle has normal braking and cornering ability, but VSA traction and stability enhancement become less effective.

Press and hold the VSA OFF button until you hear a beep to turn VSA on or off. The VSA Off indicator appears when the system is off.

When VSA is off, traction control allows the wheels to spin more freely at low speed. This can be helpful when trying to free your vehicle if it is stuck in mud or snow.

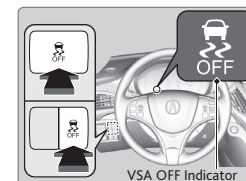

**if equipped*

Braking

Slow down or stop your vehicle, and keep it from moving when parked.

■ Foot Brake

Press the brake pedal to slow down or stop your vehicle from moving.

■ Brake Assist System

During hard or emergency braking, the system increases braking force. The brake pedal may move slightly or make a noise; this is normal. Continue to hold the brake pedal firmly down.

■ Anti-Lock Brake System (ABS)

During hard or emergency braking, the system rapidly pumps the brakes to prevent wheel lockup and help you maintain steering control. The brake pedal may pulsate slightly during ABS operation; this is normal. Do not pump the brake pedal, and continue to hold it firmly down.

You may periodically hear electric motor sounds from the engine compartment. Also, you may feel vibration through the vehicle while the ABS is active. These are all normal.

NOTICE


The ABS may not function correctly if you use an incorrect tire type and size.

■ Parking Brake

Apply the electric parking brake as you're getting ready to step out of the vehicle once your drive is complete.

To apply: Press the electric parking brake switch. Hold the switch down for emergency braking while the vehicle is moving.

To release: Depress the brake pedal, then pull up on the electric parking brake switch. **Or,** press the accelerator while the vehicle is in gear.

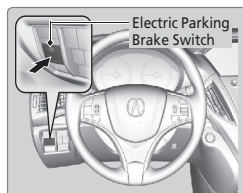

■ Automatic Brake Hold

Use brake hold to make stop-and-go driving easier. It maintains rear brake hold even after the brake pedal is released. Make sure the vehicle is on and your seat belt is fastened when operating this feature.



To turn the system on or off: Press the automatic brake hold button.

To activate: Brake to a full stop. Once the brake-hold indicator lamp comes on, release the brake pedal.

To release: Press the accelerator.

⚠ WARNING

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never activate the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.

⚠ WARNING


Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle moves unexpectedly, it may cause a crash, resulting in serious injury or death.

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in (P) and applying the parking brake.

Adaptive Cruise Control (ACC) with Low Speed Follow

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours.

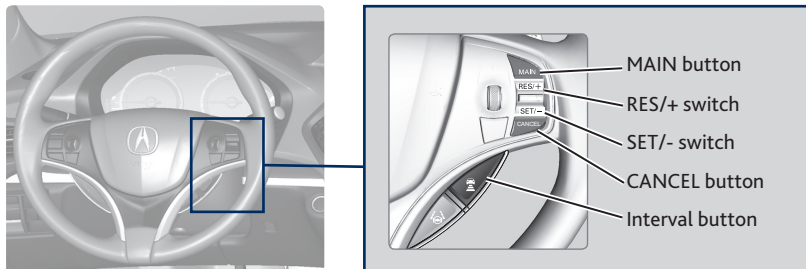

Following-distance		When the Set Speed is:	
		50 mph (80 km/h)	65 mph (104 km/h)
Short		83 feet 25 meters 1.1 sec	100 feet 31 meters 1.1 sec
Middle		110 feet 33 meters 1.5 sec	137 feet 42 meters 1.5 sec
Long		154 feet 47 meters 2.1 sec	200 feet 61 meters 2.1 sec
Extra Long		204 feet 62 meters 2.8 sec	265 feet 81 meters 2.8 sec

■ Activating and Setting the Vehicle Speed

1. Press MAIN. The ACC indicator appears.
2. Accelerate to the desired speed.

Above 25 mph/40 km/h: Take your foot off the accelerator pedal, and press SET/- to set the speed.


Below 25 mph/40 km/h (Low Speed Follow): Press SET/- to set the speed at 25 mph/40 km/h.



■ Adjusting the Vehicle Speed

Press RES/+ to increase speed or SET/- to decrease speed.

Each time you press the switch up or down, the vehicle speed is increased or decreased by about 1 mph/1 km/h. If you keep the switch pressed up or down, the vehicle speed increases or decreases by 5 mph or 5 km/h until you release it.

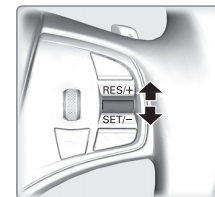

■ Adjusting the Following Interval

Press the Interval button to change the following distance. Each time you press the button, the following distance cycles through short, middle, long, and extra long.



■ Switching to Standard Cruise Control

Press and hold the Interval button. Press and hold again to switch back to ACC.


■ During Operation

If the vehicle detected ahead of you slows down abruptly, or if another vehicle is detected cutting in front of you, the beeper sounds and a message appears on the MID, and the head-up warning lights* come on.

When a vehicle detected ahead is within ACC with low speed follow range and slows to a stop, your vehicle also stops. The Stopped message appears on the multi-information display.

When the vehicle ahead of you starts again, the vehicle icon on the multi-information display blinks. Press RES/+ / SET/- up or down, or depress the accelerator pedal to resume the prior set speed.

If your vehicle is stationary and there is no vehicle detected ahead of you, the system cancels and a beep sounds.

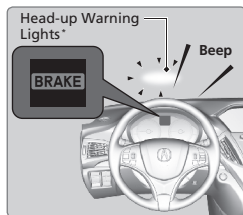

⚠ WARNING

Exiting a vehicle that has been stopped while the ACC with LSF system is operating can result in the vehicle moving without operator control. Always make sure the gear is in Park (P) before exiting the vehicle.

A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with LSF.

⚠ WARNING

ACC with LSF has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you.


Always be prepared to apply the brake pedal if conditions require.

■ Canceling ACC

You can press CANCEL, press MAIN, or depress the brake pedal. The ACC indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, a beep sounds and a message appears on the multi-information display.

After cruise control has been canceled, you can still resume the prior set speed by pressing RES/+.

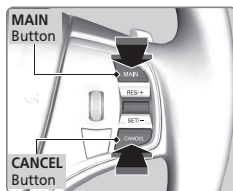

⚠ WARNING

Improper use of ACC with LSF can lead to a crash.


Use ACC with LSF only when driving on expressways or freeways and in good weather conditions.

**if equipped*

Collision Mitigation Braking System™ (CMBS™)

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours.

The system can alert you when a potential collision is determined, and reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

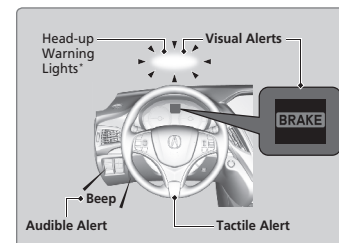

The system activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you is about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and there is a chance of a collision with an oncoming detected vehicle or a pedestrian in front of you.

■ Alert Stages

The system has three alert stages for a possible collision. Depending on the circumstances or CMBS settings, CMBS may not go through all of the stages before initiating the last stage.

Stage 1: Head-up warning, beep, and steering-wheel vibration

Stage 2: Head-up warning, beep, light seat belt retraction, and light brake application

Stage 3: Head-up warning, beep, strong seat belt retraction, and strong brake application

■ Changing Settings


Determine the warning timing. Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Vehicle Settings.
3. Select Forward Collision Warning Distance.
4. Select Long, Normal, or Short.
5. Press BACK to exit the menu.

**if equipped*

■ Turning CMBS On or Off

Press and hold CMBS OFF. A beep sounds and a message appears in the MID. The CMBS indicator appears when the system is off.

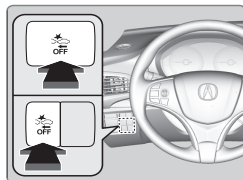

Important Safety Reminder


CMBS is designed to reduce the severity of an unavoidable collision. It does not prevent collisions nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.

Lane Keeping Assist System (LKAS)

Provides steering input to help keep the vehicle in the middle of a detected lane and visual and tactile alerts if the vehicle is detected drifting out of its lane while driving between 45–90 mph (72–145 km/h).


If your vehicle begins to drift away from the center of a detected lane without a turn signal activated, steering torque is applied to help keep your vehicle centered within the lane.

If your vehicle continues to drift and gets too close to detected left or right side lane markings, a Lane Departure message appears on the MID and the steering wheel vibrates. In either case, take appropriate action to stay within your driving lane.

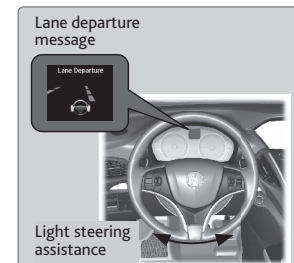

■ Turning LKAS On or Off

1. Press MAIN. LKAS appears in the MID.
2. Press the LKAS button. Lane outlines appear in the MID. Dotted lane lines turn solid when the system operates.
3. Press MAIN or the LKAS button to turn the system off.

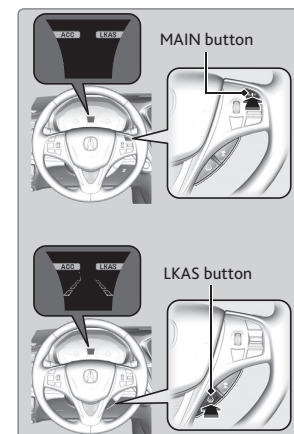

Important Safety Reminder

LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.

Do not use when towing.

Road Departure Mitigation (RDM)

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings while driving between 45–90 mph (72–145 km/h).



If your vehicle is getting too close to detected lane markings without a turn signal activated, a message appears in the MID. Steering wheel torque and vibrations are applied to help your vehicle stay in the lane.

Braking may also be applied if the lane lines are solid and continuous.

If the system operates several times without detecting driver response, the system beeps to alert you.

■ Turning the System On or Off

Press the RDM button to turn the system on or off. A green indicator appears on the button when the system is on.

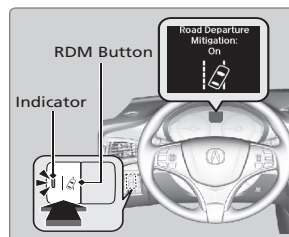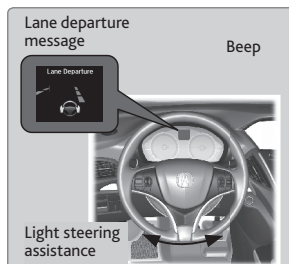

■ Changing Settings

Determine the warning timing, or turn the system off. Use the interface dial to make selections.

1. Press SETTINGS.
2. Select Vehicle Settings. The vehicle must be in Park (P).
3. Select Road Departure Mitigation Setting.
4. Select from the options.

Normal (default): Steering control starts from inside the lane edge.

Wide: Steering control starts from outside the lane edge.

Warning Only: The system only provides a BRAKE message, but does not apply steering or braking.

5. Press BACK to exit the menu.

Important Safety Reminder


The system has limitations. Overreliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.

Blind Spot Information (BSI)*

Alerts you to a detected vehicle in your left or right blind spot while driving 20 mph (32 km/h) or higher.

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear. The detection area extends about 10 ft. (3 m) from the sides of the vehicle, and from the midpoint of the vehicle to about 10 ft. (3m) beyond the rear bumper.

When your turn signal is on and a vehicle is detected, the blind spot indicator blinks and a beep sounds until the area is clear or the turn signal is off.

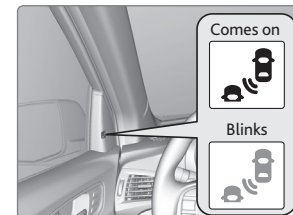

■ Changing Settings

Change the alert type, or turn the system on or off. Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Vehicle Settings.
3. Select Blind Spot Info.
4. Select an alert type, or Off.
5. Press BACK to exit the menu.

⚠ WARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death. Do not rely only on the blind spot information system when changing lanes.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.


Important Safety Reminder

Like all assistance systems, BSI has limitations. Over-reliance on BSI may result in a collision. The system is for your convenience only.

*if equipped


Parking Sensor System*

When the system senses an object when you are parking or backing up, an indicator appears on the upper display and a series of beeps will sound. As you get closer to the object, the beep rate increases.

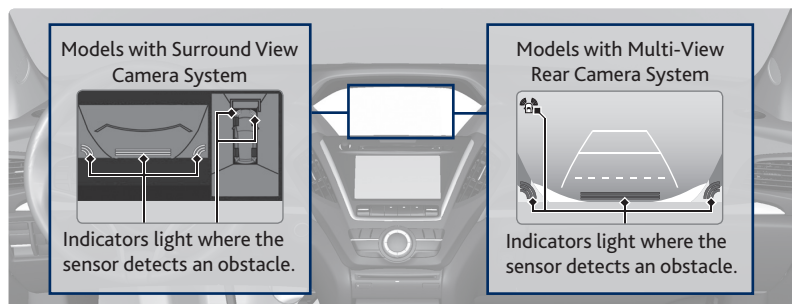

■ Turning the System On or Off


Press the parking sensor button. A green indicator light appears on the button when the system is on.

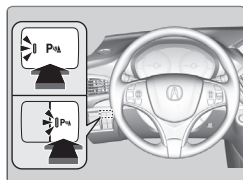

*if equipped

Multi-View Rear Camera*

When you change the gear to Reverse (R), a real-time image of the area behind your vehicle is shown in the display, along with helpful parking guidelines.

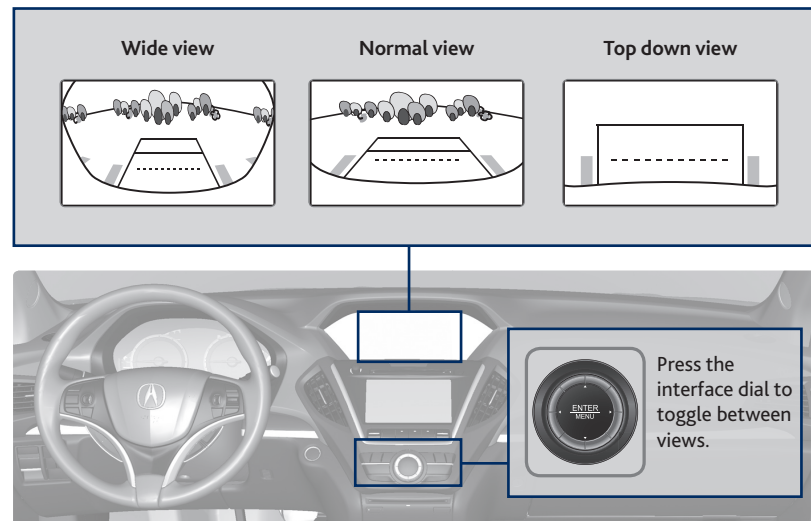

■ Changing Guidelines

Turn the guidelines on or off. Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Camera Settings
3. Select one of the options.
Fixed Guidelines: Guidelines appear when you change the gear to Reverse. Select On or Off.
Dynamic Guidelines: Guidelines move as you turn the steering wheel. Select On or Off.
4. Press BACK to exit the menu.

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display, which does not give you all information about conditions at the rear of your vehicle.

*if equipped

Cross Traffic Monitor*

Alerts you if a detected vehicle is approaching from a rear corner when your vehicle is in Reverse (R) at speeds of 3 mph (5 km/h) or lower, which can be helpful when backing out of parking spaces.



The system does not provide alerts for a vehicle that is moving away from your vehicle, and it may not detect pedestrians, bicycles, or stationary objects.

■ Turning the System On or Off

1. Press SETTINGS.
2. Select Camera Settings.
3. Select Cross Traffic Monitor.
4. Select On or Off.
5. Press BACK to exit the menu.

⚠ CAUTION

This system cannot detect all approaching vehicles and may not detect an approaching vehicle at all.


Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.

*if equipped


Surround View Camera*

Four cameras assist in helping you view blind spots around the vehicle.

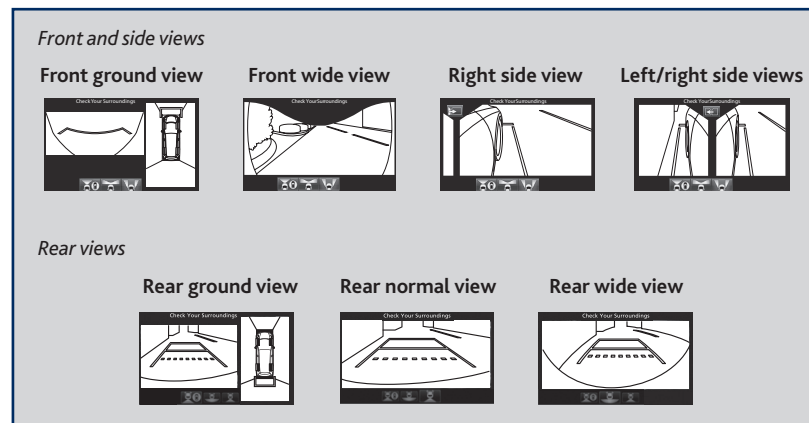

■ Displaying Front or Side Views

Press the CAMERA button when the vehicle is stationary or moving at 12 mph (20 km/h) or less. Press the button again or the interface dial to switch camera views.

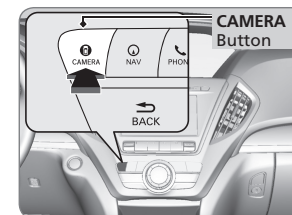

■ Displaying the Rear View

Change the gear to Reverse (R) to display the rear view. Press CAMERA or the interface dial to switch rear views.

The surround view camera does not eliminate all blind spots. Visually confirm safety around the vehicle with your own eyes and the mirrors. Do not rely on the camera view.

*if equipped

■ Changing Camera Settings

Use the interface dial to make and enter selections.

1. Press **SETTINGS**.
2. Select **Camera Settings**.
3. Select **Surround View Camera**.
4. Select one of the options:
Fixed Guidelines: Guidelines appear when you change the gear to Reverse. Select **On** or **Off**.
Dynamic Guidelines: Guidelines move as you turn the steering wheel. Select **On** or **Off**.
5. Select an option to make your preferred changes.
6. Press **BACK** to exit the menu.

⚠ WARNING

Failure to visually assess the area around the vehicle (directly or by use of the mirrors) may result in a crash causing serious injury or death.

The areas shown in the surround view camera system display are limited. The display may not show all pedestrians or other objects around your vehicle.

Do not solely rely only on the surround view camera system display to assess whether it is safe to move your vehicle.

⚠ WARNING

Failure to pay proper attention to your surroundings while driving may result in a crash causing serious injury or death.

To help mitigate the chances of a collision, only look at the surround view camera system display when it is safe to do so.

Refueling

Use the proper fuel and refueling procedure to ensure the best performance and safety of your vehicle.

■ Fuel Information

Use of unleaded premium gasoline of 91 octane or higher is recommended.

- Acura recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.


NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.

■ How to Refuel

Your fuel tank is not equipped with a fuel fill cap. You can insert the filler nozzle directly into the filler pipe. The tank seals itself again when you pull out the filler nozzle.

1. The fuel fill door is located at the left rear of the vehicle. Park next to the service pump that is most accessible, and turn off the engine.
2. Press the fuel fill door release button. The fuel fill door opens.
3. Place the end of the filler nozzle on the lower part of the filler opening, then insert it slowly and fully. Make sure that the end of the filler nozzle goes down along with the filler pipe.
4. After filling, wait about 5 seconds before removing the filler nozzle. Close the fuel fill door by hand.

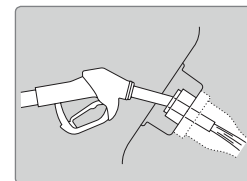

⚠ WARNING



Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

■ Refueling from a Portable Fuel Container

When you refuel from a portable fuel container, use the funnel provided with your vehicle.

1. Turn off the engine.
2. Press the fuel fill door release button. The fuel fill door opens.
3. Take the funnel out of its clip in the cargo area (see page 126).
4. Remove the funnel from the case.
5. Place the end of the funnel on the lower part of filler opening, then insert it slowly and completely. Make sure that the end of the funnel goes down along with the filler pipe.
6. Fill the tank with fuel from the portable fuel container. Pour fuel carefully so you do not spill any.
7. Remove the funnel from the filler neck. Wipe up any fuel from the funnel before storing it.
8. Shut the fuel fill door by hand.

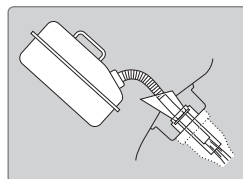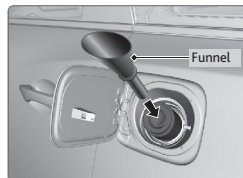

NOTICE

Do not insert the nozzle of a portable fuel container or any funnel other than the one provided with your vehicle. Doing so can damage the fuel system.

Do not try to pry open or push open the sealed fuel tank with foreign objects. This can damage the fuel system and its seal.

Improving Fuel Economy and Reducing CO₂ Emissions

Achieving fuel economy and reducing CO₂ emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.


HANDLING THE UNEXPECTED

Learn about what to do in critical or emergency situations.

Keyless Access Remote Battery Strength

If the battery life in your remote transmitter is weak, a message appears in the MID with information on how to start the engine.




1. Touch the back of the remote transmitter to the ENGINE START/STOP button while the indicator is flashing.
2. With the brake pedal pressed, press the ENGINE START/STOP button within 10 seconds.

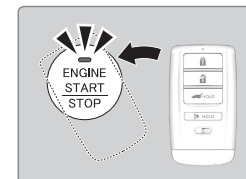

Jump Starting

Turn off the power to all electric devices, including audio and lights. Turn off the engine, then open the hood (see page 139).

1. Remove the engine cover (see page 139).
2. Connect the first jumper cable to your vehicle's battery (+) terminal.
3. Connect the other end of the first jumper cable to the booster battery (+) terminal. Use a 12-volt booster battery only.
4. Connect the second jumper cable to the booster battery (-) terminal.
5. Connect the other end of the second jumper cable to the engine hanger (as shown). Do not connect this jumper cable to any other part.
6. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
7. Attempt to start your vehicle's engine. If it turns over slowly, make sure that the jumper cables have good metal-to-metal contact.

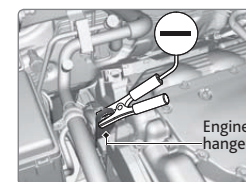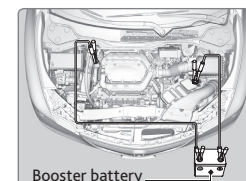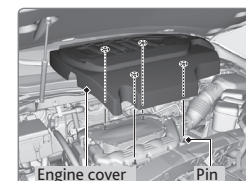

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

⚠ WARNING

A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

■ After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order:

1. Disconnect the jumper cable from your vehicle's ground.
2. Disconnect the other end of the jumper cable from the booster battery (-) terminal.
3. Disconnect the jumper cable from your vehicle's battery (+) terminal.
4. Disconnect the other end of the jumper cable from the booster battery (+) terminal.
5. Have your vehicle inspected by a nearby service station or a dealer.

Emergency Engine Stop

The ENGINE START/STOP button may be used to stop the engine due to an emergency situation even while driving. If you must stop the engine, choose one of the following operations:

- Press and hold the ENGINE START/STOP button for two seconds, **OR**
- Firmly press the ENGINE START/STOP button three times.



The steering wheel will not lock. The power mode changes to ACCESSORY, unless the gear is in Park (P), in which case the power mode changes to VEHICLE OFF.

Because turning off the engine also disables the power assist the engine provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Downshift gears and use both feet on the brake pedal, if necessary, to slow the vehicle and stop immediately in a safe place.

U.S. models: The gear position automatically changes to Park (P) after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.

Canadian models: The gear position automatically changes to Park (P) after the vehicle comes to a complete stop. Then press the ENGINE START/STOP button twice without depressing the brake pedal to change the mode to VEHICLE OFF.

NOTICE

Do not press the button while driving unless it is absolutely necessary for the engine to be switched off.

Overheating

If you see the multi-information display (MID) message "Stop Driving When Safe. Engine Temperature Too Hot," your engine is overheating. You may also notice the temperature gauge is at the H mark, the engine suddenly loses power, or steam or spray comes out from under the hood.


1. Immediately park the vehicle in a safe place. Turn off all accessories and turn on the hazard warning lights.

2. **If no steam or spray is present:** Keep the engine running and open the hood (see page 139).

If steam or spray is present: Turn off the engine and wait until it subsides. Then, open the hood.

3. Check that the cooling fan is operating. If it is not, immediately stop the engine. Otherwise, idle the engine until the MID message goes off.

4. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks. If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark. If there is no coolant in the reserve tank, make sure the radiator is cool, then cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on. Then, fill the reserve tank to the MAX mark.

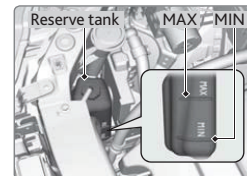

Once the engine has cooled sufficiently, restart it and check the temperature gauge. If the temperature needle has gone down, resume driving. If it has not gone down, contact a dealer for repairs.

⚠ WARNING

Steam and spray from an overheated engine can seriously scald you. Do not open the hood if steam is coming out.

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the radiator cap.


NOTICE

Continuing to drive with the temperature gauge needle at the H mark may damage the engine.

Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving.

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator appears with a message in the multi-information display. Use the right selector wheel on the steering wheel to scroll to the tire pressure monitor to see pressure readings for each tire (see page 30).

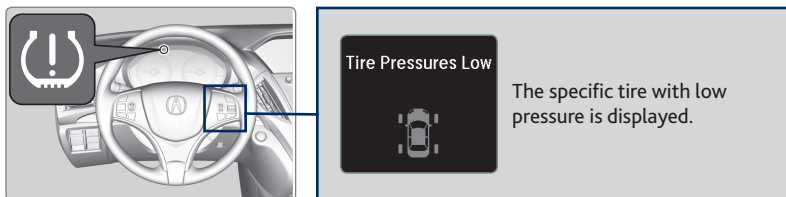

■ What to Do

Stop your vehicle in a safe place. Adjust the tire pressure to the level specified on a label on the driver's doorjamb.

■ Tire Fill Assist

Your vehicle gives you visual and audible alerts to help you adjust the tire pressure to its appropriate level when the vehicle is on.

When the correct pressure is reached: The system beeps and the exterior lights flash continuously for 5 seconds. Stop filling the tire.

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.

■ Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.



Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Handling a Flat Tire

If a tire goes flat while driving, grasp the steering wheel firmly and brake gradually to reduce speed. Stop in a safe place. Replace the flat tire with a compact spare tire. Go to a dealer as soon as possible to have the full-size tire repaired or replaced.


Using the Spare Tire*

■ Before Changing the Tire

1. Park the vehicle on a firm, level, and non-slippery surface.
2. Change the gear to Park (P) and apply the parking brake.
3. Turn on the hazard warning lights and turn the vehicle off.

■ Getting Ready to Change the Tire


1. Open the tailgate. Turn on the cargo lights located on the inside of the tailgate, if necessary (see page 39). Push the rear edge of the handle on the floor lid and open the lid.

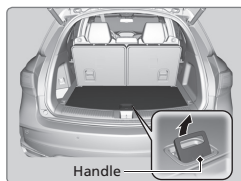


2. Take out the cargo floor box.




3. Take the jack, wheel nut wrench, and jack handle bar out of the tool case.

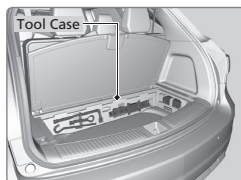


4. Remove the cover on the cargo area lining to access the shaft for the spare tire hoist.

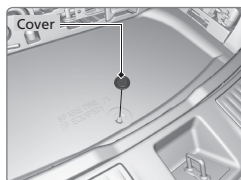


5. Put the wheel nut wrench with the jack handle bar on the hoist shaft. Turn the wrench to the left (counter-clockwise) to lower the spare tire to the ground.

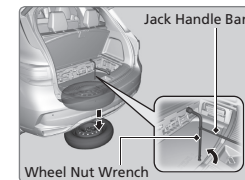

6. Keep turning the wheel nut wrench to create slack in the cable. Remove the bracket from the spare tire.

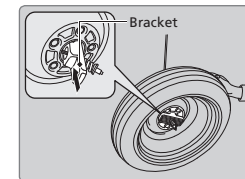

7. Place the compact spare tire (wheel side up) under the vehicle body, near the tire that needs to be replaced.

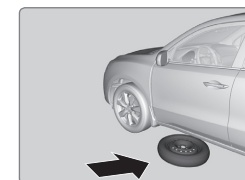


8. Loosen each wheel nut about one turn using the wheel nut wrench.



**if equipped*

■ Setting Up the Jack


1. Place the jack under the jacking point closest to the tire to be changed.

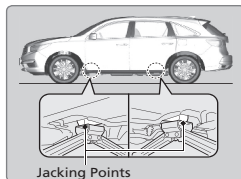

2. Turn the end bracket clockwise (as shown) until the top of the jack contacts the jacking point. Make sure that the jacking point tab is resting in the jack notch.



3. Assemble the jack, jack handle bar, and jack handle (as shown). Raise the vehicle until the tire is off the ground.

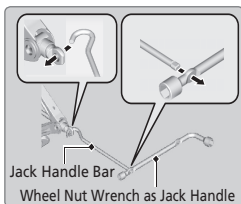

⚠ WARNING

The vehicle can easily roll off the jack, seriously injuring anyone underneath. Follow the directions for changing a tire exactly and never get under the vehicle when it is supported only by the jack.

The following instructions must be followed to use the jack safely:



- Do not use the jack with people or luggage in the vehicle.
- Use the jack provided in your vehicle. Other jacks may not support the weight (load) or fit the jacking point.
- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.

NOTICE

Do not use the jack if it doesn't work properly. Call your dealer or a professional towing service.

■ Replacing the Flat Tire



1. Remove the wheel nuts and flat tire.
2. Mount the compact spare tire. Replace the wheel nuts and lightly tighten them.
3. Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around, tightening the nuts, two to three times in this order. Do not over tighten the wheel nuts.

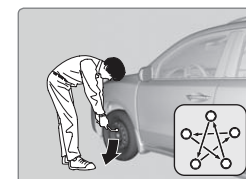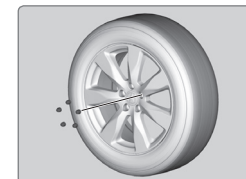

If you drive with the spare tire installed, the low tire pressure/TPMS indicator appears. The indicator stays on until a regular tire is installed.

■ Storing the Flat Tire

1. Remove the center cap and place the flat tire face up under the hoist.
2. Insert the hoist bracket into the center hole of the flat tire.
3. Slowly turn the wheel nut wrench clockwise to take up the hoist cable slack. Make sure the bracket is seated in the center hole of the flat tire.
4. Turn the wheel nut wrench clockwise (using the jack handle bar) until the flat tire rests against the underbody of the vehicle and you hear the hoist click.
5. Securely store the jack and wheel nut wrench back in the tool case. Store the case in the cargo area.

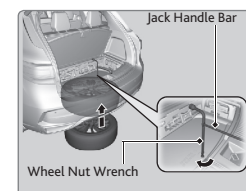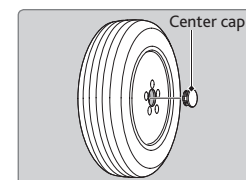

⚠ WARNING

Loose items can fly around the interior in a crash and can seriously injure the occupants.

Store the wheel, jack, and tools securely before driving.

Tire Repair Kit*



If a tire has a small puncture, you can use the tire repair kit to temporarily repair it. The puncture must be smaller than 3/16-inch (4 mm) and not in the tire sidewall. Go to a dealer to have the full-size tire permanently repaired or replaced.

■ Before Repairing the Tire

1. Park the vehicle on a firm, level, and non-slippery surface.
2. Change the gear to Park (P) and apply the parking brake.
3. Turn on the hazard warning lights and turn the vehicle off.

■ Getting Ready to Repair the Tire

1. Pull the handle on the cargo area floor lid and open the lid.
2. Remove the cargo floor box.
3. Remove the kit from the case.
4. Place the kit face up on flat ground near the punctured tire and away from traffic. Do not place the kit on its side.
5. Follow the instructions in the kit to repair the tire.

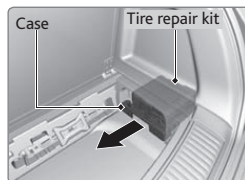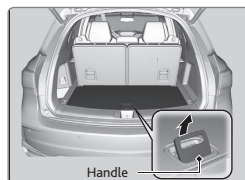

NOTICE

Do not use an unapproved puncture-repairing agent on a flat tire, as it can damage the tire pressure sensor.


**if equipped*

Fuse Locations

If any electrical devices are not working, turn off the vehicle and check to see if any applicable fuse is blown. Fuse locations are shown on the fuse box cover. Locate the fuse by the fuse number and box cover number.

■ Driver's Side Interior Fuse Boxes


Box A, located under the dashboard.

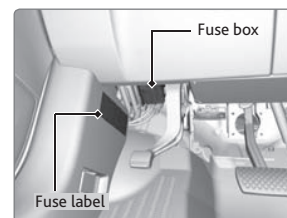

	Circuit Protected	Amps
1	AS Door Lock	10 A
2	RR DR Door Lock	7.5 A
3	DR Door Lock	7.5 A
4	FR AS Door Unlock	10 A
5	RR DR Door Unlock	7.5 A
6	DR Door Unlock	(7.5 A)
7	D/L Main	20 A
8	—	—
9	ETS TELE	20 A
10	IG 1 RR	15 A
11	Meter* Shifter*	7.5 A
12	IG1 FR	20 A
13	ACC	7.5 A

	Circuit Protected	Amps
14	—	—
15	DR P/Seat (SLI)	20 A
16	S/R	20 A
17	RR DR P/W	20 A
18	Smart	10 A
19	FR DR P/W	20 A
20	—	—
21	Fuel Pump	20 A
22	IG 1 AS	15 A
23	ABS/VSA* Smart*	7.5 A
24	ACG AS	7.5 A
25	STRLD *	7.5 A
26	IG2 HAC	7.5 A
27	DRL	7.5 A
28	ACC Key Lock	7.5 A
29	DR P/Seat (LUM)	7.5 A
30	INT Lights	7.5 A
31	ETS TILT	20 A
32	DR P/Seat (REC)	20 A
33	—	—
34	—	—


Box B, located under the dashboard. Take off the cover to open.

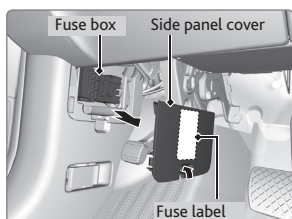

	Circuit Protected	Amps
1	VST 1	30 A
2	Horn	10 A
3	VST 2	30 A
4	–	–
5	–	–
6	–	–
7	–	–
8	–	–
9	Meter	10 A
10	RES/CP/AA*	10 A
11	MICU	7.5 A
12	EPS/VSA	7.5 A
13	Audio/TCU	7.5 A
14	Back Up	10 A
15	Audio/ANC	20 A

■ Passenger's Side Interior Fuse Box

Located on the lower side panel. Remove the cover to access.

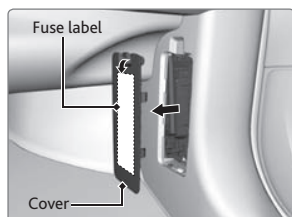


	Circuit Protected	Amps
1	EPTR*	(30 A)
2	RR AS P/W	20 A
3	ACM	20 A
4	FR DEF*	(15 A)
5	AVS Heated Seat	20 A
6	FR AS P/W	20 A
7	AS P/Seat (SLI)	20 A
8	AS P/Seat (REC)	20 A
9	AS P/Seat (LUM)	(7.5 A)

	Circuit Protected	Amps
10	Spare	5 A
11	Heated Steering *	(10 A)
12	–	–
13	–	–
14	RR ACC Socket	20 A
15	FR ACC Socket	20 A
16	–	–
17	–	–
18	AMP	30 A
19	SRS	10 A
20	AS ECU	7.5 A
21	Option	7.5 A
22	–	–
23	–	–
24	OPDS	7.5 A
25	ILLUMI (INT)	5 A
26	EPTL*	(30 A)
27	CTR ACC Socket	20 A
28	AC INVTR	(30 A)

*if equipped

■ Engine Compartment Fuse Boxes

Located near the brake fluid reservoir. Push the tabs to open the box.

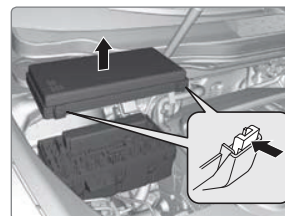

	Circuit Protected	Amps
1	STRLD* ²	7.5 A
2	–	–
3	ACG FR	15 A
4	Washer	15 A
5	IG1 OP* ¹	(7.5 A)
6	ECU FR	7.5 A
7	VBSOL* ¹	(10 A)
	Starter* ²	7.5 A
8	FI Sub	15 A
9	DBW	15 A
10	FI Main	15 A
11	IG Coil	15 A
12	DRL R	10 A


	Circuit Protected	Amps
13	DRL L	10 A
14	Injector	20 A
15	Radio* ¹	20 A
16	Back Up	10 A
17	MG Clutch	(7.5 A)
18	FR Fog*	7.5 A
19	–	–
20	H/L HI R	7.5 A
21	–	–
22	Small* ¹	10 A
23	–	–
24	H/L HI L	7.5 A
25	SBW	15 A
26	H/L LO R	10 A
27	H/L LO L	10 A
28	Oil LVL	7.5 A
29	Main Fan	30 A
30	Sub Fan	30 A
31	Wiper Main	30 A

*1: Models without auto idle stop

*2: Models with auto idle stop


Located near the (+) battery terminal. Pull up to remove the cover.

This contains only the 60-amp fan fuse. Have your dealer replace this fuse.

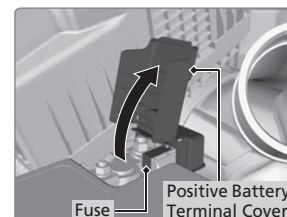

*if equipped


Located near the battery. Push the tabs to open the box.

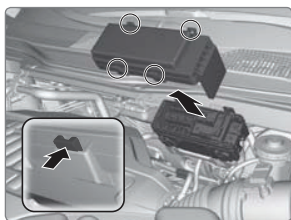

	Circuit Protected	Amps
1	Main Fuse	150 A
	VSA MTR	40 A
	VSA FSR	20 A
2	Stop & Horn Hazard*	30 A
	Hazard *	
	RR Blower & BMS	30 A
	DC/DC 3 *	60 A
	RR F/B-2	60 A
	AS F/B-2	60 A
	EPS	60 A

■ Rear Fuse Box

Located on the left side of the cargo area. Remove the cover using a cloth-wrapped flat-tip screwdriver to access.

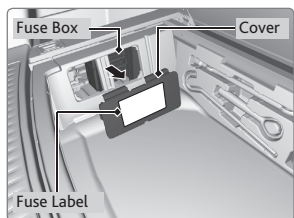

	Circuit Protected	Amps
1	PTG Closer	20 A
2	—	—
3	USB Charge	15 A
4	Fuel Lid	7.5 A



	Circuit Protected	Amps
3	H/L Washer *	(30 A)
	IG 1 B Main	30 A
	R/B Main	60 A
	DR F/B-1	50 A
	AS F/B-1	50 A
	RR F/B-1	60 A
	IG 1 A Main	30 A
4	DR F/B-2	50 A
	FI Main	40 A
5	FR Blower	40 A
6	RR DEF	40 A
7	IG 1 Main ST	30 A
8	Stop & Horn *	20 A
	Stop *	10 A
9	Hazard	10 A
10	BMS	7.5 A
11	Small LT *	7.5 A

	Circuit Protected	Amps
5	Seat Slide	20 A
6	—	—
7	RR Heat Seat *	(20 A)
8	—	—
9	—	—
10	—	—
11	—	—
12	Rear Wiper	10 A
13	Rear ECU	7.5 A
14	SH-AWD *	(20 A)
15	EPB-R	30 A
16	EPB-L	30 A
17	—	—
18	PTG MTR	40 A

**if equipped*

■ Inspecting and Changing Fuses

1. Turn off the vehicle, including headlights and all accessories.
2. Remove the fuse box cover.
3. Check the large fuse inside the engine compartment. If the fuse is blown, use a Phillips-head screwdriver to remove the screws and replace the fuse with a new one. Reinstall the screws.
4. Inspect the small fuses in the engine compartment and the vehicle interior. If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

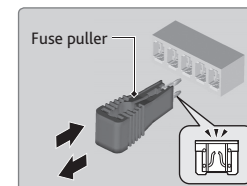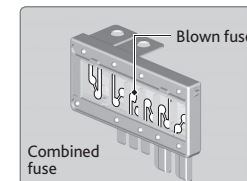

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

All models

Flat bed equipment: The operator loads your vehicle on the back of a truck. **This is the best way to transport your vehicle.**

2WD models

Wheel lift equipment: The tow truck uses two pivoting arms that go under the front tires and lift them off the ground. The rear tires remain on the ground. **This is an acceptable way to tow your vehicle.**

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

MAINTENANCE

Learn about basic maintenance that you can perform on the vehicle yourself, as well as information about how to best maintain the vehicle.

Safety Precautions

Some of the most important safety precautions are listed below; however, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the battery and all fuel-related parts.
- Never leave rags, towels, or other flammable objects under the hood. Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

■ Vehicle Safety

- The vehicle must be stationary, and parked on level ground with the parking brake set and the engine off.
- Be aware that hot parts can burn you.
- Be aware that moving parts can injure you.

⚠ WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations according to the schedules in this guide.


⚠ WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this guide.

Maintenance Minder™

When maintenance is due, the system message indicator comes on and the Maintenance Minder appears on the multi-information display every time you turn the vehicle on. Roll the right selector wheel to change displays.

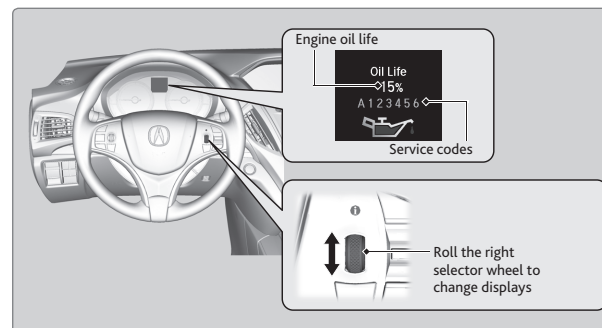

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.
- Inspect idle speed every 160,000 miles (256,000 km).
- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display.

■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

CODE	Maintenance Main Items
A	Replace engine oil ^{*1}
B	Replace engine oil ^{*1} and oil filter Inspect front and rear brakes Check expiration date for TRK bottle [*] Inspect tie rod ends, steering gearbox, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (Including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system [#] Inspect fuel lines and connections [#]

^{*1}: If the message Maintenance Due Now does not appear more than 12 months after the display is reset, change the engine oil every year.

[#]: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	Rotate tires
2	Replace air cleaner element ^{*2} Replace dust and pollen filter ^{*3} Inspect drive belt
3	Replace transfer-case fluid [*] and transmission fluid ^{*4}
4	Replace spark plugs Replace timing belt and inspect water pump ^{*5} Inspect valve clearance
5	Replace engine coolant
6	Replace rear differential fluid ^{*, *6}

^{*2}: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

^{*3}: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).


^{*4}: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher transmission temperature. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed at 30,000 miles (48,000 km).

^{*5}: If you drive regularly in very high temperatures (over 110°F, 43°C), in very low temperatures (under -20°F, -29°C), replace every 60,000 miles/100,000 km.

^{*6}: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher level of mechanical (Shear) stress to fluid. This requires differential fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the differential fluid changed at 7,500 miles (12,000 km), then every 15,000 miles (24,000 km).


**if equipped*

Under the Hood

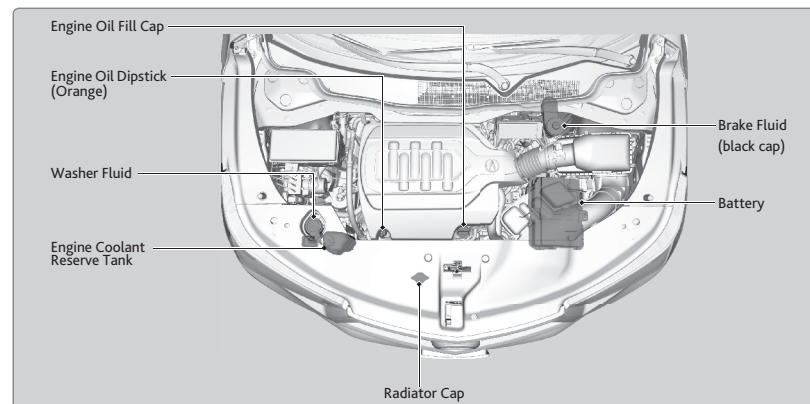


■ Opening the Hood

1. Park the vehicle on a level surface and set the parking brake.
2. Pull the hood release handle under the lower left corner of the dashboard.
3. Push up the hood latch lever in the center of the hood to release the lock mechanism and open the hood.

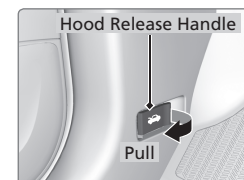

4. Lift the hood up about halfway. The hydraulic supports will continue to lift and hold it up.
When closing, lower the hood to approximately 12 inches (30 cm), then press down firmly with your hands.

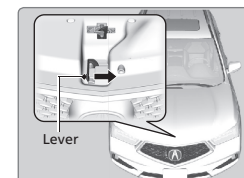

NOTICE

Do not open the hood when the wiper arms are raised. The hood will strike the wipers, and may damage either the hood or the wipers. Do not open the hood during auto idle stop^{*} operation.

■ Engine Compartment Cover

Certain parts in the engine compartment are protected by a cover. You may need to remove the cover when you perform certain maintenance work.

Pull up on the engine cover and remove it from the pins.





**if equipped*

Engine Oil

Park the vehicle on level ground, and wait approximately three minutes after turning the engine off before you check the oil.

■ Checking the Oil

1. Remove the dipstick (orange loop).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick all the way back into its hole.
4. Remove the dipstick again and check the level. It should be between the upper and lower marks. Add oil if necessary.

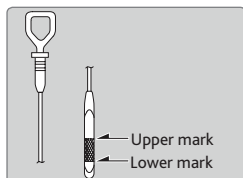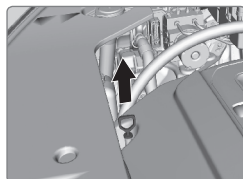


■ Recommended Engine Oil

- Genuine Acura Motor Oil
- Premium-grade 0W-20 detergent oil with an API Certification Seal on the container

This seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.




Use Genuine Acura Motor Oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

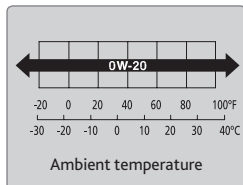

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is of the specified viscosity grade.

■ Adding Oil

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

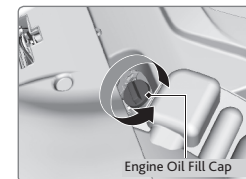


NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

■ Resetting the Engine Oil Life

If you change or replace the vehicle's engine oil yourself, you must reset the engine oil life. Use the right selector wheel on the steering wheel to make selections in the MID.

1. Scroll to Maintenance Info and select it to display the oil life reset mode.
2. Select Reset. The service code disappears and the oil life returns to 100%.

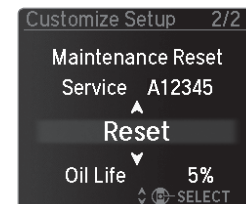

NOTICE


Failure to reset the engine oil life after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

Engine Coolant

Park the vehicle on level ground. Check the reserve tank and the coolant level in the radiator. **We recommend Acura Long Life Antifreeze/Coolant Type 2.**

■ Checking the Reserve Tank

1. Check the amount of coolant in the reserve tank.
2. If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
3. Inspect the cooling system for leaks.


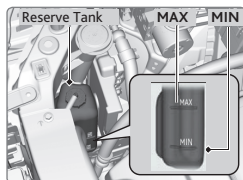


NOTICE

For vehicles used in temperatures below -31°F (-35°C), change the coolant from the standard 50/50 antifreeze/water mix to one with added antifreeze. Consult a dealer for more information.

■ Adding Coolant

1. Make sure the engine and radiator are cool.
2. Remove the engine compartment cover (see page 139).
3. Turn the radiator cap counterclockwise and relieve any pressure in the coolant system. Do not push the cap down when turning.
4. Continue turning the cap counterclockwise until you can remove it.
5. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
6. Put the radiator cap back on and tighten it fully.
7. Pour coolant into the reserve tank until it reaches the MAX mark. Put the cap back on the reserve tank.

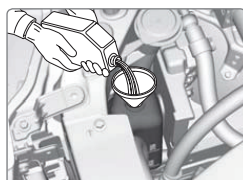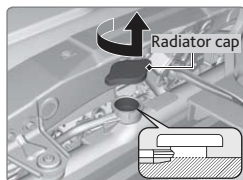

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.

Window Washer Fluid

Add washer fluid as necessary (see page 139). Pour it carefully and do not overflow the reservoir.



Washer Fluid Low



If the washer fluid is low, a message appears on the multi-information display.

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

Checking the Battery

The battery condition is monitored by the sensor on the negative terminal. If there is a problem with the sensor, have your vehicle checked by a dealer. Check the battery terminals monthly for corrosion.



Charging System Problem



If there is a problem with the battery sensor, a message appears on the multi-information display.

If your battery is labeled AGM, consult your dealer before you connect a battery charger. AGM batteries require compatible chargers.

Models with Auto Idle Stop

Using a battery other than this specified type may shorten the battery life, and prevent Auto Idle Stop from activating. If you need to replace the battery, make sure to select the specified type. Ask a dealer for more details.

⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**




For Jump starting, see page 121.

Changing Wiper Blades



If the wiper blades leave streaks across the windshield, try cleaning them first with a paper towel or soft cloth and wiper fluid. If the wiper blade rubber has deteriorated, you should change the wiper blades.

■ Front Wiper Blades

1. Lift the driver side wiper arm first, then the passenger side.
2. Place a cloth on the edge of the lock tab. Push the lock tab up with a flat-tip screwdriver.
3. Slide the blade from the wiper arm.
4. Slide the wiper blade out from its holder by pulling the tabbed end out.

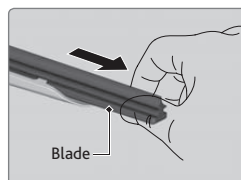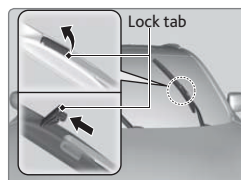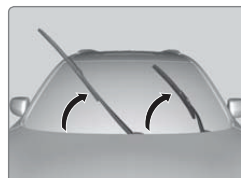

5. Remove the retainers from the rubber blade that has been removed and mount to a new rubber blade. Correctly align the rubber protrusion and the retainer grooves.
6. Slide the new wiper blade onto the holder from the bottom end. The tab on the holder should fit in the indent of the wiper blade.
7. Slide the wiper blade onto the wiper arm, then push down the lock tab.
8. Lower the passenger side wiper arm first, then the driver side.


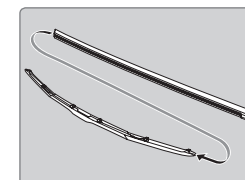
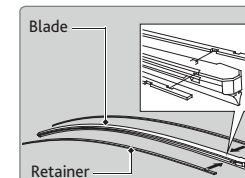


NOTICE

Avoid dropping the wiper arm, as it may damage the windshield.

■ Rear Wiper Blade

1. Raise the wiper arm off the window.
2. Slide the wiper blade out from the end with the indent.
3. Remove the retainers from the wiper blade and mount to a new rubber blade.
4. Slide the wiper blade onto the holder. Make sure it is engaged correctly, then install the wiper blade assembly onto the wiper arm.

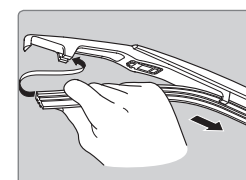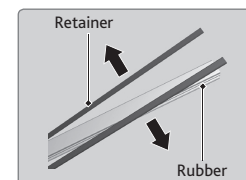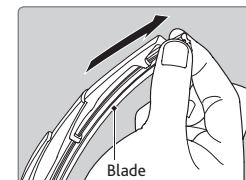

Tire Information

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

Inflation Guidelines

- Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or the specifications (see page 153) for the specified pressure.
- Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.
- Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.
- Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.
- Measure the air pressure when tires are cold. This means the vehicle has been parked for at least 3 hours or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached. If checked when hot, tire pressure can be as much as 4-6 psi (30-40 kPa, 0.3-0.5 kgf/cm²) higher than checked when cold.
- At least once a month or before long trips, use a gauge to measure the pressure in all tires, including the spare. Even tires in good condition can lose 1-2 psi (10-20 kPa, 0.1-0.2 kgf/cm²) per month.


Inspection Guidelines

Every time you inflate the tires, check for the following:

- Any damage to tires, including bumps, bulges, cuts, splits, or cracks in the side or tread. Remove any foreign objects and inspect for air leaks. Replace tires if you see fabric or cord.
- Uneven or excessive tread wear. Have a dealer check the wheel alignment.
- Cracks or other damage around the valve stems.

Wear Indicators

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so low that the indicator is exposed, replace the tire. **Worn out tires have poor traction on wet roads.**

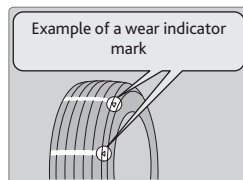


⚠ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's guide regarding tire inflation and maintenance.

Tire and Loading Information Label

The label attached to the driver's doorjamb provides necessary tire and loading information.

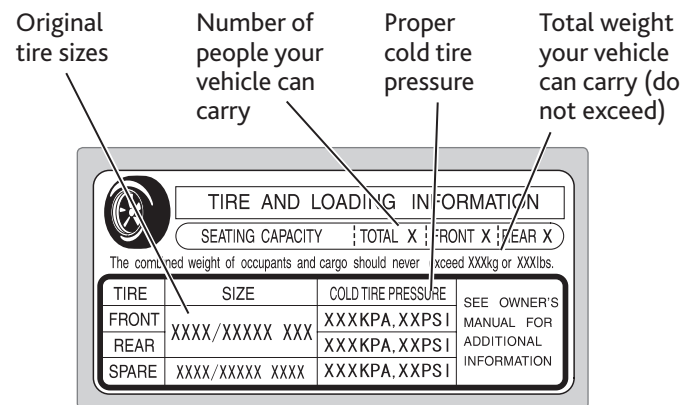

Tire and Wheel Replacement

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems to work incorrectly. It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

If you change or replace a wheel, make sure that the wheel's specifications match those of the original wheels. Only use TPMS-specified wheels approved for your vehicle.

⚠ WARNING

Installing improper tires on your vehicle can affect handling and stability.

This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in the Owner's Manual.

■ Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires, including the spare, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

■ Winter Tires

If driving on snowy or frozen roads, mount all season tires marked "M+S", snow tires, or tire chains; reduce speed and maintain sufficient distance between vehicles when driving. For winter tires, select the size and load ranges that are the same as the original tires and mount them to all four wheels.

■ Tire Chains

Install tire chains on the front tires only. Because your vehicle has limited tire clearance, we strongly recommend using the following chains:

Cable type: SCC Cable Chain Super Z LT - ZT735.

Mount chains as tightly as you can and make sure that they do not touch the brake lines or suspension.

NOTICE


Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

⚠ WARNING

Using the wrong chains or not properly installing chains can damage the brake lines and cause a crash in which you can be seriously injured or killed. Follow all instructions in this guide regarding the selection and use of tire chains.

Tire Labeling

The tires that came on your vehicle have a number of markings. Those you should be aware of are described below.

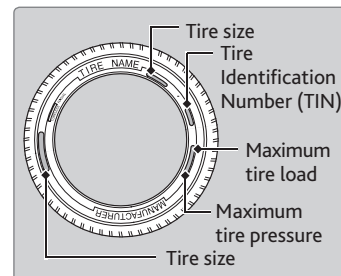

Here is an example of what each marking means:

215/70R16 100S

- 215: tire width in millimeters
- 70: aspect ratio (tire section height as a percentage of its width)
- R: tire construction code (radial)
- 16: rim diameter in inches
- 100: load index (code indicating maximum load tire can carry)
- S: speed symbol (code indicating maximum speed rating)

■ Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example shown. TIN is located on the sidewall of the tire.

DOT B97R FW6X 2209
 DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.
 B97R: Manufacturer's identification mark.
 FW6X: Tire type code.
 22 09: Date of manufacture.
 Year
 Week

■ Glossary of Tire Terminology

Cold Tire Pressure – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

Load Rating – The maximum load that a tire is rated to carry for a given inflation pressure.

Maximum Inflation Pressure – The maximum tire air pressure that the tire can hold.

Maximum Load Rating – The load rating for a tire at the maximum permissible inflation pressure for that tire.

Recommended Inflation Pressure – The cold tire inflation pressure recommended by the manufacturer.

Treadwear Indicators (TWI) – The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

DOT Tire Quality Grading

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

■ Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200

Traction AA

Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

■ Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

WARNING: The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

■ Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Testing of Readiness Codes

Your vehicle has readiness codes as part of the onboard self-diagnostic system. Some states use these codes for testing to verify your vehicle's emissions components are working properly. The codes may not be read if you go through the testing just after the battery has gone dead or been disconnected.

To check if they are set, set the power mode to ON without starting the engine. The malfunction indicator lamp will come on for several seconds. If it goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle emissions tested before the readiness codes are set, prepare the vehicle for retesting by doing the following:

1. Fill the gas tank to approximately 3/4 full.
2. Park the vehicle and leave the engine off for 6 hours or more.
3. Make sure the ambient temperature is between 40°F and 95°F (4°C and 35°C).
4. Start the engine without touching the accelerator pedal and let it idle for 20 seconds.
5. Keep the vehicle in Park (P). Increase the engine speed to 2,000 rpm and hold it there for about 3 minutes.
6. Let the engine idle with your foot off the accelerator for 20 seconds.
7. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway with the vehicle in Drive (D). Do not use cruise control. When traffic allows, drive for 90 seconds without using the accelerator pedal. (Vehicle speed may vary slightly, this is OK.) If you cannot do this for a continuous 90 seconds because of traffic conditions, drive for at least 30 seconds, then repeat two more times (for a total of 90 seconds).
8. Drive in city or suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
9. Park the vehicle and leave the engine off for 30 minutes.

The readiness codes are erased when the battery is disconnected and set again only after several days of driving under a variety of conditions.

If an emissions testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test, or see your dealer.

SPECIFICATIONS

Vehicle

Model		Acura MDX	
No. of Passengers:			
Front		2	
Rear (2nd)		2 ^{*1}	
Rear (3rd)		3 ^{*2}	
Total		2	
		6 ^{*1}	
		7 ^{*2}	
Weights:			
Gross Vehicle Weight Rating	U.S.:	5,368 lbs (2,435 kg) ^{*3}	
	Canada:	5,677 lbs (2,575 kg) ^{*4}	
		2,435 kg ^{*3}	
		2,575 kg ^{*4}	
Gross Axle Weight Rating (Front)	U.S.:	2,811 lbs (1,275 kg) ^{*3}	
	Canada:	2,910 lbs (1,320 kg) ^{*4}	
		1,275 kg ^{*3}	
		1,320 kg ^{*4}	
Gross Axle Weight Rating (Rear)	U.S.:	2,734 lbs (1,240 kg) ^{*3}	
	Canada:	2,965 lbs (1,345 kg) ^{*4}	
		1,240 kg ^{*3}	
		1,345 kg ^{*4}	
Gross Combined Weight Rating	U.S.:	8,036 lbs (3,645 kg) ^{*3}	
	Canada:	9,833 lbs (4,460 kg) ^{*4}	
		3,645 kg ^{*3}	
		4,460 kg ^{*4}	

*1: Models with second row captain seat

*2: Models with second row bench seat

*3: 2WD models

*4: AWD models

Air Conditioning

Refrigerant Type	HFC-134a (R-134a)
Charge Quantity	23.8 – 25.6 oz (675 – 725 g)
Lubricant Type	PAG RL897
Quantity	7.75 – 9.33 cu-in (127 – 153 cm ³) (20% RATIO)

Light Bulbs

Headlights (High/Low Beam)	LED
Fog Lights *	LED
Front Turn Signal/Side Marker/Parking Lights	LED
Daytime Running Lights	LED
Side Turn Signal Lights (on Door Mirrors)	LED
Brake Lights	21 W
Rear Side Marker Lights	LED
Taillights	LED
Back-Up Lights	21 W
Rear Turn Signal Lights	21 W
High-Mount Brake Light	LED
Rear License Plate Light	LED
Puddle Lights *	LED
Interior Lights	
Front, Second Row and Third Row Lights	LED
Front and Rear Ambient Lights	LED
Vanity Mirror Lights	1.4 W
Door Courtesy Lights	3.4 W
Door Inner Handle Lights	LED
Front/Rear* Console Lights	LED
Glove Box Light	1.4 W
Foot Lights	5 W
Cargo Area Lights	5 W

Tires

Regular	Size	245/60R18 105H ^{*1} 245/55R20 102H ^{*2}
	Pressure psi (kPa [kgf/cm ²])	35 (240 [2.4])
Compact Spare *	Size	T165/80D17 104M
	Pressure psi (kPa [kgf/cm ²])	60 (420 [4.2])
Wheel Size	Regular	18 x 8J ^{*1} 20 x 8J ^{*2}
	Compact Spare *	17 x 4T

*1: Model with 18 inch wheel

*2: Model with 20 inch wheel

Engine and Fuel

Engine Specifications

Displacement	211.8 cu-in (3,471 cm ³)
Spark Plugs	NGK D1LZKR7B11G

Fuel

Type	Unleaded premium gasoline, Pump octane number of 91 or higher
Fuel Tank Capacity	19.5 US gal (73.8 L)

Fluids

Engine Oil

Recommended	Genuine Acura Motor Oil 0W-20
	API Premium-grade 0W-20 detergent oil
Capacity	Change including filter
	5.4 US qt (5.1 L)

Engine Coolant

Specified	Acura Long Life Antifreeze/Coolant Type 2
Ratio	50/50 with distilled water
Capacity	1.96 US gal (7.40 L) (change including the remaining 0.22 US gal (0.82 L) in the reserve tank)

Brake Fluid

Specified	Acura Heavy Duty Brake Fluid DOT 3
-----------	------------------------------------

Automatic Transmission Fluid

Specified	Acura Automatic Transmission Fluid ATF-TYPE 3.1 or higher
Capacity	Change 3.5 US qt (3.3 L)

Rear Differential Fluid *

Specified	Acura DPSE-II
Capacity	Change 1.92 US qt (1.82 L)

Transfer Assembly Fluid *

Specified	Acura Hypoid Gear Oil HGO-1
Capacity	Change 0.45 US qt (0.43 L)

Washer Fluid

Tank Capacity	U.S.: 4 US qt (3.8 L) Canada: 5.6 US qt (5.3 L)
---------------	--

**if equipped*

CLIENT INFORMATION

Learn about information specific to you as an Acura client and how to get help.

Frequently Asked Questions/Troubleshooting

Below are some frequently asked questions and troubleshooting items that you may have about the vehicle.

Q: *How do I set the vehicle clock?*

A: For vehicles without navigation, see page 54. For vehicles with navigation, the time is automatically set using GPS signals.

Q: *Why doesn't the vehicle start when I press the ENGINE START/STOP button?*

A: The brake pedal must be pressed to start the engine.

Q: *What is the AUTO setting on my headlight lever?*

A: When in the AUTO position, the vehicle's exterior lights will automatically turn on or off depending on the ambient lighting.

Q: *Why won't the driver's door unlock when I grab the door handle, even though the keyless access remote is within range?*

A: If you pull the handle too quickly, the system may not have time to confirm the door is unlocked. Wait to hear a beep to confirm the door is unlocked. If you are wearing gloves, the system may be slow to respond.

Q: *After my battery was disconnected or went dead, the audio system is asking for a code. Where do I find this?*

A: In most cases, you do not need to enter a code. Turn on the vehicle and the audio system, then press and hold the power button until the system reactivates.

Q: *Why can't I operate Pandora* through the audio system?*

A: Audio may be streaming through Bluetooth® Audio. Make sure Pandora mode is selected and the phone cable is properly connected to the USB adapter. Some phones may prompt you to "Allow" a connection.

Q: *Is my phone compatible with Bluetooth® features?*

A: Visit www.handsfreelink.com/Acura (U.S) or phone (888) 528-7876 (Canada) to check phone compatibility for Bluetooth® Audio, Bluetooth® HandsFreeLink®, and SMS text messaging.

Q: *Every time I press the Talk button, the system gives me voice prompts*. Can I turn these off?*

A: Press SETTINGS. Use the interface dial to select System Settings then Voice Rec. For the Voice Prompt option, select Off.

**if equipped*

Q: *Why can't I select an item using the interface dial?*

A: To prevent driver distraction, certain items are limited are inoperable while the vehicle is moving. Use voice commands or pull over to select the items.

Q: *Where can I find the vehicle identification number (VIN)?*

A: Check the label on the driver's doorjamb.

Contact Us

Acura dealer personnel are trained professionals. They should be able to answer all your questions. If you encounter a problem that your dealership does not solve to your satisfaction, please discuss it with the dealership's service manager or general manager. If you are dissatisfied with the decision made by the dealership's management, contact Acura Client Relations/Services.

U.S. Owners:

American Honda Motor Co., Inc.
Acura Client Relations
1919 Torrance Blvd.
Mail Stop 100-5E-8F
Torrance, CA 90501-2746
Tel: (800) 382-2238

In Puerto Rico and the U.S. Virgin Islands:

Bella International
P.O. Box 190816
San Juan, PR 00919-0816
Tel: (787) 620-7546

Canadian Owners:

Honda Canada, Inc.
Acura Client Services
180 Honda Blvd.
Markham, ON
L6C 0H9
Tel: (888)-922-8729
Fax: (877)-939-0909
E-Mail: acura_cr@ch.honda.com

When you call or write, please give us the following information:

- Vehicle Identification Number
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

Acura Total Luxury Care Roadside Assistance

Your Acura TLC Roadside Assistance representative is here to help you 24 hours a day, 7 days a week by calling (800) 594-8500 (U.S.) or (800) 565-7587 (Canada). Under your 4-year/50,000-mile (80,000-km) warranty, the following benefits are available:

- Towing services — full cost of towing to the closest Acura dealer
- Roadside assistance — jump starting, fuel delivery, lockout, and flat tire
- Trip planning — detailed trip routing, emergency services, and more

Warranty Coverages

Below is a brief summary of the warranties covering your new vehicle.

New Vehicle Limited Warranty: Covers your new vehicle, except for the emissions control system and accessories, against defects in materials and workmanship.

Emissions Control Systems Defects Warranty and Emissions Performance Warranty: Covers your vehicle's emissions control systems. Time, mileage, and coverage are conditional.

Seat Belt Limited Warranty: Covers seat belts that fail to function properly.

Rust Perforation Limited Warranty: Covers all exterior body panels that rust through from the inside for the specified time period, regardless of mileage.

Accessory Limited Warranty: Covers Acura accessories.

Replacement Parts Limited Warranty: Covers all Acura replacement parts against defects in materials and workmanship.

Replacement Battery Limited Warranty: Provides prorated coverage for a replacement battery purchased from your Acura dealer.

Replacement Muffler Lifetime Limited Warranty: Covers a replacement muffler for the duration of the ownership.

Restrictions and exclusions apply to all these warranties. See the Warranty CD or visit owners.acura.com (U.S.) or myacura.ca (Canada) for complete descriptions of each warranty, including time, mileage, and other conditional limitations.

Your vehicle's original tires are covered by their manufacturer. Tire warranty information can be found on the Warranty CD or at owners.acura.com (U.S.) or myacura.ca (Canada).

EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

U.S. Environmental Protection Agency
Office of Transportation and Air Quality
Compliance Division,
Light-Duty Vehicles Group
Attn: Warranty Complaints
2000 Traverwood Drive
Ann Arbor, MI 48105
Email: complianceinfo@epa.gov

VOICE COMMAND INDEX

Learn about all available voice commands to help you operate the vehicle.

To view a list of available commands in the vehicle, press the INFO button and use the interface dial to select Voice Info. Select a category to hear the commands read aloud.

■ Voice Portal Commands

When you press the Talk button, the Voice Portal screen appears. Say one of the options and follow the system prompts. The system recognizes only the commands listed here.

- Phone call
- Voice help
- Navigation
- Audio
- Call/dial (number)
- Call/dial (contact name)

■ Navigation Commands

When you press the Talk button and say “*Navigation*,” you can say one of the options below. Follow the system prompts.

- Address (U.S. only)
- Place name (U.S. only)
- Find nearest (POI category)
- Go home
- Previous destination
- Back
- Cancel
- Voice Help

■ Phone Commands

When you press the Talk button and say “*Phone call*,” you can say one of the options below. Follow the system prompts.

- Call or dial (contact name or voice tag)
- Dial by number
- Redial
- Back
- Cancel

■ Voice Help

Say “*Voice Help*” and the commands listed below appear. Follow the prompts for assistance.

- Phone commands
- Audio Commands
- Navigation Commands
- Voice Settings
- Voice Recognition Guide

■ Audio Commands

When you press the Talk button and say “Audio,” you can say one of the options below. Follow the system prompts. Volume levels cannot be controlled using voice commands.

FM/AM Radio Commands

- Tune to # FM (#: frequency, e.g., 95.5)
- Tune to # AM (#: frequency, e.g., 1020)
- Back
- Cancel
- Voice Help

Hard Disc Drive (HDD) Commands

- Play Artist
- Play Album
- Play Song
- Play Composer
- Play Genre
- Play Playlist
- List Artist
- List Album
- List composer
- List Genre
- List Playlist
- More
- Back
- Cancel
- Voice Help

iPod® and USB Commands

- Play Artist
- Play Album
- Play Song
- Play Composer
- Play Genre
- Play Playlist
- List Artist
- List Album
- List composer
- List Genre
- List Playlist
- More
- Back
- Cancel
- Voice Help

SiriusXM® Radio Commands

- Sirius XM
- Sirius XMSirius XM channel # (#: 0 to 999)
- Back
- Cancel
- Voice Help

Song By Voice™ Commands

Available for tracks stored on the HDD or iPod®.

- Play artist <Name>
- Play album <Name>
- Play song <Name>
- Play composer <Name>
- Play genre <Name>
- Play playlist <Name>
- List artist <Name>
- List album <Name>
- List composer <Name>
- List genre <Name>
- List playlist <Name>

INDEX

ABS	26, 27, 104	Automatic Dimming Rearview Mirror	44
ACC	29, 106	Automatic Rain-Sensing Wipers	41
Accessory Power Socket	57	Auto park mode	100
AcuraLink®	81	Auxiliary Input Jack	57
AcuraLink Messages	81	Battery	143
ASSIST button	82	Blind Spot Information	27, 113
Emergency Assistance	82	Bluetooth® Audio	64
LINK button	82	Bluetooth® Handsfreelink®	74
Operator Assistance	82	Call History	79
Subscription Features	82	Dialing a Number	77
AcuraLink Messages	81	Displays and Controls	74
AcuraLink Real-Time Traffic	89	E-Mail	80
Acura Total Luxury Care Roadside Assistance	156	Making a Call	77
Adaptive Cruise Control (ACC)	27, 106	On-Demand Multi-Use Display (ODMD)	75
Advanced Airbags	9	Pairing a Phone	76
Airbags	9	Phonebook	78
Advanced Airbags	9	Siri™ Eyes Free	67
Airbag Care	14	SMS Text Messaging	80
Airbag System Components	13	Speed Dial	78, 79
Airbag System Indicators	11	Talk Button Tips	75
Driver's Knee Airbag	9	Brake Assist System	104
Front Airbags (SRS)	9	Brake system	26, 27
Side Airbags	10	Braking	104
Side Curtain Airbags	10	Anti-Lock Brake System	104
Android Auto	69	Brake Assist System	104
Anti-Lock Brake System	26, 104	Foot Brake	104
Apple CarPlay	68	Parking Brake	104, 105
ASSIST button	82	Brightness Control	36
Audio Commands	158, 165	BSI	27, 29, 113
Audio Operation	56	Call History	79
Accessory Power Socket	57	Carbon Monoxide Gas	4
Android Auto	69	Cargo lights	39
Apple CarPlay	68	Car wash mode	101
Auxiliary Input Jack	57	Change a Setting	54
Bluetooth® Audio	64	Changing a Flat Tire	126
Compact Disc (CD)	61	Changing Fuses	135
FM/AM Radio	59	Charging system	26
Hard Disc Drive (HDD) Audio	65	Childproof Door Locks	34
HDMI	71	Child Safety	15
iPod	63	Childproof Door Locks	34
On-Demand Multi-Use Display (ODMD)	58	Child Seat	17
Pandora	66	Adding Security with a Tether	21
Rear Entertainment System	70	Installing a Child Seat with a	
SiriusXM® Radio	60	Lap/Shoulder Seat Belt	20
Sound	57	LATCH-Compatible Child Seat	18
SOURCE button	57	Selecting a Child Seat	17
Steering Wheel Controls	57	Client Information	154
USB Flash Drive	62	Climate Control System	50
USB Port	56	Heated Steering Wheel	52
Auto High-Beam	37	Heated Windshield Button	52
Auto idle stop	27, 29, 102	Rear Climate Control	51
Automatic brake hold	29	Seat Heaters and Ventilation	53

Clock.....	54
CMBS.....	27, 29, 109
Compact Disc (CD).....	61
Condition Indicators.....	28
Contact Us.....	155
Cross Traffic Monitor.....	116
Customized Features.....	54
Dashboard and Ceiling Controls.....	2
Detour.....	89
Dialing a Number.....	77
Door Mirrors.....	44
Door Operation.....	34
Doors.....	32
Childproof Door Locks.....	34
Front Door Inner Handle.....	34
Lock Tab.....	34
Master Door Lock Switch.....	34
DOT Tire Quality Grading.....	150
Driver's Knee Airbag.....	9
Driving.....	90
Adaptive Cruise Control.....	106
Auto Idle Stop.....	102
Blind Spot Information.....	113
Braking.....	104
Collision Mitigation Braking System.....	109
ENGINE START/STOP.....	99
Integrated Dynamics System.....	103
Lane Keeping Assist System.....	111
Maximum Load Limit.....	92
Multi-View Rear Camera.....	115
Paddle shifters.....	101
Parking Sensor System.....	114
Refueling.....	119, 120
Remote Engine Start.....	98
Road Departure Mitigation (RDM).....	112
Sequential Shift Mode.....	101
Shifting.....	100
Starting the Engine.....	99
Surround View Camera.....	117
Towing a Trailer.....	94
Driving Position Memory System.....	46
DVD.....	70
Electric Power Steering.....	27
Electronic Gear Selector.....	100
E-Mail.....	80
Emergency Assistance.....	82
Emergency Engine Stop.....	122
Emergency Towing.....	135
Engine and Fuel.....	153
ENGINE button.....	98
Engine Compartment Cover.....	139
Engine Coolant.....	142
Engine Oil.....	140
ENGINE START/STOP.....	99
EPS.....	27
Exterior lights.....	29, 36
Fastening a Seat Belt.....	7
Find Nearest Place.....	87
Floor Mats.....	44
Fluids.....	153
FM/AM Radio.....	59
FM/AM Radio Commands.....	158
Fog lights.....	29
Foot Brake.....	104
Frequently Asked Questions.....	154
Front Airbags (SRS).....	9
Front Door Inner Handle.....	34
Fuel Information.....	102, 119
Fuse Locations.....	131
Garage Opener.....	49
Handling Information.....	3
Hard Disc Drive (HDD) Audio.....	65
Hard Disc Drive (HDD) Commands.....	158
HDMI.....	71
Headlight Washers.....	36
Headlight-Wiper Integration.....	40
Headphones.....	71
Head Restraints.....	43
Heated Steering Wheel.....	52
Heated Windshield Button.....	52
High beams.....	29
Home Address.....	86
HomeLink Universal Transceiver.....	49
Hood.....	139
Immobilizer.....	27, 28
Instrument Panel.....	26
Condition Indicators.....	28
Malfunction Indicators.....	26
Multi-Information Display.....	30
On/Off Indicators.....	29
Integrated Dynamics System.....	103
Interior Lights.....	37, 39
Intermittent Wipers.....	40
iPod.....	63
iPod® Commands.....	158
Jump Starting.....	121
Keyless Access System.....	27, 32
Lane Keeping Assist System.....	111
Lap/Shoulder Seat Belts.....	5
LATCH-Compatible Child Seat.....	18
Light Bulbs.....	153
Lights.....	29, 36
Exterior Lights.....	36
Interior Lights.....	37, 39
LINK button.....	82
LKAS.....	111
Lock Tab.....	34
Low fuel.....	28
Low oil pressure.....	26
Low tire pressure.....	28

Maintenance.....	136
Battery.....	143
Engine Coolant.....	142
Engine Oil.....	140
Maintenance Minder™.....	137
Opening the Hood.....	139
Service Codes.....	138
Under the Hood.....	139
Window Washer Fluid.....	143
Wiper Blades.....	144
Making a Call.....	77
Malfunction Indicator Lamp.....	26
Malfunction Indicators.....	26
Map Legend.....	88
Master Door Lock Switch.....	34
Maximum Load Limit.....	92
Mirrors.....	44
Multi-Information Display.....	30
System message.....	28
Multi-View Rear Camera.....	115
Navigation.....	83
AcuraLink Real-Time Traffic.....	89
Detour.....	89
Display and Controls.....	84
Entering a Destination.....	86
Find Nearest Place.....	87
Home Address.....	86
Map Legend.....	88
Place Name.....	87
Routing.....	88
Steering Wheel Controls.....	83
Street Address.....	86
System Guidance Volume.....	85
Talk Button Tips.....	83
Traffic.....	89
Voice Prompt.....	85
Navigation Commands.....	157
On-Demand Multi-Use Display (ODMD).....	58
One-Touch Turn Signal.....	39
On/Off Indicators.....	29
Opening the Hood.....	139
Operator Assistance.....	82
Overheating.....	123
Paddle shifters.....	101
Pairing a Phone.....	76
Pandora.....	66
Parking Brake.....	28, 104, 105
Parking Sensor System.....	114
Passenger Airbag Off Indicator.....	12
Phone.....	76
Phonebook.....	78
Phone Commands.....	157
Place Name.....	87
Power Door Mirrors.....	44
Power Mode.....	99
Power Tailgate.....	33
Power Window.....	35
Rain-Sensing Wipers.....	41
Readiness Codes.....	152
Rear Camera.....	115
Rear Climate Control.....	51
Rear Cross Traffic Monitor.....	116
Rear Entertainment System.....	70
Ultrawide Dual Screen.....	73
Rear Seats.....	47
Rearview Mirror.....	44
Rear Wiper.....	41
Refueling.....	119, 120
Remote Battery Strength.....	121
Remote Control.....	72
Remote Engine Start.....	98
Remote Transmitter.....	31
Reporting Safety Defects.....	25
Reverse Tilt Door Mirrors.....	45
Road Departure Mitigation (RDM).....	27, 112
Roadside Assistance.....	156
Routing.....	88
Safety Information.....	3
Child Safety.....	15
Important Handling Information.....	3
Reporting Safety Defects.....	25
Safety Label Locations.....	24
Safety Messages.....	4
Seat Belts.....	5
Adjusting the Shoulder Anchor.....	7
Fastening a Seat Belt.....	7
Lap/Shoulder Seat Belts.....	5
Seat Belt Inspection.....	6
Seat belt reminder.....	28
Seat Belt with Detachable Anchor.....	8
Seat Heaters and Ventilation.....	53
Seats.....	42
Second-Row Seats.....	47, 48
Security system.....	27
Selector wheel.....	30, 57
Sequential Mode.....	101
Service Codes.....	138
Setting.....	54
Setting the Clock.....	54
SH-AWD.....	27
Shifting.....	100
Electronic Gear Selector.....	100
Sequential Mode.....	101
Shoulder Anchor.....	7
Side Airbags.....	10
Side Curtain Airbags.....	10
Siri™ Eyes Free.....	67
SiriusXM® Radio.....	60
SiriusXM® Radio Commands.....	158
SMS Text Messaging.....	80

Song By Voice™ Commands.....	158
Sound.....	57
SOURCE button.....	57
Spare Tire.....	126
Specifications.....	153
Speed Dial.....	78, 79
SRS indicator.....	11, 27
Steering Wheel.....	45
Steering Wheel and Nearby Controls.....	1
Steering Wheel Controls.....	57, 83
Street Address.....	86
Sunshades.....	52
Super-Handling All-Wheel Drive.....	27
Supplemental Restraint System.....	27
Surround View Camera.....	117
System Guidance Volume.....	85
System message.....	28
Tailgate.....	33
Third-Row Seats.....	48
Tire and Loading Information Label.....	147
Tire and Wheel Replacement.....	147
Tire Chains.....	148
Tire Information.....	146
DOT Tire Quality Grading.....	150
Tire and Loading Information Label.....	147
Tire and Wheel Replacement.....	147
Tire Chains.....	148
Tire Identification Number.....	149
Tire Labeling.....	149
Tire Service Life.....	148
Tire Terminology.....	149
Winter Tires.....	148
Tire Pressure Monitoring System.....	27, 124, 125
Tire Repair Kit.....	130
Tires.....	153
Tire Terminology.....	149
Tongue load.....	95
Towing a Trailer.....	94
Load Limits.....	94
Tongue load.....	95
trailer weight.....	94
TPMS.....	27, 124
Traffic.....	89
TRIP button.....	30
Troubleshooting.....	154
Turn signals.....	29, 39
Ultrawide Dual Screen.....	73
Under the Hood.....	139
USB Flash Drive.....	62
USB Port.....	56
Utility Vehicle.....	91
Vehicle Controls.....	31
Vehicle Specifications.....	153
Vehicle Stability Assist.....	27, 103
Voice Command Index.....	157


Voice Command Tips.....	75, 83
Voice Prompt.....	85
VSA®.....	27, 29, 103
Walk Away Auto Lock.....	32
Warranty Coverages.....	156
Window.....	35
Sunshades.....	52
Window Washer Fluid.....	143
Winter Tires.....	148
Wiper.....	40
Wiper Blades.....	144
Wireless headphones.....	71

This page intentionally left blank.

This page intentionally left blank.

DISCLOSURES

■ California Proposition 65 Warning

 **WARNING:** Operating, servicing and maintaining a passenger vehicle or offroad vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

■ California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR-type batteries in this vehicle may contain perchlorate materials — special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate/ for more information.



31TZ5G30
OG-08756
00X31-TZ5-G303

owners.acura.com (U.S.)
myacura.ca (Canada)

2018 Acura MDX Owner's Guide
©2018 Honda Motor Co., Ltd. — All Rights Reserved

Printed in U.S.A.