ACURA

ACURA

2013 *TSX* SPORT WAGON
ADVANCED TECHNOLOGY GUIDE

ADVANCED TECHNOLOGY GUIDE

The Advanced Technology Guide is designed to help you get acquainted with your new Acura and provide basic instructions on some of its technology and convenience features.

This guide is not intended to be a substitute for the Owner's Manual. For more detailed information on vehicle controls and operation, please refer to the respective sections in the Owner's Manual.

As with the Owner's Manual, this guide covers all trim levels of the Acura TSX Sport Wagon. Therefore, you may find descriptions of equipment and features that are not on your particular vehicle.

VOICE RECOGNITION p. 12

NAVIGATION p. 18

MULTI-INFORMATION DISPLAY p. 4

BLUETOOTH® HANDSFREELINK® p. 23

AUDIO p. 30

Technology Package shown

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.

- Charging system
- Low brake fluid, Brake system
- Low oil pressure
- SRS (Supplemental Restraint System)
- ABS (Anti-lock Brake System)
- Malfunction indicator lamp (check engine light)
- VSA® (Vehicle Stability Assist)
- TPMS (blinks) (Tire Pressure Monitoring System)
- EPS (Electric Power Steering)

Condition Indicators

Action is needed by driver.

- Parking brake on: **Release**
- Seat belt reminder: **Fasten seat belt(s)**
- Door/tailgate open: **Close door or tailgate**
- Message indicator: See MID
- Low fuel: **Refill**
- Low tire pressure (stays on): **Add air**
- Immobilizer (blinks): **Use correct key**

On/Off Indicators

- PASSENGER AIRBAG OFF (above audio panel)
- SIDE AIRBAG OFF
- VSA OFF
- CRUISE MAIN on
- CRUISE CONTROL on
- Headlights on
- Turn signals/hazards on
- Fog lights on
- High beams on

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the MID

When you start the engine, the MID shows the last active lower display from the previous drive cycle.

```
003000
73°F
```


To toggle between the different displays:
- **Press** either Info button (▲/▼) for the main displays.
- **Press** the SEL/RESET button for the lower displays.

SEL/RESET button

INFO buttons

Main Displays

Main display

```
003000
73°F
```

Bluetooth® HandsFreeLink® (HFL)*

```
RM  INCOMING
    CALL
    012-345-2345
```

Instant fuel economy

```
INST. MPG
0    20   40

003000
73°F
```

Tire pressure monitor

```
TIRE PRESSURE
OK
```

Average fuel economy

```
AVERAGE
FUEL  A
25.0 MPG

003000
73°F
```

Average speed

```
AVERAGE
SPEED
40 mph

003000
73°F
```

Range

```
RANGE
200 miles

003000
73°F
```

Elapsed time

```
ELAPSED
TIME
1h 20m

003000
73°F
```
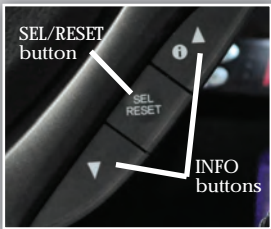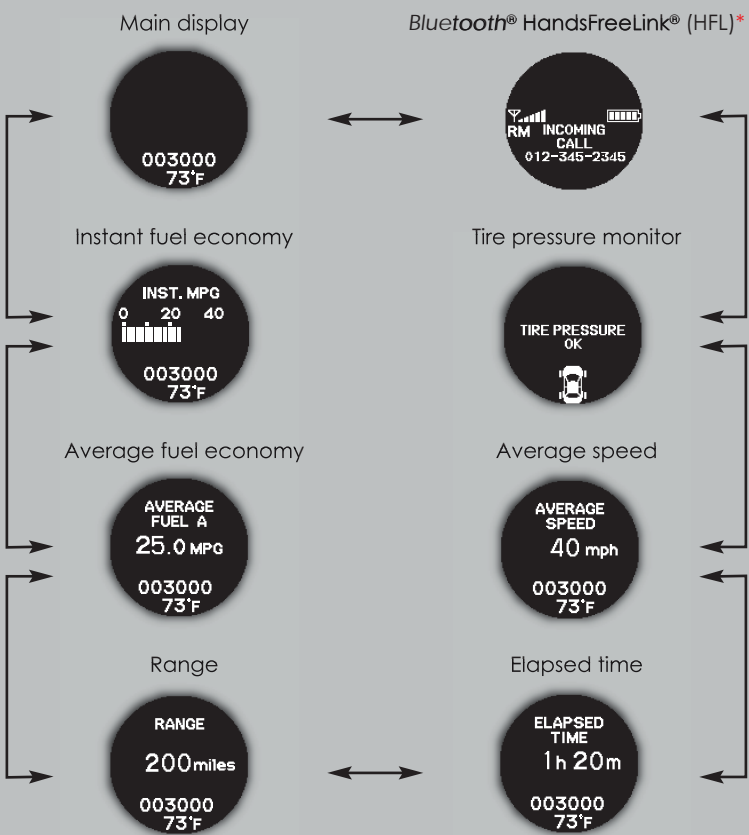
* if a call is active (Base model only)

Lower Displays

Odometer, Outside temperature

```
003000
73°F
```

Trip A, Outside temperature

```
A  120.0
73°F
```

Trip B, Outside temperature

```
B  120.0
73°F
```

Oil life

```
OIL LIFE
100%
```
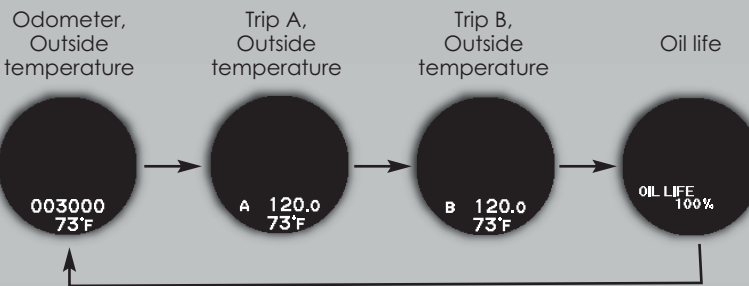
Tire Pressure Monitoring System

Alerts you when one or more of your tires have significantly low pressure. Toggle to the tire pressure monitor display to view pressure readings on the MID.

How It Works

If the tire pressure drops significantly below recommended levels:
• The low tire pressure indicator comes on.
• A "CHECK TIRE PRESSURE" message appears on the MID.
• The tire icon(s) showing low pressure blinks.

What to Do

1. **Visually inspect** the tires for damage.

2. **Use** a tire air pressure gauge (or check the MID) to **check** which tire(s) have low pressure.

3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

Customizing Settings Using the MID

Four groups of settings can be programmed using the MID*: Meter Setup, Position Setup, Lighting Setup, and Door Setup.

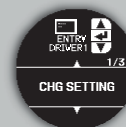### Modifying the Auto Door Unlock Setting

As the default setting, only the driver's door unlocks when you shift to Park. Follow the steps below to set all doors to unlock when you shift to Park:

Press and hold either INFO button (▲/▼) to enter customization mode, then **press** SEL/RESET to enter the menu.

1. Select "CHG SETTING."

2. Select "DOOR SETUP."

3. Select "AUTO DOOR UNLOCK."

4. Select "ALL DOORS with SHIFT TO P."

5. Once the setting has been saved, select "EXIT."

See Customized Settings in your Owner's Manual for other programmable settings.

DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote (1 or 2), which are recalled when you unlock the driver's door with the remote and enter the vehicle.

Programming DPMS

1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).

2. **Adjust** your preferred seat settings.

3. **Press** the SET button. You will hear a beep.

4. **Press** the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.

Note: Stored positions can also be recalled by pressing memory buttons (1 or 2) on the door.

REVERSE TILT DOOR MIRROR

When you shift into Reverse (R), the passenger's outside door mirror tilts down slightly to improve your view as you parallel park. Shifting out of Reverse returns the tilted mirror to its original position.

How It Works

- To tilt the passenger's door mirror, **move** the mirror selector switch to the right (R) position when in Reverse.
- To turn the feature off, **move** the switch to the middle or left (L) position.

REARVIEW CAMERA (Technology Package)

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.
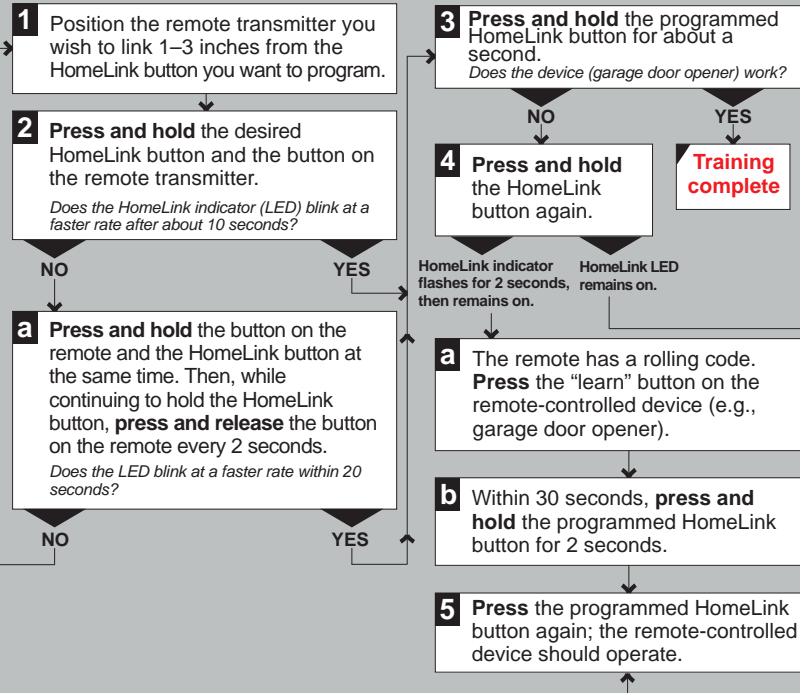
How It Works

- When you shift into Reverse, a real-time image of the area behind your vehicle is shown in the navigation display.
- Yellow parking guidelines also appear to help you judge distance.
- **Adjust** the screen brightness by turning the Interface Dial.
- The display turns off when you shift out of Reverse.

HOMELINK®

Program your vehicle to operate up to three remote-controlled devices around your home, such as garage doors, lighting, or home security systems.

Training a Button

1 Position the remote transmitter you wish to link 1–3 inches from the HomeLink button you want to program.

2 **Press and hold** the desired HomeLink button and the button on the remote transmitter.
Does the HomeLink indicator (LED) blink at a faster rate after about 10 seconds?

NO → **YES** →

a **Press and hold** the button on the remote and the HomeLink button at the same time. Then, while continuing to hold the HomeLink button, **press and release** the button on the remote every 2 seconds.
Does the LED blink at a faster rate within 20 seconds?

NO → **YES** →

3 **Press and hold** the programmed HomeLink button for about a second.
Does the device (garage door opener) work?

NO → **YES**

4 **Press and hold** the HomeLink button again.

Training complete

HomeLink indicator flashes for 2 seconds, then remains on. | HomeLink LED remains on.

a The remote has a rolling code. **Press** the "learn" button on the remote-controlled device (e.g., garage door opener).

b Within 30 seconds, **press and hold** the programmed HomeLink button for 2 seconds.

5 **Press** the programmed HomeLink button again; the remote-controlled device should operate.

If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at (800) 355-3515, or visit *www.homelink.com*.

POWER TAILGATE (Technology Package)

Use multiple methods to operate the power tailgate when the vehicle is in Park (P).

Opening the Power Tailgate from Inside the Vehicle

- Press and hold the tailgate button until a beep sounds. The tailgate begins to open.
- To close the tailgate, press the button again at any time.

Opening the Power Tailgate Using the Remote Transmitter

Make sure the power tailgate keyless open mode is set to your preference using the MID. See your Owner's Manual for instructions, or see **page 7** for an example of how to change a setting.

In ANYTIME mode: Press and hold the tailgate button for about one second.

In WHEN UNLOCKED mode: Press the unlock button twice to unlock all doors and the tailgate. Then press and hold the tailgate button for about one second.

VOICE RECOGNITION

To keep your eyes on the road and hands on the wheel, use voice commands for hands-free calling, navigation, audio, climate control, and AcuraLink functions. For a full list of commands, say *"Info"* and *"Voice Help."*

Functions by Voice Command

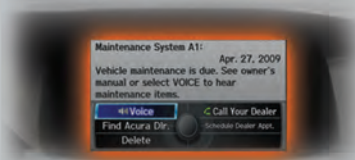Control up to five different systems with the steering wheel buttons and the ceiling microphone.

Technology Package shown

NAVIGATION * p. 18

BLUETOOTH®HANDSFREELINK® p. 23

ACURALINK * p. 22

AUDIO * p. 17

CLIMATE * p. 17

* Voice commands for these systems are available on Technology Package only.

Using the Voice Command System

Base model
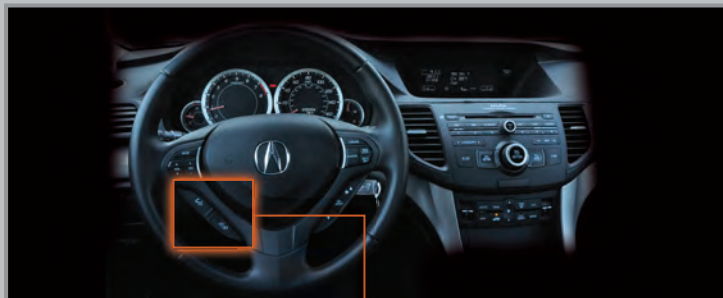
HFL Talk button: Give HFL commands and answer incoming calls.

HFL Back button: Cancel a command and end or decline a call.
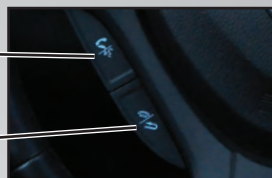
Technology Package

Pick-Up button: Answer an incoming call, or go directly to the Cellular Phone screen.

Talk button: Give HFL, navigation, audio, climate control, or AcuraLink commands.

Back button: Cancel a command and return to the previous screen.

Hang-Up button: End a call or decline a call.
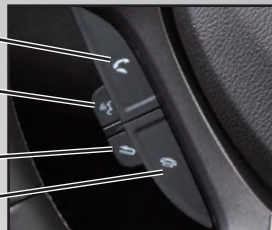
Voice Command Tips

- To hear a list of available commands at any time, press and release the Talk button, then say "Help."
- When using the Talk button, wait for a beep, then say a command.
- When the Talk button is pressed, all available voice commands are highlighted in blue.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows.

Commonly Used Voice Commands

Here are some examples of commonly used voice commands. Try some of these to familiarize yourself with the voice command system.

Press and release the Talk button before you say a command.

Look for Restaurants Near Your Location

Say a command like *"Display restaurants"* to see restaurant icons appear on the map.

Make Audio Selections

Say a command like *"Radio 97.1 FM"* or *"CD play track 5"* to select that station or song.

Adjust Vehicle's Climate Setting

Say a command like *"Air conditioner on"* and *"Fan speed 4"* to achieve a comfortable climate setting.

Get Estimated Distance to Destination

After a destination is entered, say *"How far to destination?"* to hear the remaining distance.
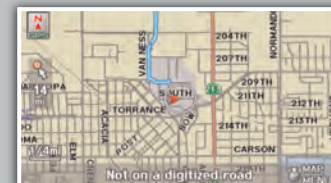
Commonly Used Voice Commands (continued)

General Commands (Accepted on most screens to change displays)

- Display map
- Display menu
- Information
- Display audio screen
- What time is it?

Find Place Commands (Accepted on Map screen)
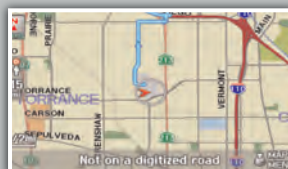

- Find nearest:
  - ATM
  - gas station
  - Mexican restaurant
  - post office
  - bank
  - Acura dealer
  - airport
  - hospital

## Display Commands (Accepted on Map screen)

- Display (or hide):
  - ATM
  - gas station
  - restaurant
  - post office
- Display north up/ heading up
- Zoom in/out
- Go home
- Display current location

Navigation Commands (Accepted on Map screen after a destination is entered)

- How long/far to the destination?
- Display destination map
- Display entire route

Help Commands (Accepted on most screens)
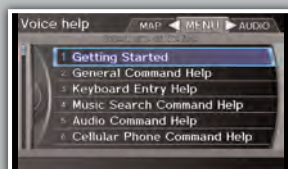
- Help (list of available commands for current screen)
- Voice command help (from the INFO screen - list of all available navigation, audio, and climate control commands)

Audio Commands (Accepted on most screens)

- Radio on
- Radio # FM/AM
- Radio preset 1/2/3/4/5/6
- XM channel #
- XM 1/2 preset 1/2/3/4/5/6
- CD play
- CD play track #
- CD skip forward/back
- iPod/USB/HDD play

Climate Control Commands (Accepted on most screens)

- Air conditioner on/off
- Rear defrost on/off
- Climate control recirculate/fresh air
- Fan speed up/down
- Temperature # degrees (# = 57–87)
- Temperature max hot/cold

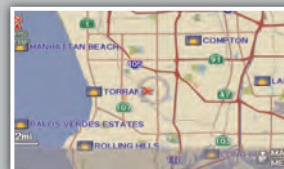## Setup Commands (Accepted on Setup screen)

- Brightness up/down
- Volume up/down/ min/max/off
- Interface dial feedback on/off

Traffic Commands* (Accepted on Map screen)
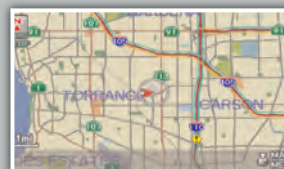
- Display traffic
- Display traffic speeds
- Display traffic icons
- Display traffic incidents/list

Weather Commands* (Accepted on map screen)

- Display weather
- Display weather icons
- Display weather warning icons

*subscription required

NAVIGATION (Technology Package)

Real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination.

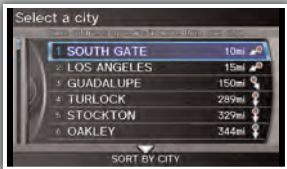## Entering a Destination Address Using Voice Control

Set a destination using a street address. For other destination options, see your Navigation Manual.

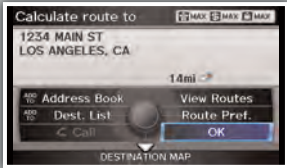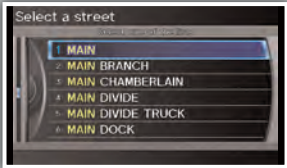**Press and release the Talk button before you say a command.**

1. Say "*Display menu.*"
   Say "*Address.*"

2. Say "*Street,*" then say the street name on the next screen. Do not include the direction (N, S, E, W) or type (St., Ave., Blvd., etc.).

3. A list of street names appears. Say the number next to the street you want.

4. Say the entire street address number. For example, "*1-2-3-4.*" If necessary, say "*OK*" to proceed.

5. If the street address is in more than one city, a list of city names appears. Say the number next to the city you want.

6. The system displays the "Calculate route to" screen. Say "*OK*" to set the route.

Using the "Find Nearest" Command

Find a nearby point of interest, such as a gas station, movie theater, restaurant, etc.

**Press and release the Talk button before you say a command.**

1. From the map screen, say "*Find nearest ATM.*"

2. A list of the nearest ATMs in your area is displayed by shortest distance to destination.

3. Say the number next to the destination you want.

4. The system calculates and displays the route.
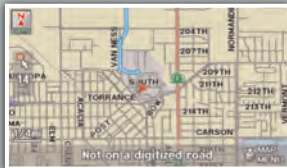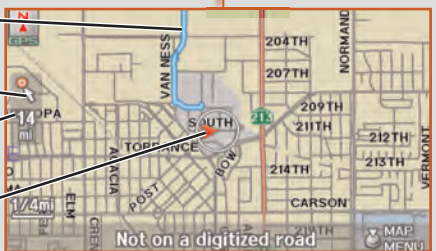
Map Screen Legend

- Calculated Route
- Direction of destination
- Distance to go
- Current vehicle location

ACURALINK REAL-TIME TRAFFIC™* (if equipped)

Provides continuously updated info, including traffic speed, incidents, and construction in major metro areas.

Press and release the Talk button before you say a command.

Displaying Traffic Information

Say *"Display traffic"* to view traffic flow and incident icons.

Traffic Flow data

Incident icon

Heavy traffic	
Moderate traffic	
Free-flow traffic	

Note: Traffic flow and incident icons can only be displayed on map scales of 5 miles (8 km) or less.

Incident Icons

 Incident

 Road closed

 Congestion

 Weather

 Construction

Traffic Rerouting™

When a destination is already set, you can create a detour to avoid traffic incidents or congestion (if Traffic Rerouting is set to ON in Setup).

1. Say *"Display traffic list"* to view a list of incidents on your route.

2. Say the number of the incident you want to avoid. When the incident appears, say *"Traffic detail."*

3. Say *"Avoid,"* and the incident list returns.
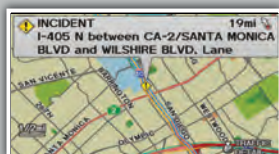
4. Say *"Reroute"* to set the new route.
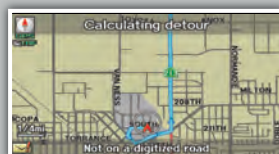
ACURALINK REAL-TIME WEATHER™* (if equipped)

Provides continuously updated weather conditions, warnings, and forecasts in major metro areas.

Press and release the Talk button before you say a command.

Displaying Weather Icons

Say *"Display weather"* to view weather icons for each city.

Weather Icons

 Clear

 Fog

 Partly Cloudy

 Rain

 Cloudy

 Snow
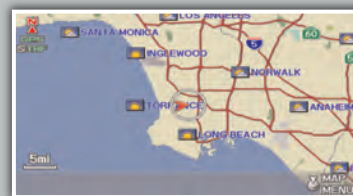
Note: Weather icons are available on all map scales.

Displaying Weather Information

Say *"Information,"* then *"Weather information"* for the following options:

Weather Forecast

Say *"Weather forecast"* to view a 1-day or 3-day forecast of your current position or city vicinity.

Radar Image Map

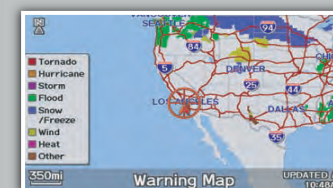Say *"Radar map"* to view color-coded rain or snow systems.

Weather Warning List

Say *"Warning list sorted by distance"* to view a list of all U.S. weather warnings by distance.

Weather Warning Map

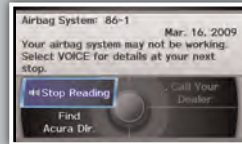Say *"Warning map"* to view color-coded severe weather systems.

ACURALINK® MESSAGES (Technology Package)

Acura periodically sends you messages on vehicle features, recall and safety information, maintenance reminders, and diagnostic information.
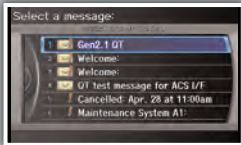
Viewing New Messages

Press and release the Talk button before you say a command.

1. When you receive a new message, an envelope icon appears on the map screen.

2. Say *"Messages,"* and a list of messages appears.
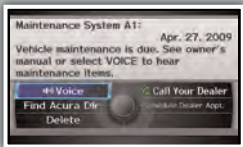

3. Say the number of the message you want to hear.

Scheduling a Dealer Appointment

To use this feature, register at My Acura (*www.myacura.com*), and make sure your compatible phone is paired (see) and set up for data connection.

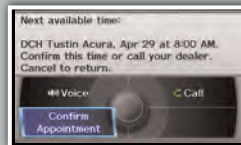1. Using the Interface Dial, **open** a maintenance or product update message.

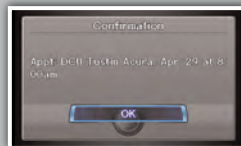2. Select "Schedule Dealer Appt."
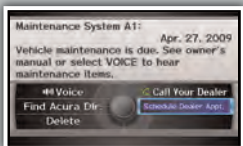
3. The system searches for the next available appointment at your registered dealer. Select "Confirm Appointment" if you are satisfied with the date.

   Note: If you are not satisfied with the available date, use the Call option to call your dealer directly.

4. Select "OK" to set the appointment.

BLUETOOTH® HANDSFREELINK® (Base model)

Place and receive phone calls through your vehicle's audio system. Visit *www.acura.com/handsfreelink* to check if your phone is compatible.

Using HFL

HFL Talk button: Give HFL commands and answer incoming calls.

**HFL Back button:** Cancel a command and end or decline a call.

Pairing Your Phone

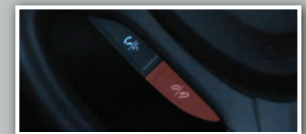**Press and release the HFL Talk button before you say a command.**

1. **Enable** discovery mode on your compatible phone.

2. If no phone has been paired before, the system gives your instructions.

   If you are pairing an additional phone, say *"Phone setup,"* then say *"Pair."*

3. HFL gives you a four-digit code that also appears on the MID.

4. **Search** for HandsFreeLink from your phone, and **enter** the code when prompted. **Connect** to HFL.
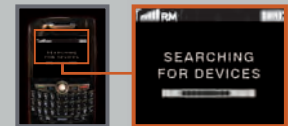
5. HFL asks you to name the phone. For example, say *"Mary's phone."* The phone is now paired.

Making a Call

Press and release the HFL Talk button before you say a command.

1. Say *"Call"* and the phone number.

   RM
   0123-345-6789

2. Say *"Call"* or *"Dial"* to begin the call.

   RM
   CALLING

3. The call is connected and heard through the speakers.

   RM
   IN USE

Receiving a Call

A notification is heard and the following screen appears on the MID:

   RM INCOMING
   CALL
   012-345-2345

Press the HFL Talk button to accept the call.

Press the HFL Back button to decline or end the call.

HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dial entries.

Press and release the HFL Talk button before you say a command.

1. Say *"Phonebook."*

   RM
   PHONE
   BOOK

2. Say *"Store."*

   RM
   STORE

3. Say the name of the contact, and then the phone number.

   RM STORE
   123-456-7890

4. To call a contact once an entry is stored, say "*Call Mike*."

   RM
   CALLING

BLUETOOTH® HANDSFREELINK® (Technology Package)

Place and receive phone calls through your vehicle's navigation and audio systems. Visit *www.acura.com/handsfreelink* to check if your phone is compatible.
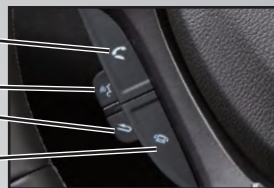
Using HFL

Pick-Up button: Answer an incoming call, or go directly to the Cellular Phone screen.

Talk button: Give HFL commands.

Back button: Cancel a command and return to the previous screen.

**Hang-Up button:** End a call or decline a call.

Pairing Your Phone

Use this pairing method when no phone has ever been paired to the system. You can only pair your *Bluetooth*-compatible phone when the vehicle is stopped.

> Press and release the Talk button before you say a command.

1. **Press** the Pick-Up button to go to the Cellular Phone screen. A prompt appears asking if you want to add a phone. **Say** *"Yes."*
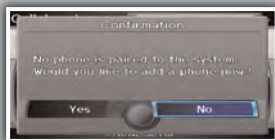
2. Make sure your phone is in discovery mode. **Search** for HandsFreeLink from your phone, and **select** it when it appears.
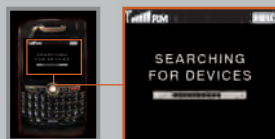
3. When your phone prompts you, **enter** the 4-digit pass-key from HFL.

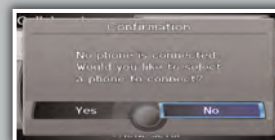4. **Follow** your phone's prompts and **connect** to HFL.

Pairing Your Phone (continued)

Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

> Press and release the Talk button before you say a command.

1. **Press** the Pick-Up button to go to the Cellular Phone screen.

If a prompt appears asking if you want to connect to a phone, **say** *"No."*
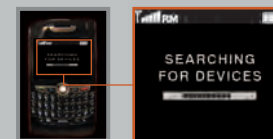
2. Say "*Phone setup.*"

3. **Say** "*Setup Bluetooth phone.*"
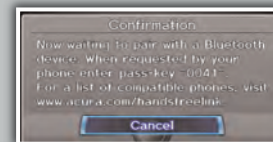

4. **Say** "*Pair phone.*"

5. Make sure your phone is in discovery mode. **Search** for HandsFreeLink from your phone, and **select** it when it appears.

6. When your phone prompts you, **enter** the 4-digit pass-key from HFL.

7. **Follow** your phone's prompts and **connect** to HFL.

Making a Call

Dialing a Number

1. Press the Pick-Up button to go to the Cellular Phone screen.

3. Say the entire phone number.

2. Say *"Dial."*

4. Say *"Dial"* to begin the call.
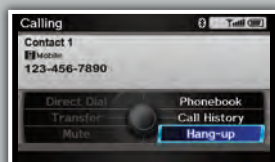
Using the Imported Phonebook*

1. Press the Pick-Up button to go to the Cellular Phone screen.

HFL imports your phonebook if it is not already imported.

2. Say *"Phonebook."*

3. Say the number of the entry you want to call.
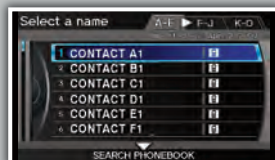
* Visit www.acura.com/handsfreelink to check if this feature is available on your phone.

Using Speed Dial and Voice Tags

1. Press the Pick-Up button to go to the Cellular Phone screen.

If an entry has a stored voice tag, say *"Dial by voice tag,"* followed by the voice tag name and *"Dial"* from any screen.

2. Say the number next to one of the first four entries. For example, *"One."* For the complete list of speed dial entries, say *"More speed dial."*
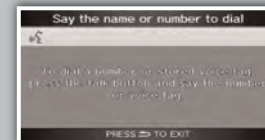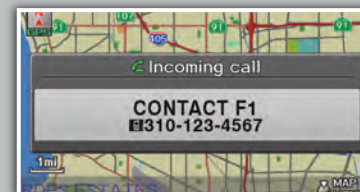

3. The call is connected and heard through the speakers.

Note: See your Owner's Manual for instructions on storing speed dial entries and accompanying voice tags.

Receiving a Call

When you receive an incoming call, you hear a notification and see the following pop-up message:

Press the Pick-Up button to accept the call.

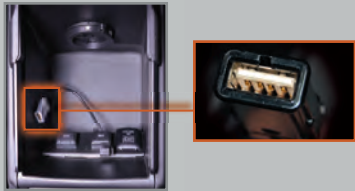Press the Hang-Up button to end or decline the call.

iPod® or USB Flash Drive

Play audio files from your compatible iPod or USB flash drive through your vehicle's audio system. See your Owner's Manual for a list of compatible devices.

Connecting and Playing Audio

1. **Open** the center console, and **pull out** the USB adapter cable.

Connect the USB connector to your iPod dock connector or flash drive.

2. **Press** AUX until iPod or USB appears.

3. **Press** (▶▶) (◀◀) or (+) (-) to change tracks.

Note: Connect your device only when your vehicle is stopped.

iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

HARD DISC DRIVE (HDD) AUDIO (Technology Package)

Record CDs onto your vehicle's hard disc drive. Songs are automatically recorded once a CD is inserted into the disc slot.
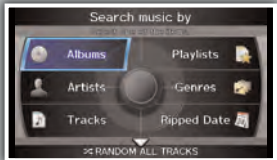
Playing HDD Audio

1. **Press** DISC/HDD until HDD appears.

2. The first song of the last recorded album or the last song selected plays. **Press** (▶▶) (◀◀) or (+) (-) to change tracks.

Searching for Music

1. **Press** AUDIO.

2. **Push** the interface dial up to select MUSIC SEARCH.

3. **Select** one of the categories.

4. **Select** a track and **press** ENTER to begin playing.
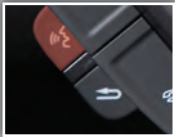
SONG BY VOICE™ (SBV) (Technology Package)

Play songs from your iPod and HDD from most navigation/audio screens by using simple voice commands.

Playing Audio Files Using Voice Commands

Press and release the Talk button before you say a command.

Using the "Play" Command

Say *"iPod search"* or *"HDD search."*
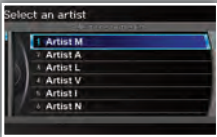

Say *"Play"* and one of the options on the Search Mode screen. For example, say *"Play Artist XYZ."*
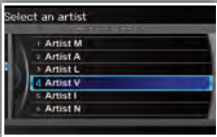

if exact match found   *if exact match not found*
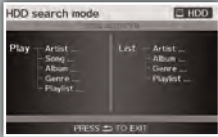
The system provides voice feedback and lists possible matches.

Say the number of the corresponding selection you wish to play. For example, say *"Four."*

The system plays the selection and returns to the Search Mode screen.

Playing Audio Files Using Voice Commands (continued)

Press and release the Talk button before you say a command.

Using the "List" Command

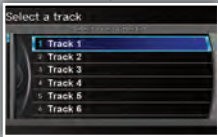Say *"iPod search"* or *"HDD search."*

Say *"List"* and one of the options on the Search Mode screen. For example, say *"List Artist XYZ."*

if exact match found   *if exact match not found*
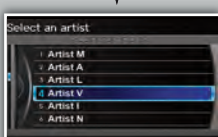
A list of tracks from the selected artist displays.

The system provides voice feedback and lists possible matches.

Say the number of the artist. For example, say *"Four."*

Say the number of your selection. For example, say *"One."*

The system plays the selection and returns to the Search Mode screen.

BLUETOOTH® AUDIO

Play audio files from your compatible phone through your vehicle's audio system. Visit *www.acura.com/handsfreelink* to check if this feature is available on your phone.

Playing *Bluetooth* Audio

1. Make sure your phone is on and paired to *Bluetooth*® HandsFreeLink® (see).

2. Press AUX until "Bluetooth Audio" appears.
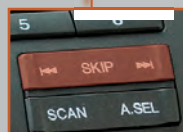
3. From your phone, **open** the desired audio player or app and begin playing. Sound is redirected to the audio system. Make sure the volume on your phone is properly adjusted.

4. Press (⏭) (⏮) or (+) (-) to change tracks.

Notes:
- You may need to enable additional Bluetooth settings on your phone for playback.
- Remote audio controls and the play/pause function may not be supported on all phones.
- Operate your phone only when your vehicle is stopped.

FUEL FILL DOOR

Easy-to-use locking fuel door keeps your fuel cap covered.

Opening the Fuel Fill Door

When you unlock the driver's door with the master door lock switch or the remote transmitter, the fuel door unlocks.
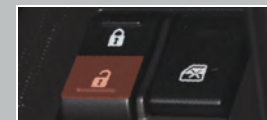
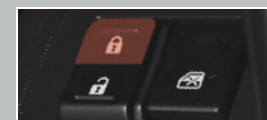To open, **push and release** the fuel door in the area shown until it pops open.

Closing the Fuel Fill Door

Push the fuel door until it is flush to the body.

When you **lock** the driver's door, the fuel door locks.

REGISTER AT *WWW.MYACURA.COM*

My Acura allows you to explore features and technologies specific to your vehicle, schedule service appointments, obtain and update maintenance and service records, manage your financial services account, and access other useful information. Register at *www.myacura.com* to ensure that you continue to enjoy the experience of owning an Acura.

SAFETY REMINDER

Your vehicle is equipped with airbags. Airbags do not replace your seat belts; they add to the protection offered by seat belts. Airbags can help protect you in some types of collisions, but they do not provide protection in all collisions.

Always make sure you and your passengers wear seat belts, and that young children are properly secured in a child seat or booster in the rear seat. Never place an infant seat in the front passenger's seat as the force of a deploying airbag can seriously injure an infant.

FUEL REQUIREMENT

- Only use unleaded gasoline of 91 octane or higher.
- Some gasoline in North America contains MMT, a manganese-based fuel additive. Prolonged and consistent use of gasoline containing MMT can deteriorate your vehicle's performance, fuel economy, and the emission control system. Always use MMT-free gasoline if available. Failures caused by use of gasoline containing MMT may not be covered under warranty.
- "TOP TIER Detergent Gasoline" meets a new gasoline standard jointly established by leading automotive manufacturers to meet the needs of today's advanced engines. In most cases, qualifying gasoline retailers will identify their gasoline as having met "TOP TIER Detergent Gasoline" standards at the retail location. This fuel is guaranteed to contain the proper level of detergent additives and be free of metallic additives. This helps avoid build-up of deposits in your engine and emission control system. Because the level of detergency and harmful metallic additives (such as MMT) in gasoline vary in the market, Acura endorses the use of "TOP TIER Detergent Gasoline" where available to help maintain the performance and reliability of your vehicle. For more information, visit *www.toptiergas.com*.
- For further important information on fuel and lubricants for your car and information on gasoline that does not contain MMT, contact your dealer or visit My Acura at *www.myacura.com*.