U.S. models (except Alaskan and Hawaiian)

UPPER DISPLAY

SATELLITE RADIO BUTTON

POWER/ VOLUME KNOB

TUNE BUTTONS

CATEGORY BUTTONS

DISPLAY/ MODE BUTTON

SCAN BUTTON

**AUDIO DISPLAY BUTTON**

INTERFACE DIAL

PRESET BUTTON
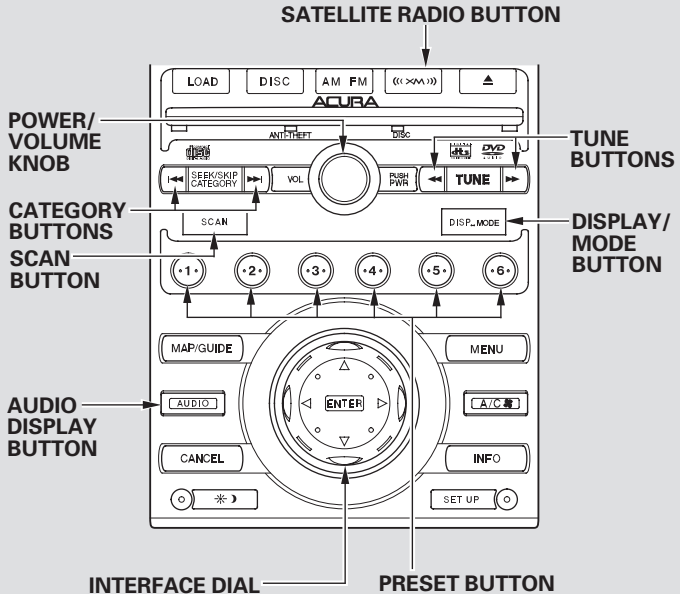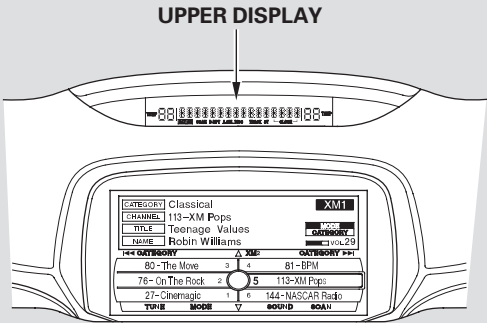
Playing the XM® Satellite Radio

Your vehicle is capable of receiving XM® Satellite Radio anywhere in the United States, except Hawaii and Alaska.
XM® is a registered trade mark of XM Satellite Radio, Inc.

XM Satellite Radio receives signals from two satellites to produce clear, high-quality digital reception. It offers many channels in several categories. Along with a large selection of different types of music, XM Satellite Radio also allows you to view channel and category selections in the audio display.

To listen to XM Satellite Radio, turn the ignition switch to ACCESSORY (I) or ON (II). Push the power/volume knob to turn on the audio system, and press the «×ᴍ» button. The last channel you listened to will show in the display. Adjust the volume by turning the power/volume knob.
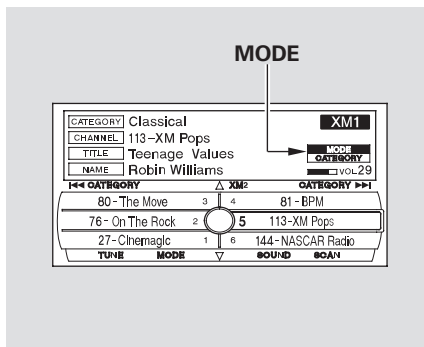

MODE — To switch between the category mode and channel mode, press and hold the DISP/MODE button until the mode changes. The CATEGORY or CHANNEL mode is displayed on the screen.

In the category mode, such as Jazz, Rock, Classical, etc., you can navigate through all of the channels within that category. In the channel mode, you can select all of the available channels.

You may experience periods when XM Satellite Radio does not transmit the artist's name and or the song title information. If this happens, there is nothing wrong with your system.

Push the AUDIO button to display XM information on the screen.

To change categories, press the CATEGORY button, or push the interface selector left or right.

TUNE ICON
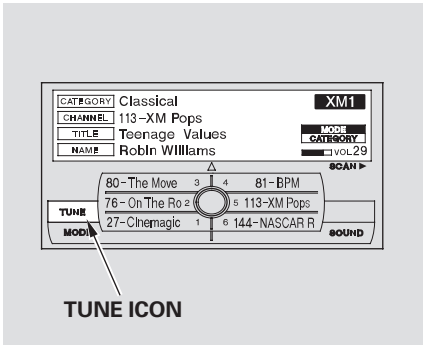
To change channels, press the TUNE button, or scroll down with the interface selector, select TUNE, and press ENTER on the selector. Then turn the interface knob to the desired channel. In the category mode, you can only select channels within that category.

SCAN ICON
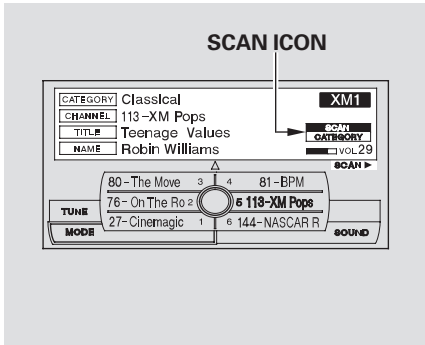
SCAN － The scan function gives you a sampling of all channels while in the channel mode. In the category mode, only the channels within that category are scanned. To activate SCAN, press the SCAN button. To scan with the interface dial, scroll down, and push interface selector to the right. You will see SCAN on the screen.

The system plays each channel in numerical order for a few seconds, then selects the next channel. When you hear a channel you want to continue listening to, push the interface selector to the right again.

Features

CONTINUED