

<b>Introduction.....</b>	<b>4</b>	FM Traffic™ .....	23	By Map Input.....	46
Manual Overview .....	4	Traffic Status Indicator.....	23	Showing the Map of Current	
System Overview .....	4	Viewing Flow Data.....	24	Position .....	47
Accessories Precautions.....	5	Viewing Incident Reports .....	25	Showing the Map of City .....	48
Important Safety Information .....	5	System Function Diagram .....	27	Showing the Map of State.....	49
Map Overview .....	6	<b>Entering a Destination .....</b>	<b>28</b>	Showing the Map of Continental	
Current Street.....	6	By Address .....	29	USA and Canada.....	50
Verified/Unverified Street.....	6	Selecting the State or Province.....	29	By Go Home 1 or 2 .....	51
<b>User Agreement.....</b>	<b>8</b>	Selecting the ZIP Code .....	30	<b>Driving to Your Destination .....</b>	<b>52</b>
<b>Getting Started .....</b>	<b>10</b>	Selecting the City.....	30	Driving to Your Destination.....	52
System Controls.....	10	Selecting the Street .....	32	Calculate Route to Screen .....	52
Voice Control Basics .....	13	Entering the Street Number.....	34	Changing the Route Preference.....	53
Using the Voice Control System.....	14	By Address Book.....	34	Viewing the Routes .....	53
Improving Voice Recognition .....	14	Adding Addresses to the Personal		Viewing the Destination Map .....	54
Selecting an Item (Button) on the		Address Book .....	35	Map Screen.....	54
Screen .....	15	By Previous Destination .....	35	Route Line.....	54
Selecting an Item in a List .....	15	By Place Name .....	36	Voice Guidance Prompts.....	55
Entering Information .....	16	By Place Category .....	37	Map Screen Legend.....	56
System Start-up.....	18	Subcategories .....	38	Guidance Screen.....	57
System Language Selection.....	18	Place Name.....	41	Guidance Screen Legend.....	57
Bluetooth® HandsFreeLink® .....	19	City Vicinity .....	41	Distance and Time to Destination ....	58
Map Screen Legend .....	20	Sort by Distance to Travel.....	41	Map Menu .....	58
Map Screen Description .....	21	Search by Keyword.....	42	Guidance Menu .....	59
Zoom In/Out.....	21	By Place Phone Number .....	43	Directions .....	59
Map Scrolling.....	21	By ZAGAT® 2010.....	43	Exit Info.	
Displaying Current Location .....	21	By Coordinate.....	44	(Freeway Exit Information) .....	60
Traffic Display Legend.....	22	By Intersection.....	46	Guidance Mode .....	60

# Table of Contents

Map Information .....	61	Continue Trip to Screen.....	78	Previous Destinations.....	96
<i>Showing Icons on the Map</i> .....	61	<b>Information Features .....</b>	<b>79</b>	SETUP Screen (Other) .....	97
<i>Map Orientation</i> .....	63	INFO Screen (Main Info.) .....	79	Music Search .....	97
<i>Current Location</i> .....	64	<i>Trip Computer</i> .....	79	<i>Song By Voice™ (SBV)</i> .....	97
<i>Map Legend</i> .....	65	<i>Traffic Incidents</i> .....	80	<i>Phonetic Modification</i> .....	98
Map Scale .....	66	<i>Clock/Wallpaper</i> .....	81	Basic Settings .....	99
Destination Icon.....	67	<i>Calendar</i> .....	81	<i>Units (mile or km)</i> .....	99
Various Other Icons .....	67	<i>Voice Help</i> .....	83	<i>Voice Recognition Tutor</i> .....	99
<i>Landmark Icons</i> .....	67	<i>Setup</i> .....	84	Routing & Guidance.....	100
<i>Incident Icons</i> .....	68	INFO Screen (Other) .....	84	<i>Rerouting</i> .....	100
Going Off the Route .....	71	<i>Scenic Road Information</i> .....	85	<i>Unverified Area Routing</i> .....	101
Off-road Tracking .....	71	<i>Calculator</i> .....	85	<i>Edit Avoid Area</i> .....	105
Pop-ups and Disclaimers .....	72	<i>System/Device Information</i> .....	86	<i>Edit Waypoint Search Area</i> .....	107
Changing the Route .....	73	<i>Map Data Update Status</i> .....	86	<i>Guidance Mode</i> .....	108
DEST Screen (Route) .....	74	<i>Key to ZAGAT Ratings</i> .....	87	<i>Street Name Guidance</i> .....	108
<i>Cancel Route</i> .....	74	<b>Phone Features .....</b>	<b>88</b>	<i>Guidance Screen Interruption</i> .....	108
<i>Detour</i> .....	74	<b>System Setup.....</b>	<b>89</b>	Vehicle.....	109
<i>Avoid Streets</i> .....	74	SETUP Mode.....	89	<i>Off-road Tracking</i> .....	109
<i>Change Route Preference</i> .....	74	SETUP Screen (Main Setup).....	89	<i>Correct Vehicle Position</i> .....	109
<i>Waypoint</i> .....	75	<i>Brightness</i> .....	89	Color .....	110
<i>Destination List</i> .....	76	<i>Contrast</i> .....	89	<i>Map Color</i> .....	111
Changing Your Destination .....	77	<i>Black Level</i> .....	89	<i>Menu Color</i> .....	111
<i>Find Nearest (Voice command)</i> .....	77	<i>Volume</i> .....	90	<i>Switching Display Mode Manually</i> ...	111
<i>Go Home (Voice command)</i> .....	77	<i>Interface Dial Feedback</i> .....	90	<i>Switching Display Mode</i>	
<i>Using Interface Dial to Change</i>		Personal Information .....	90	<i>Automatically</i> .....	112
<i>Destination</i> .....	77	<i>Address Book</i> .....	90	Language .....	113
<i>Entering a Destination from the Menu</i>		<i>Home Address</i> .....	94	Clock/Wallpaper.....	113
<i>Screen (while en route)</i> .....	78	<i>PIN Number</i> .....	95	<i>Wallpaper Type</i> .....	113

<i>Clock Adjustment</i> .....	114
<i>Clock Type</i> .....	115
<i>Picture Setup</i> .....	115
Reset Factory Default Settings .....	117
Clear Personal Data .....	118
Multi-view Rear Camera .....	119
<i>Three-way Rearview Modes</i> .....	119
<i>Visible Range of the Rearview</i>	
<i>Image</i> .....	120
Multi-view Rear Camera Brightness	
Adjustment.....	120
<b>System Initialization</b> .....	121
System Initialization .....	121
Entering the Security Code .....	121
GPS Initialization.....	121
Map Matching.....	122
<b>System Limitations</b> .....	123
<i>GPS Reception Issues</i> .....	123
<b>Database Limitations</b> .....	124
<b>Customer Assistance</b> .....	126
Reporting Errors .....	126
Honda Automobile Customer	
Service .....	126
Visiting Your Dealer.....	127
Obtaining a Navigation Update	
DVD .....	127

<b>Coverage Areas</b> .....	128
Map Coverage.....	128
<i>U.S. Detailed Coverage Areas</i> .....	128
<i>Puerto Rico Detailed Coverage</i>	
<i>Areas</i> .....	133
<i>Canada Detailed Coverage Areas</i> ....	134
Operation in Alaska, Hawaii, Canada,	
and Puerto Rico .....	144
Alaska, Hawaii, Canada, and Puerto	
Rico .....	144
<b>Frequently Asked Questions</b> .....	146
<b>Troubleshooting</b> .....	153
<b>Glossary</b> .....	154
Glossary .....	154
<b>Voice Command Index</b> .....	157
Global Commands .....	157
Navigation Commands .....	157
<i>General Commands</i> .....	157
<i>Map Display Commands</i> .....	158
<i>Map Scale Commands</i> .....	158
<i>Find Place Commands</i> .....	159
<i>Route Commands</i> .....	160
Climate Control Commands .....	160
Audio Commands .....	161
<i>Radio Commands</i> .....	161
<i>Disc Commands</i> .....	162
<i>HDD Commands</i> .....	162

<i>USB Commands</i> .....	163
<i>iPod Commands</i> .....	163
<i>Bluetooth® Audio Commands</i> .....	164
<i>AUX Commands</i> .....	164
<i>Song By Voice™ Commands</i> .....	164
<i>Rear Radio Commands</i> .....	164
<i>Rear CD Commands</i> .....	165
<i>Rear DVD Commands</i> .....	165
<i>Rear HDD Commands</i> .....	166
<i>Rear iPod Commands</i> .....	167
<i>Rear AUX Commands</i> .....	167
Phone Commands .....	167
SETUP Screen (Main Setup)	
Commands.....	167
On-Screen Commands .....	168
On-Screen Spelling Assist.....	168
<b>Index</b> .....	172

# Introduction

---

## Manual Overview

**The manual is divided into the following sections:**

- Getting Started - A basic introduction that discusses the controls and how to communicate with the system.
- Entering a Destination - How to enter an address or locate a point of interest (POI).
- Driving to Your Destination - An explanation of the map features, guidance, and cautions.
- Information Features - An explanation of the information features, voice command help, and other accessories.
- System Setup - How to set up and tailor the system for your personal use and use the Address Book.

**The back of this manual contains:**

- Map Coverage (page [128](#))
- Cities with Traffic Coverage (page [143](#))
- Frequently Asked Questions (FAQs) (page [146](#))
- Troubleshooting Guide (page [153](#))
- Glossary of Terms (page [154](#))
- Voice Command List (page [157](#))
- Operation Specific to Alaska, Hawaii, Canada, and Puerto Rico (page [144](#))

## System Overview

Your navigation system is a highly sophisticated location system with voice control that uses satellites and a map database to show you where you are and to help guide you to a desired destination.

The navigation system receives signals from the global positioning system (GPS), a network of 24 satellites in orbit around the earth. By receiving signals from several of these satellites, the navigation system can determine the latitude, longitude, and elevation of your vehicle. In addition, a gyroscopic yaw sensor and a vehicle speed sensor in your vehicle keep track of the direction and speed of travel at all times.

The navigation system applies location, direction, and speed information to the maps and calculates a route to the destination you enter. As you drive to that destination, the system provides map and voice guidance.

The navigation system is easy to use. The locations of many places of business and entertainment are already entered in the system. You can select any of them as a destination by using the Interface Dial or voice control.

There are several ways to enter a destination, such as by point of interest (POI), by address, by phone number, and by selecting it from the map. The last 50 destinations are saved for reuse at a later date. The system also allows you to store a home address to simplify returning home from your destination.

## Accessories Precautions

If you have front or side window tinting installed, be aware that if the tint has metallic properties, it can seriously degrade or prevent GPS reception. This is because the GPS antenna is located in the dashboard.

If you plan to install electronic components such as radar detectors, vehicle tracking devices, remote starters, additional amplifiers, or other audio components, ensure that they are not located near the navigation display, or near the GPS antenna in the dashboard. Signal noise emanating from these devices can cause intermittent disruption of the navigation system.

## Important Safety Information

The navigation system can distract your attention from the road if you focus on the screen or operate the system's controls while driving.

Enter as much information as possible into the system before you begin driving, or when the vehicle is stopped. Then, as you drive, listen to the audio instructions and use voice commands when possible.

# Introduction



## WARNING

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

While driving, do not look at the screen or operate the system controls for more than a second or so at a time, and only after deciding you can do so safely. Pull to the side of the road if you need more time to look at the screen or operate the controls.

The navigation system is designed to provide route information to help you reach your destination. However, this route guidance may sometimes conflict with current road conditions such as street closures, road construction, detours, and out-of-date map data.

Additionally, the system itself has certain limitations (see page 123). Therefore, you must verify the audio and visual route information provided by the system by carefully observing the roadway, signs and signals, etc. If you are unsure, proceed with caution. Always use your own good judgment, and obey traffic laws while driving.

## Map Overview

### Current Street

The current street on which your vehicle is located appears at the bottom of the map screen (see page 20). A message saying “Not on a digitized road” may appear instead when you drive half a mile away from a mapped road. For more details, see *Off-road Tracking* on page 71.

### Verified/Unverified Street

Your navigation system has two kinds of streets: verified (red, gray, and pink) and unverified (purple). The differences between the two types of streets are contrasted in the chart on page 7.



	Verified streets	Unverified streets
<b>When displayed</b>	These roads are generally found within metropolitan areas, and include interstate freeways and major roads connecting cities.	These roads are generally found in rural areas, and typically include residential streets away from the center of a town.
<b>Street color</b>	Shown as red (freeways), pink (state routes), or gray (verified streets) on the daytime map screen.	Shown on the daytime map screen as purple.
<b>Map quality</b>	The database vendor has verified these streets. Information like turn restrictions, average speed, and whether it is a one-way street have been gathered and used when creating your route to a destination.	These streets have not been verified by the database vendor. The system does not contain information whether these are on one-way streets, have turn restrictions, or the road's average speed. They are shown on the map for reference and may have errors in map location, naming, and address range.
<b>Routing differences</b>	While driving to your destination, the displayed route line is solid blue. The system provides voice and map guidance to your destination.	Your route line is either a purple dotted "vector line," or a dashed pink/blue line. For information on selecting this option, and the routing differences, see <i>Unverified Area Routing</i> on page 101.
<b>Cautions</b>	There are no pop-up boxes urging extra caution during a route. However, because roads constantly change, you are urged to use common sense, and always obey posted traffic restrictions.	Regardless of whether the user chooses route guidance, there are cautionary screens before and during the route urging the user to be extra cautious, and obey all traffic restrictions. See <i>Unverified Area Routing</i> on page 101.
<b>Guidance voice</b>	Voice guidance issues instructions such as "In a half-mile, make a right turn."	The phrase "if possible" is added to each guidance instruction. For example: "In a half-mile, make a right turn, if possible."
<b>Time and distance "to go"</b>	The time and distance "to go," displayed while en route to a destination, is based on the average speed and distance for the roads used for your route.	The time and distance "to go," displayed while en route to a destination, is based on the average speed and distance for the roads used for your route.

## User Agreement

---

In using this HDD “Satellite Linked Navigation System” (the “HDD”), which includes HONDA MOTOR CO., LTD. software, ALPINE ELECTRONICS, INC. software, and NAVTEQ database contents (hereinafter referred to as “Licensors”), you are bound by the terms and conditions set forth below. By using your copy of the HDD, you have expressed your Agreement to the terms and conditions of this Agreement. You should, therefore, make sure that you read and understand the following provisions. If for any reason you do not wish to be bound by the terms of this Agreement, please return the HDD to your dealer.

- The HDD may not be copied, duplicated, or otherwise modified, in whole or in part, without the express written permission of the Licensors.
- The HDD may not be transferred or sublicensed to any third party for profit, rent or loan, or licensed for reuse in any manner.
- The HDD may not be decompiled, reverse engineered or otherwise disassembled, in whole or in part.
- The HDD may not be used in a network or by any other manner of simultaneous use in multiple systems.
- The HDD is intended solely for personal use (or internal use where the end-user is a business) by the consumer. The HDD is not to be used for commercial purposes.
- The Licensors do not guarantee to the client that the functions included in the HDD meet the specific objectives of the user.
- Licensors shall not be responsible for any damages caused by the use of the HDD to the actual user or to any third party.
- The warranty on the HDD shall not extend to an exchange or refund due to misspelling, omission of letters, or any other cosmetic discrepancy in the contents of the HDD.
- The right to use the HDD shall expire either when the user destroys the HDD or software, or when any of the terms of this Agreement are violated and the Licensors exercise the option to revoke the license to use the HDD or software.


- The terms and conditions hereof apply to all subsequent users and owners as well as to the original purchaser.
- The logos of oil companies, hotels, convenience stores, and other businesses are displayed for your information and convenience, and in no way imply any sponsorship, approval or endorsement of these companies, or their products. The logos are trademarks of their respective owners.

The user shall indemnify and save harmless the Licensors, and their officers, employees and agents, from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expense, damages or injuries (including injuries resulting in death) arising out of the use or possession of the HDD or software.

Use, duplication, or disclosure of this HDD by or on behalf of the United States government is subject to "Restricted Rights" as set forth at FAR 52.227-14, -19 or DFARS 252.227-7013, as applicable. Manufacturers are the Licensors, including HONDA MOTOR CO., LTD., 2-1-1 Minami Aoyama Minato-Ku Tokyo 107-8556 JAPAN., Alpine Electronics, Inc., 20-1 Yoshima Kogyodanchi, Iwaki, Fukushima 970-1192 JAPAN., NAVTEQ Corporation, 425 W Randolph St. Chicago, IL 60606, USA.

# Getting Started

## System Controls

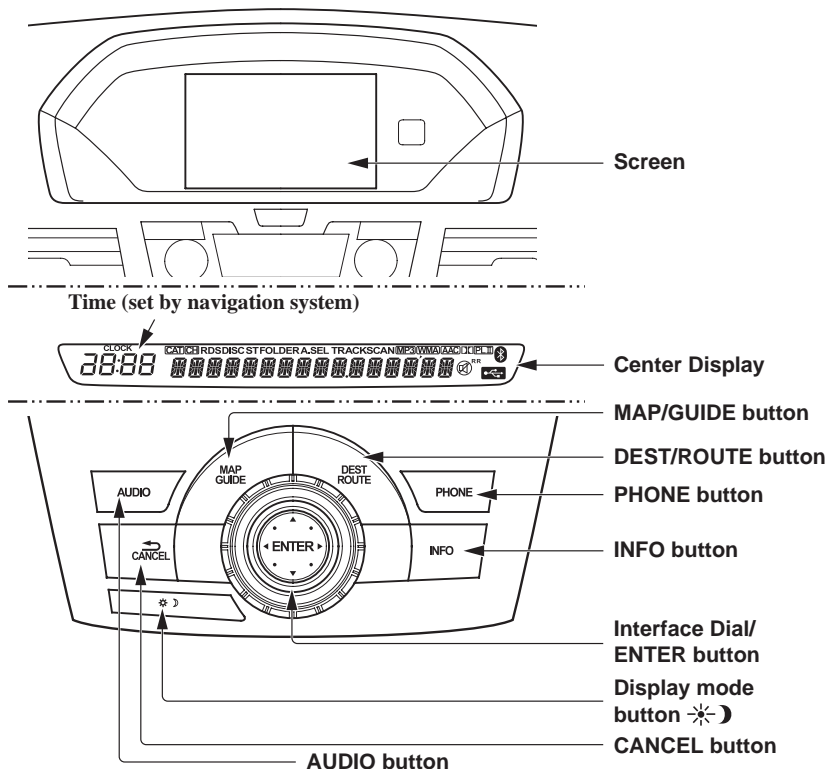

### MAP/GUIDE button

Displays the map. When en route, switches between the map and guidance screens. See page [20](#) or [56](#).

### DEST/ROUTE button

Displays the “Dest. MENU 1” options on the DEST screen. When en route, displays the “Route” options on the DEST screen. See page [28](#) or [73](#).

### PHONE button

Displays the Cellular Phone screen. See page [88](#).

### INFO button

Displays the “Main Info.” options on the INFO screen. When selecting the “Other” tab, displays the “Other” options on the INFO screen. See page [79](#).

**Display Mode button** 

Adjusts the screen brightness for Day or Night mode, or turns the screen OFF. See page [111](#).

**CANCEL button**

Cancels the current screen and returns to the previous screen display.

**NOTE:**

The **BACK** button on the steering wheel performs the same basic function. See page [13](#).


**AUDIO button**

Press to display the audio screen.

For more information on audio system features, see the *Audio* section of your Owner's Manual.

**Other buttons**

See your Owner's Manual.

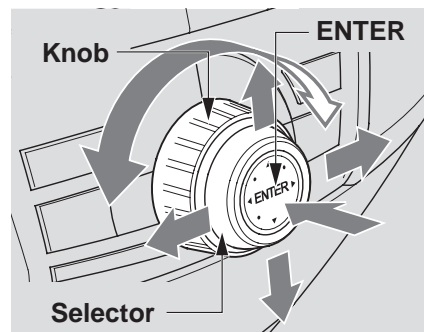**Interface Dial/ENTER button**

To see areas beyond the map that is displayed, you can move the **Interface Dial** left, right, up, or down. Rotating the **Interface Dial knob** allows you to change the scale. Rotating it clockwise reduces the scale, showing less area with greater detail. Rotating it counterclockwise increases the scale, showing more area with less detail.

You can also rotate the **Interface Dial knob** to scroll through a list or highlight items in a list to select. After making a selection in a menu or list, push in on the **Interface Dial (ENTER button)** to enter the selection into the system.

In almost all cases, you can enter a selection into the system by pushing in on the **Interface Dial**.

## Getting Started

---

### Screen

All selections and instructions are displayed on the screen. The display is not a “touch screen” - you can enter information into the system either by voice or by using the **Interface Dial**.

Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on computer screens.

#### **NOTE:**

*Whenever you shift to R (Reverse), the rear view behind the vehicle is shown on the navigation system screen. See page [119](#).*

### Lower Display


Shows a summary of the audio information, as well as the time. This summary is helpful as a confirmation when adjusting audio by voice.

The audio summary consists of the radio band, frequency, and volume. For XM radio, a brief description of the station and current music is displayed.

The time is automatically set by the navigation system. Settings can be adjusted in SETUP (see *Time Adjustment* on page [115](#)).


## Voice Control Basics

Your vehicle has a voice control system that allows hands-free operation of most of the navigation system functions. You can also control the audio, phone, and climate control system. The voice control system uses the **TALK** and **BACK** buttons on the steering wheel and a microphone near the map lights on the ceiling.

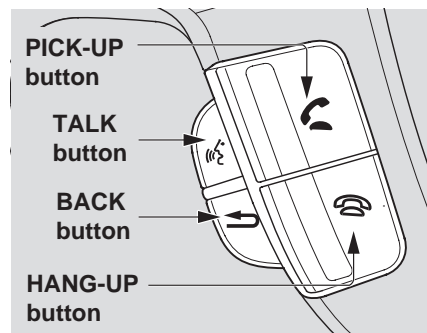

### NOTE:

While using the voice control system, the audio system is muted.

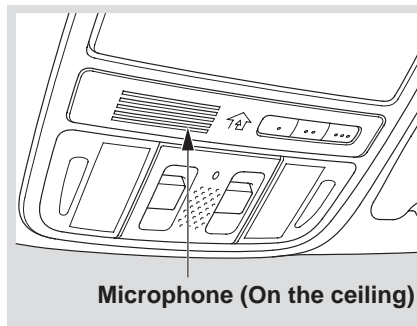

### TALK button

This button activates the voice control system. Press and release it when you want to give a voice command. See *Voice Command Index* on page [157](#) for a list of voice commands.

### BACK button

This button has the same function as the **CANCEL** button. When you press and release it, the display returns to the previous screen. When the previous screen appears, the system replays the last prompt.


When you press this button during voice recognition, voice recognition is ended. (The display does not return to the previous screen.)

## Getting Started

### Using the Voice Control System

You should use the voice control system as much as possible, and consider manual entry using the **Interface Dial** as a backup method.

Most of the system's functions can be controlled by voice commands activated with the **TALK** button. To control the navigation system by voice:

- Press and release the **TALK** button. A guidance prompt will be played, and a pop-up voice icon () will appear in the upper left corner of the screen.
- Wait for the beep.
- Give a voice command. (Voice commands that the system recognizes are highlighted.)

Once the microphone picks up your command, the system changes the display in response to the command. Press the **TALK** button to get a guidance prompt for the next command.

#### NOTE:

*To interrupt guidance prompts, press the **TALK** button again. Wait for the beep, and give a command.*

If the system does not understand a command or you wait too long to give a command, it responds with “Pardon? No comment was heard. Please press the Talk button and say a command.” If the system cannot perform a command or the command is not appropriate for the screen you are on, a beep will sound.

You can find out which voice commands are available for a particular screen by saying “Help.” The system will display and read the list of available commands to you. (When **Help** is grayed out, this feature cannot be used.)

When you give a command, the system either performs the command or transitions to the next step in a task.

#### NOTE:

*Guidance prompts can be turned off. See page 55.*

If you hear a prompt such as “Please use the Interface Dial to...” or “Please choose an area with the Interface Dial,” the system is asking for input that cannot be performed using the voice control system.


### Improving Voice Recognition

To achieve optimum voice recognition when using the voice control system, the following guidelines should be followed:

#### NOTE:

*Make sure the correct screen is displayed for the voice command that you are using. See Voice Command Index on page 157.*

- It is best if the windows and moonroof are closed. If they are open, speak a little louder to overcome the wind noises.

- Adjust the dashboard and side vents so air does not blow against the microphone on the ceiling.
- If more than one person is speaking at the same time, the system may misinterpret your command.
- Give a voice command in a clear, natural speaking voice without pausing between words.
- Try to reduce any background noise.
- If you are still having trouble with the voice control system, refer to **Voice Help** on the INFO screen (Main Info.) or say “Help” while the  icon is displayed on the top left of the screen.

**NOTE:**

*The voice control system can only be used in the driver’s seat because the microphone unit removes noises from the front passenger’s side.*

## Selecting an Item (Button) on the Screen

On most screens, there are items that can be selected (like buttons with titles such as **OK** or **Return**). To select an item on any screen, do one of the following:

- Use the voice control system and say the name of the desired item. Almost all selectable items on the screen, including some listed items, are recognized by the voice control system.
- Move the highlighting to the desired item with the **Interface Dial** or its **knob**, then push in on the **Interface Dial**.

**Tip:**

*If items are grayed out, this means that they cannot be selected.*

## Selecting an Item in a List

To scroll through a list, do one of the following:

- Rotate the **Interface Dial knob** to scroll one item at a time.
- Use the voice control system to scroll page by page. For example, to scroll up, say “Up” or “Previous.” To scroll down, say “Next” or “Down.”

If you cannot find the desired name, or have made an error, return to the previous screen by pressing the **CANCEL** or the **BACK** button on the steering wheel.

To select the desired item in the list, do one of the following:

- Use the voice control system, and say the item number of the desired item.
- Rotate the **Interface Dial knob** to move the highlighting to the item, then push in on the **Interface Dial**.

## Getting Started

---

### Entering Information

When the system needs input from you, the display changes to a screen similar to the one on the [next](#) page. You can then use the displayed letters, numbers, or symbols to enter information. You can enter your keyboard input in either of the following ways:

- Say the desired letter, number, or symbol on the screen if you are entering a city or street name.
- Move the highlighting to the desired letter, number, or symbol by rotating the **Interface Dial knob**, then push in on the **Interface Dial**.

Each entered letter will appear at the top of the display. To enter a space between words, say “Space” or move the **Interface Dial** to the right. To delete an entry, say “Delete” or move the **Interface Dial** to the left.

If a letter has options (such as accent marks or symbols), they will appear in gray next to the selected letter on the upper row. Move the **Interface Dial** up to select **OPTION**, and use the **Interface Dial knob** to select the letter.

To enter symbols, rotate the **Interface Dial Knob** and select # or @, then move the **Interface Dial** up to select **OPTION**.

When entering an address, the system searches the database for words that match the letters you are entering. As a result, you will notice that some letters are no longer available.


When the system finds only one entry that matches, it completes the name entry for you. If the system finds more than one entry that matches your input, a list of these matches is displayed.

### Tip:

*When entering a name of a city, street, or place, or if you are unsure of the spelling of the name, enter the letters that you are sure of, then move the **Interface Dial** down to select **LIST**. The system will display a list of names that most closely match your input. For each letter that is entered, the number of corresponding choices is displayed on the right-hand side.*

**NOTE:**

The voice command names that can be used for each letter are shown below. For additional keyboard symbols, see page [170](#).

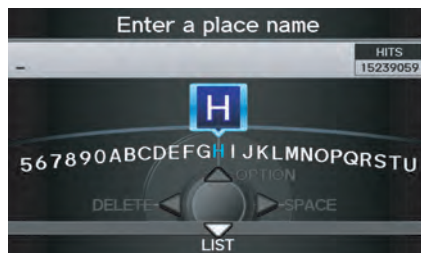


Say	Or say "..."	Say	Or say "..."	Say	Or say "..."	Say	Or say "..."
<b>A</b>	Alpha/Apple	<b>H</b>	Hotel/Henry	<b>O</b>	Oscar	<b>V</b>	Victor
<b>B</b>	Bravo/Boy	<b>I</b>	India/Igloo	<b>P</b>	Papa/Paul	<b>W</b>	Whiskey/William
<b>C</b>	Charlie	<b>J</b>	Juliet/John	<b>Q</b>	Quebec/Queen	<b>X</b>	X-ray
<b>D</b>	Delta/Dog	<b>K</b>	Kilo/King	<b>R</b>	Romeo/Robert	<b>Y</b>	Yankee/Yellow
<b>E</b>	Echo/Edward	<b>L</b>	Lima/Larry	<b>S</b>	Sierra/Sam	<b>Z</b>	Zulu/Zebra
<b>F</b>	Foxtrot/Frank	<b>M</b>	Mike/Mary	<b>T</b>	Tango/Tom		
<b>G</b>	Golf/George	<b>N</b>	November/Nancy	<b>U</b>	Uniform/Uncle		

## Getting Started

### System Start-up

When you turn the ignition to ON (II), it takes about 10 seconds for the navigation system to boot up.

The first screen to appear is the navigation system globe screen. The screen then changes to the Disclaimer screen:

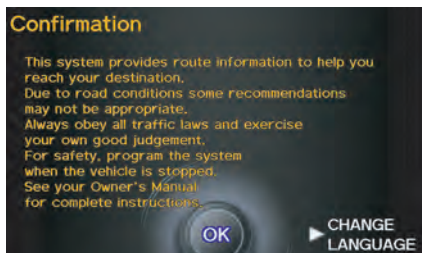


#### NOTE:

The **OK** button does not appear until after the software is loaded.

### System Language Selection


Move the **Interface Dial** to the right to select **CHANGE LANGUAGE**. On the **Select a language** screen, you can select the language to be used by the entire system by choosing from the language choices that are displayed. After you have changed the language settings, you will be returned to the Disclaimer screen.

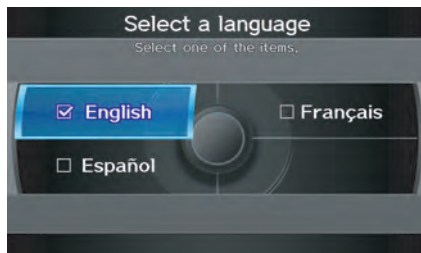

Read this disclaimer carefully so you understand it before continuing. Push in on the **Interface Dial** to select **OK**, and the map screen will appear on the display. The “OK” cannot be activated by voice.

If you do not push in on the **Interface Dial** within 30 seconds, the screen displays wallpaper or the clock screen. (See page 81.) To return to the Disclaimer screen, press any navigation “hard” button or voice control button.

If you have entered any Calendar reminders, they are displayed after you select **OK**. See *Calendar* on page 81.

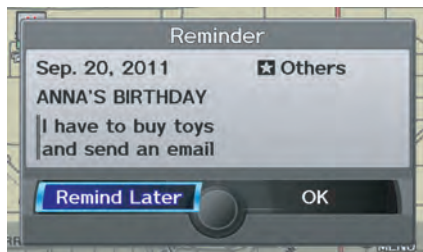

The Calendar reminder screen remains displayed until you select **OK** or **Remind Later** by rotating the **Interface Dial knob** and pushing in on the **Interface Dial**, or press the **CANCEL** button.

If you select **OK** and push in on the **Interface Dial**, the reminder will not show up again. (It will be deleted from the Calendar.)

If you select **Remind Later** and push in on the **Interface Dial**, the reminder will show up again the next time you start the vehicle. If there are several reminders, the next reminder will be displayed.

If you press the **CANCEL** button, the system will skip all the reminders. The reminders will show up again the next time you start the vehicle.

#### NOTE:

*The system will display the current message and any older or previously unread messages, with the newest message appearing first and the remaining messages appearing in date order.*

If you turn off the engine during route guidance and then restart the vehicle, the **Continue trip** to screen will be displayed. For more information, see *Continue Trip to Screen* on page 78.

### Bluetooth® HandsFreeLink®

If you have a Bluetooth-compatible cell phone that is paired with the system, then **Call** on the Calculate route to screen will be enabled.



When you select **Call**, the system dials the number shown on the screen.

For more information on *Bluetooth® HandsFreeLink®*, see your Owner's Manual and the official website (<http://automobiles.honda.com/handsfreelink>).

# Getting Started

## Map Screen Legend

### GPS Signal Strength

**GPS** : Best Reception  
**GPS** : Good Reception  
 (Missing): Poor/No Reception

### Traffic Status Indicator

(see page 23)

### Vehicle Position (see page 64)

(Use voice command "Display current location" or use the **Interface Dial** to show current location.)

### Current Street

(see page 6)

### Current Map Scale

(see page 66)

### Map Scale Adjustment

(Mile or km per half-inch appears only when you zoom in or out by rotating the **Interface Dial knob**.)

### Map Orientation

(see page 63)


 North-up  Heading-up

### Breadcrumbs

(see *Off-road Tracking* on page 71)



No Entry Icon

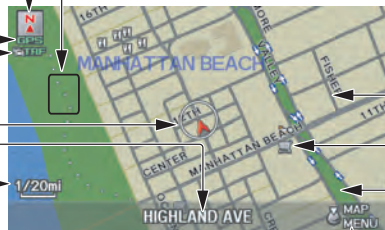






### Map Menu














(see page 58)

(Push in on the **Interface Dial** to view.)

### Streets (see *Map Overview* on page 6)

 : Freeways  
 : State Routes  
 : Verified Streets  
 : Unverified Streets  
 : One-way Streets (see page 67)  
 (1/20 mile scale only)

### Landmark Icon - Generic (see page 67)

 Acura Dealer	 Grocery Store
 Honda Dealer	 Hotel/Lodging
 ATM	 Gas Station
 School	 Hospital
 Parking Lot	 Post Office
 Parking Garage	 Restaurant
 Freeway Exit Information	

### Map Features

 : Park	 : Airport/Business
 : Hospital	 : Water Area
 : Shopping Mall	 : Cemetery
 : Golf Course	 : University

### NOTE:

See *Map Legend* in the **Map Information** on the **Map menu** for further explanation.

### NOTE:

If you move the **Interface Dial** over an area (map features shown above), the name is displayed at the top of the screen.

## Map Screen Description

### Zoom In/Out

Rotate the **Interface Dial knob** to change the map scale. Zooming in increases the detail, while zooming out gives you a wide area view. After changing the scale, give the system a few moments to update the display.


### Map Scrolling

To view other map areas, move the **Interface Dial** left, right, up, or down. The map will shift in that direction. To return the map to your current location, press either the **MAP/GUIDE**, **CANCEL**, or **BACK** button on the steering wheel.

## Displaying Current Location

You can see the current address, latitude, longitude, and elevation at any time by doing one of the following:

- Use the voice control system and say “Display the current location.”
- Push in on the **Interface Dial** while displaying the map of the current location, and select **Map Information**. Rotate the **Interface Dial knob** to select **Current Location**. The Current location screen will appear on the display.

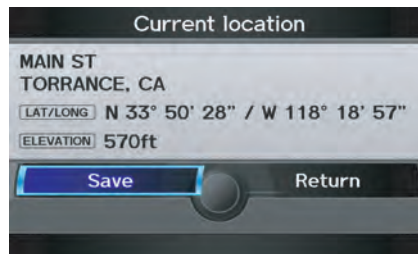

### NOTE:

*The elevation will not appear when the system is temporarily lacking proper GPS information. The system elevation may not agree with elevations shown on roadside elevation signs, and may fluctuate plus or minus 100 feet or more.*

You can save the current location in your Address Book by doing one of the following (if an Address Book PIN has been set, you need to enter your PIN.):

- Use the voice control system and say “Save.”
- Select **Save** by rotating the **Interface Dial knob** and push in on the **Interface Dial**.

Say “Register the current location” on the map screen, and you can register the current location without displaying the Current location screen.

Select **Return** to return to the previous screen.


# Getting Started

## Traffic Display Legend

### Viewing Incident Details:

To view incident details, use the **Interface Dial** to position the cursor (round red circle) over an incident icon and push in.

### Incident Icons



### Incident Icon Update Details:

- Typically M–F, 5:00 AM – 7:00 PM (varies by metropolitan area)
- Continuously updated


### Map Scale

Traffic flow and incident icons are displayed on the 5 mile (8 km) or less map scale

### NOTE:


When driving to a destination on freeways that have traffic flow data, the route line is used to display moderate and heavy traffic flow status instead of the colored bands on the side of the road. The route line color indicates the following conditions:

- Moderate Traffic Flow** - A section of the route line will change to orange.
- Heavy Traffic Flow** - A section of the route line will change to red.
- Unknown Traffic Flow** - A section of the route will not be bordered with traffic flow.

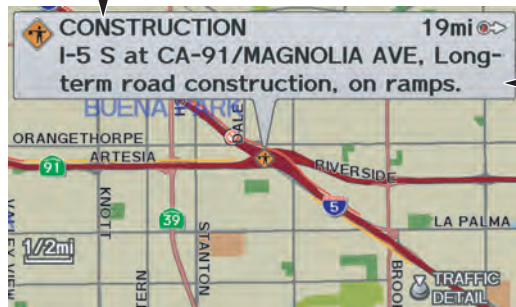

### Hearing Incident Details:

If this screen is displayed, the system will start reading incident details. To view the message on the screen, push in on the **Interface Dial**.

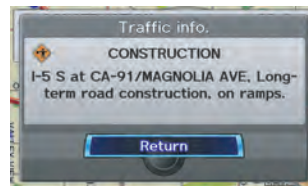

To return to current position, say or select **Return**.

### Traffic Flow Data

(colored lines parallel to road)

- Heavy traffic (approx.)**  
surface: 0 - 20 mph  
freeway: 0 - 20 mph
- Moderate traffic (approx.)**  
surface: 20 - 30 mph  
freeway: 20 - 45 mph

(shown for both sides of the freeway where available)

### Traffic Flow Data Update Details:

- Available 24 hours a day, 7 days a week
- Continuously updated

## FM Traffic™

The navigation screen can display continuously updated traffic information when available, including flow (traffic speed), accidents, and construction on freeways in major metro areas.

The display of traffic flow and incidents on the map screen is optional and can be turned On/Off by selecting the “Traffic” icon on the Icon bar (see *Showing Icons on the Map* on page 61).

The current metropolitan areas that have traffic coverage can be seen on page 143. For more current metro coverage information, go to <http://automobiles.honda.com/traffic>. This link offers the following:

- The latest list of metro areas that have FM Traffic coverage
- Detailed coverage information for each metro area showing what roads have traffic speed, traffic icons, or both
- An FM Traffic demonstration
- Frequently asked questions (FAQs)





### NOTE:

*FM Traffic relies on a clear FM signal and available traffic-broadcasting station.*

*You must be in or near a traffic-enabled city to receive coverage for that area. FM Traffic is available in the lower 48 states and Hawaii.*

## Traffic Status Indicator

You can confirm the reception status of traffic information (traffic flow and incidents). The “TRF” icon indicates the following status:

Icon	Status
	Traffic information is available.
	Flow or Incident data is not available.
	Traffic information is not available.
	<ul style="list-style-type: none"> <li>• Traffic display is turned off.</li> <li>• Traffic information cannot be displayed on the current map scale.</li> </ul>
Missing	No traffic information available (Out of coverage area).

### NOTE:

- Traffic information can be turned on or off. See *Showing Icons on the Map* on page 61.
- Traffic information can be displayed on the 5 miles (8 km) or less map scale.

## Getting Started

### Viewing Flow Data

Traffic flow data is displayed as colored bands on either side of the freeway (see *Traffic Display Legend* on page 22). The different colored bands represent the average road speeds as determined by under-road sensors and other probes.

While driving to your destination on a road that has traffic flow data, your route line color is used to display the traffic flow data. This means that when the map scale is set to one of the traffic scales (1/20 through 5 mile scale), your blue route line may appear as alternating orange or red segments (see *Traffic Display Legend* on page 22).

#### NOTE:

*A blue route line segment on a freeway can mean one of two things:*

- Under-road sensors, GPS probes, cell phone probes, and other methods used to collect traffic speed information.
- The road has no sensors, and traffic conditions are unknown (they could be congested).

Naturally, only roads with these sensors will show traffic information. The amount of flow data varies considerably from one city to another. This map display is refreshed continuously. You can only view traffic information in the city where you are located.

#### NOTE:

- *Traffic flow and incident icons are displayed on the 5 miles (8 km) or less map scale.*
- *Not all freeways within a metropolitan area have traffic flow data (colored bands on the side of the freeways) - this is normal, and you cannot assume that a lack of data implies no traffic.*
- *Not all cities have traffic flow information. See cities listed on page 143.*
- *Due to freeway maintenance and construction, traffic flow may be available only for one side of a road, or be missing entirely for some portion of the freeway.*

- *The displayed traffic flow may conflict with other audio- or Internet-based traffic information.*
- *If traffic flow is not showing, verify that the “TRAFFIC” selection for the Icon Bar is ON, and that the icon options for traffic are both ON (see page 61).*

### Viewing Incident Reports

Incident reports appear as small diamond- or circle-shaped icons (see *Traffic Display Legend* on page 22 for examples). There are four ways to view traffic incidents:


- By voice control, say “Display traffic incidents.”
- Select **Traffic Incidents** from the Map menu.
- Select **Traffic Incidents** on the INFO screen (Main Info.).
- Select an incident icon from the map screen.

#### NOTE:

*The first method is recommended because it works on any scale and requires the minimum input.*

### Listing Traffic Incidents by Voice Control

From the map screen (any scale), say “Display traffic incidents” or “Display traffic list.” The Traffic list screen will be displayed, which includes the “All” and “On Route” tabs.

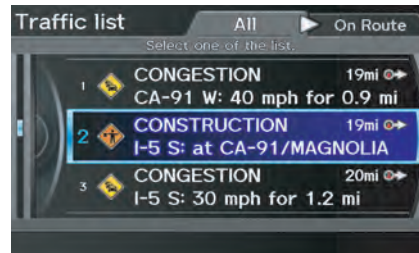

When you select the “All” tab, a list of all incidents within the metro traffic area will be displayed. When you select the “On Route” tab, a list of all incidents on the current route will be displayed.

Incidents are listed by distance from your current position outward in all directions.

To view incident details, say the number of the incident you want to select. A map showing the location of the incident will be displayed, and the message will be read to you.

#### NOTE:

*The “On Route” tab can be selected only when you are en route.*


### Listing Traffic Incidents from the INFO Screen or Map Menu

Select **Traffic Incidents** from the INFO screen (Main Info.) or Map menu. The Traffic list screen will be displayed.

## Getting Started

### No Traffic Incidents

If you say “Display traffic incidents” or select **Traffic Incidents**, but there are no incidents, the following screen will be displayed.

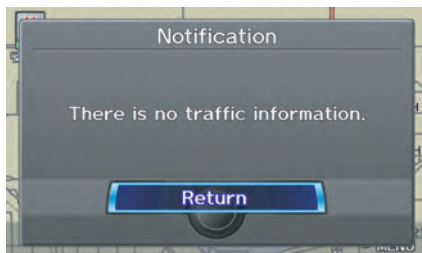

### Selecting an Incident Icon from the Map Screen

Zoom in or out so that you are between the 1/20 and 5 mile scales. (The map must be on the 1/20 to 5 mile scales to view the incident icons). To view the details of a specific incident, use the **Interface Dial** to position the cursor (round red circle) over the incident icon you are interested in. Push in on the **Interface Dial** and select **Traffic** to view a pop-up box summary describing the incident.

To see the incident details, push in on the **Interface Dial**. To return to your current position map screen, say or select **Return**. To continue viewing incidents in your “scrolled to” location, press the **CANCEL** button.


### NOTE:

- *Incident reports may be displayed on roads that have no traffic flow data available.*
- *Freeway incident reports can lag behind the actual incident, or remain displayed after an incident has cleared. This is normal, and is dependent on the reporting agency and the speed at which the data is updated.*
- *The displayed incidents may conflict with other audio- or Internet-based traffic information.*

## System Function Diagram


This diagram shows the navigation system features, starting at the center and working outward in layers. The navigation program starts at “Key ON,” and then displays the navigation system globe screen (blue). If **OK** is selected on the Disclaimer screen, the functions in the yellow segments of the diagram become available in the **SETUP** and **INFO** screens.

The items above the map screen show various methods to begin driving to your destination (orange). You are provided with map/voice guidance, routing cautions, and a direction list. While driving to your destination, use the voice control system as much as possible to interact with the navigation, audio, and climate control systems (green).

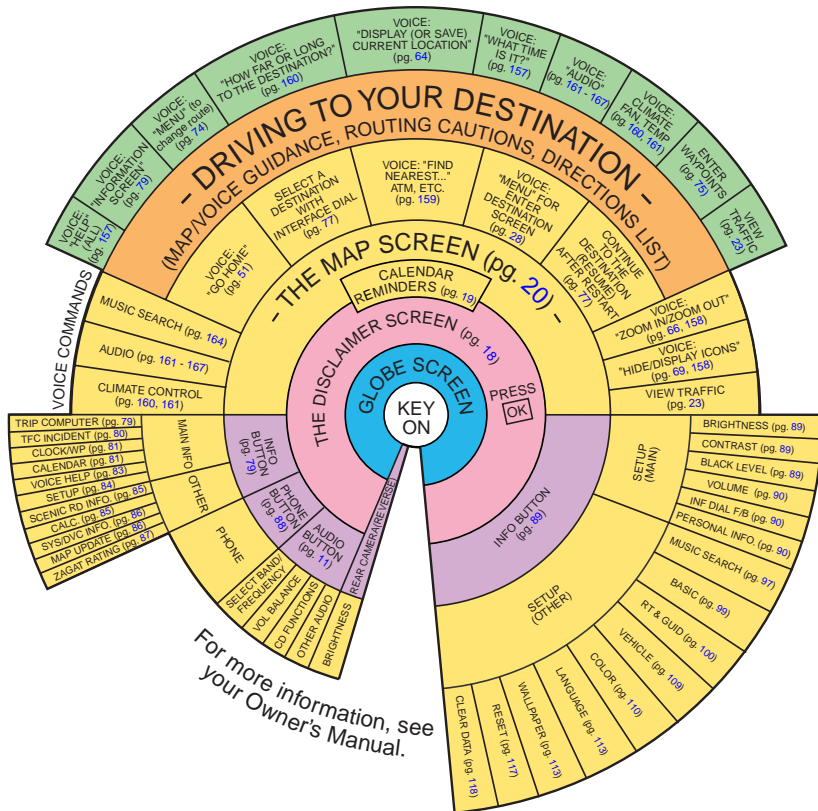

## Entering a Destination

When you press the **DEST/ROUTE** button, the display changes to:

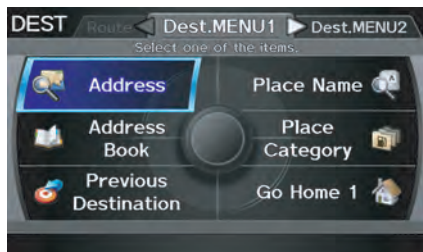

To display the “Dest. MENU 1” tab or the “Dest. MENU 2” tab, move the **Interface Dial** to the left or right.

### NOTE:

*If you press the **DEST/ROUTE** button while en route, the DEST screen (Route) will be displayed. To enter destinations, select the “Dest. MENU 1” tab by moving the **Interface Dial** to the right.*

### Address (see page 29)

You can enter the street, city, state, or ZIP code to search for your destination.

### Address Book (see page 34)

You can select locations stored in the **Address Book** as destinations. The addresses of these locations can also be saved. The system can store up to a combined total of 200 addresses.

### Previous Destination (see page 35)

When you enter a destination with any of the available selections (except **Address Book**, **Go Home 1** and **Go Home 2**), the last 50 destinations are saved by the system. Use this selection to choose a destination again.

### NOTE:

*If **Previous Destination** is grayed out, there are no Previous Destinations entered.*

### Place Name (see page 36)

You can input the names of places to search for your destination.

### Place Category (see page 37)

The system has been programmed with the locations of many businesses, parks, hospitals, etc. This selection lets you search these by category, name, or Zagat 2010 (for restaurant information).

### Go Home 1 (see page 51)

This selection allows you to select Home Address 1 as a destination.

### NOTE:

*If you have no home address entered, the system prompts you for one.*

### Place Phone No. (see page 43)

You can search for the destination by inputting a place's phone number.

### ZAGAT 2010 (see page 43)

This selection allows you to find a restaurant by the ZAGAT Rating information.

**Coordinate** (see page 44)

You can search for the destination by inputting the latitude and longitude for the destination.

**Intersection** (see page 46)

This selection allows you to enter the names of two intersecting streets in a city. This is useful if you know the general location of your destination, but not the exact address.

**Map Input** (see page 46)

You can select a destination from the map screen.

**Go Home 2** (see page 51)

If you select this feature, you can select Home Address 2 as a destination.

**NOTE:**

*If you have no home address entered, the system prompts you for one.*

**By Address**

After you select **Address** from the DEST screen (Dest. MENU 1), the display changes to:

**Tip:**

- *When entering an address by voice, it is more efficient to say the city name first, then the street name.*
- *When entering an address by the Interface Dial, it is usually easier to enter the street first. A city or cities that the street appears in will be displayed. For your convenience, you do not have to enter both city and street.*

**NOTE:**

- *If you find that your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.*
- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.*

**Selecting the State or Province**

The state you are in is displayed at the top of the screen. If your desired destination is in another state, select **Change State** by rotating the **Interface Dial**.


The display then changes to the **Select a state** screen. Use the voice control system and say the name or corresponding number of the state, or rotate the **Interface Dial knob** to select the state.

You can select the “USA” or “Canada/AK.” If you select **Canada/AK**, Canada and Alaska will be displayed. If you choose **USA**, the American mainland, Hawaii, and Puerto Rico will be displayed.

## Entering a Destination

### Selecting the ZIP Code

If you rotate the **Interface Dial** to select **ZIP code** while on the Find address by screen, the Enter ZIP code screen will display.

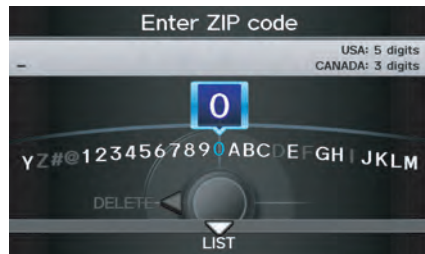

When you input the ZIP code and select **LIST** by moving the **Interface Dial** down, the Select a city screen will appear, listing all cities with that ZIP code.

#### Tip:

*This system is enabled for both American and Canadian ZIP codes.*

### Selecting the City

This is helpful if the street runs through several cities, and you know what city includes the street. The city you are in is displayed on the screen.

#### By Voice Control:

Say “City” on the Find address by screen, and the display changes to the Say city name screen. Say the city name and the searching will begin.

If the city you want is displayed on the screen, say “Select current city.” If your desired destination is in another city, say or enter that city.



#### NOTE:

*To improve voice recognition when saying the city name, pronounce the syllables as clearly as possible.*

The Say city name screen will not display when a language other than English has been selected. You will have to enter the city name using the **Interface Dial**.


To enter the city name by voice spelling, say **CHANGE TO SPELL MODE** on the Say city name screen, and the display will change to the Enter city name screen.

Say the city name by saying individual letters, or words that represent the letters, one at a time.



## Entering a Destination

The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you, “Please select the number of the input letter from the list,” and the following pop-up box will appear:

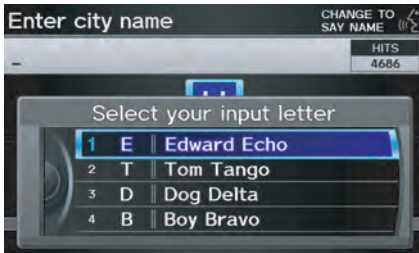

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.” See page 17 for a list of available words for each letter.

### By Interface Dial:

Select **City**, and the display then changes to the Enter city name screen.

#### Tip:

*After the display has been changed to the Enter city name screen, the name of the city where your vehicle is currently located will be displayed. Vehicle position may not be displayed when the automobile is traveling off road or when vehicle position data cannot be updated. In these situations, you can select the **City** that is currently displayed and conduct a Street search by moving the **Interface Dial** down.*

Use the **Interface Dial** to enter the name of the city.

The system will display a list of city names, with the closest match to the name you entered at the top of the list. Select the number (1-6) of the desired city from the list.



You can also enter part of the name and look for the name you want from the list that appears.

#### Tip:

*For name input, you don't need to enter spaces and symbols (&, -, %, etc.). The system is also enabled for partial match searches. For example, when you search “LOS ANGELES,” it is on the list of search results if you input “LOS” or “ANGELES.”*

## Entering a Destination

If the system does not find an exact match, select **LIST** when you finish entering the name of the city. Most of the cities and towns for that state are listed.


Listings of cities and towns in the non-detailed coverage area may have an asterisk “\*” next to their names. If you select one, a pop-up box is displayed saying, “No detailed street data...”, and a street address cannot be entered (See *Map Coverage* on page 128). Try entering the street first, and then select the city if available.

Select **DESTINATION MAP** and use the **Interface Dial** to select an icon, approximate area, or street you wish to choose as your destination. Otherwise, a central location of the city will be selected. If you select a point of interest (POI) or road in an unverified area, you may or may not have routing in these areas. See *Map Overview* on page 6.

### Selecting the Street

#### By Voice Control

After you have selected the city, or if you say “Street” on the Find address by screen, the display changes to the Say street name screen. Say the street name and the searching will begin.

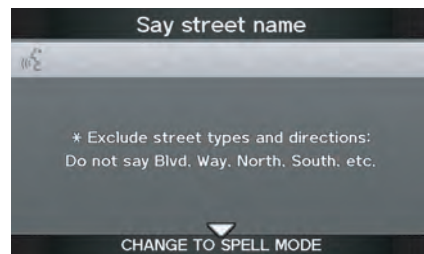


To enter the street name by voice spelling, say or select **CHANGE TO SPELL MODE** on the Say street name screen, and the display will change to the Enter street name screen.

Say the street name by saying individual letters or numbers, or words that represent the letters, one at a time.



The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you, “Please select the number of the input letter from the list,” and the following pop-up box will appear:

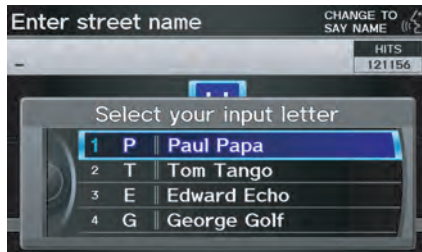

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.” See page 17 for a list of available words for each letter.

### By Interface Dial:

After you have selected the city, or if you selected **Street** in the beginning, the display changes to the **Enter street name** screen. Use the **Interface Dial** to enter the name of the street (e.g., ELM or 42ND) that is your destination.

When entering the names of major freeways, it is possible to use the following abbreviations. For interstates, use an “I” (I-10). For U.S. freeways, use “US” (US-18). For state freeways, use the two character state designation (CA-101). For county roads, use the appropriate designation (G-2, for example).

### Tip:

*When entering a street, you do not need to enter the direction (N, S, E, W) or the type (St, Ave, etc.). The system will automatically determine that for you, based on your entered city and street number.*

The system will display a list of street names, with the closest match to the name you entered at the top of the list. Select the number (1-6) of the desired street from the list.



## Entering a Destination

### Entering the Street Number

After you have completed the street name, the display changes to the **Enter street number** screen. Use the voice control system and say the address number as a continuous string of numbers. For example, the address 1527 should be spoken as “One, five, two, seven.” You can also use the **Interface Dial** to enter the street number.

Some address numbers may not be available on the selected street. For example, let’s say the individual address ranges for a selected street name are 1 - 20 and 9,000 - 10,000, with an overall range shown on the display of 1 to 10,000. If you try to enter a number outside the individual address ranges such as 500, the system will show this number as unavailable (grayed out).

- When using the **Interface Dial**, the system only allows you to choose available address numbers.
- When using voice control, the system beeps if you try to select an unavailable (grayed out) address number.

If you did not select a city in the beginning, the street name you selected might appear in more than one city. The system will give you a list of cities that the street appears in. Select the desired city from the list. The system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 52).


#### Tip:

*If the particular address you want cannot be found, select **Map Input** on the **DEST** screen (Dest. MENU 2) and use the **Interface Dial** to select the appropriate location on the map (see *By Map Input* on page 46).*

Select **DESTINATION MAP** and use the **Interface Dial** to select an icon, approximate area, or street you wish to choose as your destination. Otherwise, a central location of the street will be selected. If you select a point of interest (POI) or road in an unverified area, you may or may not have routing in these areas. See *Map Overview* on page 6.

### By Address Book

This selection allows you to choose a personal address entry for a destination. After you select **Address Book** from the **DEST** screen (Dest. MENU 1), the display changes to:

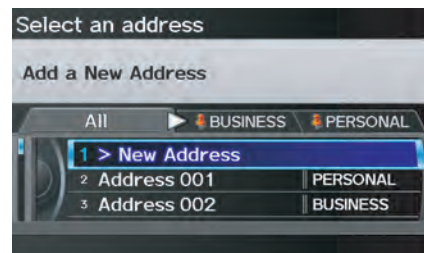


If an **Address Book PIN** has been set in **SETUP**, the system prompts you to enter your PIN. Say or enter your PIN.

If the PIN has not been entered, the system displays the list.

#### NOTE:

*For information on the PIN setting, see page 95.*

The system then displays a list of the places entered in your personal Address Book. By using the **Interface Dial**, you can sort the displayed addresses by **All**, **BUSINESS**, **PERSONAL**, or by other categories you may create.

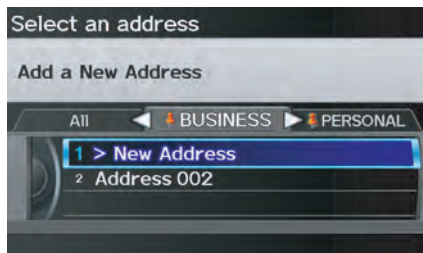

Scroll through the list to find your desired destination. After you select it, the system then displays the Calculate route to screen (see *Driving to Your Destination* on page 52).

#### Tip:

If you select **New Address** in the list, you can store a new address in the personal Address Book. For information on storing New Address, see Address Book on page 90.

### Adding Addresses to the Personal Address Book

There are three ways to enter addresses to the personal Address Book:

- Selecting **New Address** on the Select an address screen (see page 91).
- Entering them to the personal Address Book feature in SETUP (see page 91).
- Adding them to the Address Book directly from the Calculate route to screen (see page 52).

#### NOTE:

- *Destinations chosen from the Address Book do not show up in Previous Destinations.*
- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.*
- *For information on the available Voice Command Index, see on page 157.*

## Entering a Destination

### By Previous Destination

Every time you route to a destination, that destination is saved by the system. Up to 50 destinations can be stored. Select **Previous Destination** from the DEST screen (Dest. MENU 1) to choose one of those destinations.

After you select **Previous Destination**, the display lists the last 50 destinations entered, with the most recent appearing first.



#### NOTE:

- *If **Previous Destination** is grayed out, there are no Previous Destinations entered.*
- *Neither your home address nor the personal Address Book is displayed on the Previous Destinations list.*

## Entering a Destination

Scroll through the list and say the line number (1-6) of the destination, or select the desired destination you want.


Once you select the desired destination, the system then displays the **Calculate route to screen** (see *Driving to Your Destination* on page 52).

### NOTE:

- *Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.*
- *For information on the available voice commands, see Voice Command Index on page 157.*

### By Place Name

If you select **Place Name** from the DEST screen (Dest. MENU 1), the display will switch to the **Enter a place name** screen. Use the **Interface Dial** to input the location name. You can input this place name by spelling out the word one letter at a time.

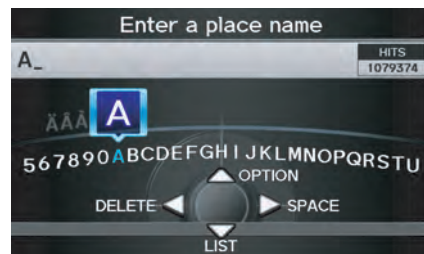

Well-known facilities and other businesses known by more than one name can be searched for by multiple name queries.

If you select a restaurant name with the **Z** icon next to it, move the **Interface Dial** to the right to view the Zagat information.

### NOTE:

*Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.*

The place name closest to what you input will be displayed at the top of the list. If the place falls into multiple categories, the categories are listed after making a selection. If you move the **Interface Dial** down while the list is displayed, the display will switch to **SORT BY DISTANCE** or **SORT BY NAME**.

**NOTE:**

When there are more than 2,000 destinations, the ordering of the items in the list cannot be sorted by distance or name.

When you select a location, the system displays the **Calculate route to screen**. (See *Driving to Your Destination* on page 52.)

**By Place Category**

After you select **Place Category** from the DEST screen (Dest. MENU 1), the display changes to:



If you select a category from the list, you can select even more detailed subcategories.

Let's assume you want to find a coffee shop (restaurant) called "Joe's."

- If you know the phone number of the coffee shop, select **Place Phone No.**, then enter the 10-digit number with area code. This is the quickest way to find it. See *By Place Phone Number* on page 43.

- The second best method is to select **Place Category**, then **Restaurant**, then **CAFÉ/COFFEE SHOP**, and then enter the keyword "Joe's." The list will include all restaurants that have "Joe's" anywhere in the name.
- You can try to enter "Joe's" using **Place Name**, but you may have to search through a list that might include Joe's Welding, Joe's Surplus, etc.


**NOTE:**

- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See *Edit Avoid Area* on page 105.
- You can enter the desired destination using the voice control system. For information on the available voice commands, see *Voice Command Index* on page 157.

## Entering a Destination

### Subcategories

If you select a category, the Subcategory screen will appear.

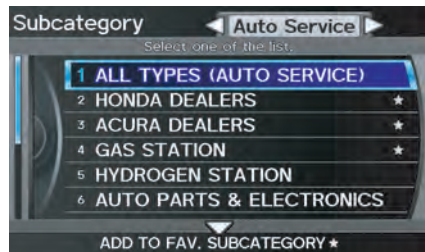


When you move the **Interface Dial** to the left or right, other subcategories can be displayed. Select your desired subcategory.

A subcategory stored in **Fav. Subcategory** has a star at the end of the line. When you move the **Interface Dial** down, you can add your desired subcategory as your favorite or delete it.

### Tip:

*If you are not sure of the spelling of a place, the best way to find it is to use the keyword search. Select **Place Category**, choose a category and subcategory from the menus, then select **Search by Keyword**, and enter the partial name.*

### Favorite Subcategory

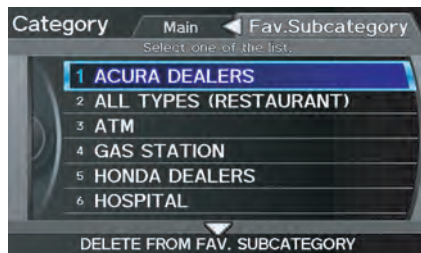

When you select the “Fav. Subcategory” tab on the **Category** screen, you can choose directly from previously stored subcategories. A maximum of 30 favorite subcategories can be stored.

To delete a category from the favorites, move the **Interface Dial** down. Select categories you want to delete and select **OK** by moving the **Interface Dial** down.

## Entering a Destination

Auto Service		Lodging		Shopping	
All Types (Auto Service)*2	Auto Repair & Maintenance	All Types (Lodging)*2	Hotel/Motel	All Types (Shopping)*2	Office Supplies/Electronics
Honda Dealers*1	Car Wash & Detailing	Bed & Breakfast	Resort	Accessories/Jewelry	Pharmacy/Drug Store
Acura Dealers*1	Motorcycle Dealers	Leisure		Auto Parts & Electronics	Pet Food/Supplies
Gas Station*1	Other Car Dealers	All Types (Leisure)*2	Museum	Books/Music/Video	Sewing/Linen
Hydrogen Station	Roadside Assistance	Amusement Park	Park/Recreation Area	Clothing	Shoes/Bags
Auto Parts & Electronics		Golf Course	Performing Arts	Groceries	Sporting Goods
		Historical Monument	Sports Complex	Home Improvement	Toys/Arts/Crafts
		Marina	Tourist Attraction	Mall/Department Store	
		Movie Theater			
Banking		Restaurant		Travel	
All Types (Banking)*2	Check Cashing/Money Transfer	All Types (Restaurant)*1*2	Indian	All Types (Travel)*2	Parking Garage/House
ATM*1	Currency Exchange	All Types (Zagat Only)	Italian	Airport	Parking Lot
Bank		American	Japanese	Automobile Club	Rental Car Agency
Community		Californian	Korean	Bed & Breakfast	Resort
All Types (Community)*2	Court House	Chinese	Mexican	Bus Station	Rest Area
Business	Higher Education	Café/Coffee Shop	Pizza	Camping	Ski Area
City Hall	Library	Continental	Seafood	Commuter Rail Station	Tourist Attraction
Civic/Community Center	Post Office	Fast Food	Thai	Ferry Terminal	Tourist Information
Convention/Exhibition Center	School	French	Vegetarian	Hotel/Motel	Train Station
Emergency		German	Vietnamese	Named Place	Travel Agency
All Types (Emergency)*2	Roadside Assistance	Greek	Other	Park & Ride	Truck Stop/Plaza
Hospital*1	Veterinarian				
Police Station					

\*1 Factory default subcategories stored in **Fav. Subcategory**.

\*2 When trying to find a specific place, select the category **ALL TYPES**. Some places may be miscategorized.

### Advanced

If the category you want is not listed, you can try to find it with a keyword. When you select this option, the display changes to the **Enter keyword for category** screen. If the system finds any categories with the keyword you entered, the display changes to the **Select a category** screen. Select the desired category.

## Entering a Destination


### Finding a restaurant

The ZAGAT SURVEY for some restaurants is available in the system. See the INFO screen (Other), “Key to ZAGAT Rating” for an explanation of these ratings (see page 87).



On the Select a place screen, restaurants with a Zagat Rating have a **Z** icon at the end of the line. To list only restaurants with Zagat Reviews, say “Zagat” or select **ZAGAT 2010**. You can view the complete Zagat Review for a selected restaurant by selecting the **Z** tab.

By voice, select the **Z** tab by saying “Zagat list number X” (where X is the line number 1-3). Alternatively, use the **Interface Dial** to first select the line item, and move the **Interface Dial** to the right to view the survey.

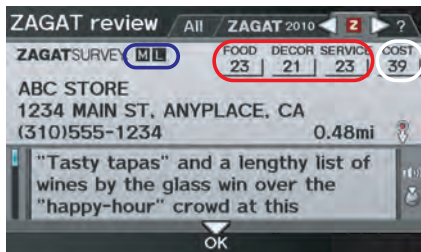

Say “Read List” or push in on the **Interface Dial**, and the review will be read to you. Move the **Interface Dial** down to display the Calculate route to screen.

#### NOTE:

*Scrolling through the Zagat Review is disabled when the vehicle is moving.*

“Food,” “Decor,” and “Service” categories (red frame) are rated using numbered values (e.g., 22, 21, 20 etc.)

“Cost” (white frame) is the average cost of a meal (including drink and tip). If unavailable then estimated cost symbols are shown:

“VE”: Very Expensive

“E”: Expensive

“M”: Moderate

“T”: Inexpensive

The symbols, if displayed (blue frame), indicate the following information:

**S** open on Sunday


**M** open on Monday

**L** open for lunch

serving after 11 PM

no credit card accepted

After selecting a subcategory and subcategory, the system will give you the options of **Place Name**, **Sort by Distance to Travel**, **City Vicinity**, or **Search by Keyword** with the following screen:

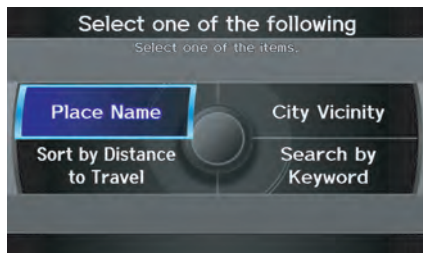

### Place Name

When you select this option, the display changes to the **Enter a place name** screen. Enter the place name, using the **Interface Dial**.

Once you select a place, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 52).

### City Vicinity

The system allows you to find points of interest in the vicinity of the city you entered. When you select this option, the display changes to the **Enter city name** screen. Enter the name of the city using the **Interface Dial**. If the system does not find an exact match, select **LIST** when you finish entering the name of the city. Select a desired city from the list.

Once you have selected the city, the display changes to the **Enter a place name** screen. Enter the name of the place using the **Interface Dial**.

The system searches within a 20-mile radius of the city center. If more than 1,000 POIs are located, only the first 1,000 are displayed.

Once you select a place, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 52).

### Sort by Distance to Travel

When you select this option, the system gives you a list of all the places in the subcategory. This list is arranged by distance from your current location, with the closest at the top of the list.




The distance and direction to the destination at the cursor position in the list are shown on the screen. The distance shown is straight line distance (as the crow flies), not driving distance. Say or select the number (1-4) of the desired destination from the list.

Once you select a place, the system then displays the **Calculate route** to screen (see *Driving to Your Destination* on page 52).

## Entering a Destination

### Search by Keyword

If you do not know the exact name of the destination, you can find the place with a keyword. When you select this option, the display changes to:

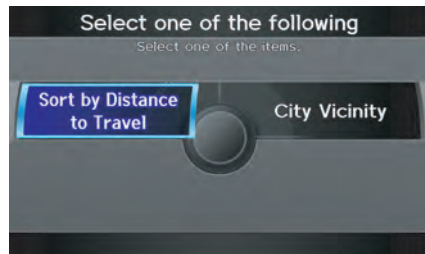

You can find your destination with a keyword using the **Sort by Distance to Travel** option or **City Vicinity** option.

If you select the **Sort by Distance to Travel** option, the Enter keyword for place screen appears. Enter the keyword using the **Interface Dial**. If the system does not find an exact match, select **LIST** when you finish entering the keyword. The system starts searching for places that match the entered keyword. If you see your desired place, select it from the list. If not, scroll through the list to find the desired place.

If you move the **Interface Dial** down to select **MORE**, the scope of the search can be increased.

When there are a large number of search results, the number of locations will increase to 100, 200, and up to 1,000 locations. When the number of locations is 100 or less, you can increase the scope to 500 miles, 1000 miles, or the entire U.S.

If you select the **City Vicinity** option, the Enter city name screen appears. Enter the name of the city using the **Interface Dial**. The system will display a list of city names, with the closest match to the name you entered at the top of the list. Select your desired city name from the list. Once you have selected your desired city name, the Enter keyword for place screen appears.

Enter the keyword using the **Interface Dial** to specify the desired place. Once you select a place, the system then displays the **Calculate route to** screen (see *Driving to Your Destination* on page 52).

## By Place Phone Number

You can select a destination by phone number. Only phone numbers saved in the system are recognized. The phone numbers of private residences and numbers entered in your private address book are not in the system. If you select **Place Phone No.** on the DEST screen (Dest. MENU 2), the display will switch to the Enter phone number screen. Use the **Interface Dial** to enter the phone number.



### NOTE:

*Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.*

After entering the number, move the **Interface Dial** down and select **OK**. Multiple listings for the same phone number may be shown.

### NOTE:


*All 10 digits must be entered.*

### Tip:

*When using the voice control system, the entry should be spoken as a continuous string of numbers. For example, the telephone number (310) 555-4000 should be spoken as "Three, one, zero, five, five, five, four, zero, zero, zero."*

## By ZAGAT® 2010

The **ZAGAT 2010** option allows you to find a restaurant by the ZAGAT Rating information. When you select **ZAGAT 2010** on the DEST screen (Dest. MENU 2), the system lets you select the metro area, neighborhood, and food type to search the restaurant you like. After you select the food type, the following display appears:

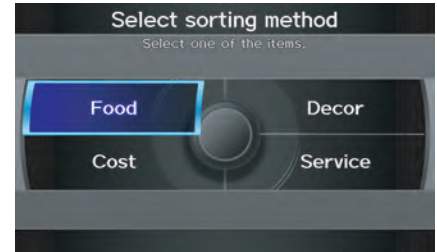

Food, Decor, Service - When you select **Food**, **Decor**, or **Service**, the restaurant will be listed by rating value.

Cost - When you select **Cost**, the restaurant will be listed by the average cost of a meal (including drink and tip).

## Entering a Destination

When you select a sorting method, the list of restaurants will appear.



You can see the survey for a listed item by selecting the **Z** tab, or by saying “Zagat list number X” (where X is the number 1-3).

Once you select a restaurant, the system then displays the Calculate route to screen (see *Driving to Your Destination* on page 52).

### NOTE:

- *Selecting this sorting method will show you Zagat’s highest-rated restaurants by the options, and not necessarily by distance from your current location.*
- *For details on the ratings and symbols, say “Key to Zagat rating” or select the “?” tab using the Interface Dial.*

## By Coordinate

If you select **Coordinate** from the DEST screen (Dest. MENU 2), the display will change to the Enter latitude screen. Use the **Interface Dial** to input the latitude.

### NOTE:

*Latitude and longitude must be entered up to the seconds’ value.*




### NOTE:

*Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.*


## Entering a Destination

After entering the latitude, move the **Interface Dial** down and select **OK**. The display will change as follows.

On the Enter longitude screen, use the **Interface Dial** to input the longitude.

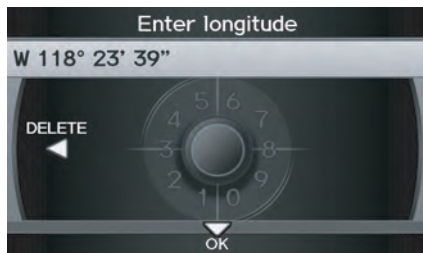

With the selection of **Coordinate**, it is assumed that you are searching for the destination within the area that is in the closest proximity. The display will change as follows.

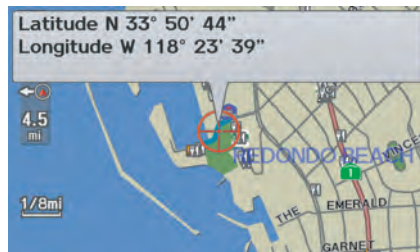

Move the **Interface Dial** to find the desired destination. The map and crosshairs move in the same direction.

If so desired, you can also rotate the **Interface Dial knob** and change the scale of the map. When the crosshairs are on the desired icon, map location, or road, push in on the **Interface Dial**. The address for this location will be displayed at the very top of the screen.


The yellow box (shown in scales above 1/4 mile) denotes the area that can be viewed with the **Interface Dial** when the current map is clicked.

### NOTE:

*Information icons are displayed at scales from 1 mile to 1/4 mile, POI icons are displayed at 1/8 mile or less, and roads are displayed at 1/4 mile or less.*

When you find the desired address, press on the **Interface Dial** again. If it is not the desired address, change the location of the crosshairs with the **Interface Dial**. Push in on the **Interface Dial** again to display a new address.

If you select a section of road within the crosshairs, the following screen appears. Select **Set as Dest.** and calculate the route for the destination that you selected.

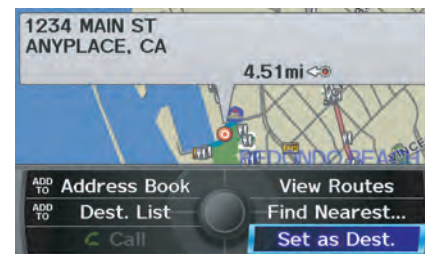

## Entering a Destination

### By Intersection

After you select **Intersection** from the DEST screen (Dest. MENU 2), the display changes to:



To select an intersection outside the state you are currently in, select the state. For details of how to select a state, See *Selecting the State or Province* on page [29](#).

Next, select the city where the intersection is located. For details of how to select a city, see *Selecting the City* on page [30](#).

Last, select the two streets which intersect. For details of how to select a street, see *Selecting the Street* on page [32](#).

If the two streets that you have selected do not intersect, no intersection will appear.

#### Tip:

*When entering an address, it is usually easier to enter the street first. A city or cities that the street appears in will be displayed. For your convenience, you do not have to enter both city and street.*

#### NOTE:

- If you find that your city is not listed, it may be part of a larger metropolitan area. Try entering the street first.
- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See *Edit Avoid Area* on page [105](#).

### By Map Input

After you select **Map Input** from the DEST screen (Dest. MENU 2), the display changes to:




Select **Current Position, City, State,** or **USA and Canada** to display the map.

#### NOTE:

- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See *Edit Avoid Area* on page [105](#).
- For information on the available voice commands, see *Voice Command Index* on page [157](#).

### Showing the Map of Current Position

The **Current Position** selection assumes that you are looking for a destination in the immediate area. The display changes to:

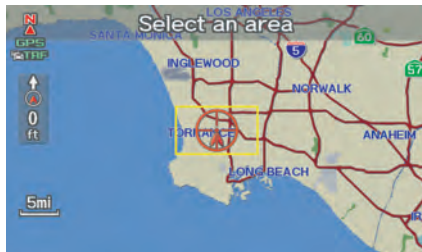

The red arrow indicates your vehicle position. Find your desired destination by moving the **Interface Dial** up and down and to the left and right. The map and crosshairs will move in the same direction.

The yellow box indicates the area you will see when you click on the current map with the **Interface Dial**. The scale will decrease each time you push in the **Interface Dial**.

If desired, rotate the **Interface Dial knob** to change the map scale. When you have the crosshairs on the desired icon, polygon, or road, push in on the **Interface Dial**. The address of the location will appear at the top of the screen (at scales less than 1 mile).

#### NOTE:


*Information icons are displayed at scales from 1 mile to 1/4 mile, POI icons are displayed at 1/8 mile or less, and roads are displayed at 1/4 mile or less.*

If this is the desired address, push in on the **Interface Dial** again. If not, use the **Interface Dial** to reposition the crosshairs, then push in on the **Interface Dial** again to display the new address.

If you select a single icon or road segment within the target mark, the following screen appears. Select **Set as Dest.** to calculate a route to the selected destination.



If you select multiple icons within the cursor radius, the following screen appears.

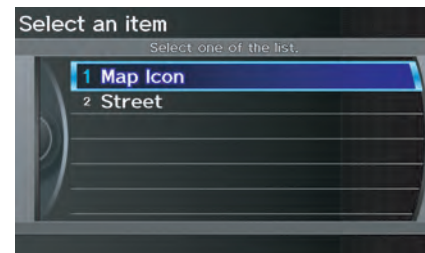

Select **Map Icon** or **Street** to find the desired destination.

## Entering a Destination




Select an item from the list. Then select **Set as Dest.** to calculate a route to the selected destination.

### Showing the Map of City

You can search for a city name in all coverage areas.

### By Voice Control:

Say “City” on the Show map of screen, and the display changes to the Say city name screen. Say the city name and the searching will begin.

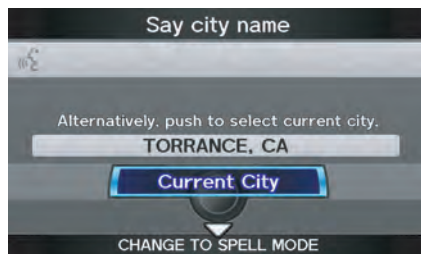

### NOTE:

*To improve voice recognition when saying the city name, pronounce the syllables as clearly as possible.*


The Say city name screen will not display when a language other than English has been selected.

To enter the city name by voice spelling, say **CHANGE TO SPELL MODE** on the Say city name screen, and the display will change to the Enter city name screen.



Say the city name by saying individual letters, or words that represent the letters, one at a time.

The system has a talk back function. If your spoken letter is not recognized, the system will talk back to you. For example, if you say “E” but the system does not recognize the command, it will ask you “Please select the number of the input letter from the list” and the following pop-up box will appear:

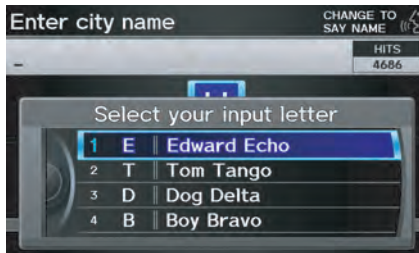

You should select a letter by saying the number.

Alternatively, to improve voice recognition, you can say “Echo” or “Edward” instead of “E.” See page 17 for a list of available words for each letter.

### By Interface Dial:

With the **City** selection, the display changes to the **Enter city name** screen. For instructions on entering the city name, see *Selecting the City* on page 30.

When you have entered the desired city, the display changes to a map. The starting location will be the central position in the selected city.

See *Showing the Map of Current Position* on page 47 for instructions on finding and entering your desired destination.

### Showing the Map of State

#### By Voice Control:

Say “State” on the **Show map** of screen, and the display changes to the **Select a state** screen. Say the state name (e.g., California or CA) or the state number (1-7).



You can select the “USA” or “Canada/AK” tab by moving the **Interface Dial** to the left and right.

If you select **Canada/AK**, Canada and Alaska will be displayed. If you choose **USA**, the American mainland, Hawaii, and Puerto Rico will be displayed.


Say the state name by saying individual letters, or words that represent the letters, one at a time.

## Entering a Destination

### By Interface Dial:

With the **State** selection, the display changes to the **Select a state** screen.

After you select the desired state, the display changes to a map of the state, with the crosshairs located near the middle.

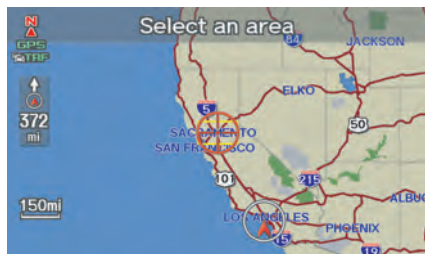

The yellow box indicates the area you will see when you click on the current map with the **Interface Dial**. The scale will decrease each time you push in on the **Interface Dial**.

Use the **Interface Dial** to move the crosshairs to the area of the state close to your intended destination. If desired, rotate the **Interface Dial knob** to change the map scale. When you have the crosshairs in the desired area, push

in on the **Interface Dial**. The address of the location you have selected will appear at the top of the screen.

### NOTE:


*Information icons are displayed at scales from 1 mile to 1/4 mile, POI icons are displayed at 1/8 mile or less, and roads are displayed at 1/4 mile or less.*

If this is the desired address, push in on the **Interface Dial** again. If not, use the **Interface Dial** to reposition the crosshairs, then push in on the **Interface Dial** again to display the new address.

If you selected a single icon or road segment, select **Set as Dest.** to calculate a route to the selected destination. If you selected multiple icons within the cursor radius, select an item from the list. Then select **OK** to calculate a route to the selected destination.

### Showing the Map of Continental USA and Canada

With the **USA and Canada** selection, the display changes to:

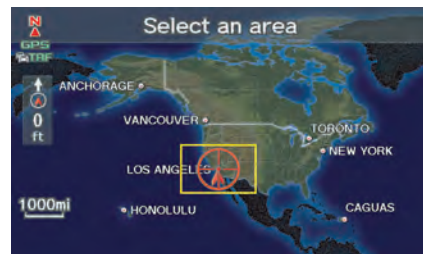

The yellow box indicates the area you will see when you click on the current map with the **Interface Dial**. The scale will decrease each time you push in on the **Interface Dial**.

Use the **Interface Dial** to move the crosshairs to the area of the country close to your intended destination. Then push in on the **Interface Dial**.

If desired, rotate the **Interface Dial knob** to change the map scale. When you have the crosshairs on the desired icon, polygon, or road, push in on the **Interface Dial**. The address of the location you have selected will appear at the top of the screen.

**NOTE:**

*Information icons are displayed at scales from 1 mile to 1/4 mile, POI icons are displayed at 1/8 mile or less, and roads are displayed at 1/4 mile or less.*

If this is the desired address, push in on the **Interface Dial** again. If not, use the **Interface Dial** to reposition the crosshairs, then push in on the **Interface Dial** again to display the new address.

If you selected a single icon or road segment, select **Set as Dest.** to calculate a route to the selected destination. If you selected multiple icons within the cursor radius, select an item from the list. Then select **OK** to calculate a route to the selected destination.

## By Go Home 1 or 2

Selecting **Go Home 1** or **2** from the DEST screen (Dest. MENU 1 or 2) takes you to the address you have set as “home.”

If a **Go Home 1** or **2 PIN** has been set, the system prompts you to enter your PIN.

Say or enter your PIN. The system will then display the **Calculate route** to screen (see *Driving to Your Destination* on page 52).

If a **Go Home 1** or **2 PIN** has not been set, the system displays the **Calculate route** to screen after you select **Go Home 1** or **2** (see *Driving to Your Destination* on page 52).

**NOTE:**

- To edit Home Address, see Home Address on page 94.
- When no Home Address 1 or 2 has been set, the **SETUP** screen will be displayed. For details, see Home Address on page 94.
- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See Edit Avoid Area on page 105.
- PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, your dealer will have to reset it for you, and all PINs will be cleared.
- If a PIN is desired, enter it using the Personal preference PIN number feature in **SETUP**. See page 95 for information on entering your PIN number.


## Driving to Your Destination

### Driving to Your Destination

A route typically has three phases.

- Initial route calculation (the Calculate route to screen) (see page 52)
- Change the route while en route (see page 73).
- Resume the route when restarting the engine (see *Continue Trip to Screen* on page 78).

### Calculate Route to Screen

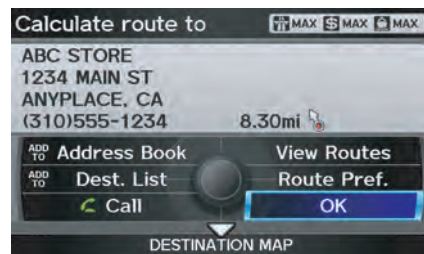

Say or select **OK**. The system calculates the route (see *Map Screen* on page 54).

#### NOTE:

- Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See *Edit Avoid Area* on page 105.
- For information on the available voice commands, see *Voice Command Index* on page 157.

Further selections from the Calculate route to screen include:

### ADD TO Address Book

Allows you to add the destination to your Address Book. See *By Address Book* on page 34.

#### NOTE:

When you select a destination from your Address Book, **EDIT Address Book** will be displayed. You can edit the address by selecting this button. For information on editing your Address Book, see *Address Book* on page 90.

### ADD TO Dest. List

Allows you to add a location to the **Destination List** as a destination or waypoint. While on the Calculate route to screen, rotate the **Interface Dial knob** and select **ADD to Dest. List**. The Add to dest. list screen appears and the destination is added. See *Destination List* on page 76.

### Call

Dials the number on the screen when available. See *Bluetooth® HandsFreeLink®* on page 19.

### Changing the Route Preference

The system lets you select the way you want to drive to your destination. Select **Route Pref.** on the Calculate route to screen by rotating the **Interface Dial knob**.




- You can choose **MAX** or **MIN** for three settings: **Freeways**, **Toll Roads**, and **Ferries**. The route calculations for the current selection will be displayed in the upper right-hand corner of the screen.

The generated route may not be the route you would choose. For safety reasons, the system generally applies the following rules to your route:

- Shortcuts through residential areas are avoided.
- Right turns are favored over left turns or U-turns.
- Restricted turns (turns that cannot be made during or at certain times of the day) are not used.

### Viewing the Routes

If you select **View Routes** on the Calculate route to screen, you can view three possible routes to your destination. You can also use the **Interface Dial** to verify the areas peripheral to the map. If you select **View Routes**, the display changes to:

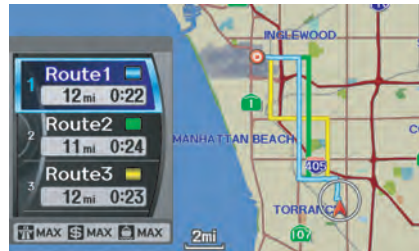

These different routes are shown and calculated based on the setup options in **Route Pref.**

You can select one of the three routes (1-3) by rotating the **Interface Dial knob**. The system will calculate the selected route and display the map screen.

### NOTE:

- The driving distance and time estimated for the various routes is displayed.*
- It is not unusual for the different methods to pick the same route. Voice commands cannot be used while the system is calculating.*
- Zoom IN/OUT to view route details or traffic conditions is not available on the View routes screen. After moving the **Interface Dial** and scrolling through the map, you can then zoom in or out on the map screen to view your route in details.*

## Driving to Your Destination

Based on the route data, you can change the routing method by rotating the **Interface Dial knob**.

Once you confirm your selection, say the number of the desired routing method or push in on the **Interface Dial**.


The calculated route will be highlighted as a blue line, and a voice prompt will tell you how to proceed along the highlighted route.

Push in on the **Interface Dial** and select **Voice** to have the guidance repeated.



### Viewing the Destination Map

If you move the **Interface Dial** down and select **DESTINATION MAP** on the Calculate route to screen, a map of the destination vicinity is displayed. Press the **CANCEL** or **BACK** button, or select **Return** to return to the previous screen. You can view the destination map anytime while en route by saying “Display destination map.”

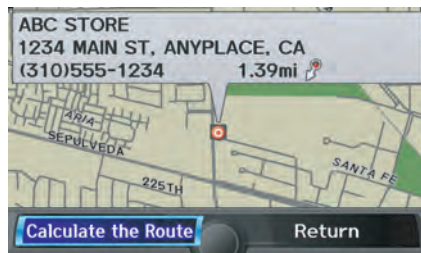

### Map Screen


When you select **OK** on the Calculate route to screen, the map screen appears, showing your highlighted route (blue line) in real time.

### Route Line

When driving on unverified streets (purple), the route line changes to either a purple dotted “vector line” pointing to your destination, or a blue-pink line. See *Unverified Area Routing* on page 101 for a detailed explanation of how to enable unverified routing, and the related cautions and disclaimers.

### NOTE:

- You can always view the entire route by simply saying, “Display entire route.”
- When your route line uses streets that display traffic information, the route line may consist of orange or red segments. This is normal. See *Traffic Display Legend* on page 22, and *Viewing Flow Data* on page 24.

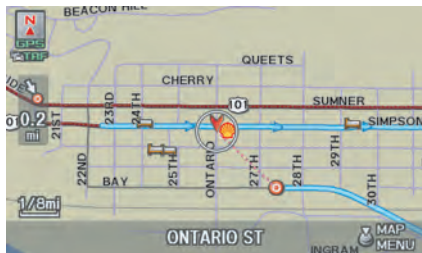

“Vector line” (unverified routing off)



Blue-pink unverified route line  
(unverified routing on)

### Voice Guidance Prompts

As you get near the guidance point, you will hear a voice reminder and see a pop-up window showing you the guidance point. You will typically hear three prompts:

- The first is about 1/2 mile from the guidance point.
- The next is about 1/4 mile from the guidance point.
- The final prompt is close to your actual turn.

If the distance between the next two guidance points is very small, both of them are displayed on the screen in a single window, and the voice will remind you of them at the same time.

### NOTE:

- You can say “Voice” at any time, or select **Voice** after pushing in on the **Interface Dial** to be reminded of the next guidance point.
- Typically, a pop-up guidance window shows your next turn, and a voice guidance is heard. The timing of guidance varies depending on the type of road you are on and the distance to the next guidance point.

When the guidance in unverified areas, the phrase “if possible” is inserted before each guidance prompts. See Unverified Area Routing on page 101 for more detailed information on the unverified routing.

# Driving to Your Destination

## Map Screen Legend

### Breadcrumbs

(see *Off-road Tracking* on page 71)

### No Entry Icon



### Direction of Destination

(when en route)

### Distance to Destination

(see page 58)

### Time to Destination

(see page 58)

### Vehicle Position

(see page 64)

### Current Map Scale

(see page 66)

### Current Street

(see page 64)

### Map Scale Adjustment

(Mile or km per half-inch appears only when you zoom in or out by rotating the **Interface Dial knob**.) (see page 66)

### Map Orientation

(see page 63)



North-up



Heading-up

### Blue Line

Calculated route

(see page 54)

### Next Guidance


(when en route)

### Waypoint

(see page 75)

### Destination Icon

(see page 67)

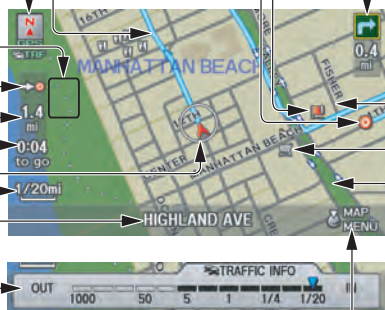

### Map Menu

(see page 58)

(Push in on the **Interface Dial** to view.)

### Streets

(see *Map Overview* on page 6)

: Freeways

: State Routes

: Verified Streets

: Unverified Streets

: One-way Streets (see page 67)  
(1/20 mile scale only)

### Landmark Icon - Generic

(see page 67)

Acra Dealer	Grocery Store
Honda Dealer	Hotel/Lodging
ATM	Gas Station
School	Hospital
Parking Lot	Post Office
Parking Garage	Restaurant
Freeway Exit Information	

### Map Features

: Park	: Airport/Business
: Hospital	: Water Area
: Shopping Mall	: Cemetery
: Golf Course	: University

### NOTE:


If you move the **Interface Dial** over an area (map features shown above), the name is displayed at the top of the screen.

### NOTE:

See *Map Legend* in the **Map Information** on the Map menu for further explanation.

## Guidance Screen


The guidance screen offers an alternative way to view your route information. Many of the icons and screen features are similar to those on the map screen. While driving to your destination, press the **MAP/GUIDE** button to switch between the map and guidance screens. The guidance screen shows you:

**Milestone to Destination** - The position of the small circular icon shows your trip progress. As you get closer to your destination, the indicator will approach .

### NOTE:

- The map and voice guidance in unverified areas differ from those in verified areas.
- Current guidance points and those within 1000 feet will show on the Countdown bar, indicating the distance until the next guidance point.

## Guidance Screen Legend

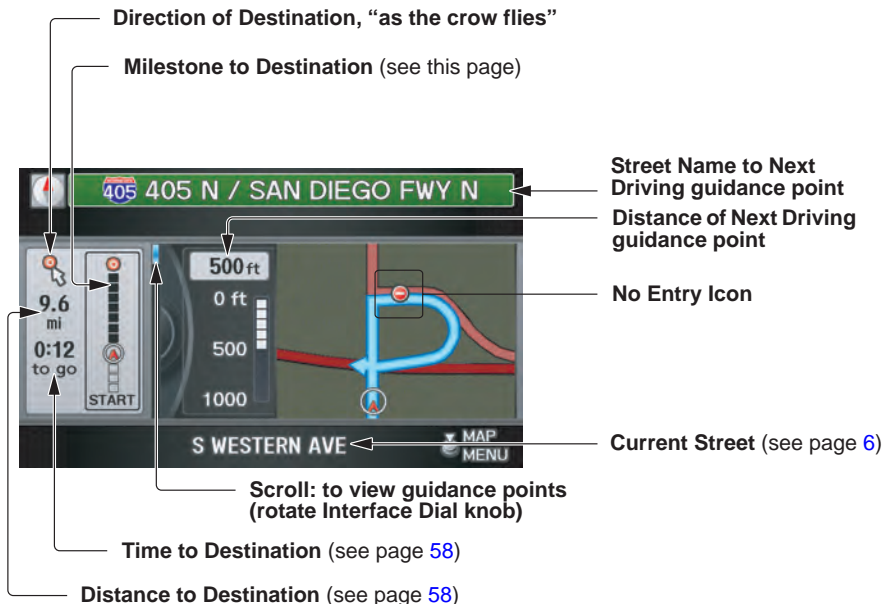

## Driving to Your Destination

### Distance and Time to Destination

When you select a destination, the distance to the destination is the actual road distance of the calculated route, and not “as the crow flies.” When viewing a list of destinations (points of interest), such as restaurants, the distance is “as the crow flies” (see *Sort by Distance to Travel* on page 41).


The displayed time to the destination may differ from the actual travel time because the time is calculated based on the posted road speed data and your current speed.

#### NOTE:

*If you are en route and the **Interface Dial** is moved, the “Time to Destination” and “Distance to Destination” indications are replaced with an indicator showing distance from the current vehicle location.*

### Map Menu

When the map screen is displayed, pressing in on the **Interface Dial** displays the Map menu. If the map is scrolled, the Map menu will not appear. Press the **MAP/GUIDE** button, the **BACK** button, or the **CANCEL** button to return to the basic map screen.

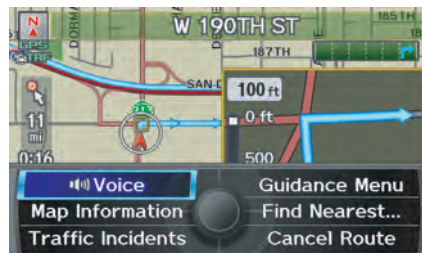

**Voice** - Button shown if currently en route. Select to hear the next voice guidance.

**Map Information** - Allows you to confirm information on the map or change the settings of displaying a map. For detailed information on this feature, see *Map Information* on page 61.

**Traffic Incidents** - Displays a list of the traffic incidents around your current position or on your current route. You can view this same list by saying “Display traffic incidents.” For detailed information on this feature, see page 25.


**Guidance Menu** - Button shown if currently en route. This button allows you to set or confirm the guidance features. For detailed information, see *Guidance Menu* on page 59.

**Find Nearest ...** - Selects a subcategory from the list to search the nearest POI from your current location. For detailed information on this feature, see *Subcategories* on page 38.

**Cancel Route** - Cancels your current route. The map screen will display your current position.

## Guidance Menu

When you select **Guidance Menu** from the Map menu, the Guidance menu screen appears.

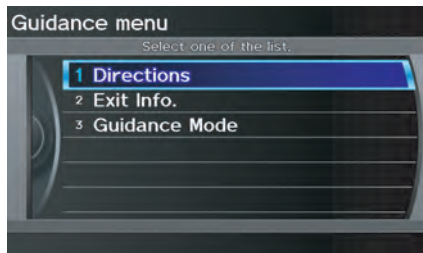

**Directions** - Select to confirm the directions (guidance points) to your destination (see this page).


**Exit Info.** - Allows you to set a new destination or waypoint located near a freeway exit when you are en route (see page 60).

**Guidance Mode** - Allows you to select the guidance mode (single screen or split screen) (see page 60).

## Directions

You can display a list of the guidance points on your route and confirm the distance between them.

Select **Directions** on the Guidance menu screen, the display changes to:

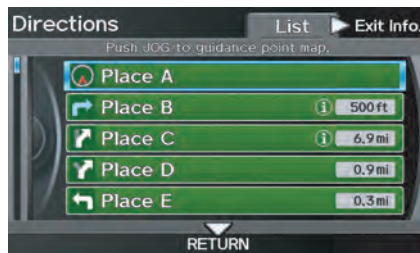

### NOTE:

- When you select a guidance point from the list, a map of the guidance point is shown.
- Guidances that occur at freeway exits or contain freeway exit information will show the exit info icon (i).

When you select **Exit Info.** by moving the **Interface Dial** to the right, you can display a list of the freeway exits en route (see page 60).

Press the **CANCEL** button or the **BACK** button, or move the **Interface Dial** down to return to the previous screen.

You can scroll one guidance point at a time by rotating the **Interface Dial** knob.

The route guidance display disappears and guidance ends when you reach your destination. Press the **DEST/ROUTE** button to return to the DEST screen (Dest. MENU 1 or 2).

## Driving to Your Destination


### **Exit Info. (Freeway Exit Information)**

You can search freeway exit information (gas stations, restaurants, ATMs, etc.) and add new destinations or waypoints to the calculated route. Select **Exit Info.** on the **Guidance** menu screen, and a list of freeway exits for the route is displayed.

If you select the freeway exit you plan on taking, a list of businesses in the area will be displayed. You can choose a listing to set as a new destination or waypoint, and say or select **OK**.

On the map screen, you can display Freeway Exit information using the **Interface Dial**. The Exit Info icon will only be displayed on the **map** screen if there is any freeway exit information available. Choose the 1/4, 1/2, or 1 mile scale, then move the crosshairs to the desired Exit Info icon and push in on the **Interface Dial**. Choose a place from the list and set it as a new destination or waypoint.

#### **NOTE:**

*To turn on “Freeway exit information” on the **map** screen, display the icon bar and select the  icon (see page 61).*

### **Guidance Mode**

When en route to a destination, you have two display options: single-screen mode (the factory default) or split-screen mode.

If you select **Guidance Mode** on the **Guidance** menu screen, the **Select a guidance mode** screen will appear.

**Single-screen mode** - While the map screen is displayed, only the map is shown with occasional guidance pop-up windows as you approach a guidance point. When you press the **MAP/GUIDE** button and switch to the guidance screen, only the guidance screen is displayed.

**Split-screen mode** - While the map screen is displayed, the map is on the left of the screen, and the next guidance point is on the right side of the screen. You will see the same screen setup when you press the **MAP/GUIDE** button.

Guidance mode can be changed in **SETUP** (see *Guidance Mode* on page 108).


When you get near the guidance point, the map screen changes to:



On the map screen, the location of the guidance point is marked with a small yellow square. The guidance window is simply an enlargement of the next guidance point. After you get through the guidance point, the display returns to a full map screen when single-screen mode is set, or to a map and direction list screen when split-screen mode is set.

## Map Information

When you select **Map Information** from the Map menu, the Map information screen appears.

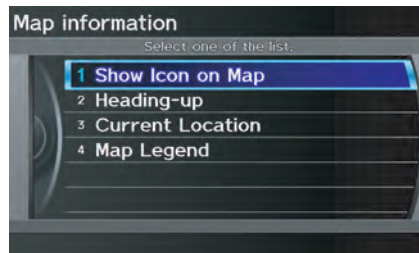

**Show Icon on Map** - Allows you to select the icons displayed on the map (see this page).

**North-up/Heading-up** - Select **North-up** or **Heading-up** to change map orientation (see page 63). On scales greater than 1 mile, this button is grayed out (North-up only mode).

**Current Location** - Allows you to display and/or save your current location (see page 64).

**Map Legend** - Allows you to learn the meaning of map features (see page 65).

## Showing Icons on the Map

Selecting **Show Icon on Map** on the Map information screen displays the following screen:



The screen consists of the following items:

### Icon Bar


The icon bar allows you to manually select the icons that are displayed on the map (see page 69 for a list of these icons).

## Driving to Your Destination

In the screen shown, traffic, gas stations, and restaurants are selected. Rotate the **Interface Dial knob** and push in to select (blue with box checked) or remove them (black with box unchecked). You can also display or hide the same icons by using the “Display” or “Hide” voice commands on the map screen (see page 158).

### ICON OPTION

This feature allows you to “fine tune” some of the icons on the Icon bar. If you move the **Interface Dial** down and select **ICON OPTION**, the following screen will be displayed:

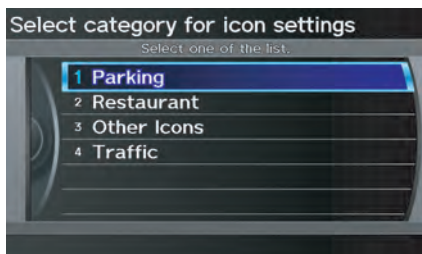


The four icon choices – **Parking**, **Restaurant**, **Other Icons**, and **Traffic** – can each be tailored to your needs.


For instance, let’s assume that hospital icons are not displayed on the map, and you want to make sure that your settings are correct. You would do the following:

- First, ensure that **OTHER ICON** on the Icon Bar is selected.
- Second, select **Other Icons** from **ICON OPTION** and verify that the hospital option is on (blue with box checked). This procedure is explained below.

If you select **Other Icons** from the **Select category for icon settings** screen, the other icon options are displayed:

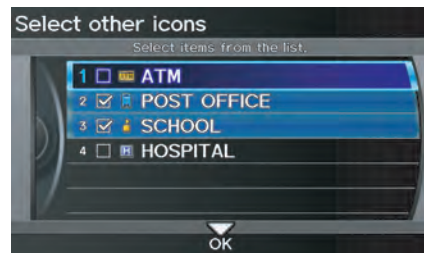

In the previous example, only **POST OFFICE** and **SCHOOL** are selected and will show up on the map. To also see **HOSPITAL** on the map, this would need to be turned on by first selecting it and then pushing in on the **Interface Dial** to select it so it appears as below.

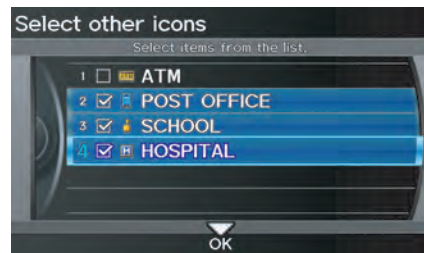

Exit, and save your settings by moving the **Interface Dial** down to select **OK**.

**NOTE:**

*When viewing the map screen, you can turn some icons on using voice control. See the Voice Command Index on page 158 for the available “Display” and “Hide” icon commands.*

### Map Orientation

The map can be orientated two ways:

- North-up: North pointing up as you would normally view a paper map.
- Heading-up: The map constantly rotates so the road you are driving on always points up (as you see the road through your front windshield).



“North Up”



“Heading Up”

**NOTE:**

*The red arrow in both heading symbols always shows the direction north.*

Select **North-up** or **Heading-up** on the Map information screen, or say “Display heading up” or “Display north up.”

In the larger map scales (above 2 mile), the map is always oriented with north facing upward. You cannot change the orientation.


**NOTE:**

*For information on the available voice commands, see Voice Command Index on page 157.*

## Driving to Your Destination

### Current Location

Whenever you are on a map screen, you can always obtain your current location either by pushing in on the **Interface Dial**, selecting **Current Location** from **Map Information**, or by using the voice control system and saying “Display current location.” A screen pops up which shows the address of your current location, as well as the latitude, longitude, and elevation.

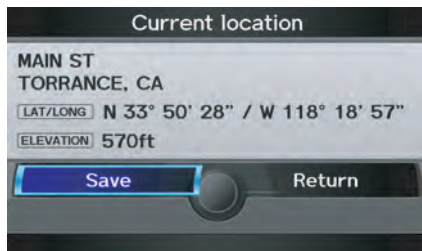

### NOTE:

*The elevation will not appear when the system is temporarily lacking proper GPS information. The system elevation may not agree with elevations shown on roadside elevation signs, and may fluctuate plus or minus 100 feet or more.*

You can store the current location for later use. It does not change or cancel your current route.

For example, you are following the system's directions to get to a destination. While sitting at a stoplight you notice a store on the corner, but do not have time to visit it right now. You can save the location to select as a destination at a later date.


To save the location, say “Save current location” or select Save on the **Current location** screen. The **Edit address** screen with the current location data will appear. You can edit the name, phone number, or category name to be saved in your personal **Address Book**.

Select **Return** and you will be returned to the **Map information** screen. You can then use **Address Book** from the **DEST** screen (**Dest. MENU 1**) to select the saved location, and return to the same spot.

## Map Legend

You can use the Map legend screens to learn the meaning of map features, icons, colors, etc. used in this system.

When you select **Map Legend** on the Map information screen, the Map legend screen appears.

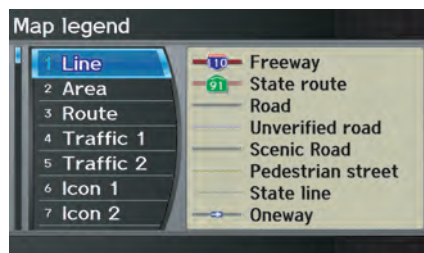

Say or select the desired item or item number to view each section of the map legend.

## Driving to Your Destination

### Map Scale

Rotate the **Interface Dial knob** or a voice command such as “Display 1/2 mile scale” (see page 158) to change the scale of the map. Zooming in increases the detail, while zooming out gives you a view of a wider area. After changing the scale, give the system a few moments to update the display.

#### Functions available at various map scales

Map Scale (English and Metric) For selecting units, see page 99.		1/20 mi.	1/8 mi.	1/4 mi.	1/2 mi.	1 mi.	2 mi.	5 mi.	15 mi.	50 mi.	150 mi.	350 mi.	1000 mi.
		80 m	200 m	400 m	800 m	1.6 km	3 km	8 km	24 km	80 km	240 km	560 km	1600 km
POI icon symbols (like ATM)	page 67	X	X										
Breadcrumbs (off-road tracking dots)	page 71	X	X	X	X								
Freeway exit information icons	page 67			X	X	X							
One-way traffic icon	page 67	X											
Unverified road display (purple)	page 6	X	X	X									
Map orientation “Heading-up”	page 63	X	X	X	X	X							
Map orientation “North-up”	page 63	X	X	X	X	X	X	X	X	X	X	X	X
Map features (park, golf course, etc.)	page 56	X	X	X	X	X	X	X	X	X	X	X	
Avoid area shown on map	page 105	X	X	X									
Avoid area scales (when creating)	page 105	X	X	X									
Waypoint “flag” icons	page 75	X	X	X	X	X	X	X	X	X	X	X	X
Traffic speed / incident	page 22	X	X	X	X	X	X	X					

#### NOTE:

- You can change between miles or kilometers in **SETUP** (see Units on page 99).
- For information on the available voice commands, see Voice Command Index on page 157.

## Destination Icon

The destination icon only shows the approximate location of the destination. This occurs because a city block can have as many as 100 possible addresses (for example, the 1400 block is followed by the 1500 block.) Since most cities use only a portion of the 100 possible addresses (for example, in the 1400 block, the addresses may only go up to 1425 before the 1500 block starts). Therefore, the address 1425 will be shown a quarter of the way down the block by the system instead of near the end of the block where the destination is actually located.


### Tip:

*When en route, you can view a map showing your destination. Using voice control, say “Display destination map.”*

## Various Other Icons

### Landmark Icons

Landmark icons are shown in the map screen on 1/20 and 1/8 mile scales. The Freeway exit information is displayed on the 1/4, 1/2, and 1 mile scales. The icons are:

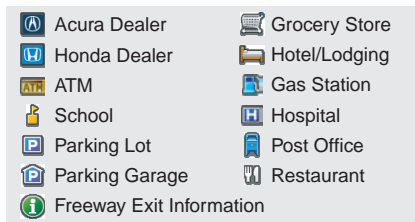

### One-Way Traffic Icon

The one-way traffic icons (see *Map Screen Legend* on page 56) are only shown on the 1/20 mile scale.

Some icons can be turned on or off. To hide or display icons, use the **Interface Dial** to select **Map Information** from the Map menu, and select **Show Icon on Map** (see page 61). You can also hide or display icons by using voice commands (see page 158).

You can select most landmark or traffic icons with the **Interface Dial** to display the icon's information. See the table on page 69 for exceptions.

### NOTE:


- *The same icon list can be viewed on the screen by selecting **Map Legend** from the Map information screen in the Map menu.*
- *When there are overlapping landmark icons, a list of the points of interest (POIs) is displayed when selected.*
- *For information on the available voice commands, see Voice Command Index on page 157.*

## Driving to Your Destination

---

### ***Incident Icons***

Incident icons are displayed on the 1/20 through 5 mile scales. The icons are:



For some icons, you can choose to show or hide them on the map, while others like Honda Dealers are always shown. The table below shows the features for each icon type. Some Points of Interest (POIs) like Police Stations are not shown as an icon, but you can still locate the nearest one with the voice command, “Find nearest Police station.” See *Find Place Commands* on page 159.

### Landmark icon

POI type	Icon can be manually displayed	Icon can be manually hidden	Icon selection by voice	Icon can be selected as a destination on the map screen with the Interface Dial	POI can be found on the map screen using voice command “Find...”
Honda/Acura dealer	Yes, always	No	No	Yes	Yes
Hospital	Yes	Yes	Yes	Yes	Yes
School	Yes	Yes	Yes	Yes	Yes
ATM	Yes	Yes	Yes	Yes	Yes
Gas station*1	Yes	Yes	Yes	Yes	Yes
Restaurants*1*2	Yes	Yes	Yes	Yes	Yes
Post office	Yes	Yes	Yes	Yes	Yes
Grocery store*1	Yes	Yes	Yes	Yes	Yes
Hotel*1/ Lodging	Yes	Yes	Yes	Yes	Yes
Police station	No icon	No icon	No	No	Yes
Shopping, Tourist attraction, Bank	No icon	No icon	No	No	Yes
Parking garage	Yes	Yes	Yes	Yes	Yes
Parking lot	Yes	Yes	Yes	Yes	Yes
Freeway exit information	Yes	Yes	Yes	Yes (choose POI)	No
One-way traffic icon	Yes, always	No	No	No	No

\*1. When these types are selected for view on the map, some icons are shown as “brand icons.”

\*2. When selecting **Restaurant** on the **Select category** for icon settings screen (see *ICON OPTION* on page 62), specialty types of restaurants, like Chinese or Italian, can be individually displayed or hidden. See *Showing Icons on the Map* on page 61. Also see the *Voice Command Index* on page 158 for the “Display,” “Hide,” and “Find” commands.

## Driving to Your Destination

---

### Incident icon


POI type	Icon can be manually displayed	Icon can be manually hidden	Icon selection by voice	Icon can be selected as a destination on the map screen with the Interface Dial	POI can be found on the map screen using voice command "Find..."
Traffic speed	Yes	Yes	Yes	No	No
Traffic incident	Yes	Yes	Yes	No	Yes *1

\*1.You can display the nearest traffic incidents by saying, "Display traffic incidents."

## Going Off the Route


If you leave the calculated route, “Recalculating...” is displayed at the top of the screen. The system will recalculate the route from your current location and direction to the desired destination then give you a new route instruction. This is done automatically if you have set **Rerouting to AUTOMATIC** on the **SETUP** screen (Other) (see page 100).

If the **Rerouting** option in **SETUP** is set to **MANUAL**, “Off route” appears at the top of the screen when you leave the calculated route. Say “Recalculate,” or select **Recalculation** whenever you want the system to perform a recalculation.

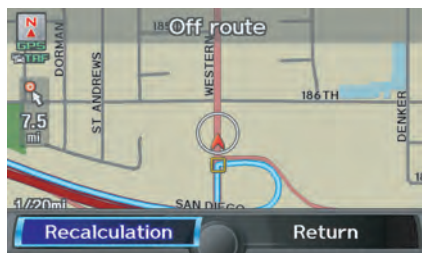

## Off-road Tracking

If you drive away from a mapped road, “Not on a digitized road” appears at the bottom of the screen.

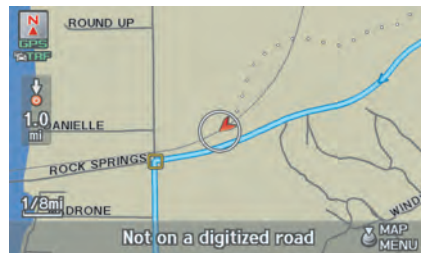

The map screen starts displaying a series of dots (breadcrumbs) to show the path you have taken if **Off-road Tracking** on the **SETUP** screen (Other) is set to **ON** (see page 109).

By following the dots, you can backtrack to the mapped road you originally left. “Breadcrumbs” may occasionally be displayed in urban areas, such as large parking lots in shopping malls, or in new subdivisions where the roads are not yet in the database. In other cases, you may see dots if the system temporarily goes off route, like in a parking garage where the GPS signal is unavailable. These dots appear only in the 1/20, 1/8, 1/4, and 1/2 mile map scales. Rotate the **Interface Dial knob** to change scales if necessary.


Off-road Tracking continues for approximately 150 miles; dots at the beginning of the trail will start disappearing when you exceed that distance. When you reach a mapped road, the system stops displaying dots.

## Driving to Your Destination


### Pop-ups and Disclaimers

When you say “OK” in the Calculate route to screen, or if you change your route, the system checks your route and provides you with pop-up messages for the following situations:


- Your route takes you into an area that you previously set as an “Avoid Area” (see *Edit Avoid Area* on page 105).

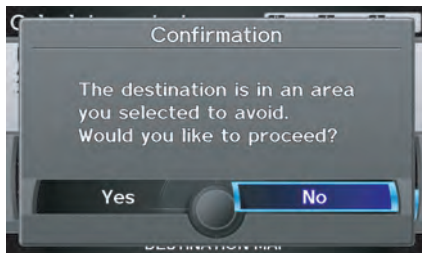

- Your route includes traffic restrictions in the vicinity of the departure point or destination.

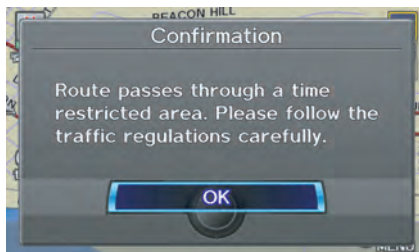


- Your route passes through unverified areas (see *Unverified Area Routing* on page 101).

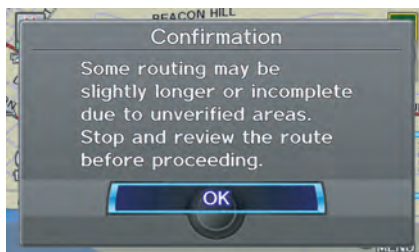

- Your route includes unverified areas (see *Unverified Area Routing* on page 101).



- You are about to enter an unverified area (see *Unverified Area Routing* on page 101).

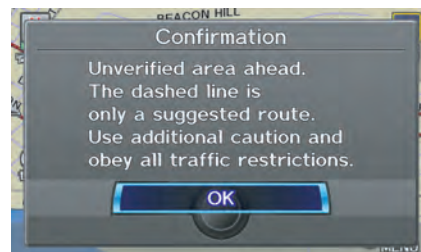

- You actually entered an unverified area (see *Unverified Area Routing* on page 101).



## Changing the Route

While en route, you may wish to alter your route, add an interim “Waypoint” (pit stop), choose a different destination, or cancel your current route. To change your present route, you can do any of the following:

Say “Menu,” or press the **DEST/ROUTE** button to view the DEST screen (Route):

- Cancel Route (page 74)
- Detour (page 74)
- Avoid Streets (page 74)
- Change Route Preference (page 74)
- Waypoint (page 75)
- Destination List (page 76)

Choose a different destination (other methods) by:

- Saying, “Find nearest...” to find a POI (page 77).
- Saying, “Go home” (page 77).
- Using the **Interface Dial** to select a different POI or address on the map (page 77).
- Pressing the **DEST/ROUTE** button and selecting the “Dest. MENU 1 or 2” tab on the DEST screen (page 78).

## Driving to Your Destination

### DEST Screen (Route)

Pressing the **DEST/ROUTE** button displays the **DEST** screen (Route):



#### NOTE:

The “Route” tab can be selected only when you are en route.

### Cancel Route

Cancels the current route (and any waypoints) and returns you to the map screen.

### Detour

Calculates a detour route for you if you encounter an unexpected obstacle such as a closed road or extremely heavy traffic congestion. If a detour is selected, the system will attempt to recalculate a new route, avoiding the next 5 miles (while on a freeway) or 1 mile (while on a surface street).

### Avoid Streets

From the **DEST** screen (Route), if you say or select **Avoid Streets**, the system displays a list of streets that will get you to your destination. This feature allows you to avoid a street or streets along your route. This is helpful if you know of road construction, closures, or excessive traffic along the route.

Simply select the street or streets you wish to avoid. You can store up to 10 streets to be avoided. You cannot avoid your current street or the streets of your waypoint(s) or destination (system beeps if selected).

#### NOTE:

Although you can choose streets to avoid, you cannot choose specific streets you want to use.

### Change Route Preference

From the **DEST** screen (Route), if you say or select **Change Route Preference**, then the Route preference screen is displayed. See *Changing the Route Preference* on page 53 for details.




## Waypoint

Waypoints allow you to add an interim “pit stop” while traveling to a destination. For instance, you may want to stop for gas or food, and then continue on to your destination. Although you can enter up to five places including the destination at a time, typically you may never use more than one at a time.

Waypoints are routed to in the order they were entered (number 1 first, etc.), with your final destination routed to last.

When you enter waypoints, they appear on the map screen as small red flags numbered 1-4.

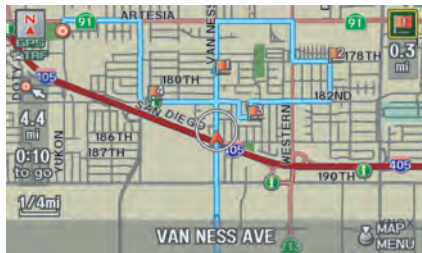


## Adding Waypoint

From the DEST screen (Route), if you say or select **Waypoint**, the Add waypoint screen is displayed. Select either **SEARCH AROUND** or **SEARCH ALONG** by rotating Interface Dial knob.



Next, select the category from the “Main” or “Fav. Subcategory” tab on the Category screen, then follow the menu prompts to select a destination.

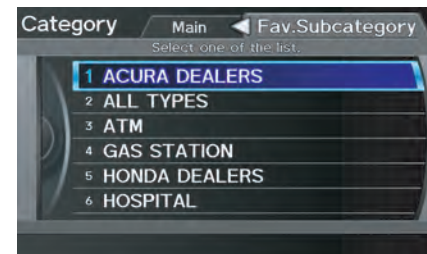

When the system performs a search from **SEARCH ALONG**, it displays matches that lie within a corridor on either side and in front of your route.

From **SEARCH AROUND**, the system displays matches that are a uniform distance from the departure point/waypoint/destination.

The search “corridor” distance value can be changed in **Edit Waypoint Search Area** in SETUP (see page 107).

## Driving to Your Destination

If you add a waypoint, the Add to dest. list screen will be displayed. If you push in on the **Interface Dial** and select **OK**, the addition is completed and rerouting begins. Press the **MAP/GUIDE** button to return to the map screen without adding the waypoint.

To add another waypoint, press the **DEST/ROUTE** button and repeat the procedure.

To delete waypoints or edit the order of waypoints, select **Edit** on the Dest. list screen. See *Editing Destination Lists* on this page.

### NOTE:

- The maximum of five places (including the destination) can be entered.
- The system does not allow you to select the roads you want to use to get to a destination. However, after you enter a destination, you can select intersections or POI waypoints that the system will use to tailor your route.

### Destination List

If you select **Destination List** from the DEST screen (Route), you can store four waypoints and one destination simultaneously. If you cancel the route, everything will be deleted.

### Verifying Destination List

If you select **Destination List** from the DEST screen (Route), the display will change to the Dest. list screen.




If you move the **Interface Dial** to the left to select **Map**, you will be able to see all the destinations on the map.

### NOTE:

Prior to departure, you can set areas to avoid. The system then includes them in its calculations for the destination you have entered. See *Edit Avoid Area* on page 105.

### Editing Destination Lists

If you move the **Interface Dial** to the right to select **Edit** on the Dest. list screen, the Select an edit menu screen will appear. If you select **Delete**, you can select which items to delete. If you select **Edit Order**, you can change the order of items in the list.

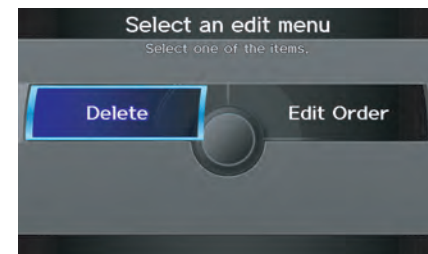

## Changing Your Destination

There are four methods by which you can change or add a waypoint to your route. These are:

### **Find Nearest (Voice command)**

From the map screen, say one of the “Find Nearest...” voice commands to locate the nearest gas station, ATM, restaurant or other point of interest. See the “Find Nearest” voice commands listing on page [159](#).

### **Go Home (Voice command)**

From the map screen, say “Go Home 1” or “Go Home 2.” If an address has been entered in both **Home Address 1** and **Home Address 2**, say “Go Home” and the system will give preference to **Home Address 1** and display the confirmation screen.

### **Using Interface Dial to Change Destination**

While following a calculated route, you can select a new destination with the map screen and the **Interface Dial**.

With the map screen displayed, use the **Interface Dial** to move the cursor. It will change to crosshairs.

Use the **Interface Dial** to position the crosshairs on your desired new destination, street, or icon, then push in on the **Interface Dial**. The **Select an item** screen or a pop-up menu may be displayed if there are multiple POIs in the vicinity.

#### **NOTE:**


*The **Select an item** screen will be displayed when the crosshairs are positioned near multiple icons or locations. A pop-up menu will be displayed when the crosshairs are positioned on a particular street.*

If this is not your desired new destination, press the **CANCEL** button or the **BACK** button on the steering wheel to return to the map screen. Reposition the crosshairs with the **Interface Dial**, then push in on the **Interface Dial** again to see the new address.

When the **Select an item** screen is displayed, select an item from the list, and the **Calculate route** to screen is displayed. Then select **OK** and push in on the **Interface Dial**.

## Driving to Your Destination

When the pop-up menu is displayed, select **Set as New Destination**. to set your location as a replacement destination, or **Add to Dest. List** to set as a waypoint.

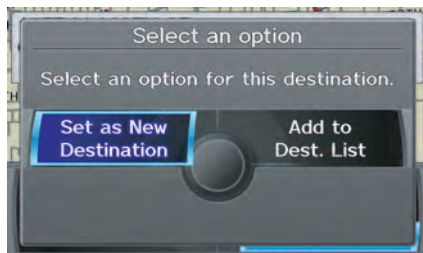

The system will return to the map screen and recalculate the route to your new destination or waypoint.

### Entering a Destination from the Menu Screen (while en route)

If you say “Menu”, or press the **DEST/ROUTE** button and select the “Dest. MENU 1” or “Dest. MENU 2” tab, the system displays the DEST screen. Follow the procedure described in Entering a Destination, which begins on page 28.


When the Calculate route to screen is displayed, select **OK** and push in on the **Interface Dial**.

When the pop-up menu is displayed, select **Set as New Destination** to set your location as a replacement destination, or **Add to Dest. List** to set as a waypoint.

The system will return to the map screen and recalculate the route to your specified new destination or waypoint.

### Continue Trip to Screen

If you restart the vehicle without having completed your prior trip, you will see the following screen:

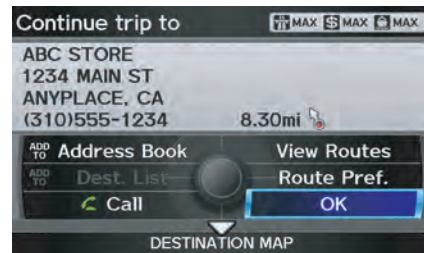

- To continue to your destination or other waypoints, say or select **OK**.
- To cancel your destination, press the **CANCEL** button or the **BACK** button on the steering wheel, or using the voice control system, say “Cancel” or “Back.”
- If you wish to change the routing method, select **Route Pref.** by using the **Interface Dial**.
- For additional information on changing the route preference, see *Changing the Route Preference* on page 53.

The INFO function consists of two main screens. To display the INFO screen (Main Info.), say “Information” or press the **INFO** button. To change it to the INFO screen (Other), select the “Other” tab. You can switch screens by selecting the tab.

You can use the voice control system to select any item on the INFO screen.

**NOTE:**

For information on the available voice commands, see Voice Command Index on page 157.

### INFO Screen (Main Info.)

When you say “Information” or press the **INFO** button, the display changes to:



Move the **Interface Dial** to the left and right to display **Main Info.** or **Other**.

**NOTE:**

For more information on the INFO screen (Other), see page 84.

### Trip Computer

The Trip computer screen displays the trip information from the gauge assembly.

When you say or select **Trip Computer** from the INFO screen (Main Info.), the display shows the “Current Drive” tab.



### Instant Fuel


Shows you the current estimated instant fuel economy in miles per gallon (mpg).

### Average Fuel

Shows you the average fuel economy in miles per gallon (mpg) since the last key cycle.

## Information Features

Move the **Interface Dial** to the right, to display the “History of Trip A” tab.

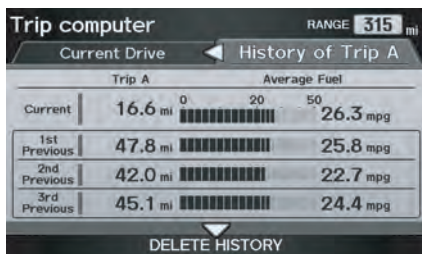

### Current

Shows the current average fuel in miles per gallon (mpg).

### 1st, 2nd, 3rd Previous

Shows the previous average fuel in miles per gallon (mpg). Select **DELETE HISTORY** by moving the **Interface Dial** down, all previous history (1<sup>st</sup>, 2<sup>nd</sup>, 3<sup>rd</sup> previous) is deleted.

### Range


Shows the estimated distance you can travel on the fuel remaining in the tank. This distance is estimated from the average fuel economy over the last several miles, so it will vary with changes in speed, traffic, etc.

### NOTE:


- *Information from the Trip Computer is displayed only when the ignition is on.*
- *“Instant Fuel” and “Average Fuel” may vary from actual fuel consumed. These values are estimates only.*
- *“Range” is only an estimate. Always monitor your vehicle’s fuel gauge to determine the appropriate time to refuel.*

### Traffic Incidents

When you say or select **Traffic Incidents** from the INFO screen (Main Info.), you can view a list of the traffic incidents near your current position or along your calculated route. See *Viewing Incident Reports* on page 25.

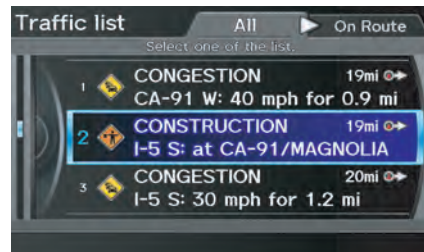

If you select an incident from the list and push in on the **Interface Dial**, the detailed information and the map of the surrounding area will appear.

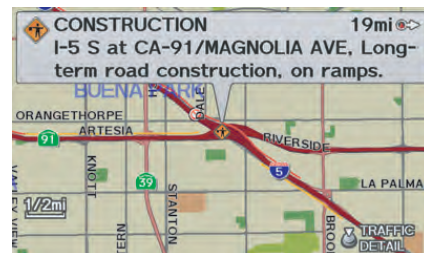

### NOTE:


When you cannot receive **Traffic Incidents** information and select this feature, the message “Traffic information could not be received” will be displayed. The traffic information will be automatically updated every 5 minutes.

### Clock/Wallpaper

The **Clock/Wallpaper** option allows you to set up the clock screen or choose a wallpaper image to display. See page [113](#).

### Calendar

The Calendar option allows you to enter events and be reminded of them in the future. When you say or select **Calendar** from the INFO screen (Main Info.), the system shows the calendar with the current calendar day highlighted.

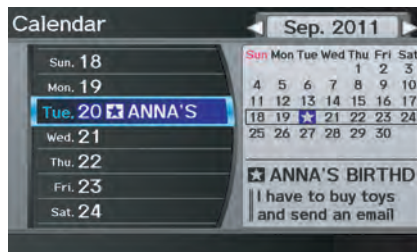

Dates with an icon indicate there is a scheduled entry for that date.

#### NOTE:



*Entries may be stored in the calendar for 10 years.*

You can scroll through the calendar day by day by rotating the **Interface Dial knob**, or select the day by voice. When you move the **Interface Dial** up or down, you can also scroll through the calendar week by week. To change the month, say “Next month” or “Previous month,” or move the **Interface Dial** right or left.

## Information Features

### Entering Your Schedule

Set your schedule by selecting the day on the calendar, and the display changes to:

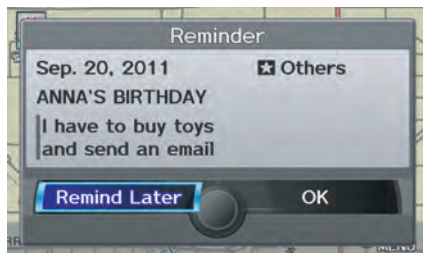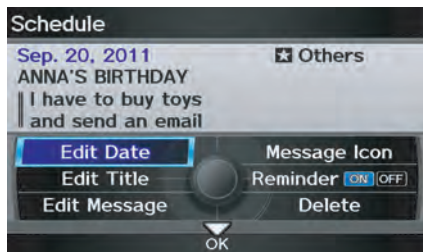

### Reminder

The default for Reminder is **ON**. This allows the system to remind you of the calendar item the next time you start the vehicle. See *System Start-up* on page 18.

### Edit Date

This allows you to move your calendar entry to a different date. If you say or select **Edit Date**, the Edit date screen is displayed with existing entries grayed out. When you select a new date, the display will return to the Schedule screen.

### Edit Title

Say or select **Edit Title**, then enter the name of your title using the **Interface Dial**. Once you have entered the title, say or select **OK**. The title will be displayed on the specified date on the Calendar screen and the display will return to the Schedule screen.

### Edit Message

Say or select **Edit Message**, and the system will show the Edit message screen. You can enter a message on two lines. Use ↵ to change the line.

Once you have entered the message, say or select **OK**. The message will be displayed on the specified date on the Calendar screen and the display will return to the Schedule screen.

### Message Icon

Say or select **Message Icon**, and the system displays a list of icons you can select to help identify the type of message you entered. The message icon you choose will be displayed alongside the specified date on the Calendar screen.

### Delete


Say or select **Delete** to display the confirmation screen. If you select **Yes**, the entry that is displayed will be deleted.

**NOTE:**

- Only one entry can be stored for each calendar day.
- A maximum of 50 entries can be stored in the calendar. After you reach 50 entries, a warning message will appear telling you that the limit has been reached. You can clear any older entries as needed.
- The system displays active calendar entries only after you answer **OK** on the Disclaimer screen.
- For more information, see System Start-up on page 18.

**Voice Help**

When you say or select **Voice Help** on the INFO screen (Main Info.), you will see the following screen:

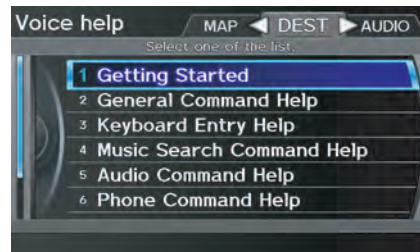


You can select the “MAP,” “DEST,” or “AUDIO” tab by moving the **Interface Dial** to the left or right.

**NOTE:**

You can select an item by saying either the line number or the item name.

There is a tutorial available for the voice command help. Say or select **Getting started**, and the display changes to:

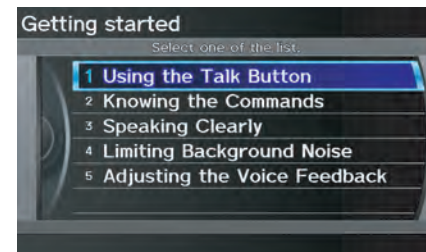

Select the line number of the desired tutorial you want to view, and the tutorial will automatically be read. To stop the reading, push in on the **Interface Dial**. To resume the reading, push in on the **Interface Dial** again.

## Information Features

When you make a command help selection under any of the help screens, you will see the help commands that can be used with voice control. You can say “Read List” or push in on the **Interface Dial** to select **Using the talk button**, and the system will read the list to you.

### Using the talk button

The Talk button is located on the left side of the steering wheel. Press & release the button, wait for the tone and then speak the command. A talk icon will also be displayed on the screen indicating that the system is ready for the command to be spoken. To return to a previous screen or cancel a voice command, press and release the Back button.



For a listing of all voice commands, see *Voice Command Index* on page [157](#).

### Setup


When you select **Setup** from the INFO screen (Main Info.), you will see the following screen:



For detailed information on the **SETUP** screen, see *System Setup* on page [89](#).


### INFO Screen (Other)

Select the “Other” tab to view additional information, and the following screen appears:

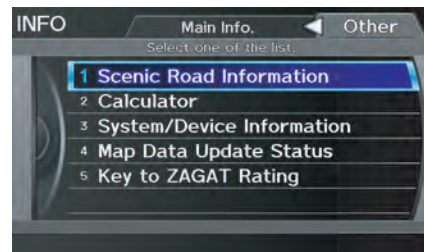

### Scenic Road Information

Say or select **Scenic Road Information** on the INFO screen (Other), and the display will change as indicated below.

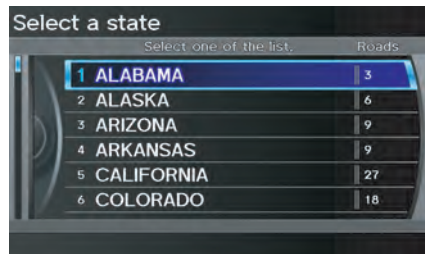


The number of scenic roads for each state will be listed.

Select a state and a list of the scenic roads in that state will be displayed. After making a selection, the scenic road will display on the screen at a scale, where its main portion is the focal point of the map. You can then set this as a destination or waypoint.

If you select a scenic road that runs through multiple states, only the portion of the road in the selected state will be displayed.

### Calculator

When you say or select **Calculator** on the INFO screen (Other), the display changes to:

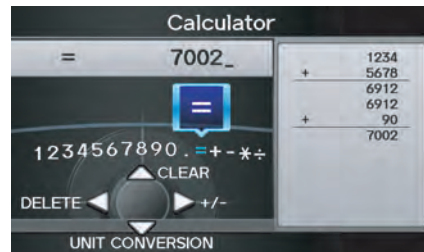

Use the **Interface Dial** and **Knob** to use the following features:

#### Calculator


The calculator function operates like a standard handheld calculator.

#### Unit Conversion

Values entered on the calculator can be converted from one unit to another (e.g., inches to millimeters).

To perform a conversion:


1. Enter a numeric value to be converted (for example, 1000).
2. Move the **Interface Dial** down to select **UNIT CONVERSION**. The screen changes to:

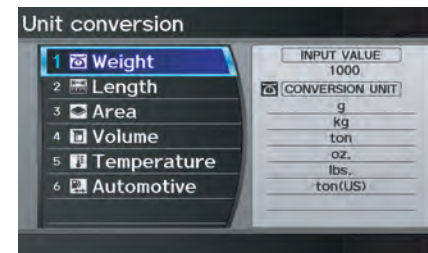

3. Rotate the **Interface Dial knob** to select the type of unit you want to convert (for example, Length) and push in on the **Interface Dial** to select. The screen for that conversion type appears (see illustration in step 4).

## Information Features

- Select the base unit (e.g., mm) that you wish to convert to some other unit. All other units will change automatically depending on the base unit value. In the example below, 1000 mm converts to 100 cm, 1 m, etc.

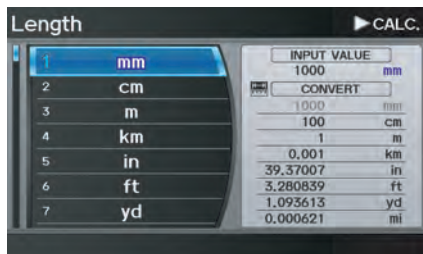

### NOTE:

- If you do not enter a value to be converted, only “Temperature” units are selectable.
- Conversions using negative values may produce meaningless or physically impossible values.
- To return the Calculator screen, select **CALC.** by moving the Interface Dial to the right.

### System/Device Information

Say or select **System/Device Information** on the INFO screen (Other), and the display will change as indicated below.




You will need this information when ordering an update DVD. See page 127 for more information.

### Map Data Update Status

During data updates, you can check the update status for map data.

During the update of map data, say or select **Map Data Update Status** on the INFO screen (Other), and the display will change as indicated below.

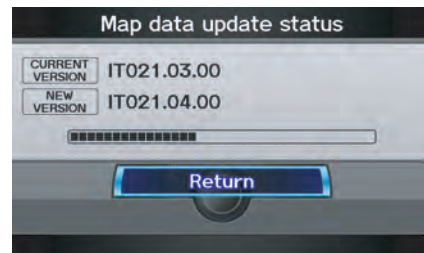

### NOTE:



This operation can only be carried out during a disc update.

### Key to ZAGAT Ratings

By saying or selecting **Key to ZAGAT Ratings** on the INFO screen (Other), you can see the explanation of the data displayed for the Zagat-surveyed restaurants.

- “Food,” “Decor,” and “Service” categories are rated using numbered values (e.g., 0-9, 10-15, etc.)
- “Cost” is the average cost of a meal (including drink and tip). If unavailable then estimated cost symbols are shown:  
 “VE”: Very Expensive  
 “E”: Expensive  
 “M”: Moderate  
 “I”: Inexpensive
- The symbols, if displayed, indicate the following information:
  - S** open on Sunday
  - M** open on Monday
  - L** open for lunch
  - serving after 11 PM
  - no credit card accepted

Use the **Interface Dial** to scroll through the Key to ZAGAT ratings screens.

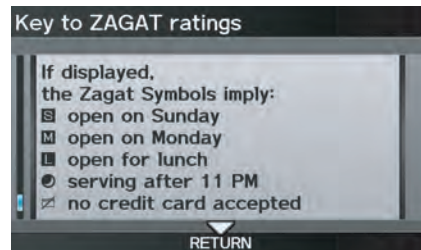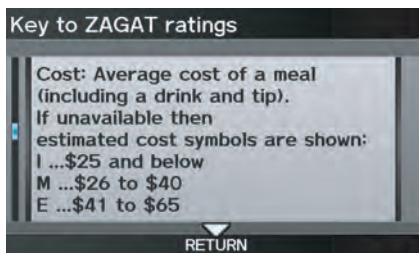

## Phone Features

The **PHONE** option allows you to pair a Bluetooth-compatible cell phone to the Bluetooth® HandsFreeLink® system. You can make and receive calls, store speed dial entries, and import your cellular phonebook (on some phones). Up to six phones can be paired to the system.

Say or press the **PHONE** button, and the display changes to:



### NOTE:

- For more information on this feature, see your Owner's Manual.
- For questions about the HFL Cellular Phonebook, call HandsFreeLink® customer support at (888) 528-7876, or visit <http://automobiles.honda.com/handsfreelink>.

## SETUP Mode

The SETUP function consists of two main screens that allow you to change and update information in the system.

### NOTE:

For information on the available voice commands, see page 167.

## SETUP Screen (Main Setup)

Select **Setup** from the INFO screen (Main info.), and the following screen will display.



### Brightness

The screen brightness has 11 settings. To change the brightness, use the voice control system and say “Brightness up” or “Brightness down.” You can also select **Brightness** and change the setting by rotating the **Interface Dial knob**.

### Tip:

If you are having trouble viewing the screen in bright lighting conditions, try increasing the brightness.

### Contrast

The screen contrast has 11 settings. To adjust the contrast, use the voice control system and say “Contrast up” or “Contrast down.” You can also select **Contrast** and change the setting by rotating the **Interface Dial knob**.

### Black Level

The screen black level has 11 settings. To change the black level, use the voice control system and say “Black level up” or “Black level down.” You can also select **Black Level** and change the setting by rotating the **Interface Dial knob**.

### NOTE:

You can have separate daytime and nighttime settings for Brightness, Contrast, and Black Level. Adjust each setting when the display is in either daytime or nighttime mode. Use the **Display Mode** button (page 11 and 111) to select Daytime or Nighttime mode.

## System Setup

### Volume

The navigation voice volume has 11 settings and can be adjusted by:

- Using the voice control system and saying “Volume up” or “Volume down”.
- Selecting **Volume** and changing the setting by rotating the **Interface Dial knob**.
- Saying “Volume Off,” or selecting **Volume** and then **OFF**.

#### NOTE:

*If you turn the volume off, you will not hear route guidance or voice command confirmations.*

If you then select **Voice** in the Map menu, you will hear route guidance at the default volume.


### Interface Dial Feedback

This setting allows you to control when (and if) the system will read the current selection you choose with the **Interface Dial**. The purpose of this feature is to minimize the need to look at the screen while operating the dial. You can set the one of the three settings explained in the following table. The factory default is **AUTO**.

Setting	Degree of assistance
<b>ON</b>	When selection is made, the system always reads what is selected.
<b>AUTO</b> (factory default)	The system reads selection only when moving
<b>OFF</b>	No voice assistance when selecting.

### Personal Information

From the **SETUP** screen (Main Setup), say or select **Personal Information** and the following screen appears:

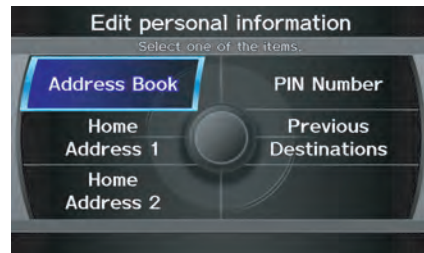

### Address Book

The Address Book allows up to a total of 200 address entries. After 200 entries, no more entries can be added. You can add, modify, and delete information in the personal Address Book list.

You may choose to use a Personal Identification Number (PIN) to protect your privacy. However, PINs are optional, and if you decide to use one, record it in case you forget the number (see page 95).

**NOTE:**

*If you forget your PIN, your dealer will have to reset it for you, and all of your stored information will be cleared.*

You can do the following functions in the address book:


- Enter an address (see this page)
- Edit an existing address (see page 92)
- Delete an existing address (see page 94)

If an Address Book PIN has been set, the system prompts you to enter your PIN. Verify that the correct user is displayed, then enter your PIN. After entering your PIN correctly by voice or by using the **Interface Dial**, the system displays your Address Book.

If no Address Book PIN has been set, the system displays your Address Book.

**NOTE:**

*Personal information cannot be backed up or moved to another navigation system.*

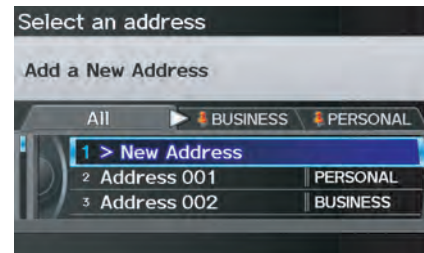
**Entering an Address**

Select **New Address** by pushing in on the **Interface Dial** when beginning to build your Address Book list.

## System Setup

### Edit Name

You may use the “Name” field to give the entry a name or title that you will recognize later, such as “Doctor Smith” or “Broadway Theatre.” If you do not give the address a name, the system will assign one (Address 001, etc.).

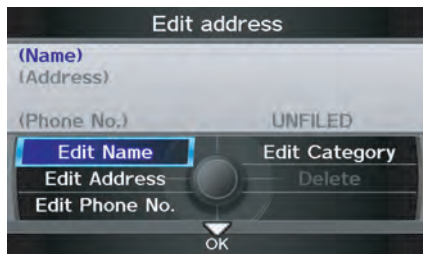

Say or select **Edit Name**. Then use the **Interface Dial** to enter the name. Select **OK** when finished.

#### NOTE:

*You can always re-enter, edit, or make changes to any entry. “Address” is the only required field.*

### Edit Address

When you say or select **Edit Address**, the display changes to:



**Current Position** - Allows you to use your current position as the address.

**Address** - Requires you to enter the city and address you wish to store. The operation is the same as selecting **Address** from the DEST screen (Dest. MENU 1). See page 29.

**Previous Destinations** - Allows you to choose one of the locations in the Previous Destination list for your Address Book list. This operation is the same as selecting **Previous Destinations** from the DEST screen (Dest. MENU 1). See page 35.

**Place Name** - Allows you to select one of the Point of Interest (POI) locations already stored in the system as one of your personal addresses. This is the same as selecting **Place Name** from the DEST screen (Dest. MENU 1). See page 36.

**Place Category** - Allows you to select a point of interest (POI) that has been saved in the system as one individual address. This is the same as selecting **Place Category** from the DEST screen (Dest. MENU 1). See page 37.

**Place Phone Number** - This feature is very convenient when you know the phone number of a place or business that you want to save. This is the same as selecting **Place Phone No.** from the DEST screen (Dest. MENU 2). See page 43.

After you have used one of these six options to enter the address, the initial screen for entering the personal address is redisplayed, with the address shown in the “Address” field. If you have entered the address using **Place Name**, **Place Category**, or **Place Phone Number**, the phone number corresponding to the address also appears in the “Phone No.” field.


### Edit Phone Number

You can enter the phone number of the address. If the address was chosen with **Place Name**, **Place Category**, or **Place Phone Number**, and it has a phone number, that number is entered automatically.

Say or select **Edit Phone No.** to display the Enter phone number screen. Enter the phone number, including the area code, by using the voice control system (say the entire phone number one digit at a time) or by using the **Interface Dial**. Say or select **OK** when finished.

### Edit Category

If desired, you can specify the category of the address or the icon. Say or select **Edit Category** to display the Select a category screen.

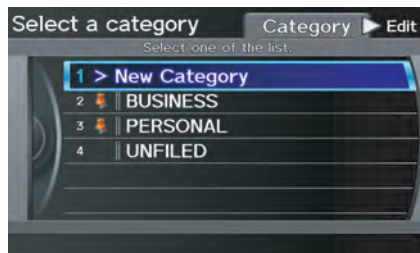

Scroll the screen and select a category by saying the number next to your choice, or by pushing in on the **Interface Dial**.

To add a new category, select **New Category** from the list. To edit or delete a category, select **Edit** by moving the **Interface Dial** to the right. The system will display the **Select an edit menu** screen. Follow the on-screen prompts to edit, or delete a category. If you delete a category that was used to categorize addresses, the category for those addresses becomes “UNFILED.”

### NOTE:

*You can have 100 categories (including UNFILED).*


## System Setup

The system will then display everything that you have entered. If all the information is correct, say or select **OK**. This will return you to the Address Book list.

If you want to enter another address, select **New Address** in the list, then repeat the procedures above. If not, press the **CANCEL** button.

### Delete an Address


This feature allows you to select an address to delete. Once an address is selected, say “Delete” or push in on the **Interface Dial** to select **Delete**.

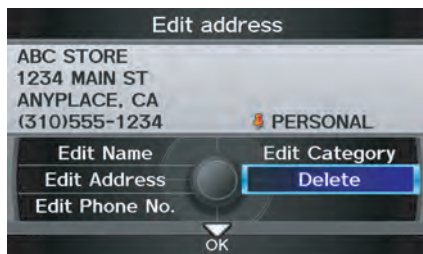

### Home Address

This feature lets you return “Home” from any location simply by saying “Go home 1” or “Go home 2” at the map screen.

Alternatively, you can select **Go home 1** or **Go home 2** on the DEST screen (Dest. MENU 1 or 2). See *By Go Home 1 or 2* on page 51.

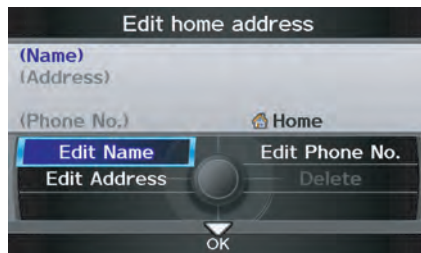

Select **Home Address 1** or **Home Address 2**.

Enter the name, address, and phone number in the same way as entering a personal address, then say or select **OK**. To leave the screen, press the **CANCEL** button.

### NOTE:

- If your Home Address cannot be found in the system, then while located on the street close to your home, select **Current Position** when entering the “Address” field.
- The home icon is shown on the map screen in the 1/20 and 1/8 mile scales.


### PIN Number

You can set a four-digit PIN (Personal Identification Number) for accessing and changing personal addresses and your home address if desired. Once you set the PIN on this screen, the system asks you to enter the PIN when you access a personal address or your home address.

#### NOTE:

*PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, the dealer will have to reset it for you, and all of your stored information will be cleared.*

When you select **PIN Number**, the display changes to:

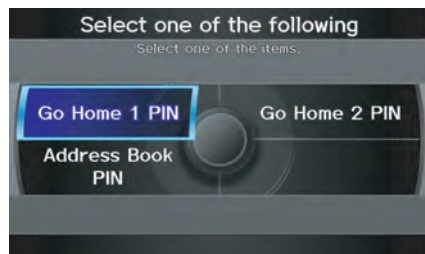

### Address Book PIN

If you choose to enter a PIN for the personal Address Book, you will have to enter it when you edit your Address Book (see page 90) or select **Address Book** on the DEST screen (Dest. MENU 1) (see page 34).

1. Select **Address Book PIN**.
2. The display changes to:



3. Enter your new four-digit PIN. If you do not wish to use a PIN, select **DO NOT USE PIN**.

#### NOTE:

*The factory default is no PIN.*

4. When you have entered your PIN, the display changes to the **Re-enter new PIN** screen. Enter the same number to validate the number you have selected.
5. If you have entered the same number both times, the display returns to the **Select one of the following** screen. If not, "INCORRECT PIN" appears. Enter your PIN again.

#### NOTE:

- Once you enter your PIN to access your Address Book or select **Address Book** on the DEST screen (Dest. MENU 1), you will not need to enter your PIN until the ignition key is cycled again.
- If you wish to remove your PIN, return to the same screen and, after entering your PIN correctly, select **DO NOT USE PIN**.
- PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, your dealer will have to reset it for you.

## System Setup

### Go home 1 or 2 PIN

1. Select **Go home 1 PIN** or **Go home 2 PIN**, and the system displays the Enter your new PIN screen.
2. Enter your PIN in the same way as entering the Address Book PIN.


#### NOTE:

- The factory default is no PIN. If you choose to use a PIN, you will have to enter it whenever you say “Go home 1” or “Go home 2” at the map screen or select **Go home 1** or **Go home 2** on the DEST screen (Dest. MENU 1 or 2).
- PINs are optional. If you choose to use a PIN, make sure you remember it. If you forget your PIN, your dealer will have to reset it for you, and all stored information will be cleared.

### Previous Destinations

Allows you to delete some or all of your previous destinations.

1. Select this option, and the display changes to:

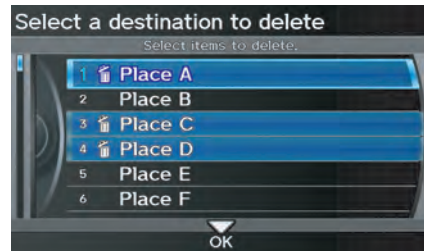

2. Scroll through the list and find the address you want to delete.
3. Select the address to delete by saying the line number, or by using the **Interface Dial**.



#### NOTE:

To cancel the deletion of Previous Destinations, select the address that was to have been deleted and push in on the **Interface Dial** before performing step 4.

4. Say or select **OK** to perform the deletion, and the display returns to the previous screen.


## SETUP Screen (Other)

Select the “Other” tab by moving the **Interface Dial** to the right to view additional SETUP functions and the following screen appears:

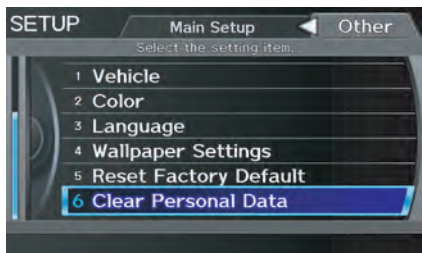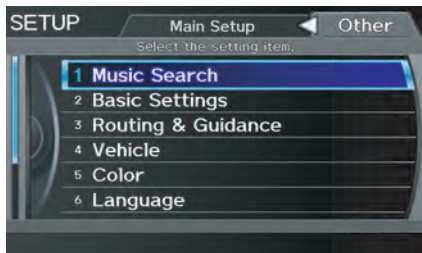

## Music Search


From the SETUP screen (Other), say or select **Music Search** and the Music search setup screen appears.

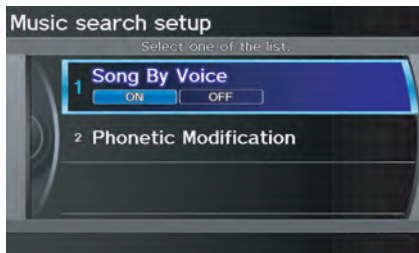

### Song By Voice™ (SBV)

Song By Voice™ allows you to search for and play music from your HDD or iPod device using voice commands.

To activate this mode, press the **TALK** button on the steering wheel and say “Hard Disc Drive Search” or “iPod Search” depending on the media that you would like to access. From this mode, you can use the following voice commands to select songs or display a song list.

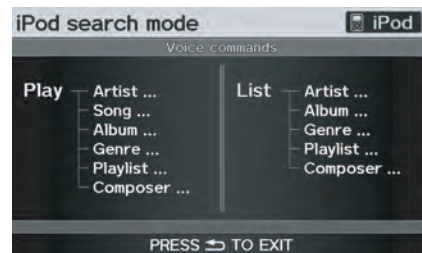


Say the desired voice command followed by the artist, song title, album, genre, playlist, or composer you wish to select. For example, when you say “Play artist ‘Artist A,’” the system will provide voice feedback and start playing all songs of Artist A.

### NOTE:

- For information on the available voice commands in the Song By Voice™ mode, see Song By Voice™ Commands on page 164.
- Languages other than English may not be available for artist name, song title, album title, etc.
- You can turn this feature **ON** or **OFF**.

## System Setup

When you say “List artist ‘Artist A,’” the system will provide the following song list of Artist A.

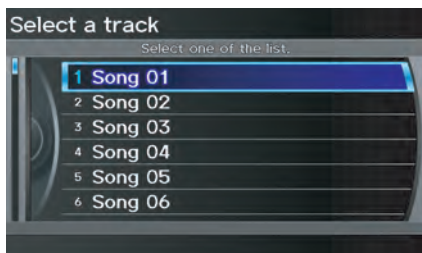

Select the desired song. The system will start playing the selected song and return back to the main Song By Voice™ screen.


To cancel the Song By Voice™ mode, press the **BACK** button on the steering wheel or any button on the navi interface.

### NOTE:


*Once you have canceled this mode, you will need to say “Hard Disc Drive Search” or “iPod Search” again to re-activate this mode.*

### Phonetic Modification


You can modify the phonetics for all artists, songs, albums, and composers on the HDD and connected iPod. The modified phonetics can be used for the voice commands in the Song By Voice™ mode.

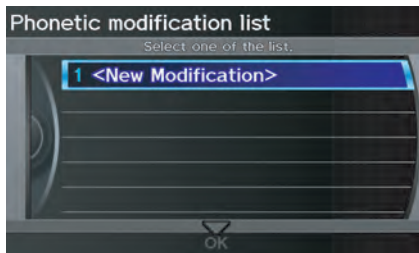


When you select **New Modification**, the following screen appears:

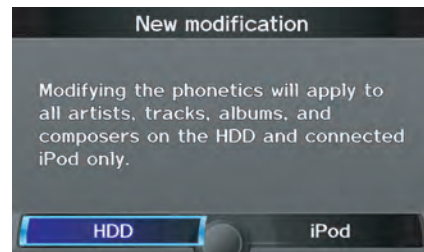


Select **HDD** or **iPod** depending on the media that you would like to access.

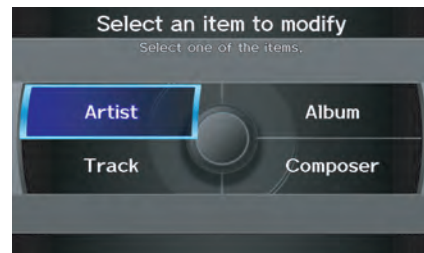

Select **Artist**, **Track**, **Album**, or **Composer** and then select an item to modify.

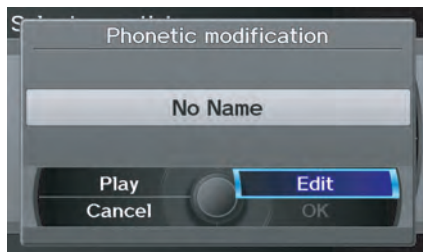

As in the example above, select the artist name stored as “No Name.” To play back the phonetic modification and check that it sounds right, select **Play**. Select **Edit** and enter the desired phonetic (e.g., “Artist A”), and then select **OK**.

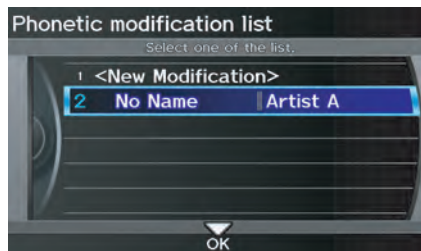

The artist “No Name” is modified to “Artist A” and you can use the voice command “Play artist ‘Artist A’” in the Song By Voice™ mode (see page 97).

If you add some other phonetics, repeat the procedure. When you finish modification, select **OK**.

#### NOTE:

- When **Song By Voice** is set to **OFF**, **Phonetic Modification** will be grayed out.
- Up to 2,000 phonetic modification items can be stored.

## Basic Settings

From the **SETUP** screen (Other), say or select **Basic Settings** and the following screen appears:



### Units (mile or km)

Allows you to select the units for the entire system (**mile** or **km**).



### Voice Recognition Tutor

Allows you to turn voice control system prompts **ON** or **OFF**. When **OFF**, you will not hear the voice control system guidance prompts.

## System Setup

### Routing & Guidance

From the SETUP screen (Other), say or select **Routing & Guidance** and the following screen appears:

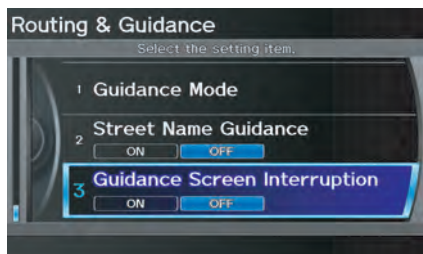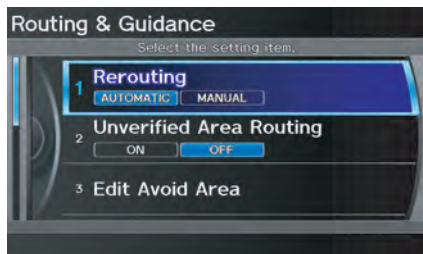

### Rerouting

If **Rerouting** is set to **AUTOMATIC** and you deviate from the route, you will see “Recalculating...” at the top of the screen for several seconds as the system calculates a new route. This is followed by new routing instructions.

If **Rerouting** is set to **MANUAL**, you will hear a tone when the “Off route” message is displayed. Say “Recalculation” or select **Recalculation** on the screen to make the system recalculate your new route.

#### NOTE:

- *It is strongly recommended that you leave the system set to the factory default (Automatic).*
- *If you live in an area with poor mapping, you may wish to set **Rerouting** to **MANUAL** to avoid constant recalculation. However, you will have to manually select **Recalculation** on the screen to have the system plot a new route.*

### Unverified Area Routing

Allows you to receive turn-by-turn map and voice guidance in unverified areas when en route to a destination (see *Map Overview* on page 6). The chart below illustrates the routing differences with this setting **ON** or **OFF**.

	Unverified Area Routing: <b>OFF</b> (factory default)	Unverified Area Routing: <b>ON</b>
<b>Decision: Why choose ON or OFF?</b>	The driver wishes to navigate manually by using the navigation map and choosing the streets that lead to the destination. The driver understands that unverified roads may not be accurate, and can contain errors in location, naming, and address range.	The driver chooses to let the navigation system suggest possible routing. The driver understands that in some cases, guidance may not be appropriate. Unverified roads may not be accurate, and can contain errors in location, naming, and address range.
<b>What you will see...</b>	A blue dotted vector line is displayed on the map that continually points to your destination. The driver should stop and then use the map to select streets that lead to the destination.	A blue-pink dashed route line highlights suggested unverified streets on the map while traveling to your destination. This is in sharp contrast to the normal blue route line displayed in verified areas.
<b>Cautionary messages</b>	There are cautionary pop-up screens and voice announcements, before and during the route. These serve as reminders that you should obey all traffic restrictions.	There are cautionary pop-up screens and voice announcements, before and during the route. These serve as reminders that you should exercise additional caution, and obey all traffic restrictions.
<b>Guidance (map/voice)</b>	There is no turn-by-turn map or voice guidance.	Voice guidance commands end with the phrase “if possible.” This is to remind the driver to verify all traffic restrictions before getting near the guidance point.
<b>Directions list</b>	A direction list is typically not available. However, depending on your route, directions are provided to help you reach the first available verified road.	A direction list is provided showing street names and turn symbols in pink.

## System Setup

### Unverified Area Routing


When driving to your destination, you have the choice of using or not using “unverified” roads. You make this choice in the **SETUP** screen. The next few pages contain an example of a route to a destination in an unverified area explaining the routing differences found in unverified areas.

With **Unverified Area Routing OFF**, the system tries to use verified roads whenever possible. In this example, since only verified streets are used, it created a longer route than necessary.

With **Unverified Area Routing ON**, the route is shorter, but consists of unverified (purple) streets that may not be accurate. Because the streets are unverified, there may be errors in street location, name, or address range. Additional caution is recommended in these areas. Always obey posted traffic restrictions.

Because both routes bypass or use unverified streets, it is recommended that you stop and review the map.

### Unverified Area Routing “OFF”

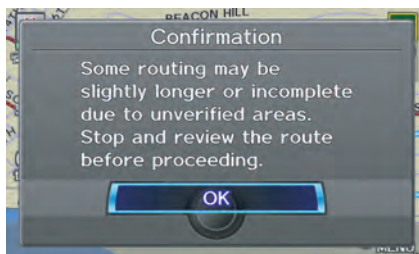

### Unverified Area Routing “ON”



### NOTE:

Unverified roads are shown only when viewing the map in the 1/20, 1/8, 1/4 mile map scales.



With **Unverified Area Routing OFF**, before you enter an unverified street, a caution box appears on the screen and a voice message is given. This lets you know that you are about to enter an unverified area and that you will be following a dotted “vector line” that points to your destination.

With **Unverified Area Routing ON**, a caution box appears on the screen and is read by the voice. In this case, you will be presented with a dashed blue/pink line instead of the regular blue route line. This is your signal to pay attention to posted traffic restrictions. You cannot assume that all guidance is appropriate.



In both cases, when you actually enter the unverified street, a short caution will remind you. You will see and hear this short caution message whenever you enter unverified areas.

If you regularly enter and leave unverified roads for short amounts of time, there may be cases where no guidance is provided.

### Unverified Area Routing “OFF”

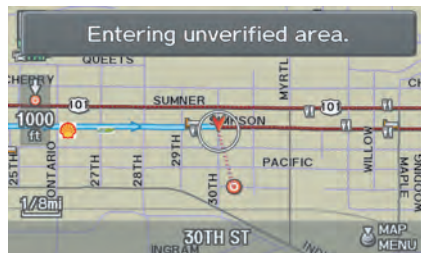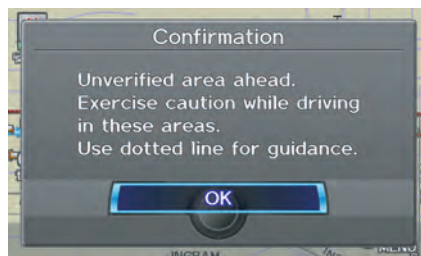

### Unverified Area Routing “ON”

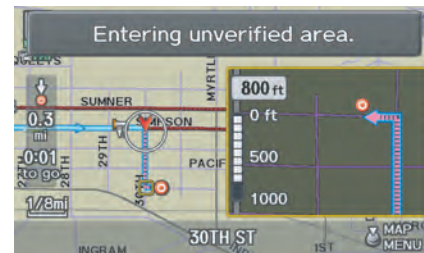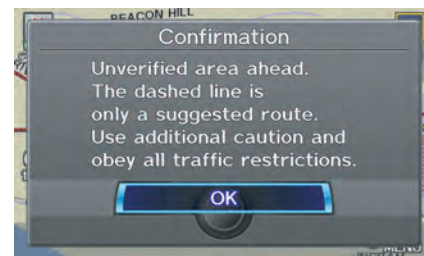

## System Setup

With **Unverified Area Routing OFF**, you are presented with a blue “vector line” that always points to the destination. You must manually choose streets from the map that will lead to your destination. No guidance is provided, and there are no directions to the destination.

With **Unverified Area Routing ON**, a blue/pink route line is shown for unverified segments. Voice guidance commands in unverified areas always end with “if possible.” This is your signal that you should use additional caution, and obey all traffic restrictions. The guidance window “arrow” shows any portions of unverified turns in blue/pink dashes.

These guidances are only a suggestion. You should always confirm that the guidance is possible.

A directions list is also provided that shows any unverified roads in a blue color, with pink arrows pointing to the next guidance point.


### Unverified Area Routing “OFF”



#### NOTE:

*For the pop-up menu displayed when pushing in on the **Interface Dial** from the map screen, **Voice** is grayed out. With **Unverified Area Routing OFF**, no **Direction List** is provided.*


### Unverified Area Routing “ON”

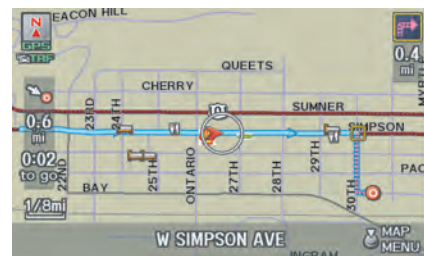


### Edit Avoid Area

This function allows you to select areas you wish to avoid when calculating a route to your destination. You can select up to five areas to avoid. You may wish to set up an “avoid area” to route around long-term road construction, closures, or any area you wish to avoid. If you enter a route that takes you through or into an “avoid area,” a pop-up box will warn you that your route takes you into one of these areas. However, you can still choose destinations in an avoided area.

When you select **Edit Avoid Area**, the following list screen is displayed.

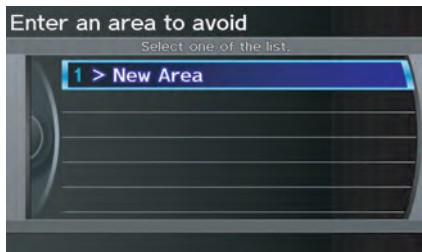


You can select **New Area**, or select one of your existing areas to modify. If you choose **New Area**, the following screen is displayed:

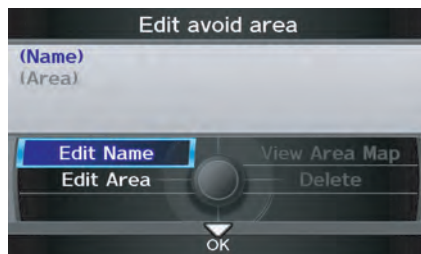

Say or select **Edit Name**, and use the **Interface Dial** to enter the name on the Enter avoid area name screen (25 characters max). Say or select **OK** to return to the previous screen.


Say or select **Edit Area** to create the area to be avoided. The following screen appears:

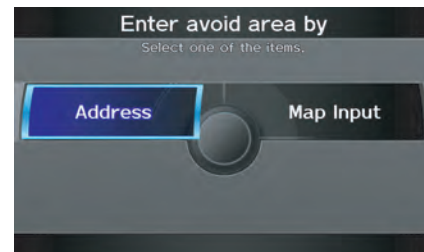


Either select **Address** or **Map Input** on the Enter avoid area by screen. Each choice provides a slightly different way to locate the approximate map display for drawing the area you wish to avoid.

## System Setup

After selecting the choice, a map screen will be displayed.

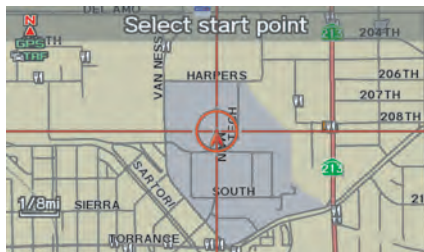

Rotate the **Interface Dial knob** to select the map scale. Use the **Interface Dial** to move the crosshairs (red circle) to the desired start point and push in on the **Interface Dial** to “set” the start point. Then move the **Interface Dial** in a straight or diagonal direction to encompass the area to be avoided.

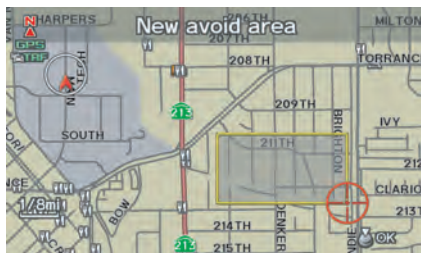

### NOTE:

*The maximum size of the “Avoid area” is 1/2 mile in length or width.*

The selected area will be displayed as a shaded box with a yellow border. Push in on the **Interface Dial** to set the end point of the avoided area. To “redraw” the area, select **CANCEL** and repeat the area selection process.

Say or select **OK** to return to the **Edit avoid area** screen.

If your selected area contains a freeway, the system will prompt you with a pop-up box saying “Do you want to avoid freeways?” Answering “No” allows you to enter a route through an avoided area on a freeway and skip the “Avoid area caution box” (see *Pop-ups and Disclaimers* on page 72).

When you return to the **Edit avoid area** screen, the “Area” field is automatically filled in by the system. Re-edit the area “Name” if desired. Select **OK** on the **Edit avoid area** screen to finish editing. Your new avoided area will now appear on the “Avoid area” list and be viewable on the map screen.

### NOTE:


*You can select areas to avoid, however you cannot select roads or areas that you want the system to use for routing.*

### Edit Waypoint Search Area


When driving en route to your destination, you can select a temporary destination waypoint (marked with a small flag on the map) along your route for gas, a restaurant, or other POI. When you resume your trip from the waypoint, the system continues the trip to your original destination. To use this feature, see *Waypoint* on page 75.

This SETUP item allows you to select the distance from your highlighted route line (on either side of your route) that the system will search for a waypoint.

From the Routing & Guidance screen, select **Edit Waypoint Search Area**, and then choose the desired search distance for either “On Freeways” or “On Surface Street.”

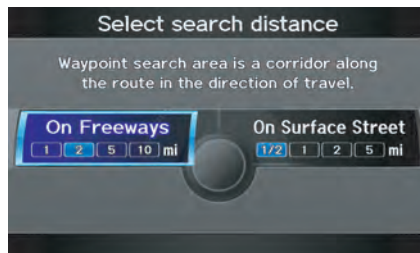

The diagram below shows how the system handles the search for “SEARCH ALONG” or “SEARCH AROUND the Destination” (see *Waypoint* on page 75).

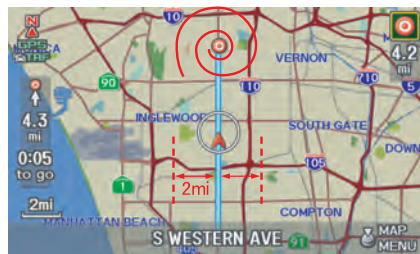

For “SEARCH ALONG,” the system looks in front of you within a corridor width specified by your values for “On Freeways” or “On Surface Street.” The system checks the upcoming area, based on your input.

For “SEARCH AROUND,” the system searches outwards in a spiral from the destination. In this case, specific search values are not needed; the matches are displayed in order of distance from destination.

#### NOTE:


*These settings do not affect the search range used for the voice commands like “Find nearest gas station” that are also available when viewing the map screen.*

## System Setup

### Guidance Mode

Allows you to select the guidance display mode: **Single Screen** or **Split Screen**.

To get to Guidance Mode from the **SETUP** screen, select the “Other” tab, **Routing & Guidance**, and **Guidance Mode**.

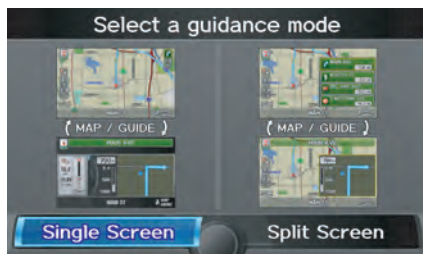

The factory default is **Single Screen**.


#### NOTE:

**Guidance Mode** can also be selected on the Guidance menu screen. See Guidance Mode on page 60.

### Street Name Guidance

Allows voice guidance to include the street names (for example, “Turn right on Main Street”). You can choose to turn this feature **ON** or **OFF**.

To access this feature from the **SETUP** screen, select the “Other” tab, **Routing & Guidance**, and **Street Name Guidance**.

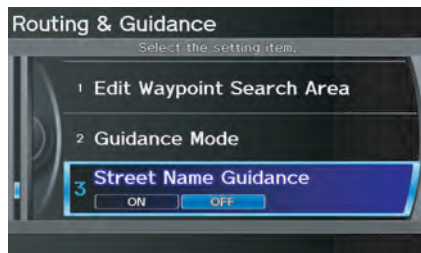

This feature is set to **OFF** as a factory default.


#### NOTE:

If the system language selection is not English, **Street Name Guidance** will be grayed out, making its selection impossible.

### Guidance Screen Interruption

When the audio screen is displayed and you get near the guidance point, the display will automatically switch to the navigation screen with the guidance window. After you get through the guidance point, the display will automatically return to the audio screen. You can choose to turn this feature **ON** or **OFF**.

To access this feature from the **SETUP** screen, select the “Other” tab, **Routing & Guidance**, and **Guidance Screen Interruption**.

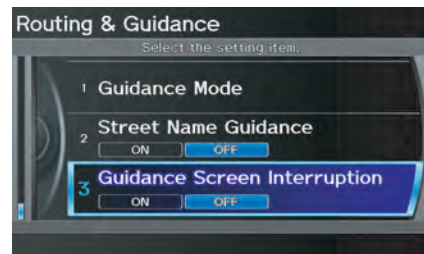

This feature is set to **OFF** as a factory default.

## Vehicle

From the **SETUP** screen (**Other**), say or select **Vehicle** and the following screen appears:



### Off-road Tracking

With this **ON**, the system will provide white off-road tracking dots (“breadcrumbs”) on the **map** screen whenever you drive into an area where the map does not show any roads. See *Map Screen Legend* on page [20](#).

After you have traveled approximately 1/2 mile away from a mapped road, the system will display a series of white dots on the **map** screen to show the path you have traveled. This is provided so you can follow the dots to backtrack to the mapped road you originally left. Tracking continues until you reach a mapped road. See *Off-road Tracking* on page [71](#).

Tracking is shown only in the 1/20, 1/8, 1/4, and 1/2 mile scales. Rotate the **Interface Dial knob** to change the scale if necessary.

#### **NOTE:**

*To clear existing dots, turn this feature **OFF** and exit **SETUP**. To re-enable this feature, return to **SETUP** and turn it on again.*

### Correct Vehicle Position

The system relies on satellites for positioning information. Buildings, tunnels, and other objects can block or reflect these signals, requiring the system to use “dead reckoning” to determine your location and direction. This can sometimes lead to small errors in positioning, such as showing you on an adjacent street.

#### **NOTE:**

*Using this function to adjust vehicle position is not recommended. When the system acquires a GPS signal, it will automatically place the vehicle in the correct location.*

If you choose to do this, follow these steps:

## System Setup

1. Stop the vehicle.
2. Select **Correct Vehicle Position**, and the system will display the **Correct vehicle position** screen.



3. Use the **Interface Dial** to move the vehicle position arrowhead to the correct location, and push in on the **Interface Dial**. The display will change to:



4. Rotate the **Interface Dial knob** so the vehicle position arrowhead is pointing in the correct direction, and push in on the **Interface Dial**. The display will return to the previous screen.


### NOTE:

*If you continually have to do this, there are either problems in the database or GPS reception problems. See Accessories Precautions on page 5.*

5. As you drive, the current road will be displayed at the bottom of the screen.


## Color

From the **SETUP** screen (Other), say or select **Color** and the following screen appears:

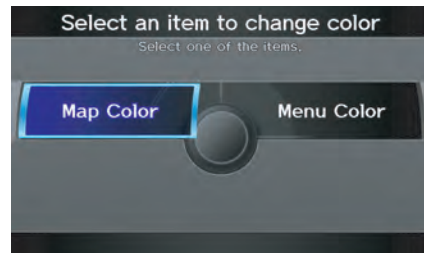

### Map Color

Allows you to choose the map color from one of five colors for the Day and Night modes.

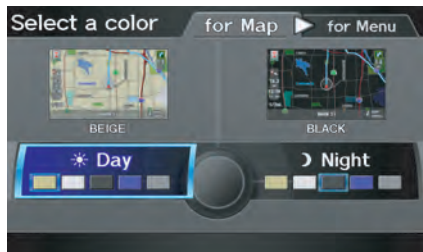

Press the **CANCEL** button to return to the previous screen.

#### NOTE:

- Choose “White” (factory default is Beige) as the Day color to obtain the best daytime display contrast.
- Choose “Black” (factory default) as the Night color to obtain the best nighttime display contrast.
- When you select the “for Menu” tab, you can change the menu color setting.

### Menu Color

Allows you to choose the menu color from one of five colors for the Day and Night modes.




Press the **CANCEL** button to return to the previous screen.


#### NOTE:

- Choose “White” (factory default) as the Day color to obtain the best daytime display contrast.
- Choose “Black” (factory default) as the Night color to obtain the best nighttime display contrast.
- When you select the “for Map” tab, you can change the map color setting.

### Switching Display Mode Manually

Pressing the **Display Mode** button  allows you to toggle through the screen display modes: **Day**, **Night**, or **Off**. When selecting **Day** or **Night**, the Brightness bar will be displayed; rotate the **Interface Dial knob** and adjust the Brightness value. This button is the overriding control for the day/night display mode, and is the simplest way to control the display mode.




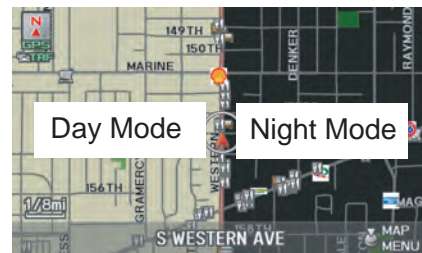


See the chart on page 112 for an explanation of other day/night display mode adjustments and how they interact with each other.



(Example of Day/Night Mode)

## System Setup

### Switching Display Mode Automatically

Illumination control	Priority	Operation	But remember
<b>Display Mode</b> button   (see page 11)	1	Allows selection of <b>Day</b> , <b>Night</b> , or <b>Off</b> display mode. This button has the highest priority and overrides all other display control adjustments listed below.	Once you press this button, you assume full manual control of the display mode until the ignition key is cycled again.
Sunlight sensor (middle of dash near the windshield, see your Owner's Manual for location)	2	If the sunlight sensor detects daylight and the headlights are turned on, the system automatically overrides (cancels) the <b>Night</b> display and displays the <b>Day</b> display mode.	If desired, use the <b>Display Mode</b> button   to override this automatic choice.
Dash illumination adjustment buttons (see the vehicle Owner's manual for location)	3	When headlights are turned on, and you wish to have the <b>Day</b> display mode, then adjust the illumination to the full bright setting (beeps).	Adjust the dash brightness back to mid-range to allow auto switching by sensing the headlights are on or off.
Headlights (Auto/On/Off)	4	When turned on, the display changes to <b>Night</b> display mode. The previous three controls listed above can "cancel" this function.	Use the <b>Display Mode</b> button   , or adjust the dash illumination to full bright to set the display to your desired choice.
Map <b>Day/Night</b> screen color choice (see page 111 for the <b>Day</b> and <b>Night</b> color choices)	N/A	The user can select the color of the screen that will be displayed for the <b>Day</b> and <b>Night</b> display modes described above.	For best contrast, ensure that the map color is white for <b>Day</b> and black for <b>Night</b> .

### Recommended Display Mode Day/Night Settings:

- With the headlights on, select mid-range for the dash illumination (see your Owner's Manual for location of buttons).
- With the headlights off, select mid-range for the dash illumination (see your Owner's Manual for location of buttons).
- On the SETUP Color adjustment screen, choose white for the map **Day** display and black for the map **Night** display (see page 110). Inappropriate adjustment of these colors can cause the **Day/Night** modes to appear inoperative.

## Language

Selects the language to be used on each screen that the system displays. From the **SETUP** screen (**Other**), say or select **Language** and the following screen will be displayed.




You can choose from three languages: **English**, **Français**, or **Español**.

### NOTE:

- *Voice confirmation of cities and streets only occurs when English has been selected.*
- *When Français or Español is selected, some messages will continue to be displayed in English.*

## Clock/Wallpaper

You can display a clock or uploaded picture on the navigation screen. From the **SETUP** screen (**Other**), say or select **Wallpaper Settings** and the following screen will be displayed.

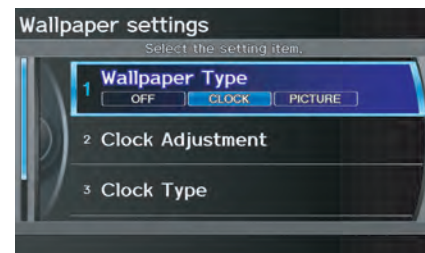

### Wallpaper Type

You can choose the wallpaper type from **CLOCK**, **PICTURE**, or **OFF**. If you choose **PICTURE**, only the wallpaper will be displayed on the screen. If you choose **CLOCK**, the clock and wallpaper will be displayed on the screen. See *Picture Setup* on page [115](#).

## System Setup

### Clock Adjustment

Say or select **Clock Adjustment** and the following screen appears:



This screen allows you to set or adjust the following:

- Auto Daylight (Default = ON)
- Auto Time Zone (Default = ON)
- Adjust Time (adjust your clock)
- Clock Format (Default = 12H)
- Reset (resets this screen's settings to factory defaults)

### Auto Daylight

Sets automatic daylight saving time **ON** or **OFF**. If set to **ON**, the clock will automatically “spring ahead” or “fall back” by one hour when a daylight saving time change occurs.

#### NOTE:

*Even if you have set Auto Daylight to **ON**, this function is not activated in areas that do not adopt daylight saving time.*

### Auto Time Zone

Sets automatic time zone selection by GPS to **ON** or **OFF**. If you are driving across the country and passing through time zones, then this feature will automatically set the time to the time zone you are traveling through. However, if you live and work in two different time zones, you may want to turn this feature off.

#### NOTE:

*When driving near a time zone boundary, the displayed time zone may fluctuate between the two zone times.*

### Time Adjustment

Adjusts the current time in hours and minutes. Select **ADJUST TIME** by moving the **Interface Dial** up, and then switch  **HOUR** and  **MINUTE** by moving the **Interface Dial** to the left and right and changing the value by rotating the **Interface Dial knob**. Selecting **OK** returns you to the previous screen.

### Clock Format

Sets clock format selection **12H** or **24H**.


### Resetting the Clock Settings

Selecting **Reset** clears any changes you made to “Auto Daylight,” “Auto Time Zone” settings, time adjustment, or “Clock Format”. Depending on your location, you may need to adjust these settings.


### Clock Type

You can set the clock type and background image.

When you select **Type**, you can choose **Small Digital**, **Digital**, or **Analog** type.

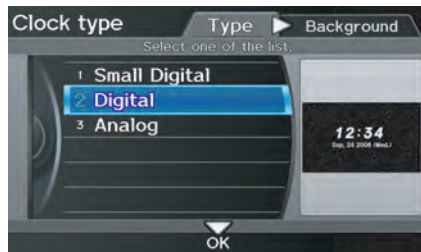

When you select **Background** by moving the **Interface Dial** to the right, you can choose **Galaxy**, **Metallic**, or **Time Zone** background image.

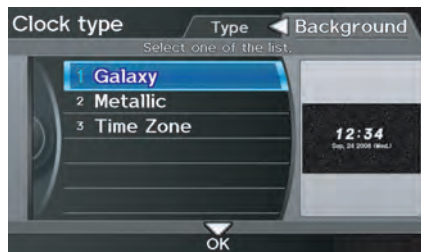


#### Tip:

*You can preview the selected clock type on the right window.*

### Picture Setup

Say or select **Picture Setup** and the following screen will be displayed.

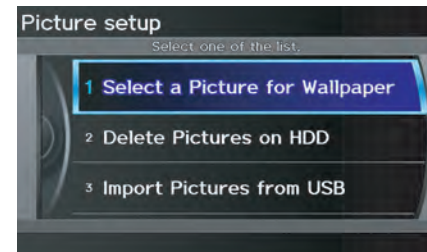


Two default images are provided.

## System Setup

### Selecting Wallpaper Pictures


If you say or select **Select a Picture for Wallpaper**, a list of the images on the HDD will appear.

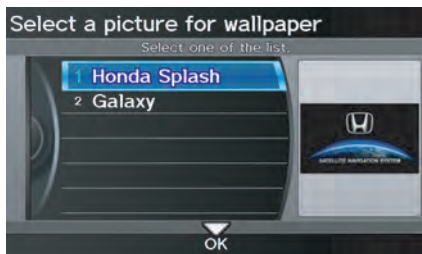

If you select an image, the image will appear in a pop-up screen. Select **OK** to complete the setup. The selected image will be highlighted on the list screen.

### Delete Pictures on HDD

If you say or select **Delete Pictures on HDD**, a list of the images on the HDD will appear.

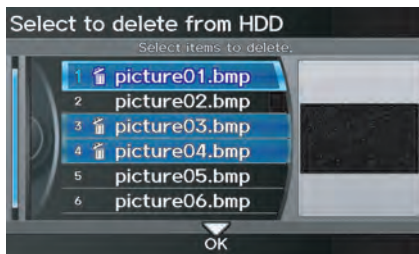

To delete the image, use the **Interface Dial** to select it, and the image will display. Select **OK** if you want to continue to delete the image, and the list of images will be displayed with your selected image highlighted. Move the **Interface Dial** down to select **OK** to delete. A confirmation message will appear.

### NOTE:

- If there are no images on the HDD, "No Entries Exist" will appear.
- You cannot delete images while driving.

Images that have not yet completed uploading from a USB thumb drive cannot be deleted.

### Importing Pictures from USB

To use a wallpaper image other than the factory defaults, you can import pictures from a USB thumb drive or similar device.

If you say or select **Import Pictures from USB** and a USB thumb drive is properly connected, the following screen will display.



#### Tip:

You can preview the selected image on the right window.


Rotate the **Interface Dial** knob and select the images to be uploaded to the HDD. Move the **Interface Dial** down and select **OK**.

#### NOTE:

- You can only import images from the root directory. Images in the folders cannot be imported.
- The display size is 800 x 480 pixels. Smaller images are displayed with the extra area appearing in black. Larger images are reduced to a displayable size without changing the aspect ratio.
- 20 uploaded images (in BMP or JPEG format) can be saved to the HDD.
- Incompatible data formats or images greater than 6 MB cannot be saved.
- Images with file names longer than 211 characters cannot be uploaded.
- If you attempt to upload an image with the same name as an existing image, a pop-up screen will appear, asking if you want to overwrite the existing image file.
- You cannot import images while driving.

### Reset Factory Default Settings

The **Setup** settings and multi-view rear camera brightness value settings can be returned to the factory default settings. If you say or select **Reset Factory Default** from the **SETUP** screen (Other), the following screen will display.

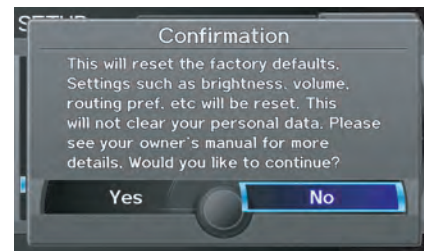

If you select **Yes**, the following Setup settings return to the factory default settings. If you select **No**, these settings will remain as they are currently set.


- Brightness, Contrast, Black Level, Volume, Interface Dial Feedback, Brightness (multi-view rear camera)

## System Setup

- Basic Settings: Units, Voice Recognition Tutor
- Routing & Guidance: Rerouting, Unverified Area Rerouting, Edit Waypoint Search Area, Guidance Mode, Street Name Guidance, Guidance Screen Interruption
- Clock Adjustment: Auto Daylight, Auto Time Zone, Time
- Vehicle: Off-road Tracking
- Color: Map Color, Menu Color
- Clock/Wallpaper: Clock Format, Wallpaper Type, Clock Type

### Clear Personal Data

Any uploaded data, calendar entries, address books, stored destinations, or other settings can be cleared or returned to factory defaults. If you say or select **Clear Personal Data** from the **SETUP** screen (**Other**), the **Select items to clear** screen will display.

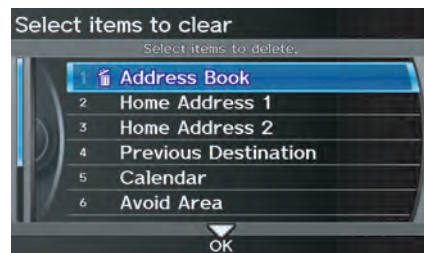

Rotate the **Interface Dial knob** and select the data to be deleted.


If a PIN number is set, the screen for entering the PIN code will be displayed. A pop-up screen verifying whether deletion is to be continued or not will be displayed, and then another deletion verification message will appear. Select **Yes** to commence the deletion; select **No** to suspend it.

#### **NOTE:**

*When the **Address Book** is deleted, all contents (except the Categories) will be deleted.*

## Multi-view Rear Camera

Your vehicle is equipped with a Multi-view rear camera as shown in the illustration.

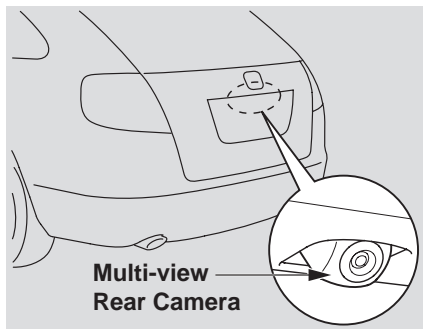

When you shift to R (Reverse) with the ignition switch in the ON (II) position, the rear view is shown on the navigation screen. Parking guide lines appear in the rear view. For the best image, always keep the camera lens clean, and be sure it is not covered.

Since the camera display area is limited, you should always back up slowly and carefully, and look behind you for obstacles.

## Three-way Rearview Modes

The rearview image can be easily switched between Wide, Normal, and Top view modes by pushing in on the **Interface Dial**.

When you select the Wide or Normal view mode and turn the ignition off, the last mode is selected the next time the camera is used.



### Tip:

*Only use Top view when objects are close (less than one meter) to your vehicle.*



### NOTE:

*If the last mode is Top view, the Normal view mode is selected the next time the camera is used.*



### Wide view

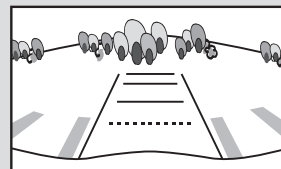

### Normal view

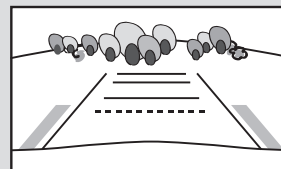


### Top view

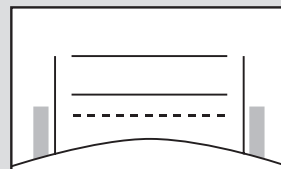

## System Setup

### Visible Range of the Rearview Image

The rearview image is displayed within approximately three meters of the vehicle.

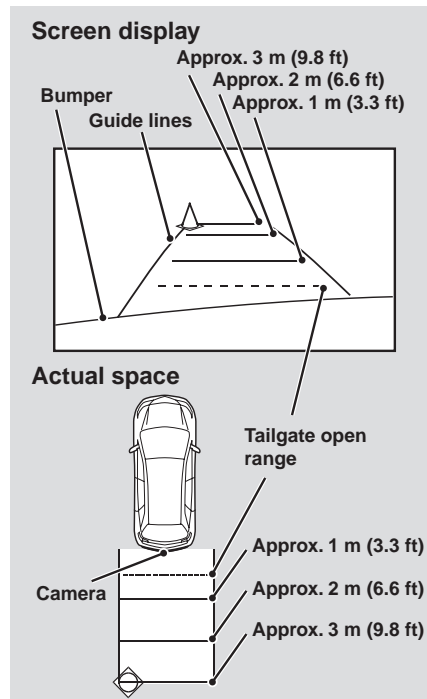

#### NOTE:

- The multi-view rear camera has a special lens that makes distances appear different than they actually are.
- The multi-view rear camera display has a limited range, and the size and position of objects around the area may appear different from reality. Make sure to check the surrounding area carefully.

#### Tip:

To turn the guide lines on or off, press and hold the **CANCEL** button for three seconds.

### Multi-view Rear Camera Brightness Adjustment

When in reverse, the navigation buttons are locked out, except the rotating portion of the **Interface Dial knob**. Rotate the **Interface Dial knob** clockwise to make the camera image brighter, and counterclockwise to darken the image.

This brightness adjustment is independent of the screen brightness adjustment in **SETUP**.


#### NOTE:

- The camera brightness cannot be adjusted by voice control.
- Slight delays can occur when switching to the camera image (especially when first starting your vehicle), or switching back to the map/menu screen. This is normal.

## System Initialization

If for any reason you lose power to the vehicle (e.g., the battery was disconnected), the navigation system will require initialization.

The navigation system supports a VIN-recognition anti-theft system. If the correct navigation system is installed in the vehicle, you do not need to enter a code as shown on the screen below.

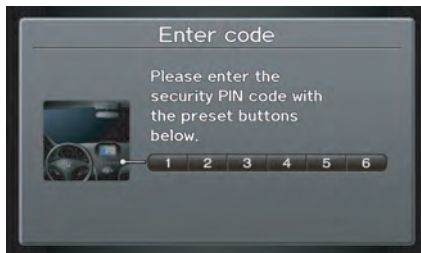

If this screen appears, press and hold the audio power button for two seconds to resume system operation. The system may need a few moments to reacquire the GPS signal.

## Entering the Security Code

If another system has been installed in the vehicle, you will have to enter a security code for the audio and navigation system before you can use it again.

When you purchased the vehicle, you should have received one card containing the navigation system's security code and serial number. Keep this card in a safe place in case you need the code. If you lose the card, you must obtain the security code from your dealer.


Enter the 5-digit security code in accordance with the owner's manual for your vehicle. If you do not enter the security code, the navigation and audio voice will not function.

### NOTE:

*The anti-theft security code is unrelated to your optional navigation system PIN (for Address Book or Home Address).*

## GPS Initialization


Depending on the length of time the battery was disconnected, your system may require GPS initialization. If it does, the following screen appears:

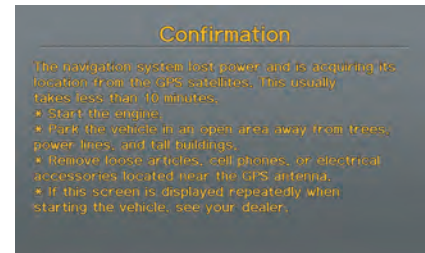

If this procedure is not necessary, the system proceeds directly to the Disclaimer screen (see page 18). During initialization, the system searches for all available GPS satellites and obtains their orbital information. During this procedure, the vehicle should be out in the open with a clear view of the sky.

## System Initialization

If the navigation system finds the satellites properly, this box clears and the Disclaimer screen is shown. If within 10 minutes the system fails to locate a sufficient number of satellites to locate your position, the following screen appears:

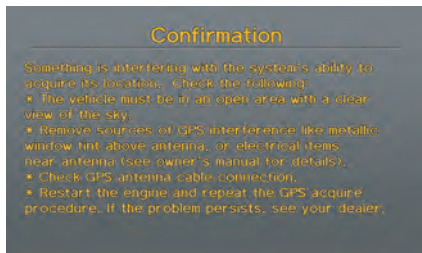

If the system is still unable to acquire a signal, follow the instructions on the screen, or contact your local dealer for assistance.

### NOTE:

*The average acquiring time is less than 10 minutes.*

## Map Matching

This part of the initialization matches the GPS coordinates found above with a road on the map screen. To perform this part of the procedure, ensure that the navigation system is displaying a map, and drive the vehicle on a mapped road (a road shown on the map screen). Do not enter a destination at this time.

When the name of the current road you are driving on appears at the bottom of the screen, the entire procedure is complete. Your system is now ready to use.

Although your navigation system is one of the most highly sophisticated pieces of equipment you will find in a modern automobile, you may find during its use that it has certain limitations.

The system uses GPS signals to aid in determining its current location. The GPS is operated by the U.S. Department of Defense. For security reasons, there are certain inaccuracies built into the GPS that the navigation system must constantly compensate for. This can cause occasional positioning errors of up to several hundred feet.

For example, in urban areas where streets are close together, this could cause the system to show that you are traveling on a street that parallels the street you are actually on. The system will, under most circumstances, correct itself while you drive.

Also, depending on your current view of the sky and the position of the satellites, the elevation may be shown incorrectly. You may also notice some delay of the vehicle position icon at intersections; this is normal.

### GPS Reception Issues

The signals received from the GPS satellites are extremely weak (less than a millionth of the strength of a local FM station) and require an unobstructed view of sky. The signal can easily be interrupted or interfered with by the following:

- Aftermarket metallic window tint above or to the sides of the GPS antenna (located in the dashboard)
- Cell phones, PDAs, or other electronic devices docked in a cradle or lying loose on the dashboard
- Remote starters or “hidden” vehicle tracking systems mounted near the navigation unit

- Other aftermarket audio electronic devices mounted near the navigation unit
- Trees, tall buildings, freeway overpasses, tunnels, or overhead electrical power wires

Although the system will direct you to your desired destination, it may not always generate what you consider to be the most direct route. Try changing the method of routing. See *Changing the Route Preference* on page 53. You may also have Unverified Area Routing set to OFF. See *Unverified Area Routing* on page 101.

Additionally, the mapping database contains verified and unverified maps. See *Map Overview* on page 6. A Disclaimer screen will warn you if your route includes unverified streets. Unverified streets may be missing from the map, in the wrong location, or have an incorrect name or address range. Exercise additional caution when driving in these unverified areas.

The destination icon shows the approximate location of the destination. This occurs because a city block can have as many as 100 possible addresses (for example, the 1400 block is followed by the 1500 block) Since most cities use only a portion of the 100 possible addresses (for example, in the 1400 block, the addresses may only go up to 1425 before the 1500 block starts), the address 1425 will be shown a quarter of the way down the block by the system instead of at the end of the block where the destination is actually located.

You may find that the system occasionally reboots. This is indicated by the display returning to the navigation system globe screen. A reboot can be caused by a number of things, such as extreme temperatures or shock from bumpy roads. It does not necessarily indicate a problem that requires service. If this happens frequently, please see your dealer.

## Database Limitations

---

You will find that some points of interest (POI) may be missing when you search the database. This can be caused if at the time the database was gathered, the name was misspelled, the place was improperly categorized, or the POI change is not yet in the database. This means you may not find places listed that you know exist. This is also true for police agencies and hospitals. In outlying areas, facilities listed may not be the closest. Always check with local information sources if you need law enforcement or hospital services.

Every effort has been made to verify that the system's database was accurate at the time it was created. However, businesses do close or relocate, and new businesses start in the old locations. For this reason, you may occasionally find inaccurate information when you select and drive to a point of interest (for example, a restaurant is now a jewelry store). The number of these inaccuracies increases the longer you go without an update.

The digitized map database reflects conditions as they existed at various points in time before production. Accordingly, your database may contain inaccurate or incomplete data or information due to the passage of time, road construction, changing conditions, or other causes.

Due to ongoing software and database improvements, navigation software and mapping versions may change in the middle of a production year. The version shipped with your vehicle was the most recent available at the time of production and is considered standard equipment for that vehicle. There is no free program to retrofit early production vehicles with the latest software and mapping versions. For update DVD ordering information, see page [127](#).

In addition, this database does not include, analyze, process, consider, or reflect any of the following categories of information:

- Neighborhood quality or safety
- Population density
- Availability or proximity of law enforcement
- Emergency, rescue, medical, or other assistance
- Construction work, zones, or hazards
- Road and lane closures
- Legal restrictions (such as vehicular type, weight, load, height, and speed restrictions)
- Road slope or grade
- Bridge height, width, weight, or other limits

- Traffic facilities safety
- Special events
- Pavement characteristics or conditions

We assume no liability for any incident that may result from an error in the program, or from changed conditions not noted above.

### Copyrights

- infoUSA-Data: Certain business data provided by infoUSA, Inc., Omaha, NE, Copyright © 2008, All Rights Reserved.
- EXIT-Data: © ZENRIN CO., LTD. 2008. All Rights Reserved.
- Building foot print: © ZENRIN CO., LTD. 2008. All Rights Reserved.
- Junction View Data: © ZENRIN USA, INC. 2008. All rights reserved.
- ZAGAT SURVEY: © 2010 Zagat Survey, LLC. Zagat Survey is a registered trademark of Zagat Survey, LLC.
- Brand icon: The marks of companies displayed by this product to indicate business locations are the marks of their respective owners. The use of such marks in this product does not imply any sponsorship, approval, or endorsement by such companies of this product.

## Customer Assistance

---

### Reporting Errors

Occasionally, you may encounter database errors.

- If the error pertains to freeways and main “verified” roads shown in black on the map, then report it online at <http://mapreporter.navteq.com/dur-web-external/>.
- If the error involves a purple “unverified” road, then do not report it. These areas have not been verified and are provided for reference only (see *Map Overview* on page 6).
- For errors in points of interest (POI), like a business that has changed its name, do not report them. Keep in mind that depending on when the data was collected, the database can be out of date. The business may have not reported the change(s), or not be in the database at all. Update Navigation DVDs are available for purchase, usually in the fall of each year. See *Obtaining a Navigation Update DVD* on page 127 regarding updates to the navigation system.
- If the error does not involve the database, such as vehicle position icon error, screen error messages, or other GPS related errors, see *Frequently Asked Questions* on page 146, *System Limitations* on page 123, or *Troubleshooting* on page 153.

### Honda Automobile Customer Service Honda Navi

America Honda Motor Co., Inc.

Honda Customer Service  
MS 500-2N-7A  
1919 Torrance Blvd.

Torrance, CA 90501-2746  
Telephone: (800) 999-1009  
Fax: (310) 783-3273

## Visiting Your Dealer

We strive to make this manual as complete as possible and to answer all questions regarding operation of the system. Occasionally, you may run into a specific issue that you cannot find in the book. You may save yourself a trip to the dealer by first consulting the following resources:

- The Troubleshooting section (see page 153)
- The Frequently Asked Questions (FAQs) section (see page 146)
- The FAQs found on the online update DVD order site (see “Obtaining a Navigation Update DVD”)
- For detailed questions regarding HFL, audio, or other systems that interact with the navigation system, see your Owner’s Manual, or the Technology Reference Guide.
- For traffic-related issues, see the “FM Traffic” section (on page 23) and FAQs (on page 146).

- Call Honda Customer Relations (see “Honda Automobile Customer Service” on page 126).
- For database or POI issues, follow the guidelines in the “Reporting Errors” section (see page 126).

If your question is still unanswered and you wish to visit the dealer, please be prepared to demonstrate the issue to the service technician. That way, the service technician can document the issue for the factory to allow more efficient troubleshooting.

Some issues may at first seem random, but you may notice a pattern, like they only occur when you enter a specific address, when driving on a certain road, or just when it’s cold. This information is very useful to the service technician. Be patient, the service technician may be unfamiliar with your specific issue.

## Obtaining a Navigation Update DVD

Honda is continually expanding the scope of the navigation system. Upgraded software may be made available to navigation system owners periodically, usually in the fall of each year.

To purchase an updated DVD, you will need your vehicle’s VIN number and the System/Device Information from the INFO screen (Other). Call the Honda Navigation Disc Fulfillment Center at (888) 291-4675. You can also order online by going to [www.hondanavi.com](http://www.hondanavi.com).

### NOTE:

- *Update DVDs are not available at your dealer. However, the dealer may order an update DVD for you out of courtesy. There is no program for free DVD updates.*
- *The update DVD order line staff cannot answer technical questions regarding navigation operation, coverage, or POIs.*

## Coverage Areas

### Map Coverage

The system provides map coverage for the United States, as well as for Canada and Puerto Rico. The map coverage consists of accurately mapped (verified) metropolitan areas (in the following list) and a less accurate (unverified) rural database. See *Map Overview* on page 6 for a discussion of map coverage.

The cities and metropolitan areas in the following list are fully mapped. Only major streets, roads, and freeways have been verified outside these areas. If your route passes through these areas, routing may be limited, depending on your routing choices. See *Unverified Area Routing* on page 101.

If you desire additional map coverage information, contact Honda Customer Service or go to [www.hondanavi.com](http://www.hondanavi.com). Enter your vehicle model and model year, and then select the state for which you want to verify map coverage.

### U.S. Detailed Coverage Areas

#### Alabama

Auburn-Opelika  
Birmingham/Tuscaloosa  
Huntsville  
Mobile  
Montgomery

#### Arizona

Phoenix Metro  
Prescott  
Sedona  
Tucson  
Yuma

#### Arkansas

Fayetteville  
Fort Smith  
Hot Springs  
Little Rock  
Pine Bluff

#### California

Central Valley – including *Fresno, Merced, Modesto, and Stockton*  
Humboldt  
Los Angeles/San Diego Metro  
Mammoth Lakes  
Redding  
Sacramento Metro

San Francisco Bay (*approximately Monterey to Sonoma*) – including *Monterey County and Hollister*  
Southern California Area – including *Bakersfield and San Luis Obispo*

#### Colorado

Denver/Boulder/Colorado Springs/  
Ski Resorts Metro area - including *Ft. Collins*  
Durango  
Grand Junction  
Telluride

#### Connecticut

Bridgeport  
Danbury  
Hartford Metro  
New Haven Metro  
Norwalk  
Stamford

#### Delaware

Entire state - including *Dover, Wilmington Metro area, New Castle County*

#### Florida

Cape Canaveral/Cocoa Beach/  
Titusville  
Dixie County  
Florida Keys

Fort Myers Metro area – *including Naples*  
 Fort Pierce  
 Gainesville  
 Jacksonville Metro – *including St. Johns County*  
 Miami/Fort Lauderdale/West Palm Beach Metro  
 Orlando/Daytona Beach/Melbourne area - *including Osceola County*  
 Panama City  
 Pensacola  
 Tallahassee  
 Tampa Bay/St. Petersburg Metro – *including Pasco and Manatee Counties*  
 Vero Beach

### **Georgia**

Albany  
 Athens  
 Atlanta Metro  
 Augusta/Aiken Metro  
 Columbus  
 Dalton  
 Macon  
 Rome  
 Valdosta  
 Warner Robbins

### ***Hawaii (all cities for the following islands)***

Hawaii  
 Kauai  
 Lanai  
 Maui  
 Molokai  
 Oahu

### ***Idaho***

Boise  
 Idaho Falls  
 Pocatello  
 Sun Valley Ski Resorts

### ***Illinois***

Bloomington-Normal  
 Carbondale  
 Champaign  
 Charleston  
 Chicago Metro (to Wisconsin border) – *including Lake County, IN and DeKalb County, IL*  
 East St. Louis Metro  
 Galesburg  
 Moline  
 Peoria  
 Quincy  
 Rock Island  
 Rockford  
 Springfield

Urbana-Danville

### ***Indiana***

Bloomington  
 Evansville  
 Fort Wayne  
 Gary/Hammond Metro  
 Indianapolis Metro  
 Kokomo Metro  
 Lafayette  
 Muncie  
 Northwest Indiana  
 South Bend/Elkhart/Goshen  
 Terre Haute

### ***Iowa***

Ames  
 Cedar Rapids  
 Davenport  
 Des Moines  
 Dubuque  
 Iowa City  
 Sioux City  
 Waterloo-Cedar Falls

### ***Kansas***

Kansas City/Leavenworth Metro  
 Topeka  
 Wichita

## Coverage Areas

---

### **Kentucky**

Bowling Green  
Lexington  
Louisville  
Owensboro

### **Louisiana**

Baton Rouge  
Lafayette  
New Orleans Metro  
Shreveport

### **Maine**

Bangor  
Bar Harbor/Acadia National Park  
Portland/Lewiston/Auburn  
Southern Maine

### **Maryland**

State of (partial) – Baltimore/  
Washington D.C. Metro – *including*  
*Charles and Carroll Counties*  
Cumberland  
Ocean City

### **Massachusetts**

Boston/Cape Cod Metro  
Cape Cod

### Springfield Metro area

*Complete coverage of all cities in*  
*Barnstable, Berkshire, Bristol,*  
*Essex, Hampshire, Hampden,*  
*Middlesex, Norfolk, Plymouth,*  
*Suffolk, and Worcester Counties*

### **Michigan**

Detroit Metro area – *including Ann*  
*Arbor, Pontiac, Flint, Clinton,*  
*Eaton, and Monroe Counties*  
Kalamazoo  
Northern Michigan Resort Area –  
*including Traverse City, Elk*  
*Rapids, Petoskey, Charlevoix,*  
*Boyne City, and Harbor Springs*  
Saginaw-Midland  
Southeast Michigan – *including*  
*Detroit - Grand Rapids - Lansing*  
Southern Michigan

### **Minnesota**

Duluth  
Mankato  
Minneapolis/St. Paul Metro –  
*including cities in Anoka Scott and*  
*Carver Counties*  
Moorhead  
Rochester

### **Mississippi**

Alcorn County  
Biloxi/Gulfport  
Jackson  
Memphis  
Pascagoula  
Tupelo

### **Missouri**

Branson  
Columbia  
Jefferson City  
Joplin  
Kansas City (KS-MO) Metro –  
*including Platte County*  
Lake of the Ozarks  
Springfield  
St. Louis Metro (IL-MO) – *including*  
*additional cities in Jefferson*  
*County*

### **Montana**

Billings  
Helena  
Missoula

### **Nebraska**

Lincoln (Lancaster County)  
Omaha

**Nevada**

Las Vegas Metro  
Reno/Lake Tahoe

**New Hampshire**

Lebanon  
Manchester  
Nashua  
The State of (partial) – including  
*Laconia, Keene, Lebanon,  
Manchester, Concord, Franklin,  
Portsmouth, Dover, Rochester, and  
Somersworth*

**New Jersey**

Camden Metro  
Newark Metro  
Southern New Jersey – including  
*Atlantic City/Cape May/  
Cumberland Metro*  
Trenton Metro – including *Ocean and  
Hunterdon Counties*

**New Mexico**

Albuquerque  
Las Cruces  
Santa Fe  
Taos Ski Resorts

**New York**

Binghamton  
Buffalo – including *Erie and Niagara  
Counties*  
Eastern New York – including *the  
Adirondack, Oneonta -  
Cooperstown, New York City  
Metro, Albany, Glen Falls,  
Schenectady, Troy*  
Elmira  
Ithaca  
Lake Placid  
Rochester - including *cities in  
Monroe County*  
Syracuse  
Utica  
Watertown

**North Carolina**

Asheville  
Charlotte Metro  
Fayetteville  
Greenville/New Bern  
Hickory  
Jacksonville  
Morgantown  
Outer Banks  
Raleigh-Durham Metro  
Wilmington  
Winston-Salem/Greensboro Metro

**North Dakota**

Fargo Metro  
Grand Forks

**Ohio**

Akron  
Columbus/Marysville Metro  
Cincinnati Metro – including *Butler  
County*  
Cleveland Metro – including *Geauga  
County*  
Dayton  
Lima  
Mansfield  
Parkersburg  
Portsmouth  
Steubenville  
Springfield  
Toledo (Lucas County)  
Youngstown

**Oklahoma**

Oklahoma City  
Tulsa

**Oregon**

Bend  
Corvallis  
Eugene  
Medford  
Portland/Salem Metro  
Seaside/Astoria/Cannon Beach

## Coverage Areas

---

### ***Pennsylvania***

Allentown  
 Eastern Pennsylvania  
 Erie  
 Gettysburg  
 Harrisburg  
 Lancaster  
 Philadelphia Metro  
 Reading  
 Southeastern Pennsylvania  
 Southwest Pennsylvania – *including  
 Pittsburgh and Washington County*  
 State College/University Park  
 Wilkes-Barre/Scranton  
 Williamsport  
 York

### ***Rhode Island***

Newport  
 Providence Metro

### ***South Carolina***

Beaufort  
 Charleston  
 Columbia  
 Greenville/Spartanburg – *including  
 additional cities in Greenville and  
 Spartanburg Counties*  
 Myrtle Beach Metro  
 Rock Hill Metro  
 Sumter/Florence

### ***South Dakota***

Rapid City  
 Sioux Falls

### ***Tennessee***

Chattanooga  
 Chester County  
 Franklin County  
 Johnson City/Kingsport/Bristol  
 Knoxville/Farragut Metro  
 Memphis Metro – *including Desoto  
 and Tunica Counties*  
 Nashville

### ***Texas***

Abilene  
 Amarillo  
 Austin Metro  
 Beaumont  
 Big Bend  
 Brownsville  
 Bryan/College Station  
 Corpus Christi  
 Dallas/Fort Worth Metro-Sherman –  
*including additional cities in  
 Grayson County*  
 El Paso  
 Houston Metro – *including additional  
 cities in Galveston County*  
 Laredo  
 Lawton

Longview  
 Lubbock  
 McAllen  
 Midland/Odessa Metro  
 Nacogdoches-Lufkin  
 San Angelo  
 San Antonio Metro  
 South Padre Island  
 Texarkana  
 Wichita Falls

### ***Utah***

Moab  
 Ogden  
 Park City  
 Salt Lake City Metro  
 St. George

### ***Vermont***

Rutland  
 State of (partial) – *including  
 Burlington, Montpelier*

### ***Virginia***

Washington D.C. detailed area –  
*including Alexandria, Arlington,  
 Fairfax, Falls Church, Fauquier  
 County, Fredericksburg City,  
 Manassas, and additional cities in  
 Loudon and Prince William  
 Counties*  
 Bristol

Charlottesville  
 Danville  
 Emporia  
 Lynchburg  
 Richmond Metro  
 Roanoke  
 Shenandoah National Park  
 Staunton-Waynesboro-Harrisonburg  
 Williamsburg/Norfolk/Virginia  
   Beach Metro – *including Charles City, Hopewell, Kent, and Prince George Counties*  
 Winchester

### **Washington**

Bellingham  
 Portland/Salem/Eugene  
 Seattle/Tacoma/Olympia Metro –  
   *including Island County*  
 Spokane-Coeur d'Alene  
 Tri-Cities  
 Whatcom  
   *Point Roberts (community)*  
 Yakima

### **West Virginia**

Charleston  
 Harper's Ferry Metro  
 Huntington  
 Morgantown  
 Parkersburg

### **Wisconsin**

Appleton  
 Beloit  
 Eau Claire  
 Green Bay  
 Janesville  
 Kenosha County  
 La Crosse  
 Lake Geneva  
 Madison  
 Manitowoc  
 Milwaukee Metro – *including Milwaukee, Ozaukee, Washington, and Waukesha Counties*  
 Neenah  
 Oshkosh  
 Racine  
 Sheboygan  
 Southeastern Wisconsin  
 Wausau

### **Wyoming**

Cheyenne  
 Grand Teton/Jackson  
 Jackson Ski Resorts

### **Puerto Rico Detailed Coverage Areas**

Arecibo  
 Bayamon  
 Cabo Rojo  
 Caguas  
 Canovanas  
 Carolina  
 Ceiba  
 Cidra  
 Dorado  
 Fajardo  
 Guayama  
 Guaynabo  
 Humacao  
 Juana Diaz  
 Juncas  
 Las Piedras  
 Loiza  
 Mayaguez  
 Ponce  
 Toa Alta  
 Toa Baja  
 Trujillo Alto  
 Yubacoa

### **Catano**

Catano  
 Fort Buchanan

## Coverage Areas

---

### ***Gurabo***

Celada  
Gurabo

### ***San Juan***

Hato Rey  
San Juan  
Santurce

### ***Canada Detailed Coverage Areas***

#### **Alberta**

Airdrie  
Banff  
Beaumont  
Calgary  
Calmar  
Canmore  
Chestermere  
Cochrane  
Crossfield  
Devon  
Edmonton  
Fort Saskatchewan  
Leduc  
Lethbridge  
Medicine Hat  
Red Deer  
Spruce Grove  
St. Albert  
Stony Plain  
Strathcona County

### **British Columbia**

#### ***Greater Vancouver***

Anmore  
Belcarra  
Bowen Island  
Burnaby  
Coquitlam  
Delta  
Langley  
Langley Twp  
Lions Bay  
Maple Ridge  
New Westminster  
North Vancouver  
North Vancouver District  
Pitt Meadows  
Port Coquitlam  
Port Moody  
Richmond  
Surrey  
Squamish  
Vancouver  
West Vancouver  
White Rock

#### ***Whatcom, WA***

Point Roberts (Community) *also  
listed in USA Washington St Cities*

**Fraser Valley**

Abbotsford  
Chilliwack  
Mission

**Nanaimo**

Lantzville  
Nanaimo  
Parksville  
Qualicum Beach

**Squamish-Lillooet**

Lillooet  
Pemberton  
Squamish  
Whistler

**Thompson-Nicola**

Kamloops

**Central Okanagan**

Kelowna  
Peachland

**Okanagan-Similkamen**

Penticton  
Summerland

**Victoria****Capital**

Central Saanich  
Colwood

Esquimalt  
Highlands  
Langford  
Metchosin  
North Saanich  
Oak Bay  
Saanich  
Sidney  
Sooke  
Victoria  
View Royal

**MANITOBA**

East St Paul  
Headingley  
West St Paul  
Winnipeg

**NEWFOUNDLAND AND  
LABRADOR****Newfoundland And Labrador**

Bauline  
Conception Bay South  
Flatrock  
Logy Bay-Middle Cove-Outer Cove  
Mt. Pearl  
Paradise  
Petty Harbour-Maddox Cove  
Portugal Cove-St Philip's  
Pouch Cove  
St. John's

Torbay  
Wabana

**Rimouski-Neigette**

Rimouski

**Rivière-du-Loup**

Rivière-du-Loup

**NOVA SCOTIA**

Halifax (*partial*)

**ONTARIO****Brant**

Brant  
Brantford

**Chatham-Kent**

Chatham-Kent

**Dufferin**

Amaranth  
East Garafraxa  
East Luther Grand Valley  
Melancthon  
Mono  
Mulmur  
Orangeville  
Shelburne

## Coverage Areas

---

### ***Durham***

Ajax  
 Brock  
 Clarington  
 Oshawa  
 Pickering  
 Scugog  
 Uxbridge  
 Whitby

### ***Elgin***

Aylmer  
 Bayham  
 Central Elgin  
 Dutton/Dunwich  
 Malahide  
 Southwold  
 St. Thomas  
 West Elgin

### ***Frontenac***

Central Frontenac  
 Frontenac Islands  
 Kingston  
 North Frontenac  
 South Frontenac

### ***Gatineau***

Gatineau

### ***Grey***

Blue Mountains  
 Chatsworth  
 Georgian Bluffs  
 Meaford  
 Grey Highlands  
 Hanover  
 Owen Sound  
 Southgate  
 West Grey

### ***Haldimand***

Haldimand

### ***Halton***

Burlington  
 Halton Mills  
 Milton  
 Oakville

### ***Hamilton***

Hamilton

### ***Kawartha Lakes***

Kawartha Lakes

### ***Lambton***

Brooke-Alvinston  
 Dawn-Euphemia  
 Enniskillen  
 Lambton Shores  
 Oil Springs

Petrolia  
 Plympton-Wyoming  
 Point Edward  
 Sarnia  
 St. Clair  
 Warwick

### ***Lanark***

Beckwith  
 Carleton Place  
 Drummond/North Elmsley  
 Lanark Highlands  
 Mississippi Mills  
 Montague  
 Perth  
 Smiths Falls  
 Tay Valley

### ***Leeds and Grenville***

Athens  
 Augusta  
 Brockville  
 Edwardsburgh/Cardinal  
 Elizabethtown-Kitley  
 Front of Yonge  
 Gananoque  
 Leeds and the Thousand Islands  
 Merrickville-Wolford  
 North Grenville  
 Prescott  
 Rideau Lakes  
 Westport

**Muskoka**

Bracebridge  
 Georgian Bay  
 Gravenhurst  
 Huntsville  
 Lake of Bays  
 Muskoka Lakes

**Middlesex**

Adelaide Metcalfe  
 London  
 Lucan Biddulph  
 Middlesex Centre  
 Newbury  
 North Middlesex  
 Southwest Middlesex  
 Strathroy-Caradoc  
 Thames Centre

**Niagara**

Fort Erie  
 Grimsby  
 Lincoln  
 Niagara-on-the-Lake  
 Niagara Falls  
 Pelham  
 Port Colborne  
 St Catharines  
 Thorold  
 Wainfleet  
 Welland  
 West Lincoln

**Norfolk**

Norfolk

**Northumberland**

Alnwick/Haldimand  
 Brighton  
 Cobourg  
 Cramahe  
 Hamilton Twp  
 Port Hope  
 Trent Hills

**Ottawa**

Ottawa

**Oxford**

Blandford-Blenheim  
 East Zorra-Tavistock  
 Ingersoll  
 Norwich  
 South-West Oxford  
 Tillsonburg  
 Woodstock  
 Zorra

**Peel**

Brampton  
 Caledon  
 Mississauga

**Perth**

North Perth  
 Perth East  
 Perth South  
 St. Mary's  
 Stratford  
 West Perth

**Prescott and Russell**

Alfred and Plantagenet  
 Casselman  
 Champlain  
 Clarence-Rockland  
 East Hawkesbury  
 Hawkesbury  
 Russell  
 The Nation

**Simcoe**

Adjala-Tosorontio  
 Barrie  
 Bradford West Gwillimbury  
 Clearview  
 Collingwood  
 Essa  
 Innisfil  
 Midland  
 New Tecumseth  
 Orillia  
 Oro-Medonte  
 Penetanguishene

## Coverage Areas

---

Ramara  
 Severn  
 Springwater  
 Tay  
 Tiny  
 Wasaga Beach

### *Stormont, Dundas, and Glengarry*

Cornwall  
 North Dundas  
 North Glengarry  
 North Stormont  
 South Dundas  
 South Glengarry  
 South Stormont

### *Toronto*

Toronto

### *Waterloo*

Cambridge  
 Kitchener  
 North Dumfries  
 Waterloo  
 Wellesley  
 Wilmot  
 Woolwich

### *Wellington*

Centre Wellington  
 Erin  
 Guelph  
 Guelph/Eramosa  
 Mapleton  
 Minto  
 Puslinch  
 Wellington North

### *York*

Aurora  
 East Gwillimbury  
 Georgina  
 King  
 Markham  
 Newmarket  
 Richmond Hill  
 Vaughan  
 Whitchurch-Stouffville

### *Windsor*

#### *Essex*

Amherstburg  
 Essex  
 Kingsville  
 Lakeshore  
 Lasalle  
 Leamington  
 Pelee  
 Tecumseh  
 Windsor

### *Inter-Town (partial) Coverage*

#### *Counties/Districts/Regional*

#### *Municipalities*

Brant  
 Bruce  
 Chatham-Kent  
 Dufferin  
 Elgin  
 Essex  
 Frontenac  
 Gray  
 Haldimand-Norfolk  
 Haliburton  
 Hastings  
 Huron  
 Kawartha Lakes  
 Lambton  
 Lanark

Leeds and Granville  
 Lennox and Addington  
 Middlesex  
 Muskoka  
 Northumberland  
 Oxford  
 Perth  
 Peterborough  
 Prescott and Russell  
 Prince Edward  
 Simcoe  
 Stormont, Dundas, and Glengarry  
 Waterloo  
 Wellington

## QUÉBEC

### Montreal-Laurentians

#### *Beauharnois-Salaberry*

Beauharnois  
 Salaberry-de-Valleyfield  
 Ste-Martine  
 St-Étienne-de-Beauharnois  
 St-Louis-de-Gonzague  
 St-Stanislas-de-Kostka  
 St-Urbain-Premier

#### *Deux-Montagnes*

Deux-Montagnes  
 Oka  
 Pointe-Calumet  
 St-Eustache  
 St-Joseph-du-Lac  
 Ste-Marthe-sur-le-Lac  
 St-Placide

#### *L'Assomption*

Charlemagne  
 L'Assomption  
 L'Épiphanie  
 L'Épiphanie Paroisse  
 Repentigny  
 St-Sulpice

### *La Riviere-du-Nord*

Prévost  
 St-Colomban  
 St-Hippolyte  
 St-Jérôme  
 Ste-Sophie

### *La Vallée-du-Richelieu*

Beloeil  
 Caringnan  
 Chambly  
 McMasterville  
 Mont-St-Hilaire  
 Otterburn Park  
 St-Antoine-sur-Richelieu  
 St-Basile-le-Grand  
 St-Charles-sur-Richelieu  
 St-Denis-sur-Richelieu  
 St-Jean-Baptiste  
 St-Marc-sur-Richelieu  
 St-Mathieu-de-Beloeil

### *LaJemmerais*

Calixa-Lavallée  
 Contrecoeur  
 St-Amable  
 Ste-Julie  
 Varennes  
 Verchères

### *Laval*

Laval

## Coverage Areas

---

### *Le-Haut-Richelieu*

Henryville  
Lacolle  
Mont-St-Grégoire  
Noyan  
St-Alexandre  
St-Blaise-sur-Richelieu  
St-Georges-de-Clarenceville  
St-Jean-sur-Richelieu  
St-Paul-de-L'Île-aux-Noix  
St-Sébastien  
St-Valentin  
Ste-Anne-de-Sabrevois  
Ste-Brigide-D'Iberville  
Venise-en-Québec

### *Le Haut-St-Laurent*

Dundee  
Elgin  
Franklin  
Godmanchester  
Havelock  
Hinchinbrooke  
Howick  
Huntingdon  
Ormstown  
St-Anicet  
St-Chrysostome  
Ste-Barbe  
Très-St-Sacrement

### *Les-Jardins-De-Napierville*

Hemmingford  
Hemmingford Village  
Napierville  
St-Bernard-de-Lacolle  
St-Cyprien-de-Châteauguay  
St-Édouard  
St-Jacques-le-Mineur  
St-Michel  
St-Patrice-de-Sherrington  
St-Rémi

### *Les Laurentides*

Amherst  
Arundel  
Barkmere  
Brèbeuf  
Huberdeau  
La Conception  
La Minerve  
Labelle  
Lac-Supérieur  
Lantier  
Mont-Tremblant  
Montcalm  
St-Faustin-Lac-Carré  
Ste-Agathe-des-Monts  
Ste-Lucie-des-Laurentides  
Val-David  
Val-des-Lacs  
Val-Morin

### *Les Moulins*

Mascouche  
Terrebonne

### *Les Pays-D'en-Haut*

Lac-des-Seize-Îles  
Morin-Heights  
Piedmont  
Ste-Adolphe-d'Howard  
St-Sauveur  
Ste-Adèle  
Ste-Anne-des-Lacs  
Ste-Marguerite-Estèrel  
Wentworth-Nord

### *Longueuil*

Boucherville  
Brossard  
Longueuil  
St-Bruno-de-Montarville  
St-Lambert

### *Mirabel*

Mirabel

### *Montcalm*

St-Alexis  
St-Alexis Paroisse  
St-Calixte  
Ste-Julienne  
Ste-Marie-Salomé  
St-Esprit

St-Jacques  
 St-Liguori  
 St-Lin -- Laurentides  
 St-Roch-de-l'Achigan  
 St-Roch-Ouest

### **Montreal**

Baie-D'Urfé  
 Beaconsfield  
 Côte-St-Luc  
 Dollard-des-Ormeaux  
 Dorval  
 Hampstead  
 Kirkland  
 L'Île -Dorval  
 Montréal  
 Montréal-Est  
 Montréal-Ouest  
 Mont-Royal  
 Pointe-Claire  
 Senneville  
 Ste-Anne-de-Bellevue  
 Westmount

### **Rimouski-Neigette**

Rimouski

### **Rivière-du-Loup**

Rivière-du-Loup

### **Roussillon**

Candiac  
 Chateauguy  
 Delson  
 La Prairie  
 Lery  
 Mercier  
 Ste-Catherine  
 St-Constant  
 St-Isidore  
 St-Mathieu  
 St-Philippe

### **Sherbrooke**

Sherbrooke

### **Therese-de-Blainville**

Blainville  
 Boisbriand  
 Bois-des-Filion  
 Lorraine  
 Rosemere  
 Ste-Therese

### **Vaudreuil-Soulanges**

Coteau-du-Lac  
 Hudson  
 Les Cèdres  
 Les Coteaux  
 L'Île-Cadieux  
 L'Île-Perrot  
 Notre-Dame-de-l'Île-Perrot

Pincourt  
 Pointe-des-Cascades  
 Pointe-Fortune  
 Rigaud  
 Riviere-Beaudette  
 St-Clet  
 Ste-Justine-de-Newton  
 St-Lazare  
 Ste-Marthe  
 St-Polycarpe  
 St-Telesphore  
 St-Zotique  
 Terrasse-Vaudreuil  
 Tres-St-Redempteur  
 Vaudreuil-Dorion  
 Vaudreuil-sur-le-Lac

### **Quebec**

#### **La Cote-de-Beaupré**

Beaupré  
 Boischatel  
 Château-Richer  
 L'Ange-Gardien  
 St-Ferréol-les-Neiges  
 St-Joachim  
 St-Louis-de-Gonzague-du-Cap-  
 Tourmente  
 Ste-Anne-de-Beaupré

## Coverage Areas

### *La Jacques-Cartier*

Fossambault-sur-le-Lac  
Lac-Beauport  
Lac-Delage  
Lac-St-Joseph  
Ste-Brigitte-de-Laval  
Ste-Catherine-de-la-Jacques-Cartier  
Shannon

### *L'Île-d'Orléans*

St-François- L'Île-d'Orléans  
St-Jean  
St-Laurent-de- L'Île-d'Orléans  
St-Pierre-de- L'Île-d'Orléans  
Ste-Famille  
Ste-Pétronille

### *Lévis*

Lévis

### *Québec*

L'Ancienne-Lorette  
Notre-Dame-des-Anges  
Québec  
St-Augustin-de-Desmaures

### **CANADA CONNECTOR ROADS**

The Cross-Canada Connector Road allows for travel between the provinces of British Columbia and Quebec in DCA 11. Major metropolitan city Points of Interest are also included.

### **Road Inclusion**

#### *Roads in the province of British Columbia*

Hwy-1/Trans Canada Hwy from Alberta/BC boundary to Vancouver detailed city  
Hwy-3/Crowsnest Hwy from Hwy-1/Trans Canada Hwy (Hope) to Hwy-5/Coquihalla Hwy (Hope)  
Hwy-5/Coquihalla Hwy (in Hope) to Hwy-1/Trans Canada Hwy (in Kamloops)  
Hwy-99 between Vancouver and Whistler

### *Roads in the province of Alberta*

Hwy-1/Trans Canada Hwy across whole province  
Hwy-1A from Cochrane to Canmore  
Hwy-1X from Hwy-1A to Hwy-1/Trans Canada Hwy  
Morley Road from Hwy-1/Trans Canada Hwy  
Hwy-3/Crowsnest Hwy (at Medicine Hat) to Lethbridge  
Hwy-4 (at Lethbridge) to 1-15 (U.S. border)  
Hwy-36 between Hwy-3 (in Taber) and Hwy-4 (in Warner)  
Hwy-3/Crowsnest Hwy (in Lethbridge) to Hwy-2 (in Fort Macleod)  
Hwy-2 (in Fort Macleod) to Hwy-1/Trans Canada Hwy (in Calgary)

### *Roads in the province of Saskatchewan*

Hwy-1/Trans Canada Hwy across whole province

**Roads in the province of Manitoba**

Hwy-1/Trans Canada Hwy across whole province  
 Hwy-100/Trans Canada Hwy in Winnipeg (partial beltway)  
 Hwy-75 from Hwy-100/Trans Canada Hwy (Winnipeg) south to link with 1-29 (U.S. border)

**Roads in the province of Ontario**

Hwy-69/Trans Canada Hwy from Muskoka district to Sudbury  
 Hwy-17/Trans Canada Hwy from Ottawa Detailed Area Coverage to Manitoba border  
 Hwy-17B at Sault Ste Marie to link with 1-75 (U.S. border)  
 Hwy-61 from Hwy-17 at Thunder Bay to link with US-61 (U.S. border)  
 Hwy-11 from Muskoka district to North Bay  
 Hwy-60 and Hwy-127 in Nipissing County

**Cities with available in-car traffic information**

The following cities currently have available continuously updated traffic information.

Akron, OH  
 Albany-Schenectady-Troy, NY  
 Atlanta-Sandy Springs-Marietta, GA  
 Austin-Round Rock, TX  
 Baltimore-Towson, MD  
 Birmingham-Hoover, AL  
 Boston-Cambridge-Quincy, MA-NH  
 Bridgeport-Stamford-Norwalk, CT  
 Buffalo-Niagara Falls, NY  
 Cape Coral-Fort Myers, FL  
 Charlotte-Gastonia-Concord, NC-SC  
 Chicago-Naperville-Joliet, IL-IN-WI  
 Cincinnati-Middletown, OH-KY-IN  
 Cleveland-Elyria-Mentor, OH  
 Columbus, OH  
 Dallas-Fort Worth-Arlington, TX  
 Dayton, OH  
 Deltona-Daytona Beach-Ormond Beach, FL  
 Denver-Aurora, CO  
 Des Moines-West Des Moines, IA  
 Detroit-Warren-Livonia, MI  
 Durham, NC  
 El Paso, TX  
 Fresno, CA

Grand Rapids-Wyoming, MI  
 Greensboro-High Point, NC  
 Greenville-Mauldin-Easley, SC  
 Hartford-West Hartford-East Hartford, CT  
 Honolulu, HI  
 Houston-Sugar Land-Baytown, TX  
 Indianapolis-Carmel, IN  
 Jacksonville, FL  
 Kansas City, MO-KS  
 Knoxville, TN  
 Lakeland, FL  
 Las Vegas-Paradise, NV  
 Little Rock-North Little Rock-Conway, AR  
 Los Angeles-Long Beach-Santa Ana, CA  
 Louisville-Jefferson County, KY-IN  
 Madison, WI  
 Memphis, TN-MS-AR  
 Miami-Fort Lauderdale-Pompano Beach, FL  
 Milwaukee-Waukesha-West Allis, WI  
 Minneapolis-St. Paul-Bloomington, MN-WI  
 Naples-Marco Island, FL  
 Nashville-Davidson-Murfreesboro-Franklin, TN  
 New Haven-Milford, CT  
 New Orleans-Metairie-Kenner, LA

## Coverage Areas

New York-Northern New Jersey-  
Long Island, NY-NJ-PA  
Ogden-Clearfield, UT  
Oklahoma City, OK  
Olympia, WA  
Omaha-Council Bluffs, NE-IA  
Orlando-Kissimmee, FL  
Palm Bay-Melbourne-Titusville, FL  
Philadelphia-Camden-Wilmington,  
PA-NJ-DE-MD  
Phoenix-Mesa-Scottsdale, AZ  
Pittsburgh, PA  
Port St. Lucie, FL  
Portland-Vancouver-Beaverton, OR-  
WA  
Providence-New Bedford-Fall River,  
RI-MA  
Provo-Orem, UT  
Raleigh-Cary, NC  
Richmond, VA  
Riverside-San Bernardino-Ontario,  
CA  
Rochester, NY  
Sacramento-Arden-Arcade-Roseville,  
CA  
Salt Lake City, UT  
San Antonio, TX  
San Diego-Carlsbad-San Marcos, CA  
San Francisco-Oakland-Fremont, CA  
San Jose-Sunnyvale-Santa Clara, CA  
Santa Rosa-Petaluma, CA

Sarasota-Bradenton-Venice, FL  
Scranton-Wilkes-Barre, PA  
Seattle-Tacoma-Bellevue, WA  
Spokane, WA  
Springfield, MA  
St. Louis, MO-IL  
Tampa-St. Petersburg-Clearwater, FL  
Trenton-Ewing, NJ  
Tucson, AZ  
Tulsa, OK  
Vallejo-Fairfield, CA  
Virginia Beach-Norfolk-Newport  
News, VA-NC  
Washington-Arlington-Alexandria,  
DC-VA-MD-WV  
Winston-Salem, NC

Coverage may expand to other cities as  
traffic information in those cities  
becomes available.

## Operation in Alaska, Hawaii, Canada, and Puerto Rico

### *Alaska, Hawaii, Canada, and Puerto Rico*

This section describes the differences in  
navigation system operation for vehicles  
delivered in Alaska, Hawaii, Canada,  
and Puerto Rico.

### **Map Coverage**

All roads displayed on the map screens  
are detailed coverage roads. Text related  
to “unverified” roads or areas are not  
applicable. The following topics do not  
apply:

- Unverified road descriptions (see  
page [6, 101](#))
- Cautions and pop-up windows related  
to unverified roads (see page [72](#))
- Setup entries that relate to turning on  
or off unverified routing (see  
page [102](#))
- See the coverage section for a list of  
islands with coverage (see page [128](#))

### Address and POI Entry Screens

The following differences occur for map, address, and POI selection:

- Entry of a destination address or POI on an island other than your current island may result in a screen caution message. This is normal because there are no “ferry” routes between islands available in the database.

### Setup Screen Differences

The **SETUP** screen differences are minor and are listed below. See the Setup section (page [89](#)) for additional information.

### Puerto Rico

If **Street Name Guidance** is set to **ON**, the street names will not be read out by voice guidance. This may change with future data updates.

## Frequently Asked Questions

### Map and Features, Voice Operation, Entering Addresses

Problem	Solution
Why does the Disclaimer screen need to be displayed every time I start the car? I am the only driver.	The Disclaimer screen reminds you and your guest drivers to always operate the navigation system in a safe manner.
I tried entering an address, but the city or street could not be found. Is there any other way to route to the location?	Some cities are lumped in with a major metro area. Try entering the street first. In rural “unverified” areas or new subdivisions, streets may be missing, or only partially numbered. Try selecting the destination directly from the map. See <i>By Map Input</i> on page 46.
When I enter an address, some letters become grayed out. Is this normal?	Yes. As you enter each letter in an address or a point of interest (POI), the system looks in the database to see what letters are possible and “grays out” letters that do not apply.
How do I delete Personal Addresses, Previous Destinations, or the Home Address?	This is done in the <b>SETUP</b> screen ( <b>Main Setup</b> ), under “Personal Information.” See page 90.
I cannot hear the navigation system voice.	<ol style="list-style-type: none"> <li>1) Ensure that <b>Volume</b> in the <b>SETUP</b> screen (<b>Main Setup</b>) is not <b>OFF</b>. See page 90.</li> <li>2) Go to “Basic Settings” in the <b>SETUP</b> screen (<b>Other</b>), and set <b>Voice Recognition Tutor</b> to <b>ON</b>. See page 99.</li> </ol>
The voice control system is having difficulty recognizing my voice commands.	Ensure that the vents are not blowing on the microphone on the ceiling, the vehicle is as quiet as possible, and you are using the correct command when speaking (see <i>Improving Voice Recognition</i> on page 14). Say “Help” at any screen to see a list of the applicable voice commands. If the system cannot recognize your command because of background noise, speak louder.
When the system pronounces the street name in the guidance command or reads the destination address, it sounds strange. What causes this?	The basic guidance phrase uses a studio-recorded voice, but the street name is pronounced by the system using a machine-generated voice. Consequently, the name may be mispronounced or sound strange at times.
When I drive at night, the screen is bright and will not switch to the night display mode. Why?	Verify the following: The nighttime dash brightness control is not set to maximum, and <b>Map Color</b> in <b>SETUP</b> is set to <b>Black</b> for Night. See <i>Switching Display Mode Manually</i> on page 111.

## Frequently Asked Questions

Problem	Solution
The daytime map screen is dark like the night display mode, and it is hard to see. Why?	Verify the following: The <b>Map Color</b> in SETUP is set to <b>White</b> for Day. See <i>Switching Display Mode Manually</i> on page <a href="#">111</a> .
How do I change or remove my PIN?	Go to “Personal Information” in the SETUP screen (Main Setup), and select <b>PIN Number</b> . Select <b>GO Home 1 PIN</b> or <b>GO Home 2 PIN</b> or <b>Address Book PIN</b> and enter your existing PIN. You then have the choice to change or remove the PIN. See page <a href="#">95</a> .
I forgot the PIN for Home. How do I reset it?	PINs are optional. See information regarding PINs on page <a href="#">95</a> . Your dealer can reset the PIN for you.
<b>CALL</b> is not available on the Calculate route to screen. Why?	Your phone is not paired to HFL, or if your phone is paired, it is in use; press the <b>HANG-UP</b> button.

### Traffic

Problem	Solution
My FM Traffic is missing and is not displaying properly. What is wrong?	<p>Verify the following:</p> <ul style="list-style-type: none"> <li>FM Traffic relies on a clear FM signal. If the radio has poor signal strength to traffic-broadcasting stations, traffic data may not be available.</li> <li>Check the traffic icon on the icon bar, and the icon options for traffic. See page <a href="#">61</a>.</li> <li>It is possible that there is a temporary technical problem with your metropolitan area traffic. You can call Honda Customer Service to see if there is an outage (page <a href="#">126</a>).</li> <li>If the situation persists, see your Honda dealer for assistance.</li> </ul>

## Frequently Asked Questions

### Guidance, Routing

Problem	Solution
The navigation system does not route me the same way I would go, or the way some other mapping program displays. Why is this?	The navigation system attempts to generate the optimum route. See <i>Changing the Route Preference</i> on page <a href="#">53</a> .
Why is the street I'm on not shown on the map? It has been here for more than a year.	The mapping database is constantly undergoing revision. See page <a href="#">128</a> for ways to obtain the latest detailed coverage information.
The vehicle position icon is not following the road and the "GPS icon" text in the upper left hand corner of the screen is white or missing.	<ul style="list-style-type: none"> <li>The GPS antenna (located in the dashboard) may be blocked by personal items. For best reception, remove items from the dashboard, such as radar detectors, cell phones, or loose articles.</li> <li>Metallic tinting or other aftermarket devices can interfere with the GPS reception. Please see your dealer. Also see <i>System Limitations</i> on page <a href="#">123</a>.</li> </ul>
I entered a destination, but the blue highlighted route and voice guidance stopped, or turned into a blue/pink dashed line before I got to my destination. Why is this?	Your route has entered an unverified area. See <i>Unverified Area Routing</i> on page <a href="#">101</a> .
The map rotates while I make turns. How can I stop this?	Select the North-up map orientation by voice, or by selecting <b>North-up</b> from the Map menu. See <i>Map Orientation</i> on page <a href="#">63</a> .
Sometimes, I cannot select between the North-up and Heading-up map orientations. Why is this?	The Heading-up map orientation can only be shown in the lower scales (1/20 - 1 mile scales). See <i>Map Scale</i> on page <a href="#">66</a> .
While driving to my destination, the "time to go" display sometimes increases, even though I am getting closer.	The "Time to go" is based on actual road speeds. However if your speed slows down when you encounter slower traffic, the system updates the "Time to go" based on your actual speed to give you a better estimate of arrival time.
The vehicle position icon on the map "lags" a short distance behind, especially when I arrive at an intersection. Is there anything wrong?	No. When at an intersection, the system is unaware of the width of the intersecting road. Large differences in vehicle position can indicate a temporary loss of the GPS signal. See <i>GPS Reception Issues</i> on page <a href="#">123</a> .

## Frequently Asked Questions

Problem	Solution
While I drive, my screen shows white dots (“breadcrumbs”) on it. What do they mean?	These are called “breadcrumbs.” If you drive more than 1/2 mile from mapped roads, the off-road tracking feature begins to function. See <i>Off-road Tracking</i> on page <a href="#">71</a> and <a href="#">109</a> .
How can I get rid of the white dots (“breadcrumbs”) from my screen?	Go to “Vehicle” in the <b>SETUP</b> screen (Other), and set <b>Off-road Tracking</b> to OFF, then return to the map. See page <a href="#">109</a> .
A road that I selected to avoid is being used when routing. What is wrong?	When you “draw” your area to avoid, make sure to select sections of roads that include at least one intersection. See page <a href="#">105</a> .
My elevation (shown when I display the current position) seems to fluctuate even though my elevation has not changed.	This is normal and due to errors in satellite position. The elevation can vary +/- 100 feet. See <i>System Initialization</i> on page <a href="#">121</a> .
My elevation is missing on the “current position” screen. Why?	If the GPS antenna cannot receive signals from at least four satellites, the elevation is not displayed. Try moving the vehicle into an open area. If the elevation is zero, or below sea level, the elevation is also not displayed.

## Frequently Asked Questions

---

### Update DVD, Coverage, Map Errors, Limitations

Problem	Solution
When is my city going to become part of a fully verified detailed coverage area?	The mapping database vendor is constantly revising map coverage. See page <a href="#">128</a> for ways to obtain the latest detailed coverage information.
Will the navigation system work outside North America?	The system contains maps for the 50 U.S. states, as well as for Canada and Puerto Rico. The system will not work in Mexico or overseas. See <i>Map Coverage</i> on page <a href="#">128</a> .
Can I play video DVDs in my navigation system?	No. The navigation system is designed only to read music discs and the update DVD provided with your vehicle. The system cannot read other mapping databases or video DVDs. If you experience any problems that you cannot resolve, please contact your dealer.
I found some errors in the database. How do I report them?	Minor errors are bound to occur in a large database. If you encounter major errors, you can report them following the instructions on page <a href="#">126</a> .

## Frequently Asked Questions

### Display, Accessories

Problem	Solution
The display appears dim when starting the car in really cold weather. Is there a problem?	No. This is normal, and it will become brighter after a few minutes.

### Rear Camera

Problem	Solution
When I shift gears, the rear camera image is delayed.	When shifting into or out of reverse, you may experience delays when the screen image switches between the navigation screen and the rear camera image. This is normal.
The rear camera image is too dark or too bright. How do I adjust the brightness?	While the camera image is displayed, use the rotating portion of the <b>Interface Dial (knob)</b> to adjust the brightness. This adjustment does not affect the <b>SETUP</b> screen brightness adjustments.

### Miscellaneous Other Questions

Problem	Solution
My clock frequently changes forward and backward by one hour. Why is this?	The clock is being automatically set based on your GPS location. If you live and work on the boundary between two time zones, you can turn off this feature. See page <a href="#">114</a> (Auto Time Zone).
When driving near a time zone border, the time changes even though I am not near the time zone. Why is this?	The time zone borders are only approximated in the system. Depending on the geography of the time zone boundary, the switch to a different zone can be erratic. See page <a href="#">114</a> (Auto Time Zone).
My state does not observe daylight saving time. How do I turn off this feature?	You can turn off this feature. See page <a href="#">114</a> (Auto Daylight).

## Frequently Asked Questions

Problem	Solution
Daylight saving time occurred, but the navigation system did not change time even though SETUP shows <b>Auto Daylight</b> is <b>ON</b> .	The automatic daylight saving time feature does not work in regions where the daylight saving time system is not adopted.
The navigation system automatic daylight time feature is not switching the navigation system clock on the correct dates. Why is this?	<p>1) Go to the <b>Clock adjustment</b> screen in SETUP and ensure that <b>Auto Daylight</b> is <b>ON</b>.</p> <p>2) The automatic daylight saving time feature does not work in regions where the daylight saving time system is not adopted.</p> <p>For more information, see page <a href="#">114</a>.</p>
The navigation system clock switched by one hour for no apparent reason. What can cause this?	You may be driving near a time zone boundary (see <i>Auto Daylight</i> on page <a href="#">114</a> ). See page <a href="#">114</a> (Auto Time Zone) for more information.
My battery was disconnected or went dead, and the navigation system is asking for a code. What do I do?	<p>The navigation system supports a VIN-recognition anti-theft system. If the correct navigation system is installed in the vehicle, you do not need to enter a code. Press and hold the audio power button for two seconds to resume system operation. The system may need a few moments to reacquire the GPS signal.</p> <p>If another system has been installed in the vehicle, you will need to enter the 5-digit security code.</p> <p>There should be a card in the glove box that contains the 5-digit security code. If you cannot find it, your dealer can help you out.</p>
I speak a language other than English. Are there any other languages available for the system?	Besides English, you may select Français or Español for your language setting.

Screen Error Message	Solution
System temp is too low. System will shut down until it warms up.	This message will appear briefly when the system temperature is too low, and it will turn off until the temperature warms up.
System temp is too high. System will shut down until it cools down.	This message will appear briefly when the system temperature is too high, and it will turn off until the temperature cools down.
HDD access error. System reset...	The temperature is below -22°F and the navigation system has difficulty reading the HDD. The system will start up when the temperature warms up.
Route has not been completed. Please try again from a different location.	This message will appear when you are routing to or from a place (new area) that is not in the database. Try planning a different route to or from a different location.*
Destination is not in this database version. Please set from map.	The destination was not found in the database. Try another destination nearby, or select the destination with the <b>Interface Dial</b> .*

\* If the error persists, or is shown for a wide area, see your dealer.

## Glossary

### Glossary

The following is a glossary of terms pertaining to the voice recognition navigation system.

**Avoid Area** - Areas you wish to avoid can be entered into the system, and will be avoided while routing.

**Breadcrumbs** - Off-road tracking dots that can be followed on the map to retrace your route back to a mapped (digitized) road. This function can be turned on/off in the **SETUP** screen (Other).

**Database** - This consists of the map data, and the POI (Points of Interest) data stored on the HDD.

**DCA** - Detailed Coverage Area. United States, Canada, and Puerto Rico are mapped. See page [128](#) for a list of these areas.

**Digitized Road** - A road that appears on the navigation screen. The road name will appear at the bottom of the navigation screen. If the user drives “off road,” the navigation system will display “breadcrumbs,” depending on how far you drive from a mapped road.

**Disclaimer Screen** - Screen containing cautionary information. It is meant to be read carefully and acknowledged by the client when using the navigation system.

**FAQ** - Frequently Asked Questions. See page [146](#) for a list of the client FAQs and troubleshooting information.

**GPS** - Global Positioning System. A network of 24 satellites in orbit around the earth. The navigation system can simultaneously receive signals from up to 12 satellites to accurately position the vehicle on the map.

**GPS Antenna** - Located in the dashboard, which is in the center of the dashboard. Electronic items operating in this general location can interfere with the GPS signal.

**HDD** - Hard Disc Drive. The primary data storage device containing your vehicle’s navigation and map software and uploaded wallpaper images. The HDD can also store audio files. See the Audio section of your Owner’s Manual for more information.

**HFL** - *Bluetooth*® HandsFreeLink®. Your vehicle is equipped with this feature, which uses Bluetooth technology as a wireless link between the vehicle and your Bluetooth-compatible cell phone.

**Icon** - Symbol representing Points of Interest (POI) that can be displayed on the map.

**Initialization** - This refers to the period needed to reacquire the GPS satellite orbital information whenever the navigation system power has been disconnected. This can take 10 to 45 minutes with the vehicle out in an open area.

**LCD** - Liquid Crystal Display. The navigation screen.

**Map Matching** - The received GPS information allows the navigation system to position the vehicle on the map. Map matching has occurred if the map screen is displaying the current street name in the bottom shaded area.

**Mic** - Abbreviation for the microphone used for receiving voice commands. It is located near the map lights in the ceiling.

**MW** - Maneuver Window. While en route to a destination, this window displays information about the next guidance point.

**Navi** - Abbreviation for the navigation system.

**North Pointer** - The map symbol showing the map orientation. See page 63.

**Off road** - This occurs when the user leaves mapped roads. Off-road tracking dots (“breadcrumbs”) are displayed if the option is enabled in the **SETUP** screen. The user can use them to return to a mapped road. The bottom of the navigation screen will say, “Not on a digitized road.”

**Outlying Areas** - These are rural areas that typically have only their main roads mapped. All other roads are shown in purple for reference only, since they have not been verified.

**PIN** - Personal Identification Number. A 4-digit number created by the client to protect personal information.

**POI** - Point of Interest. These are the businesses, schools, etc. found under **Place category** or **Place Name** on the **DEST** screen (**Dest. MENU 1**). See page 56.

**Polygon** - Colored areas on the map screen denoting parks, schools, etc. See Map Screen “features” for a list of the assigned colors. See page 56.

**Reminder** - Automatic pop-up Calendar message. See *Calendar* on page 81.

**Security Code** - Code needed to activate the navigation system or audio system. See *Entering the Security Code* on page 121.

**Unverified Streets** - These streets have not been verified for turn restrictions, one-way, etc. They are shown in purple on the map. Unverified streets may be missing from the map, shown in the wrong location, or have an incorrect name or address range.

## Glossary

---

**USB** - Universal Serial Bus. A computer hardware interface used to store and play audio files from USB devices, such as thumb drives or iPods. Image files can also be stored to USB devices and uploaded to the HDD. See the *Audio* section in your Owner's Manual for more information.

**Vehicle Speed Sensor** - Provides speed signal to the navigation system for moving the VP icon on the map.

**Verified Streets** - These streets consist of the detailed metropolitan coverage areas and all other inter-town connection roads. These roads are shown in black, red, or pink on the map.

**Voice Control** - See VR.

**VP** - Vehicle Position. When in map mode, this circular icon shows the vehicle position on the map. Push in on the **Interface Dial**, select **Map Information** on the Map menu, and then rotate the **Interface Dial Knob** to select **Current Location**. It shows the latitude, longitude, and elevation of your current position.

**VR** - Voice Recognition. This allows voice control of many of the navigation functions. The hardware consists of the microphone, voice control switch (**TALK/BACK** buttons), and the front speakers.

**Waypoint** - A temporary destination you may enter while en route (e.g., a gas station, ATM, etc.). See page [75](#).

**Yaw Rate Sensor** - Senses when the vehicle makes a turn, which makes the VP change direction on the map as you turn.

**Zagat Ratings** - Restaurant ratings information provided by Zagat Survey. See the INFO screen on page [87](#) for an explanation of the ratings.

## Global Commands

The system accepts these commands on any screen.

*Help* (displays the list of commands for current displayed screen)

*Display map* (displays the map screen)

*Display menu* (displays the DEST screen (Dest. MENU 1 or 2))

*Display information* (displays the INFO screen)

*Display audio screen* (displays the audio screen)

*Display phone* (displays the PHONE screen)

*Back* (to previous screen, same as **CANCEL** or **BACK** button)

*Cancel* (cancels current activity)

*What is today's date?* (reads the current date)

*What time is it?*

The “Voice Help” option on the INFO screen (Main Info.) lists many of the following controls. To avoid distraction while you are driving, the system can read the commands for you.

The commands are accessible at any time while driving and can be read to you so that you do not need to memorize all of them.

## Navigation Commands

### General Commands

The system accepts these commands on a map/guidance screen.

*Display menu* (if en route, displays the DEST screen (Route))

*Display destination*

*Display navigation* (if en route, displays the DEST screen (Route))

*Display map*

*Display map guide* (when en route, shows the next guidance point)

*Display information* (or just Information)

*Display phone*

*Display clock*

*Display wallpaper*

*Display audio screen*

*Cancel*

*Backward* (or just Back)

*What time is it?*

*What is today's date?* (reads the current date)

*Help* (reads list of Navigation General and Navigation Display Commands at any screen)

*Dial by number*

*Dial by voice tag*

## Voice Command Index

---

### Map Display Commands

The system accepts these commands on a map/guidance screen.

*Display current location* (shows current latitude, longitude, and elevation)

*Display:* (display the selected icon on the screen)

*ATM*

*gas station*

*restaurant*

*post office*

*grocery store*

*lodging* (hotel, motel)

*parking garage*

*parking lot*

*school*

*hospital*

*freeway exit information*

*traffic*

*traffic speeds*

*traffic icons*

*traffic incidents*

*Hide:* (hide the selected icon from the screen)

*ATM*

*gas station*

*restaurant*

*post office*

*grocery store*

*lodging* (hotel, motel)

*parking garage*

*parking lot*

*school*

*hospital*

*freeway exit information*

*traffic*

*traffic speeds*

*traffic icons*

*Go home 1*

*Go home 2*

*Register the current location* (puts current location in the personal Address Book)

### Map Scale Commands

The system accepts these commands on a map/guidance screen.

*Display north up*

*Display heading up*

*Display zoom in*

*Display zoom out*

*Display:* (the selected scale)

*1/20 mile (80 m) scale*

*1/8 mile (200 m) scale*

*1/4 mile (400 m) scale*

*1/2 mile (800 m) scale*

*1 mile (1600 m) scale*

*2 mile (3 km) scale*

*5 mile (8 km) scale*

*15 mile (24 km) scale*

*50 mile (80 km) scale*

*150 mile (240 km) scale*

*350 mile (560 km) scale*

*1000 mile (1600 km) scale*

*Max zoom in*

*Max zoom out*

**Find Place Commands**

The system accepts these commands on a map/guidance screen.

*Find nearest:* (find the nearest selection)

*Auto service center*

*ACURA dealers*

*HONDA dealers*

*Gas station*

*Hydrogen station*

*Auto parts & electronics*

*Auto repair & maintenance*

*Car wash & detailing*

*Motorcycle dealers*

*Other car dealers*

*Roadside assistance*

*Banking center*

*ATM*

*Bank*

*Check cashing*

*Currency exchange*

*Community*

*Business*

*City hall*

*Civic center*

*Convention center*

*Court house*

*Higher education*

*Library*

*Post office*

*School*

*Emergency room*

*Hospital*

*Police station*

*Veterinarian*

*Lodging*

*Bed & breakfast*

*Hotel*

*Resort*

*Leisure center*

*Amusement park*

*Golf course*

*Historical monument*

*Marina*

*Movie theater*

*Museum*

*Park*

*Performing arts*

*Sports complex*

*Tourist attraction*

*Restaurant*

*Zagat restaurant*

*American restaurant*

*Californian restaurant*

*Chinese restaurant*

*Café/Coffee shop*

*Continental restaurant*

*Fast food restaurant*

*French restaurant*

*German restaurant*

*Greek restaurant*

*Indian restaurant*

*Italian restaurant*

*Japanese restaurant*

*Korean restaurant*

*Mexican restaurant*

*Pizza*

*Seafood restaurant*

*Thai restaurant*

*Vegetarian restaurant*

*Vietnamese restaurant*

*Other restaurant*

*Shopping*

*Shopping area*

*Accessory store*

*Book store*

*Clothing store*

*Grocery store*

*Home improvement store*

*Mall*

*Office supply store*

*Pharmacy*

*Pet food store*

*Sewing store*

## Voice Command Index

*Shoe store*  
*Sporting goods store*  
*Toy store*  
*Travel center*  
*Airport*  
*Automobile club*  
*Bus station*  
*Camping*  
*Commuter rail station*  
*Ferry terminal*  
*Named place*  
*Park & ride*  
*Parking garage*  
*Parking lot*  
*Rental car agency*  
*Rest area*  
*Ski area*  
*Tourist information*  
*Train station*  
*Travel agency*  
*Truck stop*

### Route Commands

The system accepts these commands on a map/guidance screen when en route.

*How long to the destination?* (tells the time to destination)\*

*How far to the destination?* (tells the distance to destination)\*

*Display destination map* (shows the map of the destination)

*Display entire route* (adjusts the map scale so that the entire route is displayed)

\* These commands are not available if you scroll through the map while en route to a destination.

### Climate Control Commands

The system accepts these commands on most screens.

*Climate control automatic* (controls temperature to your selection)

*Climate control off*

*Air conditioner on\**

*Air conditioner off\**

*Climate control defrost on\**

*Climate control defrost off\**

*Rear defrost on\**

*Rear defrost off\**

*Climate control fresh air*

*Climate control recirculate*

*Climate control vent*

*Climate control bi-level* (vent and floor)

*Climate control floor*

*Climate control floor and defrost*

*Fan speed up*

*Fan speed down*

\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

*Fan speed # (#: 1-7) (for best voice control, lower the fan speed)*

*Rear lock on*

*Rear lock off*

*Temperature # degrees  
(#: 57 - 87 degrees F)*

*Driver temperature # degrees  
(#: 57 - 87 degrees F)*

*Passenger temperature # degrees  
(#: 57 - 87 degrees F)*

*Temperature up*

*Temperature down*

*Driver temperature up*

*Driver temperature down*

*Passenger temperature up*

*Passenger temperature down*

*Temperature max hot*

*Temperature max cold*

*Driver temperature max hot*

*Driver temperature max cold*

*Passenger temperature max hot*

*Passenger temperature max cold*

*Climate control sync on*

*Climate control sync off*

*Front climate control automatic*

*Front climate control off*

*Rear climate control automatic*

*Rear climate control off*

*Rear climate control vent*

*Rear climate control bi-level  
(vent and floor)*

*Rear climate control floor*

*Rear fan speed up*

*Rear fan speed down*

*Rear fan speed # (#: 1-5)*

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

## Audio Commands

### Radio Commands

The system accepts these commands on most screens.

*Audio on\**

*Audio off\**

*Radio on\**

*Radio off\**

*Radio select FM1*

*Radio select FM2*

*Radio select AM*

*Radio tune to # FM (#: frequency.  
Example Radio 95.5 FM)*

*Radio tune to # AM (#: frequency.  
Example Radio 1020 AM)*

*Radio seek up*

*Radio seek down*

*Radio next station*

*Radio preset # (#: 1-6)*

*Radio FM preset # (#: 1-6)*

*Radio FM1 preset # (#: 1-6)*

*Radio FM2 preset # (#: 1-6)*

*Radio AM preset # (#: 1-6)*

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

## Voice Command Index

*Radio auto select\**

*Radio scan\**

*Radio select XM1*

*Radio select XM2*

*XM channel # (#: 0-255)*

*XM channel up*

*XM channel down*

*XM category up*

*XM category down*

*XM preset # (#: 1-6)*

*XM1 preset # (#: 1-6)*

*XM2 preset # (#: 1-6)*

*XM scan\**

*XM category scan\**

*XM channel scan\**

*XM category mode*

*XM channel mode*

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

### NOTE:

*Radio volume levels cannot be controlled using voice control. Use the buttons on your steering wheel. See your Owner's Manual for more information.*

### Disc Commands

The system accepts these commands on most screens.

*DISC play*

*DISC play track # (#: 1-30)*

*DISC skip forward*

*DISC skip back*

*DISC track random\**

*DISC track repeat\**

*DISC track scan\**

*DISC folder up*

*DISC folder down*

*DISC folder random\**

*DISC folder repeat\**

*DISC folder scan\**

*DISC normal play* (resumes “Play” from the random-, repeat-, or scan-play)

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

### HDD Commands

The system accepts these commands on most screens.

*HDD play*

*HDD search* (activates Song By Voice™)

*HDD skip forward*

*HDD skip back*

*HDD album up\**

*HDD album down\**

*HDD genre up\**

*HDD genre down\**

*HDD artist up\**

*HDD artist down\**

*HDD track up*

*HDD track down*

*HDD playlist up\**

- \* These commands will be available in the corresponding playback mode. For example, the command “HDD artist up/down” works in the “artist” playback mode. For more information on the playback mode, see your Owner's Manual.
- \*\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

*HDD playlist down\**  
*HDD track random\*\**  
*HDD track repeat\*\**  
*HDD track scan\*\**  
*HDD normal play* (resumes “Play”  
 from the random-, repeat-, or scan-  
 play)  
*What/Who am I listening to?*  
*Who is this?*  
*What’s playing?*  
*Who’s playing?*  
*What album is this?*

\* These commands will be available in the corresponding playback mode. For example, the command “HDD artist up/down” works in the “artist” playback mode. For more information on the playback mode, see your Owner’s Manual.

\*\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

### USB Commands

The system accepts these commands on most screens.

*USB play*  
*USB play track #* (#:1-30)  
*USB skip forward*  
*USB skip back*  
*USB track random\**  
*USB track repeat\**  
*USB track scan\**  
*USB folder up*  
*USB folder down*  
*USB folder random\**  
*USB folder repeat\**  
*USB folder scan\**  
*USB normal play* (resumes “Play”  
 from the random-, repeat-, or scan-  
 play)

\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

### iPod Commands

The system accepts these commands on most screens.

*iPod play*  
*iPod search* (activates Song By  
 Voice™)  
*iPod skip forward*  
*iPod skip back*  
*iPod track shuffle\**  
*iPod album shuffle\**  
*iPod track repeat\**  
*iPod normal play* (resumes “Play”  
 from the shuffle- or repeat-play)  
*What/Who am I listening to?*  
*Who is this?*  
*What’s playing?*  
*Who’s playing?*  
*What album is this?*

\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

## Voice Command Index

### Bluetooth® Audio Commands

The system accepts these commands on most screens.

*BTA Bluetooth Audio play*  
*BTA Bluetooth Audio skip forward*  
*BTA Bluetooth Audio skip back*  
*BTA Bluetooth Audio group up*  
*BTA Bluetooth Audio group down*  
*BTA Bluetooth Audio pause*  
*BTA Bluetooth Audio resume*

#### NOTE:

*Bluetooth® audio commands may not work on some phones or Bluetooth® audio devices.*

### AUX Commands

The system accepts these commands on most screens.

*AUX play (or Auxiliary play)*

### Song By Voice™ Commands

The system accepts these commands on most screens.

*iPod Search* (activates Song By Voice™)  
*HDD Search* (activates Song By Voice™)  
*List Album* (specify album)  
*List Artist* (specify artist)  
*List Composer* (specify composer)  
*List Genre* (specify genre)  
*List Playlist* (specify playlist)  
*Play Album* (specify album)  
*Play Artist* (specify artist)  
*Play Composer* (specify composer)  
*Play Genre* (specify genre)  
*Play Playlist* (specify playlist)  
*Play Song* (specify song)  
*What/Who am I listening to?*  
*Who is this?*  
*What's playing?*  
*Who's playing?*  
*What album is this?*

#### NOTE:

*Song By Voice™ commands are available for tracks stored in the HDD or iPod.*

### Rear Radio Commands

The system accepts these commands on most screens.

*Rear audio on\**  
*Rear audio off\**  
*Rear radio on\**  
*Rear radio off\**  
*Rear radio select FM1*  
*Rear radio select FM2*  
*Rear radio select AM*  
*Rear radio tune to # FM*  
 (#: frequency. Example Radio 95.5 FM)  
*Rear radio tune to # AM*  
 (#: frequency. Example Radio 1020 AM)  
*Rear radio seek up*  
*Rear radio seek down*  
*Rear radio next station*  
*Rear radio preset #* (#: 1-6)  
*Rear radio FM preset #* (#: 1-6)  
*Rear radio FM1 preset #* (#: 1-6)  
*Rear radio FM2 preset #* (#: 1-6)  
*Rear radio AM preset #* (#: 1-6)

\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

*Rear radio auto select\**

*Rear radio scan\**

*Rear radio select XM1*

*Rear radio select XM2*

*Rear XM channel # (#: 0-255)*

*Rear XM channel up*

*Rear XM channel down*

*Rear XM category up*

*Rear XM category down*

*Rear XM preset # (#: 1-6)*

*Rear XM1 preset # (#: 1-6)*

*Rear XM2 preset # (#: 1-6)*

*Rear XM scan\**

*Rear XM category scan\**

*Rear XM channel scan\**

*Rear XM category mode*

*Rear XM channel mode*

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

#### **NOTE:**

*Radio volume levels cannot be controlled using voice control. Use the buttons on your steering wheel. See your Owner's Manual for more information.*

### **Rear CD Commands**

The system accepts these commands on most screens.

*Rear CD play*

*Rear CD play track # (#: 1-30)*

*Rear CD skip forward*

*Rear CD skip back*

*Rear CD track random\**

*Rear CD track repeat\**

*Rear CD track scan\**

*Rear CD normal play* (resumes "Play" from the random-, repeat-, or scan-play)

*Rear CD folder up*

*Rear CD folder down*

*Rear CD folder random\**

*Rear CD folder repeat\**

*Rear CD folder scan\**

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

### **Rear DVD Commands**

The system accepts these commands on most screens.

*Rear DVD play*

*Rear DVD pause*

*Rear DVD title up*

*Rear DVD title down*

*Rear DVD chapter up*

*Rear DVD chapter down*

*Rear DVD title # (#: 1-30)*

*Rear DVD chapter # (#: 1-30)*

*Rear DVD title #1 chap. #2 (#1, #2: 1-30)*

*Rear DVD play track # (#: 1-30)*

*Rear DVD skip forward*

*Rear DVD skip back*

*Rear DVD track random\**

*Rear DVD track repeat\**

*Rear DVD track scan\**

*Rear DVD normal play* (resumes "Play" from the random-, repeat-, or scan-play)

*Rear DVD folder random\**

*Rear DVD folder repeat\**

*Rear DVD folder scan\**

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

## Voice Command Index

---

### **Rear HDD Commands**

The system accepts these commands on most screens.

*Rear HDD play*

*Rear HDD skip forward*

*Rear HDD skip back*

*Rear HDD album up*

*Rear HDD album down*

*Rear HDD genre up*

*Rear HDD genre down*

*Rear HDD artist up*

*Rear HDD artist down*

*Rear HDD track up*

*Rear HDD track down*

*Rear HDD playlist up*

*Rear HDD playlist down*

*Rear HDD track random\**

*Rear HDD track repeat\**

*Rear HDD track scan\**

*Rear HDD normal play* (resumes  
“Play” from the random-, repeat-,  
or scan-play)

\* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

**Rear iPod Commands**

The system accepts these commands on most screens.

*Rear iPod play*

*Rear iPod skip forward*

*Rear iPod skip back*

*Rear iPod track shuffle\**

*Rear iPod album shuffle\**

*Rear iPod track repeat\**

*Rear iPod normal play* (resumes “Play” from the shuffle- or repeat-play)

- \* Repeating these commands switches (toggles) the function between On and Off, so the action that occurs may not match the command you speak.

**Rear AUX Commands**

The system accepts these commands on most screens.

*Rear AUX play* (or *Auxiliary play*)

**Phone Commands**

The system accepts these commands only on the PHONE screens.

*Dial #*

*Call* (voice tag)

*Call History*

*Phonebook*

*More Speed Dial*

*Phone Setup*

**SETUP Screen (Main Setup) Commands**

The system accepts these commands on the SETUP screen (Main Setup). (For the SETUP screen (Other), simply say what is written on the screen, and follow the voice prompts)

*Brightness up*

*Brightness down*

*Brightness minimum/min.*

*Brightness maximum/max.*

*Contrast up*

*Contrast down*

*Contrast minimum/min.*

*Contrast maximum/max.*

*Black level up*

*Black level down*

*Black level minimum/min.*

*Black level maximum/max.*

*Volume up*

*Volume down*

*Volume minimum/min.*

*Volume maximum/max.*

*Volume off*

*Interface dial feedback off*

*Interface dial feedback auto*

*Interface dial feedback on*

## Voice Command Index

---

### On-Screen Commands

The system accepts these commands on any screen. There are over 100 on-screen commands. Just say what is written on the screen (this excludes listed items).

*Next* (or “Down”)

*Previous* (or “Up”)

*Return*

*OK* (except at the Disclaimer screen)

*Delete*

### On-Screen Spelling Assist

When speaking the letters or using “spell mode,” you can substitute the name that represents each letter or symbol. This improves recognition. For example:


- To select the letter “A”:  
Say “**A**,” “**Alpha**,” or “**Apple**.”
- To select the letter “M”:  
Say “**M**,” “**Mary**,” or “**Mike**.”

The system will respond to the names shown in the following tables.

### NOTE:

- *The system will only respond to the names shown in the following tables.*
- *To select the letter “A,” you can also; select the “A” by using the **Interface Dial**.*
- *To select the number “1,” say “One” or “Number One,” or select the “1” by using the **Interface Dial**.*
- *To select the symbol “- (hyphen),” say “Hyphen” or “Symbol Hyphen,” or select the “-” by using the **Interface Dial**.*
- *When selecting letters using the voice control system, a confirmation box may pop up to confirm the letter.*


## Letters Assist Definitions:

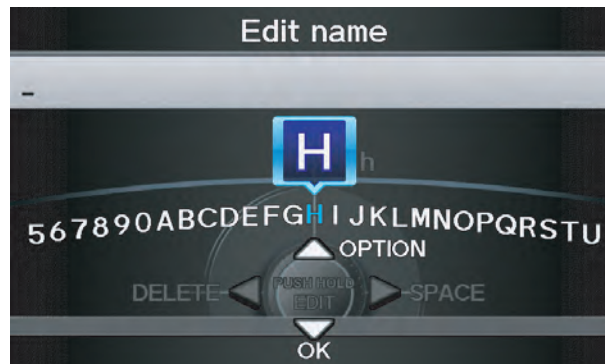

Say	Or say "..."	Say	Or say "..."	Say	Or say "..."	Say	Or say "..."
<b>A</b>	Alpha/Apple	<b>H</b>	Hotel/Henry	<b>O</b>	Oscar	<b>V</b>	Victor
<b>B</b>	Bravo/Boy	<b>I</b>	India/Igloo	<b>P</b>	Papa/Paul	<b>W</b>	Whiskey/William
<b>C</b>	Charlie	<b>J</b>	Juliet/John	<b>Q</b>	Quebec/Queen	<b>X</b>	X-ray
<b>D</b>	Delta/Dog	<b>K</b>	Kilo/King	<b>R</b>	Romeo/Robert	<b>Y</b>	Yankee/Yellow
<b>E</b>	Echo/Edward	<b>L</b>	Lima/Larry	<b>S</b>	Sierra/Sam	<b>Z</b>	Zulu/Zebra
<b>F</b>	Foxtrot/Frank	<b>M</b>	Mike/Mary	<b>T</b>	Tango/Tom		
<b>G</b>	Golf/George	<b>N</b>	November/Nancy	<b>U</b>	Uniform/Uncle		

# Voice Command Index

## Symbol Assist Definitions:

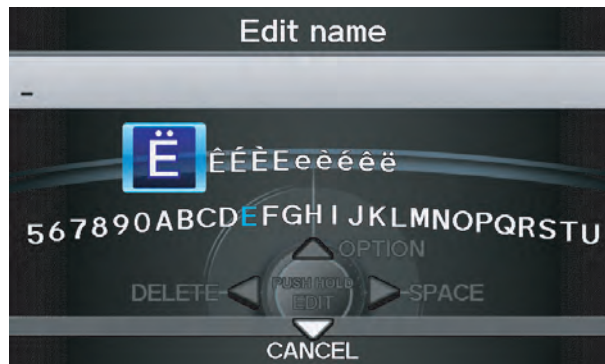


Symbols	Say “...” or “Symbol ...”	Symbols	Say “...” or “Symbol ...”	Symbols	Say “...” or “Symbol ...”
À	A grave	î	I circumflex	_	Underscore
Â	A circumflex	ï	I umlaut	`	Back quote
Ä	A umlaut	ô	O circumflex	,	Comma
Ç	C cedilla	û	U grave	.	Dot
È	E grave	Û	U circumflex	?	Question mark
É	E acute	Ü	U umlaut	:	Colon
Ê	E circumflex	@	At sign	;	Semicolon
Ë	E umlaut	^	Caret	+	Plus
ì	I grave	*	Asterisk		

### NOTE:

The term “grave” (used for symbols À, È, ì, and Û) is pronounced like “save.”

## Numbers and Additional Symbol Assist Definitions:

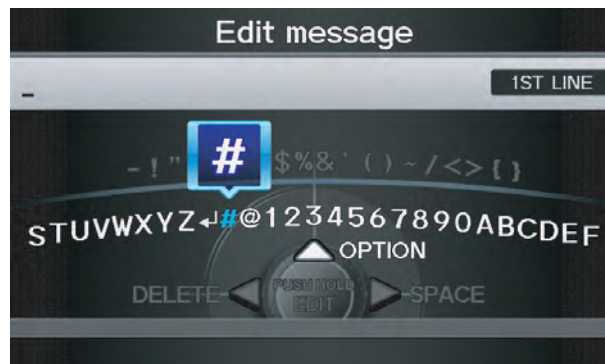

Numbers	Say “...” or “Number ...”	Symbols	Say “...” or “Symbol ...”	Symbols	Say “...” or “Symbol ...”
1	One	-	Hyphen	~	Tilde
2	Two	!	Exclamation point	/	Slash
3	Three	”	Double quote	<	Less than
4	Four	#	Pound	>	Greater than
5	Five	\$	Dollar	{	Open brace
6	Six	%	Percent	}	Close brace
7	Seven	&	Ampersand	↵	Enter
8	Eight	'	Apostrophe		
9	Nine	(	Open parenthesis		
0	Zero	)	Close parenthesis		

# Index

## A

Add to Address Book .....	52
Add to Dest. List .....	52
Adding Waypoint .....	75
Address .....	28, 29, 92
Address Book .....	28, 34, 90
Address Book PIN .....	95
Advanced .....	39
AUDIO button .....	11
Auto Daylight .....	114
Auto Service .....	39
Auto Time Zone .....	114
AUX Commands .....	164
Avoid Streets .....	74

## B

BACK button .....	13
Banking .....	39
Basic Settings .....	99
Black Level .....	89
Bluetooth® Audio Commands .....	164
Bluetooth® HandsFreeLink® .....	19
Breadcrumbs .....	20, 56, 71
Brightness .....	89
By Address .....	29
By Address Book .....	34
By Coordinate .....	44

By Go Home 1 or 2 .....	51
By Intersection .....	46
By Map Input .....	46
By Place Category .....	37
By Place Name .....	36
By Place Phone Number .....	43
By Previous Destination .....	35
By ZAGAT® 2010 .....	43

## C

Calculator .....	85
Calendar .....	19, 81
Call .....	19, 52
CANCEL button .....	11
Cancel Route .....	58, 74
Category .....	28, 37, 93
Change Route Preference .....	53, 74
Change State .....	29, 46
Changing the Route .....	73
Changing Your Destination .....	77
City .....	30, 48
City Vicinity .....	41
Clear Personal Data .....	118
Climate Control Commands .....	160
Clock Adjustment .....	114
Clock Format .....	115
Clock Type .....	115
Color .....	110

Community .....	39
Continental USA .....	50
Contrast .....	89
Convert (Unit) .....	85
Correct Vehicle Position .....	109
Coverage Areas .....	128
Current Location .....	21, 64
Current Position .....	47, 92
Current Street .....	6
Customer Assistance .....	126

## D

Database Limitations .....	124
Delete Previous Destinations .....	96
Delete Waypoints .....	76
DEST/ROUTE button .....	10
Destination .....	28, 52, 77
Destination Icon .....	67
Destination List .....	76
Destination Map .....	54
Detailed Coverage Areas .....	128, 134
Detour .....	74
Directions .....	59
Disc Commands .....	162
Display Mode button .....	11
Driving to Your Destination .....	52

**E**

Edit Avoid Area.....	105
Edit Waypoint Search Area.....	107
Edit/Delete Address .....	92, 94
Emergency .....	39
Entering a Destination .....	28
Entering an Address .....	91
Entering Security Code.....	121
Entering the Street Number.....	34
Entering Your Schedule.....	82
Error Message.....	153
Exit Info .....	60

**F**

Fav. Subcategory .....	38
Find Nearest .....	58
Find Place Commands .....	159
Frequently Asked Questions .....	146

**G**

General Commands.....	157
Getting Started.....	10
Global Commands .....	157
Glossary .....	154
Go Home 1 or 2 .....	28, 51
Go Home 1 PIN .....	96

Go Home 2 PIN .....	96
Going Off the Route.....	71
GPS Initialization.....	121
Guidance Menu.....	58, 59
Guidance Mode.....	108
Guidance Screen .....	57
Guidance Screen Interruption.....	108

**H**

HDD Commands.....	162
Home Address .....	94
Honda Automobile Customer Service .....	126
Hotel/Motel (Lodging) .....	39

**I**

Icon Bar .....	61
Incident Icons .....	68
INFO button .....	10, 79
INFO Screen (Main Info.).....	79
INFO Screen (Other) .....	84
Interface Dial .....	11
Interface Dial Feedback.....	90
Interface Dial knob.....	11
Intersection.....	29, 46
iPod Commands.....	163

**K**

Key to ZAGAT Ratings .....	87
----------------------------	----

**L**

Landmark Icons .....	67
Language.....	113
Leisure .....	39
Lodging (Hotel/Motel).....	39
Lower Display .....	12

**M**

Map Color .....	111
Map Coverage.....	128
Map Data Update Status .....	86
Map Display Commands.....	158
Map Information .....	58, 61
Map Input.....	29, 46
Map Legend.....	65
Map Matching.....	122
Map Menu .....	58
Map Orientation .....	63
Map Scale.....	66
Map Scale Commands .....	158
Map Screen.....	20, 56
MAP/GUIDE button.....	10, 57
Menu Color .....	111

# Index

Microphone .....13  
 Multi-view Rear Camera .....119  
 Music Search .....97

## N

Name .....28, 36  
 Navigation Commands .....157

## O

Off-road Tracking .....71, 109  
 On-Screen Commands .....168  
 On-Screen Spelling Assist .....168

## P

Personal Information .....90  
 PHONE button .....10  
 Phone Commands .....167  
 Phone Features .....88  
 Phone Number .....28, 43  
 Phonetic Modification .....98  
 PIN Number .....95  
 Place Name .....28, 36, 41, 92  
 Previous Destination .....28, 35, 92, 96

## R

Radio Commands .....161  
 Read List .....40  
 Rear AUX Commands .....167  
 Rear CD Commands .....165  
 Rear DVD Commands .....165  
 Rear HDD Commands .....166  
 Rear iPod Commands .....167  
 Rear Radio Commands .....164  
 Recalculation .....71, 100  
 Reporting Errors .....126  
 Rerouting .....100  
 Reset Factory Default .....117  
 Restaurant .....39, 40  
 Route .....52, 54, 71, 73  
 Route Commands .....160  
 Route Preference .....53  
 Routing & Guidance .....100

## S

Save Current Location .....64  
 Scenic Road Information .....85  
 Schedule .....82  
 Screen .....12  
 Search by Keyword .....42  
 Security Code .....121  
 Selecting the City .....30, 48

Selecting the State .....29, 46  
 Selecting the Street .....32, 46  
 SETUP Screen (Main Setup) .....89  
 SETUP Screen (Main Setup)  
   Commands .....167  
 SETUP Screen (Other) .....97  
 Shopping .....39  
 Show Icon on Map .....61  
 Single-screen Mode .....60  
 Song By Voice™ .....97  
 Song By Voice™ Commands .....164  
 Sort by Distance to Travel .....41  
 Split-screen Mode .....60  
 State .....29, 46, 49  
 Street .....32, 46  
 Street Name Guidance .....108  
 Switching Display Mode .....111, 112  
 System Controls .....10  
 System Function Diagram .....27  
 System Information .....86  
 System Initialization .....121  
 System Limitations .....123  
 System Setup .....89  
 System Start-up .....18  
 System/Device Information .....86

**T**

TALK button .....	13
Time Adjustment .....	115
Traffic .....	22
Traffic Display Legend.....	22
Traffic Incidents.....	25, 58, 80
Travel .....	39
Trip Computer .....	79
Troubleshooting.....	153

**U**

Unit Conversion.....	85
Units (mile or km).....	99
Unverified Area Routing .....	102
Unverified Street.....	6
Update DVD.....	127
Using the Voice Control System .....	14

**V**

Vehicle.....	109
Verified Street .....	6
View Routes .....	53
Visiting Your Dealer .....	127
Voice .....	58
Voice Command Index.....	157
Voice Control Basics.....	13

Voice Guidance .....	55
Voice Help .....	83
Voice Recognition Tutor .....	99
Voice Recognition, Improving .....	14
Volume .....	90

**W**

Wallpaper Settings .....	113
Wallpaper Type .....	113
Waypoints .....	75

**Z**

ZAGAT® 2010.....	43
------------------	----

## END USER LICENSE AGREEMENT

You have acquired a device ("DEVICE") that includes software licensed by Alpine Electronics, Inc. (collectively "ALPINE") from an affiliate of Microsoft Corporation (collectively "MS"). Those installed software products of MS origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE INSTEAD, PROMPTLY CONTACT ALPINE FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

- GRANT OF SOFTWARE LICENSE,  
This EULA grants you the following license:  
You may use the SOFTWARE only on the DEVICE.
- NOT FAULT TOLERANT.  
THE SOFTWARE IS NOT FAULT TOLERANT. ALPINE HAS INDEPENDENTLY DETERMINED HOW TO USE THE SOFTWARE IN THE DEVICE, AND MS HAS RELIED UPON

ALPINE TO CONDUCT SUFFICIENT TESTING TO DETERMINE THAT THE SOFTWARE IS SUITABLE FOR SUCH USE.

- NO WARRANTIES FOR THE SOFTWARE.  
THE SOFTWARE is provided "AS IS" and with all faults. THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY, AND EFFORT (INCLUDING LACK OF NEGLIGENCE) IS WITH YOU. ALSO, THERE IS NO WARRANTY AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE OR AGAINST INFRINGEMENT. IF YOU HAVE RECEIVED ANY WARRANTIES REGARDING THE DEVICE OR SOFTWARE THOSE WARRANTIES DO NOT ORIGINATE FROM, AND ARE NOT BINDING ON, MS.
- NO LIABILITY FOR CERTAIN DAMAGES.  
EXCEPT AS PROHIBITED BY LAW, MS SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. IN NO EVENT SHALL MS BE LIABLE FOR ANY AMOUNT IN EXCESS OF U.S. TWO HUNDRED FIFTY DOLLARS (U.S. \$250.00).
- SPEECH RECOGNITION.  
If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an

inherently statistical process and that recognition errors are inherent in the process. Neither ALPINE nor its suppliers shall be liable for any damages arising out of errors in the speech recognition process.

- LIMITATIONS ON REVERSE ENGINEERING, DECOMPILE, AND DISASSEMBLY  
You may not reverse engineer, decompile, or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation.
- ADDITIONAL SOFTWARE/SERVICES.  
The SOFTWARE may permit ALPINE, MS, Microsoft Corporation or their affiliates to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-base service components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").
  - If ALPINE provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.
  - If MS, Microsoft Corporation or their affiliates make available Supplemental Components, and no other EULA terms are provided, then the terms of this EULA shall apply, except that MS, Microsoft Corporation or affiliate entity providing the Supplemental Component(s) shall be licensor of the Supplemental Component(s).

- ALPINE, MS, Microsoft Corporation and their affiliates reserve the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.
- **RECOVERY MEDIA.**  
If SOFTWARE is provided by ALPINE on separate media and labeled “Recovery Media” you may use the Recovery Media solely to restore or reinstall the SOFTWARE originally installed on the DEVICE.
- **UPGRADES.**  
If the SOFTWARE is provided by ALPINE separate from the DEVICE on separate media or via web download or other means, and is labeled “For Upgrade Purposes Only” you may install one (1) copy of such SOFTWARE onto the DEVICE as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.
- **TERMINATION.**  
Without prejudice to any other rights, ALPINE or MS may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.
- **INTELLECTUAL PROPERTY RIGHTS.**  
All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and “applets,” incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the

SOFTWARE, are owned by MS, Microsoft Corporation, their affiliates or suppliers. The SOFTWARE is licensed, not sold.  
You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content. All rights not specifically granted under this EULA are reserved by MS, Microsoft Corporation, their affiliates and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

- **TRADEMARKS.**  
This EULA does not grant you any rights in connection with any trademarks or service marks of ALPINE MS, Microsoft Corporation, their affiliates or suppliers.
- **PRODUCT SUPPORT.**  
Product support for the SOFTWARE is not provided by MS, its parent corporation Microsoft Corporation, or their affiliates or subsidiaries. For product support, please refer to ALPINE support number provided in the documentation for the DEVICE.  
Should you have any questions concerning this EULA, or if you desire to contact ALPINE for

any other reason, please refer to the address provided in the documentation for the DEVICE.

- **SOFTWARE TRANSFER ALLOWED BUT WITH RESTRICTIONS.**  
You may permanently transfer rights under this EULA only as part of a permanent sale or transfer of the Device, and only if the recipient agrees to this EULA. If the SOFTWARE is an upgrade, any transfer must also include all prior versions of the SOFTWARE.
- **EXPORT RESTRICTIONS.**  
You acknowledge that SOFTWARE is of US-origin. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and country destination restrictions issued by U.S. and other governments. For additional information on exporting the SOFTWARE, see <http://www.microsoft.com/exporting/>

---

*As required by the FCC:  
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

*Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

*This device complies with Industry Canada Standard RSS-210. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference that may cause undesired operation of the device.*