

MODEL/YEAR	DATE OF ISSUE	BULLETIN NUMBER
MODÈLE /ANNÉE	DATE EN VIGUEUR	NUMÉRO DU BULLETIN
SEE BELLOW	MAY 31, 2021	H-1-21

## AIMING DRIVING SUPPORT SYSTEMS

## **APPLIES TO**

All models with the millimeter wave radar, FCW/LDW camera, multipurpose camera, LaneWatch™ camera, and blind spot information radar.

#### **INTRODUCTION**

Many Honda vehicles have advanced safety driving support systems to help warn drivers and mitigate hazards. It is very important to be familiar with these systems and know how to properly aim the camera or radar units. This job aid covers the function of each driving support system, the tools needed to properly aim the camera or radar unit, general requirements for aiming, and troubleshooting tips.


System	Abbreviation	Description
Adaptive Cruise Control	ACC	This system helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead. For models with the added low speed follow (LSF) feature, if the vehicle ahead slows to a stop, the vehicle with LSF will slow down and come to a stop.
Auto High-Beam	АНВ	This system can automatically switch the headlights from low beam to high beam using the multipurpose camera, depending on road conditions, oncoming vehicles, and vehicles ahead.
Blind Spot Information	BSI	This system can detect vehicles in specified alert zones next to the vehicle, particularly in harder-to-see areas commonly known as blind spots.
Collision Mitigation Braking System™	CMBS™	This system alerts you when there is a possibility of a frontal collision with a vehicle or pedestrian detected ahead. It also reduces vehicle speed to help minimize collision severity if a collision appears unavoidable.
Cross Traffic Monitor	СТМ	This system monitors the rear corner areas using the BSI radar units when reversing and alerts you if a vehicle approaching from a rear corner is detected.
Forward Collision Warning	FCW	This system alerts you when it determines there is a possibility of a frontal collision with a vehicle detected ahead.
Lane Departure Warning	LDW	This system alerts you when it determines the vehicle may be unintentionally crossing over detected lane markings.

System	Abbreviation	Description
Lane Keeping Assist System	LKAS	This system provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane.
Road Departure Mitigation	RDM	This system detects if the vehicle is drifting too close to the side of the road without a turn signal and can provide mild steering input to keep the vehicle on the road or braking to help keep it leaving the roadway entirely.
LaneWatch™	LW	This system lets you check the passenger side rear areas on the audio or audio-navigation screen when the right turn signal is activated.

## **COMPONENT LOCATION**


#### Millimeter Wave Radar

In general, the millimeter wave radar is mounted directly behind or below the front Honda emblem. On some models, it is mounted in the lower center area of the front bumper lower grille or to the side, behind the front bumper side trim.

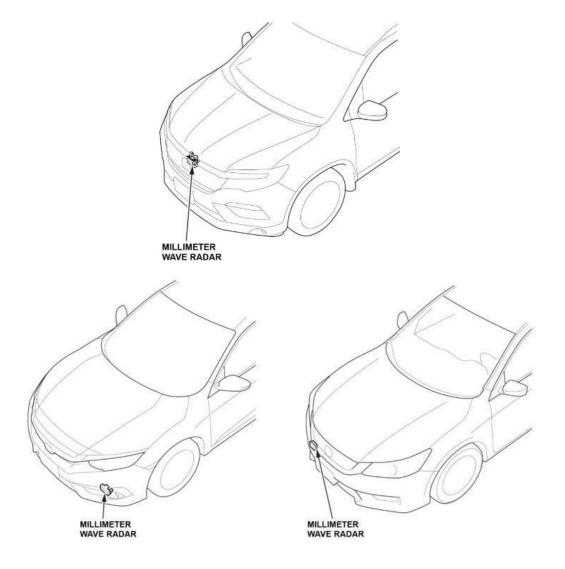


## Multipurpose, FCW/LDW Cameras

Though different in function and control, the multipurpose or FCW/LDW camera is mounted right above the rearview mirror. Camera types will differ by model and year.

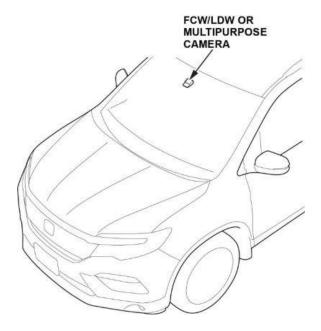


#### **BSI Radar**

The BSI radar units are installed on the left and right sides of the rear body panel behind by the rear bumper. The mounting position of the BSI radar unit can vary, depending on the model.

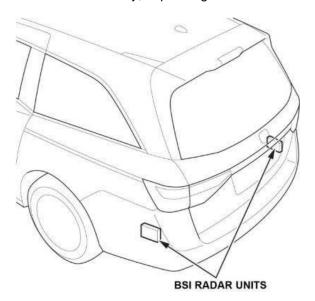

#### LaneWatch™ Camera

The LaneWatch camera is part of the passenger's side power mirror assembly.

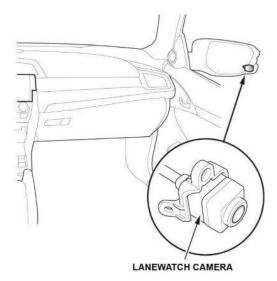

#### WHEN AIMING IS REQUIRED

Proper wheel alignment, body structural alignment, and camera/radar alignment are critical to the performance of driving support system functions on Honda vehicles.

#### NOTE:

- Always refer to the model-specific service manual along with the table below to determine when the radar or camera should be aimed. The table below may not list every type of collision repair that would require aiming a radar or camera. The necessity of aiming a radar or camera should be determined by the extent of the damage or repair made to the vehicle.
- If aiming a radar or camera is necessary due to a collision, then a four-wheel alignment check should be performed. If the wheel alignment is not within specifications, it should be corrected prior to aiming any camera or radar.
- Unless instructed by the service manual or available service information, camera and radar systems calibrations are NOT required after a wheel alignment.
- The requirement of a 4-wheel alignment should be a determined by the extent of the damage and repair made to the vehicle.

System	When to Aim	Notes
	Millimeter wave radar unit was removed and installed.	
	Millimeter wave radar unit was replaced.	Always order a new replacement radar unit using the VIN.
Millimeter Wave Radar	After a collision repair that would require at least a front bumper fascia repair within 300 mm of the millimeter wave radar unit.	
	After a collision repair requiring a structural body repair.	Structural damage including any damage beyond minor cosmetic abrasions to the welded, riveted, or bonded parts of the main unibody as well as the bumper reinforcements, door intrusion beams, or bolt- on front bulkheads.

System	When to Aim	Notes
	After a Supplemental Restraint System (SRS) deployment.	
Millimeter Wave Radar	<ul><li>If the following DTCs are set:</li><li>P2583-54 (millimeter wave radar aiming incomplete)</li></ul>	You must follow the DTC troubleshooting procedure first, and only do the aiming procedure when instructed.
	P2583-64 (millimeter wave radar aiming error)	Other DTCs indicated must be corrected prior to aiming; otherwise, the
	P2583-97 (dust or dirt on the millimeter wave radar)	aiming may fail.

System	When to Aim	Notes
	BSI radar unit was removed and installed.	
	BSI radar unit was replaced.	If the BSI radar unit was replaced due to damage, you must do the BSI Radar Unit Mounting Area Check procedure before installing the new BSI radar unit.
Blind Spot Information	After replacing or repairing the body panel(s) where the BSI radar unit is mounted.	You must do the BSI Radar Unit Mounting Area Check procedure after the repair is complete and before installing the BSI unit radar.
Radar	After a collision repair requiring a structural body repair at the rear of the vehicle.	You must do the BSI Radar Unit Mounting Area Check procedure after the repair is complete.
	If the following DTCs are set:	
	B18B8 (left side BSI radar unit azimuth off Alignment)	You must follow the DTC troubleshooting procedure first and do the aiming inspection when instructed.
	B1E68 (right side BSI radar unit azimuth off alignment)	inspection when instructed.

System	When to Aim	Notes
LaneWatch™	After replacing or removing/installing the following:  • LaneWatch™ camera unit  • Passenger side power mirror assembly  • Front passenger door	
Camera	After adjusting the front passenger door.	
	After doing any collision repairs to the door assembly.	

System	When to Aim	Notes
	Windshield was removed and installed.	
	Windshield was replaced.	The replacement windshield must be a Honda genuine replacement windshield. Installing an aftermarket windshield will cause the aiming to fail or abnormal operation of the driving support system.
	Multipurpose camera unit or FCW/LDW camera unit was removed and installed.	
	Multipurpose camera unit or FCW/LDW camera unit was replaced.	Always order a new replacement camera unit using the VIN.
Multipurpose Camera or FCW/LDW	After a collision repair requiring a structural body repair.	Structural damage including any damage beyond minor cosmetic abrasions to the welded, riveted, or bonded parts of the main unibody as well as the bumper reinforcements, door intrusion beams, or bolt-on front bulkheads.
Camera	After a Supplemental Restraint System (SRS) deployment.	
	If the following DTCs are set:	
	Multipurpose Camera Unit	
	B2A60-52 (dynamic camera aiming incomplete)	You must follow the DTC troubleshooting procedure first, and
	B2A60-54 (static camera aiming incomplete)	only do the aiming procedure when instructed.
	FCW/LDW Camera Unit	Other DTCs indicated must be corrected
	B2A60-54 (FCW/LDW camera unit aiming incomplete)	prior to aiming; otherwise, the aiming may fail.
	B2A60-54 (FCW/LDW camera unit aiming incomplete)	

## **TOOL INFORMATION**

Use the table below to ensure you have all the necessary tools to do an aiming procedure. See TOOL IMAGES to ensure you have all the necessary pieces.

#### **Radar Aiming**

Radar System	Tool Number	Tool Description	Remarks
	07AAJ-STKA210	Alignment Set	
	07AAJ-TK8A100	Stand	The stand from T/N 07AAJ-STKA220 can also be used.
	07AAJ-STKA200	Reflector Set	
	07AAG-5R0A100	Gas Strut Holder, Short	Application varies by model.
Millimeter Wave Radar	N/A	Gas Strut Holder, Long	Included with Alignment Set (T/N 07AAJ-STKA210). Not available separately. Application varies by model.
	07AAK-5K0A200	Reflector Set	Only for 2013-15 Accord, 2014-15 Accord Hybrid.
	07AAA-TGVA100	Radar Adjuster 3.5 mm	Adjustment screwdriver for later Honda models.
	07AAJ-TK8A100	Stand	The stand from T/N 07AAJ- STKA220 can also be used.
	07AAJ-TK8A150	Rim Frame	
BSI Radar	07AAK-TM0A100	Rim Frame Extension	Only for 2017-19 Ridgeline.
	07AAJ-STKA160	Target Set	Includes straight edge and plumb bob.
	07AAJ-STKA170	Angle Gauge	

#### NOTES:

- The small bubble gauge used for the millimeter wave radar is with Alignment Set (T/N 07AAJ-STKA210) and is not sold separately. If a replacement is required, it can be purchased at www.mcmaster.com under P/N 3338A14.
- The plumb bob used for radar systems is included with Target Set (T/N 07AAJ-STKA160) and is not sold separately. A commercially available plumb bob can be used if a replacement is needed.

# **Camera Aiming**

Camera System	Tool Number	Tool Description	Remarks
	07AAJ-STKA210	Alignment Set	
	07AAJ-TK8A100	Stand	The stand from T/N 07AAJ-STKA220 can also be used.
	07AAK-5K0A110	Attachment Bracket	
	07AAK-5K0A120	Stand Pole	
	07AAB-TYPA020	Target Holder Set	Application varies by model. Refer to the appropriate service information aiming procedure.
Multipurpose Camera	070AK-TYPA030	Target Set	Application varies by model. Refer to the appropriate service information aiming procedure.
	07AAK-5K0A100	Target Set	Includes large bubble level and plumb bob.
	07AAG-5R0A100	Gas Strut Holder, Short	Application varies by model.
	N/A	Gas Strut Holder, Long	Included with Alignment Set (T/N 07AAJ-STKA210). Not available separately. Application varies by model.
	07AAJ-STKA210	Alignment Set	
	07AAJ-TK8A100	Stand	The stand for T/N 07AAJ- STKA220 can also be used.
	07AAK-5K0A110	Attachment Bracket	
	07AAK-5K0A120	Stand Pole	
FCW/LDW Camera	07AAK-5K0A100	Target Set	Includes large bubble level and plumb bob.
	07AAG-5R0A100	Gas Strut Holder, Short	Application varies by model.
	N/A	Gas Strut Holder, Long	Included with Alignment Set (T/N 07AAJ-STKA210). Not available separately. Application varies by model.

Camera System	Tool Number	Tool Description	Remarks
	07AAJ-STKA210	Alignment Set	
	070AK-T2AA100	LaneWatch™ Aiming Stand Set	
Lawa Matak TM Oamana	070AK-T2AA110	Aiming Marker	
LaneWatch™ Camera	07AAG-5R0A100	Gas Strut Holder, Short	Application varies by model.
	N/A	Gas Strut Holder, Long	Included with Alignment Set (T/N 07AAJ-STKA210). Not available separately. Application varies by model.

**NOTE**: The plumb bob used for some models is included with Target Set (T/N 07AAK-5K0A100) or LaneWatch™ Aiming Stand Set (T/N 070AK-T2AA100) and is not sold separately. A commercially available plumb bob can be used if a replacement is needed.

## **Supplemental Tools and Materials**

In addition to the above Honda special tools, the following tools and materials will be needed:

- Commercially available tape measure with a minimum length of 33 ft (10 m)
- Masking Tape Honda recommends using the 3M Scotch Blue Painter's Tape
- Marker or Felt-Tip Pen

## **TOOL IMAGE AND CONTENTS**

# Alignment Set (T/N 07AAJ-STKA210)

Contents		
Centering Stand	Cord	
Gas Strut Holder, Long	Small Bubble Gauge	



# Stand (T/N 07AAJ-TK8A100)



# Reflector Set (T/N 07AAJ-STKA200)

Contents			
Pointer Reflector		Collar with Plastic Screw	



# Reflector Set (T/N 07AAK-5K0A200)

Contents			
Off-Set Arm	Reflector	Plastic Screws	



# Radar Adjuster 3.5 mm (07AAA-TGVA100)



# Rim Frame (T/N 07AAJ-TK8A150)



# Rim Extension Frame (T/N 07AAK-TM0A100)



Target Set (T/N 07AAJ-STKA160)

Contents			
Target Plumb Bob		Straight Edge	



# Angle Gauge (T/N 07AAJ-STKA170)

Contents		
Angle Gauge	Laser Pointer with Batteries	



# Attachment Bracket (T/N 07AAK-5K0A110)




# Stand Pole (T/N 07AAK-5K0A120)


NOTE: This tool must be used with Stand, (T/N 07AAJ-TK8A100)



# Target Holder Set (T/N 07AAB-TYPA020)

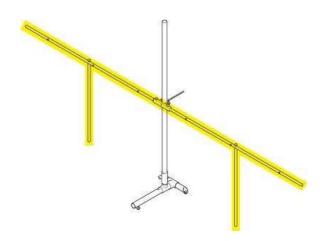

# Target Set (T/N 070AK-TYPA030)

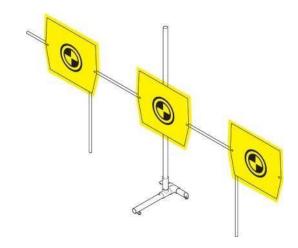

Target Set (T/N 07AAK-5K0A100)

Contents			
Targets	Plumb Bob	Bubble Level	



LaneWatch Aiming Stand Set (T/N 070AK-T2AA100)

Contents			
Target Stand	Plumb Bob	Magnets (quantity: 20)	

**NOTE**: It is not necessary to use all 20 magnets to attach the aiming marker to the target stand.



#### Aiming Marker (T/N 070AK-T2AA110)



#### Gas Strut Holder, Short (T/N 07AAG-5R0A100)

**NOTE**: The Gas Strut Holder, Long (included with Alignment Set, [T/N 07AAJ-STKA210]) is similar in appearance.



#### **AIMING RADARS AND CAMERAS**

#### Millimeter Wave Radar Aiming

To aim the millimeter wave radar, you will need a stationary metal triangle target placed in front of the vehicle and an i- HDS. To complete the aiming process, you must do a vertical and horizontal adjustment.

### **Vertical Adjustment**

There are two ways to complete the vertical adjustment depending on the model:

- Manual Adjustment without the i-HDS: Use the vertical adjustment bolt and a bubble level mounted on the radar unit to aim the radar. This is done before the target and i-HDS is set up.
- Manual Adjustment Using the i-HDS: Connect the i-HDS, then set up the target when instructed. Use the i-HDS values to aim the radar by turning the vertical adjustment bolt.

#### **Horizontal Adjustment**

There are two ways to complete the horizontal adjustment depending on the model:

- Electronic Adjustment Using the i-HDS: Done after the vertical adjustment (without i-HDS method), the i-HDS electronically aims the horizontal plane. No physical adjustment is needed.
- Manual/Electronic Adjustment Using the i-HDS: Done at the same time as the vertical adjustment. Use the i-HDS values to aim the radar by turning the horizontal adjustment bolt.

#### FCW/LDW, Multipurpose Camera Aiming

The multipurpose camera requires both static and dynamic aiming using the i-HDS. Static aiming is done with the vehicle stationary and aimed at a stationary target. Vehicles will require either two or three targets depending on the model. Dynamic aiming is done with lane markers on the road while driving.

**NOTE**: Some later Honda models only require static aiming. Refer to the appropriate service information procedure.

The FCW/LDW cameras are aimed two ways, depending on the model. Some require static or dynamic aiming. Others require strictly dynamic aiming.

**NOTE**: Although the 2013–15 Accord uses static or dynamic aiming, because of differences in the camera software, early production 2013 models can only be aimed using dynamic aiming. If you need to do camera aiming on a 2013 model, before starting the procedure, always connect the i-HDS to make sure static aiming can be done. Select **INTEGRATED DRIVER SUPPORT, ADJUSTMENT**, and look for the **STATIC CAMERA AIMING** option.

Camera System	HDS or i-HDS Required	Static Aiming	Dynamic Aiming	Remarks
Multipurpose Camera	Yes	Yes	Varies by model.	
FCW/LDW Camera	No	No	Yes	2013-15 Crosstour and 2014-15 Odyssey only.
	Yes	Optional	Optional	2013-15 Accord and Civic Hybrid only.

#### **LaneWatch Camera Aiming**

The LaneWatch camera is aimed using a stationary target positioned along the right-rear side of the parked vehicle. You do not need the i-HDS. Instead, the system uses the audio or audio-navigation unit with the LaneWatch camera switch.

#### **BSI Radar Aim Inspection**

You must inspect the BSI radar units to ensure they are aimed correctly. This is a static inspection using a laser with targets positioned to the left and right rear of the vehicle. You do not need the i-HDS. If the laser points within the boundaries of the target, the aim is good, and the inspection is complete. However, if the lasers do not point within the target area, a secondary inspection is needed to check the radar unit mounting area for damage.

#### **GENERAL AIMING REQUIREMENTS**

Although the procedures for radar unit and camera aiming are different, the general aiming requirements are the same. Here are the minimum requirements for both the vehicle and the aiming area.


### **Vehicle Requirements**

- · The suspension has not been modified.
- The tire sizes and pressures are correct according to the driver's doorjamb label.
- · The fuel tank is full.
- All excess cargo is removed, except for the tool kit and spare tire (if equipped).
- All doors are closed.
- The transmission is in Park (Neutral for M/T models) with the parking brake set.
- · The wheels are pointed straight ahead.
- No objects are on the instrument panel, hood, or windshield.
- There is no dirt or debris around the radar unit or camera.


## **Aiming Area Requirements**

- Do the aiming in a well-lit area such as inside the shop. Avoid doing it outside; certain weather conditions
  may affect aiming results.
- Make sure there is enough space (see below). Avoid areas with poles and large tool boxes nearby. Also, avoid aiming in front of any metal garage doors, shutters, or steel grates in the ground.
- Do not use the listed dimensions for target placement.


#### LaneWatch™ Camera Aiming

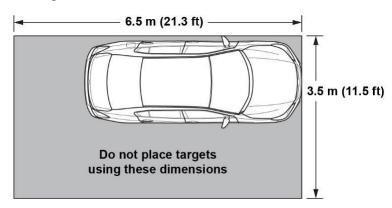

## **BSI Radar Aiming**

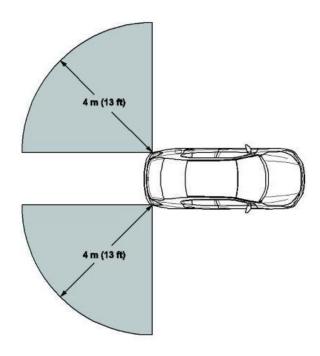

Radar, FCW/LDW Camera, or Multipurpose Camera Aiming

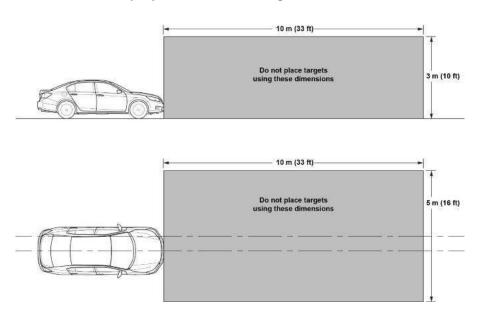

• There should be no bright objects (sunlight, windows, lights, or reflectors) behind or in front of the target or designs similar to the target pattern. Below is an example of an aiming set up that is likely to fail because the sun is behind the target.








#### **SETTING UP THE TARGETS**

The target setup procedure depends on the system, but the general procedure for establishing the reference marks for target placement is similar. Here are some key points to remember when setting up the targets.


#### **Finding the Vehicle Center Line**

- Except for BSI, you must first find the vehicle center line. Depending on the model, there are six ways to do this:
  - Front and rear jacking points or rear tow hook
  - Center clip on front bumper clip
  - Detent on front or rear bumper
  - Center from front Honda emblem
  - Scribe line on front subframe
  - Rear bumper clips
- When setting up a target in front of the vehicle, place the centering stand at the front of the vehicle and place the gas strut on the rear; or tape the string to the floor at the rear of the vehicle (Civic models with a center muffler).
- When setting up a target behind the vehicle, such as for LaneWatch aiming, place the centering stand at
  the rear of the vehicle and either place the gas strut at the front, or tape the string to the floor at the front of
  the vehicle (for vehicles using the front Honda emblem as the center line).


### Front and Rear Jacking Points or Rear Tow Hook

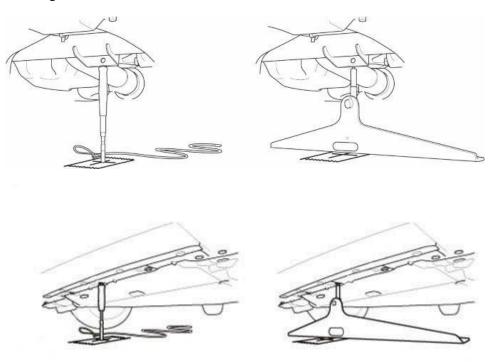


# Center Clip on Front Bumper

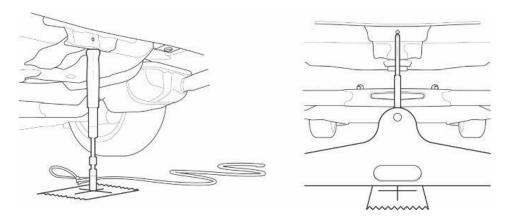


# Detent on Front or Rear Bumper

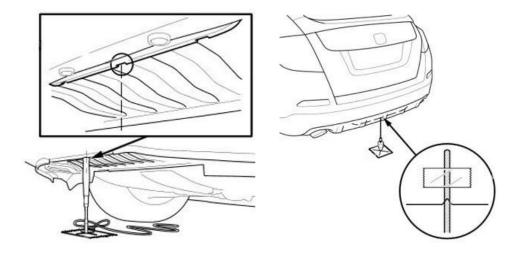

# Center From Front Honda Emblem

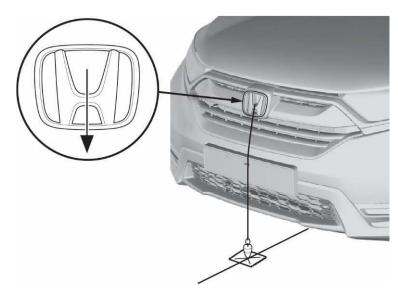

## Scribe Line on Subframe

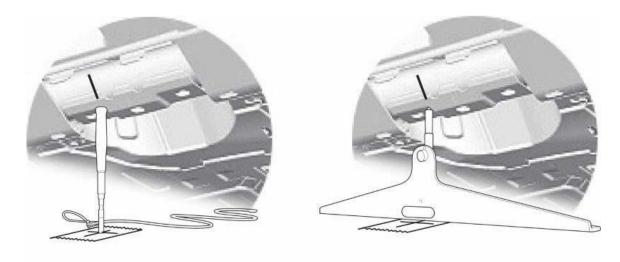


## **Making the Reference Lines**


To correctly aim the radar unit or camera, you need to establish accurate reference marks. Here are some tips to help you do that.

There are two ways to establish the reference mark to place the targets, depending on the model.

• A reference mark made at the specified distance from the front bumper (front bumper type).

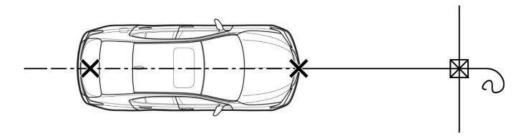


• A reference mark made at the specified distance from the center of the front wheels (wheel centerline type).

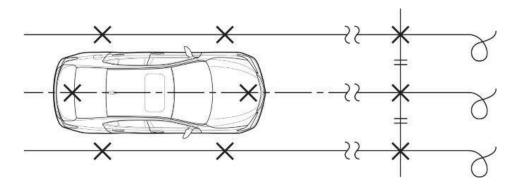

### Front Bumper Type


In this example, we are placing the target for the millimeter wave radar unit. You need to make a reference mark in front of the vehicle at the specified distance from the front bumper.

**NOTE**: The reference point labels may differ by model. Always follow the service information procedures.

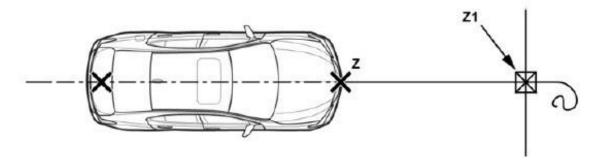


- 1. Determine the centerline at the rear of the vehicle, and position the gas shock with the cord or string attached. Refer to the procedure Before Aiming Setting in the service information.
- 2. Hang the plumb bob from the center of the front Honda emblem, and make a mark on the floor where the plumb tip contacts it. We will call this mark Z.


NOTE: If the vehicle has a front license plate, remove the plate and bracket before doing this step.

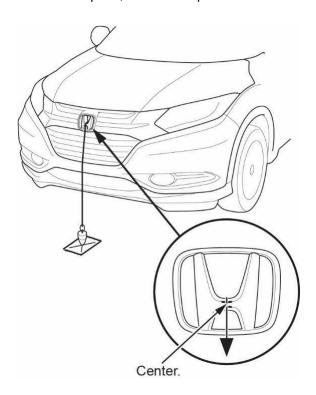

3. Place the centerline of the centering stand from Alignment Set (T/N 07AAJ-STKA210) on mark Z, then run the cord or string through it.

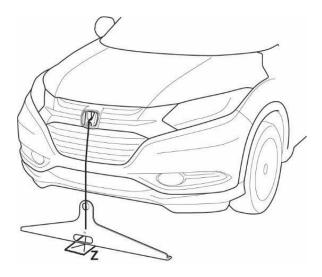

4. With the cord or string centered with the center line of the centering stand, make a new mark Z1 using the listed distance in the service information.

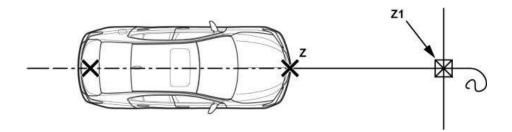


5. The target set up you just completed should match the one in the aiming procedure. You are now ready to set up either the radar or camera target stand.

**NOTE**: When doing the millimeter wave radar aiming, do not place the reflector target at mark Z1 until you are instructed by the i-HDS. Failure to do so will result in an aiming failure with an i-HDS message **Detected Some Obstacles**. Refer to Placing the Stand During Millimeter Wave Radar Aiming under TROUBLESHOOTING TIPS.


### **Wheel Centerline Type**

In this example, we are placing the target for the millimeter wave radar unit. You need to make two parallel lines from A1 to C1, then from A2 to C2. Follow this up with a line from C1 to C2.

NOTE: The reference point labels may differ by model. Always follow the service information.

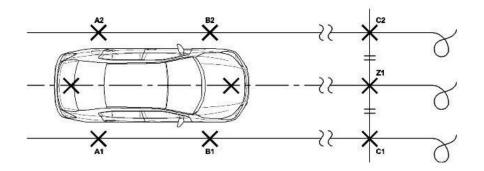


1. Place the centering stand from Alignment Set (T/N 07AAJ-STKA210), at the center of the right-rear wheel. Extend the pointer as needed or as much as possible so it reaches the edge of the center cap.

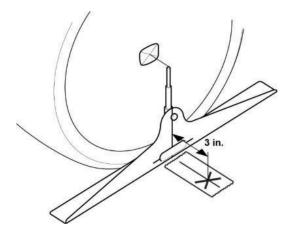


- 2. Measure 3 inches (76.2 mm) out from the center of the centering stand, and mark it. We will call this mark A1.
- 3. Do steps 1 and 2 for the remaining wheels, and mark them as B1 for the right-front wheel, A2 for the left-rear wheel, and B2 for the left-front wheel.
- 4. Determine the centerline at the rear of the vehicle, and position the gas shock with the cord or string attached. Refer to the procedure Before Aiming Setting in the service information.

**NOTE**: Some models, like the Civic with a center muffler will require you to tape the cord or string to the floor.


- 5. Determine the vehicle's centerline at the front, and make a mark. Refer to the procedure Before Aiming Setting in the service information.
- 6. Place the center of the centering stand at the new mark you just made and route the cord or string through it.
- 7. Place the tape measure from A1 (rear wheel) through B1 (front wheel), making sure the inner edge of the tape measure is aligned with the A1 and B1 marks.

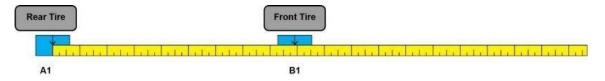


8. Extend the tape measure out roughly 30 ft (9 m) while keeping the tape measure as straight as possible and aligned with the marks A1 and B1.

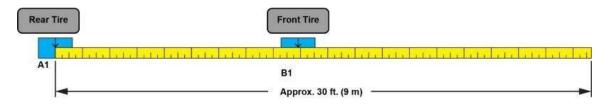


9. Make a new mark on the floor at 28 ft (8.5 m). We will call this mark C1.

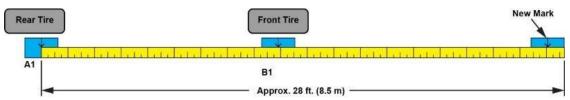

10. Move the start of the tape measure to B1 while aligned with C1, and make a new mark according to the distance listed in the service information procedure.

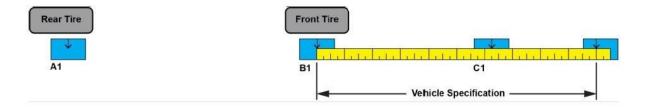


- 11. Repeat steps, 7 thru 10 for the other side.
- 12. At this point, you should have marks C1 and C2 on the floor. Using your roll of tape, connect them as shown while keeping the tape as straight as possible.

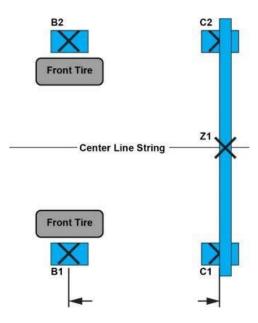


- 13. Make a new mark where the center line string intersects the tape edge. We will call this mark Z1. This mark should be bold and very visible as you will place the target stand on it later.
- 14. The box you just completed should match the one in the aiming procedure. You are now ready to set up either the radar or camera target stand.


**NOTE**: When doing the millimeter wave radar aiming, do not place the reflector target at mark Z1 until you are instructed by the i-HDS. Failure to do so will result in an aiming failure with an i-HDS message **Detected Some Obstacles**. Refer to Placing the Stand During Millimeter Wave Radar Aiming under TROUBLESHOOTING TIPS.

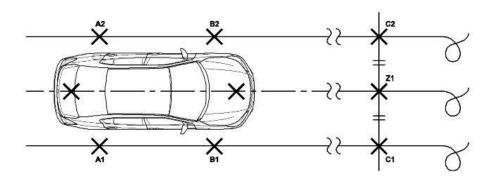

Some models, like the Accord and Civic, will require an additional reference mark as the radar is mounted to the side. This mark can be simply made on the tape placed in step 12. Refer to the aiming procedure for additional information.

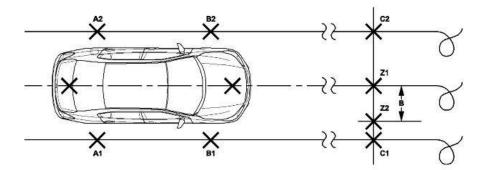

The procedure mentioned can also be used when setting up the LaneWatch camera aiming. Instead of in front of the vehicle, use the procedure to set up the reference marks behind the vehicle.

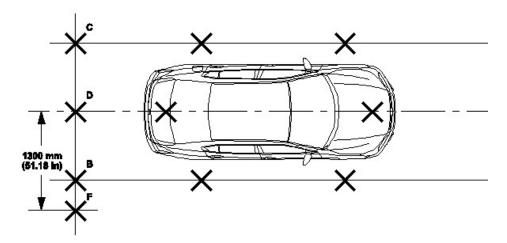

#### TROUBLESHOOTING TIPS

Here are some general troubleshooting tips if the radar unit or camera aiming fails. Before doing any troubleshooting, always make sure you have met the vehicle and aiming area requirements and the targets are set up correctly according to this job aid and the service information.

#### **Obstructed Radar View**

Besides dirt and debris on the radar unit cover, front Honda emblem, or front grille, other factors can obstruct the radar unit view that will affect millimeter wave radar unit aiming.

- Always make sure the correct replacement parts are installed. Depending on the trim level, the grille or the front Honda emblem base is different and can obstruct the radar view if the wrong one is installed.
- Check for radar covers that are painted and/or have exterior wraps. These covers should never be painted or wrapped with exterior covering as it will obstruct the radar view. This also applies to the front grille.

#### Placing the Stand During Millimeter Wave Radar Aiming

When aiming the millimeter wave radar, keep the stand away from the aiming area and do not place it on the specified mark until you are instructed by the i-HDS. This is typically after the MID displays the message **NO TARGET**. The i-HDS and the millimeter wave radar unit checks the space in front of the vehicle to make sure there are no reflective objects. If reflective objects or the stand is detected, the i-HDS will prompt a warning message and you must restart the procedure.


#### **Distorted or Blocked Camera View**

The multipurpose and FCW/LDW cameras must be aimed after the front windshield is removed or replaced. Always make sure the installed windshield is a correct factory replacement for the vehicle and not an aftermarket. The windshield for camera-equipped vehicles has view windows toward the top of the glass for the camera's view.

Aftermarket windshields may have distortion within the glass that may cause interference of the camera.

#### **Wrong Target Patterns**

If you get the message **Cannot Detect Right Target** or **Cannot Detect Left Target** on the i-HDS screen when using Target Set (T/N 07AAK-5K0A100), you may have the targets installed incorrectly. Make sure the target patterns match the illustration shown on the service information procedure. If they are incorrect, correct the target orientation and make sure to check the target height and positions again.

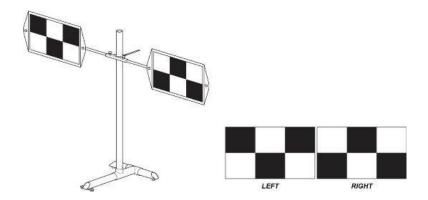

### **Collision Repairs**

If you have trouble aiming the millimeter wave radar unit on a vehicle that recently had collision repair, check the following:

- If the radar unit was replaced, check the distance from the radar unit to the bracket and adjust as needed using the adjusting bolts. See Millimeter Wave Radar Removal and Installation in the service information for details on how to do this.
- If the radar unit was not replaced, before you start radar unit aiming, you must still check the mounting position of the radar unit bracket to the vehicle frame. See Millimeter Wave Radar Mounting Position Inspection in the service information. In certain light collisions, the radar unit bracket can get slightly bent where it goes unnoticed in a visual inspection, but is enough to cause the radar unit aiming to fail.
- Make sure the wheel alignment is done before aiming the driving support system after a collision repair.

#### **System Limitations**

Always remember that certain environmental and roadway conditions can affect normal operation of radar and camera systems during use or when doing dynamic aiming. Conditions can include the following:

### • Environmental Conditions

- Bad weather such as rain, fog, snow, etc.
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- Little contrast between objects and the background.
- Driving into low sunlight (at dawn or dusk).
- Strong light reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Roadway objects or structures misinterpreted as vehicles and pedestrians.

- Reflections on the interior of the windshield.
- Driving at night or in a dark condition such as a tunnel.

## • Roadway Conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on curvy, winding, or undulating roads.
- Hilly road or approaching the crest of a hill.

Refer to the owner's manual for additional conditions and limitations for each driving support system.