

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

HONDALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CUSTOMER INFORMATION

VOICE COMMAND INDEX

INDEX

ACCORD

HONDA
The Power of Dreams

**2018 HYBRID
OWNER'S GUIDE**

DISCLOSURES

■ Devices That Emit Radio Waves

The following products and systems on your vehicle emit radio waves when in operation:

- Audio system
- *Bluetooth*[®] Audio
- *Bluetooth*[®] HandsFreeLink[®]
- Blind Spot Information System*
- HomeLink[®] Universal Transceiver
- Immobilizer system
- Remote transmitter
- Smart entry system*
- Wireless charger*
- Collision Mitigation Braking System™

Each of the above complies with the appropriate requirements or the required standards of the FCC (Federal Communications Commission) and Industry Canada, described below:

As required by the FCC:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

As required by Industry Canada:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

■ Disclaimer

The information and data contained herein are believed to be accurate and reliable. American Honda Motor Co., Inc. makes no warranty of any kind and accepts no responsibility for the results obtained through application of this information.

■ Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit www.hondalink.com/vehicle-data-choices.

■ Event Data Recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. **The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:**

- **How various systems in your vehicle were operating;**
- **Whether or not the driver and passenger safety belts were buckled/ fastened;**
- **How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,**
- **How fast the vehicle was traveling.**

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement that have the special equipment can read the information if they have access to the vehicle or the EDR.

The data belong to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

■ Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential.

Some diagnostic and maintenance information is uploaded to Honda upon vehicle start up.

*if equipped

Continued on inside back cover

INTRODUCTION

This Owner's Guide is intended to help you quickly get acquainted with your **2018 Honda Accord Hybrid Sedan**. It provides basic information and instructions on technology and convenience features, as well as emergency procedures and how to get assistance.

This guide is for vehicles sold in the United States and Canada. It covers all Accord models, so you may find descriptions of features and equipment that are not in your vehicle. Images throughout this guide are from U.S. vehicles and represent features and equipment that are available on some, but not all, models.

This guide is not intended to be a substitute for the Owner's Manual at *owners.honda.com* (U.S.) or *myhonda.ca* (Canada). The Warranty Information CD enclosed in your glove box kit includes the vehicle and tire warranties in electronic format. This information can be viewed on a computer (PC or Mac platform) and saved or printed for your reference. You can also visit *owners.honda.com* (U.S.) or *myhonda.ca* (Canada) to view the complete and most current information.

If you are the first registered owner of your vehicle, you may request a complimentary printed copy of the Owner's Manual, Navigation Manual, or Vehicle Warranty within the first six months of vehicle purchase. To request a copy, visit *owners.honda.com* (U.S.) and create or log in to your account. In Canada, please request a copy from your Honda dealer.

American Honda Motor Co., Inc. strives to be proactive in protecting our environment and natural resources. By using electronic delivery for a considerable portion of the information typically found in a vehicle owner's manual, we are further reducing our impact on the environment.

Honda Automobile Customer Service

Your authorized Honda dealer should be able to answer any questions you have about your vehicle. However, if you are dissatisfied with the information you receive, you can call Honda Automobile Customer Service (see page 174).

Call (800) 999-1009 (U.S.) or (888) 946-6329 (Canada)

Honda Roadside Assistance

24-hour emergency road service is available to you in the United States and Canada throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply).

Call (866) 864-5211 (U.S.) or (800) 465-7587 (Canada)

TABLE OF CONTENTS

VISUAL INDEX	1	AUDIO AND CONNECTIVITY	63
Steering Wheel and Nearby Controls	1	Basic Audio Operation.....	63
Dashboard and Other Controls.....	2	Color Audio Operation.....	70
Dashboard and Other Controls.....	3	Touchscreen Operation	71
SPORT HYBRID I-MMD	4	Managing Apps.....	72
SAFETY INFORMATION	5	HondaLink®	73
Important Safety Information	5	HondaLink® Service*	74
High-Voltage System Precautions.....	7	Near Field Communication (NFC)*.....	76
Seat Belts.....	8	Apple CarPlay™	76
Airbags	11	Android Auto™	78
Child Safety.....	18	Wi-Fi Connection	79
Safety Label Locations.....	26	System Updates	80
Reporting Safety Defects	27	AM/FM Radio.....	83
INSTRUMENT PANEL	28	SiriusXM® Radio*	85
Malfunction Indicators	28	iPod®	86
Condition Indicators.....	30	USB Flash Drive	88
On/Off Indicators.....	31	Bluetooth® Audio.....	90
Driver Information Interface (DII)	32	Pandora®	92
Safety Support.....	33	BLUETOOTH® HANDSFREELINK® (HFL)	93
Head-Up Display*	34	Basic HFL Operation.....	93
VEHICLE CONTROLS	35	Models with Color Audio	96
Using the Smart Entry Remote	35	Pairing a Phone.....	96
Smart Entry System	36	Models with Color Audio	98
Door Operation.....	38	Making a Call.....	98
Power Window Operation.....	40	SMS Text Messaging	101
Power Moonroof Operation*	41	Siri® Eyes Free.....	102
Interior and Exterior Lights.....	42	NAVIGATION*	103
Auto High-Beam System	43	Basic Navigation Operation.....	103
Wiper Operation.....	46	Entering a Destination.....	105
One-Touch Turn Signal	48	Routing.....	107
Adjusting the Seats	48		
Adjusting the Steering Wheel	52		
Driving Position Memory System*.....	53		
Adjusting the Mirrors	54		
Heated Windshield Button	55		
Heated Steering Wheel *	56		
HomeLink® Universal Transceiver*.....	56		
Climate Control System	58		
Seat Heaters* and Ventilation*	59		
Rear Seat Heaters*	59		
Customized Features.....	60		
Setting the Clock.....	62		

*if equipped

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CUSTOMER INFORMATION

VOICE COMMAND INDEX

INDEX

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY


BLUETOOTH® HANDSFREELINK®

HONDALINK®

VISUAL INDEX

Quickly locate items in the vehicle's interior.

Steering Wheel and Nearby Controls

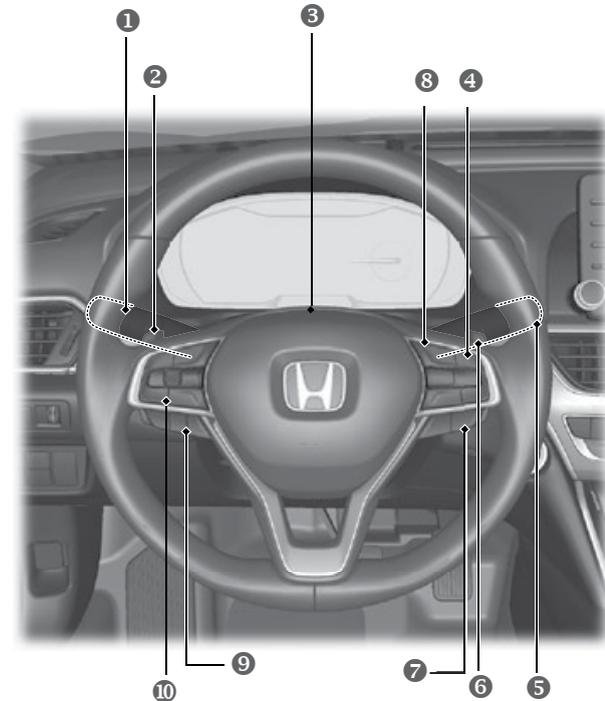

- ① Lights/turn signals p. 42
Fog lights* p. 42
LaneWatch* p. 130
- ② Deceleration Paddle Selector p. 116
- ③ Horn
- ④ Adaptive Cruise Control (ACC) with Low Speed Follow (LSF) buttons p. 126
- ⑤ Wipers/washers p. 46
- ⑥ Deceleration Paddle Selector p. 116
- ⑦ Lane Keeping Assist System (LKAS) buttons p. 129
- ⑧ Head up display buttons*
- ⑨ *Bluetooth* HandsFreeLink buttons
Voice control buttons* p. 93
- ⑩ Audio remote controls p. 67

DRIVING.....108

Before Driving108

Maximum Load Limit109

Towing a Trailer.....111

Remote Engine Start with Vehicle Feedback111

Starting to Drive112

Shifting.....114

Braking118

Acoustic Vehicle Alerting System121

Eco Assist System121

Vehicle Stability Assist (VSA®)122

SPORT Mode123

EV Button.....124

Honda Sensing™125

Adaptive Cruise Control (ACC) with Low Speed Follow (ACC with LSF).....126

Lane Keeping Assist System (LKAS)....129

LaneWatch™*130

Road Departure Mitigation (RDM)*131

Traffic Sign Recognition System133

Collision Mitigation Braking System™ (CMBS™).....134

Parking Sensor System*136

Multi-View Rear Camera137

Blind Spot Information (BSI)*138

Refueling140

Improving Fuel Economy and Reducing CO₂ Emissions.....141

HANDLING THE UNEXPECTED142

Smart Entry Remote Battery Strength142

Emergency Power System Off.....142

Jump Starting.....143

Overheating144

Emergency Towing145

Tire Pressure Monitoring System (TPMS).....146

Tire Repair Kit149

Fuse Locations150

MAINTENANCE.....152

Safety Precautions152

Maintenance Minder™153

Under the Hood156

Engine Oil157

Engine Coolant.....160

Brake Fluid.....161

Inverter Coolant161

Checking the 12-volt Battery.....162

Window Washer Fluid.....162

Changing Wiper Blades.....163

Tire Information.....165

Tire Labeling168

DOT Tire Quality Grading169

Air Conditioning.....170

Testing of Readiness Codes.....171

SPECIFICATIONS.....172

CUSTOMER INFORMATION173

Frequently Asked Questions/ Troubleshooting173

Contact Us.....174

Honda Roadside Assistance.....174

Warranty Coverages175

EPA Contact Information175

VOICE COMMAND INDEX176


INDEX.....178

DISCLOSURES181

*if equipped

*if equipped


Dashboard and Other Controls

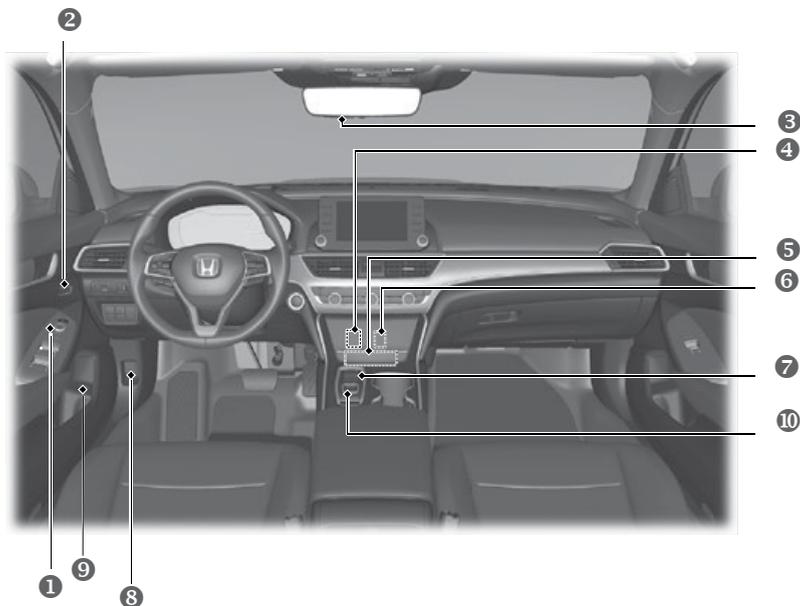

- ① Power window switches p. 40
Door lock switches p. 38
Door mirror controls
- ② Memory buttons* p. 53
- ③ HomeLink buttons* p. 56
- ④ Accessory power socket
- ⑤ Wireless charger* p. 65
- ⑥ USB port p. 63
- ⑦ Shift button p. 114
- ⑧ Hood release handle p. 156
- ⑨ Trunk opener p. 39
- ⑩ Electric Parking Brake p. 119
ECON button p. 121
Automatic Brake Hold p. 120

*if equipped

Dashboard and Other Controls

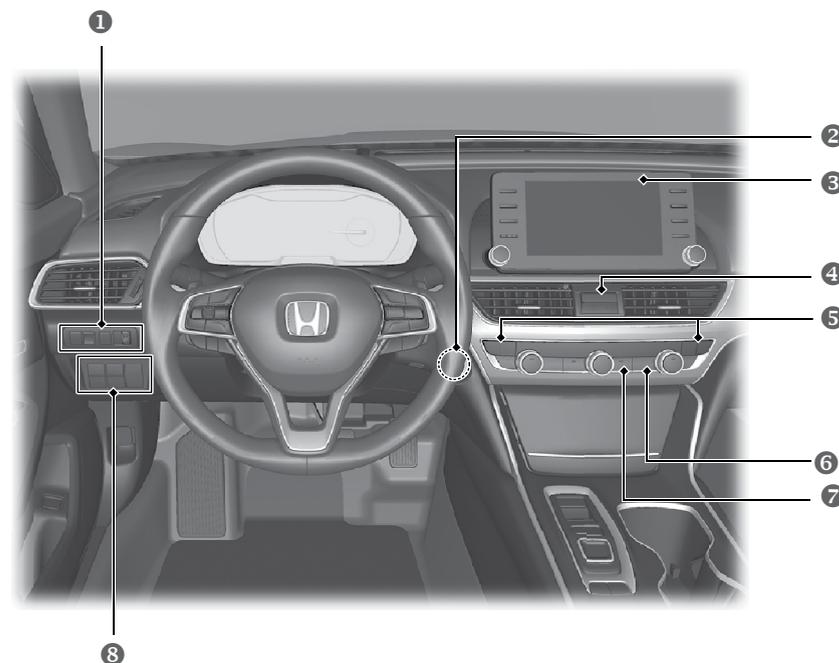

- ① Brightness control p. 42
Head-Up Display (HUD) buttons* p. 133
- ② Engine START/STOP button p. 113
- ③ Audio system p. 63
Navigation system* p. 103
- ④ Hazard warning button
- ⑤ Front seat heater and ventilation buttons* p. 59
- ⑥ Climate control system p. 58
- ⑦ Rear window defogger
Heated door mirror button
- ⑧ Vehicle Stability Assist (VSA) system OFF button p. 122
Safety Support switch p. 134, p. 131
Parking Sensor System button* p. 136
Heated windshield button* p. 55

*if equipped


SPORT HYBRID I-MMD

This Accord with SPORT HYBRID i-MMD uses both an electric motor and a gasoline engine. A High Voltage battery powers the electric motor. The High Voltage battery is recharged by an engine-driven generator and regenerative braking.

i-MMD automatically manages the engine and motor, switching between them or blending them as appropriate. Under certain circumstances, you can select EV mode (driving on electricity only) by pressing the EV button (see page 104).

In addition to the High Voltage battery, this vehicle includes a standard 12-volt battery to power the airbags, the interior and exterior lights, and other 12-volt systems.

Your driving style heavily impacts fuel efficiency and driving range. Spirited acceleration, high-speed driving, or heavy climate-control use can quickly reduce the High Voltage battery's charge. That can trigger the system to switch to the gasoline-powered engine.

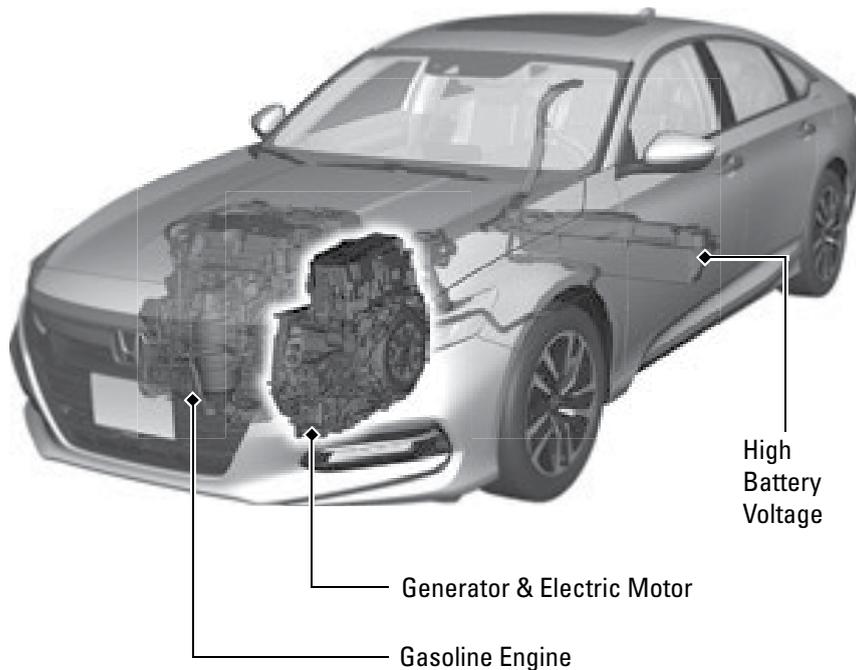

SAFETY INFORMATION

Your safety—and the safety of others—is very **important and** operating this vehicle safely is an important responsibility. While we strive to help you make informed decisions about safety, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. Therefore, you must use your own good judgment.

Important Safety Information

This guide explains many of your vehicle's safety features and how to use them. Please read this information carefully. Following the instructions below will also help to keep you and your passengers safe.

■ Important Safety Precautions

- Always wear your seat belt.
- Secure all children in the proper restraint system.
- Be aware of airbag hazards.
- Don't drink and drive.
- Pay appropriate attention to the task of driving safely.
- Control your speed.
- Keep your vehicle in safe condition.
- Do not leave children unattended in the vehicle.

Children left unattended in the vehicle may be injured if they activate one or more of the vehicle controls. They may also cause the vehicle to move, resulting in a crash in which the children and/or another person(s) can be injured or killed. Also, depending on the ambient temperature, the temperature of the interior may reach extreme levels, which can result in injury or death. Even if the climate control system is on, never leave children in the vehicle unattended as the climate control system can shut off at any time.

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly and only you can decide when it is safe to divert some attention away from driving.

■ Safety Messages

When you see the following messages throughout this guide, pay close attention.

⚠ DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

⚠ CAUTION

You **CAN** be **HURT** if you don't follow instructions.

NOTICE

This information is intended to help you avoid damage to your vehicle, other property, or the environment.

■ Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle and follow the instructions set forth below, you will not accumulate dangerous levels of carbon monoxide gas in the vehicle interior.

Have the exhaust system inspected for leaks whenever:

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the trunk open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the trunk open, open all the windows and set the climate control system as shown below:

1. Select the fresh air mode.
2. Select the  mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

⚠ WARNING

Carbon monoxide gas is toxic. Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.


An enclosed area such as a garage can quickly fill up with carbon monoxide gas. Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

High-Voltage System Precautions

The high-voltage system in this vehicle is designed with safety in mind. Follow these instructions to promote safe operation.

■ Air intake

Do not cover the air intake. If the air intake is obstructed, the High Voltage battery can become too hot. The system may then limit the battery's output and cause the power system and 12-volt battery charging system indicators to come on.

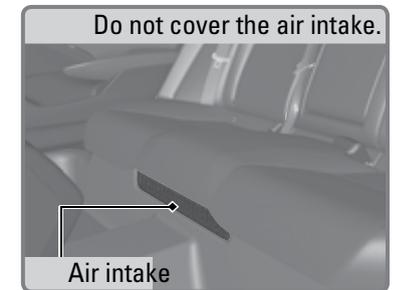

■ In Case of a Collision

- **Be careful of electric shock hazard:** If a severe crash damages your vehicle's high-voltage system, there is a possibility of electrical shock due to exposed high-voltage components or wires. If this happens, do not touch any of the high voltage system components or any of its orange wires.
- **Avoid contact with high-voltage fluid:** The High Voltage battery contains a flammable electrolyte that could leak as a result of a severe crash. Avoid any skin or eye contact with the electrolyte, as it is corrosive. If you accidentally touch it, flush your eyes or skin with a large quantity of water for at least five minutes and seek medical attention immediately.
- **Use a fire extinguisher for an electrical fire:** Attempting to extinguish an electrical fire with water can be dangerous.
- **If the vehicle is damaged in a collision, have it repaired by a dealer.**

⚠ WARNING

Do not touch the high-voltage system. It can cause severe electrical shock. If the high-voltage system needs maintenance or repair, have it performed by a dealer.

Seat Belts

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts and wear them properly.

Lap/Shoulder Seat Belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving, the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop, the retractor locks to restrain your body. The rear seat belts also have a lockable retractor for use with child seats.

The front seats are equipped with automatic seat belt tensioners to enhance safety. The tensioners automatically tighten the front seat belts during a moderate to severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags.

Proper Use of Seat Belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.
- No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

⚠️ WARNING

Not wearing a seat belt properly increases the chance of a serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully and look for frays, cuts, burns, and wear.
- Check that the latches and buckles work smoothly and the belts retract easily. If a belt does not retract easily, cleaning the belt may correct the problem. Use only mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

⚠️ WARNING


Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.

Fastening a Seat Belt

Adjust your seat to the proper position (see page 41) and then follow the below steps:

1. Pull the seat belt out slowly.
2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure. Make sure that the belt is not twisted or caught on anything.

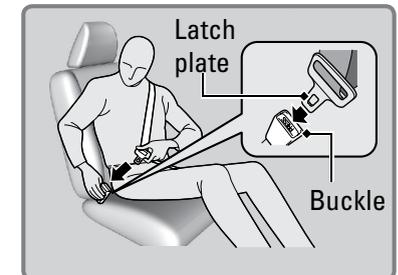

- Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.



- If necessary, pull up on the belt again to remove any slack, then make sure that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

To release the belt, push the red PRESS button then guide the belt by hand until it has retracted completely.

WARNING


Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

■ Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.

- Move the anchor up and down while holding the release button.
- Position the anchor so that the belt rests across the center of your chest and over your shoulder.

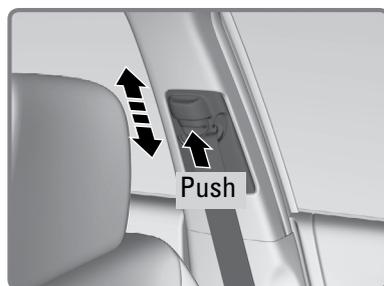

Airbags

Your vehicle is equipped with four types of airbags: front airbags, front knee airbags, side airbags, and side curtain airbags.



■ Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger. They are housed in the center of the steering wheel for the driver and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

■ Advanced Airbags

The airbags have advanced features to help reduce the likelihood of airbag related injuries to smaller occupants.

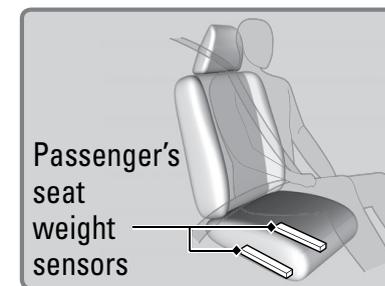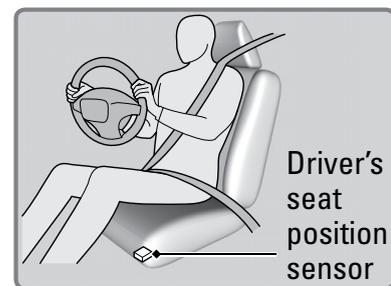

The driver's advanced airbag system includes a seat position sensor.

Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag.

The front passenger's advanced airbag system has weight sensors. We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, if you do allow a child age 12 or under to ride in the front passenger's seat, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

For both advanced front airbags to work properly:



- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.
- Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors.

■ Side Airbags

The side airbags help protect the upper torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact. They are housed in the outside edge of the driver's and front passenger's seat-backs. Both are marked **SIDE AIRBAG**.

■ Side Curtain Airbags

Side curtain airbags help protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

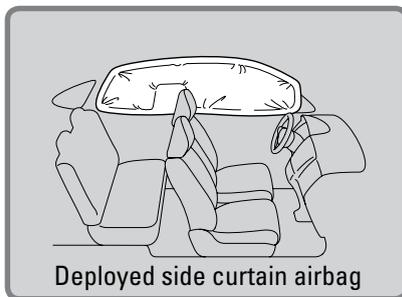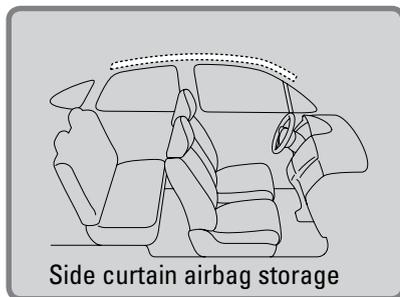

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

The side curtain airbags are designed to deploy in a rollover or moderate-to-severe side impact. If the SRS control unit senses that your vehicle is about to roll over, it immediately deploys both side curtain airbags and activates both front seat belt tensioners. If the impact is on the passenger's side, the passenger's side curtain airbag deploys even if there are no occupants on that side of the vehicle.

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars, as they can interfere with the proper operation of the side curtain airbags.

When side curtain airbags deploy in a frontal collision




One or both side curtain airbags may inflate in a moderate-to-severe angled frontal collision.

■ Front Knee Airbags

The knee SRS airbags inflates in a moderate-to-severe frontal collision to help keep the driver and/or front passenger in the proper position and to help maximize the benefit provided by the vehicle's other safety features.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

When the front airbags inflate, the knee airbags also inflate. Even if the collision is not severe enough to deploy the front airbags, the knee airbags may inflate alone.

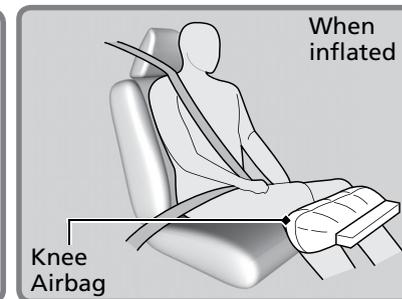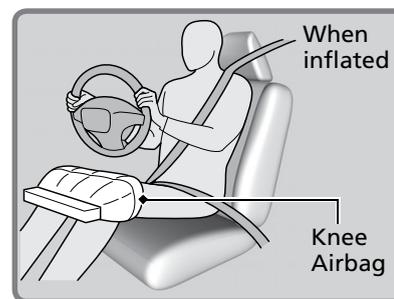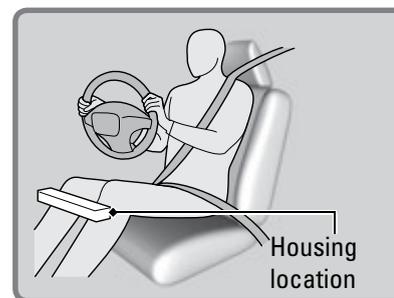

■ Important Facts About Your Airbags

Always wear your seat belt properly and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle.

Do not place hard or sharp objects between yourself and a front airbag.

Carrying or driving with a pipe, hard, or sharp objects in either your lap or mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front airbag covers. Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags or hurt someone if an airbag inflates.

Do not attach any objects to the side windows or roof pillars. They can interfere with the proper operation of the side curtain airbags.

Do not cover or replace the front seat-back covers. This can prevent your side airbags from properly deploying during a side impact.

⚠️ WARNING

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.

■ Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator comes on and a message appears on the Driver Information Interface.

SRS (Supplemental Restraint System indicator)

If the indicator comes on at any other time besides vehicle start-up or does not come on at all, have the system checked by a dealer as soon as possible.



⚠️ WARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Passenger airbag off indicator

The indicator comes on to alert you that the front passenger's front airbag has been turned off. This occurs when the front passenger's weight sensors detect 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

Children age 12 or under should always ride properly restrained in a back seat.



If the front passenger's seat is empty, the indicator will come on and, in the event of a crash, the front passenger's airbag will not deploy. The front passenger's knee airbag will not deploy either.

To ensure the passenger is detected properly, confirm that:

- There is no child seat or other object pressing against the rear of the seat-back.
- There is no rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is not forced back against an object on the seat or floor behind it.
- There is no object placed under or beside the front passenger's seat.
- The occupant is sitting in an upright position and the seat-back is not excessively reclined.
- The occupant is not leaning against the door or center console.
- The occupant's feet are placed on the floor in front of them.
- There are no objects hanging from the front passenger's seat.
- Only small, lightweight objects are in the seat-back pocket.


Note: The passenger airbag off indicator may come on and go off repeatedly if the total weight on the seat is near the airbag cutoff threshold.

Have your vehicle checked by a dealer as soon as possible if:

- All of the above conditions are met, and the indicator comes on with an adult seated in the front passenger seat.
- The seat is empty and the indicator is off.

Do not allow an adult passenger to ride in the front seat when the indicator is on.

■ Airbag System Components

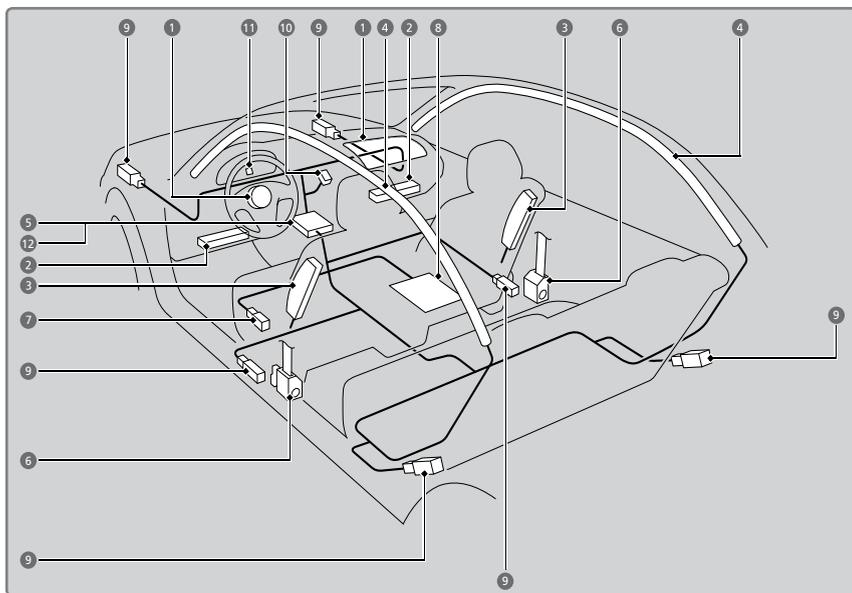

1. Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS AIRBAG**.
2. Two knee airbags. The driver's knee airbag is stored under the steering column; the front passenger's knee airbag is stored under the glove box. Both are marked **SRS AIRBAG**.
3. Two side airbags, one for the driver and one for a front passenger. The airbags are stored in the outer edges of the seat-backs. Both are marked **SIDE AIRBAG**.

4. Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked **SIDE CURTAIN AIRBAG**.
5. An electronic control unit that, when the vehicle is on, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners, and other vehicle information. During a crash event the unit can record such information.
6. Automatic front seat belt tensioners. In addition, the driver's and front passenger's seat belt buckles incorporate sensors that detect whether or not the belts are fastened.
7. A driver's seat position sensor. If the seat is too far forward, the airbag will inflate with less force. This sensor determines the optimal force at which the airbag will deploy in a crash.
8. Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is approximately 65 lbs (29 kg) or less (the weight of an infant or small child).
9. Impact sensors that can detect a moderate-to-severe front or side impact.
10. An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
11. An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.
12. A rollover sensor that detects whether the vehicle is about to roll over and signal the control unit to deploy both side curtain airbags.

■ Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

Do not remove or modify a front seat without first consulting a dealer

This would likely disable the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact a Honda dealer. For U.S. vehicles, call Honda Automobile Customer Service at (800) 999-1009. For Canadian vehicles, call Honda Canada Customer Relations at (888) 946-6329.

Child Safety

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle collisions are the number one cause of death of children ages 12 and under.

The National Highway Traffic Safety Administration and Transport Canada recommend that all children ages 12 and under be properly restrained in a rear seat. Some states, provinces, and territories have laws restricting where children may ride.

To reduce the number of child deaths and injuries, every state and Canadian province and territory requires that infants and children be properly restrained when they ride in a vehicle.

■ Protecting Child Passengers

- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.
- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the lap belt portion of the lap/shoulder belt or the lower anchors of the LATCH system.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows, or seat adjusters.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls, causing it to move unexpectedly.

WARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

WARNING

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

■ Protecting Infants


An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat manufacturer's weight or height limit for the seat and the infant is at least one year old. Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Child seats must be placed and secured in a rear seating position. Rear-facing child seats should never be installed in a forward-facing position.

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back or from locking their seat-back in the desired position.

Make sure that there is no contact between the child seat and the seat in front of it. It can also interfere with proper operation of the front passenger's advanced front airbag system. If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied. Or you may wish to get a smaller rear-facing child seat.

Do not allow a front seat to rest against a child seat installed in a rear seating position. The weight sensor in the front seat may not correctly detect the actual weight of the occupant.

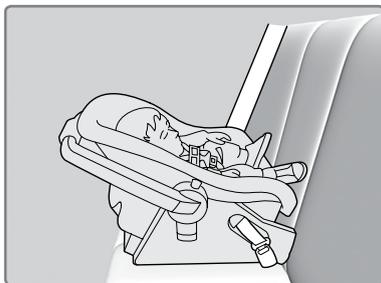

⚠️ WARNING

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.

Always place a rear-facing child seat in the rear seat, not the front.

■ Protecting Smaller Children

If a child is at least one year old and within the weight range indicated by the child seat manufacturer, the child should be properly restrained in a firmly secured forward-facing child seat.

We strongly recommend placing a forward-facing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.



⚠️ WARNING

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible and properly restrain the child.

■ Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for CHildren). Some have a rigid-type connector, while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH-compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

Important considerations when selecting a child seat


Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213 or Canadian Motor Vehicle Safety Standard 213.

■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.




1. Locate the anchor marks affixed to the base of the seat cushion.
2. Pull out the anchor covers under the marks to expose the lower anchors.

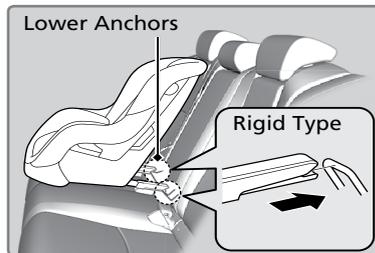

- Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat.

When installing the child seat, make sure that the lower anchors are not obstructed by the seat belt or any other object.

- Open the tether anchor cover behind the head restraint.
- Raise the head restraint to its highest position, then route the tether strap between the head restraint legs, and secure the tether strap hook to the anchor.

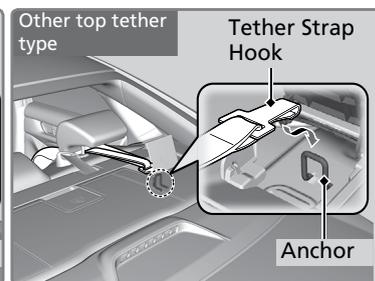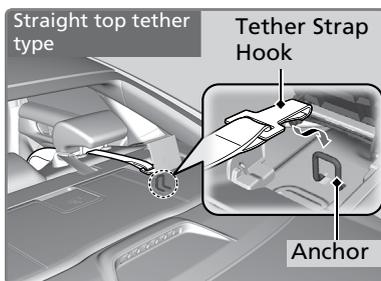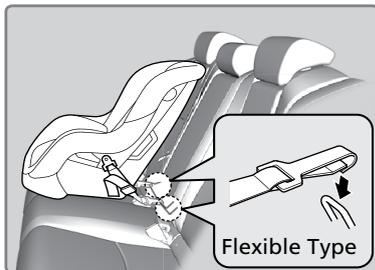

- Tighten the tether strap as instructed by the child seat manufacturer.
- Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
- Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.



■ Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed with a lap/shoulder belt in any rear seat, or if absolutely necessary, the front passenger seat.

- Place the child seat on the vehicle seat.
- Route the seat belt through the child seat according to the seat manufacturer's instructions and insert the latch plate into the buckle. Insert the latch plate fully until it clicks.



- Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
- Let the seat belt retract a few inches and check that the retractor has switched modes by pulling on the webbing. It should not pull out again until it is reset by removing the latch plate from the buckle. If you are able to pull the shoulder belt out, the lockable retractor is not activated. Pull the seat belt all the way out and repeat steps 3 – 4.

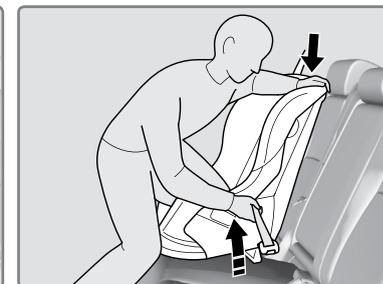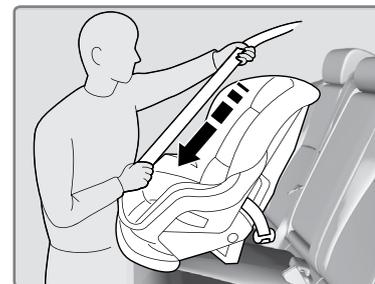

- Grab the shoulder part of the seat belt near the buckle and pull up to remove any slack from the lap part of the belt. When doing this, place your weight on the child seat and push it into the vehicle seat.
- Make sure the child seat is firmly secured by rocking it forward and back and side to side; less than one inch of movement should occur near the seat belt.






- Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked. To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

■ Adding Security with a Tether

A tether anchorage point is provided behind each rear seating position. If you have a child restraint system that comes with a tether but can be installed with a seat belt, the tether may be used for additional security. Always use a tether for forward-facing child seats when using the seat belt or lower anchors.



Using an outer anchor

- Locate the appropriate tether anchorage point and lift the cover.
- Raise the head restraint to its highest position, then route the tether strap through the head restraint legs. Make sure the strap is not twisted.
- Secure the tether strap hook to the anchor.
- Tighten the tether strap as instructed by the child seat manufacturer.

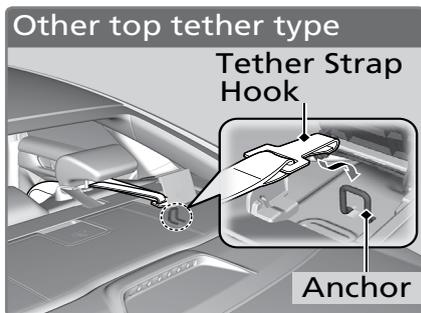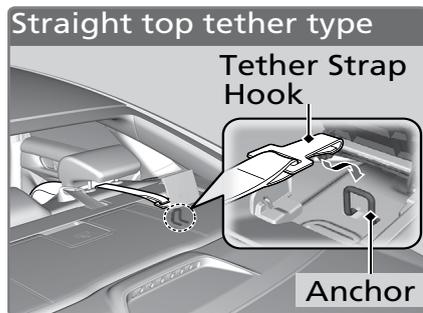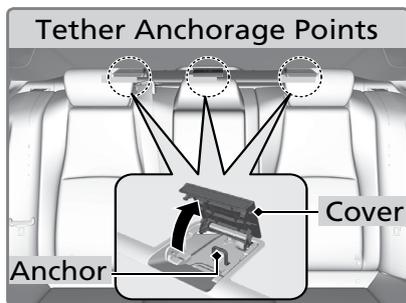

Using the center anchor

- Locate the appropriate tether anchorage point and lift the cover.
- Straight top tether type:* Route the tether strap over the head restraint. Make sure the strap is not twisted.
Other top tether type: Route the tether strap outside the head restraint. Make sure the strap is not twisted.
- Secure the tether strap hook to the anchor.
- Tighten the tether strap as instructed by the child seat manufacturer.

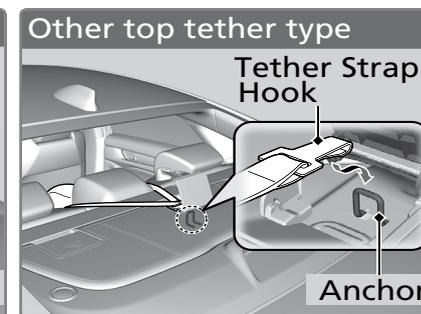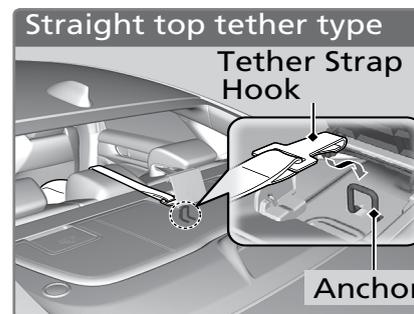

■ Protecting Larger Children

When a child is too big for a child seat, secure the child in a rear seat using the lap/shoulder seat belt.

Have the child sit upright and all the way back, then ensure the following:

- The child's knees bend comfortably over the edge of the seat.
- The shoulder belt crosses between the child's neck and arm.
- The lap part of the seat belt is as low as possible, touching the child's thighs.
- The child can stay seated for the whole trip.



If a lap/shoulder belt cannot be used properly, position the child in a booster seat in a rear seating position. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

Some U.S. states and Canadian provinces/territories require children to use a booster seat until they reach a given age or weight (e.g., 6 years or 60 lbs/27kg). Be sure to check current laws in the state or province/territory where you intend to drive.


WARNING

Allowing a child age 12 or under to sit in the front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, then have the child sit up properly and wear the seat belt properly, using a booster seat if needed.

Safety Label Locations

Safety labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

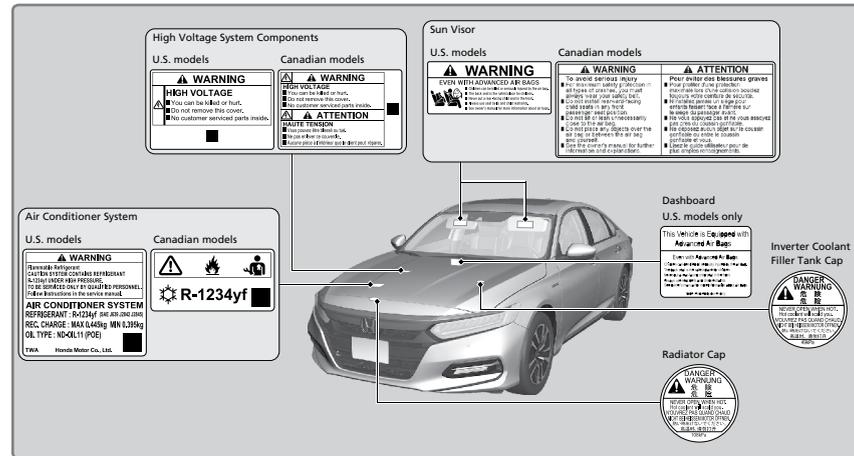**Reporting Safety Defects****In the U.S.**

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>, or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

In Canada

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Honda Canada, Inc., and you may also inform Transport Canada.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may lead to a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Honda Canada, Inc.

To contact Transport Canada's Defect Investigations and Recalls Division, you may call 1-800-333-0510. For more information on reporting safety defects or about motor vehicle safety, go to <http://www.tc.gc.ca/roadsafety>.

INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.



Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

BRAKE Brake system

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



Low oil pressure

Engine oil pressure is low. Stop in a safe place. Open the hood. Check the oil level and add oil if necessary (see page 130). If the indicator does not turn off, have your vehicle repaired immediately.



Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



Malfunction indicator lamp (check engine light)

- The emissions control system may have a problem or the fuel cap is loose or missing.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place and wait for the engine to cool down.



Anti-lock Brake System (ABS)

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



Tire Pressure Monitoring System (TPMS)

There is a problem with the tire pressure monitoring system.



CMBS

There is a problem with the system, the temperature is too high, or the camera is blocked.



Vehicle Stability Assist (VSA)

There is a problem with the VSA system.



Brake system

There is a problem with the brake system.



Canada



Electric Power Steering (EPS)

There is a problem with the EPS system.



Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)

There is a problem with the system, the temperature is too high, or the radar sensor is blocked.



Lane Keeping Assist System (LKAS)

There is a problem with the system, the temperature is too high, or the camera is blocked.



Road Departure Mitigation (RDM)

There is a problem with the system.

**if equipped*

Condition Indicators

These indicators may require you to perform an action.

BRAKE

Parking brake

U.S.



Release the parking brake before driving. You will hear a beep if you drive with it not fully released.

Canada



Seat belt reminder

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you and/or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.



Low fuel

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.



Low tire pressure

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. Recalibrate the TPMS after adjusting air pressure. The indicator also appears if your vehicle is fitted with the compact spare tire*. Have your regular tire repaired or replaced as soon as possible.



System message*

When a condition or malfunction indicator comes on, a message also appears in the driver information interface*. Check the display for more information.



Immobilizer

Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

READY

Ready

The vehicle is ready to drive.

**if equipped*

POWER SYSTEM

Power System

The High Voltage battery is too hot or there is a problem with the electric vehicle system.

EV

EV

The vehicle is moving using electric power only.

On/Off Indicators

These indicators remind you when an item is on or off.



VSA off



Turn signals/hazards on



VSA engaged (blinking)



Fog lights* on

ACC

ACC* with LSF* on



Auto High-Beam System on

LKAS

LKAS on



ECON mode on

BRAKE HOLD

Brake hold system on

SPORT

SPORT mode on

HOLD

U.S.

Brake hold activated



Safety Support Systems on


Canada

Driver Information Interface (DII)

The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.


■ Accessing contents of the Main Display

Press the HOME button, then roll the left selector wheel to scroll to the content you want to see. Press the left selector wheel to see detailed information.

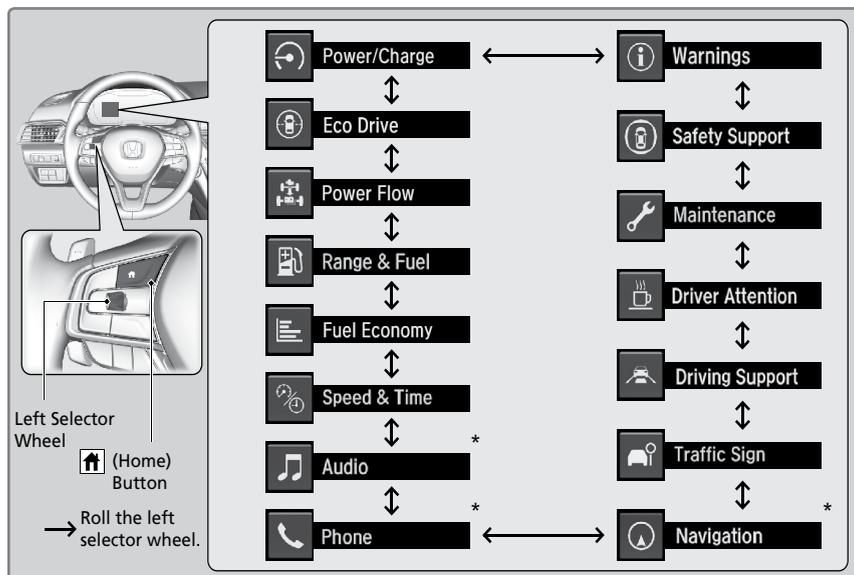

■ Sub display

Press the TRIP button to change the display.

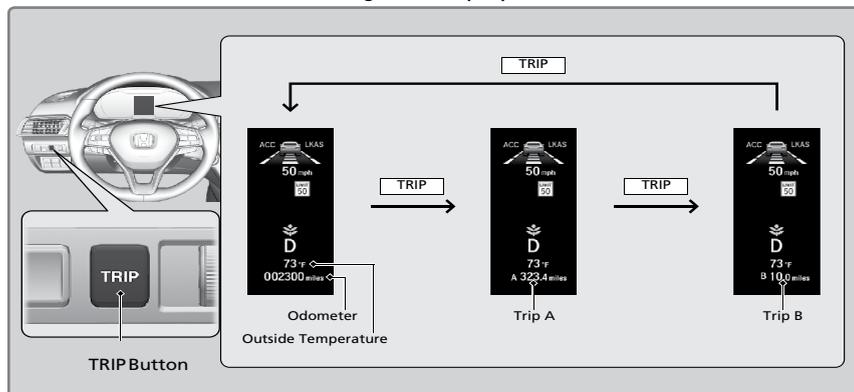

**if equipped*


Safety Support

Indicates the state of RDM, CMBS™, and Blind Spot Information* (for example, On, Off, or Failure) by color and letters.

■ How It Works

The following colors indicate the state of any of the above mentioned systems:

- Green: The system is on.
- Gray: The system is off.
- Amber: There is a problem with the system.

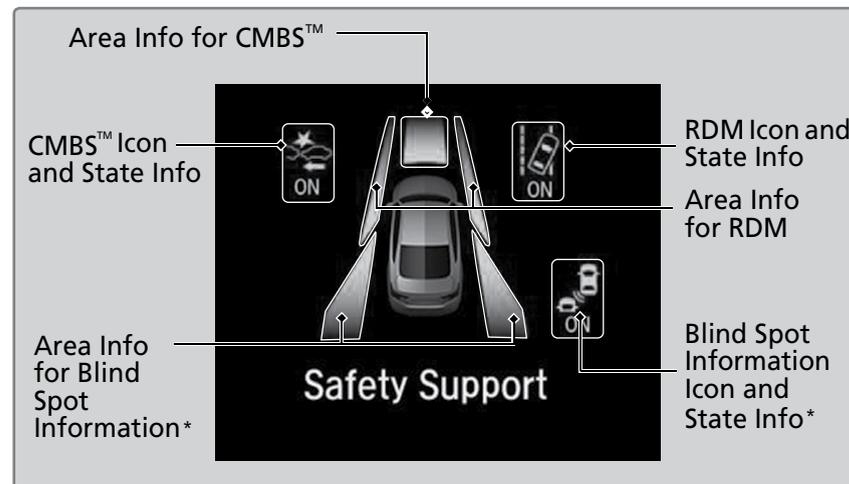

To turn the system on or off, first rotate the left selector wheel to switch displays. From the next display you can select which system to turn on or off.

If the system is indicated by the amber color, have your vehicle checked by a dealer immediately. You may also confirm the state of each function by the color of the safety support indicator.


**if equipped*

Head-Up Display*

Shows the current mode for ACC with LSF, POWER/CHARGE gauge, traffic sign recognition system, shift position indicator, or turn-by-turn directions along with the vehicle speed. You can choose which item to be displayed using the  (HUD) button on the steering wheel. They are displayed when the power mode is in ON.

To turn the head-up display on and off: Press the HUD button on the driver side control panel. The display can be moved up and down to come level with your eyes.

To raise or lower the head-up display: Press and hold the ▲ or ▼ button until the desired position is reached.

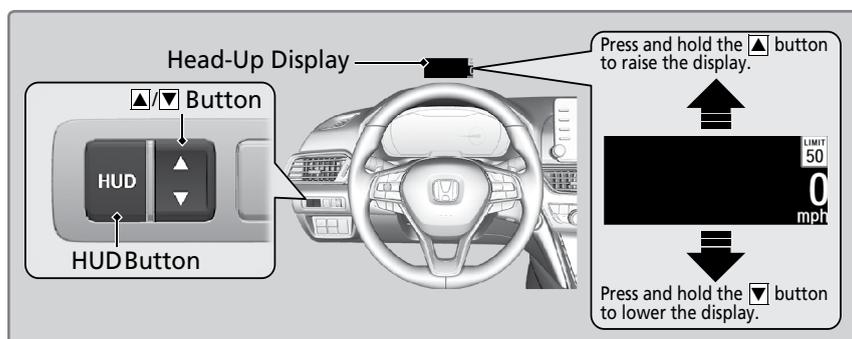


VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

Using the Smart Entry Remote

Lock or unlock the doors and trunk.

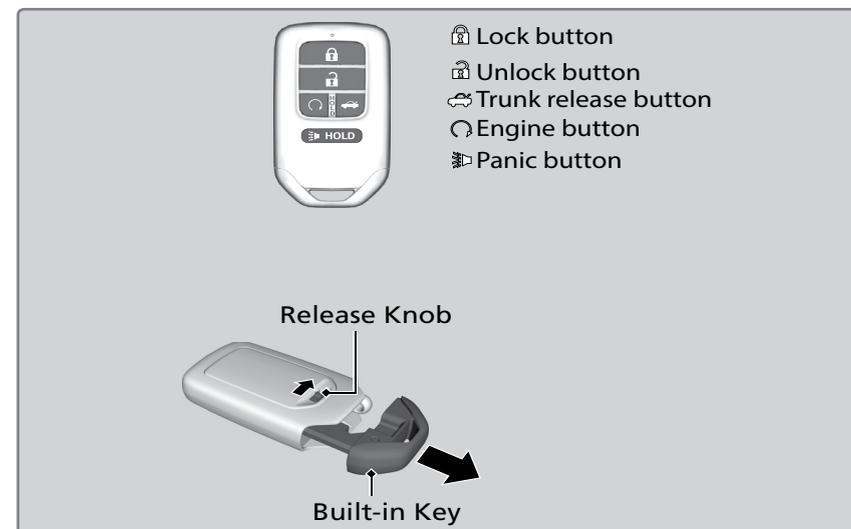

Locking the doors: Press the lock button once to lock all doors. Press twice to hear audible verification for setting the security alarm.

Unlocking the doors: Press once to unlock the driver's door and fuel fill door. Press twice to unlock remaining doors.

Unlocking the trunk: Press the trunk release button for approximately one second to unlock and open the trunk.

To engage panic mode: Press the panic button once to sound the panic alarm for approximately 30 seconds. Press any button on the remote transmitter to cancel panic mode.

To engage the remote engine start: Press the lock button, then press and hold the engine button to turn the power system on for up to 10 minutes.

NOTICE

Leaving the smart entry remote in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.


*if equipped

Smart Entry System


When you carry the smart entry remote, you can lock/unlock the doors, fuel fill door and open the trunk. You can lock/unlock the doors and fuel fill door within a radius of about 32 inches (80 cm) of the outside door handle. You can open the trunk within about 32 inches (80 cm) radius from the trunk release button.

■ Unlocking/Locking the Doors & Trunk

To unlock: Grab the driver's door handle when the vehicle is off to unlock the driver's door and fuel fill door. Grab the front passenger's door handle to unlock all doors.

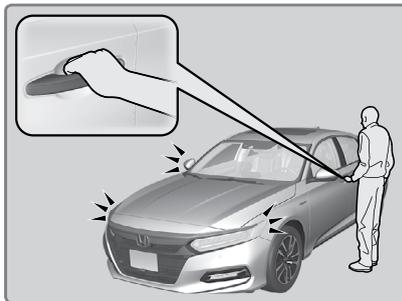


To lock: Touch the door lock sensor on the front door when the vehicle is off. If the smart entry remote is inside the vehicle, the doors will not lock.

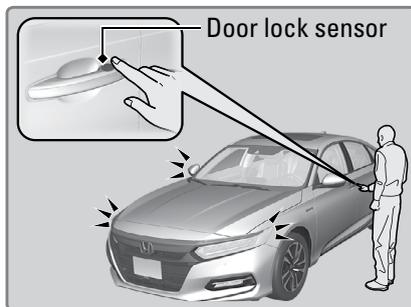

■ Unlocking the Trunk

Press the trunk release button to unlock and open the trunk.

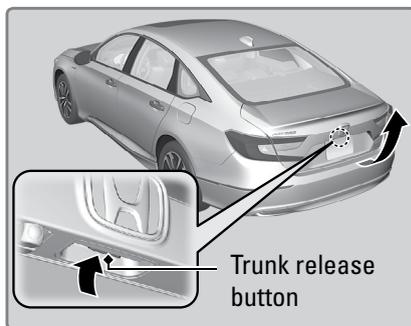

You can customize door locking and unlocking settings. See page 60.


■ Walk Away Auto Lock

When you walk away from the vehicle while carrying the smart entry remote, the doors can automatically lock if the following conditions are met:

- The smart entry remote is within a range of 5 feet (1.5 m).
- All doors and the hood are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Carry the smart entry remote while you exit the vehicle. Close all the doors and stay near the vehicle. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

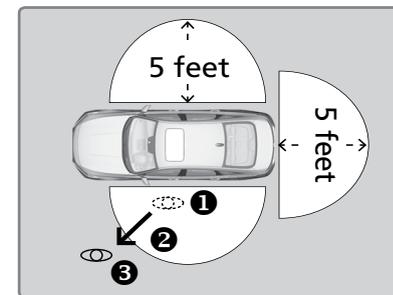

Models with Color Audio:

To turn on this feature, follow these steps with vehicle stopped and the power mode set to ON:

1. Press the **MENU/CLOCK** button, then select **Settings**.
2. Select **Vehicle**.
3. Select **Door/Window Setup**.
4. Select **Walk Away Auto Lock**.
5. Select **On**.

Models with Display Audio:

To turn on this feature, follow these steps with the vehicle stopped and the power mode set to ON:

1. From the audio/information screen, select **Settings**.
2. Select **Vehicle**.
3. Select **Door/Window Setup**.
4. Select **Walk Away Auto Lock**.
5. Select **ON**.


Door Operation

Use several methods to lock or unlock the doors.

Using the Lock Tab


To lock: Push the lock tab forward. When you lock the door using the lock tab on the door, all the other doors and the fuel fill door lock at the same time.

To unlock: Pull the lock tab rearward. When you unlock the lock tab on the driver's door, only the driver's door will unlock.

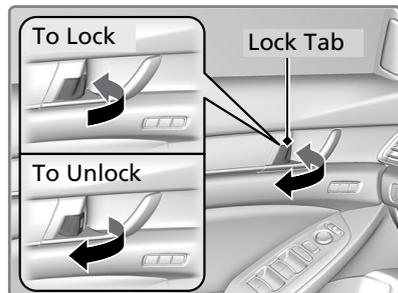


Using the Front Door Inner Handle

Pull the front door inner handle. The door unlocks and opens in one motion. Unlocking and opening the driver's door from the inner handle unlocks all other doors and the fuel fill door. This feature requires front seat occupants never pull a front door handle while the vehicle is in motion. Children should always ride in a rear seat where childproof door locks are provided.

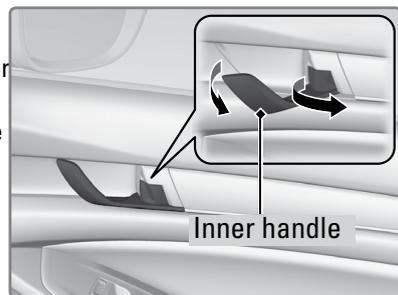

Using the Master Door Lock Switch

Press the master door lock switch in (as shown in image) to lock or unlock all doors and the fuel fill door. When you lock/unlock either front door using the master lock switch, all the other doors lock/unlock at the same time.

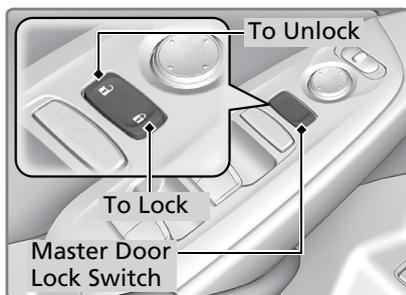


Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.


Slide the lever in the rear door to the lock position and close the door.

Open the door using the outer door handle. To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle.

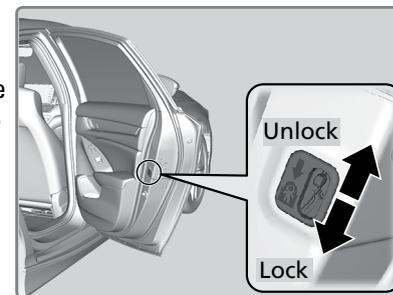

Using the Trunk Opener


Press and hold the trunk opener on the driver's door to unlock and open the trunk.

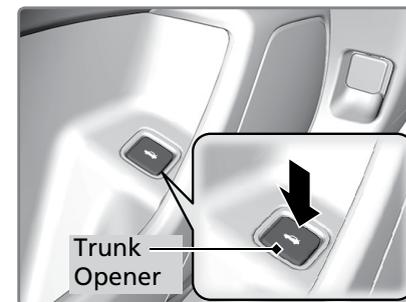

Trunk Main Switch

The trunk main switch disables the trunk release button on the smart entry remote, trunk release button on the trunk lid, and trunk opener on the driver's door to protect luggage in the trunk.

1. Make sure the rear seat-back is not folded down.
2. Turn off the trunk main switch located in the glove box.
3. Lock the glove box.

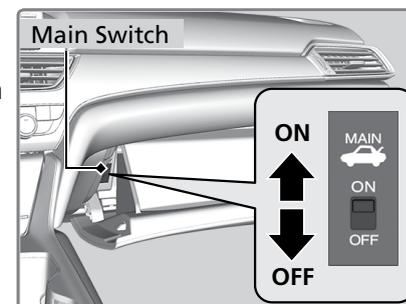


If you need to give the key to someone else, remove the built-in key from the smart entry remote by sliding the release knob, and give the remote as a valet key.

■ Using the Trunk Release Button

Push up the release button on the trunk lid after the doors are unlocked.

Even if the trunk is locked, you can open the trunk if you carry the smart entry remote.

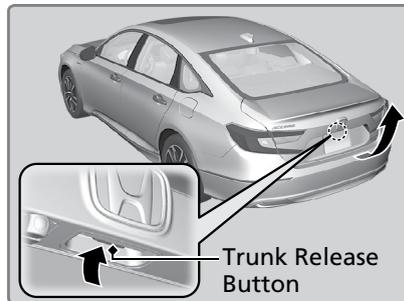


■ Using the Emergency Trunk Opener

The trunk release lever allows you to open the trunk from inside for your safety.

Slide the release lever in the direction of the arrow.

Parents should decide if their children should be shown how to use this feature.

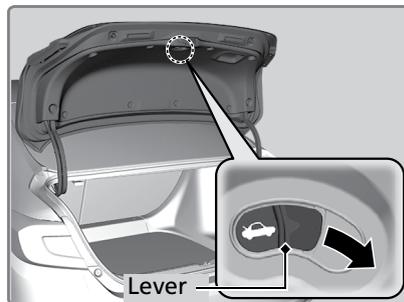

Power Window Operation

The power windows can be opened and closed when the vehicle is on by using the switches on the doors. The switches on the driver's side can be used to open and close all the windows.

■ Auto-Open/Close Function


To open: Push the switch down firmly.

To close: Pull the switch up firmly. The window opens or closes completely. To stop the window at any time, push or pull the switch again briefly.

Auto Reverse

If a power window senses resistance when closing automatically, it will stop closing and reverse direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch. The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

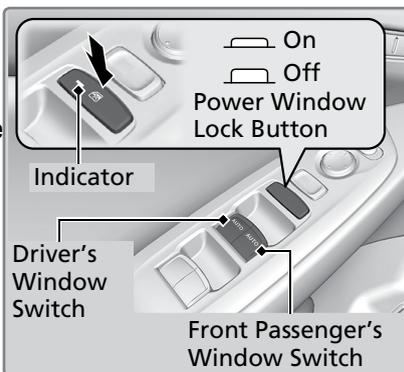

■ Manual Operation

To open: Push the switch down lightly and hold it until the desired position is reached.

To close: Pull the switch up lightly and hold it until the desired position is reached.

■ Power Window Lock

Push in the power window lock button so only the driver's window can be operated.

⚠ WARNING

Closing a power window on someone's hands or fingers can cause serious injury. Make sure your passengers are away from the windows before closing them.

Power Moonroof Operation*


The moonroof can be opened and closed when the vehicle is on by using the switch on the ceiling.

■ Automatic Operation

To open: Push the switch back firmly.

To close: Push the switch forward firmly.

The moonroof opens or closes completely. To stop the moonroof at any time, push the switch briefly.

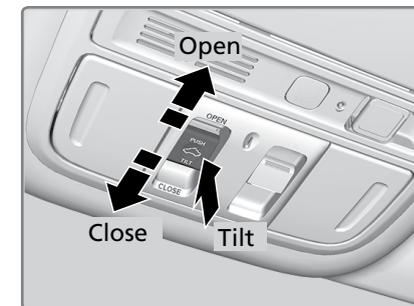

■ Manual Operation

To open: Push and hold the switch back until the desired position is reached.

To close: Push and hold the switch forward until the desired position is reached.

■ Moonroof Tilt

To tilt: Push the center of the switch.

To close: Push the switch forward firmly, then release.

⚠ WARNING

Closing the moonroof on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the moonroof before closing it.

*if equipped

NOTICE

Opening the moonroof in below freezing temperatures or when it is covered with snow or ice can damage the moonroof panel or motor.

Interior and Exterior Lights

Operate interior and exterior lights when the vehicle is on or off.

Brightness Control


Adjust instrument panel brightness when the vehicle is on.

To brighten: Turn the wheel upward.

To dim: Turn the wheel downward.

A beep sounds when the brightness reaches its minimum or maximum.

When it is bright outside and headlight integration* with wipers are activated, the instrument panel brightness does not change.

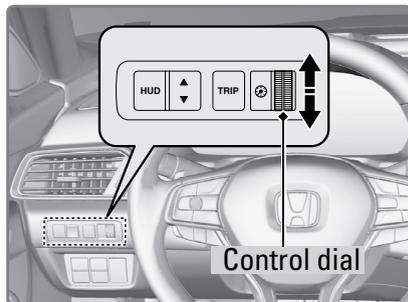

Interior Lights



Change the interior light settings using the switch on the ceiling.

ON position (rear): Interior lights remain on.

Door-activated position: Interior lights come on when any of the doors are opened, the driver's door is unlocked, or the vehicle is turned off.

OFF position: Interior lights remain off.

Map lights: Press the map lights to turn on or off.

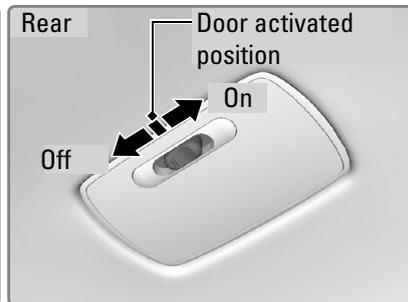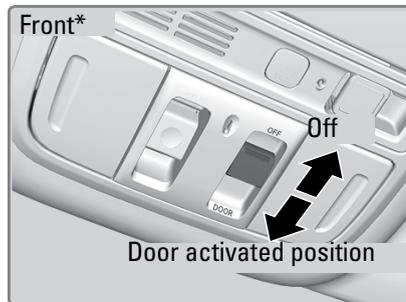

**if equipped*

Exterior Lights

Rotating the light switch turns the lights on and off.

OFF: All exterior lights are off.


: Turn on exterior lights except headlights.

AUTO: Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the vehicle is on.

Headlights automatically* come on after the wipers are engaged for a certain time. When you turn the light switch to AUTO, the headlights and other exterior lights will switch on and off automatically depending on the ambient brightness. The headlights come on when you unlock a door in dark areas with the headlight switch in AUTO.

: Turn on all exterior lights including headlights.

: Turn fog lights* on or off.

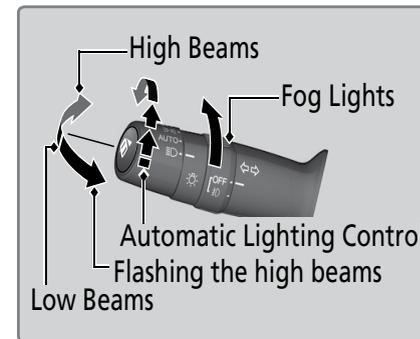

Auto High-Beam System

Using a camera mounted to the inside of the windshield, this system detects light sources ahead of the vehicle. Depending on the light source, the system automatically switches the headlights to high beam for optimal visibility at night.

How It Works


When the camera detects lights coming from a preceding or oncoming vehicle, the headlights remain in low beam. When the camera detects no lights coming from a preceding or oncoming vehicle, the headlights change to high beam. The view angle or distance that the camera can detect lights ahead differs depending on conditions, such as the brightness of the lights and the weather.

System Operation Conditions

The system operates when:

- The headlight switch is in **AUTO**.
- The lever is in the low beam position.
- The low beams are on and the system recognizes that you are driving at night.
- The vehicle speed is above 25 mph (40 km/h).

**if equipped*

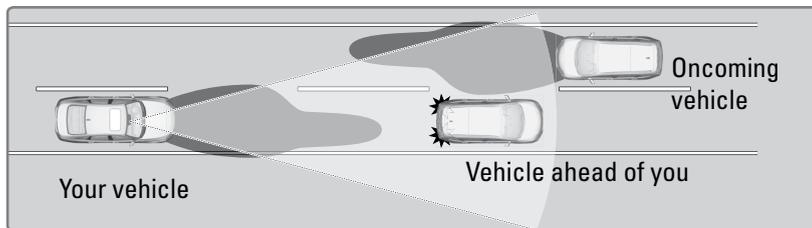

If you do not want the system to be activated at any time when the headlight switch is in **AUTO**, consult a dealer or disable the system.

■ Turning the System On or Off

Make sure the headlight lever is in the low beam position with the switch rotated to the **AUTO** position. The auto high-beam system indicator comes on.


The system is canceled temporarily when you drive continuously at a speed below 15 mph (24 km/h), the vehicle speed drops below 6 mph (10 km/h), the windshield wipers run at high speed for more than a few seconds, or you enter a well lit location.

The high beams come back on once the condition that caused them to turn off no longer exists.

Disabling the system: Pull the light switch lever toward you and hold it for at least 40 seconds. The auto high-beam indicator in the meter will blink twice.

Re-enabling the system: Pull the light switch lever toward you and hold it for at least 30 seconds. The auto high-beam indicator in the meter will blink once.

If needed, you can temporarily turn the system off manually. Turn on the high beams by pushing the lever forward until you hear a click or flash the high beams once by pulling the lever toward you. To turn the system back on, pull and hold the lever toward you for a few seconds.

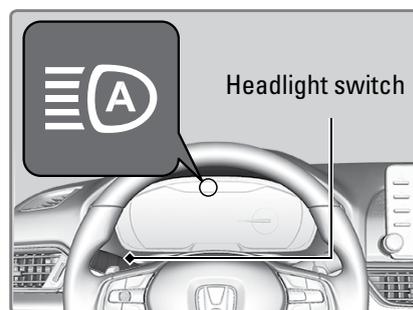

■ Using the Auto High-Beam System

If you find the timing of beam changes inconvenient for driving, change the headlight beams manually.

If the **Some Driver Assist Systems Cannot Operate: Camera Temperature Too High** message appears:

- Use the climate control system to cool down the interior and, if necessary, also use defroster mode with the air flow directed toward the camera.
- Start driving the vehicle to lower the windshield temperature, which cools down the area around the camera.

If the **Auto High-Beam Cannot Operate: Clean Windshield** message appears:

- Park your vehicle in a safe place and clean the windshield. If the message does not disappear after you have cleaned the windshield and driven for a while, have your vehicle checked by a dealer.

For the auto high-beam system to work properly:


- Do not place an object that reflects light on the dashboard.
- Keep the windshield around the camera clean. When cleaning the windshield, be careful not to apply the windshield cleanser to the camera lens.
- Do not attach an object, sticker, or film in the area around the camera.
- Do not touch the camera lens.

If the camera receives a strong impact or repairing of the area near the camera is required, consult a dealer.

Wiper Operation


The windshield wipers and washers can be used when the power mode is in ON.

- **MIST**
The wipers run at a high speed until you release the lever.
- **Wiper Switch (OFF, INT*1/AUTO*2, LO, HI)**
Move the lever up or down to change the wiper settings.
- **Washer**
Sprays while you pull the lever toward you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windshield, then stop.

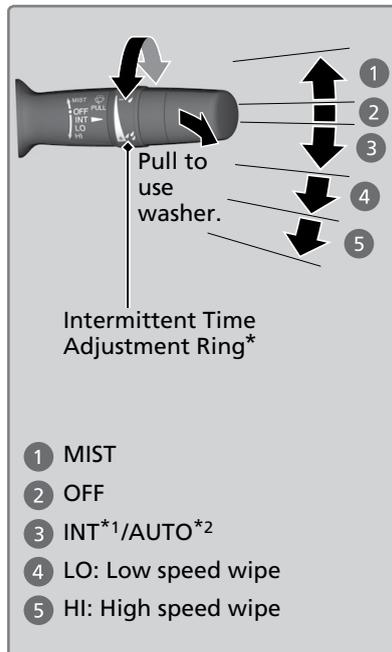

Models with intermittent time adjustment ring

If the vehicle speeds up while the wipers are operating intermittently, the length of the wipe interval shortens. When the vehicle speeds up, the wiper operation's shortest delay setting (☔) and the **LO** setting become the same.

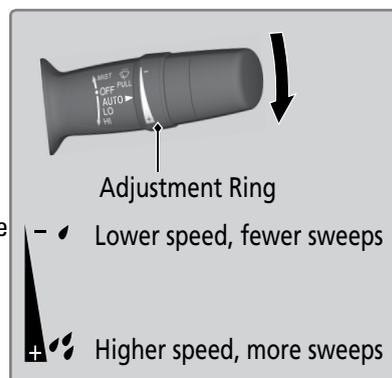

*1: without automatic intermittent wipers
*2: with automatic intermittent wipers
*if equipped

Headlight-Wiper Integration*

When the headlights are in the **AUTO** position, they automatically turn on when the front wipers operate several times within a certain interval. The headlights turn off shortly after the wipers are turned off or if there is enough ambient light.

Intermittent (INT) Wipers*

When you move the lever to the **INT** position, the wipers operate based on the delay adjustment.

Rotate the adjustment ring to adjust the wiper delay.

Automatic (AUTO) Intermittent Wipers*

When you push the lever down to **AUTO**, the windshield wipers sweep once, and go into the automatic mode. The wipers operate intermittently, at low speed, or at high speed and stops in accordance with the amount of rainfall the rainfall sensor detects.

When the wiper function is set to **AUTO**, you can adjust the sensitivity of the rain fall sensor (using the adjustment ring) so that wipers will operate in accordance with your preference.



NOTICE

Turn the washers off if no washer fluid comes out. The pump may get damaged.

NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched or the rubber blades will get damaged.

In cold weather, the blades may freeze to the windshield. Operating the wipers in this condition may damage the wipers. Use the defroster or heated windshield* to warm the windshield, then turn the wipers on.

*if equipped

NAVIGATION
DRIVING
HANDLING THE UNEXPECTED
MAINTENANCE
SPECIFICATIONS
CUSTOMER INFORMATION
VOICE COMMAND INDEX
INDEX

TABLE OF CONTENTS
VISUAL INDEX
SAFETY INFORMATION
INSTRUMENT PANEL
VEHICLE CONTROLS
AUDIO AND CONNECTIVITY
BLUETOOTH® HANDSFREELINK®
HONDALINK®

NOTICE

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:


- Cleaning the windshield
- Driving through a car wash
- No rain present

One-Touch Turn Signal

Use this quick and convenient method to signal a lane change.

Lightly push the turn signal lever up or down for a three-blink sequence.

For a continuous signal, push the lever up or down until it locks into place.

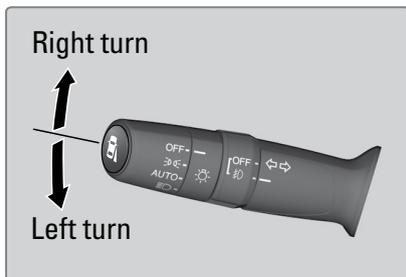


Adjusting the Seats

Make seat adjustments before driving to ensure the best comfort and safety.

Adjusting the Front Seats


Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright and well back in the seat, adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

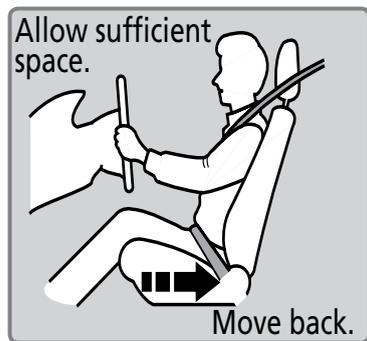

The National Highway Traffic Safety Administration and Transport Canada recommend that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.

**if equipped*

Adjusting the front power seat(s)*

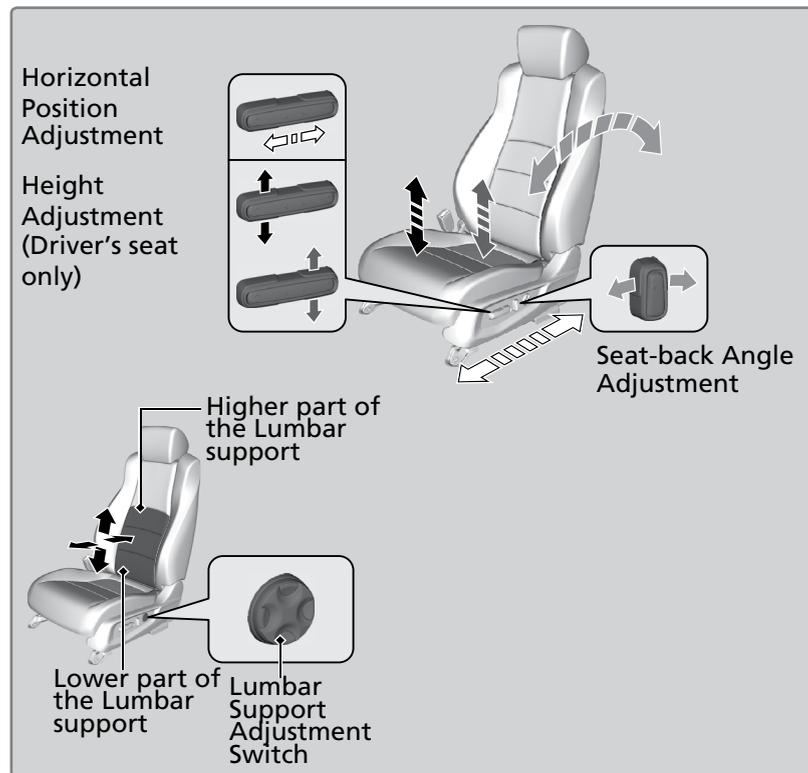

Models with a Lumbar support adjustment switch:

Press the top: To increase the higher part of the lumbar support.

Press the bottom: To increase the lower part of the lumbar support. (The higher part support is decreased.)

Press the front: To increase the entire lumbar support.


Press the rear: To decrease the entire lumbar support.

WARNING

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate. Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

**if equipped*

■ **Adjusting the front manual seat(s)***

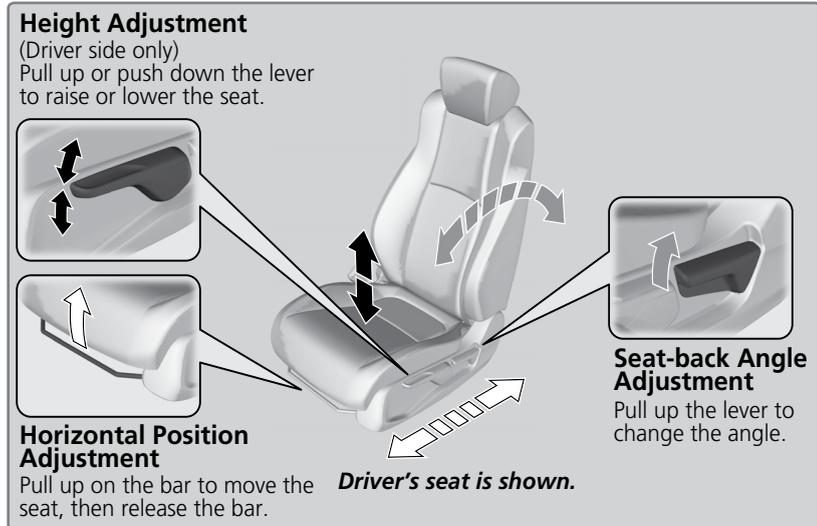

Once a seat is adjusted correctly, rock it back and forth to make sure it is locked in position.

⚠ WARNING

Reclining the seat-back too far can result in serious injury or death in a crash. Adjust the seat-back to an upright position and sit well back in the seat.

⚠ WARNING


Sitting improperly or out of position can result in serious injury or death in a crash. Always sit upright, well back in the seat, with your feet on the floor.

■ **Floor Mats**

The driver's floor mat hooks over the floor anchors, which keep the mat from sliding forward.

To remove a mat for cleaning, turn the anchor knobs to the unlock position.

When reinstalling the mat after cleaning, turn the knobs to the lock position.

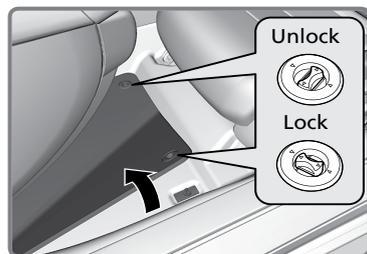


Do not put additional floor mats on top of the anchored mat.

**if equipped*

■ **Adjusting the Front and Rear Outer Head Restraint Positions**

Your vehicle is equipped with head restraints in all seating positions.

Head restraints are most effective for protection against whiplash and other rear-impact crash injuries when the center of the back of the occupant's head rests against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.


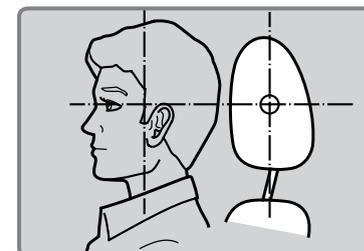


To raise the head restraint: Pull it upward.

To lower the head restraint: Push it down while pressing the release button.

To remove the head restraint: Pull the restraint up as far as it will go. Then push the release button and pull the restraint up and out.

To reinstall a head restraint: Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

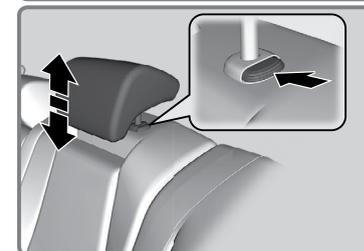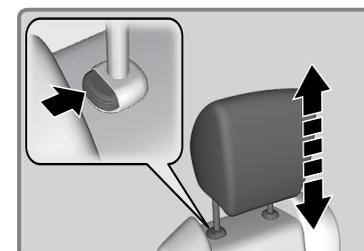

For a head restraint system to work properly:

- Do not hang any items on the head restraints or from the restraint legs.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

⚠ WARNING

Failure to reinstall or correctly reinstall the head restraints can result in severe injury during a crash. Always replace the head restraints before driving.



⚠ WARNING

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash. Make sure head restraints are in place and positioned properly before driving.


Folding Down the Rear Seats

The rear seat-backs can be folded down to accommodate bulkier items in the trunk.

1. Remove the center shoulder belt
2. Pull the release lever in the trunk to release the lock.

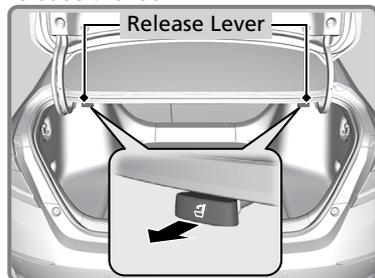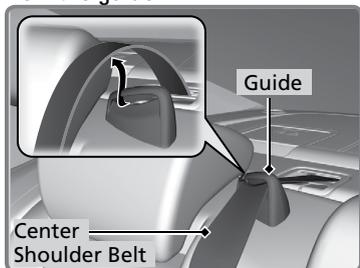

3. To lock a seat-back upright, push it backwards until it locks. When returning the seat-back to its original position, push it firmly back. Also, make sure all rear shoulder belts are positioned in front of the seat-back, and the center shoulder belt is re-positioned in the guide.

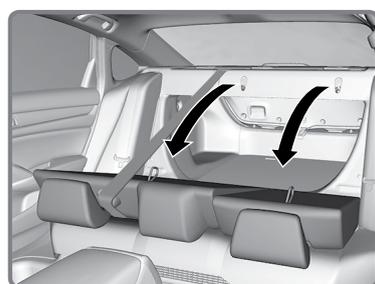


Make sure all items in the trunk or items extending through the opening into the rear seat is properly secured. Loose items can fly forward if you have to brake hard.

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

1. Push the steering wheel adjustment lever down. The steering wheel adjustment lever is under the steering column.
2. Move the steering wheel up or down, and in or out. Make sure you can see the instrument panel gauges and indicators.
3. Pull up the steering wheel adjustment lever to lock the steering wheel in position. After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

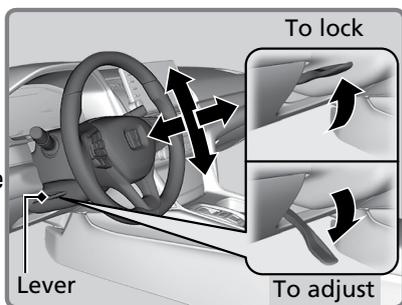

WARNING


Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash. Adjust the steering wheel only when the vehicle is stopped.

Driving Position Memory System*

You can store two driver's seat (except for power lumbar) with the driving position memory system. When you unlock and open the driver's door with smart entry remote, the seat adjusts to retracted positions of one of the two preset positions automatically. The seat will move to the stored position when you set the power mode to **ACCESSORY**.

When you enter the vehicle, the driver information interface briefly shows you which remote transmitter you used to unlock the vehicle.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.

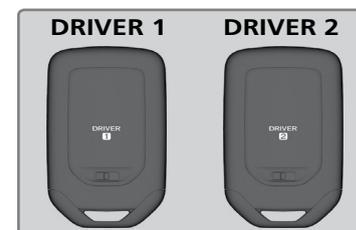


The driver's seat moves rearward depending on the set seating position once you:

- Stop the vehicle.
- Put the transmission in P.
- Set the power mode to **VEHICLE OFF**.
- Then open the driver's door.

Once the power mode is in the **ACCESSORY** position, the driver's seat moves forward to the **DRIVER 1** or **2** preset position.

1. Set the power mode to ON. Adjust the driver's seat to the desired position.
2. Press the **SET** button. You will hear the beeper and the memory button indicator light will blink.
3. Press memory button **1** or **2** within five seconds of pressing the **SET** button. Once the seat position has been memorized, you will hear the beeper twice, and the indicator light on the button you pressed stays on. Press memory button **1** or **2** to recall a stored position.

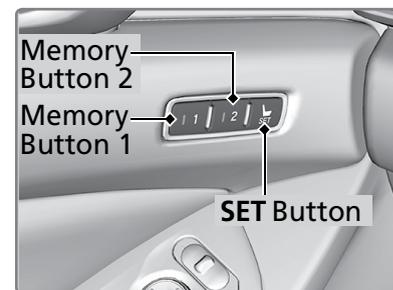


Adjusting the Mirrors

Adjust the angle of the rearview mirror when you are sitting in the correct driving position. Keep the inside and outside mirrors clean and adjusted for best visibility.


Rearview Mirror with Day/Night Positions*

Flip the tab to switch the position. The night position will help to reduce the glare from headlights behind you when driving after dark.

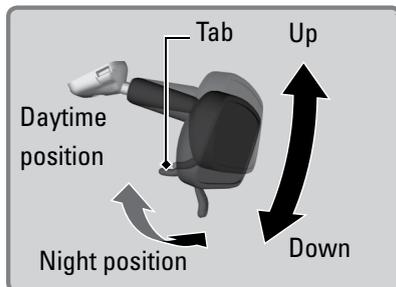

Automatic Dimming Rearview Mirror*

When you are driving after dark, the automatic dimming rearview mirror reduces the glare from headlights behind you. Press the auto button to turn this function on and off. When activated, the auto indicator comes on.

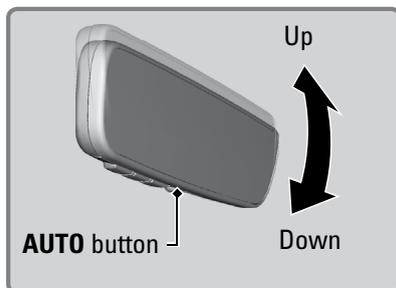


The auto dimming function cancels when the transmission is in R.

Power Door Mirrors

You can adjust the door mirrors when the power mode is in **ON**.

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the center position.

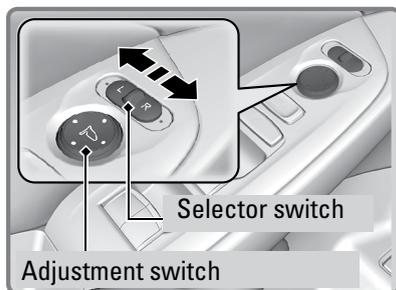

Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

**if equipped*

Rear Defogger and Heated Door Mirror Button

Press the rear defogger and heated door mirror button to defog the rear window and mirrors when the power mode is in **ON**.


The rear defogger and heated door mirror automatically switches off after 10-30 minutes depending on the outside temperature.

However, if the outside temperature is 32°F (0°C) or below, it does not automatically switch off. When the outside temperature is below 41°F (5°C), the heated door mirror may activate automatically for 10 minutes when you set the power mode to **ON**.



Heated Windshield Button (Canadian Models)

Press the heated windshield button to deice the windshield when the vehicle is in **ON**.

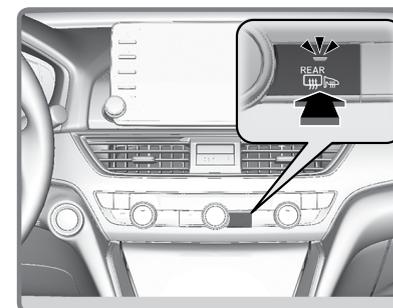


This system consumes a lot of power, so turn it off when the window has been defogged or deiced. Also, do not use the system for a long period when the power system is stopped. This may weaken the 12-volt battery, making it difficult to turn the power system on.

Heated Steering Wheel * (Canadian Models)

The power mode must be in ON to use the heated steering wheel.

Press the button on the lower side of the steering wheel.

When a comfortable temperature is reached, press the button again to turn it off.


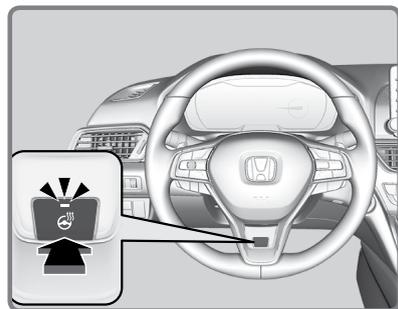


Do not use the heated steering wheel continuously when the power system is off. Under such conditions, the 12-volt battery may be weakened, making the power system difficult to start.

The heated steering wheel is turned off every time you start the power system, even if you turned it on the last time you drove the vehicle.

HomeLink® Universal Transceiver*


The HomeLink® Universal Transceiver can be programmed to operate up to three remote controlled devices around your home, such as garage doors, lighting, or home security systems.

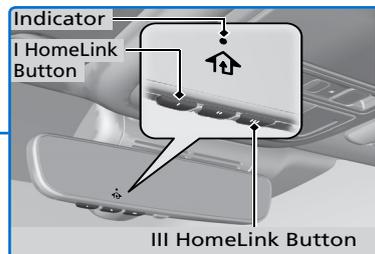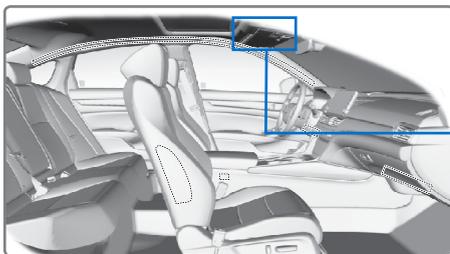

*if equipped

■ Training a Button


Park near the system you want to program and follow the instructions in the flowchart below:

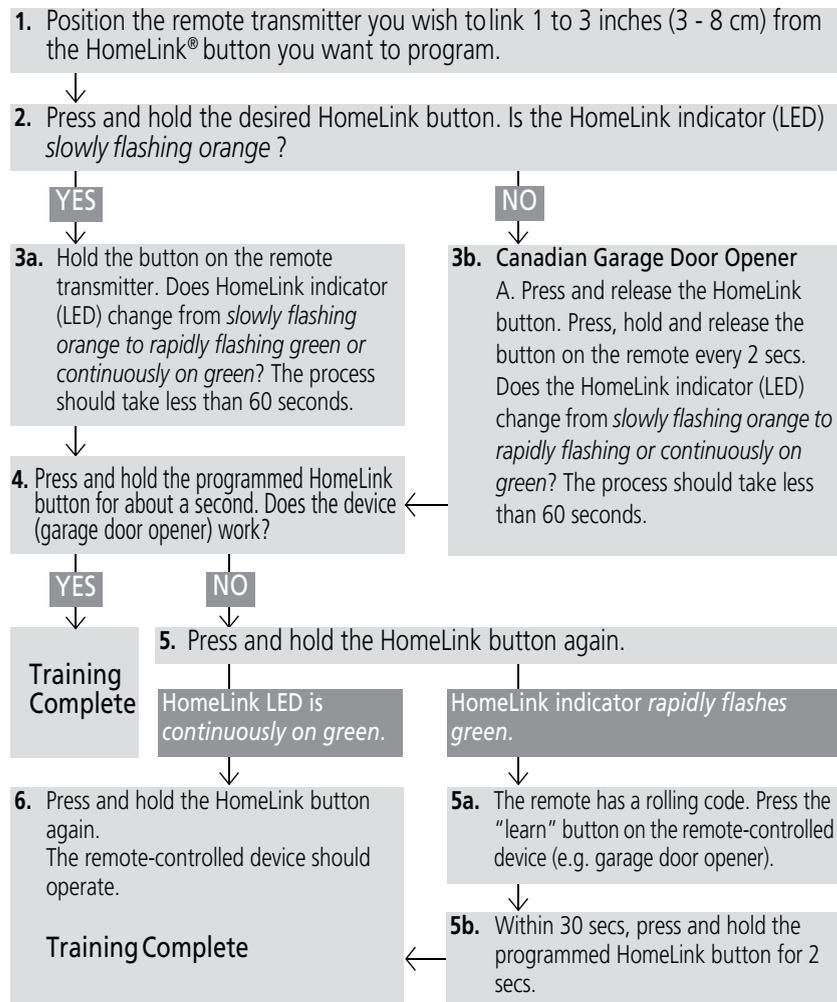

To retrain a button or erase codes, see the Owner's Manual at owners.honda.com (U.S.) or www.myhonda.ca (Canada). If you need help, visit www.homelink.com or call the HomeLink Hotline (North America only) at (800) 355-3515.

Climate Control System

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the controls on the dashboard to control the system.


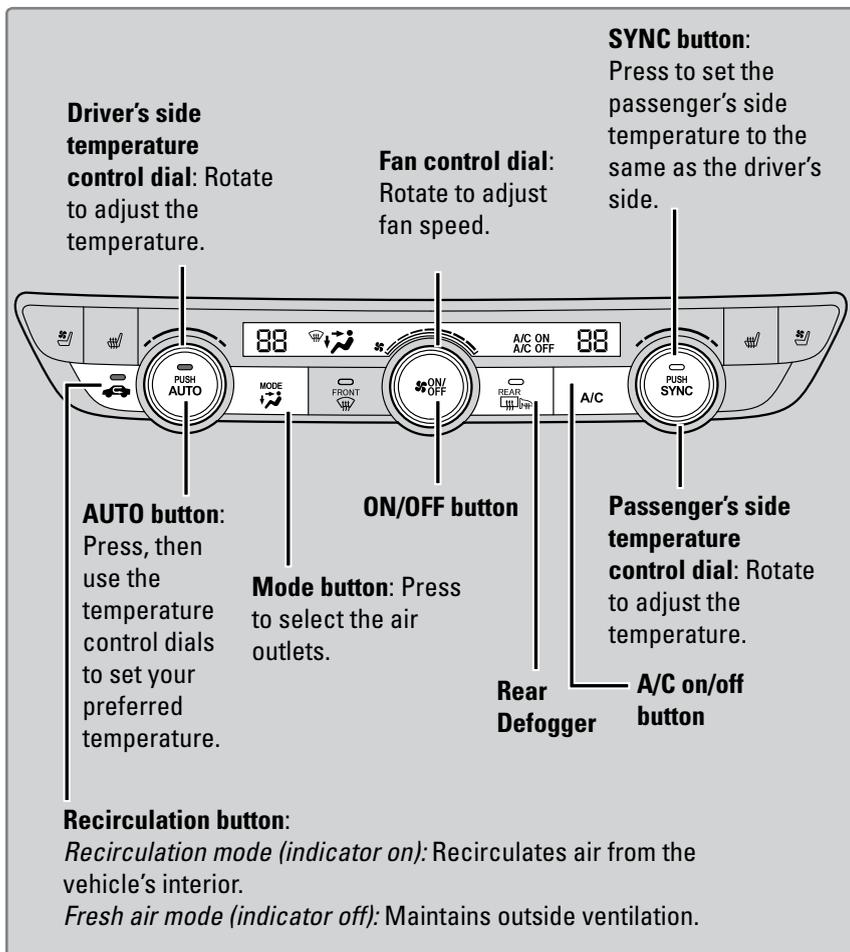


Seat Heaters* and Ventilation*

Quickly warm or ventilate the seats when the vehicle is on.

Press the seat heater* or the seat ventilation* button:

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

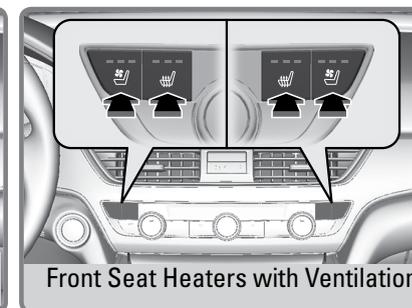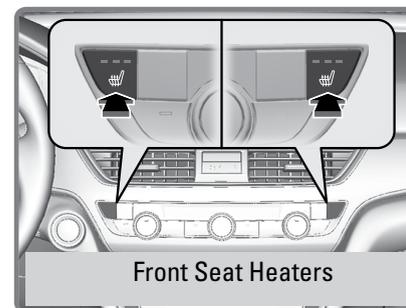


Rear Seat Heaters*

Quickly warm the rear outer seats using the controls on the doors. The rear center seat does not have a seat heater.

Press the seat heater or the seat ventilation button:

- Once - The HI setting (three indicators on)
- Twice - The MID setting (two indicators on)
- Three times - The LO setting (one indicator on)
- Four times - The OFF setting (no indicators on)

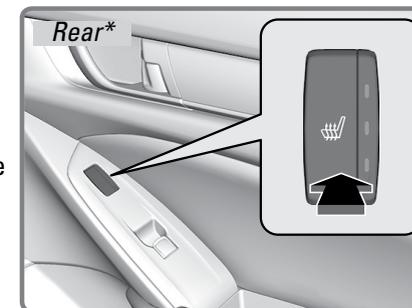

⚠ WARNING

Heat-induced burns are possible when using seat heaters. Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

*if equipped

TABLE OF CONTENTS

VISUAL INDEX

SAFETY INFORMATION

INSTRUMENT PANEL

VEHICLE CONTROLS

AUDIO AND CONNECTIVITY

BLUETOOTH® HANDSFREELINK®

HONDALINK®

NAVIGATION

DRIVING

HANDLING THE UNEXPECTED

MAINTENANCE

SPECIFICATIONS

CUSTOMER INFORMATION

VOICE COMMAND INDEX


INDEX

Customized Features

Use the audio/information screen to customize certain features when the vehicle is at a complete stop and the power mode is set to **ON**.

Models with Color Audio


Use the selector knob to make and enter selections.

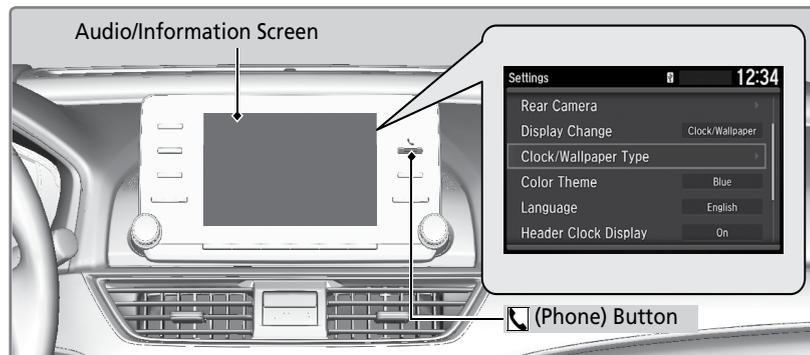

1. Press the **MENU/CLOCK** button, then select **Settings**.
2. Select an option and make your preferred changes.
3. Press the **BACK** button to exit the menu.

Models with Display Audio

Use the touchscreen audio/information screen to customize certain features when the vehicle at a complete stop and the power mode is set to **ON**.

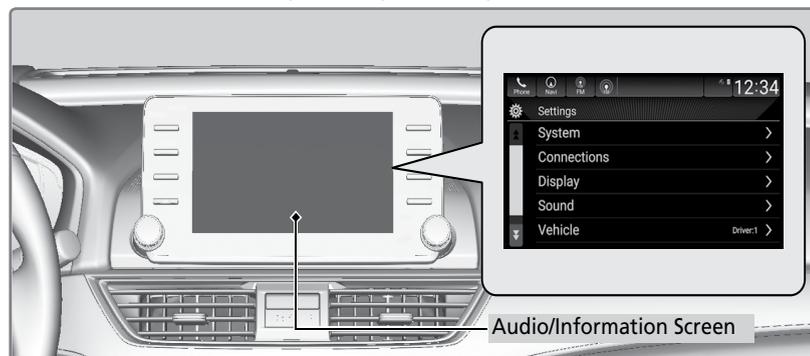

1. Select **Settings**.
2. Select an option and make your preferred changes.
3. Press **HOME** to exit the menu.

Customization Example: Door Lock/Unlock Settings

To customize the door lock/unlock settings, the vehicle must be stopped and the power mode set to **ON**.

For Models with Color Audio, follow the steps below:

1. Press the **MENU/CLOCK** button.
2. Select **Settings**.
3. Select **Vehicle Settings**.
4. Select **Door/Window Setup**.
 - To customize door lock settings, select **Auto Door Lock**.
 - To customize door unlock settings, select **Auto Door Unlock**.
5. Choose a setting.
 - The default lock setting is **With Vehicle Speed**.
 - The default unlock setting is **All Doors When Driver's Door Opens**.
 - Press the **BACK** button when you are done.

For Models with Display Audio, follow the steps below:


1. Select the **HOME** screen.
2. Select **Settings**.
3. Select **Vehicle**.
4. Select **Door/Window Setup**.
 - To customize door lock settings, select **Auto Door Lock**.
 - To customize door unlock settings, select **Auto Door Unlock**.
6. Choose a setting
 - The default lock setting is **With Vehicle Speed**.
 - The default unlock setting is **All Doors When Driver's Door Opens**.
 - Press the **HOME** button when you are done.

AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.

Basic Audio Operation

The audio system features AM/FM radio and SiriusXM® Radio* service. It can also play USB flash drives, and iPod, iPhone and *Bluetooth*® devices. You can operate the audio system from the buttons and knobs on the panel, the remote controls on the steering wheel, or the icons on the touchscreen interface*.

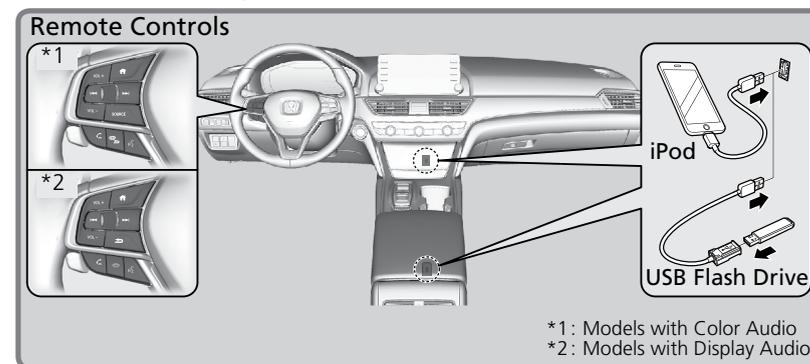

■ USB Port(s)

Install the iPod USB connector or the USB flash drive to the USB port.


In the Center Pocket

Models with Color Audio

The USB port (1.0 A) is for playing audio files on a USB flash drive, connecting a cellular phone, and charging devices.

Models with Display Audio

The USB port (2.5 A) is for charging devices, playing audio files, and connecting compatible phones with Apple Carplay or Android Auto.

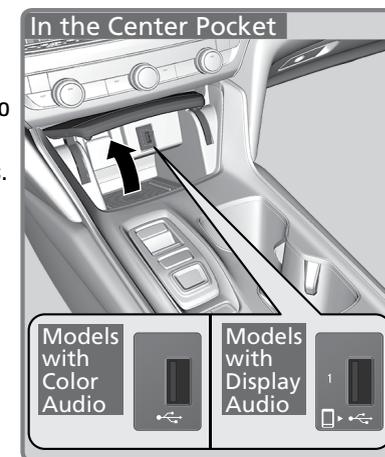


Setting the Clock

Adjust the time using the steps described for your vehicle type. On vehicles with navigation, the time is automatically set using GPS signals.

Models with Color Audio

Use the selector knob to make and enter selections.

1. Press and hold the **MENU/CLOCK** button. **Adjust Clock** is selected.
2. Rotate the selector knob to change the hour and minute values, press the selector knob to enter selections.
3. Select **Set**.

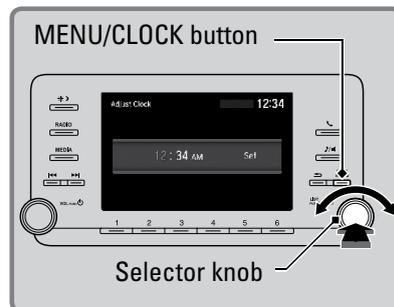

Models with Display Audio

You can adjust the clock by touching the clock displayed on the upper right corner of the display or the **Clock** icon on the home screen.

1. Touch the clock on the display. The clock screen of the select face-type appears.
2. Select **Settings**.
3. Select **Date & Time**. Then select **Set Date & Time**.
4. Select **Automatic Date & Time**, then select **OFF**.
5. Select **Set Date** or **Set Time**.
6. Adjust the dates, hours, and/or minutes by using the ▲ or ▼ arrows to make selections.
7. Select **Save** to set the time.




Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

iPod, iPhone, and iTunes are trademarks of Apple Inc.
*if equipped

In the Console Compartment


Models with Display Audio

The USB port (2.5 A) is for charging devices, playing audio files, and connecting compatible phones with Apple CarPlay or Android Auto.

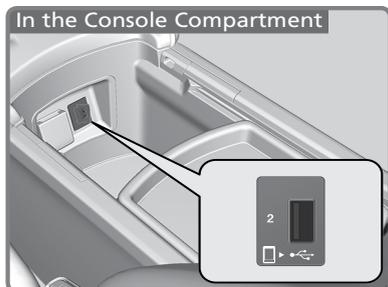

Rear of the Center Console*

The USB ports (2.5 A) are only for charging devices. You cannot play music, even if you have connected music players to them. Under certain conditions, a connected device may generate noise in the radio you are listening to.

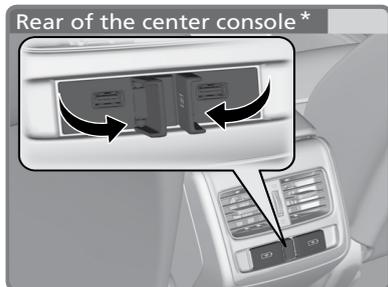


Accessory Power Sockets

The accessory power sockets can be used when the power mode is in **ACCESSORY** or **ON**.

Center pocket

Open the cover to use it.

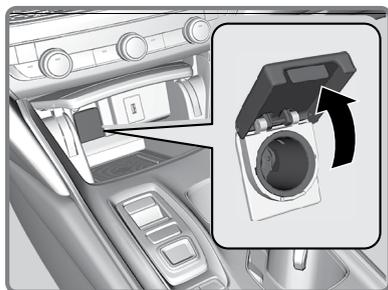

Console compartment

Open the console list and the cover to use it.



The accessory power socket is designed to supply power for 12-volt DC accessories that are rated 180 watts (15 amps) or less. To prevent battery drain, only use the power socket with the power system on. When both sockets are being used, the combined power rating of the accessories should not exceed 180 watts (15 amps).

NOTICE


Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

**if equipped*

Wireless Charger*

To use the wireless charger, the power mode must be in **ACCESSORY** or **ON**. Charge a compatible device on the area indicated by the mark as follows:

1. To turn the system on and off, press and hold the power button. When the system is activated, the green indicator light comes on.
2. Place the device you want to charge on the charging area. The system will automatically start charging the device, and the amber indicator light will come on. Make sure that the device is compatible with the system, and placed with the chargeable side in the center of the charging area.
3. When charging is completed, the green indicator light will come on. Depending on the device, the amber indicator light will stay on.

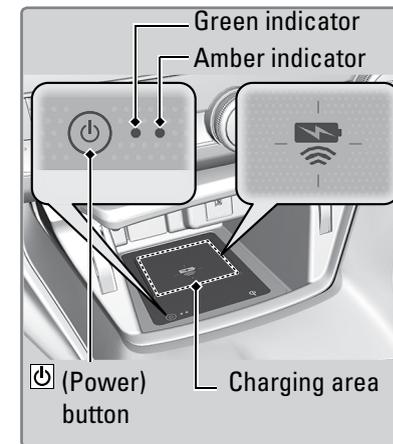

FCC statement

This product complies with the appropriate requirements or the required standards of FCC (Federal Communication Commission), described below: This device complies with Part 18 of the FCC rules. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications.

In order to use safely:

- *Remove any metal objects from the charge pad before charging a device.*
- *Do not open the charger case.*
- *Do not use the charger if it malfunctions. Contact your dealer.*

If the charger interferes with radio communications, attempt to correct the interference:

- *Press and hold the switch on the charger for a few seconds to turn off the charger.*

**if equipped*

Notes:

In the following cases, charging may stop or not start:

- The device is already fully charged.
- The temperature of the device is extremely high while charging.
- You are at a place that emits strong electromagnetic waves or noises such as TV station, electric power plant, or gas station.

A device may not charge if the size or shape of its chargeable side is not appropriate for use with the charging area.

Not all devices are compatible with the system.

During the charging phase, it is normal for the charging area and device to heat up. Charging may be briefly interrupted when:

- All the doors or the trunk are closed - to avoid interference with the proper functioning of the smart entry system.
- The position of the device is altered.

Do not charge more than one device at a time on a charging area.

This system consumes a lot of power. Do not use the system for a long time when the power system is off. This may weaken the 12-volt battery, making it difficult to turn the power system on.

When using the wireless charger, check the user's manual that came with the compatible device you want to charge.

CAUTION

Metal objects between the charge pad and the device to be charged will get hot and can burn you.

- Always remove foreign objects from the charge pad before charging the device.
- Be sure the surface is clear of dust and other debris before charging.
- Do not spill liquids (i.e. water, drinks, etc.) on the charger and the device.
- Do not use oil, grease, alcohol, benzine, or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging.
- Avoid spraying aerosols which may contact the charge pad surface.


NOTICE

Do not place any magnetic recording media or precision machines within the charging area while charging. The data on your cards such as credit cards can be lost because of the magnetic effect. Also precision machines such as watches can go wrong.


Qi is a registered trademark of the Wireless Power Consortium.

Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

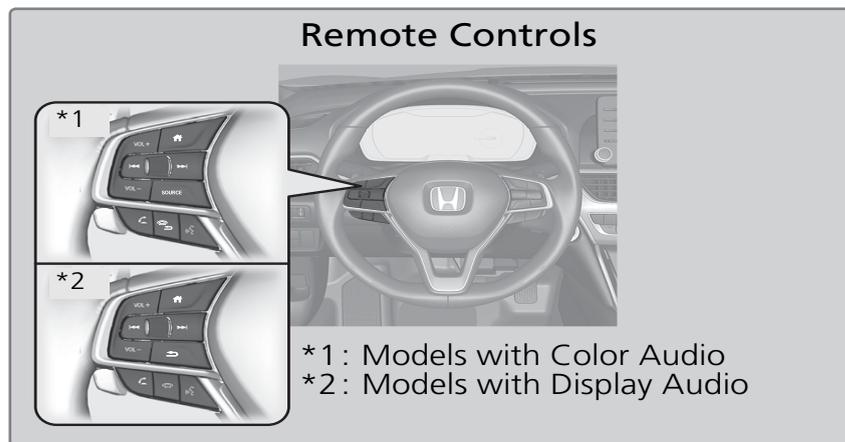

Color Audio

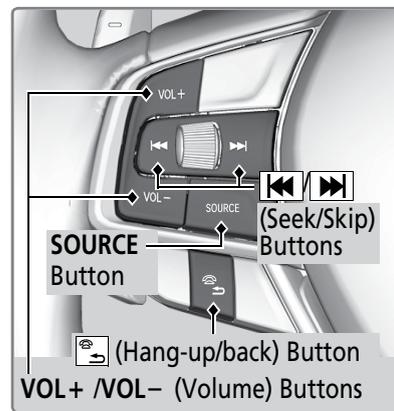


Color Audio

◀ / ▶ (Seek/Skip) buttons

When listening to the radio:

- **Press ▶**: To select the next preset radio station.
- **Press ◀**: To select the previous preset radio station.
- **Press and hold ▶**: To select the next strong station.
- **Press and hold ◀**: To select the previous strong station.

Display Audio

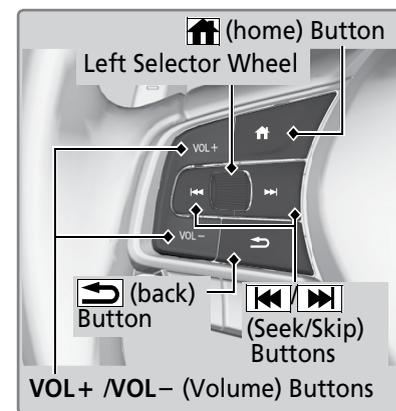

When listening to an iPod, USB flash drive, or Bluetooth® Audio:

- **Press ►►** : To skip to the next song.
- **Press ◀◀** : To go back to the beginning of the current or previous song.
- **Press and hold ►►** : To skip to the next folder/group.
- **Press and hold ◀◀** : To go back to the previous folder/group.

SOURCE button: Cycle through available audio modes as follows:

FM1 → FM2 → AM → USB/iPod → Pandora® → Bluetooth® Audio.

VOL + / VOL - buttons: Adjust audio volume.

Press VOL + : To increase the volume.

Press VOL - : To decrease the volume.

Press the (Hang-up/back) button to go back to the previous command or cancel a command.

Display Audio**VOL + / VOL - buttons:** Adjust audio volume.

Press VOL + : To increase the volume.

Press VOL - : To decrease the volume.

Left Selector Wheel**When selecting the audio mode**

Press the (home) button, then roll up or down to select Audio on the driver information interface, and then press the left selector wheel.

◀◀ / ►► (Seek/Skip) buttons**When listening to the radio**

- **Press ►►**: To select the next preset radio station.
- **Press ◀◀**: To select the previous preset radio station.
- **Press and hold ►►**: To select the next strong station.
- **Press and hold ◀◀**: To select the previous strong station.

When listening to an iPod, USB flash drive, or Bluetooth® Audio, or Smartphone Connection

- **Press ►►**: To skip to the next song.
- **Press ◀◀**: To go back to the beginning of the current or previous song.

When listening to a USB flash drive

- **Press and hold ►►**: To skip to the next folder.
- **Press and hold ◀◀**: To go back to the previous folder.

Use the left selector wheel to cycle through audio modes as follows:

FM → AM → SiriusXM®* → USB1 → USB2 → Bluetooth® Audio → Smartphone Connection (Apple CarPlay/Android Auto) →

Press the (back) button for the driver information interface to go back to the previous screen or cancel a command.

Press the (home) button to go back to the home screen of the driver information interface.


■ **Adjusting the Sound**

Adjust various sound settings.


Models with Color Audio

Press the (sound) button, and rotate the selector knob to scroll through the following choices:

BAS, MID, TRE, FAD, BAL, SVC

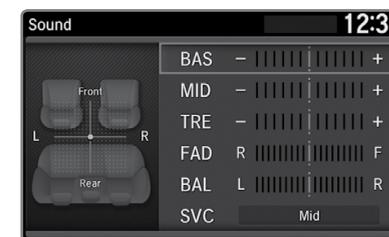**Models with Display Audio**

1. Press the **HOME** button.
2. Select an audio source icon.
3. Select **Sound**.
4. Select the setting you want.
Bass/Treble, Balance/Fader, DTS Neural Surround™* and Speed Volume Compensation (SVC)
5. Select **Save**.

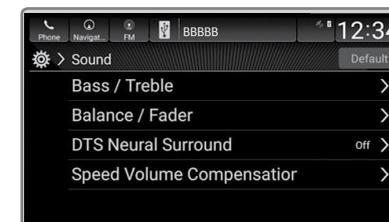


*if equipped

Models with Color Audio

Color Audio Operation

Control audio operation using the buttons on the audio unit.

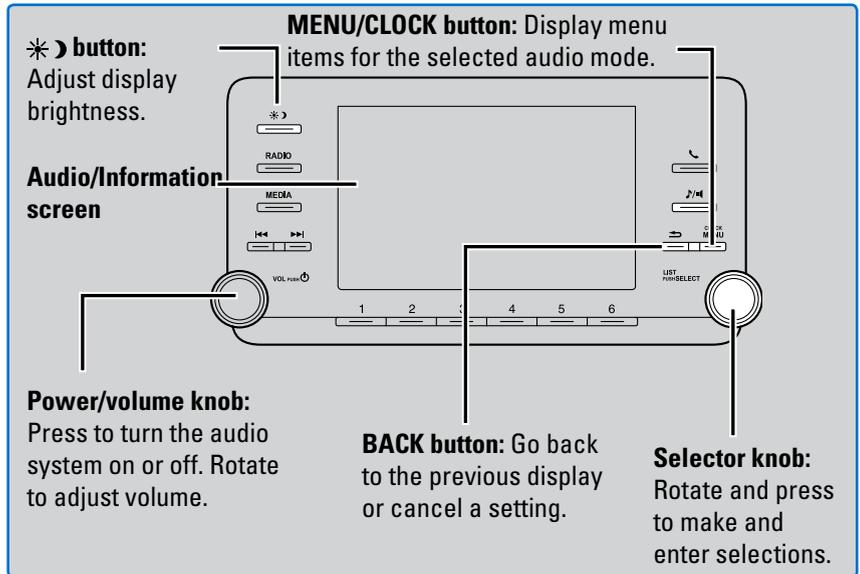


Models with Display Audio

Touchscreen Operation

Use simple gestures—including touching, swiping, and scrolling—to operate certain audio functions.

Some items may be grayed out during driving to reduce the potential for distraction. You can select them when the vehicle is stopped or use voice commands* (see p. 93).

Wearing gloves may limit or prevent touchscreen response.

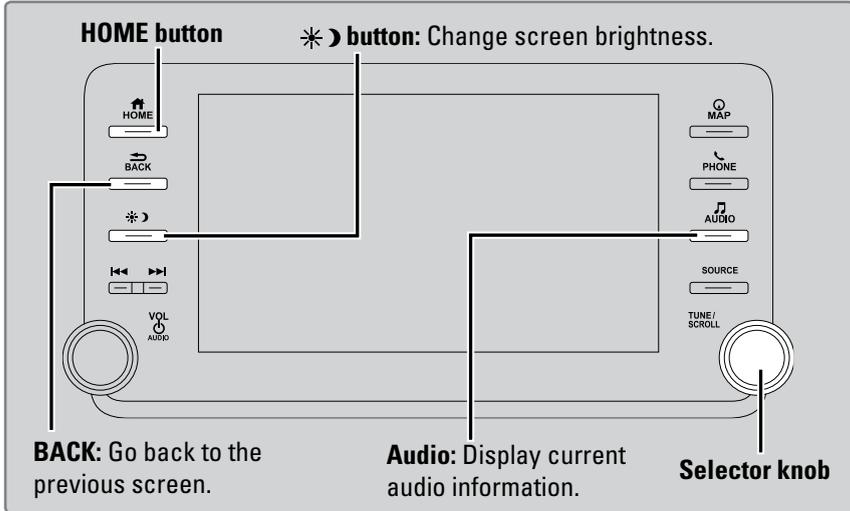

*if equipped

■ Setting Touchscreen Sensitivity

You can adjust the touchscreen's sensitivity to your fingertip.

1. From the **HOME** screen, select **Settings**, then **System**.
2. Select **Touch Panel Sensitivity**.
3. Make your selection.

Models with Display Audio Managing Apps

Customize the Home screen by adding, moving, and hiding apps. Use icon shortcuts to keep frequently used apps at your fingertips.

■ Add App Icons to the Home Screen



1. Press the **HOME** button, then select and hold the home screen.
2. Select **Add**, then drag and drop the icon where you want it to be.
3. Select **Done**. The screen will return to the home screen.

■ Move App Icons on the Home Screen

1. Select and hold an icon. The screen switches to the customization screen.
2. Drag and drop it where you want it to be.
3. Select **Done**. The screen will return to the home screen.



■ Hide App Icons on the Home Screen

1. Select and hold an icon. The screen switches to the customization screen.
2. Drag and drop the icon you want to remove to the **Hide** icon. The icon is removed from the home screen.
3. Select **Done**. The screen will return to the home screen.



■ Set Icon Shortcuts on the Home Screen

1. Select and hold an icon. The screen switches to the customization screen.
2. Drag and drop the icon you want to store to the upper left of the home screen. The icon is stored as a shortcut.
3. Select **Done**. The screen will return to the home screen.



Models with Display Audio


HondaLink®

Provides you with useful information about your vehicle directly from Honda. To check phone compatibility, visit automobiles.honda.com/handsfreelink/ (U.S.) or phone (888) 528-7876 (Canada). Standard data rates may apply with your phone service provider. To subscribe to HondaLink® or to get more information about all of its features, contact an Honda dealer or visit hondalink.honda.com.

■ HondaLink Connection

Follow the steps below to connect to HondaLink and use its features:

1. Download the HondaLink app. Connect app to your compatible smartphone.
2. Pair your phone to **Bluetooth®** HandsFreeLink® (see page 97).
3. From the **HOME** screen, select HondaLink.

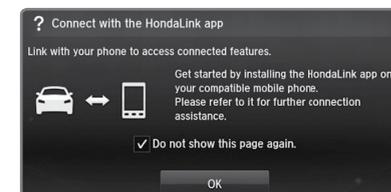


You need to allow the consent of the location service to enable the HondaLink® service. Select from one of the following options:

Disable: Does not allow consent.

Enable Once: Allows only one time (Shows again next time).

Always Enable: Allows anytime (Never shows again).

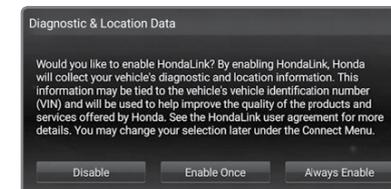

Do not install apps other than those confirmed by a Honda dealer. Unauthorized apps may have privacy and data corruption risks.

■ HondaLink Menu

Select a menu option.



Connect: Displays instruction messages when the vehicle needs service.

Help & Support: Display tips for vehicle usage, get roadside assistance, or contact customer service.

Message: Display helpful and important information from Honda. If you have a new message, a yellow envelope icon appears at the top of the screen and a beep sounds. Swipe down to view the message.

HondaLink® Service*

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically will attempt to connect to the HondaLink® operator. If connected, information about your vehicle, its location, and its condition can be sent to the operator*¹; you also can speak to the operator when connected. Your phone must be paired to the system and have good cellular connection. Visit hondalink.honda.com for more information.

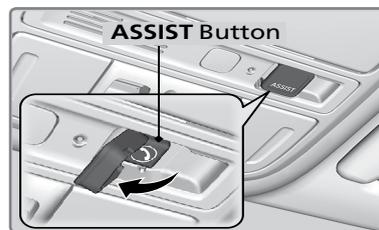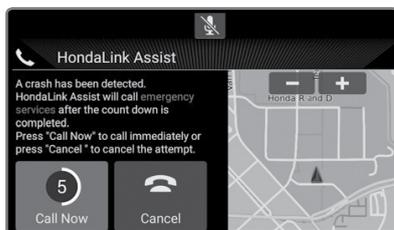

If you need to talk to the HondaLink® operator in a situation where no airbag has deployed, you can manually connect to them by pressing the **ASSIST** button with the power mode in **ACCESSORY** or **ON**.

1. Open the cover attached to the ceiling console.
2. Press the **ASSIST** button.

You are connected to the HondaLink® operator.

Do not press the button while driving. When you need to contact the operator, park the vehicle in a safe place.

If the unit fails to connect to the operator, it automatically cancels the action after three minutes.

If necessary, the cover can be broken to access the **ASSIST** button.

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.


IMPORTANT: In a crash, HondaLink® will attempt to notify emergency services but **NEITHER HONDA NOR ITS SERVICE PROVIDERS GUARANTEE THAT SUCH NOTIFICATION WILL OCCUR.**

Honda reserves the right to terminate HondaLink® services at any time or for any reason, and in the future may not be able to provide services due to changes in, or obsolescence of, technology integral to the service or changes in governmental regulation.

■ Operator Assistance

Connect to a HondaLink® operator for roadside assistance or help finding a destination.

1. Press the **LINK** button.
Connection to the operator begins.
2. Talk to the operator.
To disconnect, select Hang Up on the audio/information screen or press the  button on the steering wheel.

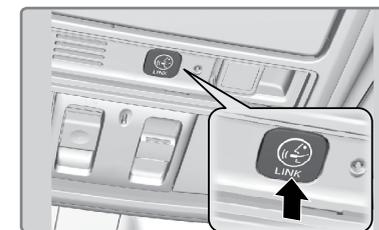

*1: Depending on your phone and cellular signal capability, your vehicle's location may not be sent to the operator.

*if equipped

Models with Display Audio

Near Field Communication (NFC)*

Near Field Communication (NFC) allows you to connect select Android phones to the audio system via *Bluetooth*®.

1. Press the **HOME** button, then Select **Settings**.
2. Select **Connections**.
3. Select **NFC**, then **ON**.
4. Select **Android Beam**, then **ON**.

■ *Bluetooth*® Setup

1. Press the **HOME** button, then select **NFC Manager**. Or touch the NFC logo near the glove box with the NFC tag of your phone. The **NFC Manager** screen is displayed.
2. Select **Connect Device to Vehicle Bluetooth**.
3. Touch the NFC logo near the glove box with the NFC tag of your phone.
4. A notification appears on the screen if pairing is successful. Confirm if the pairing code on the screen and your phone match. This may vary by phone.

■ **Wallpaper Image Transfer**

1. Press the **HOME** button, then select **NFC Manager** or touch the NFC logo near the glove box with the NFC tag of your phone.
2. Select **Transfer Image**.
3. Open the photo you want to transfer on your phone, then select **Next**.
4. Touch the NFC logo near the glove box with the NFC tag of your phone.
5. Select the photo on your phone.
6. A confirmation message appears on the screen. Select **Wallpaper**.

Models with Display Audio

Apple CarPlay™



Connect an Apple CarPlay-compatible iPhone to the system. You can use the touchscreen to make a phone call, listen to music, and more. Visit the Apple CarPlay website for more information.

When your iPhone is connected to Apple CarPlay, it is not possible to use the *Bluetooth*® Audio or *Bluetooth*® HandsFreeLink®. However, other previously paired phones can stream audio via *Bluetooth*® while Apple CarPlay is connected.

Park in a safe place before connecting your iPhone and launching any compatible apps.

*if equipped

1. Connect the iPhone to the USB port (2.5 A) in the center pocket or console compartment.
2. Apple CarPlay requires you to send vehicle information to Honda. Select **Enable** to continue. Your phone may prompt you to allow access for CarPlay to be launched.
3. From the **HOME** screen, select Apple CarPlay.
4. Select a menu option.

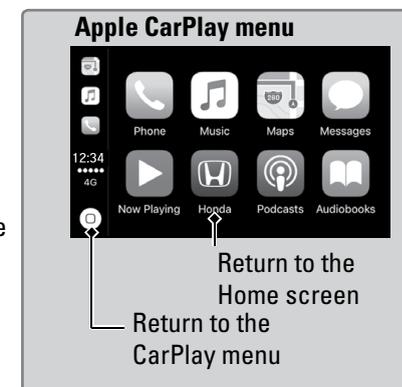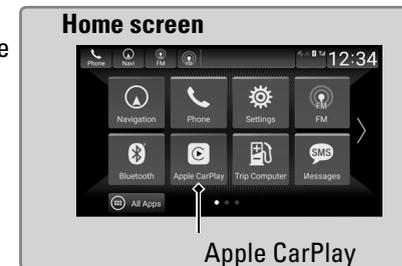

Phone: Access your contacts, make phone calls, or listen to voicemail. While connected to Apple CarPlay, calls can only be made through Apple CarPlay, not through *Bluetooth*® HandsFreeLink®.

Music: Play music stored on your iPhone.

Maps: View a map and operate navigation. You can only use Apple Maps or the pre-installed navigation system to set a destination with routing guidance.

Models with navigation

Only one navigation system (pre-installed navigation or Apple CarPlay) can give directions at a time.

Messages: View and reply to text messages or have messages read to you aloud by the system.

Once connected, press and hold the Talk button on the steering wheel (see p. 93) to operate the system using voice commands with Siri.

Depending on use, Apple CarPlay can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with the connected iPhone. See Apple's privacy policy for details regarding Apple's use and handling of data uploaded by CarPlay. Use of CarPlay is at user's own risk, and is subject to agreement to the CarPlay terms of use, which are included as part of the Apple iOS terms of use. CarPlay vehicle integration is provided "as is," and Honda cannot guarantee CarPlay operability or functionality now or in the future due to, among other conditions, changes in CarPlay software/Apple iOS, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Only use CarPlay when conditions allow you to do so safely. See your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for further license and warranty terms.

*if equipped

Models with Display Audio



Android Auto™

Connect a compatible Android phone to the system. You can use the touchscreen to make a phone call, listen to music, and more. Visit the Android Auto website for more information.

When your Android phone is connected to Android Auto, it is not possible to use the Bluetooth® Audio. However, other previously paired phones can stream audio via Bluetooth® while Android Auto is connected.

Park in a safe place before connecting your Android smartphone and when launching any compatible apps.

1. Connect the phone to the USB port (2.5 A) in the center pocket or console compartment. Compatible Android phones will prompt you to download any required apps.
2. Select Enable or Disable.
3. Follow any prompts shown on your phone.
4. The phone will be automatically paired. A tutorial will appear on the vehicle screen.
5. Select a menu option.

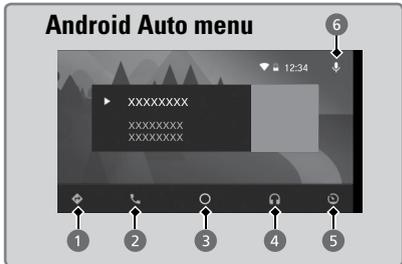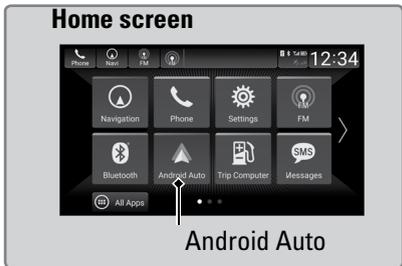

Depending on use, Android Auto can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with Google and its service providers. See Google privacy policy for details regarding Google's use and handling of data uploaded by Android Auto. Use of Android Auto is at user's own risk, and is subject to agreement to the Android Auto terms of use, which are presented to the user when the Android Auto application is downloaded to the user's Android phone. Android Auto vehicle integration is provided "as is," and Honda cannot guarantee Android Auto operability or functionality now or in the future due to, among other conditions, changes in Android Auto software/Android operating system, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Only use Android Auto when conditions allow you to do so safely. See your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for further license and warranty terms.

*if equipped


1. **Maps (Navigation):** View Google Maps and operate navigation. You can only use this system or the pre-installed navigation system to set a destination with routing guidance. You cannot enter destinations using the keyboard while the vehicle is moving.
2. **Phone (Communication):** Make or receive phone calls or listen to voicemail.
3. **Google Now (Home screen):** Display useful information organized by Android Auto into simple cards that appear only when needed.
4. **Music and audio:** Play music from compatible apps. Select this icon to switch between music apps.
5. **Go back to the Home Screen:** Select this icon to return to the HOME screen.
6. **Voice:** Use voice commands to operate Android Auto. You can also press and hold the Talk button on the steering wheel (see p. 93) to say voice commands.

Models with Display Audio

Wi-Fi Connection

You can connect the audio system to the internet using Wi-Fi. If your compatible phone has wireless hotspot capabilities, the system can be tethered to the phone. Follow the steps below to set up Wi-Fi when the vehicle is stopped. Standard data rates apply with your phone service provider.

1. Press the HOME button, then select **Settings**.
2. Select **Connections**, then **Wi-Fi**.
3. Select **Change Mode**.
4. Select **Network** or **Hotspot**, then **Confirm**. To change the Wi-Fi settings, select **Network Options** or **HotSpot Options**. Select the access point you want to connect to the system.
5. Select **Connect**. Enter a password for the access point and select **Done**. When the connection is successful the Wi-Fi icon will display on the list.
6. Press the HOME button to return to the home screen.

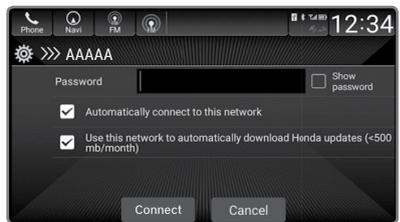

iPhone users

You may need to go through an initial setup for Wi-Fi connection again after you boot your phone.

Models with Display Audio

System Updates

The audio system's firmware can be updated with a Wi-Fi connection, or with a USB device.

■ How to Update Wirelessly

Wireless connection mode setup

If your vehicle has a telematics control unit (TCU), you do not need the wireless connection mode setup.


1. Press the **HOME** button, then select **System Updates**.
2. Select **Settings**, then select **Connection Setup**.
3. Select **Wi-Fi**, then select **Change Mode**.
4. Select **Network**, then select **Confirm**.
The display returns to the network list.
5. Select an access point from the network list, then select **Save**.
If the audio system requires a password, enter a password.



■ How to Update

When the audio system update is available, the notification is shown on the audio/information screen. Use the following procedure to update the system:

1. Press the **HOME** button.
2. Select **System Updates**.
3. Select **via Wireless**. If a notification is displayed on the screen, the screen of step 5 will be displayed.
4. Select **Download Now**. A notification appears on the screen.
5. Select **Install Now** or **Install while Vehicle OFF**. A notification appears on the screen if the update is successful.

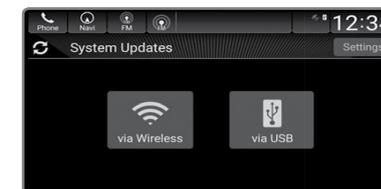

For battery protection, **Install while vehicle OFF** cannot be selected when the battery is low on power. If you want to install the updated data, recharge the battery or select **Install Now**.

How to Update with a USB Device

Download the update files from the server.

1. Press the **HOME** button, then select **System Updates**.
2. Select **via USB**. A notification appears on the screen.
3. Connect a USB device into the USB port in the center pocket or console compartment. (see p. 63) The inventory data is copied into the USB device.
4. Remove the USB device from the USB port.
5. Connect the USB device into your computer and download the update files. Follow the link to download the required software update files. See <https://usb.honda.com> for more details.



Install the update

1. Press the **HOME** button, then select **System Updates**, and then **via USB**. A notification appears on the screen.
2. Connect the USB device with the update files to the USB port. (see p. 63) A notification appears on the screen.
3. Select **Install Now**. A notification appears on the screen if the update is successful.




Notes

- Honda recommends using a flash drive with a minimum of 8 GB of free space or more.
- Be sure to delete any previous inventory or update files from the USB before starting the USB update process.

Models with Color Audio

AM/FM Radio

Play AM or FM radio stations.

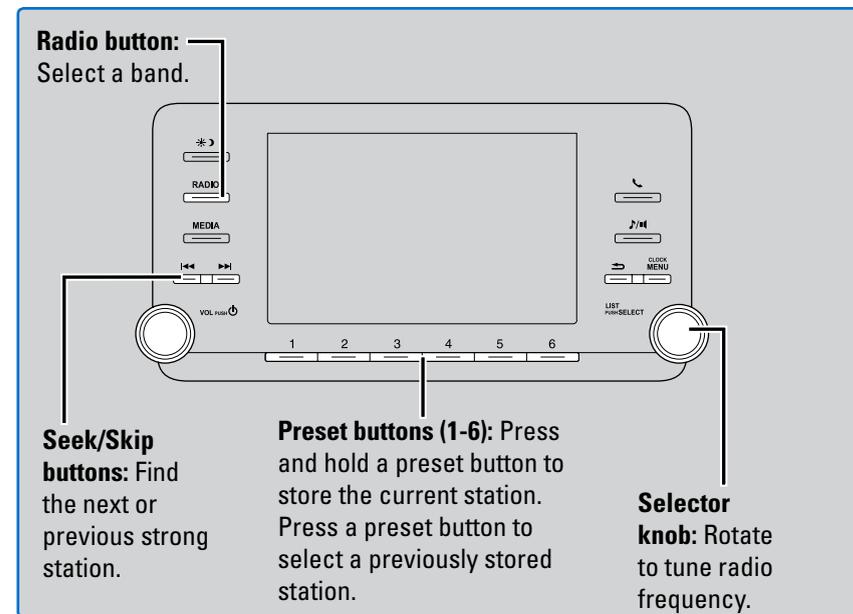

Models with Display Audio

AM/FM Radio

Play AM or FM radio stations.

Volume/Power Knob: Push to turn on/off audio. Turn to adjust volume

Presets icons: Select and hold a preset number to store the current station. Select a preset number to select a previously stored station.

Seek: Search for the next or previous station with a strong signal.

Tune: Change the station.

Scan: Scan each station with a strong signal.

Settings icon: Select whether to tune to HD Radio™* automatically

*if equipped

Models with Display Audio

SiriusXM® Radio*

Available on a subscription basis only. For more information or to subscribe, contact your dealer or visit www.siriusxm.com/subscribeNOW.

Presets: Select and hold a preset number to store the current station. Select a preset number to select a previously stored station.

Seek: Search for the next or previous station with a strong signal.

Channel: Change the channel. Press and hold to skip 10 channels at a time.

Category: Change the category.

To learn about additional features—such as multi-channel preset, replay, or SportsFlash—see your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada).


Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico. XM® is a registered trademark of Sirius XM Radio, Inc.

*if equipped

Models with Color Audio

iPod®

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see p. 63), then press the **MEDIA** button.

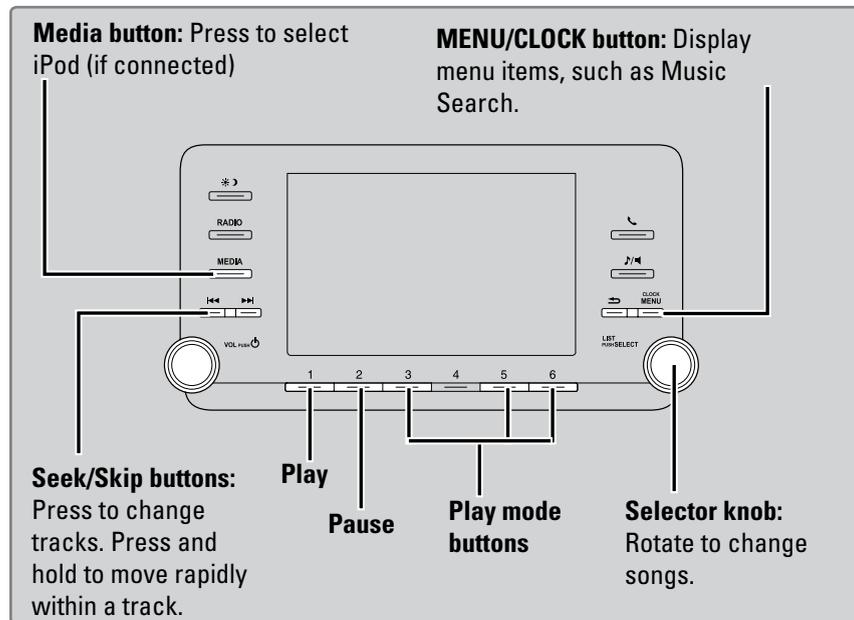

■ Searching for Music


Use the selector knob to search for tracks stored on the iPod.

1. From the audio screen, press the selector knob.
2. Select a category to display a list of items.
3. Select the track you want to play.

Models with Display Audio

iPod®


Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see p. 63), then select USB mode.

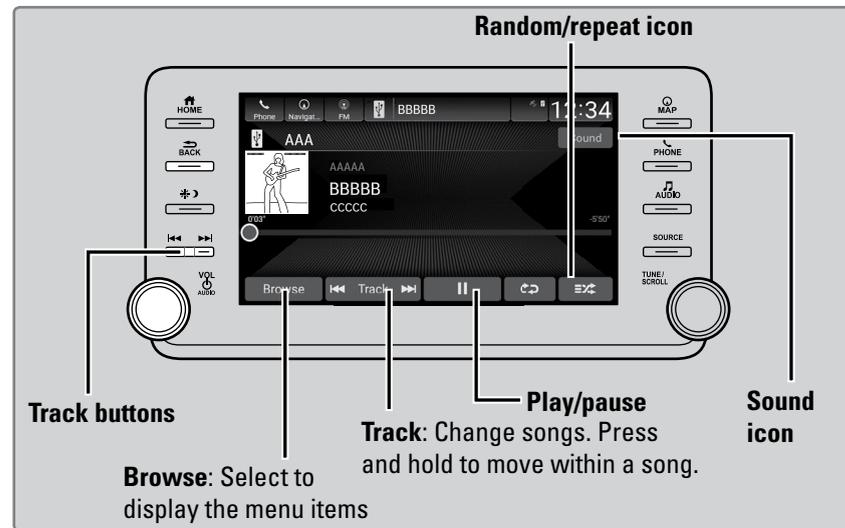

■ Searching for Music

Use the touchscreen to search for tracks stored on the iPod.


1. Select **Browse**.
2. Select from the items on the menu.

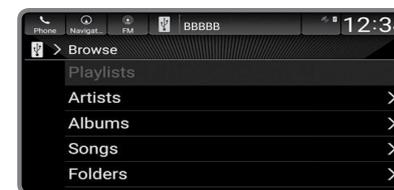

Models with Color Audio

USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Only MP3, WMA, or AAC*1 formats are supported. Connect your device to the USB port (see p. 63), then press the **MEDIA** button.

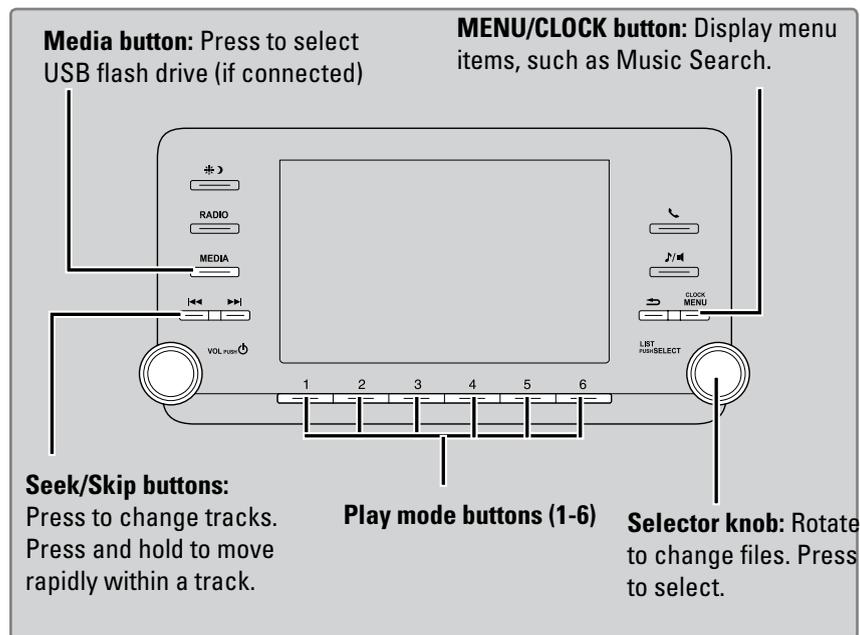

■ Searching for Music

Use the selector knob to search for tracks stored on the flash drive.

1. From the audio screen, press the selector knob.
2. Select a folder to display a list of files in the folder.
3. Select the track you want to play.

*1:Only AAC format files recorded with iTunes are playable on this unit.

Models with Display Audio

USB Flash Drive


Play and operate a USB flash drive through the vehicle's audio system. Only MP3, WMA, or AAC*1 formats are supported. Connect your device to the USB port (see p. 63), then select USB mode.



■ Searching for Music

Use the touchscreen to search for tracks stored on the USB flash drive.

1. Select Browse.
2. Select the items on that menu.

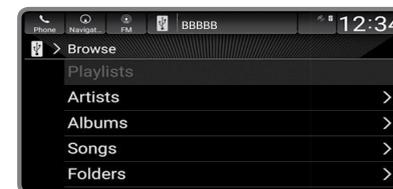


*1:Only AAC format files recorded with iTunes are playable on this unit.

Models with Color Audio

Bluetooth® Audio

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Connect your phone to *Bluetooth®* HandsFreeLink® (see page 96). Visit automobiles.honda.com/handsfreelink/ (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates apply.

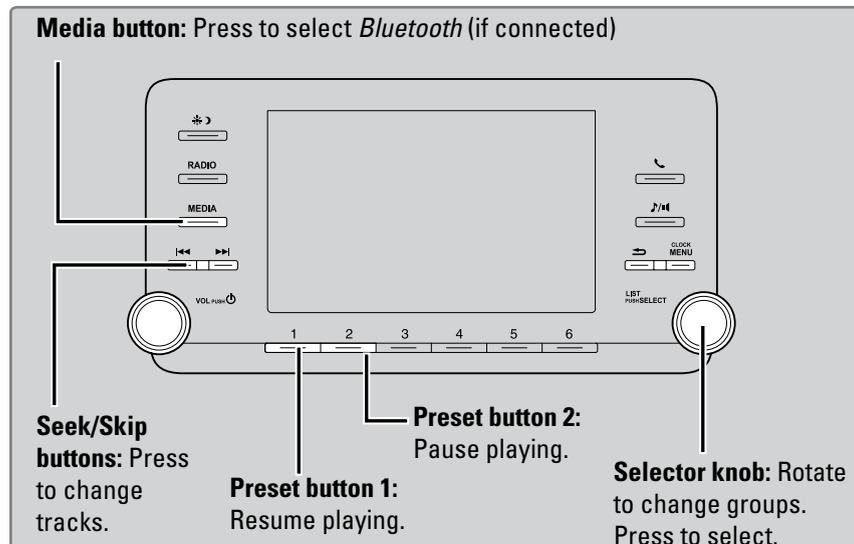■ **Searching for Music**

Use the selector knob to search for tracks stored on the device.

1. From the audio screen, press the selector knob.
2. Select a category to display a list of items.
3. Select the track you want to play.

Notes:


- To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.
- If any audio device is connected to the USB port, you may need to press the **MEDIA** button repeatedly to select the *Bluetooth®* Audio system.
- Some functions may not be available on some devices.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

Models with Display Audio


Bluetooth® Audio

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Connect your phone to *Bluetooth®* HandsFreeLink® (see page 93). Visit automobiles.honda.com/handsfreelink/ (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates apply.

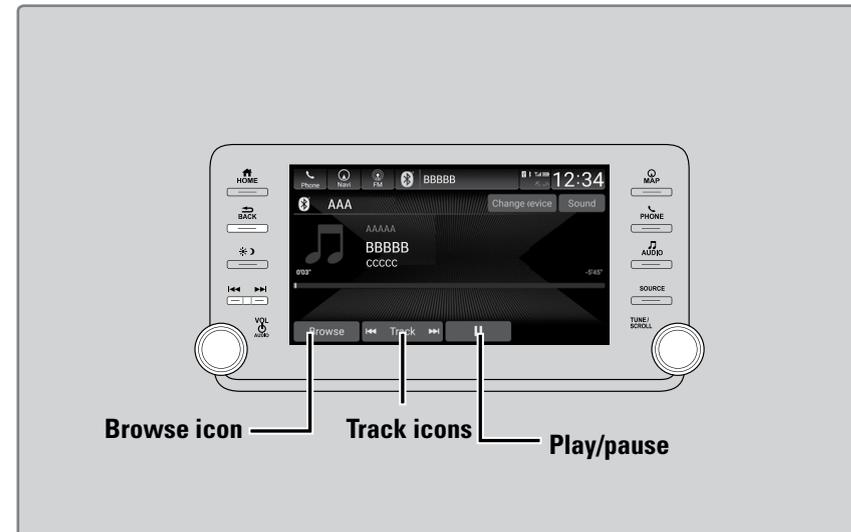■ **Searching for Music**

Use the touchscreen to search for tracks stored on the device.

1. Select **Browse**.
2. Select a search category.
3. Select an item. The selection begins playing.

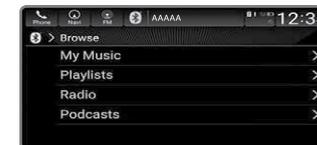**Notes:**

- If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth®* Audio from that phone is unavailable.
- To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.
- Some functions may not be available on some devices.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

Models with Color Audio

Pandora®

Play and operate Pandora® from your phone through the vehicle's audio system. Visit [automobiles.honda.com/handsfreelink/\(U.S.\)](http://automobiles.honda.com/handsfreelink/(U.S.)) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates apply. Connect your phone when the vehicle is stopped. To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit www.pandora.com for more information.


For iPhone:

- Connect via *Bluetooth®* HandsFreeLink® (see page 96) or USB port (see p. 63).
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth®* Audio. Make sure Pandora® is selected on the audio system.
- If Pandora® still does not operate, try rebooting the phone and reconnecting the cable if necessary.

For Android or BlackBerry:

- Connect via *Bluetooth®* HandsFreeLink® (see page 96).

Media button: Press to select Pandora (if connected)

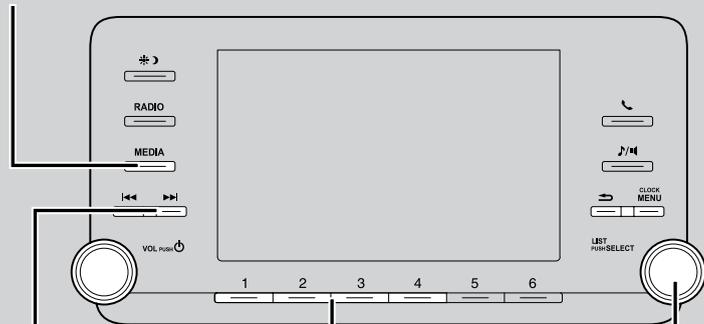

Skip button: Go to the next song.

Preset buttons: Press the button for each function.
 (1) Pause/resume
 (2) Dislike song
 (3) Like song
 (4) Bookmark track

Selector knob: Rotate to change the station.

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.

BLUETOOTH® HANDSFREELINK® (HFL)

Learn how to operate the vehicle's hands-free calling system.

Models with Color Audio


Basic HFL Operation

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit [automobiles.honda.com/handsfreelink/\(U.S.\)](http://automobiles.honda.com/handsfreelink/(U.S.)) or call (888) 528-7876 (Canada) to check phone compatibility.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.

■ **HFL Controls**

Use the controls to enter information and make selections.

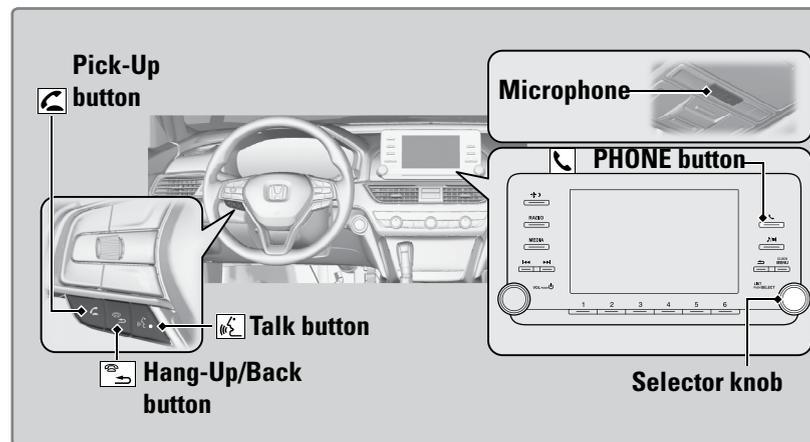

Pick-Up button: Press to answer an incoming call or press to go to the phone screen.

Hang-Up/Back button: Press to end or decline a call or to cancel an operation.

Talk button: Press to make a call using a stored voice tag.

PHONE button: Press to display the phone screen.

Selector knob: Rotate and press to make selections.

Models with Display Audio


Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit [automobiles.honda.com/handsfreelink/\(U.S.\)](http://automobiles.honda.com/handsfreelink/(U.S.)) or call (888) 528-7876 (Canada) to check phone compatibility.

If your iPhone is connected to Apple CarPlay or Android Auto, calls can only be made through Apple CarPlay or Android Auto, not through *Bluetooth® HandsFreeLink®*.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function. Voice commands are also available.

■ **HFL Controls**

Use the controls to enter information and make selections.

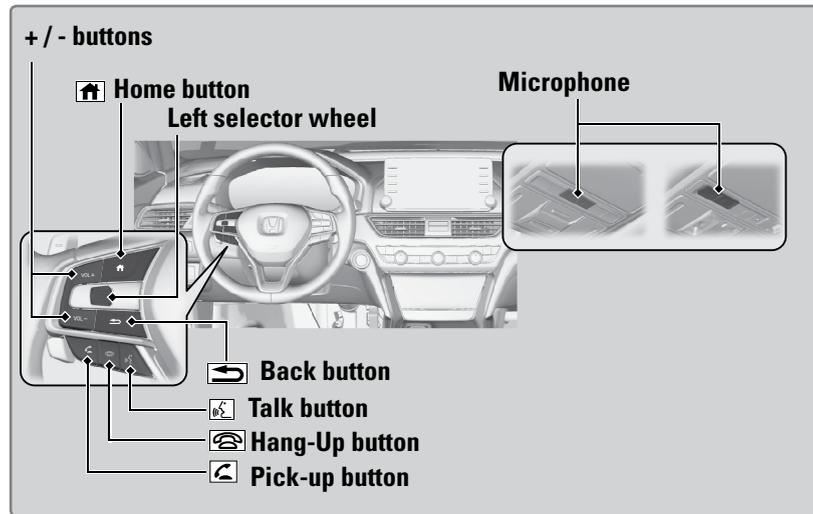

+ / - buttons: Scroll the list.

Pick-Up button: Press to go directly to the phone menu on the driver information interface or to answer an incoming call.



Hang-up button: Press to end a call.

Back button: Press to go back to the previous screen or cancel a command.

Talk button: Press to access Voice Portal.

Left Selector Wheel: Press the **HOME** button, then roll up or down to select **Phone** on the driver information interface, and then press the left selector wheel.

Home button: Press to go back to the home screen of the driver information interface.

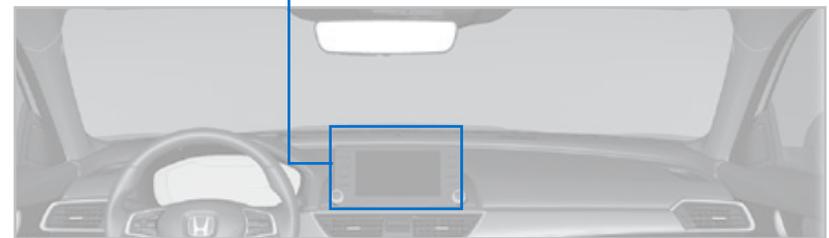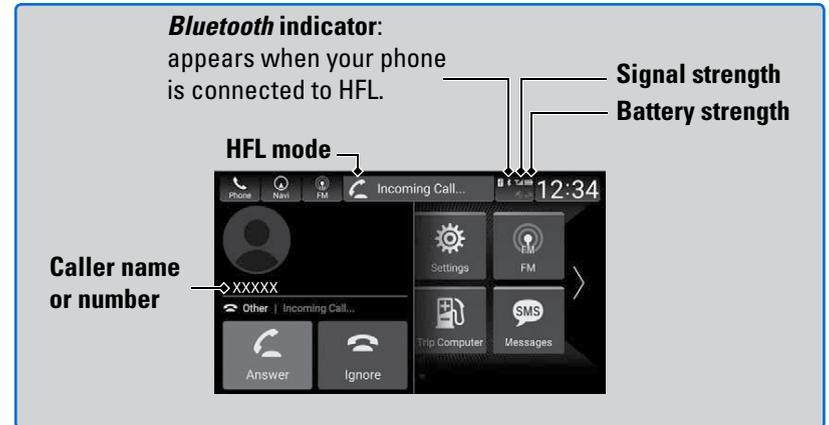

■ **Talk Button Tips**

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphones.
- Press the Talk button when you want to call a number using a phonebook name or a number. Speak clearly and naturally after a beep.
- If the microphones pick up voices other than yours, the command may be misinterpreted.
- To change the volume level, select the audio system's **VOL** (Volume) or use the remote audio controls on the steering wheel.

Models with Color Audio

Pairing a Phone


To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the selector knob to make and enter selections.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

1. Press the Phone button to go to the Phone screen. A prompt appears. Select **Yes**.
2. Make sure your phone is in search or discoverable mode. Select OK.
3. When your phone appears on the list, select it by pressing the selector knob.

If your phone does not appear:

Select Phone Not Found? and search for *Bluetooth*® devices using your phone. From your phone, select **HandsFreeLink**.

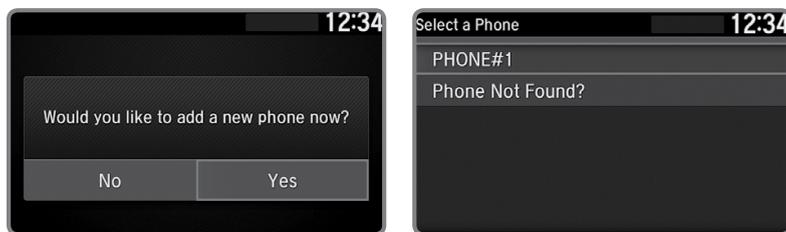

4. The system gives you a pairing code on the audio/information screen. Confirm if the pairing code on the screen and your phone match.
5. A notification appears on the screen if pairing is successful.



Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.

Models with Display Audio

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the touchscreen to make and enter selections.

Some functions are limited while driving. A message appears on the screen when the vehicle is moving and the operation is canceled.

1. Press the **HOME** button, then select **Phone**.
2. Select **Connect Phone**.
3. Make sure your phone is in discovery mode, then select **+ Connect New Device**.
4. The system searches for your phone. Select your phone when it appears on the list.



If your phone does not appear:

Search for **HandsFreeLink** from your phone.



5. The system gives you a pairing code on the audio/information screen. Compare it to the code that appears on your phone.
6. Select your desired functions, then select **Save**.

If there is an active connection to Apple CarPlay (see page 76) or Android Auto (see page 78), pairing of additional *Bluetooth*-compatible devices is unavailable.

Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.

*Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.
models with navigation

Models with Color Audio

Making a Call

You can make a call using several methods.

Dialing a Number

Enter a 10-digit phone number to call.

Using voice commands

Press the Talk button before you say each command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-1-2-3-4."
3. The system begins to dial.



Using the menu


Use the selector knob to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the **PHONE** button.
2. Select **Dial**.
3. Enter the phone number. Select the phone icon to call.

Storing Speed Dial Entries

Store up to 20 numbers for quick dialing. Use the selector knob to make and enter selections.

1. Press the **PHONE** button.
2. Select **Speed Dial**.
3. Select **Add New**.
4. Select an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.

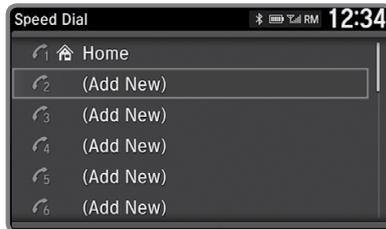

When a voice tag is created, you can press the Talk button and say "Call" and the stored voice tag to quickly call the number.

Using Call History

Make calls quickly using stored speed dial entries or call history numbers.


Using voice commands

1. Press the Talk button before you say each command.
2. Say "Dial by voice tag."
3. Say the stored voice tag name. For example, "John Smith."



Using the menu

1. Press the **PHONE** button.
2. Select **Speed Dial** or **Call History**.
3. Scroll through the list to find the entry you want to call and select it to call.

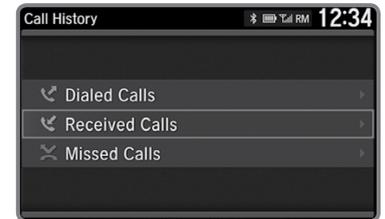


Using an Imported Phonebook

When your phone is paired, its entire phonebook can be automatically imported to the system. Automatic Phone Sync must be turned on.

Using voice commands

1. Press the Talk button before you say each command.
2. Say "Dial by name."
3. Say the phonebook name and phone type. For example, "John Smith mobile."

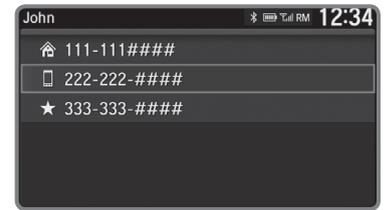

Using the menu

Use the selector knob to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the **PHONE** button.
2. Select **Phonebook**.
3. Scroll through the list to find the name and number you want to call and select it to call.



Models with Display Audio

You can make a call using several methods.

■ Dialing a Number

Enter a 10-digit phone number to call.

1. Press the **HOME** button, then select **Phone**.
2. Select **Keypad**.
3. Enter the phone number.
4. Select **Call**.



■ Using an Imported Phonebook

When your phone is paired, its entire phonebook can be automatically imported to the system. Phone synchronization must be turned on.


1. Press the **HOME** button, then select **Phone**.
2. Select **Contacts**.
3. Scroll through the list to find the name.
4. Select a number.



■ Storing Favorite Contacts

Store contact entries for quick dialing.


1. Press the **HOME** button, then select **Phone**.
2. Select the **Recent Calls**, **Contacts**, or **Keypad** screen.
3. Select the star icon.

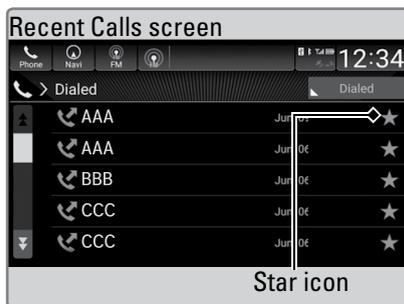

■ Using Favorite Contacts

Make calls quickly using stored favorite contact entries.

1. Press the **HOME** button, then select **Phone**.
2. Select **Favorite Contacts**.
3. Select a number.

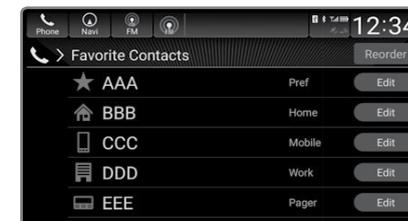

Models with Display Audio

SMS Text Messaging


Certain phones can receive and send messages when paired and connected. Visit [automobiles.honda.com/handsfreelink/\(U.S.\)](http://automobiles.honda.com/handsfreelink/(U.S.)) or call (888) 528-7876 (Canada) to check phone compatibility. Standard message rates apply with your phone service provider. The system does not display any received messages while you are driving. You can only hear them read aloud.

Text messaging is not available while using Apple CarPlay. Use Apple Messages instead.


■ Receiving and Responding to Messages

When you receive a new message, a pop-up appears on the touchscreen. You can view the message when the vehicle is stopped. You can also reply to it using fixed phrases or call the sender.

1. When the pop-up appears, select **Open**. The message displays.
2. Select **Play** to have the system read the message aloud.

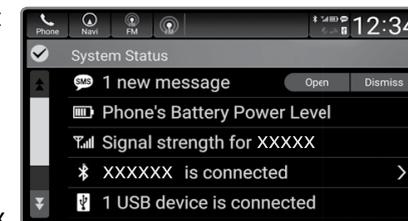

To reply: With the message open, select **Reply**. Select one of the six available responses. Select **Send** to send the message.

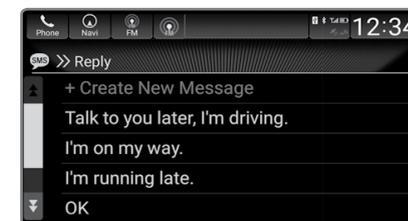

To call the sender: With the message open, select **Call**.

Models with Display Audio

Siri® Eyes Free

Activate Siri through your vehicle when an iPhone is paired to the system. Visit automobiles.honda.com/handsfreelink/ (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility.

(Back) button
Press to deactivate Siri.

(Talk) button
Press and hold until the display changes as shown.

Appears when Siri is activated in Siri Eyes Free

When in Siri Eyes Free: The display remains the same. No feedback or commands appears.

Here are some examples of Siri commands:

- "Call John Smith"
- "Read my new text message"
- "Find a nearby sushi restaurant"
- "Remind me to pick up dinner"
- "Set up a meeting today at 3 p.m."
- "Play song XYZ"

Notes:

- Any requests that include visual feedback from Siri on your phone are not displayed in the vehicle.
- Certain commands rely on the iPhone's features and existing apps.
- To hear turn-by-turn directions or songs through the vehicle, set the audio source to *Bluetooth®* Audio.
- While using Apple CarPlay (see page 76), use the Talk button to activate Siri.

Siri and iPhone are trademarks of Apple, Inc.

NAVIGATION*

Learn how to enter a destination and operate the navigation system.

Basic Navigation Operation

A real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination. You can operate the system using voice commands or the system controls.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

Steering Wheel Controls

Use the steering wheel controls to say voice commands.

Home button: Press to return to the Home screen.

Left selector wheel: Rotate to make selections.

Talk Button Tips

For a list of available navigation commands, see page 79. The system recognizes only the commands on the list.

- When using the Talk button, wait for a beep before saying a command.
- To bypass the system prompts, simply press the Talk button again to say your command.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard and side vents away from the microphone in the ceiling.
- Close the windows and moonroof*.
- Adjust the dashboard vents away from the microphone on the ceiling.

WARNING


Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed. Operate system controls only when the conditions permit you to safely do so.

*if equipped

System Guidance Volume



Adjust the navigation system volume.

1. Press the **HOME** button, select **Settings**.
2. Select **System**, then **System Volumes**.
3. Select **System Volumes**.
4. Adjust volume to preference for **Navigation on Guidance**.
5. Select **Save**.

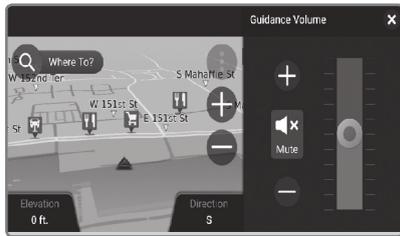

Navigation Display and Controls

Touch icons on the screen to enter information and make selections.

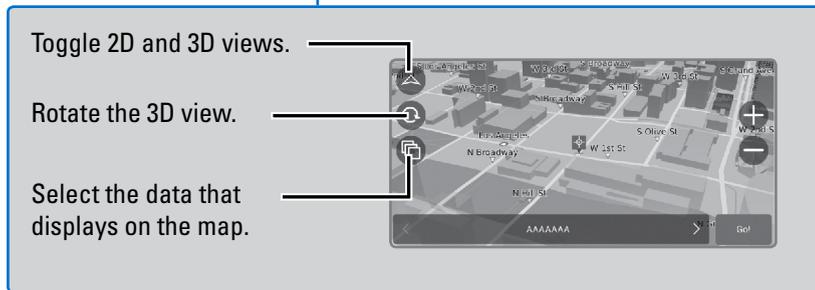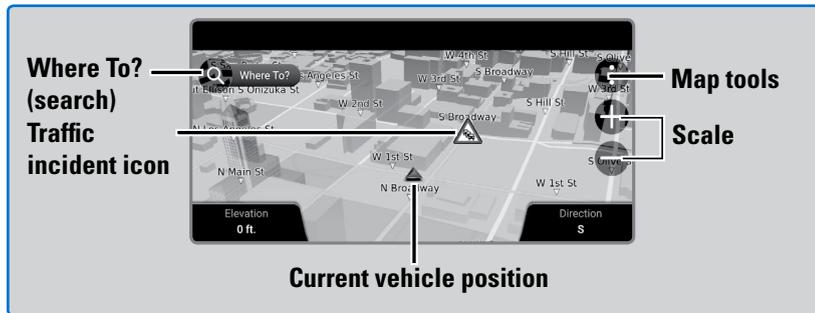

Setting Touchscreen Sensitivity

You can adjust the touchscreen's sensitivity to your fingertip.

1. Press the **HOME** button, select **Settings**, and then **System**.
2. Select **Touch Panel Sensitivity**.
3. Make your selection.



Entering a Destination

Use several methods to enter a destination.

Home Address

Store your home address in the system so you can easily route to it.

1. Press the **MAP** button, select the Search icon, then select .
2. **Select Set Home Location.**
3. Select **Enter My Address.**
4. Enter the house number and street name.
5. Select **Done** or a suggestion.
6. Enter a house number and street name.
7. Select the address from the list. Select **Select**.

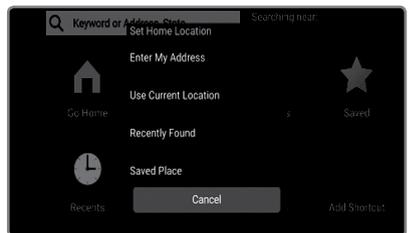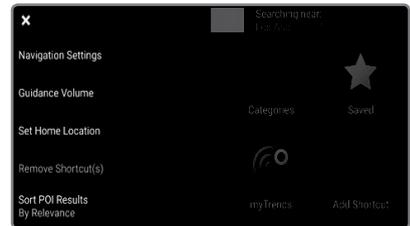


When your home address is stored, you can press the Talk button and say "Navigation" and then "Go home" at any time. You can also select **Go Home** from the **Where To?** menu.

Street Address

Enter a street address.

1. Press the **MAP** button, select the Search icon.
2. Select search bar.
3. Enter the house number and street name.
4. Select **Done** or a suggestion.
5. Select an address from the list.
6. Select **Go!**

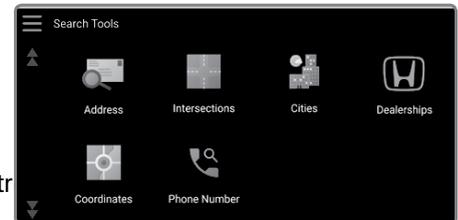

You can also enter a street address using voice commands. Press the Talk button and say "Navigation" and then "Find Address." Follow the prompts.

Place Category


Enter a destination using a point of interest or landmark.

1. Press the **MAP** button, select the Search icon.
2. Select **Categories**.
3. Select a category (and a subcategory, if necessary).
4. Select a place from the list.
5. Select **Go!**

Recent Places

Select an address from a list of your 50 most recent destinations.

1. Press the **MAP** button, select the Search icon.
2. Select **Recents**.
3. Select a place from the list.
4. Select **Go!**

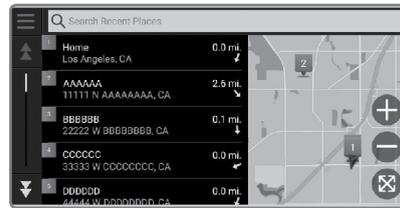


Saved Places

Save locations so you can quickly route to them.

Saving a location

1. Press the **MAP** button, select the Search icon.
2. Select a search method. Find a location that you want to save.
3. Select **Info**.
4. Select **Save**.
5. Enter a name and select **Done**.

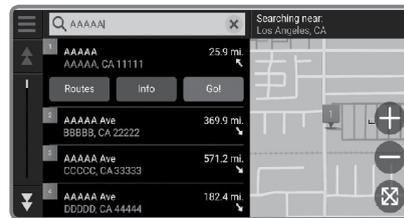

You can also save your current location. From the map screen, select the vehicle icon. Select Save. Enter a name for the location. Select Done.

Routing to a saved location


1. Press the **MAP** button, select the Search icon.
2. Select **Saved**.
3. Select a destination in the Saved list.
4. Select **Go!**



Routing

After a destination is set, you can alter or cancel your route.

Map Legend

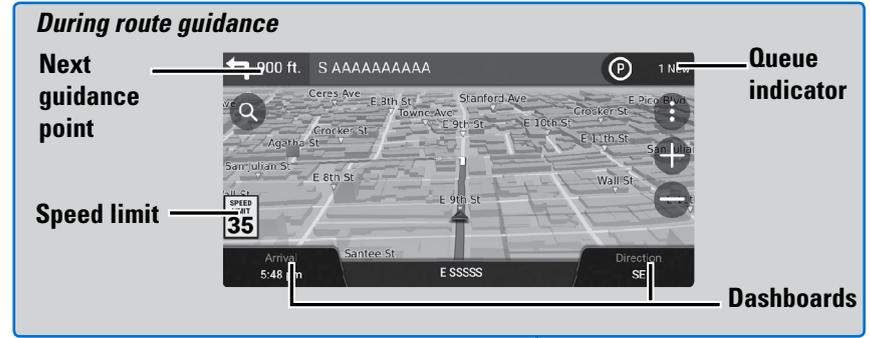


Traffic

The system calculates routes taking current traffic into account. If traffic conditions change during routing, the system may alter the route if it finds a faster way. Traffic information in Canada is limited.

Viewing traffic

1. From the map screen, select **Map Tools**.
2. Select **Traffic**. Localized traffic reports will display.
3. Select **Traffic Map**. Traffic reports display in a list. Select a traffic report in the list to see a map view of that item.

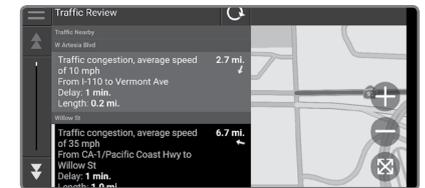

Detouring on your route

1. From the map screen, select **Map Tools**.
2. Select **Detour**.
3. Select the length of the detour.



DRIVING

Learn about preparation for driving, as well as other features.

Before Driving

Check the following items before you begin driving.

■ Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
- Remove any frost, snow, or ice.
- Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
- When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the hood is securely closed. If the hood opens while driving, your front view will be blocked.
- Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.
- Make sure the tires are in good condition. Check air pressures, and check for damage and excessive wear.
- Make sure there are no people or objects behind or around the vehicle. There are blind spots from the inside.

■ Interior Checks

- Store or secure all items on board properly.
- Do not pile items higher in the cargo area than the seat-back height.
- Do not place anything in the front seat footwells. Make sure to secure the floor mats.
- If you have any animals on board, do not let them move freely around in the vehicle.
- Securely close and lock all doors and the trunk.
- Adjust your seating position, mirrors, and steering wheel properly.
- Make sure items placed on the floor behind the front seats cannot roll under the seats.
- Everyone in the vehicle must fasten their seat belt.
- Make sure that the indicators in the instrument panel come on when you start the vehicle and go off soon after.

In addition:

- During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as not to damage the power system or powertrain.
- Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

NOTICE

If the doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing. Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

WARNING

Improper accessories or modifications can affect your vehicle's handling, stability, and performance and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in the vehicle owner's manual regarding accessories and modifications.

Maximum Load Limit

Carrying too much cargo or improperly storing it can affect your vehicle's handling, stability, stopping distance, and tires and make it unsafe.

The maximum load for your vehicle is 850 lbs (385 kg). See the Tire and Loading Information label on the driver's doorjamb.

Label example

TIRE AND LOADING INFORMATION

SEATING CAPACITY: TOTAL 5 | FRONT 2 | REAR 3

The combined weight of occupants and cargo should never exceed 385kg or 850lbs.

TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	XXXX/XXXXX XXX	XXXKPA, XXPSI	
REAR	XXXX/XXXXX XXX	XXXKPA, XXPSI	
SPARE	XXXX/XXXXX XXX	XXXKPA, XXPSI	


This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer. Below are the steps for determining the correct load limit:

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. (635 kg) and there will be five 150 lbs. (68 kg) passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400 - 750 (5 x 150) = 650 lbs.) or 295 kg (635 - (5 x 68) = 295 kg).
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the Owner's Manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.


In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

Load limits example

Example 1

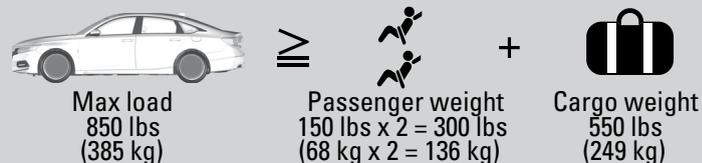

Example 2

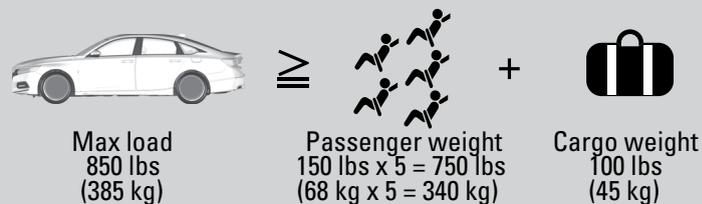

WARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this guide.


The headlight aim on your vehicle was set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk or tow a trailer, have the aiming readjusted at your dealer or by a qualified technician.

Towing a Trailer

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties. Your vehicle is not designed to be towed behind a motor home. If your vehicle needs to be towed in an emergency, refer to emergency towing information (see page 145).

Remote Engine Start with Vehicle Feedback

You can remotely turn the power system on using the  button on the smart entry remote.

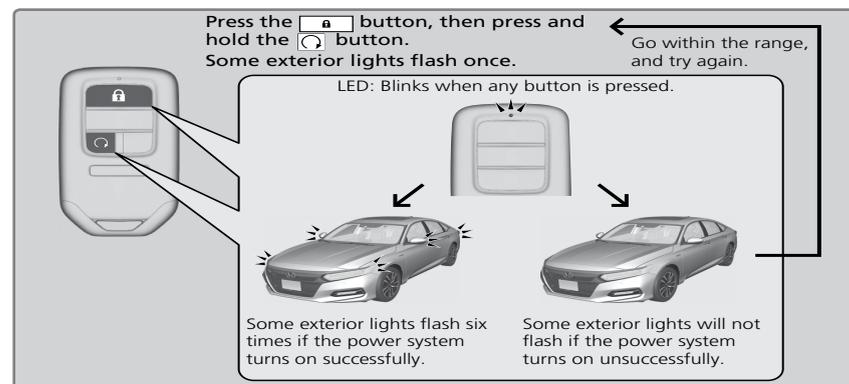

Starting the Power system

Press the Lock button, then press and hold the  button within 5 seconds to remotely start the power system.

The power system runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.

The remote engine start may violate local laws. Before using the remote engine start, check your local laws.

While the power system is on, the vehicle will automatically precondition inside the vehicle.

When it is warm outside:

- The climate control system is activated in auto mode.

When it is cold outside:

- The defroster is activated at a moderately warm temperature.
- The rear defogger and door mirror heaters are activated.
- The seat heaters* and heated steering wheel* are activated.

■ Stopping the Power System

Press and hold the  button.

The power system will also stop if it has been running for more than 10 minutes or if any door is opened without using the smart entry remote.

⚠ WARNING

Engine exhaust contains toxic carbon monoxide gas.

Breathing carbon monoxide can kill you or cause unconsciousness.

Never use the remote engine starter when the vehicle is parked in a garage or other area with limited ventilation.


Starting to Drive

Turn on the vehicle and start the engine to begin driving.

■ Before Starting the Power System

Make sure the parking brake is applied. Depress the brake pedal. Keep your foot firmly on the brake pedal when starting the power system.


The power system is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 m). When starting the power system in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce battery drain.

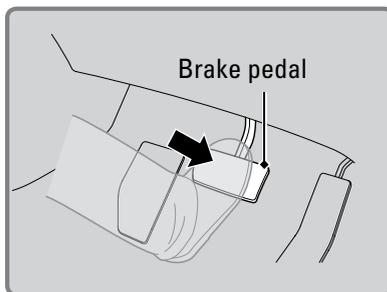

*if equipped

■ Changing the Power Mode


Use the **POWER** button to cycle through power modes or start the engine.

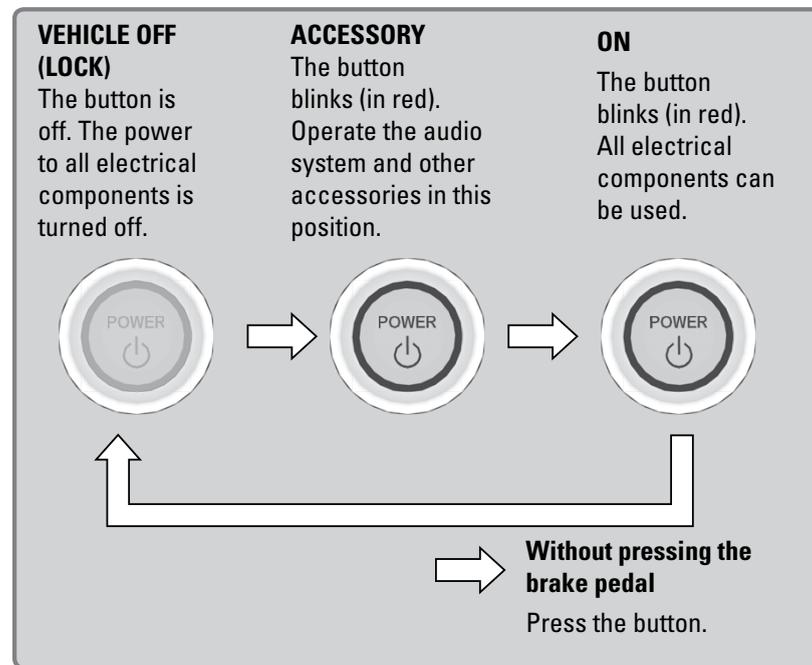

ACCESSORY or ON mode: Press the **POWER** button once without pressing the brake pedal for **ACCESSORY** mode. Press it again for **ON** mode.

Starting the engine: Press and hold the brake pedal, then press the **POWER** button. Keep your foot firmly on the brake pedal when starting the engine.

Turning the vehicle off: Press the Park (P) button or apply the parking brake, then press the **POWER** button. If you press the button and the vehicle is not in Park (P), the vehicle goes into **ACCESSORY** mode.

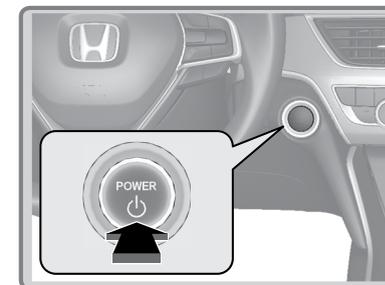

Shifting

Change the shift position in accordance with your driving needs.

Shift Button Positions

Park (P): Used when parking or turning the power on or off. Transmission is locked.

Reverse (R): Used when reversing.

Neutral (N): Transmission is not locked.

Drive (D):

- Used for normal driving.
- The deceleration paddle selector can be used temporarily.
- The deceleration paddle selector can be used when **SPORT** mode is on.



WARNING

The vehicle can roll away if left unattended without confirming that Park (P) is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that (P) is shown on the shift position indicator.

NOTICE

To prevent malfunction and unintended engagement:

- Do not spill any liquids on or around shift buttons.
- Do not place or drop any objects on or around shift buttons.
- Do not let passengers or children operate the shift buttons.


NOTICE

When shifting positions in extremely low temperatures (-22°F/-30°C), there may be a short delay before the shift position is displayed. Always confirm you are in the correct shift position before driving.


(P) Parking Button

The shift position changes to (P) when you press the (P) button while the vehicle is parked with the power mode in **ON**.

The indicators on the sides of the (P) button come on.

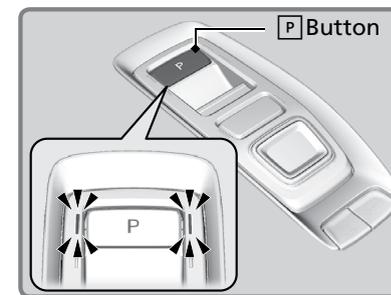

Shift Operation

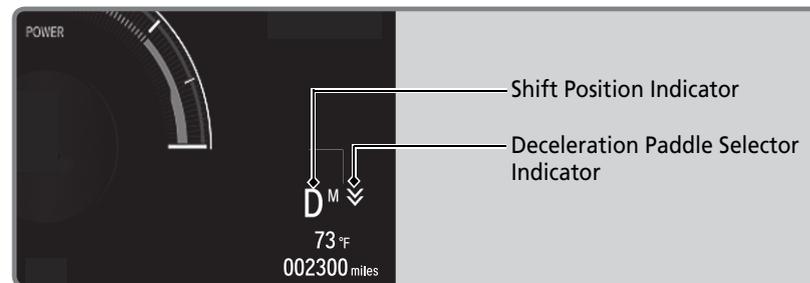

Use the shift position indicator and the shift button indicator to check the shift position before selecting a shift button. If the indicator of the currently selected shift position, or all the shift position indicators are blinking simultaneously, there is a problem with the transmission.

NOTICE

When you change D to R and vice versa, come to a complete stop and keep the brake pedal depressed.

Operating the shift button before the vehicle has come to a complete standstill can damage the transmission.

Auto park mode

If you open the driver's door under the following conditions, the shift position automatically changes to Park (P).

- The vehicle is in stationary with the power mode in ON, or moving at 1 mph (2 km/h) or slower.
- The transmission is in other than Park (P).
- You have unfastened the driver side seat belt.

If you manually change the shift position from Park (P) with the brake pedal depressed, the shift position will automatically return to Park (P) once you release the brake pedal.

Car wash mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps with the power system **ON**:

1. Press and hold the brake pedal.
2. Press and release the Neutral (N) button. Neutral-hold mode will appear on the driver information interface.
3. Press and hold the Neutral (N) button again for two seconds. This puts the vehicle in car wash mode. You can exit the vehicle without it shifting to Park (P).

If the **POWER** button is pressed after car wash mode has been activated, the power mode will change to **ACCESSORY** and a message will be displayed on the driver information interface. After 15 minutes, the shift position changes to Park (P) and the power mode changes to **OFF**.

NOTICE

Note that the transmission may not stay in Neutral (N) position while any of the following indicators is on:

- Transmission system indicator.
- Malfunction indicator lamp.
- Charging system indicator.

■ Deceleration Paddle Selector

When you release the accelerator pedal, you can control the rate of deceleration without removing your hands from the steering wheel. Using the deceleration paddle selector situated on the steering wheel, you can sequentially shift through four stages of deceleration.

When descending a hill, you can use the deceleration paddle selector to help maintain the rate of deceleration, thereby allowing you to keep a safe distance between your vehicle and the vehicle ahead as well as utilize engine braking.

The default deceleration stage . Each paddle selector operation makes a single stage deceleration change. The deceleration stage may not change if you pull the paddle selector continuously.

To select the different stages of deceleration:

- Pull back the + selector (right side) to decrease the deceleration stage.
- Pull back the - selector (left side) to increase the deceleration stage.

Pull the + selector for a few seconds when you want to cancel the deceleration paddle selector.

When SPORT mode is OFF

If you pull back the paddle selector, the rate of deceleration will change temporarily, and the stage will appear in the driver information interface.


When you want to cancel the deceleration paddle selector, pull the + selector (right side) for a few seconds.

The deceleration paddle selector will cancel automatically and deceleration stage in the driver information interface disappear when you drive with constant speed, situations of acceleration and decelerate just before stopping your vehicle.

When SPORT mode is ON

If you pull back the paddle selector, the rate of deceleration will change and the stage along with **M** will appear in the driver information interface. The deceleration stage will not cancel automatically while **SPORT** mode is **ON**.

When you want to cancel the deceleration paddle selector, turn the **SPORT** mode **OFF**, or pull the (+ selector (right side) for a few seconds. When canceled, deceleration stage in the driver information interface disappears.

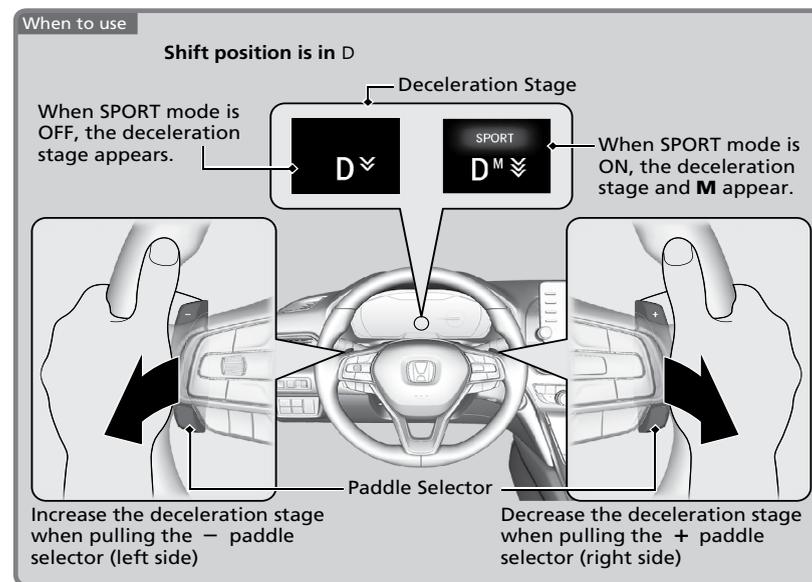

CAUTION

Rapidly increasing the deceleration rate by quickly shifting the deceleration paddle can cause the tires to skid, resulting in a crash that could injure or kill someone.

Always maintain a reasonable rate of deceleration.

Braking


Slow down or stop your vehicle and keep it from moving when parked.

Foot Brake

Press the brake pedal to slow down or stop your vehicle from moving.

Brake Assist System

Designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking. Press the brake pedal firmly for more powerful braking. When brake assist operates, the pedal may wiggle slightly and an operating noise may be heard. This is normal. Keep holding the brake pedal firmly down.

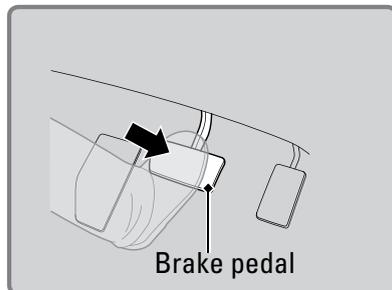**Anti-Lock Brake System (ABS)**

Helps prevent the wheels from locking up, and helps you retain steering control by pumping the brakes rapidly, much faster than you. The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

The following may be observed with the ABS system:

- Motor sounds coming from the engine compartment when the brakes are applied, or when system checks are being performed after the power system has been started while vehicle accelerates.
- Brake pedal and/or the vehicle body vibration when ABS activates. These vibrations and sounds are normal to ABS systems and are no cause for concern.

NOTICE

The ABS may not function correctly if you use an incorrect tire type or size.

Electric Parking Brake Switch

To apply: The electric parking brake can be applied any time the vehicle has battery, no matter which position the power mode is in.

Pull the electric parking brake switch up gently and securely.

- The indicator in the switch comes on.
- The parking brake indicator (red) comes on.



To release: The power mode must be in ON in order to release the electric parking brake.

1. Depress the brake pedal.
2. Press the electric parking brake switch.
 - The indicator in the switch goes off.
 - The parking brake indicator (red) goes off.

Manually releasing the parking brake using the switch helps your vehicle start slowly and smoothly when facing down hill on steep hills.

The parking brake cannot be released automatically while the following indicators are on:

- Malfunction indicator lamp
- Transmission indicator

You cannot apply or release the parking brake if the 12-volt battery goes dead.

NOTICE


In cold climates, the parking brake may freeze in place if applied.

NOTICE

Release the parking brake fully before driving. The rear brakes and axle can be damaged if you drive with the parking brake applied.

Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.

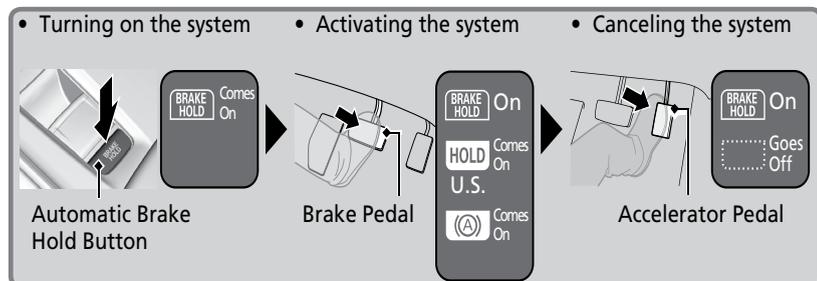

1. Fasten your seat belt properly, then start the power system. Press the automatic brake hold button. The automatic brake hold system indicator comes on. The system is turned on.
2. With the transmission in Drive (D) or Neutral (N), press the brake pedal and come to a complete stop. The HOLD indicator appears, and brake hold is applied. Release the brake pedal.
3. Press the BRAKE HOLD button behind the gear selector. The BRAKE HOLD indicator appears in the instrument panel.

Press the accelerator pedal to cancel brake hold and start moving.

To turn off brake hold: Press the brake pedal and press the BRAKE HOLD button again.

Automatic brake hold cancels when:

- Braking is applied for more than 10 minutes.
- The electric parking brake is engaged.
- The foot brake is pressed and the transmission is put in Park or Reverse.
- The driver's seat belt is unfastened.
- The engine stalls or is turned off.
- There is a problem with the automatic brake hold system.

WARNING

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal. Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving. If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death. Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in Park (P) and applying the parking brake.

Acoustic Vehicle Alerting System


Alerts pedestrians when a vehicle is propelled solely by electricity, approaching at speeds around 12 mph (20 km/h) or less.

Canadian models

Acoustic Vehicle Alerting System OFF Button

Press the button to turn the system on and off. The indicator is in the button comes on when the system is off.

The system is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

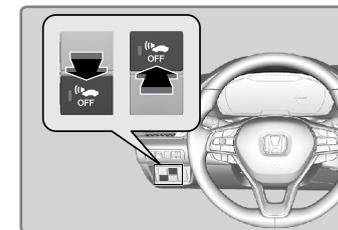


Eco Assist System

Can help improve fuel economy by adjusting the performance of the engine, transmission, climate control system, and cruise control.

ECON Button

The **ECON** button turns the **ECON** mode on and off.

The **ECON** mode helps you improve your fuel economy by adjusting the performance of the climate control system and the accelerator pedal response.

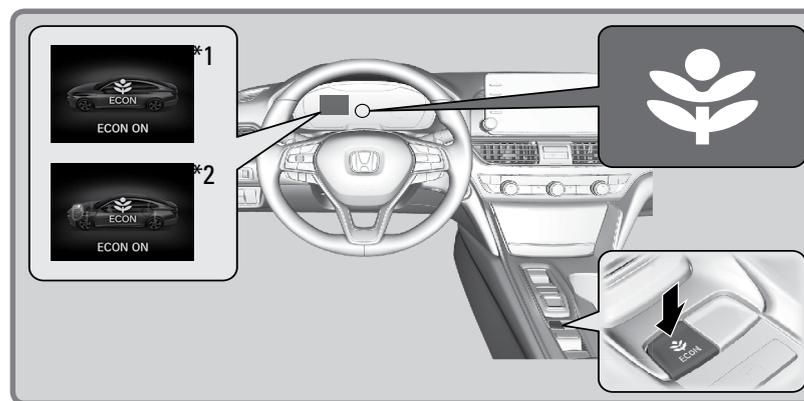


*1: Models without active damper system

*2: Models with active damper system

■ Ambient Meter

With **SPORT** mode off, the color of the ambient meter changes to green to indicate that the vehicle is being driven in a fuel efficient manner.

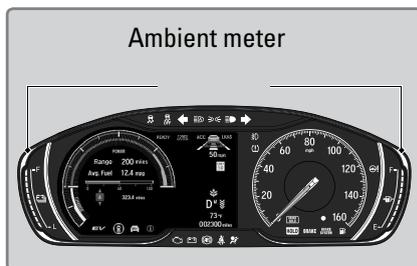


Vehicle Stability Assist (VSA®)

Helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It assists in maintaining traction on slippery surfaces by regulating engine output and selectively applying the brakes. VSA® is also known as Electronic Stability Control (ESC).

■ Turning VSA® On or Off


When VSA® activates, you may notice that the engine and motor do not respond to the accelerator. You may also notice some noise from the hydraulic system. You will also see the indicator blink.

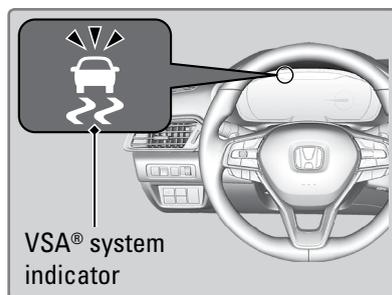

This button is on the driver side control panel. To partially disable VSA® functionality/features, press and hold it until you hear a beep.

Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

To restore VSA® functionality/features, press the (VSA® OFF) button until you hear a beep. VSA® is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

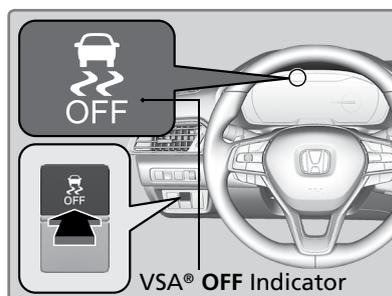

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA® temporarily switched off. Immediately after freeing your vehicle, be sure to switch VSA® on again. We do not recommend driving your vehicle with the VSA® system switched off. You may hear a motor sound coming from the engine compartment while system checks are being performed immediately after turning the power system on or while driving. This is normal.

SPORT Mode


Enhances the throttle response for more driving enjoyment. SPORT mode is set to ff every time the vehicle is started. When in SPORT mode, the ambient meter (see page 103) changes to blue.

■ SPORT Button

To turn the **SPORT** mode on and off, press the **SPORT** button. The SPORT mode increases engine performance and handling*.

This mode is not recommended for fuel economy enhancement, but suitable for driving on hills or through curves on mountain roads.

The SPORT mode is turned off every time you start the power system, even if you turned it on the last time you drove the vehicle.

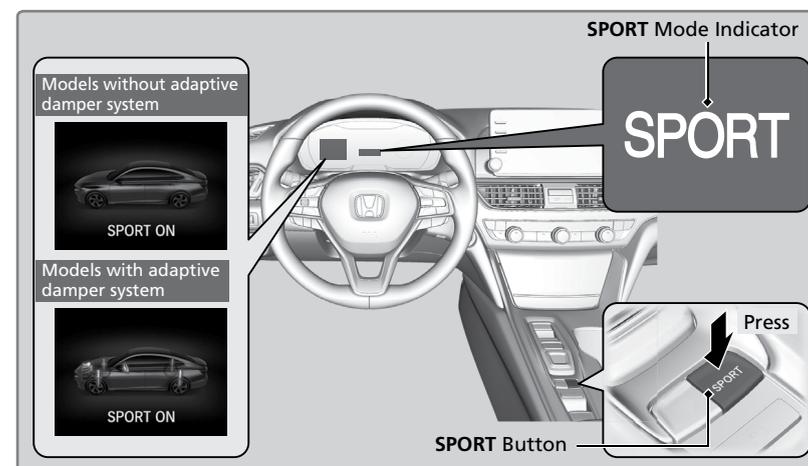

*if equipped

EV Button

EV operation is enabled by pressing the EV button near the gear selector. The EV indicator comes on in the instrument panel when EV operation is enabled.

Press the EV button again to switch back to HV operation.

Some conditions, such as a low High Voltage battery level and a high vehicle speed, may keep the system from manually switching into EV operation. The beeper sounds and a message appears on the driver information interface with the button pressed when EV operation is disabled.


Shifts in vehicle, driving or road conditions may automatically cancel EV mode and switch back to HV mode.

A message will appear on the driver information interface and EV mode may be canceled automatically when:

- The High Voltage battery charge level is low.
- Your vehicle speed is too high.
- Your vehicle speed is above 25 mph (40 km/h) while the engine is in warming-up operation.
- You fully depress the accelerator pedal.
- You are driving on hilly road.

Canadian models:


- In EV mode, the acoustic vehicle alerting system is on.

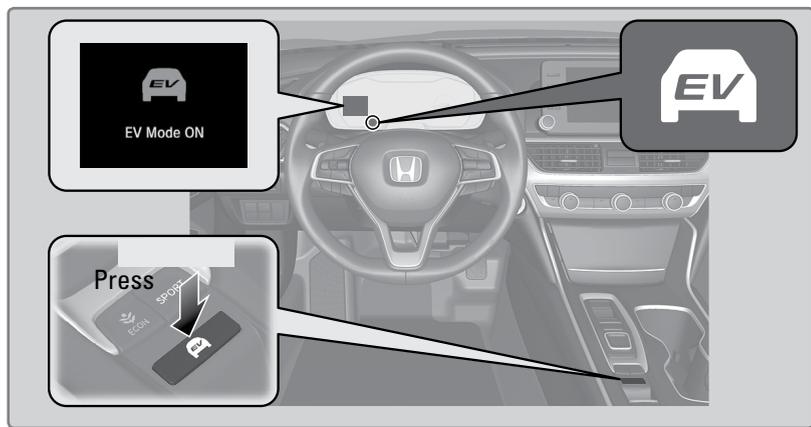


Honda Sensing™

Honda Sensing is a driver support system which employs the use of two distinctly different kinds of sensors, a radar sensor located at the lower part of the front bumper and a front sensor camera mounted to the interior side of the windshield, behind the rearview mirror.

- Do not change the position of the radar sensor or any of the surrounding parts.
- Do not apply paint, stickers, or attach nongenuine accessories to the front part of the radar sensor or the surrounding area.
- Be particularly careful that any custom license plate frame or other accessory does not block any part of the radar beam path (see illustration below).

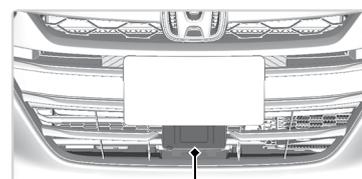

Do not apply paint, stickers, or attach accessories to the front part of the radar sensor or the surrounding area.

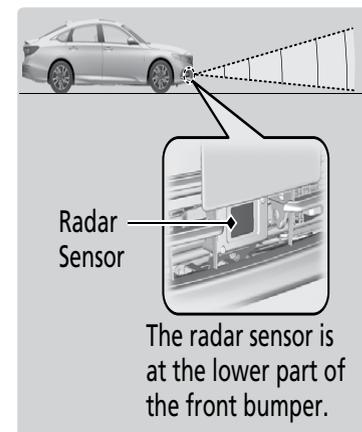

Honda Sensing™ has following functions:

Adaptive Cruise Control (ACC) with Low Speed Follow (LSF): Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle (see page 126).

Lane Keeping Assist System (LKAS): Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane (see page 129).


Traffic Sign Recognition System: Reminds you of road sign information, such as the current speed limit and that overtaking is prohibited (see page 133).

Road Departure Mitigation (RDM) System: Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether (see page 131).

Collision Mitigation Braking System™ (CMBS™): Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours (see page 134).


Adaptive Cruise Control (ACC) with Low Speed Follow (ACC with LSF)

Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours. ACC with LSF works at speeds above 25 mph (40 km/h) and to speeds up to 90 mph (145 km/h).

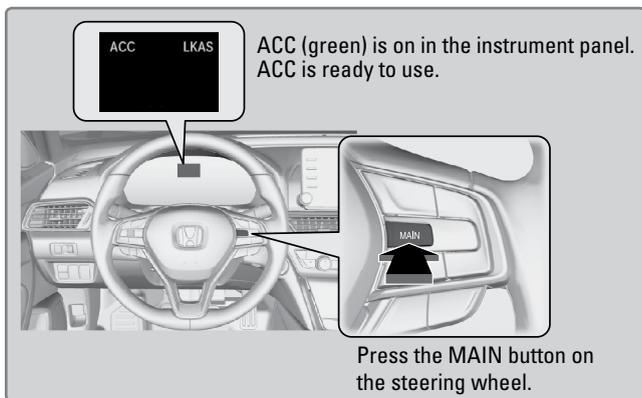

■ Activating and Setting the Vehicle Speed

1. Press the **MAIN** button. The ACC indicator appears in the driver information interface.
2. Accelerate to the desired speed (above 25 mph/40 km/h). Take your foot off the pedal and press the **SET/-** button to set the speed.

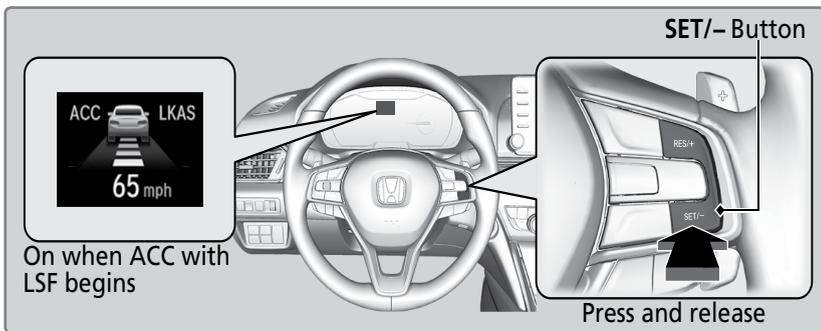

⚠ WARNING

Improper use of ACC with LSF can lead to a crash.

Use ACC with LSF only when traveling on open highways in good weather.


Limitations

You may need to use the brake to maintain a safe interval when using ACC with LSF. Additionally, ACC with LSF may not work properly under certain conditions.

■ Adjusting the Vehicle Speed


Increase or decrease the vehicle speed using the **RES/+** or **SET/-** button on the steering wheel.

- Each time you press the **RES/+** or **SET/-** button, the vehicle speed is increased or decreased by about 1 mph or 1 km/h accordingly.
- If you keep pressing the **RES/+** or **SET/-** button, the vehicle speed increases or decreases by about 5 mph or 5 km/h accordingly.

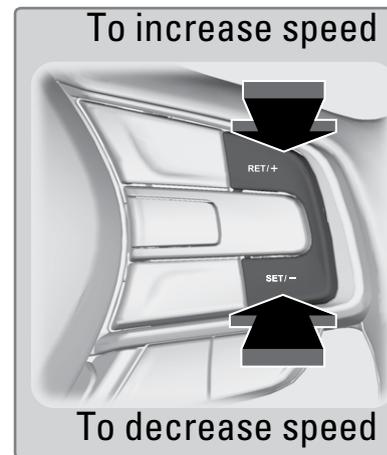

■ Adjusting the Following Interval

Press the Interval button to change the following interval. Each time you press the button, the following interval (the interval behind a vehicle detected ahead of you) setting cycles through extra long, long, middle, and short following intervals.

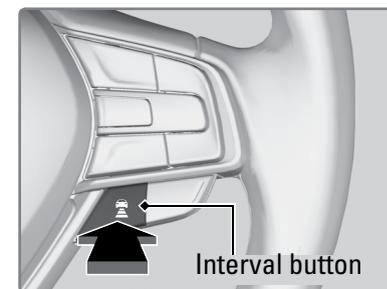

Interval	Short	Middle	Long	Extra Long
Approx. Gap (seconds)	1.1	1.5	2.1	2.9

■ Switching to Cruise Control


Press and hold the Interval button. **Cruise Mode Selected** appears in the driver information interface. Press and hold the Interval button again to switch back to ACC.

■ During Operation

ACC with LSF monitors if a vehicle ahead of you enters the ACC with LSF range. If a vehicle is detected doing so, the ACC with LSF system maintains or decelerates your vehicle's set speed in order to keep the vehicle's set following interval from the vehicle ahead.

You can temporarily increase the vehicle speed. In this case, there is no audible or visual alert even if a vehicle is in the ACC with LSF range. ACC with LSF stays on unless you cancel it. Once you release the accelerator pedal, the system resumes an appropriate speed for keeping the following interval while a vehicle ahead is within the ACC with LSF range.


If the vehicle ahead of you slows down abruptly, or if another vehicle cuts in front of you, the beeper sounds, a message appears on the driver information interface, and the head-up warning lights* flash.

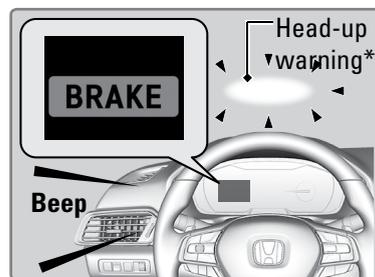

■ Canceling ACC

Press the **CANCEL**, **MAIN** button, or press the brake pedal. The ACC with LSF indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, the amber ACC indicator appears on the driver information interface.

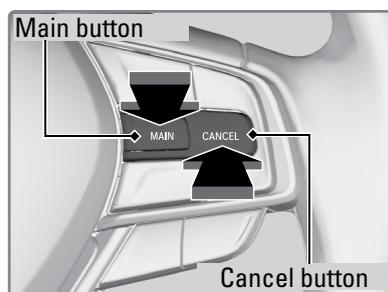

After adaptive cruise control has been canceled, you can still resume the prior set speed by pressing **RES/+** when your vehicle speed is over 25 mph (40 km/h).

⚠ WARNING

ACC with LSF has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you. Always be prepared to apply the brake pedal if the conditions require.

Important Safety Reminder

As with any system, there are limits to ACC with LSF.

Use the brake pedal whenever necessary, and always keep a safe interval between your vehicle and other vehicles.

**if equipped*

⚠ WARNING


Exiting a vehicle that has been stopped while the ACC with LSF system is operating can result in the vehicle moving without operator control. A vehicle that moves without operator control can cause a crash, resulting in serious injury or death. Never exit a vehicle when the vehicle is stopped by ACC with LSF.

Lane Keeping Assist System (LKAS)

Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane while driving between 45–90 mph (72–145 km/h).

The LKAS only alerts you when lane drift is detected without a turn signal in use.

Rapid vibrations on the steering wheel and a warning display alert you that the vehicle is drifting out of a detected lane. The system applies torque to the steering to keep the vehicle between the left and right lane lines. The applied torque becomes stronger as the vehicle gets closer to either of the lane lines. When the vehicle nears a white or yellow line, steering force of the electric power steering will become stronger.

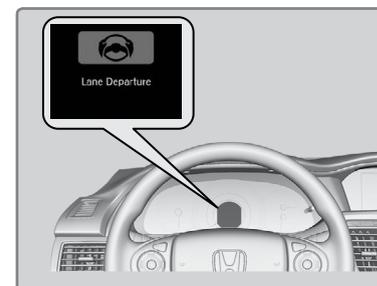


■ Turning the System On or Off

Press the **MAIN** button. LKAS appears in the driver information interface.

Press the LKAS button. Lane outlines appear on the driver information interface. Dotted lane lines turn solid when the system activates.

Press the MAIN button or the LKAS button to turn the system off.

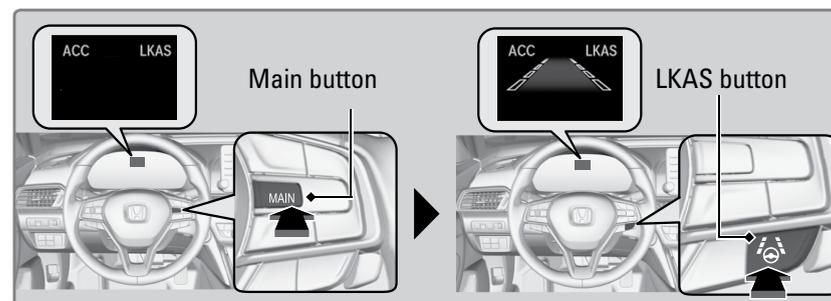

**if equipped*

Important Safety Reminder

LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.


Do not place an object on the top of the instrument panel. Objects may reflect on the windshield and prevent correct detection of the traffic lanes.

It is always your responsibility to safely operate the vehicle and avoid collisions.

LaneWatch™*

Canadian models

LaneWatch is an assistance system that allows you to check the passenger side rear areas displayed on the audio/information screen when the turn signal is activated to the passenger's side.

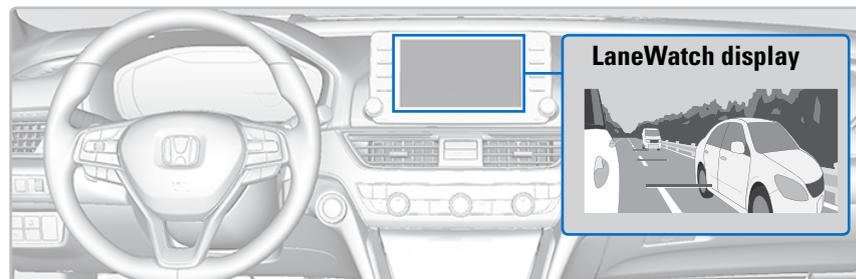

■ Activating LaneWatch

Move the turn signal lever to the passenger side. The LaneWatch display appears. Check the display for blind spots and visually confirm that it is safe to change lanes. You can also press the LaneWatch button on the end of the turn signal switch to view a constant real-time display. Press it again to turn the display off.

■ Changing Settings

Customize the display and how and when the display appears.

1. Press the **HOME** button, select **Settings**.
2. Select **Camera**.
3. Select **LaneWatch**.
4. Select an option and make the preferred changes.

Important Safety Reminder

Like all assistance systems, LaneWatch has limitations. Over-reliance on the system may result in a collision.

**if equipped*

⚠ WARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death.

Do not rely only on LaneWatch while driving. Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

Road Departure Mitigation (RDM)*

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether while driving between 45-90 mph (72-145km/h).

■ How the System Works

If your vehicle is getting too close to detected lane markings without a turn signal activated, the system, in addition to a visual alert, applies steering torque and alerts you with rapid vibrations on the steering wheel, to help you remain within the detected lane.


As a visual alert, the **Lane Departure** message appears on the driver information interface.

If the system determines that its steering input is insufficient to keep your vehicle on the roadway, it may apply braking.

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings.

If the system operates several times without detecting driver response, the system beeps to alert you.


If LKAS is off and you have selected Narrow from the customized options using the audio/information screen, the message shown will appear in case the system determines a possibility of your vehicle crossing over detected lane markings.

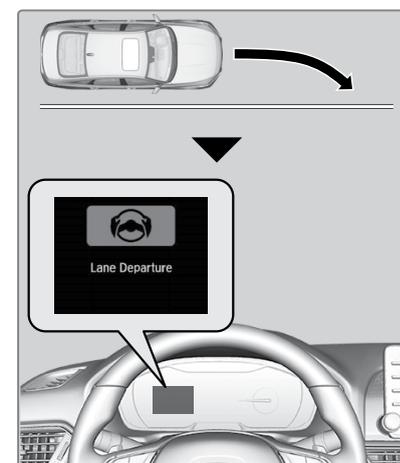

**if equipped*

Turning the System On or Off

Press the safety support switch. Roll the left selector wheel to the RDM symbol and push it. The message appears on the driver information interface when the system becomes on or off. The RDM is in the previously selected **ON** or **OFF** setting each time you start the power system.

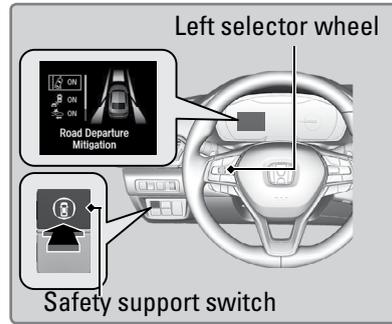

Changing Settings

Determine the warning timing. The vehicle must be in Park (P) with the power mode in **ON**.

Models with Color Audio

1. Press the **MENU/CLOCK** button, then select **Settings**.
2. Select **Vehicle Settings**.
3. Select **Driver Assist System Setup**.
4. Select **Road Departure Mitigation Setting**.
5. Select from the options.
 - Normal (default):* Steering control starts from inside the lane edge.
 - Wide:* Steering control starts from outside the lane edge.
 - Warning Only:* The system only provides a **BRAKE** message, but does not apply steering or braking.
 - Narrow:* Use for driving on narrow roads.

Models with Display Audio

1. Press the **HOME** button, then select **Settings**.
2. Select **Vehicle**.
3. Select **Driver Assist System Setup**.
4. Select **Road Departure Mitigation Setting**.
5. Select from the options.
 - Normal (default):* Steering control starts from inside the lane edge.
 - Wide:* Steering control starts from outside the lane edge.
 - Warning Only:* The system only provides a **BRAKE** message, but does not apply steering or braking.
 - Narrow:* Use for driving on narrow roads.

Important Safety Reminder


Like all assistance systems, the RDM system has limitations.

Over-reliance on the RDM system may result in a collision. It is always your responsibility to keep the vehicle within your driving lane.

The RDM system only alerts you when lane drift is detected without a turn signal in use. The RDM system may not detect all lane markings or lane or roadway departures; accuracy will vary based on weather, speed and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

Traffic Sign Recognition System

Reminds you of road sign information, such as the current speed limit, your vehicle has just passed through, showing it on the driver information interface and the head-up display*.

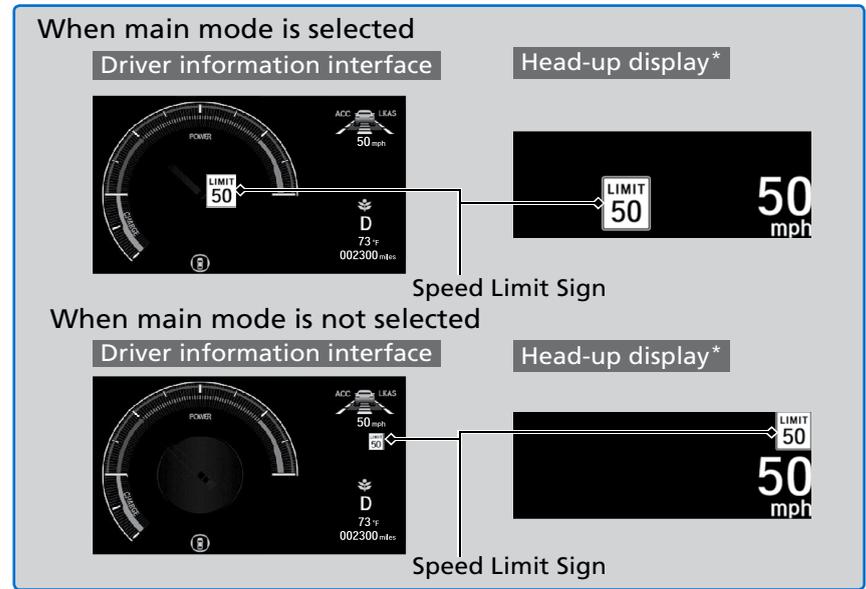

Limitations: Several vehicle and environmental conditions can cause the system not to recognize signs.

Not all signs may be displayed, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.

Do not rely too much on the system. Always drive at speeds appropriate for the road conditions.

*if equipped

Collision Mitigation Braking System™ (CMBS™)

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours.

The system can give you visual and audible alerts when a potential collision is determined and reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

When a potential collision with a detected oncoming vehicle is determined, a BRAKE message appears in the driver information interface, the head-up warning lights flash, and a beep sounds.

The system activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you is about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and there is a chance of a collision with an oncoming detected vehicle or a pedestrian in front of you.

Alert Stages

The system has three alert stages for a possible collision. Depending on the circumstances or CMBS settings, CMBS may not go through all of the stages before initiating the last stage.



Stage 1: Visual and audible warning

Stage 2: Visual and audible warning, light brake application

Stage 3: Visual and audible warning, strong brake application

Turning CMBS On or Off

Press the safety support switch and roll the left selector wheel to the CMBS symbol and select it. A message appears in the driver information interface. The CMBS indicator appears when the system is off.

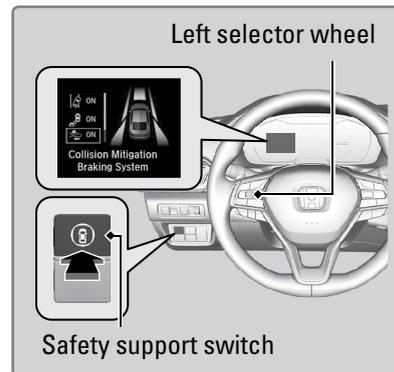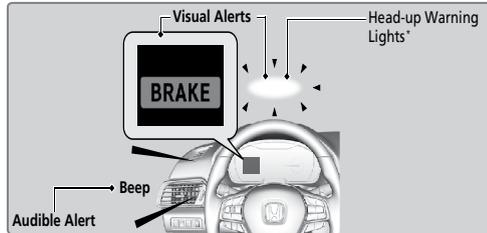

**if equipped*

Changing Settings

Determine the warning timing. The vehicle must be in Park (P).

Models with Color Audio

1. Press the **MENU/CLOCK** button, select **Settings**.
2. Select **Vehicle Settings**.
3. Select **Driver Assist System Setup**.
4. Select **Forward Collision Warning Distance**.
5. Select **Normal, Short, or Long**.

Models with Display Audio



1. Press the **HOME** button, select **Settings**.
2. Select **Vehicle**.
3. Select **Driver Assist System Setup**.
4. Select **Forward Collision Warning Distance**.
5. Select **Normal, Short, or Long**.

Important Safety Reminder

The CMBS™ is designed to reduce the severity of an unavoidable collision. It does not prevent a collision nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.


Parking Sensor System*

The corner and center sensors monitor obstacles around your vehicle, and the beeper, driver information interface and audio/information screen let you know the approximate distance between your vehicle and the obstacle.

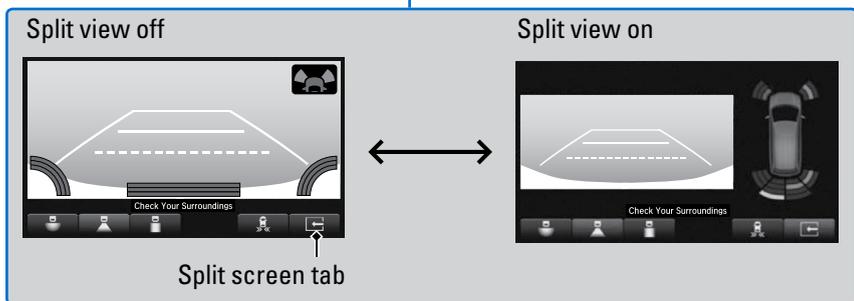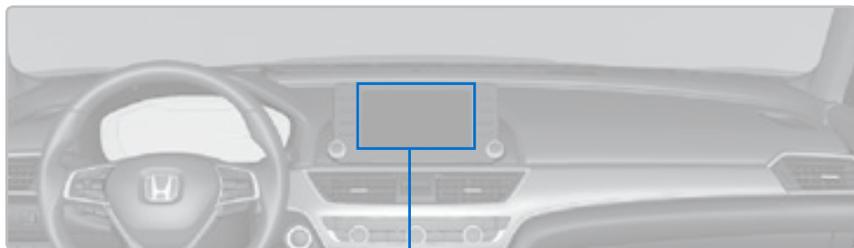

Turning the System On or Off


With the power mode in **ON**, press the parking sensor system button to turn on or off the system. The indicator in the button comes on when the system is on.

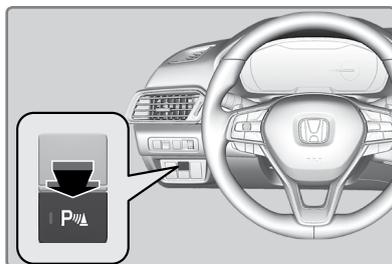

*if equipped

Multi-View Rear Camera

When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the upper display, along with helpful parking guidelines.

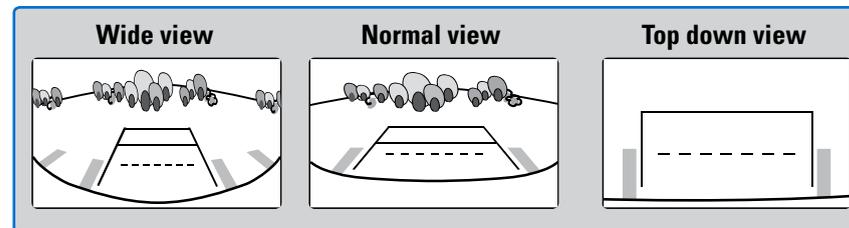

Models with Color Audio

Press the preset button (1-3) under the appropriate icon to switch the view mode.

Models with Display Audio

Touch the appropriate icon to switch the view mode.

Changing Camera Settings

Turn the guidelines on or off.

1. *Models with Color Audio:* Press the **MENU/CLOCK** button.
Models with Display Audio: Press the **HOME** button, select **Settings**. Then select **Camera**.
2. Select **Rear Camera**.
3. Select an option.
Fixed Guidelines: Guidelines appear when you shift into Reverse.
Dynamic Guidelines: Guidelines move as you turn the steering wheel.
4. Select **On** or **Off**.

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are. Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle. If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

Blind Spot Information*

Is designed to detect vehicles in specified alert zones adjacent to your vehicle, particularly in harder to see areas commonly known as “blind spots”, when travelling 20 mph (32 km/h) and higher.


When the system detects vehicles approaching from behind in adjacent lanes, the appropriate indicator comes on for a few seconds, providing assistance when you change lanes.

Blind Spot Information Alert Indicator:
Located on the outside rearview mirror on both sides. Comes on when:

- A vehicle enters the alert zone from behind to overtake you with a speed difference of no more than 31 mph (50 km/h) from your vehicle.
- You pass a vehicle with a speed difference of no more than 12 mph (20 km/h).

Blinks and a beeper sounds when:

You move the turn signal lever in the direction of the detected vehicle. The beeper sounds three times.

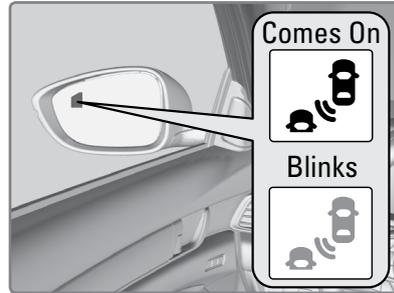

■ Changing Settings

Determine the warning type or turn the system off.

1. Press the **HOME** button, select **Settings**.
2. Select **Vehicle**. The vehicle must be in Park (P).
3. Select **Driver Assist System Setup**.
4. Select **Blind Spot Info**.
5. Select an alert type or turn the system off.
6. Press **Save**.

Important Safety Reminder

Like all assistance systems, Blind Spot Information has limitations. Over-reliance on the system may result in a collision. The system is for your convenience only.

⚠️ WARNING


Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death. Do not rely only on the blind spot information system when changing lanes.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

**if equipped*

Cross Traffic Monitor*

Alerts you if a detected vehicle is approaching from a rear corner when your vehicle is in Reverse (R) at speeds of 3 mph (5 km/h) or lower, which can be helpful when backing out of parking spaces.

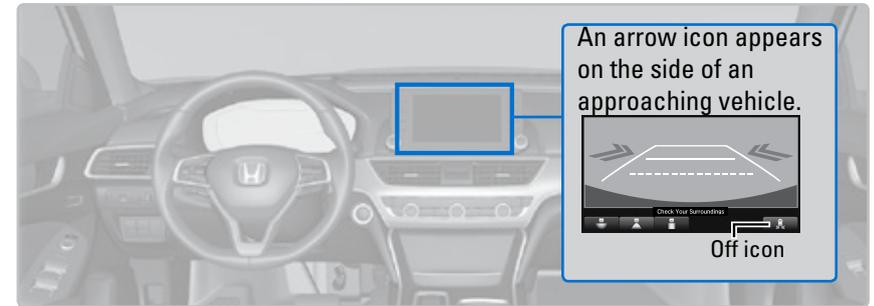

When a vehicle is detected approaching from a rear corner, Cross Traffic Monitor alerts you with a buzzer and a displayed warning.

The system does not provide alerts for a vehicle that is moving away from your vehicle and it may not detect pedestrians, bicycles, or stationary objects.

Models with parking sensor system

The parking sensor system's alerting buzzer overrides the Cross Traffic Monitor buzzer when the sensors are detecting obstacles at the closest range.

■ Turning the System On or Off

1. Press the **HOME** button, select **Settings**.
2. Select **Camera**.
3. Select **Cross Traffic Monitor**.
4. Select **ON** or **OFF**, then select **Save**.

The system can also be turned on and off on the audio/information screen by pressing the CTM icon.

⚠️ CAUTION

Cross Traffic Monitor cannot detect all approaching vehicles and may not detect an approaching vehicle at all.

Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors and look behind and to the sides of your vehicle before reversing.

Refueling

Use the proper fuel and refueling procedure to ensure the best performance and safety of your vehicle.

Fuel Information

Use of unleaded gasoline of 87 octane or higher is recommended.

- Honda recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.



NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.

How to Refuel

Your fuel tank is not equipped with a fuel filler cap. You can insert the filler nozzle directly into the filler neck. The tank seals itself again when you pull out the filler nozzle. The fuel fill door is located at the left rear of the vehicle. Park next to the service pump that is most accessible.

1. Turn off the power system.
2. Unlock the driver's door using the master door lock switch. The fuel fill door on the outer side of the vehicle will unlock.
3. Press the area indicated by the arrow to release the fuel fill door. You will hear a click.
4. Insert the filler nozzle fully. When the tank is full, the nozzle clicks off automatically. Wait about 5 seconds before removing the filler nozzle.
5. Close the fuel fill door.

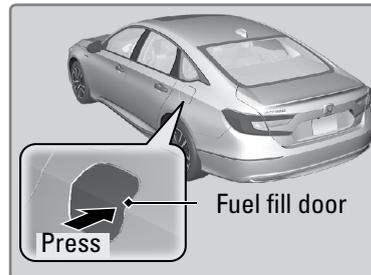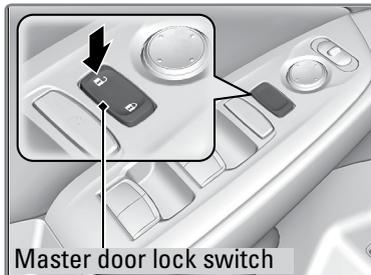

WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Turn the power system off and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Improving Fuel Economy and Reducing CO₂ Emissions

Achieving fuel economy and reducing CO₂ emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.


HANDLING THE UNEXPECTED

Learn about what to do in critical or emergency situations.

Smart Entry Remote Battery Strength

If the beeper sounds, the **To Start, Hold Remote Near Start Button** message appears on the driver information interface, and the **POWER** button flashes, the **READY** indicator does not come on. Turn on the power system as follows:

1. Touch the center of the **POWER** button with the **H** logo on the smart entry remote while the **POWER** button is flashing. The buttons on the smart entry remote should be facing you.
2. Press the brake pedal and press the **POWER** button within 10 seconds after the beeper sounds and the **POWER** button changes from flashing to on.

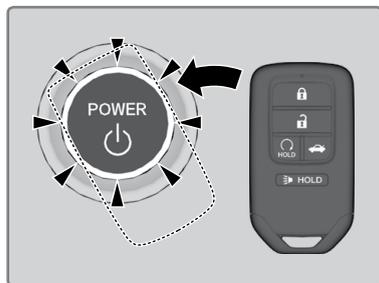


Emergency Power System Off

The **POWER** button may be used to turn the power system off due to an emergency situation even while driving. If you must turn the power system off, do either of the following operations:

- Press and hold the **POWER** button for about two seconds, or
- Firmly press the **POWER** button three times.

The steering wheel will not lock. However, because turning off the power system disables the power assist the power system provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle.

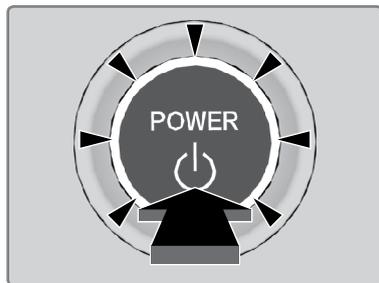

Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place. The transmission automatically changes to (P) after the vehicle comes to a complete stop. Then, the power mode changes to **VEHICLE OFF**.

NOTICE



Do not press the button while driving unless it is absolutely necessary for the engine to be switched off.

**if equipped*

Jump Starting

Turn off the power to electric devices, such as audio and lights. Turn off the engine, then open the hood.

1. Open the cover on the positive + terminal.
2. Connect the first jumper cable to your vehicle's battery (+) terminal.
3. Connect the other end of the first jumper cable to the booster battery (+) terminal. Use a 12-volt booster battery only.
4. Connect the second jumper cable to the booster battery (-) terminal.
5. Connect the other end of the second jumper cable to the engine mounting bolt (as shown). Do not connect this jumper cable to any other part.

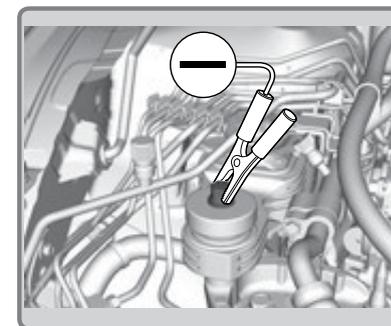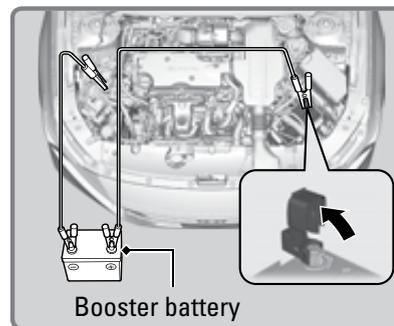

6. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
7. Attempt to start your vehicle's engine. If it turns over slowly, make sure that the jumper cables have good metal-to-metal contact.

After the Engine Starts

Once your vehicle's engine has started, remove the jumper cables in the following order:

1. Disconnect the jumper cable from your vehicle's ground.
2. Disconnect the other end of the jumper cable from the booster battery's (-) terminal.
3. Disconnect the jumper cable from your vehicle battery's (+) terminal.
4. Disconnect the other end of the jumper cable from the booster battery's (+) terminal.
5. Have your vehicle inspected by a nearby service station or a dealer.

WARNING

A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

Overheating

Overheating symptoms are as follows:

- The **Power System Temperature High. Power May Be Reduced.** message appears on the driver information interface.
- The **Engine Temperature Too Hot. Do Not Drive. Allow Engine To Cool.** message appears on the driver information interface.
- Steam or spray comes out of the engine compartment.

■ The Power System Temperature High. Power May Be Reduced. Message Appears on the Driver Information Interface

The Power System Temperature High. Power May Be Reduced. message appears on the driver information interface when the power system temperature is high.

1. Immediately park the vehicle in a safe place.
Put the transmission into (P), and set the parking brake. Turn off all accessories and turn on the hazard warning lights.
2. Keep the power mode on, and wait until the message disappears.
If the message does not disappear, have your vehicle inspected at a dealer.


■ The Engine Temperature Too Hot. Do Not Drive. Allow Engine To Cool. Message Appears on the Driver Information Interface

First thing to do

1. Immediately park the vehicle in a safe place.
2. Turn off all accessories and turn on the hazard warning lights.
No steam or spray present: Keep the power system on and open the hood.
Steam or spray is present: Turn off the power system and wait until it subsides. Then open the hood.

Next thing to do

1. Check that the cooling fan is operating and turn the power system off once the **Engine Temperature Too Hot. Do Not Drive. Allow Engine To Cool.** message disappears.
If the cooling fan is not operating, immediately turn the power system off.

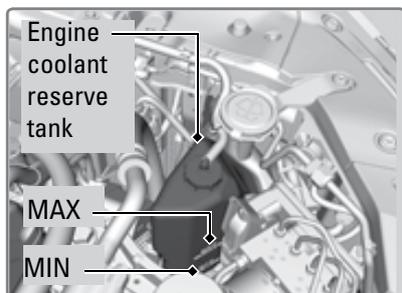

2. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks.
If the coolant level in the engine coolant reserve tank is low, add coolant until it reaches the MAX mark.
If there is no coolant in the reserve tank, check that the radiator is cool. Cover the radiator cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

Last thing to do

Once the engine has cooled sufficiently, turn the power system on. If the **Engine Temperature Too Hot. Do Not Drive. Allow Engine To Cool.** message does not appear, resume driving. If it appears again, contact a dealer for repairs.

⚠ WARNING

Steam and spray from an overheated engine can seriously scald you. Do not open the hood if steam is coming out.

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you. Always let the engine and radiator cool down before removing the radiator cap.

NOTICE

Continuing to drive with the **Engine Temperature Too Hot. Do Not Drive. Allow Engine To Cool.** message on the driver information interface may damage the engine.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

Flat bed equipment: The operator loads your vehicle on the back of a truck.

This is the best way to transport your vehicle.

Wheel lift equipment: The tow truck uses two pivoting arms that go under the front tires and lift them off the ground. The rear tires remain on the ground.

This is an acceptable way to tow your vehicle.

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.


Improper towing such as towing behind a motorhome or other motor vehicle can damage the transmission.

**if equipped*

Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving.

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator comes on and a message appears on the driver information interface.

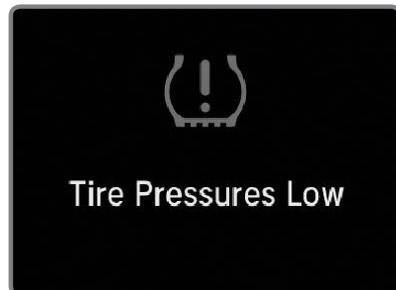

What to Do

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level on the label on the driver's doorjamb.


TPMS Calibration

Any time you inflate, change, or rotate one or more of the tires, you must recalibrate the system. The calibration process requires approximately 30 minutes of cumulative driving at speeds between 30–60 mph (48–97 km/h). The vehicle must be stopped to begin calibration and the process finishes automatically.

Models with Color Audio

Use the selector knob and the audio/information screen to calibrate the system.

1. Press the **MENU/CLOCK** button.
2. Select **Settings**, then **Vehicle Settings**.
3. Select **TPMS Calibration**.
4. Select **Calibrate**.

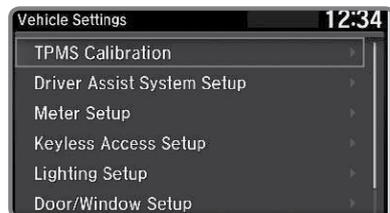

If the **Calibration Failed to Start** message appears, repeat steps 3-4. The calibration process finishes automatically.

Models with Display Audio


Use the touchscreen to make and enter selections.

1. Press the **HOME** button.
2. Select **Settings**, then **Vehicle**.
3. Select **TPMS Calibration**.
4. Select **Calibrate**.

If the **Calibration Failed to Start** message appears, repeat steps 3-4.

The calibration process finishes automatically.

If the low pressure indicator remains on after recalibration, it may indicate a fault in the system. Have your vehicle checked by a dealer.

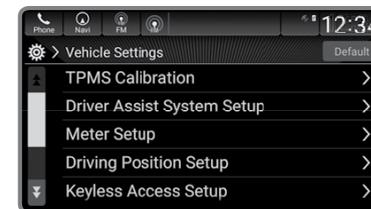

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.

■ Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

U.S. models

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS)



that illuminates a low tire pressure telltale when one or more of your tires is significantly underinflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Underinflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if underinflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

Tire Repair Kit

If the tire has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tire only has a small puncture, from a nail for instance, you can use the temporary tire repair kit so that you can drive to the nearest service station for a more permanent repair. The puncture must be smaller than 3/16-inch (4 mm) and not in the tire sidewall. Go to a dealer to have the full-size tire permanently repaired or replaced. This vehicle is not equipped with a spare tire. Follow the steps below:



■ Before Repairing the Tire

1. Park the vehicle on a firm, level, and non-slippery surface.
2. Put the transmission into Park (P).
3. Turn on the hazard warning lights and set the power mode to **VEHICLE OFF (LOCK)**.

■ Getting Ready to Repair the Tire

When making a temporary repair, carefully read the instruction manual provided with the kit.

1. Open the trunk floor lid.
2. Take the kit out of the case.
3. Place the kit face up, on flat ground near the flat tire, and away from traffic. Do not place the kit on its side.

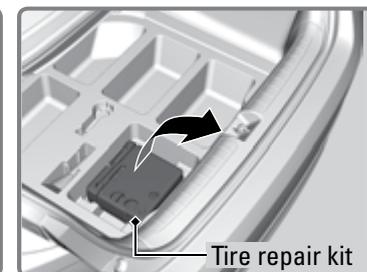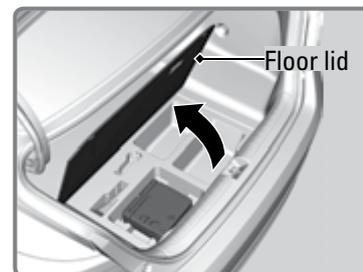

NOTICE

If the required air pressure is not reached within 10 minutes, the tire may be too severely damaged for the kit to provide the necessary seal and your vehicle will need to be towed.

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The accessory power socket and compressor can overheat and become permanently damaged.

WARNING

Running the engine with the vehicle in an enclosed or even partly enclosed area can cause a rapid build-up of toxic carbon monoxide.

Breathing this colorless, odorless gas can cause unconsciousness and even death. Only run the engine to power the air compressor with the vehicle outdoors.

WARNING

Loose items can fly around the interior in a crash and can seriously injure the occupants.


Store the wheel, jack, and tools securely before driving.

Fuse Locations


If any electrical devices are not working, turn the vehicle off and check to see if any applicable fuse is blown. Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number. Refer to the Owner's Manual at owners.honda.com for a complete fuse chart.

Engine Compartment Fuse Box



Located near the 12-volt battery. Push the tabs to open the box. Push the tabs to open the box.

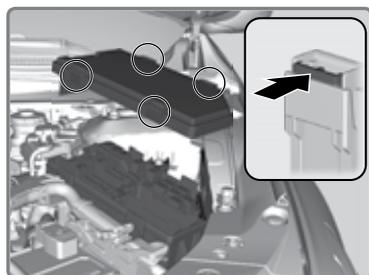**Interior Fuse Box**

Located under the dashboard on the driver's side.

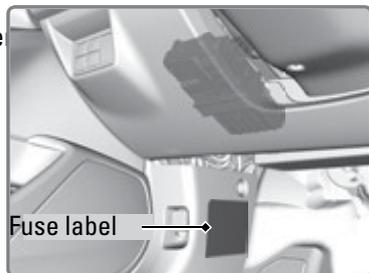**Inspecting and Changing Fuses**

1. Turn the vehicle off, including all lights and accessories.
2. Remove the engine compartment fuse box cover.
3. Check the large fuse in the engine compartment.
If the fuse is blown, use a Phillips-head screwdriver to remove the screws and replace the fuse with a new one. Reinstall the screws.
4. Inspect the small fuses in the engine compartment and the vehicle interior.
If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

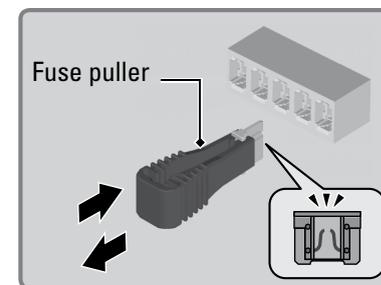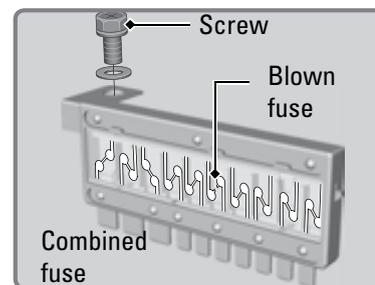**NOTICE**

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

MAINTENANCE

Learn about basic maintenance that you can perform on the vehicle yourself, as well as information about how to best maintain the vehicle.

Safety Precautions

Some of the most important safety precautions are listed below; however, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the 12-volt battery, all High Voltage system, and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the hood. Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Engine exhaust contains carbon monoxide, which is poisonous and can kill you. Only operate the engine if there is sufficient ventilation.

Vehicle Safety

- The vehicle must be stationary and parked on level ground with the parking brake set and the power system turned off.
- Be aware that hot parts can burn you. Make sure to let the power system including the engine and exhaust system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.

⚠️ WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations according to the schedules in this guide.


⚠️ WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this guide.

Maintenance Minder™

When maintenance is due, the Maintenance Minder indicator comes on and a message appears on the display every time you turn the vehicle on. Press the left selector wheel to change displays.

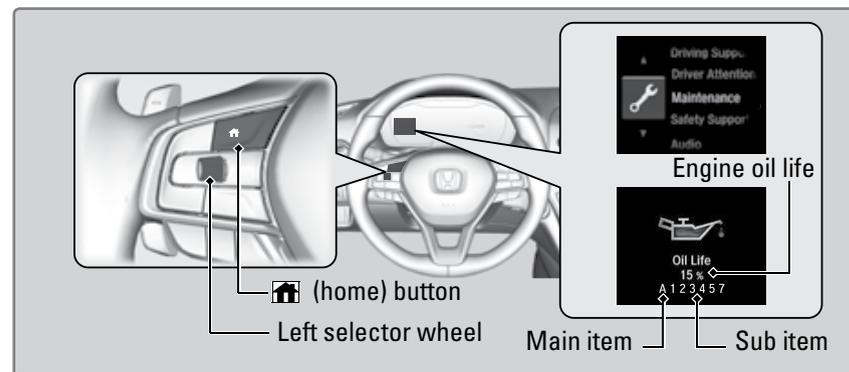

- Adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

U.S. models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the driver information interface.

Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

U.S. models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none"> • Replace engine oil*1
B	<ul style="list-style-type: none"> • Replace engine oil*1 and oil filter • Inspect front and rear brakes • Check expiry date for tire repair kit bottle • Inspect tie rod ends, steering gearbox, and boots • Inspect suspension components • Inspect driveshaft boots • Inspect brake hoses and lines (Including ABS/VSA®) • Inspect all fluid levels and condition of fluids • Inspect exhaust system# • Inspect fuel lines and connections#

*1: If a Maintenance Minder message does not appear more than 12 months after the display is reset, change the engine oil every year.

: See information on maintenance and emissions warranty.

CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"> • Rotate tires
2	<ul style="list-style-type: none"> • Replace air cleaner element*2 • Replace dust and pollen filter*3
3	<ul style="list-style-type: none"> • Replace transmission fluid*4
4	<ul style="list-style-type: none"> • Replace spark plugs • Inspect valve clearance
5	<ul style="list-style-type: none"> • Replace engine coolant
7	<ul style="list-style-type: none"> • Replace brake fluid*5

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 47,500 miles (76,000 kilometers) or 3 years.

*5: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

Canadian models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none"> • Replace engine oil*1
0	<ul style="list-style-type: none"> • Replace engine oil*1 and oil filter

*1: If a Maintenance Minder message does not appear more than 12 months after the display is reset, change the engine oil every year.

*2: If you drive in dusty conditions, replace the air cleaner element every 24,000 km (15,000 miles).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 24,000 km (15,000 miles).


*4: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed at 76,000 kilometers (47,500 miles) or 3 years.

*5: If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

: See information on maintenance and emissions warranty.



CODE	Maintenance Sub Items
1	<ul style="list-style-type: none"> • Rotate tires
2	<ul style="list-style-type: none"> • Replace air cleaner element*2 • Replace dust and pollen filter*3
3	<ul style="list-style-type: none"> • Replace transmission fluid*4
4	<ul style="list-style-type: none"> • Replace spark plugs • Inspect valve clearance
5	<ul style="list-style-type: none"> • Replace engine coolant
7	<ul style="list-style-type: none"> • Replace brake fluid*5
9	<ul style="list-style-type: none"> • Service front and rear brakes • Check expiry date for tire repair kit bottle • Inspect tie rod ends, steering gearbox, and boots • Inspect suspension components • Inspect driveshaft boots • Inspect brake hoses and lines (including ABS/VSA®) • Inspect all fluid levels and condition of fluids • Inspect exhaust system# • Inspect fuel lines and connections#

Under the Hood

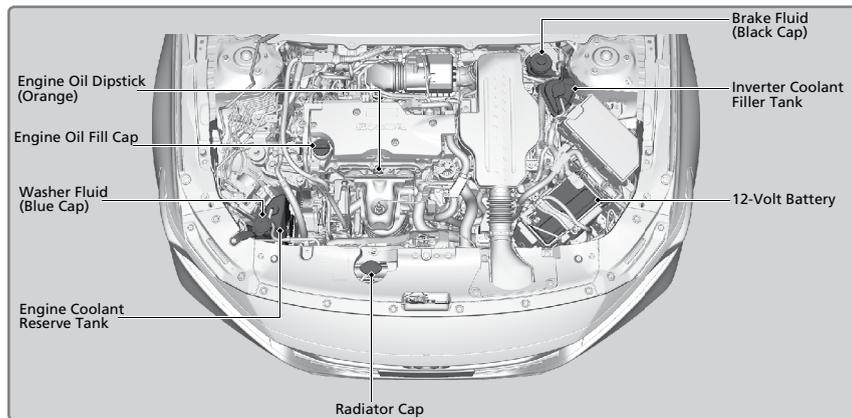


Opening the Hood

1. Park the vehicle on a level surface and set the parking brake.
2. Pull the hood release handle under the lower left corner of the dashboard.
3. Push up the hood latch lever in the center of the hood to release the lock mechanism and open the hood.

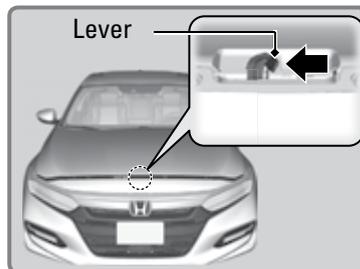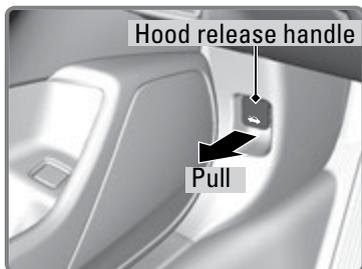

4. Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

When closing, remove the support rod, and stow it in the clamp, then gently lower the hood. Remove your hand at a height of approximately 12 inches (30 cm) and let the hood close.

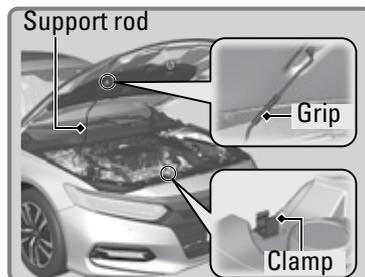

NOTICE

Do not open the hood when the wiper arms are raised. The hood will strike the wipers and may damage either the hood or the wipers.

Engine Oil

Park the vehicle on level ground and turn the power system off. Wait about three minutes before you check the oil.


Recommended Engine Oil

- **Honda Genuine Motor Oil**
- **Premium-grade 0W-20 detergent oil with an API Certification Seal on the container**

This seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.


Use Honda Genuine Motor Oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is of the specified viscosity grade.

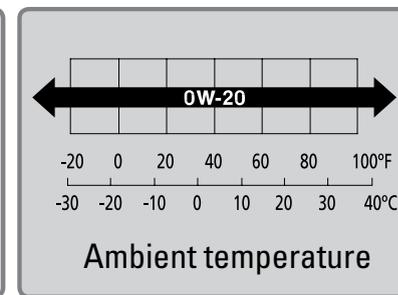


■ **Checking the Oil**

1. Remove the dipstick (orange).
2. Wipe the dipstick with a clean cloth or paper towel.
3. Insert the dipstick back all the way into its hole.
4. Remove the dipstick again and check the level. It should be between the upper and lower marks. Add oil if necessary.

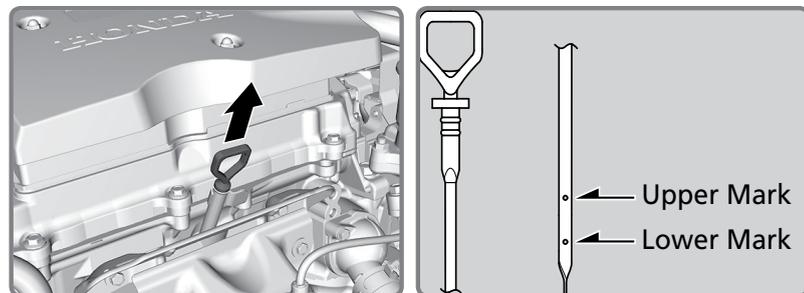

■ **Adding Oil**

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

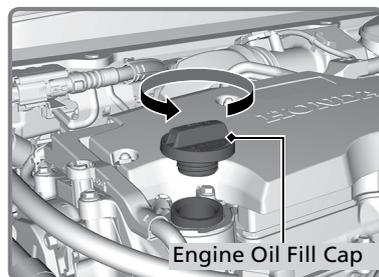

NOTICE


Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

■ **Resetting the Engine Oil Life**

If you change or replace the vehicle's engine oil yourself, you must reset the engine oil life.

Use the Info (▲/▼) and SEL/RESET buttons on the steering wheel buttons to control the display.

1. Scroll to the Vehicle Settings screen and select it.
2. Scroll to the Maintenance Reset screen and select it.
3. Select Reset. The maintenance codes disappear and the engine oil life display returns to 100%.

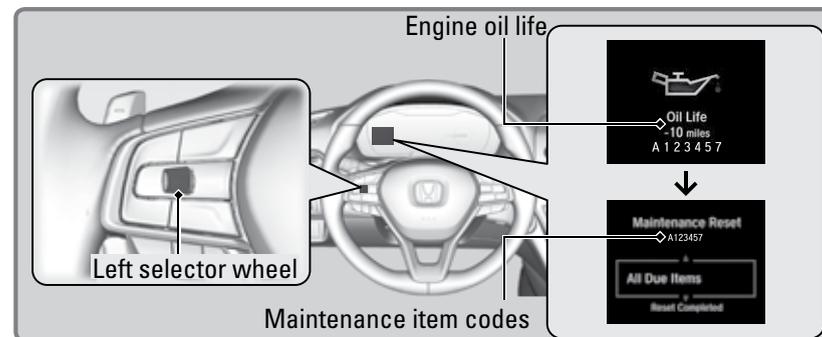

NOTICE


Failure to reset the Maintenance Minder display after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

Engine Coolant

Park the vehicle on level ground. Check the reserve tank and the coolant level in the radiator. **We recommend Honda Long Life Antifreeze/Coolant Type 2.**


■ Checking the Reserve Tank

1. **Make sure the engine and radiator are cool.**
2. Check the amount of coolant in the reserve tank. If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
3. Inspect the cooling system for leaks.

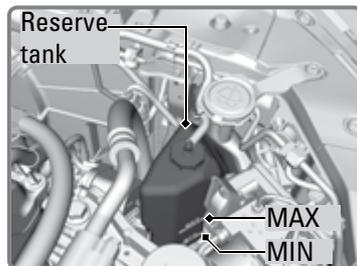

■ Checking the Radiator

1. **Make sure the engine and radiator are cool.**
2. Turn the radiator cap 1/8 turn counterclockwise to relieve any pressure in the cooling system.
3. Push down and turn the radiator cap counter-clockwise to remove it.
4. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
5. Put the radiator cap back on, and tighten it fully.

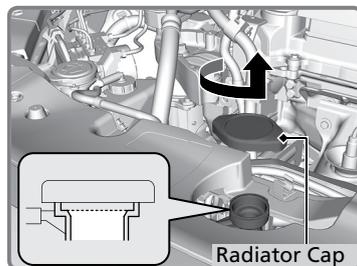

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.


NOTICE

Genuine Honda engine coolant is a 50/50 mixture of antifreeze and water that can withstand freezing at temperatures as low as about -31°F (-35°C). If your vehicle is consistently subjected to temperatures below this, the concentration of antifreeze in the coolant should be increased. Consult a dealer for details.

Inverter Coolant

The fluid level should be between the MIN and MAX marks on the side of the reservoir. **We recommend Honda Long Life Antifreeze/Coolant Type 2.**

1. Check the fluid level in the tank.
2. If the coolant level has dropped below the **MIN** level, have your vehicle serviced at a dealer.

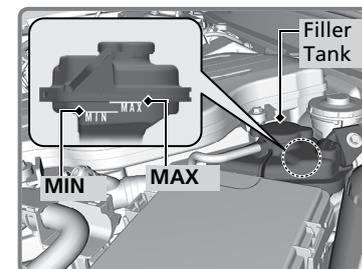


Only a properly trained technician can refill the coolant and check the system for leaks.

Brake Fluid

The fluid level should be between the MIN and MAX marks on the side of the reserve tank. **We recommend using Honda Heavy Duty Brake Fluid DOT 3.**

Pour the fluid carefully.

If the fluid level is at or below the MIN mark, have a dealer inspect for leaks or worn brake pads as soon as possible.

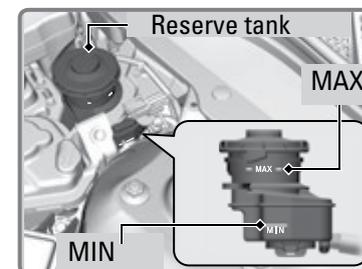


NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.


Changing Wiper Blades

If the wiper blade rubber has deteriorated, it will leave streaks and the hard surfaces of the blade may scratch the window glass.


1. Set the power mode to VEHICLE OFF.
2. While holding the wiper switch in the MIST position, set the power mode to ON, then to VEHICLE OFF. Both wiper arms are set to the maintenance position (as shown in the image).

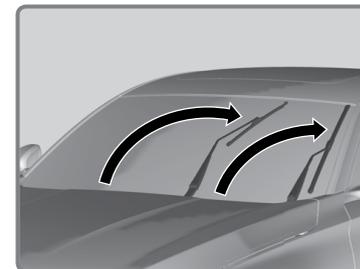


3. Lift the driver side wiper arm first, then the passenger side.

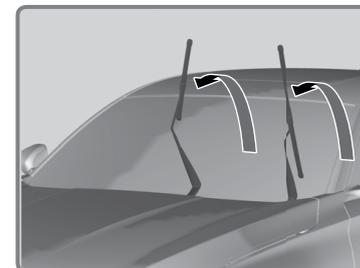

4. Press and hold the tab, then slide the holder off the wiper arm.

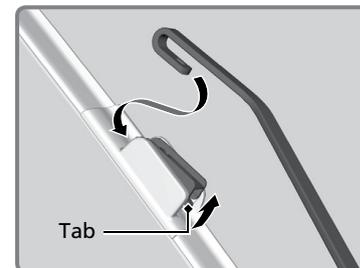


5. Pull the end of the wiper blade in the direction of the arrow in the image until it is out of the holder's end cap. Slide the wiper holder onto the wiper arm, then push down the lock tab.

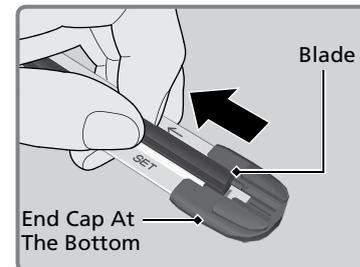

Checking the 12-volt Battery

Check the battery terminals for corrosion monthly.

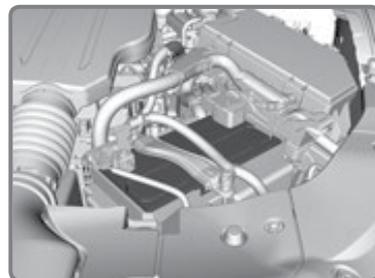

The battery condition is monitored by a sensor on the negative terminal. If there is a problem with the sensor, a message on the driver information interface appears. Have your vehicle checked by a dealer.

WARNING


The battery gives off explosive hydrogen gas during normal operation. A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

Window Washer Fluid

If the washer fluid level is low, fill the washer reservoir. Pour the washer fluid carefully. Do not overflow the reservoir.

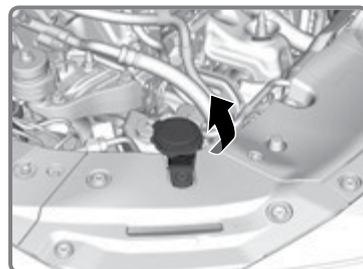



Canadian models

If the washer fluid level is low, the washer level indicator or a message appears on the driver information interface.

NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

6. Pull the wiper blade in the opposite direction to slide it out of its holder.
7. Insert the flat side of the new wiper blade onto the bottom part of the holder. Insert the blade all the way.
8. Install the end of the wiper blade into the cap.
9. Slide the holder onto the wiper arm until it locks.
10. Lower the passenger side wiper arm first, then the driver side.
11. Set the power mode to ON and hold the wiper switch in the MIST position until both wiper arms return to the standard position.

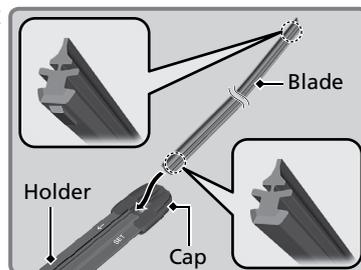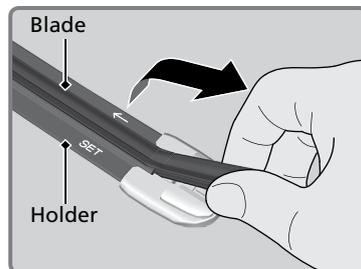

NOTICE

Avoid dropping the wiper arm onto the windshield, it may damage the wiper arm and/or the windshield.

Tire Information

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ **Inflation Guidelines**


- Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or the specifications (see page 172) for the specified pressure.
- Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.
- Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.
- Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.
- Measure the air pressure when tires are cold. This means the vehicle has been parked for at least 3 hours or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached, and then calibrate the system (see page 146). If checked when hot, tire pressure can be as much as 4–6 psi (30–40 kPa, 0.3–0.5 kgf/cm²) higher than checked when cold.
- At least once a month or before long trips, use a gauge to measure the pressure in all tires, including the spare. Even tires in good condition can lose 1–2 psi (10–20 kPa, 0.1–0.2 kgf/cm²) per month.

■ **Inspection Guidelines**

- Every time you inflate the tires, check for the following:
- Any damage to tires, including bumps, bulges, cuts, splits, or cracks in the side or tread. Remove any foreign objects and inspect for air leaks. Replace tires if you see fabric or cord.
- Uneven or excessive tread wear. Have a dealer check the wheel alignment.
- Cracks or other damage around the valve stems.

■ **Wear Indicators**

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so low that the indicator is exposed, replace the tire. **Worn out tires have poor traction on wet roads.**

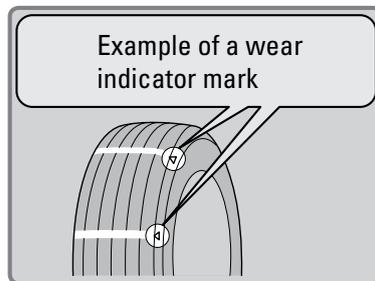

WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed. Follow all instructions in this owner's manual regarding tire inflation and maintenance.

■ **Tire and Loading Information Label**

The label attached to the driver's doorjamb provides necessary tire and loading information.

TIRE AND LOADING INFORMATION			
SEATING CAPACITY: TOTAL X FRONT X REAR X			
The combined weight of occupants and cargo should never exceed XXXXkg or XXXlbs.			
TIRE	SIZE	COLD TIRE PRESSURE	SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION
FRONT	XXXX/XXXX XXX	XXXKPA, XXPSI	
REAR	XXXX/XXXX XXX	XXXKPA, XXPSI	
SPARE	none		

■ **Tire and Wheel Replacement**

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist (VSA®) system to work incorrectly. It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

If you change or replace a wheel, make sure that the wheel's specifications match those of the original wheels.

WARNING

Installing improper tires on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed. Always use the size and type of tires recommended in the Owner's Manual.

■ **Tire Service Life**

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use). In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires, including the spare, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

■ **Winter Tires**

If driving on snowy or frozen roads, mount all season tires marked "M+S", snow tires or tire chains; reduce speed and maintain sufficient distance between vehicles when driving. For winter tires, select the size and load ranges that are the same as the original tires and mount them to all four wheels.

■ **Tire Chains**

Install tire chains on the front tires only. Because your vehicle has limited tire clearance, we strongly recommend using the following chains:

Cable-type: SCC Radial Chain SC1036

Mount chains as tightly as you can and make sure that they do not touch the brake lines or suspension.

NAVIGATION
DRIVING
HANDLING THE UNEXPECTED
MAINTENANCE
SPECIFICATIONS
CUSTOMER INFORMATION
VOICE COMMAND INDEX
INDEX

TABLE OF CONTENTS
VISUAL INDEX
SAFETY INFORMATION
INSTRUMENT PANEL
VEHICLE CONTROLS
AUDIO AND CONNECTIVITY
BLUETOOTH® HANDSFREELINK®
HONDALINK®

WARNING

Using the wrong chains or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this guide regarding the selection and use of tire chains.

NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.


Tire Labeling

The tires that came on your vehicle have a number of markings. Those you should be aware of are described below.

Here is an example of what each marking means:

P215/55R17 94V

- P:** vehicle type (passenger vehicle)
- 215:** tire width in millimeters
- 55:** aspect ratio (tire section height as a percentage of its width)
- R:** tire construction code (radial)
- 17:** rim diameter in inches
- 94:** load index (code indicating maximum load tire can carry)
- V:** speed symbol (code indicating maximum speed rating)

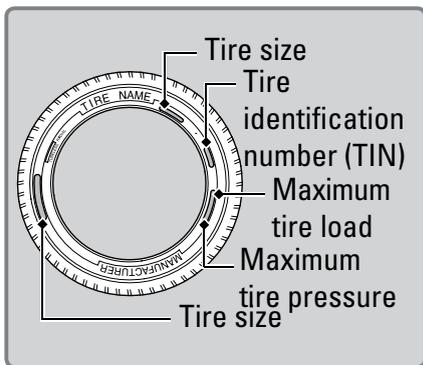

■ **Tire Identification Number (TIN)**

The tire identification number (TIN) is a group of numbers and letters that look like the example shown. TIN is located on the sidewall of the tire.

DOT B97R FW6X 2209
 DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.
 B97R: Manufacturer's identification mark
 FW6X: Tire type code
 22 09: Date of Transportation
 Year
 Week

■ **Glossary of Tire Terminology**

Cold Tire Pressure – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

Load Rating – The maximum load that a tire is rated to carry for a given inflation pressure.

Maximum Inflation Pressure – The maximum tire air pressure that the tire can hold.

Maximum Load Rating – The load rating for a tire at the maximum permissible inflation pressure for that tire.

Recommended Inflation Pressure – The cold tire inflation pressure recommended by the manufacturer.

Treadwear Indicators (TWI) – The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

DOT Tire Quality Grading

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

■ **Uniform Tire Quality Grading**

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200

Traction AA

Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

■ **Treadwear**

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use; however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

■ Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

WARNING: The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

■ Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

WARNING: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Air Conditioning

To ensure proper and safe operation, the Society of Automotive Engineers (SAE J2845) recommends that the refrigerant system only be serviced by trained and certified technicians.

Never repair or replace the air conditioning evaporator (cooling coil) with one removed from a used or salvaged vehicle.

New replacement mobile air conditioning evaporators must be certified (and labeled) as meeting SAE Standard J2842.

NOTICE

Vented refrigerant is harmful to the environment. To avoid refrigerant from venting, never replace the evaporator with one removed from a used or salvaged vehicle. Refrigerant in your vehicle's air conditioning system is flammable and can be ignited during servicing if proper procedures are not followed.

Testing of Readiness Codes

Your vehicle has readiness codes as part of the onboard self-diagnostic system. Some states use these codes for testing to verify whether your vehicle's emissions components are working properly. The codes may not be read if you go through the testing just after the battery has gone dead or been disconnected.

To check if they are set, turn the vehicle on without starting the engine. The malfunction indicator lamp will come on for several seconds. If it goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle tested before the readiness codes are set, prepare the vehicle for retesting by doing the following:

1. Fill the gas tank to approximately 3/4 full.
2. Park the vehicle and leave the engine off for 6 hours or more.
3. Make sure the ambient temperature is between 40°F and 95°F (4°C and 35°C).
4. Start the engine without touching the accelerator pedal and let it idle for 20 seconds.
5. Keep the vehicle in Park (P). Increase the engine speed to 2,000 rpm and hold it there for about 3 minutes.
6. Let the engine idle with your foot off the accelerator for 20 seconds.
7. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway with the vehicle in Drive (D). Do not use cruise control. When traffic allows, drive for 90 seconds without using the accelerator pedal (vehicle speed may vary slightly, this is okay). If you cannot do this for a continuous 90 seconds because of traffic conditions, drive for at least 30 seconds, then repeat two more times (for a total of 90 seconds).
8. Drive in city or suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
9. Park the vehicle and leave the engine off for 30 minutes.

The readiness codes are erased when the battery is disconnected and set again only after several days of driving under a variety of conditions.

If a testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test or see your dealer.

SPECIFICATIONS

Vehicle

Vehicle Specifications

Model	Honda Accord Hybrid
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle Weight Rating	U.S.: 4,519 lbs (2,050 kg) Canada: 2,050 kg
Gross Axle Weight Rating (Front)	U.S.: 2,557 lbs (1,160 kg) Canada: 1,160 kg
Gross Axle Weight Rating (Rear)	U.S.: 2,248 lbs (1,020 kg) Canada: 1,020 kg

Air Conditioning

Refrigerant Type	HFO-1234yf (R-1234yf)
Charge Quantity	13.9 – 15.7 oz (395 – 445 g)
Lubricant Type	ND-OIL 11
Quantity	7.3 – 8.2 cu-in (120 – 135 cm ³)

Light Bulbs

Light Bulbs

Headlights (Low Beam)	LED
Headlights (High Beam)	60W (HB3) ^{*1} LED ^{*2}
Fog Lights*	LED
Parking/Daytime Running Lights	LED
Front Turn Signal Lights	LED
Front Side Marker Lights	LED
Side Turn Signal Lights* (on Door Mirrors)	LED
Brake Lights	LED
Rear Side Marker/Tailights	LED
Rear Turn Signal Lights	21W (Amber)
Brake Lights (on Trunk)*	LED
Tailights (on Trunk)	LED
Back-Up Lights (on Trunk)	16W
High-Mount Brake Light	LED
Rear License Plate Light	LED
Interior Lights	
Map Lights	8W
Ceiling Light	8W
Vanity Mirror Lights	1.4W
Center Pocket Light	LED
Console Compartment Light*	LED
Door Inner Handle Lights*	LED
Door Courtesy Lights*	2CP
Trunk Light	5W

*1: Models with halogen high beam headlights

*2: Models with LED high beam headlights

Tires

Tires

	Size	225/50R17 94V
Regular	Pressure	
	psi (kPa [kgf/cm ²])	
	Front	33 (230 [2.3])
	Rear	33 (225 [2.3])
Wheel Size	Regular	17 x 7 1/2J

Engine and Fuel

Engine Specifications

Displacement	121.6 cu-in (1,993 cm ³)
Spark Plugs	NGK DILZKAR7D11S

Fuel

Fuel Type	Unleaded gasoline, Pump octane number of 87 or higher
Fuel Tank Capacity	12.81 US gal (48.5 L)

Fluids

Engine Oil

Recommended	-Genuine Honda Motor Oil 0W-20 -API Premium-grade 0W-20 detergent oil
Change	3.7 US qt (3.5 L)
Capacity	Change including filter 4.0 US qt (3.8 L)

Engine Coolant

Specified	Honda Long-Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	1.29 US gal (4.88 L) (change including the remaining 0.17 US gal (0.66 L) in the reserve tank)

Inverter Coolant

Specified	Honda Long-Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	0.219 US gal (0.83 L) (change including the remaining 0.048 US gal (0.18 L) in the filler tank)

Brake Fluid

Specified	Honda Heavy Duty Brake Fluid DOT 3
-----------	------------------------------------

Transmission Fluid

Specified	Honda ATF DW-1 (automatic transmission fluid)
Capacity	Change 2.3 US qt (2.2 L)

Washer Fluid

Tank Capacity	U.S.: 2.6 US qt (2.5 L) Canada: 4.5 L
---------------	--

*if equipped

CUSTOMER INFORMATION

Learn about information specific to you as a Honda customer and how to get help.

Frequently Asked Questions/Troubleshooting

Below are some frequently asked questions and troubleshooting items that you may have about the vehicle.

Q: *How do I set the vehicle clock?*

A: For vehicles without navigation, see p. 62. For vehicles with navigation, the time is automatically set using GPS signals.

Q: *Why doesn't the vehicle start when I press the POWER button?*

A: The brake pedal must be pressed to start the power system.

Q: *What is the AUTO setting on my headlight lever?*

A: When in the AUTO position, the vehicle's exterior lights will automatically turn on or off depending on the ambient lighting.

Q: *Why won't the driver's door unlock when I grab the door handle, even though the keyless access remote* is within range?*

A: If you pull the handle too quickly, the system may not have time to confirm the door is unlocked. Wait to hear a beep to confirm the door is unlocked. If you are wearing gloves, the system may be slow to respond.

Q: *After my battery was disconnected or went dead, the audio system is asking for a code. Where do I find this?*

A: In most cases, you do not need to enter a code. Turn on the vehicle and the audio system, and press and hold the power button until the system reactivates.

Q: *Why can't I operate Pandora* through the audio system?*

A: Audio may be streaming through *Bluetooth* Audio. Make sure Pandora mode is selected and the phone cable is properly connected to the USB adapter cable (if using). Some phones may prompt you to "Allow" a connection.

Q: *Is my phone compatible with Bluetooth features?*

A: Visit automobiles.honda.com/handsfreelink/ (U.S.) or phone (888) 528-7876 (Canada) to check phone compatibility for *Bluetooth Audio*, *Bluetooth HandsFreeLink*, and SMS text messaging.

Q: *Every time I press the Talk button, the system gives me voice prompts*. Can I turn these off?*

A: From the Home screen, select SETTINGS. Select System, then select Voice Prompt. Select Off.

*if equipped

Contact Us

Honda dealer personnel are trained professionals. They should be able to answer all your questions. If you encounter a problem that your dealership does not solve to your satisfaction, please discuss it with the dealership's service manager or general manager. If you are dissatisfied with the decision made by the dealership's management, contact Honda Automobile Customer Service.

U.S. owners

American Honda Motor Co., Inc.
Honda Automobile Customer Service
1919 Torrance Blvd.
Mail Stop 100-5E-8A
Torrance, CA 90501-2746
Tel: (800) 999-1009

In Puerto Rico and the U.S. Virgin Islands

Bella International
P.O. Box 190816
San Juan, PR 00919-0816
Tel: (787) 620-7546

Canadian owners

Honda Canada, Inc.
Customer Relations
180 Honda Blvd.
Markham, ON
L6C 0H9
Tel: (888) 946-6329
Fax: (877) 939-0909
e-mail: honda_cr@ch.honda.com

When you call or write, please give us the following information:

- Vehicle Identification Number
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

Honda Roadside Assistance

24-hour emergency road service is available to you in the United States and Canada throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply). Call (866) 864-5211 (U.S.) or (800) 465-7587 (Canada).

Warranty Coverages

Below is a brief summary of the warranties covering your new vehicle.

New Vehicle Limited Warranty: Covers your new vehicle, except for the emissions control system and accessories, against defects in materials and workmanship.

Emissions Control Systems Defects Warranty and Emissions Performance Warranty: Covers your vehicle's emissions control systems. Time, mileage, and coverage are conditional.

Seat Belt Limited Warranty: Covers seat belts that fail to function properly.

Rust Perforation Limited Warranty: Covers all exterior body panels that rust through from the inside.

Accessory Limited Warranty: Covers Honda accessories.

Replacement Parts Limited Warranty: Covers all Honda replacement parts against defects in materials and workmanship.

Replacement Battery Limited Warranty: Provides prorated coverage for a replacement battery purchased from a Honda dealer.

Replacement Muffler Lifetime Limited Warranty: Covers a replacement muffler for the duration of the ownership.

Restrictions and exclusions apply to all these warranties. See the Warranty Manual at *owners.honda.com* (U.S.) or *myhonda.ca* (Canada) for complete descriptions of each warranty, including time, mileage, and other conditional limitations.

Your vehicle's original tires are covered by their manufacturer. Tire warranty information can be found on the Warranty CD or at *owners.honda.com (U.S.)* or *myhonda.ca (Canada)*.

EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

U.S. Environmental Protection Agency
Office of Transportation and Air
Quality
Compliance Division,
Light-Duty Vehicles Group
Attn: Warranty Complaints
2000 Traverwood Drive
Ann Arbor, MI 48105
Email: complianceinfo@epa.gov

VOICE COMMAND INDEX

Available on vehicles with touchscreen. Learn about the available voice commands to help you operate the vehicle. The system recognizes only those commands shown here. Press the Talk button before you say a command.

■ Voice Portal Commands

The Voice Portal command is as follows.

- Navigation
- Phone
- USB
- AM
- FM
- Sirius XM

Also, the following command is displayed in the footer.

- Voice Help
- Cancel
- USB

■ Navigation Commands*

The Navigation command is as follows.

- Show Map
- Go Home
- Find Place
- Find Address
- Find City
- Find intersection
- Saved Places
- Recent Places
- Stop Route
- Detour

■ Phone Commands

The System accepts these commands on most screens. Not available during use of Apple CarPlay.

The Phone Command is as follows.

- Phone
- Call < Your Contact Name >
- Call < Phone Number >

■ Audio Commands*

The system accepts these commands on most screens. Audio volume levels cannot be controlled using voice commands.

The FM/AM command is as follows.

- FM
- AM
- Tune to < 87.7 - 107.9 > FM
- Tune to < 530 - 1710 > AM

The USB command is as follows.

- USB
- Play Genre < Genre name >
- Play Artist < Artist name >
- Play Album < Album name >
- Play Playlist < Playlist name >
- Play Song < Song name >
- Play Music
- List Genre < Genre name >
- List Artist < Artist name >
- List Album < Album name >
- List Playlist < Playlist name >

The Sirius XM command is as follows.

- Sirius XM
- Channel < 1 - 999 >
- Channel < Station name >

INDEX

ABS.....	29	Carbon Monoxide Gas.....	6
ACC.....	29, 31	Charging system.....	28
Adaptive Cruise Control (ACC).....	126	Child Safety.....	18
Address.....	105	Child Seat.....	21
Advanced Airbags.....	11	Adding Security with a Tether.....	24
Airbags.....	11	LATCH-Compatible Child Seat.....	21
Airbag Care.....	18	Climate Control System.....	58
Airbag System Indicators.....	14	Collision Mitigation Braking System™.....	134
Android Auto.....	78	Condition Indicators.....	30
Anti-Lock Brake System (ABS).....	118	Contact Us.....	174
Apple CarPlay.....	76	Continuously Variable Transmission (CVT).....	114, 115
Apps.....		Customer Information.....	173
Add Apps.....	72	Customized Features.....	60
Hide Apps.....	72	Dashboard and Other Controls.....	2, 3
Managing Apps.....	72	Destination.....	105
Move Apps.....	72	Door Operation.....	38
Audio Commands.....	177	Doors.....	36
Audio operation.....		DOT Tire Quality Grading.....	169
Android Auto.....	78	Driver Information Interface (DII).....	32, 33
Apple CarPlay.....	76	Driving.....	108
HondaLink.....	73	Adaptive Cruise Control (ACC).....	126
System Updates.....	80	Braking.....	118
Audio Operation.....	63	Collision Mitigation Braking System.....	134
Bluetooth® Audio.....	90, 91	Continuously Variable Transmission (CVT).....	114, 115
FM/AM Radio.....	83	Eco Assist System.....	121
iPod®.....	86, 87	ENGINE START/STOP button.....	113
Pandora®.....	92	Forward Collision Warning (FCW).....	129, 131, 134
Sound.....	69	Lane Keeping Assist System (LKAS).....	129
Touchscreen Operation.....	71	LaneWatch™.....	130
USB Flash Drive.....	88	Maximum Load Limit.....	109
Auto High-Beam System.....	31, 43	Paddle Shifters.....	116
Automatic Intermittent Wipers.....	46, 47	Parking Sensor System.....	136
Bluetooth® Audio.....	90, 91	Power Mode.....	113
Bluetooth Handsfreelink (HFL).....		Refueling.....	140
Making a Call.....	100	Road Departure Mitigation (RDM).....	131
Pairing a Phone.....	97	Shifting.....	114, 115
SMS Text Messaging.....	101	Traffic Sign Recognition System.....	133
Bluetooth® Handsfreelink® (HFL).....	93	Vehicle Stability Assist (VSA®).....	122
Call History.....	99	Wiper Blades.....	163
HFL Controls.....	93, 94	Driving Position Memory System.....	53
Pairing a Phone.....	96	Eco Assist System.....	121
Speed Dial.....	98	ECON Button.....	121, 122
Brake Assist System.....	118	ECON mode.....	31
Brake Hold.....	31	Emergency Towing.....	145
Brake system.....	28	Engine Coolant.....	160
Braking.....	118		
Brightness Control.....	42		
Call History.....	99		

Engine Oil.....	157	Maximum Load Limit.....	109
ENGINE START/STOP button.....	113	Navigation.....	103
Exterior Lights.....	42, 43	Display and Controls.....	104
Fastening a Seat Belt.....	9	Entering a Destination.....	105
Fluids.....	172	Home Address.....	105
FM/AM Radio.....	83	Map Legend.....	107
Fog lights.....	31	Place Category.....	106
Foot Brake.....	118	Recent Places.....	106
Frequently Asked Questions.....	173	Routing.....	107
Front Door Inner Handle.....	38	Saved Places.....	106
Fuel Information.....	140	Steering Wheel Controls.....	103
Fuse Locations.....	150	Street Address.....	105
Garage Opener.....	56	System Guidance Volume.....	104
Hazards.....	31	Traffic.....	107
Headlight-Wiper Integration.....	45, 47	One-Touch Turn Signal.....	48
Heated Windshield.....	55, 56	On/Off Indicators.....	31
Home Address.....	105	Opening the Hood.....	156
HomeLink® Universal Transceiver.....	56	Overheating.....	144
HondaLink.....	73	Paddle Shifters.....	116
HondaLink Assist.....	74	Pairing a Phone.....	96, 97
Honda Roadside Assistance.....	174	Pandora®.....	92
Hood.....	156	Parking Brake.....	30, 119
Immobilizer.....	30	Parking Sensor System.....	136
Instrument Panel.....	28	Passenger Airbag Off Indicator.....	15
Intermittent Wipers.....	47	Phone.....	96
iPod®.....	86, 87	Power Mode.....	113
Jump Starting.....	143	Power Window Operation.....	40
Keyless Access System.....	37	Radio.....	84
Lane Keeping Assist System (LKAS).....	129	Readiness Codes.....	171
LaneWatch™.....	130	Rear Seats.....	52
Lap/Shoulder Seat Belts.....	8	Recent Places.....	106
LATCH-Compatible Child Seat.....	21	Refueling.....	140
Light Bulbs.....	172	Remote Battery Strength.....	142
Lights.....	42	Reporting Safety Defects.....	27
LKAS.....	29, 31	Road Departure Mitigation (RDM).....	131
Lock Tab.....	38	Roadside Assistance.....	174
Low fuel.....	30	Routing.....	107
Low tire pressure.....	30	Safety Information.....	5
Maintenance.....	152	Airbags.....	11
Engine Coolant.....	160	Child Safety.....	18
Engine Oil.....	157	Reporting Safety Defects.....	27
Maintenance Minder™.....	153	Safety Label Locations.....	26
Service Codes.....	154	Safety Messages.....	6
Under the Hood.....	156	Seat Belts.....	8
Window Washer Fluid.....	162	Saved Places.....	106
Making a Call.....	98, 100	Seat belt reminder.....	30
Malfunction Indicators.....	28	Seat Belts.....	8
Managing Apps.....	72	Fastening a Seat Belt.....	9
Map Legend.....	107	Seat Belt Inspection.....	9
Master Door Lock Switch.....	38	Shoulder Anchor.....	10

Seat Heaters.....	59	Vehicle Stability Assist (VSA®).....	29, 122
Seats.....	48	Visual Index.....	1
Service Codes.....	154	Voice Command Index.....	176
Shifting.....	114, 115	Voice Portal Commands.....	176
Shift Lever Does Not Move.....	143	VSA®.....	29, 31
Shoulder Anchor.....	10	Walk Away Auto Lock.....	37
Side Airbags.....	12	Warranty Coverages.....	175
Side Curtain Airbags.....	12	Wear Indicators.....	166
Siri Eyes Free.....	102	Wi-Fi Connection.....	79
Smart Entry System.....	36	Window.....	40
SMS Text Messaging.....	101	Window Washer Fluid.....	162
Sound.....	69	Windshield, heated.....	55, 56
Specifications.....	172	Winter Tires.....	167
Speed Dial.....	98	Wiper Blades.....	163
SRS (Supplemental Restraint) Indicator.....	14	Wiper Operation.....	46
Steering Wheel.....	52		
Steering Wheel and Nearby Controls.....	1		
Steering Wheel Controls.....	103		
Street Address.....	105		
Supplemental Restraint System (SRS).....	29		
System message.....	30		
System Updates.....	80		
Text Messaging.....	101		
Tire Information.....	165		
DOT Tire Quality Grading.....	169		
Inflation Guidelines.....	165		
Tire and Loading Information Label.....	166		
Tire and Wheel Replacement.....	167		
Tire Labeling.....	168		
Tire Terminology.....	169		
Wear Indicators.....	166		
Winter Tires.....	167		
Tire Pressure Monitoring System (TPMS).....	146		
Touchscreen Operation.....	71		
Touchscreen Sensitivity.....	105		
Towing.....	145		
TPMS.....	29, 146, 148		
Traffic.....	107		
Traffic Sign Recognition System.....	133		
Troubleshooting.....	173		
Trunk.....	36		
Trunk Opener.....	39, 40		
Turn signals.....	31, 48		
Under the Hood.....	156		
USB Flash Drive.....	88		
Vehicle.....	172		
Vehicle Controls.....	35		

DISCLOSURES

■ California Proposition 65 Warning

⚠️ WARNING: Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

■ California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR-type batteries in this vehicle may contain perchlorate materials—special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate/ for more information.

■ End User License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in the Owner’s Manual, and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A, 1919 Torrance Blvd. Torrance, CA 90501-2746.



31TWAG00
OG-08655
00X31-TWA-G001

owners.honda.com (U.S.)
myhonda.ca (Canada)

2018 Honda Accord Hybrid Owner's Guide
©2018 Honda Motor Co., Ltd. — All Rights Reserved

Printed in U.S.A.