Owner's Manual

2020 CLARITY

Fuel Cell



AWARNING

California Proposition 65 Warning

Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

Event Data Recorders

This vehicle is equipped with an event data recorder (EDR).

The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;

- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

The data belongs to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner

Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential. Some diagnostic and maintenance information is uploaded to Honda upon vehicle start up.

California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR type batteries in this vehicle may contain perchlorate materials - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate/

As you read this manual, you will find information that is preceded by a NOTICE symbol. This information is intended to help you avoid damage to your vehicle, other property, or the environment.

Software End User License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in Owner's Manual, and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A, 1919 Torrance Blvd. Torrance, CA 90501-2746.

Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit www.hondalink.com/vehicle-data-choices.

Fuel Cell Monitoring System

This vehicle is equipped with a monitoring system that compiles data about your vehicle and driving conditions and transmits that data to Honda at regular intervals as determined at the discretion of Honda. This data includes information on but not limited to the following:

- Vehicle location, distance driven, warning indicators and messages, and vehicle speed
- Fuel cell system control and power generation

The system does not record audio or images.

Data collected is used for the sole purposes of technical diagnoses, preventive maintenance, research and vehicle development. Neither Honda nor any third party receiving data will use the data for any other purpose without first obtaining customer authorization.

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this vehicle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. You must use your own good judgment.

You will find this important safety information in a variety of forms, including:

- Safety Labels on the vehicle.
- Safety Messages preceded by a safety alert symbol and one of three signal words: DANGER, WARNING, or CAUTION.
 These signal words mean:

ADANGER

You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.

AWARNING

You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.

ACAUTION

You CAN be HURT if you don't follow instructions.

- Safety Headings such as Important Safety Precautions.
- Safety Section such as Safe Driving.
- **Instructions** how to use this vehicle correctly and safely.

This entire book is filled with important safety information - please read it carefully.

This owner's manual should be considered a permanent part of the vehicle and should remain with the vehicle when it is sold

This owner's manual covers all models of your vehicle. You may find descriptions of equipment and features that are not on your particular model.

Images throughout this owner's manual (including the front cover) represent features and equipment that are available on some, but not all, models. Your particular model may not have some of these features

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd. reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

Safe Driving P. 43

For Safe Driving P. 44 Seat Belts P. 48 Airbags P. 55

▶ Instrument Panel P. 85

Indicators P. 86 Gauges and Driver Information Interface P. 116

Controls P. 131

Clock P. 132 Locking and Unlocking the Doors P. 133

Operating the Switches Around the Steering Wheel P. 154 Interior Lights/Interior Convenience Items P. 178

Features P. 197

Audio System P. 198

Audio System Basic Operation P. 204

Customized Features P. 300

HomeLink® Universal Transceiver P. 326

Driving P. 363

Before Driving P. 364 Towing a Trailer P. 369 Multi-View Rear Camera P. 443 Refueling P. 445

Maintenance P. 449

Before Performing Maintenance P. 450 Maintenance Minder™ P. 453

Checking and Maintaining Wiper Blades P. 465

Climate Control System Maintenance P. 480 Cleaning P. 481

Handling the Unexpected P. 489

If a Tire Goes Flat P. 490 Handling of the Jack P. 502

If Hydrogen Gas is Leaking P. 511 Indicator, Coming On/Blinking P. 513

When You Cannot Unlock the Hydrogen Fuel Lid P. 527


▶ Information P. 529


Specifications P. 530 Identification Numbers P. 532 Warranty Coverages P. 535 Authorized Manuals P. 537

			\mathbb{P}'	Quick Reference Guide	P. 6	5
Child Safety P. 70	Safety Labels P. 83					
			W All	Safe Driving)	12
			(hr)	ĵ		+7
			u Jili			
Opening and Closing the Trunk P. 146	Security System P. 149	Opening and Closing the Windows P. 152	W. Alb.	Instrument Panel	P. 8	35
Adjusting the Mirrors P. 170 Climate Control System P. 188	Adjusting the Seats P. 172		- July 1			
Clinidic Control System 1. 100			. "	Controls	P. 1	131
Audio Error Messages P. 277	General Information on the Audio System	D 201				
Bluetooth® HandsFreeLink® P. 329	General information on the Addio system	r. 201		Features	o ,	197
			III.	. 64.63	•	197
When Driving P. 370	Braking P. 425	Parking Your Vehicle P. 441				
Fuel Economy P. 448			THE STATE OF	Driving	P. 3	363
			Illin.			
Maintenance Under the Hood P. 457	Replacing Light Bulbs P. 463			Maintenance	٥. ۷	149
Checking and Maintaining Tires P. 468 Accessories and Modifications P. 487	12-Volt Battery P. 477	Remote Transmitter Care P. 479				
Accessories and Modifications P. 487			.autill	Handling the Unexpected		189
				Harlaming the offexpected	٠. ۷	+69
Power System Won't Start P. 503 Fuses P. 518	Jump Starting P. 506 Emergency Towing P. 526	Overheating P. 509				
When You Cannot Open the Trunk P. 528	3 , 3			Information	P. [529
			ا ''الله			
Devices that Emit Radio Waves P. 533	Reporting Safety Defects P. 534		''را	Index) <u>[</u>	540
Customer Service Information P. 538						


Contents


Visual Index

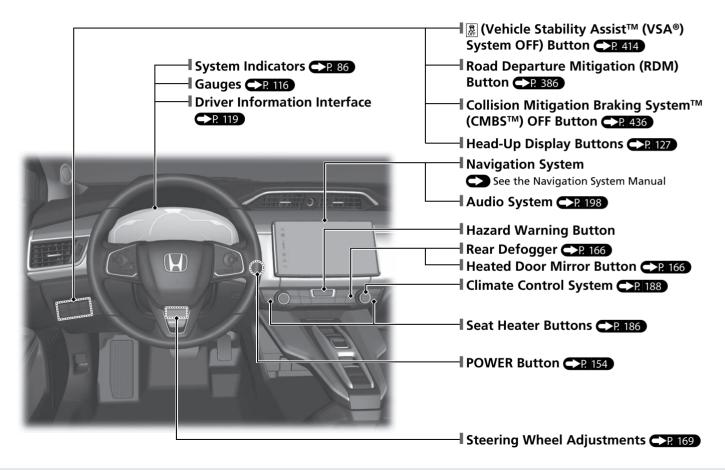

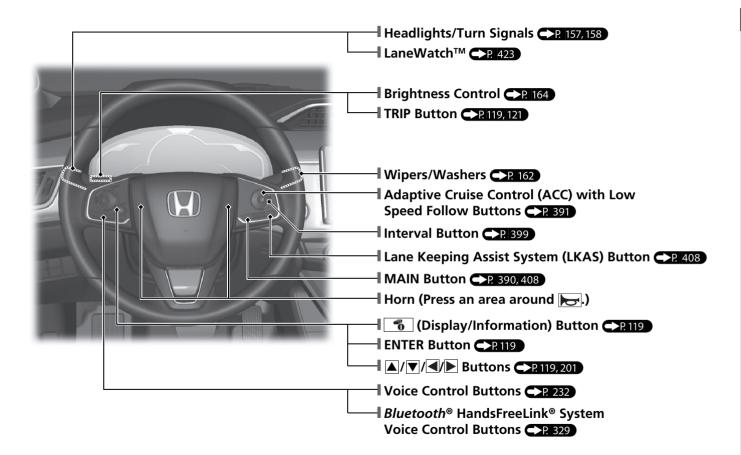


Visual Index

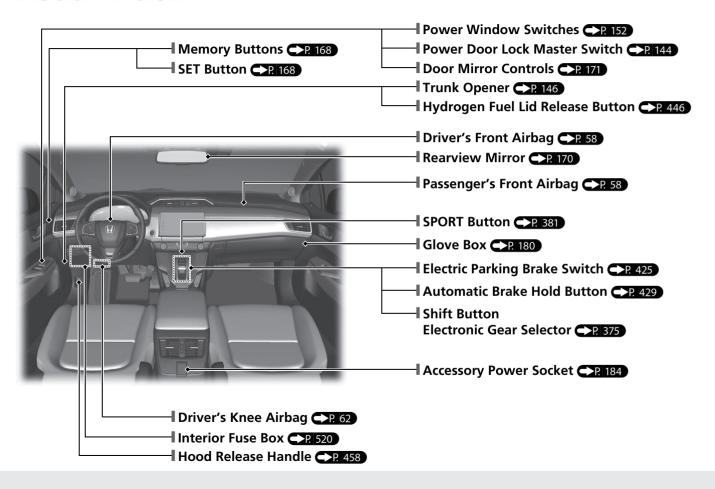

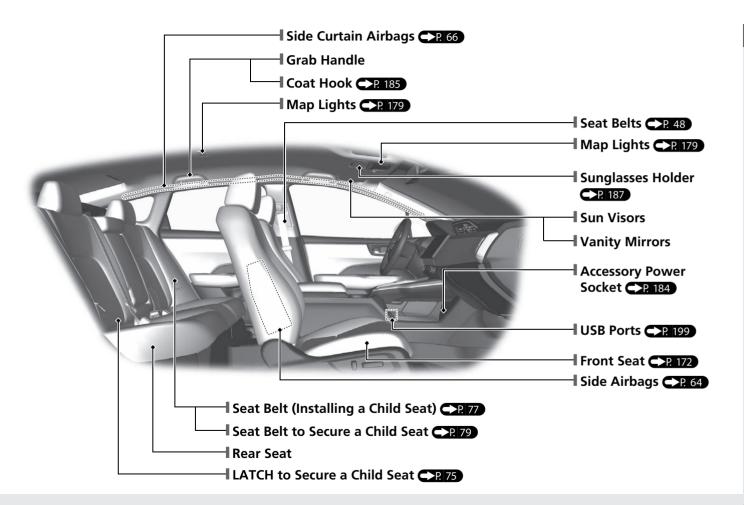

Visual Index

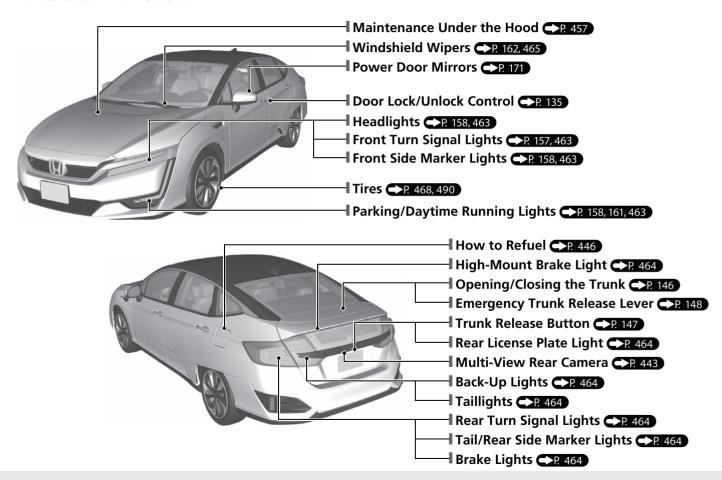

Characteristics of Fuel Cell Vehicles

A fuel cell vehicle (FCV) converts hydrogen gas into electricity which is used to power an electric motor. The FC (fuel cell) system comprises of hydrogen tanks and an FC stack, as well as other components, and requires a constant supply of hydrogen fuel, and proper cooling and ventilation to generate electricity.

The FC stack is the main power unit which comprises of a series of fuel cells joined together or "stacked" on one another. Within each fuel cell, hydrogen reacts with oxygen to create an electric current which is used to not only power the motor but also charge a High Voltage battery. This High Voltage battery provides supplementary power to assist the FC power system when the vehicle is subjected to heavy acceleration.

Unlike vehicles that use internal combustion engines, FC vehicles emit no harmful emissions such as CO₂ and NO_x, and are thus considered environmentally responsible. The only substance discharged from the tailpipe is water, in the form of both liquid and vapor.

FC Stack

Fuel cell power output may decline faster than usual under the following circumstances:

- The vehicle is frequently used in sub-zero temperatures over extended periods of time.
- The vehicle is repeatedly left in standby state for extended periods of time.
- The FC system is subjected to frequent starting and stopping.
- Salt water has permeated the air cleaner element.
 - ▶ Replace the air cleaner element and clean the surrounding area.
- The vehicle is driven extensively in areas whose air contains high levels of:

Dust

Sulfur (common to hot spring and volcanoes)

Organic solvents, e.g., paints and thinners

Amine-related substances, e.g., ammonia

Chlorinated substances, e.g., salt and snow-melting agents

▶ Once the vehicle is driven in a normal environment again, fuel cell power output will return over time.

In the following circumstances, power output may be temporarily limited:

- You are repeatedly accelerating and decelerating aggressively.
- You are ascending a slope or driving at high altitudes above 6,562 feet (2,000 meters).
 - Driver Information Interface Warning and Information Messages P. 104

Fuel Cell Power System

The fuel cell power system regulates the fuel cells to maintain efficient power generation in various driving conditions. The power system is unique to fuel cell vehicles and differs to that of conventional internal combustion vehicles or electric vehicles in the following ways:

- Depending on circumstances, the system may need to adjust the condition of the fuel cells before shutting down; therefore, the power system may continue to operate even after the power mode is set to OFF.
- In cold temperatures, the power system may take more time to start or stop than usual as the fuel cells need to be conditioned before they can generate power.

Hydrogen Tanks

Outline

The hydrogen tanks are the storage containers that house the compressed hydrogen gas.

Inspection

Owners of fuel cell vehicles are required by law to have these tanks inspected periodically. Filling a hydrogen tank with compressed hydrogen gas is prohibited by law if the tank has not passed inspection or if the tank has expired.

The hydrogen tanks are affixed with an expiration date. This date is also affixed to the underside of the hood and the hydrogen fuel lid. If a tank has expired, replace it immediately.

Disposal

Disposal of hydrogen tanks or hydrogen tank valves must be done in accordance with the pertinent rules and regulations of the state or region within which the tanks or valves are to be disposed of. For details, consult an authorized Honda Clarity Fuel Cell dealer.

Theft

If your fuel cell vehicle is stolen, be sure to inform the police that the vehicle is equipped with tanks filled with compressed hydrogen gas.

Refueling

Fuel cell vehicles need hydrogen to run. Refuel with compressed hydrogen gas at an authorized hydrogen filling station.

Refer to the Navigation System Manual

Sounds Unique to the Fuel Cell Vehicle

When you first start driving this vehicle, you likely will hear some unfamiliar sounds, particularly when you first turn on the power system, while driving, and just after parking. Some of these sounds are unique to this vehicle's powertrain, fuel, and climate control systems; others are similar to sounds generated by conventional automobiles that typically are masked by louder noises absent from a vehicle of this design. These sounds are not a cause for concern, and you will soon recognize them as normal and thus be able to detect any new or unusual noise should one develop.

Certain sounds associated with your vehicle may be caused by:


- Pressurized intake air being released through the rear of the vehicle.
 - ▶ This can happen if the accelerator is released suddenly when the vehicle is under a heavy load, such as when climbing a hill.
- The power system warming up.
 - ▶ This sound is particularly loud when temperatures are extremely low (below –4°F [–20°C]).
- Hydrogen gas flowing through the fuel line during refueling.

Fuel Cell Vehicle Precautions

Hydrogen-related Components

Fuel cell vehicles have hydrogen-related components such as hydrogen tanks, an FC stack, and hydrogen pipelines.

Labels with handling warnings are attached to these components.

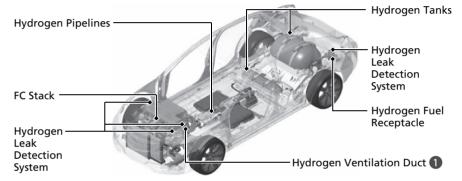

Hydrogen-retaining components

- Hydrogen tanks
- Hydrogen pipelines
- FC stack

Hydrogen Leak Detection System locations

- In the motor compartment
- Above the hydrogen fuel receptacle

Components with a warning label

- Hydrogen tanks
- Compressed hydrogen pipeline
- Hydrogen fill pipeline
- FC stack
- Hydrogen ventilation duct

Label

Hydrogen Ventilation Duct

▲ WARNING

Damaged or modified ventilation duct could leak flammable/explosive hydrogen gas and may no longer detect leaks.

If leaked hydrogen gas ignites, you could be seriously injured or killed.

Do not modify take apart, but weight on.

or place objects on ventilation duct.

ventilation

WARNING

Never leave the fuel cell vehicle in standby state in an enclosed area that has limited ventilation as there is a risk of oxygen deprivation.

Fuel cells consume oxygen when generating electricity. If the vehicle is left in standby state in an enclosed area, the air may become deprived of oxygen, resulting in asphyxiation of any person(s) in the area. Make sure the area is well ventilated before turning the power system on. If the vehicle is in a garage, keep the door open.

WARNING


Do not attempt to modify, install, or disassemble the hydrogen-related components.


The hydrogen-related components are filled with hydrogen gas. Removing or disassembling these components may cause a hydrogen gas leak which can lead to a fire or explosion.

If you notice anything unusual about your vehicle, consult an authorized Honda Clarity Fuel Cell dealer.

High Voltage Components, High Voltage Cables and High Temperature Components

Fuel cell vehicles have high voltage components (about 500 V maximum) such as the FC stack, FCVCU, High Voltage battery, power control unit, high voltage cables (identified by their orange covers), electric motor, and high temperature parts such as the radiator. Labels with handling warnings are attached to these components.

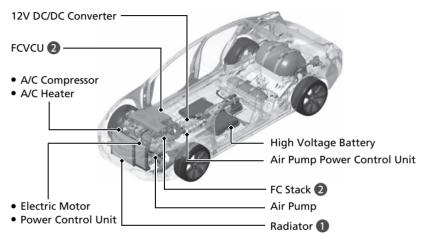

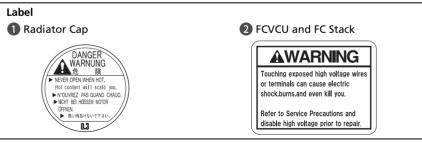

WARNING

This vehicle has high voltage circuits and parts. Failure to observe the following precautions can result in burns or electric shock.

- Do not remove, disassemble, or replace the high voltage parts, cables (orange) or their connectors.
- Never touch the High Voltage battery service plugs.

In an emergency or during maintenance or repair, the service plugs are removed to cut off the electric flow from the battery. These plugs are in contact with the battery and can cause severe electric shock if not handled properly.

Only a qualified technician should handle any electrical equipment. For inspection and repair, consult an authorized Honda Clarity Fuel Cell dealer.

High Voltage Battery

Because electricity generated by the fuel cells and through regenerative braking recharges the High Voltage battery, the battery does not need to be recharged from an outside source; however, the High Voltage battery gradually discharges when the vehicle is not in use. If allowed to discharge too much, the battery may become damaged.

If your vehicle is parked for an extended period of time, during storage for example, periodically recharge the battery to maintain sufficient charge levels. At least once every three months, turn on the power system, and keep it on for more than 30 minutes to allow the battery to recharge.

Excessive heat can also damage the battery. On hot, sunny days, try to avoid parking your vehicle under direct sunlight. If the High Voltage battery becomes fully discharged or damaged and you are unable to start the FC system as a result, consult an authorized Honda Clarity Fuel Cell dealer.

Temperature

When storing the vehicle, make sure not to expose it to extremely low temperatures: It may take a longer time to start in very cold conditions or may not start at all until temperatures rise. If the temperature of the fuel cell or the High Voltage battery drops below –4°F (–20°C), the fuel cells will not operate and, as a result, the vehicle will not start.

Hydrogen Leak Detection System

When the power mode is turned to ON, the hydrogen leak detection system is activated. If a hydrogen gas leak is detected by the hydrogen detector, the hydrogen leak indicator will come on.

Hydrogen Supply/High Voltage Shut-off System

If the FC system is on and the vehicle is involved in a crash, depending on the severity of the impact, the shut-off system will cut off the supply of hydrogen and electricity. In this case. it is not possible to restart the vehicle.

To restart the FC system, consult an authorized Honda Clarity Fuel Cell dealer.

A WARNING

Do not block the hydrogen ventilation ducts.

The hydrogen tanks, FC stack, and hydrogen supply components have ventilation ducts to allow any leaked hydrogen to escape into the atmosphere. If the opening of a duct is blocked with snow, leaves, etc., and a hydrogen leak occurs, the leaked gas can make its way into the motor room, where it can ignite, resulting in a fire or explosion.

Make sure the ducts are free of any obstructions before activating the power system.

Do not remove or disassemble a hydrogen duct: Doing so can lead to a fire or explosion if a hydrogen gas leak occurs.



Ventilation Duct (Above the both front tires)

Ventilation Duct (Inside the fuel lid)

Hydrogen Gas Leak

If a hydrogen gas leak is suspected, follow the recommended actions listed in the instructions of this owner's manual.

▶ If Hydrogen Gas is Leaking **▶**.511

WARNING

Since hydrogen gas is highly flammable, a hydrogen gas leak is extremely dangerous as the leaked gas, which is dispersed into the atmosphere, can ignite, resulting in a fire in which you or someone else can be serious injured or killed. Keep flammable materials and liquids away from the vehicle at all times, especially if a hydrogen gas leak is detected.

In the case of a hydrogen gas leak, a buzzer will sound and the hydrogen gas leak indicator will come on. If you are driving the vehicle, stop in a safe, well-ventilated place. Then turn the power mode to OFF and contact an authorized Honda Clarity Fuel Cell dealer at once. You should also display signs warning of the danger and be aware of and keep away anything that could ignite the gas.

The system is designed so that in the event that the vehicle catches fire, the gas inside the tanks will be released through the tank valves, thereby ensuring that pressure (due to heat from the fire) within the tanks does not build up.


This gas is released toward the rear of the vehicle in a downward direction. Do not attempt to extinguish the fire from behind the vehicle as the exiting gas may ignite into a flame.

Fuel Cell Insulating Fluid

Fuel cell insulating fluid (FC insulating fluid) uses a specifically designed fluid with high electrical insulation properties in order to safely cool the fuel cell.

Never add water, other commercial coolants, or genuine Honda inverter coolant to the cooling system. Doing so will cause damage to the fuel cell.

Consult an authorized Honda Clarity Fuel Cell dealer to replenish or change the fuel cell insulating fluid.

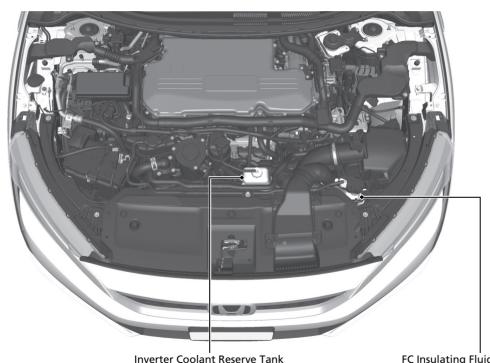

FC Insulating Fluid Reserve Tank

Ion Exchanger

An ion exchanger is installed in the fluid lines for the fuel cell in order to maintain the insulation properties of the fuel cell insulating fluid (FC insulating fluid).

If the message **Service Due Soon A** appears on the driver information interface, ion exchange filter replacement is necessary. Be sure to consult an authorized Honda Clarity Fuel Cell dealer.

→ Indicators → P. 89

Exhaust Pipe

Water is expelled from the tail pipe while the vehicle is running or while the High Voltage battery is being charged. This also happens after the vehicle has been running or when you shut down the FC system by setting the power mode to OFF. If you stand to the left rear of the vehicle, you may be sprayed by this waste water.

Never drink water expelled from the pipe. Though this water is harmless, it is not suitable for drinking.


While the vehicle is parked during cold temperatures, the FC system may automatically turn on and discharge water from the exhaust pipe. If this water is discharged as a vapor, it may appear as a white mist. This, however, is not indicative of a problem.

Do not obstruct or block the exhaust pipe as the FC system may stop working.

Maintenance, Repair, and Disposal

Always consult an authorized Honda Clarity Fuel Cell dealer regarding maintenance, repair, and disposal.

Fuel cells and High Voltage batteries that have been removed from disposed vehicles are collected through authorized Honda Clarity Fuel Cell dealers. Do not dispose of those batteries yourself.



WARNING

Do not directly touch any water emissions from the exhaust pipe.

Water created during FC power generation is discharged from the exhaust pipe in the form of either liquid (water) or gas (steam). Directly touching this water may cause burns.

In Case of a Crash

- If a vehicle fire occurs, leaked hydrogen gas may ignite. Stay far away from the vehicle and call the local fire department.
 - To extinguish a vehicle fire, use a large amount of water, dry chemical fire extinguisher (Class A, B, or C), or carbon dioxide fire extinguisher. With an inadequate amount of water, a fire cannot be put out completely. Never attempt to extinguish a vehicle fire with a small amount of water.
- If your vehicle needs to be towed, make sure it is done with all the wheels lifted using the flat bed equipment. If the front wheels are touching the ground, the rotating tires will force the electric motor to spin, which in turn, may damage the power system, transmission, etc.

WARNING

If the body of the vehicle is seriously damaged or deformed in a crash, hydrogen gas may leak out from the vehicle. Keep flammable sources, such as a lit cigarette or warning flares, away from the vehicle.

If Hydrogen Gas is Leaking
 → P. 511

Also, high voltage parts and/or the cables (orange) connecting them may be exposed as a result of a crash. Stay clear of these parts as you may be electrocuted.

If the vehicle catches fire, leaked hydrogen gas may ignite. Stay far away from the vehicle and report to the fire department that a vehicle containing hydrogen tanks is on fire.

The system is designed so that in the event that the vehicle catches fire, the gas inside the tanks will be released through the tank valves, thereby ensuring that pressure within the tanks does not build up. This gas is released toward the rear of the vehicle in a downward direction. Do not attempt to extinguish the fire from behind the vehicle as the exiting gas may ignite into a flame.

WARNING

If a High Voltage battery fluid leaks, be careful not to touch the fluid. It can harm your eyes and skin. If it comes in contact with your eyes and skin; flush the affected area with clean water immediately for a few minutes, and seek immediate medical attention.

Do not use a warning flare near a fuel cell vehicle. If hydrogen gas is leaking, it may ignite the gas, and result in a vehicle fire.

Regenerative Energy and Regenerative Braking

When decelerating or while driving downhill, the electric motor acts as a generator that recover a portion of the electrical energy that was used to accelerate the vehicle.

In the following situations, the vehicle generates electricity while decelerating.

- The accelerator pedal is released with the gear position in D.
- The brake pedal is depressed with the gear position in D.
 - ▶ When the High Voltage battery is fully charged or its temperature is too cold/hot, or another factor or factors are effecting the condition of the battery, the regenerative braking system may not be activated.

Eco Assist® System

Eco Drive Display

• Keep the vehicle icon near the center of the circle.







Ambient Meter

With SPORT mode off, the color of the ambient meter changes to green to indicate that the vehicle is being driven in a fuel efficient manner.


Safe Driving CR43

Airbags (TP.55)

 Your vehicle is fitted with airbags to help protect you and your passengers during a moderate-to-severe collision.

Child Safety (>P. 70)

- All children 12 and younger should be seated in the rear seat.
- Smaller children should be properly restrained in a forward-facing child seat.
- Infants must be properly restrained in a rear-facing child seat.

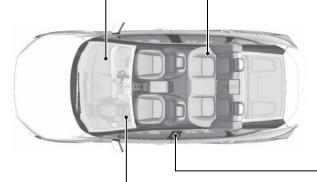

Seat Belts C28.48

- Fasten your seat belt and sit upright well back in the seat.
- Check that your passengers are wearing their seat belts correctly.

Before Driving Checklist >P. 47

 Before driving, check that the front seats, head restraints, steering wheel, and mirrors have been properly adjusted.



Fasten your lap belt as low as possible.

Instrument Panel (2889)

Gauges (Driver Information Interface (Driver Information Interface (Driver Indicators (Dr

System Indicators

SPORT SPORT Mode Indicator

READY READY Indicator



VSA® OFF Indicator

Low Tire Pressure/ TPMS Indicator

System Message Indicator

12-Volt Battery
Charging System
Indicator

BRAKE HOLD System Indicator

HOLD Automatic Brake Hold Indicator


Road Departure Mitigation (RDM) Indicator

Collision Mitigation

Brake System™
(CMBS™) Indicator



Immobilizer System Indicator/ Security System Alarm Indicator

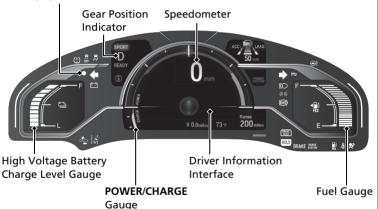

Lights Indicators

=0 0= Lights On Indicator

High Beam Indicator

System Indicators

Electric Power
Steering (EPS)
System Indicator

ACC Adaptive Cruise Control (ACC) with Low Speed Follow Indicator

LAS Lane Keeping Assist System (LKAS) Indicator

Turn Signal and Hazard Warning Indicators

Supplemental Restraint System Indicator

Anti-lock Brake
System (ABS)
Indicator

Parking Brake and Brake System Indicator (Red)

BRAKE SYSTEM Parking Brake and Brake System Indicator (Amber)

Seat Belt Reminder Indicator

POWER SYSTEM Indicator

Low Fuel Indicator

H2 Hydrogen Leak Indicator



Controls CARRED

Clock R 132

The navigation system receives signals from GPS satellites, updating the clock automatically.

You can also adjust the time manually.



- Select the HOME (Home) icon, then select Settings.
- 2 Select Clock, then Clock Adjustment.
- 3 Touch the respective ▼/▲ icon to adjust the hours or minutes up or down.
- 4 Select OK.

POWER Button >P. 154

Press the button to change the vehicle's power mode.



Turn Signals Turn Signals

Turn Signal Control Lever



Lights R 158


Light Control Switches



Wipers and Washers

◯ P. 162

Wiper/Washer Control Lever

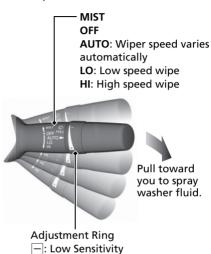

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windshield
- Driving through a car wash

+: High Sensitivity

No rain present

Steering Wheel P. 169

 To adjust, push the adjustment lever down, adjust to the desired position, then lock the lever back in place.



Unlocking the Front Doors from the Inside


○P. 143

• Pull either front door inner handle to unlock and open it in one motion.



 Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

Trunk P. 146

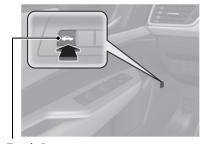

Trunk Opener


- To unlock and open the trunk:
- Press the trunk opener on the driver's door.
- Press the trunk release button on the smart entry remote.
- Press the trunk release button on the trunk lid.

Power Door Mirrors

◯ P. 171

- With the power mode in ON, move the selector switch to L or R.
- Push the appropriate edge of the adjustment switch to adjust the mirror.

Selector Switch

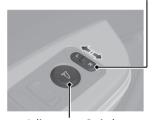


Adjustment Switch

Power Windows R 152

- With the power mode in ON, open and close the power windows.
- If the power window lock button is in the off position, each passenger's window can be opened and closed with its own switch.
- If the power window lock button is in the on position (indicator on), each passenger's window switch is disabled.

Indicator Power Window Lock Button




Window Switch

Climate Control System >P. 188

- Press the AUTO button to activate the climate control system.
- Press the SON/OFF button to turn the system on or off.
- Press the button to defrost the windshield.

The climate control system is voice operable. P. 232




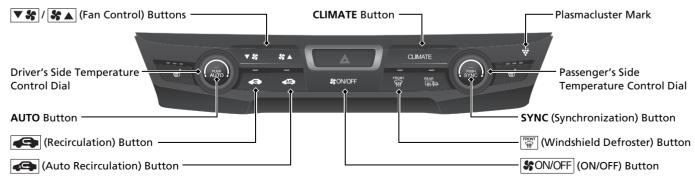

Features CRIPA

Audio Remote Controls

→P. 201

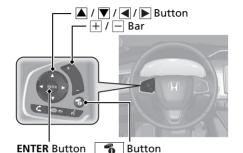

● + / - Bar Press to adjust the volume up/down.

CarPlay/Android Auto

▲ / ▼ Button
 Press ▲ or ▼ to cycle through the audio mode as follows:
 FM→AM→SiriusXM®→USB→iPod®→Bluetooth® Audio→Pandora®→Apple

• ENTER Button

- When listening to the radio and SiriusXM®
- Press ENTER to switch the display to a preset list you stored in the preset buttons.
- Press ▲ or ▼ to select a preset, then press ENTER.
- When listening to a USB flash drive
- 1 Press ENTER to display the folder list.
- Press ▲ or ▼ to select a folder.
- Press ENTER to display a list of tracks in that folder.
- Press ▲ or ▼ to select a track, then press ENTER.

- When listening to an iPod®
- Press ENTER to display the iPod® music list.
- Press ▲ or ▼ to select a category.
- Press ENTER to display a list of items in the category.
 - Press ▲ or ▼ to select an item, then press ENTER.
 - ➤ Press **ENTER** and press ▲ or ▼ repeatedly until a desired item you want to listen is displayed.
- When listening to Pandora®
- 1 Press ENTER to display the station list.
- Press ▲ or ▼ to select an item, then press ENTER.
- When listening to *Bluetooth*® Audio
- 1 Press ENTER to display the track list.
- Press ▲ or ▼ to select a track, then press ENTER.

● **|** / **|** Button

Radio: Press to change the preset station.
Press and hold to select the next or
previous strong station.

USB device:

Press to skip to the beginning of the next song or return to the beginning of the current song. Press and hold to change a folder.




Press to change contents.

Driver Information
Interface P. 119

Audio System >P. 198

For navigation system operation See the Navigation System Manual



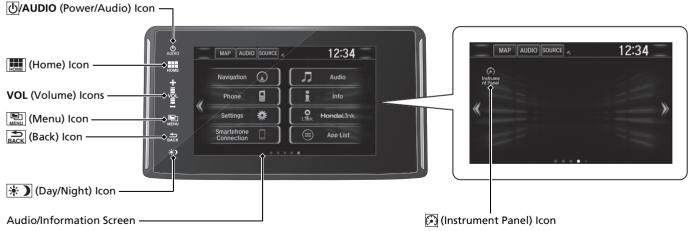

Driving

Gear Position Indicator

Electronic Gear Selector (37. 375)

• Select P and depress the brake pedal when turning on the power.





Park

Press the P button.
Used when parking or before turning the power on or off.

Transmission is locked.

Reverse

Press back the R button.

Used when reversing.

Neutral

Press the N button.

Transmission is not locked.

) Drive

Press the D button.
Used for normal driving.

VSA[®] On and Off → P. 414

- The Vehicle Stability Assist™ (VSA®) system helps stabilize the vehicle during cornering and helps maintain traction while accelerating on loose or slippery road surfaces.
- VSA® comes on automatically every time you turn on the power system.
- To partially disable or fully restore VSA® function, press and hold the button until you hear a beep.

CMBS™ On and Off

→P. 436

- When a possible collision is likely unavoidable, the CMBS™ can help you to reduce the vehicle speed and the severity of the collision.
- To turn the CMBS[™] on or off, press and hold the button until you hear a beep.

Tire Pressure Monitoring System (TPMS) ←P. 416

- Detects a change in tire conditions and overall dimensions due to decrease in tire pressures.
- The TPMS is turned on automatically every time you turn on the power system.
- A calibration procedure must be performed when certain conditions arise.

Refueling >P. 445

Fuel requirement: Compressed hydrogen gas
Hydrogen supply pressure: 70 MPa (10,153 psig) (at 59°F [15°C])
Hydrogen filling amount*1: Approximately 11 lbs (5 kg) (at 70 MPa)
Hydrogen tanks capacity: 37.3 US gal (141.3 L) (at 70 MPa [10,153 psig])

*1: A measured value when refueled at a hydrogen station with 70 MPa (10,153 psig) of supply pressure compliant with the SAE (J2601) fueling protocol.


Hydrogen Filling Station: To completely fill the hydrogen tank, you need to use a hydrogen filling station that has an H70 dispenser, which is capable of supplying pressures of up to 10,153 psig (70 MPa).

Refueling the vehicle is only possible if the pressure inside the hydrogen tank of the vehicle does not exceed the supply pressure of the filling station.

If you use an H35 dispenser, you will be able to fill only half of the tank.

- Set the power mode to OFF.
- Press the hydrogen fuel lid release button on the driver's door to open the fuel lid.
 - Remove the dust cap inside the hydrogen fuel lid.
- 4 Start refueling.




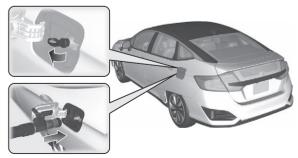

Honda Sensing®

Honda Sensing® is a driver support system which employs the use of two distinctly different kinds of sensors, a radar sensor located behind the emblem and a front sensor camera mounted to the interior side of the windshield, behind the rearview mirror.

The camera is located behind the rearriew mirror.

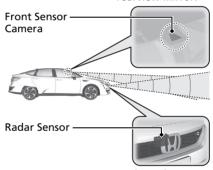

The radar sensor is behind the emblem.

Adaptive Cruise Control (ACC) with Low Speed Follow (\$\infty\$1389)

Helps maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

Road Departure Mitigation (RDM) System

→P. 385

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane.

Collision Mitigation Braking System™ (CMBS™) ► 2.433

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours. The CMBS™ is designed to alert you when a potential collision is determined, as well as to reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

Maintenance CRIEGO

Under the Hood ←>P. 457


- Check inverter coolant and windshield washer fluid. Add when necessary.
- Check brake fluid.
- Check the 12-volt battery condition monthly.
- Pull the hood release handle under the corner of the dashboard.



Locate the hood latch lever, push it to the side, and then raise the hood. Once you have raised the hood slightly, you can release the lever.



When finished, close the hood and make sure it is firmly locked in place.

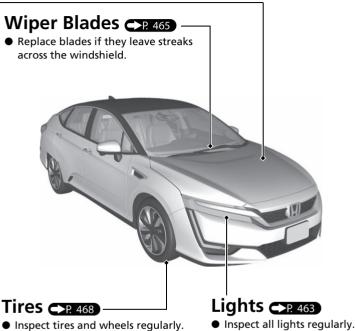

- Check tire pressures regularly.
- Install snow tires for winter driving.

Handling the Unexpected CRIASS

Flat Tire R 490

• Park in a safe location and repair the flat tire using the temporary tire repair kit.



Power System Won't Start

○P. 503

• If the 12-volt battery is dead, jump start using a booster battery.



Overheating >P. 509

 Park in a safe location. If you do not see steam under the hood, open the hood, and let the power system cool down.



Indicators Come On

○P. 513


 Identify the indicator and consult the owner's manual.



Blown Fuse

→P. 518

 Check for a blown fuse if an electrical device does not operate.

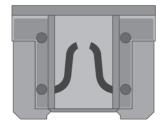


Emergency Towing

→P. 526

 Call a professional towing service if you need to tow your vehicle.




What to Do If

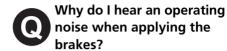



This can occur when the ABS activates and does not indicate a problem. Apply firm, steady pressure on the brake pedal. Never pump the brake pedal.

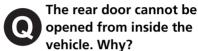



Check if the childproof lock is in the lock position. If so, open the rear door with the outside door handle.


To cancel this function, slide the lever up to the unlock position.



Why do the doors lock after I unlocked the doors?




If you do not open the doors within 30 seconds, the doors are relocked automatically for security.

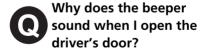



The beeper sounds when:


- The power mode is in ACCESSORY.
- The exterior lights are left on.

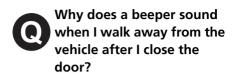




The beeper sounds if you move outside the walk away auto lock operating range before the door completely closes.

D Locking the doors and trunk (Walk away auto lock®) **□ P.136**

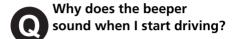




The beeper sounds when the driver and/or front passenger are not wearing their seat belts.

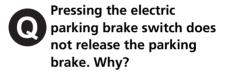



Press the electric parking brake switch with the brake pedal depressed.

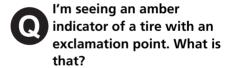




The Tire Pressure Monitoring System (TPMS) needs attention. If you recently inflated or changed a tire, you have to recalibrate the system.


► TPMS Calibration ← P. 416



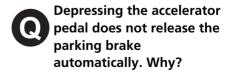




- Fasten the driver's seat belt.
- Check if the transmission is in P or N. If so, select any other position.

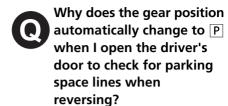



- Fasten the driver's seat belt.
- Close the driver's door and manually change the gear position.
 - ► When opening the driver's door ► P. 378

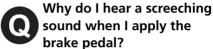



The brake pads may need to be replaced. Have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer.

Safe Driving

You can find many safety recommendations throughout this chapter, and throughout this manual.

For Safe Driving 44 Important Safety Precautions 44 Your Vehicle's Safety Features 46 Safety Checklist 47 Seat Belts 48 Fastening a Seat Belts 51 Seat Belt Inspection 54 Airbags 55 Types of Airbags 58 Front Airbags (SRS) 58

Driver's Knee Airbag	62
Side Airbags	64
Side Curtain Airbags	66
Airbag System Indicators	67
Airbag Care	69
Child Safety	
Protecting Child Passengers	70
Safety of Infants and Small Children	72
Safety of Larger Children	81
Safety Labels	
Label Locations	83

For Safe Driving

The following pages explain your vehicle's safety features and how to use them properly. The safety precautions below are ones that we consider to be among the most important.

Important Safety Precautions

■ Always wear your seat belt

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts, and wear them properly.

■ Restrain all children

Children ages 12 and under should ride properly restrained in a back seat, not the front seat. Infants and small children should be restrained in a child seat. Larger children should use a booster seat and a lap/shoulder seat belt until they can use the belt properly without a booster seat.

■ Be aware of airbag hazards

While airbags can save lives, they can cause serious or fatal injuries to occupants who sit too close to them, or are not properly restrained. Infants, young children, and short adults are at the greatest risk. Be sure to follow all instructions and warnings in this manual.

■ Don't drink and drive

Alcohol and driving don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and drive, and don't let your friends drink and drive, either.

Some states and territories prohibit the use of cell phones other than hands-free devices by the driver while driving.

■ Pay appropriate attention to the task of driving safely

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly, and only you can decide when it is safe to divert some attention away from driving.

■ Control your speed

Excessive speed is a major factor in crash injuries and deaths. Generally, the higher the speed, the greater the risk, but serious injuries can also occur at lower speeds. Never drive faster than is safe for current conditions, regardless of the maximum speed posted.


■ Keep your vehicle in safe condition

Having a tire blowout or a mechanical failure can be extremely hazardous. To reduce the possibility of such problems, check your tire pressures and condition frequently, and perform all regularly scheduled maintenance.

■ Do not leave children unattended in the vehicle

Children, pets and people needing assistance left unattended in the vehicle may be injured if they activate one or more of the vehicle controls. They may also cause the vehicle to move, resulting in a crash in which they and/or another person(s) can be injured or killed. Also, depending on the ambient temperature, the temperature of the interior may reach extreme levels, which can result in harm or death. Even if the climate control system is on, never leave them in the vehicle unattended as the climate control system can shut off at any time.

Your Vehicle's Safety Features

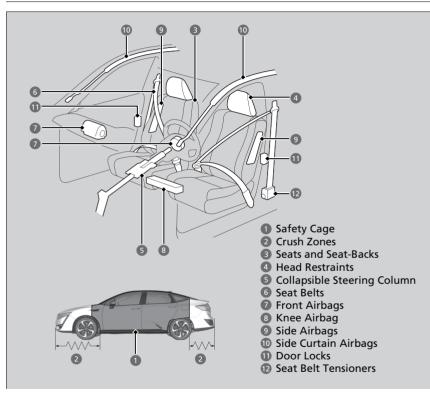

The following checklist will help you take an active role in protecting yourself and your passengers.

∑Your Vehicle's Safety Features

Your vehicle is equipped with many features that work together to help protect you and your passengers during a crash.

Some features do not require any action on your part. These include a strong steel framework that forms a safety cage around the passenger compartment, front and rear crush zones, a collapsible steering column, and tensioners that tighten the front seat belts in a sufficient crash.

However, you and your passengers cannot take full advantage of these features unless you remain seated in the correct position and always wear your seat belts. In fact, some safety features can contribute to injuries if they are not used properly.

Safety Checklist

For the safety of you and your passengers, make a habit of checking these items each time before you drive.

After everyone has entered the vehicle, be sure all doors are closed and locked.
 Locking the doors helps prevent an occupant from being ejected and an outsider from unexpectedly opening a door.

Locking/Unlocking the Doors from the Inside P. 142

• Adjust your seat to a position suitable for driving. Be sure the front seats are adjusted as far to the rear as possible while allowing the driver to control the vehicle. Sitting too close to a front airbag can result in serious or fatal injury in a crash.

Adjusting the Seats P. 172

• Adjust head restraints to the proper position. Head restraints are most effective when the center of the head restraint aligns with the center of your head. Taller persons should adjust their head restraint to the highest position.

Adjusting the Front Head Restraints Positions P. 174

• Always wear your seat belt, and make sure you wear it properly. Confirm that any passengers are properly belted as well.

Fastening a Seat Belt P. 51

 Protect children by using seat belts or child seats according to a child's age, height and weight.

Child Safety P. 70

Safety Checklist

If the door and/or trunk open message appears on the driver information interface, a door and/or the trunk is not completely closed. Close all doors and the trunk tightly until the message disappears.

Driver Information Interface Warning and Information Messages P. 109



About Your Seat Belts

Seat belts are the single most effective safety device because they keep you connected to the vehicle so that you can take advantage of many built-in safety features. They also help keep you from being thrown against the inside of the vehicle, against any passengers, or out of the vehicle. When worn properly, seat belts also keep your body properly positioned in a crash so that you can take full advantage of the additional protection provided by the airbags.

In addition, seat belts help protect you in almost every type of crash, including:

- frontal impacts
- side impacts
- rear impacts
- rollovers

■ Lap/shoulder seat belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving the retractor lets you move freely while keeping some tension on the belt. During a collision or sudden stop the retractor locks to restrain your body.

The front passenger's and rear seat belts also have a lockable retractor for use with child seats.

Installing a Child Seat with a Lap/Shoulder Seat Belt P. 77

■ About Your Seat Belts

AWARNING

Not wearing a seat belt properly increases the chance of serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

Seat belts cannot completely protect you in every crash. But in most cases, seat belts can reduce your risk of serious injury.

Most states and territories require you to wear seat belts.

If you extend the seat belt too quickly, it will lock in place. If this happens, slightly retract the seat belt, then extend it slowly.

■ Proper use of seat belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.

■ About Your Seat Belts

If a rear seat passenger moves around and extends the seat belt, the lockable retractor may activate. If this happens, release the retractor by unfastening the seat belt and allow the belt to retract completely. Then refasten the belt.

Continued 49

■ Seat Belt Reminder




The seat belt system includes an indicator on the instrument panel to remind the driver or a front passenger or both to fasten their seat belts.

If you set the power mode to ON and a seat belt is not fastened, a beeper will sound and the indicator will blink. After a few seconds, the beeper will stop and the indicator will come on and remain illuminated until the seat belt is fastened.

The beeper will periodically sound and the indicator will blink while the vehicle is moving until the seat belt is fastened

Automatic Seat Belt Tensioners

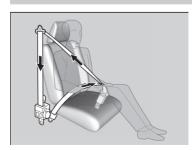

The front seats are equipped with automatic seat belt tensioners to enhance safety.

The tensioners automatically tighten the front seat belts during a moderate-to-severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags or the driver's knee airbag.

Seat Belt Reminder

The indicator will also come on if a front passenger does not fasten their seat belt within six seconds after the power mode is set to ON.

When no one is sitting in the front passenger's seat, the indicator will not come on and the beeper will not sound.

The indicator also may not come on and the beeper may not sound when the occupant is not heavy enough to trigger the weight sensor. Such occupants (e.g., infants and smaller children) should be moved to the rear seat as a deploying front airbag likely will injure or kill them.

Protecting Child Passengers P. 70

The seat belt tensioners can only operate once. If a tensioner is activated, the SRS indicator will come on. Have an authorized Honda Clarity Fuel Cell dealer replace the tensioner and thoroughly inspect the seat belt system as it may not offer protection in a subsequent crash.

During a moderate-to-severe side impact, the tensioner on that side of the vehicle also activates.


Fastening a Seat Belt

After adjusting a front seat to the proper position, and while sitting upright and well back in the seat:

Adjusting the Seats P. 172



1. Pull the seat belt out slowly.

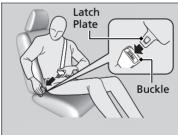

- 2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure.
 - ► Make sure that the belt is not twisted or caught on anything.

>> Fastening a Seat Belt

No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have an authorized Honda Clarity Fuel Cell dealer check the belt as soon as possible.

If the seat belt appears to be locked in a fully retracted position, firmly pull out on the shoulder belt once, then push it back in.

Then smoothly pull it out of the retractor and fasten. If you are unable to release the seat belt from a fully retracted position, do not allow anyone to sit in the seat, and take your vehicle to a dealer for repair.

About Your Seat Belts P. 48

Seat Belt Inspection P. 54

Continued 51



- **3.** Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.
- **4.** If necessary, pull up on the belt again to remove any slack, then check that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.



- **1.** Move the anchor up and down while holding the release button.
- **2.** Position the anchor so that the belt rests across the center of your chest and over your shoulder.

■ Fastening a Seat Belt

AWARNING

Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

To release the belt, push the red **PRESS** button and then guide the belt by hand until it has retracted completely.

When exiting the vehicle, be sure the belt is properly stowed so that it will not get caught in the closing door.

Never insert any foreign objects into the buckle or retractor mechanism.


■ Adjusting the Shoulder Anchor

The shoulder anchor height can be adjusted to four levels. If the belt contacts your neck, lower the height one level at a time.

After an adjustment, make sure that the shoulder anchor position is secure.

Advice for Pregnant Women

If you are pregnant, the best way to protect yourself and your unborn child when driving or riding in a vehicle is to always wear a seat belt and keep the lap part of the belt as low as possible across the hips.

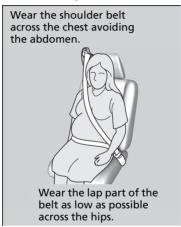

Each time you have a checkup, ask your doctor if it is okay for you to drive.

To reduce the risk of injuries to both you and your unborn child that can be caused by an inflating front airbag:

- When driving, sit upright and adjust the seat as far back as possible while allowing full control of the vehicle.
- When sitting in the front passenger's seat, adjust the seat as far back as possible.

Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully, and look for frays, cuts, burns, and wear.
- Check that the latch plates and buckles work smoothly and the belts retract easily.
 - ▶ If a belt does not retract easily, cleaning the belt may correct the problem. Only use a mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by an authorized Honda Clarity Fuel Cell dealer after any collision.


Seat Belt Inspection

AWARNING

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.

Airbag System Components

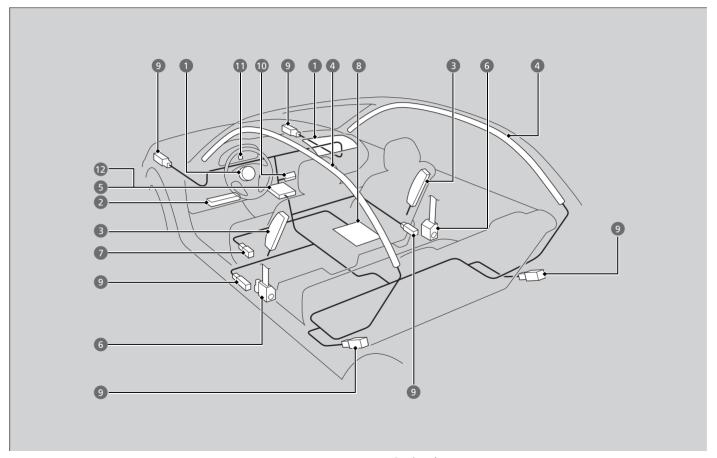

Continued 55

The front, driver's knee, front side, and side curtain airbags are deployed according to the direction and severity of impact. Both side curtain airbags are deployed in a rollover. The airbag system includes:

- Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked SRS AIRBAG.
- 2 Driver's knee airbag. The knee airbag is stored under the steering column. It is marked SRS AIRBAG.
- Two side airbags, one for the driver and one for a front passenger. The airbags are stored in the outer edges of the seatbacks. Both are marked SIDE AIRBAG.
- Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked SIDE CURTAIN AIRBAG.

- **3** An electronic control unit that, when the vehicle is on, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners and other vehicle information. During a crash event the unit can record such information.
- Automatic front seat belt tensioners. In addition, the driver's and front passenger's seat belt buckles incorporate sensors that detect whether or not the belts are fastened.
- A driver's seat position sensor. This sensor determines the optimal force at which the airbag will deploy in a crash.
- Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is approximately 65 lbs (29 kg) or less (the weight of an infant or small child).

- Impact sensors that can detect a moderate-to-severe front or side impact.
- An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
- An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.
- A rollover sensor that can detect if your vehicle is about to roll over and signal the control unit to deploy both side curtain airbags.

Important Facts About Your Airbags

Airbags can pose serious hazards. To do their job, airbags must inflate with tremendous force. So, while airbags help save lives, they can cause burns, bruises, and other minor injuries, sometimes even fatal ones if occupants are not wearing their seat belts properly and sitting correctly.

What you should do: Always wear your seat belt properly, and sit upright and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

Remember, however, that no safety system can prevent all injuries or deaths that can occur in a severe crash, even when seat belts are properly worn and the airbags deploy.

Do not place hard or sharp objects between yourself and a front airbag. Carrying hard or sharp objects on your lap, or driving with a pipe or other sharp object in your mouth, can result in injuries if your front airbag inflates.

Do not attach or place objects on the front and driver's knee airbag covers. Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

Do not attempt to deactivate your airbags. Together, airbags and seat belts provide the best protection.

When driving, keep hands and arms out of the deployment path of the front airbag by holding each side of the steering wheel. Do not cross an arm over the airbag cover.

Types of Airbags

Your vehicle is equipped with four types of airbags:

- Front airbags: Airbags in front of the driver's and front passenger's seats.
- **Driver's knee airbag:** Airbag under the steering column.
- **Side airbags:** Airbags in the driver's and front passenger's seat-backs.
- **Side curtain airbags:** Airbags above the side windows.

Each is discussed in the following pages.

Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger.

SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

Housing Locations

The front airbags are housed in the center of the steering wheel for the driver, and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.

∑Types of Airbags

The airbags can inflate whenever the power mode is in ON.

After an airbag inflates in a crash, you may see a small amount of smoke. This is from the combustion process of the inflator material and is not harmful. People with respiratory problems may experience some temporary discomfort. If this occurs, get out of the vehicle as soon as it is safe to do so.

During a frontal crash severe enough to cause one or both front airbags to deploy, the airbags can inflate at different rates, depending on the severity of the crash, whether or not the seat belts are latched, and/ or other factors. Frontal airbags are designed to supplement the seat belts to help reduce the likelihood of head and chest injuries in frontal crashes.

Operation

Front airbags are designed to inflate during moderate-to-severe frontal collisions. When the vehicle decelerates suddenly, the sensors send information to the control unit which signals one or both front airbags to inflate.

A frontal collision can be either head-on or angled between two vehicles, or when a vehicle crashes into a stationary object, such as a concrete wall.

■ How the Front Airbags Work



While your seat belt restrains your torso, the front airbag provides supplemental protection for your head and chest.

The front airbags deflate immediately so that they won't interfere with the driver's visibility or the ability to steer or operate other controls.

The total time for inflation and deflation is so fast that most occupants are not aware that the airbags deployed until they see them lying in front of them.

Although the driver's and front passenger's airbags normally inflate within a split second of each other, it is possible for only one airbag to deploy. This can happen if the severity of a collision is at the margin, or threshold that determines whether or not the airbags will deploy. In such cases, the seat belt will provide sufficient protection, and the supplemental protection offered by the airbag would be minimal.

Continued 59

■ When front airbags should not deploy

Minor frontal crashes: Front airbags were designed to supplement seat belts and help save lives, not to prevent minor scrapes, or even broken bones that might occur during a less than moderate-to-severe frontal crash.

Side impacts: Front airbags can provide protection when a sudden deceleration causes a driver or front passenger to move toward the front of the vehicle. Side airbags and side curtain airbags have been specifically designed to help reduce the severity of injuries that can occur during a moderate-to-severe side impact which can cause the driver or passenger to move toward the side of the vehicle.

Rear impacts: Head restraints and seat belts are your best protection during a rear impact. Front airbags cannot provide any significant protection and are not designed to deploy in such collisions.

Rollovers: In a rollover, your best form of protection is a seat belt or, if your vehicle is equipped with a rollover sensor, both a seat belt and a side curtain airbag. Front airbags, however, are not designed to deploy in a rollover as they would provide little if any protection.

■ When front airbags deploy with little or no visible damage


Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

■ When front airbags may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.


Advanced Airbags

Your front airbags have advanced features to help reduce the likelihood of airbag related injuries to smaller occupants.

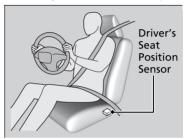

The driver's advanced airbag system includes a seat position sensor.

Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag.

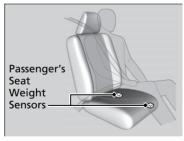

The front passenger's advanced airbag system has weight sensors.

We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, if you do allow a child age 12 or under to ride in the front passenger's seat, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

■ Advanced Airbags

If there is a problem with the driver's seat position sensor, the SRS indicator will come on, and in the event of a crash, the airbag will deploy (regardless of the driver's seating position) with a force corresponding to the severity of the impact.

For the advanced airbags to work properly:

- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.
 - **▶ Passenger Front Airbag Off Indicator** P. 68

Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors

Floor Mats P. 482

Driver's Knee Airbag

The driver's knee SRS airbag inflates in a moderate-to-severe frontal collision to help keep the driver in the proper position and to help maximize the benefit provided by the vehicle's other safety features.

SRS (Supplemental Restraint System) indicates that the airbag is designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.


Housing Locations



The driver's knee airbag is housed under the steering column.

The airbag is marked **SRS AIRBAG**.

Operation

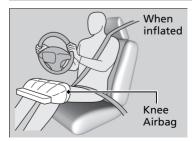

When the driver's front airbag inflates, the driver's knee airbag also inflates.

Driver's Knee Airbag

Do not attach accessories on or near a knee airbag as they can interfere with the proper operation of the airbag, or even hurt someone if the airbag inflates.

The driver should not store any items under the seat or behind their feet. The items can interfere with proper airbag deployment in the event of a moderate to sever frontal collision and may result in inadequate protection.

■ When driver's knee airbag deploys with little or no visible damage

Because the airbag system senses sudden deceleration, a strong impact to the vehicle framework or suspension might cause one or more of the airbags to deploy. Examples include running into a curb, the edge of a hole, or other low fixed object that causes a sudden deceleration in the vehicle chassis. Since the impact is underneath the vehicle, damage may not be readily apparent.

■ When driver's knee airbag may not deploy, even though exterior damage appears severe

Since crushable body parts absorb crash energy during an impact, the amount of visible damage does not always indicate proper airbag operation. In fact, some collisions can result in severe damage but no airbag deployment because the airbags would not have been needed or would not have provided protection even if they had deployed.

Side Airbags

The side airbags help protect the torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact.


Housing Locations



The side airbags are housed in the outside edge of the driver's and passenger's seatbacks.

Both are marked **SIDE AIRBAG**.

Operation

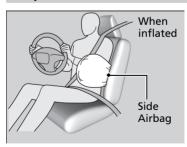

When the sensors detect a moderate-tosevere side impact, the control unit signals the side airbag on the impact side to immediately inflate

Side Airbags

Make sure you and your front seat passenger always sit upright. Leaning into the path of a side airbag can prevent the airbag from deploying properly and increases your risk of serious injury.

Do not attach accessories on or near the side airbags. They can interfere with the proper operation of the airbags, or hurt someone if an airbag inflates.

Do not cover or replace the front seat-back covers without consulting an authorized Honda Clarity Fuel Cell dealer

Improperly replacing or covering front seat-back covers can prevent your side airbags from properly deploying during a side impact.

■ When a side airbag deploys with little or no visible damage

Because the airbag system senses sudden acceleration, a strong impact to the side of the vehicle's framework can cause a side airbag to deploy. In such cases, there may be little or no damage, but the side impact sensors detected a severe enough impact to deploy the airbag.


■ When a side airbag may not deploy, even though visible damage appears severe

It is possible for a side airbag not to deploy during an impact that results in apparently severe damage. This can occur when the point of impact was toward the far front or rear of the vehicle, or when the vehicle's crushable body parts absorbed most of the crash energy. In either case, the side airbag would not have been needed nor provided protection even if it had deployed.

Side Curtain Airbags

The side curtain airbags help protect the heads of the driver and passengers in the outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

Housing Locations

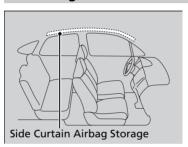

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

Operation



The side curtain airbag is designed to deploy in a rollover or a moderate-to-severe side impact.

Side Curtain Airbags

If the SRS control unit senses that your vehicle is about to rollover, it immediately deploys both side curtain airbags and activates both front seat belt tensioners.

If the impact is on the passenger's side, the passenger's side curtain airbag deploys even if there are no occupants on that side of the vehicle.

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars as they can interfere with the proper operation of the side curtain airbags.

■ When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may also inflate in a moderate-to-severe angled frontal collision.

Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator will come on and a message appears on the driver information interface.

Supplemental Restraint System (SRS) Indicator



■ When the power mode is set to ON The indicator comes on for a few seconds, then goes off. This tells you the system is working properly.

If the indicator comes on at any other time, or does not come on at all, have the system checked by an authorized Honda Clarity Fuel Cell dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed

Supplemental Restraint System (SRS) Indicator

AWARNING

Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer as soon as possible if the SRS indicator alerts you to a possible problem.

Continued 67

Passenger Front Airbag Off Indicator



■ When the passenger front airbag off indicator comes on

The indicator comes on to alert you that the passenger's front airbag has been turned off.

This occurs when the weight sensors detect about 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

Children age 12 or under should always ride properly restrained in a back seat.

Child Safety P. 70

If the front passenger's seat is empty, the passenger's front airbag will not deploy and the indicator will come on

▶ Passenger Front Airbag Off Indicator

To ensure the passenger is detected properly, confirm that:

- There is no child seat or other object pressing against the rear of the seat-back.
- There is no rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is not forced back against an object on the seat or floor behind it.
- There is no object placed under or beside the front passenger's seat.
- The occupant is sitting in an upright position and the seat back is not excessively reclined.
- The occupant is not leaning against the door or center console
- The occupant's feet are placed on the floor in front of them
- There are no objects hanging from the front passenger's seat.
- Only small, lightweight objects are in the seat-back pocket.

The passenger front airbag off indicator may come on and go off periodically if the total weight on the seat is near the airbag cutoff threshold.

Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer as soon as possible if:

- All of the above conditions are met, and the indicator comes on with an adult seated in the front passenger seat.
- The seat is empty and the indicator is off.

Do not allow an adult passenger to ride in the front seat when the indicator is on.

Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer in the following situations:

■ When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

■ When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your authorized Honda Clarity Fuel Cell dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash

■ Do not remove or modify a front seat without consulting an authorized Honda Clarity Fuel Cell dealer

This would likely disable or affect the proper operation of the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact an authorized Honda Clarity Fuel Cell dealer, or for U.S. vehicles, American Honda Automobile Customer Service at 1-800-999-1009.

■ Airbag Care

We recommend against the use of salvaged airbag system components, including the airbag, tensioners, sensors, and control unit.

Child Safety

Protecting Child Passengers

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle crashes are the number one cause of death of children ages 12 and under.

To reduce the number of child deaths and injuries, every state and territory requires that infants and children be properly restrained when they ride in a vehicle.

Children should sit properly restrained in a rear seat. This is because:



- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.

▶ Protecting Child Passengers

AWARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

The National Highway Traffic Safety Administration recommend that all children ages 12 and under be properly restrained in a rear seat. Some states or territories have laws restricting where children may ride.

- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the seat belt or the lower anchors of the LATCH system.
- Never hold a child on your lap because it is impossible to protect them in the event of a collision.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows or seat adjustments.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls causing it to move unexpectedly.

▶ Protecting Child Passengers

AWARNING

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.

To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

To remind you of the passenger's front airbag hazards and child safety, your vehicle has warning labels on the dashboard and on the front visors. Please read and follow the instructions on these labels.

Safety Labels P. 83

Safety of Infants and Small Children

Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the seat manufacturer's weight or height limit for the seat, and the infant is at least one year old.



■ Positioning a rear-facing child seat Child seats must be placed and secured in a rear seating position.

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back, or from locking their seat-back in the desired position. Make sure that there is no contact between the child seat and the seat in front of it.

It can also interfere with proper operation of the passenger's advanced front airbag system.

Airbags P. 55

If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed, and leave it unoccupied. Or, you may wish to get a smaller rear-facing child seat.

▶ Protecting Infants

AWARNING

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.

Always place a rear-facing child seat in the rear seat, not the front.

Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Rear-facing child seats should never be installed in a forward-facing position.


Always refer to the child seat manufacturer's instructions before installation.

Do not allow a front seat to rest against a child seat installed in a rear seating position:

The weight sensor in the front seat may not correctly detect the actual weight of the occupant.

■ Protecting Smaller Children

If a child is at least one year old and has exceeded the weight and height limitations of a rear-facing child seat, the child should be properly restrained in a firmly secured forward-facing child seat until they exceed the weight and height limitations for the forward-facing child seat.

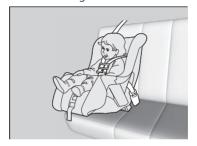

■ Forward-facing child seat placement We strongly recommend placing a forwardfacing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.

AWARNING

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible, and properly restrain the child.

Educate yourself about the laws and regulations regarding child seat use where you are driving, and follow the child seat manufacturer's instructions.

Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for CHildren). Some have a rigid-type connector while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions including recommended expiration dates as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH-compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

■ Important consideration when selecting a child seat

Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213.

Selecting a Child Seat

Installation of a LATCH-compatible child seat is simple.


LATCH-compatible child seats have been developed to simplify the installation process and reduce the likelihood of injuries caused by incorrect installation.

■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.



1. Locate the lower anchors under the marks

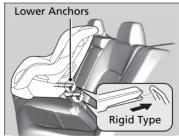


- **2.** Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat.
 - ➤ When installing the child seat, make sure that the lower anchors are not obstructed by the seat belt or any other object.


AWARNING

Never attach two child seats to the same anchor. In a collision, one anchor may not be strong enough to hold two child seat attachments and may break, causing serious injury or death.

For your child's safety, when using a child seat installed using the LATCH system, make sure that the child seat is properly secured to the vehicle. A child seat that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.

Continued 75

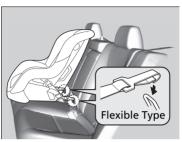

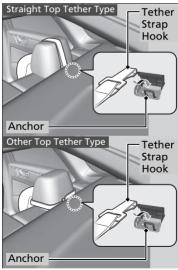

3. Open the tether anchor cover behind the head restraint

4. Straight Top Tether Type

Route the tether strap over the top of the head restraint and secure the tether strap hook to the anchor.

Other Top Tether Type

Route the tether strap around the head restraint and secure the tether strap hook to the anchor.

- **5.** Tighten the tether strap as instructed by the child seat manufacturer.
- **6.** Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
- Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

AWARNING

Do not use the lower inner anchors of the outer rear seats to secure a LATCH-compatible child seat to the rear center seat, unless the manufacturer's instructions for that system permit the use of inner anchors with the stated spacing.

Installing a LATCH-compatible child seat in the rear center seat

Each outer rear seat is equipped with a pair of lower anchors which are used to secure a LATCH-compatible child seat. The rear center seat, however, is not equipped with anchors of any kind. The inner and outer anchors are spaced apart at a standard distance of 11 inches (280 mm). The distance between the two inner anchors is 15.7 inches (400 mm).

LATCH-compatible restraint systems that are fitted with rigid-type attachments cannot be installed in the rear center seat. However, a system fitted with flexible-type attachments can be installed in the center seat, provided that the manufacturer's instructions for that system permit the use of the inner anchors with the stated spacing. Before seating a child, make sure that the system is properly attached to both the lower anchors and tether anchors.

Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed with a lap/shoulder belt in any rear seat or, if absolutely necessary, the front passenger seat.




- 1. Place the child seat on the vehicle seat
- **2.** Route the seat belt through the child seat according to the seat manufacturer's instructions, and insert the latch plate into the buckle.
 - Insert the latch plate fully until it clicks.



- **3.** Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
- 4. Let the seat belt retract a few inches and check that the retractor has switched modes by pulling on the webbing. It should not pull out again until it is reset by removing the latch plate from the buckle.
 - ▶ If you are able to pull the shoulder belt out, the lockable retractor is not activated. Slowly pull the seat belt all the way out, and repeat steps 3 - 4.

A child seat that is not properly secured will not adequately protect a child in a crash and may cause injury to the child or other vehicle occupants.



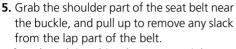

➤ When doing this, place your weight on the child seat and push it into the vehicle seat.



- **6.** Make sure the child seat is firmly secured by rocking it forward and back and side to side; less than one inch of movement should occur near the seat belt.
- **7.** Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked


≥ Installing a Child Seat with a Lap/Shoulder Seat Belt

To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.

Adding Security with a Tether

Tether

Strap Hook

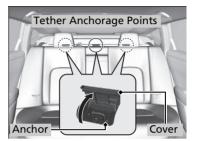

Straight Top Tether Type

A tether anchorage point is provided behind each rear seating position.

If you have a child seat that comes with a tether but can be installed with a seat belt, the tether may be used for additional security.

■ Using an outer anchor

- **1.** Locate the appropriate tether anchorage point and lift the cover.
- 2. Straight Top Tether Type

Route the tether strap over the head restraint. Make sure the strap is not twisted.


Other Top Tether Type

Route the tether strap around the head restraint. Make sure the strap is not twisted.


- **3.** Secure the tether strap hook to the anchor.
- **4.** Tighten the tether strap as instructed by the child seat manufacturer.

■ Adding Security with a Tether

Always use a tether for forward-facing child seats when using the seat belt or lower anchors.

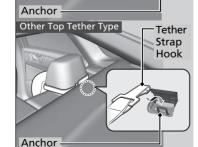

Continued 79

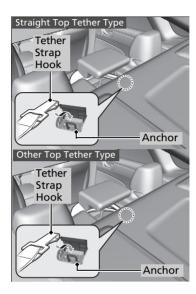

■ Using the center anchor

- **1.** Locate the appropriate tether anchorage point and lift the cover.
- **2.** Raise the head restraint to its highest position, then route the tether strap through the head restraint legs. Make sure the strap is not twisted.
- **3.** Secure the tether strap hook to the anchor.
- **4.** Tighten the tether strap as instructed by the child seat manufacturer.

Safety of Larger Children

■ Protecting Larger Children

The following pages give instructions on how to check proper seat belt fit, what kind of booster seat to use if one is needed, and important precautions for a child who must sit in front

Checking Seat Belt Fit

When a child is too big for a child seat, secure the child in a rear seat using the lap/ shoulder seat belt. Have the child sit upright and all the way back, then answer the following questions.



■ Checklist

- Do the child's knees bend comfortably over the edge of the seat?
- Does the shoulder belt cross between the child's neck and arm?
- Is the lap part of the seat belt as low as possible, touching the child's thighs?
- Will the child be able to stay seated like this for the whole trip?

If you answer yes to all these questions, the child is ready to wear the lap/shoulder seat belt correctly. If you answer no to any question, the child needs to ride on a booster seat until the seat belt fits properly without a booster seat.

Safety of Larger Children

AWARNING

Allowing a child age 12 or under to sit in front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, have the child sit up properly and wear the seat belt properly, using a booster seat if needed

Continued 81

Booster Seats



If a lap/shoulder seat belt cannot be used properly, position the child in a booster seat in the rear seat. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

■ Protecting Larger Children-Final Checks

Your vehicle has a rear seat where children can be properly restrained. If you ever have to carry a group of children, and a child must ride in front:

- Make sure you read and fully understand the instructions and safety information in this manual.
- Move the front passenger seat as far back as possible.
- Have the child sit upright and well back in the seat.
- Check that the seat belt is properly positioned so that the child is secure in the seat.

■ Monitoring child passengers

We strongly recommend that you keep an eye on child passengers. Even older, more mature children sometimes need to be reminded to fasten their seat belts and sit up properly.

≫ Booster Seats

When installing a booster seat, make sure to read the instructions that came with it, and install the seat accordingly.

There are high- and low-type booster seats. Choose a booster seat that allows the child to wear the seat belt correctly.


Some U.S. states require children to use a booster seat until they reach a given age or weight (e.g. 6 years or 60 lbs). Be sure to check current laws in the state where you intend to drive.

Safety Labels

Label Locations

These labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

If a label comes off or becomes hard to read (except for the U.S. dashboard label which may be removed by the owner), contact an authorized Honda Clarity Fuel Cell dealer for a replacement.

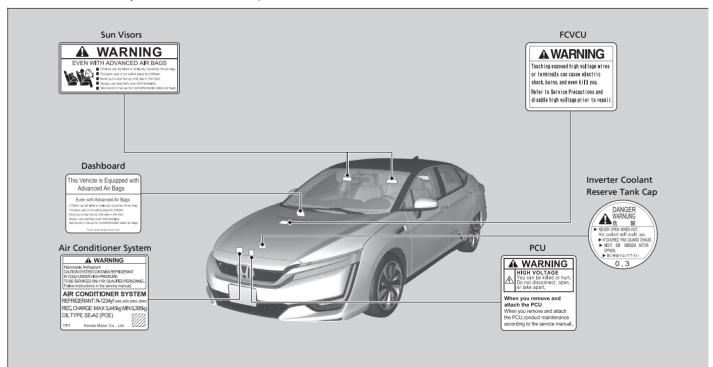

Instrument Panel

This chapter describes the buttons, indicators, and gauges that are used while driving.

ndicators	8
Driver Information Interface Warnin	g and
Information Messages	10
Gauges and Driver Information	
Interface	11
Gauges	11
Driver Information Interface	11
Head-Up Display	12

Indicator	Name	On/Blinking	Explanation	Message
BRAKE	Parking Brake and Brake System Indicator (Red)	 Comes on for a few seconds when you set the power mode to ON, then goes off if the parking brake has been released. Comes on when the parking brake is applied, and goes off when it is released. Comes on when the brake fluid level is low. Comes on if there is a problem with the brake system. The beeper sounds and the indicator comes on if you drive with the parking brake not fully released. 	Comes on while driving - Make sure the parking brake is released. Check the brake fluid level. What to do when the indicator comes on while driving P. 514 Comes on along with the parking brake and brake system indicator (amber) - Immediately stop in a safe place. Contact an authorized Honda Clarity Fuel Cell dealer for repair. The brake pedal becomes harder to operate. Depress the pedal further than you normally do. Comes on along with the ABS indicator - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. If the Brake System Indicator (Red) Comes On or Blinks P. 514	WARNING: Brake Fluid Low BRAKE System Problem Release BRAKE Parking Brake

Indicator	Name	On/Blinking	Explanation	Message
BRAKE	Parking Brake and Brake System Indicator (Red)	 Comes on for about 15 seconds when you pull or push the electric parking brake switch while the power mode is in VEHICLE OFF. Stays on for about 15 seconds when you set the power mode to VEHICLE OFF while the electric parking brake is set. 	Blinks and the parking brake and brake system indicator (amber) comes on at the same time - There is a problem with the electric parking brake system. The parking brake may not be set. Avoid using the parking brake and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 515	_
BRAKE HOLD	Automatic Brake Hold System Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when the automatic brake hold system is on. 	▶ Automatic Brake Hold P. 429	Brake Hold System Standby
HOLD	Automatic Brake Hold Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when the automatic brake hold is activated. 	▶ Automatic Brake Hold P. 429	_

Indicator	Name	On/Blinking	Explanation	Message
BRAKE SYSTEM	Parking Brake and Brake System Indicator (Amber)	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if there is a problem with a system related to braking other than the conventional brake system. Comes on if there is a problem with the cooperative control with regenerative braking, the electric servo brake system, or the hill start assist system. Comes on if there is a problem with the electric parking brake system or the automatic brake hold system. 	 Comes on while driving - Avoid using the parking brake and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. Stays on constantly - Avoid high speeds and sudden braking. Take the vehicle to an authorized Honda Clarity Fuel Cell dealer immediately. 	Brake System Problem Hill Start Assist Problem Electric Parking Brake Problem Brake Hold System Problem

Indicator	Name	On/Blinking	Explanation	Message
POWER SYSTEM Indicator		 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if there is a problem with the electric vehicle system (Generating electricity is stopped). 	 Stop in a safe place and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. ▶ Overheating P. 509 	Power System Problem: Problem: When Safe
	. •	Comes on if there is a problem with the power system.	 Your vehicle has less ability to accelerate and may be harder to start on an incline. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. 	Check Power System Problem Check Power System Power Reduced. See Your Dealer
	Indicator	 Comes on if there is a problem with the hydrogen leak detection system. 	 Your vehicle has less ability to accelerate and may be harder to start on an incline. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. 	Hydrogen Leak Detection Problem. Power Reduced
		Comes on when the ion filter needs replacing.	 Have the ion exchanger replaced by an authorized Honda Clarity Fuel Cell dealer immediately. Maintenance Minder™ P. 453 	Service Past Due 12 bays A 0123579 Check Power System Power Reduced. See Your Dealer

Indicator	Name	On/Blinking	Explanation	Message
READY	READY Indicator	 Comes on when the vehicle is ready to drive. 	 May go off if the POWER SYSTEM or transmission system indicator comes on. Turning on the Power P. 370 	Ready To Drive
==	12-Volt Battery Charging System Indicator	 Comes on when you set the power mode to ON, and goes off when the power system is on. Comes on when the 12-volt battery is not charging. 	• Comes on while driving - Turn off the climate control system and rear defogger in order to reduce electricity consumption. ▶ If the 12-Volt Battery Charging System Indicator Comes On P. 513	12 Volt Battery Charging System Problem
H2	Low Fuel Indicator	 Comes on when the vehicle is running low on fuel (3 or 2 fuel- gauge bars illuminated). 	Refuel your vehicle as soon as possible.	Fuel Low
Hydrogen Lea	Hydrogen Leak	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if a small hydrogen gas leak is detected. 	 Your vehicle has less ability to accelerate and may be harder to start on an incline. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. 	Hydrogen Leak Detected. Power Reduced
П2	Hydrogen Leak Indicator	Comes on if a hydrogen gas leak is detected.	 Generating electricity by the fuel cell is stopped. Immediately stop in a safe place and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. 	Pull Over When Safe. Hydrogen Lesk Detected

Indicator	Name	On/Blinking	Explanation	Message
D	Gear Position Indicator	• Indicates the current gear selection.	➡ Shifting P. 375	-
		 The indicated current gear selection blinks if there is a problem with the transmission system. 	 Avoid sudden start and acceleration, and stop in a safe place immediately. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. 	Transmission System Problem
N	Transmission System Indicator	 All the gear positions may light for several seconds, and go off. 	 When all the gear positions illuminate, immediately stop your vehicle in a safe place. Indicators go off if there is no problem. However, even if they go off, take your vehicle to an authorized Honda Clarity Fuel Cell dealer for inspection. 	-
		 The indicated current gear selection or all the gear positions blink if you cannot select P due to a transmission system failure. 	 The power system can be activated as a temporary measure. ▶ If the Transmission System Indicator Blinks along with the Warning Message P. 517 Set the parking brake when parking. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. 	Transmission Problem Apply Parking Brake When Parked

Indicator	Name	On/Blinking	Explanation	Message
	Seat Belt Reminder Indicator	 Comes on and the beeper sounds if you are not wearing a seat belt when you set the power mode to ON. If the front passenger is not wearing a seat belt, the indicator comes on a few seconds later. Blinks while driving if either you and/or the front passenger has not fastened a seat belt. The beeper sounds and the indicator blinks at regular intervals. 	 The beeper stops and the indicator goes off when you and the front passenger fasten their seat belts. Stays on after you and/or the front passenger has fastened the seat belt(s) - A detection error may have occurred in the sensor. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. Seat Belt Reminder P. 50 	Fasten Seat Belt Fasten Passenger's Seat Belt
(ABS)	Anti-lock Brake System (ABS) Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. If it comes on at any other time, there is a problem with the ABS. 	• Stays on constantly - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. With this indicator on, your vehicle still has normal braking ability but no anti-lock function. ■ Anti-lock Brake System (ABS) P. 431	Anti-Lock Brake System Problem

Indicator	Name	On/Blinking	Explanation	Message
	Supplemental Restraint System Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if a problem with any of the following is detected: Supplemental restraint system Side airbag system Side curtain airbag system Seat belt tensioner 	Stays on constantly or does not come on at all - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.	Airbag System (SRS) Problem
⊕!	Electric Power Steering (EPS) System Indicator	 Comes on when you set the power mode to ON, and goes off when the power system is on. Comes on if there is a problem with the EPS system. 	• Stays on constantly or does not come on at all - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. ■ If the Electric Power Steering (EPS) System Indicator Comes On P. 514	Power Steering System (EPS) Problem
	Vehicle Stability Assist™ (VSA®) System Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Blinks when VSA® is active. Comes on if there is a problem with the VSA® system. 	• Stays on constantly - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. ▶ Vehicle Stability Assist™ (VSA®), aka Electronic Stability Control (ESC), System P. 413	Vehicle Stability Assist (VSA) Problem
OFF	Vehicle Stability Assist™ (VSA®) OFF Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when you partially disable VSA®. 	▶ VSA® On and Off P. 414	Vehicle Stability Assist (VSA) OFF

Indicator	Name	On/Blinking	Explanation	Message
(!)	Low Tire Pressure/TPMS Indicator	 Comes on for a few seconds when you set the power mode to ON. May come on briefly if the power mode is set to ON and the vehicle is not moved within 45 seconds, to indicate the calibration process is not yet complete. Comes on and stays on when: One or more tires' pressures are determined to be significantly low. The system has not been calibrated. 	 Comes on while driving - Stop in a safe place, check tire pressures, and inflate the tire(s) if necessary. Stays on after the tires are inflated to the recommended pressures - The system needs to be calibrated. TPMS Calibration P. 416 	(!) Tire Pressures Low
		 Blinks for about one minute, and then stays on if there is a problem with the TPMS. 	• Blinks and remains on - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.	Tire Pressure TPMS Monitor Problem

Indicator Name	On/Blinking	Explanation	Message
System Message Indicator		 While the indicator is on, press the (display/information) button to see the message again. Refer to the Indicators information in this chapter when a system message appears on the driver information interface. Take the appropriate action for the message. The driver information interface does not return to the normal screen unless the warning is canceled, or the button is pressed. 	_

Indicator	Name	On/Blinking	Explanation	Message
**	Turn Signal and Hazard Warning Indicators	 Blinks when you operate the turn signal lever. Blink along with all turn signals when you press the hazard warning button. 	 Does not blink or blinks rapidly - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. 	-
	High Beam Indicator	• Comes on when the high beam headlights are on.	_	_
- 50 0 5	Lights On Indicator	 Comes on when the light switch in a position other than OFF or when the switch is set to AUTO and the exterior lights come on. 	 If you set the power mode to VEHICLE OFF while the exterior lights are on, a chime sounds when the driver's door is opened. 	_
(!) 🖟 🛱	Immobilizer System Indicator	Blinks if the immobilizer system cannot recognize the key information.	 Blinks - You cannot start the power system. Set the power mode to VEHICLE OFF, then select the ON mode again. Repeatedly blinks - The system may be malfunctioning. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. Do not attempt to alter this system or add other devices to it. Electrical problems can occur. 	_

Indicator	Name	On/Blinking	Explanation	Message
(I) OF R	Security System Alarm Indicator	Blinks when the security system alarm has been set.	■ Security System Alarm P. 149	_
SPORT	SPORT Mode Indicator	 Comes on when you press the SPORT button. The ambient meter remains lit up in red as long as sport mode is on. 	■ SPORT Mode P. 381	SPORT ON

Indicator	Name	On/Blinking	Explanation	Message
	Road Departure Mitigation (RDM) Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if there is a problem with the RDM system. 	• Stays on constantly - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.	Road Departure Mitigation System Problem
		Comes on when the RDM system shuts itself off.	• Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down sufficiently. ▶ Front Sensor Camera P. 383	Some Driver Assist Systems Cannot Operate Cannot Temperature Too High
			 Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer if the indicator and message come back on after you cleaned the area around the camera. Front Sensor Camera P. 383 	Same Driver Assist Systems Cannol Operate: Clean Front Windshield

Indicator	Name	On/Blinking	Explanation	Message
		 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if there is a problem with ACC with Low Speed Follow. 	Comes on while driving - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.	Adaptive Cruise Control Problem
ACC	Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Amber)	 Comes on if anything covers the radar sensor cover and prevents the sensor from detecting a vehicle in front. May come on when driving in bad weather (rain, snow, fog, etc.) ACC with Low Speed Follow has been automatically canceled. 	 The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. Have your vehicle checked by a dealer if the indicator does not go off even after you clean the sensor cover. 	Some Driver Assist Systems Cannot Operate: Radar Obstructed
ACC	Adaptive Cruise Control (ACC) with Low Speed Follow Indicator (Green)	Comes on when you press the MAIN button.	■ Adaptive Cruise Control (ACC) with Low Speed Follow P. 389	_

Indicator	Name	On/Blinking	Explanation	Message
LKAS	Lane Keeping Assist System (LKAS) Indicator (Amber)	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on if there is a problem with the LKAS. 	• Stays on constantly - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.	LAS Lane Keeping Assist Problem
LKAS	Lane Keeping Assist System (LKAS) Indicator (Green)	 Comes on when you press the MAIN button. 	► Lane Keeping Assist System (LKAS) P. 406	_
3 ₹ ⊋	Collision Mitigation Braking System™ (CMBS™) Indicator	 Comes on for a few seconds when you set the power mode to ON, then goes off. Comes on when you deactivate the CMBSTM. Comes on if there is a problem with the CMBSTM. 	 Stays on constantly without the CMBS[™] off - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. Collision Mitigation Braking System[™] (CMBS[™]) P. 433 	Collision Miligation System Problem

Indicator	Name	On/Blinking	Explanation	Message
***	Comes on when the CMBS™ system shuts itself off. Collision Mitigation Braking System™ (CMBS™) Indicator		 Stays on - The area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Front Sensor Camera P. 383 	Some Driver Assist Systems Cannot Operate: Clean Front Windshield
			 The area around the radar sensor is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. Indicator may take some time to go off after the radar sensor is cleaned. Have your vehicle checked by a dealer if the indicator does not go off even after you clean the sensor cover. Collision Mitigation Braking System™ (CMBS™) P. 433 	Some Driver Assist Systems Cannot Operate: Radar Obstructed
		 Stays on - The temperature inside the camera is too high. Use the climate control system to cool down the camera. The system activates when the temperature inside the camera cools down sufficiently. Front Sensor Camera P. 383 	Some Driver Assist Systems Cannot Operato: Connect Temperature Too High	

Driver Information Interface Warning and Information Messages

The following messages appear only on the driver information interface. Press the (display/information) button to see the message again with the system message indicator on.

Message	Condition	Explanation
Critical Failure Detected. Stop Driving When Safe	Appears when the vehicle is no longer able to run due to a malfunction.	• Immediately stop in a safe place.
Service Due Soon A 0 1 2 3 5 7 9	 Appears when the scheduled maintenance is due soon. Consequently, Service Due Now and Service Past Due follow. 	▶ Indicator, Warning Message and Maintenance Minder Information on the Driver Information Interface P. 454
Keyless Access System Problem Keyless Start 나를 중ystem Problem	Appears as soon as a problem is detected in the smart entry system or push button starting system.	Appears constantly - Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.
Charging System Problem	Appears when there is a problem with the sensor on the 12-volt battery.	 Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. Checking the 12-Volt Battery P. 477

Message	Condition	Explanation
To Switch Vehicle OFF: Push Twice	• Appears after the driver's door is opened when the power mode is in ACCESSORY.	• Change the power mode to VEHICLE OFF. ▶ POWER Button P. 154
Accessory Mode	Appears when the power mode is in ACCESSORY.	_
Keyless Remote Not Detected	 Appears when you close the door with the power mode in ON without the smart entry remote inside the vehicle. 	 Disappears when you bring the smart entry remote back inside the vehicle and close the door. Smart Entry Remote Reminder P. 156
Keyless Remote Battery Low	 Appears when the smart entry remote battery becomes weak. 	Replacing the Button Battery P. 479
To Start, Hold Remote Near Start Button	 Appears if the smart entry remote's battery is too weak to turn on the power system or the key is not within operating range to turn on the power system. A beeper sounds six times. 	 Bring the back of the smart entry remote into contact with the POWER button. If the Smart Entry Remote Battery is Weak P. 504
To Start Vehicle: Brake + Push	Appears when you set the power mode to ACCESSORY or ON.	▶ Turning on the Power P. 370

Message	Condition	Explanation
Low Low Power Reduced.	Appears when the power system temperature is low.	 Your vehicle has less ability to accelerate and may be harder to start on an incline. In extremely cold climates, keep the vehicle stored in a garage or preheat the power system before operating.
High Temperature. Power Power Reduced.	 Appears when the power system temperature is high. 	 Your vehicle has less ability to accelerate and may be harder to start on an incline.
Hybrid System Problem. Power May Be Reduced.	Appears if the power system is in diagnostic mode.	 You may notice a decrease in available power. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. As a result of diagnostics, the POWER SYSTEM indicator may come on. ▶ POWER SYSTEM Indicator P. 89
12 Volt Battery Charging System Problem. Power Reduced.	Appears after the 12-volt battery charging system indicator comes on.	 Your vehicle has less ability to accelerate and may be harder to start on an incline. Contact an authorized Honda Clarity Fuel Cell dealer immediately.

Message	Condition	Explanation
Acoustic Vehicle Alerting System Problem	• Appears if there is a problem with the acoustic vehicle alerting system.	Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.
High Voltage Battery Charge Too Low. Vehicle Cannot Start	Appears when the high voltage battery is running extremely low.	Contact an authorized Honda Clarity Fuel Cell dealer immediately.
Close Hydrogen Fuel Lid	• Appears when the fuel lid is open and you attempt to change the gear position to a gear other than P.	 Close the fuel lid. If the indicator remains on even after confirming the fuel lid is closed, the gear will not shift to a position other than P. If the indicator remains on even after closing the fuel lid, there may be a problem with the sensor, so have it checked immediately by an authorized Honda Clarity Fuel Cell dealer. ▶ If there is a problem with the sensor, press either D, N, or R more than 6 times in a row while depressing the brake pedal while the indicator is on and you will be able to change the shift position.
Vehicle Off. OK To Exit	• Appears when the power system shutdown process is taking time.	• The power system shutdown process is taking longer than usual. This, however, is normal, and you may leave the vehicle in this state.
Fueling Interrupted. Check Fuel Gauge	 Appears when filling hydrogen gas is not completed correctly. 	• Check if there is a problem at the hydrogen station. If there is no problem, have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

Message	Condition	Explanation
Temperature is Too Cold For Vehicle To Operate. Please Walt While Vehicle is Warmed.	Appears when fuel cell and high voltage battery temperature is low.	 You cannot drive the vehicle until the temperature of the fuel cell and high voltage battery has increased. Turn on the climate control system and wait until the message disappears. ▶ You can activate the climate control system with the smart entry system. ▶ Turning the Climate Control System On and Off with the Remote P. 195 It may take a longer time to start in very cold conditions or may not start at all until temperatures rise. If the temperature of the fuel cell or the high voltage battery drops below -4°F (-20°C), the fuel cells will not operate and, as a result, the vehicle will not start. Store the vehicle in a garage or take another measure to insure that temperature of the fuel cell and high voltage battery do not fall below this temperature. If necessary, consult an authorized Honda Clarity Fuel Cell dealer.
FC insulating Fluid Low. See Your Dealer.	Appears when the Fuel Cell Insulating Fluid level is low.	 Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately. Fuel Cell Insulating Fluid P. 19
Hydrogen Leak Detected Vehicle flust Be Off While Fueling	Appears if the power mode is set to ON while refueling the hydrogen gas.	Press the POWER button to change the power mode to VEHICLE OFF.

Message	Condition	Explanation
To Open Fuel Lid: Ud: Vehicle Must Be Off	 Appears when you press the fuel fill door release button with the power mode in ON. 	• Set the power mode to VEHICLE OFF, then press the fuel fill door release button.
Fasten Seat Belt	 Appears when you set the power mode to ON without fastening the driver's seat belt. Appears if the gear position has been automatically changed to P and the driver attempts to take the vehicle out of P but does not have his or her seatbelt fastened. 	 Fasten the seat belt properly before you start to drive. Shift Operation P. 377
To Shift Apply Brake Pedal	 Appears when you try to change the gear position without depressing the brake pedal while the transmission is in P or N. 	• Depress the brake pedal, then select a shift button.
To Shift Release Accelerator Pedal	 Appears when you try to change the gear position without releasing your foot off the accelerator pedal while the transmission is in P or N. 	• Release your foot off the accelerator pedal, then select a shift button.

Message	Condition	Explanation
To Shift Vehicle Must Be Stopped	 Appears when the P button is pressed while the vehicle is moving. Appears if you change the gear position to R while the vehicle is moving forward, or to D while the vehicle is reversing. 	 Make sure that the vehicle comes to a stop before operating the select button.
Stop The Vehicle When Safe. Use Caution, Vehicle May Move When Parked.	 Appears if there is a problem with the electric system. Appears when you set the power mode to OFF while driving. 	 Immediately stop in a safe place and set the parking brake. Resume driving if the message disappears. If there is a problem with the transmission system, the transmission system indicator comes on. Transmission System Indicator P. 91
P Shift To Park	 Appears when the vehicle is stopped with the driver's seat belt unfastened and there is a chance that the vehicle may roll unintentionally. 	 Press the P button before releasing the brake pedal when idling, parking, or exiting the vehicle. Shift Operation P. 377
To Exit Vehicle In Neutral: Press N Again & Hold For 2sec	 Appears for a few seconds if you have not pressed the N button long enough to initiate Neutral-Hold mode. 	■ If you want to keep the transmission in N position [car wash mode] P. 379
Neutral-Hold Mode ON Shift To P When Done	 Appears when you press and hold N button for more than 2 seconds. 	 Disappears when you set the gear position to other than N. If you want to keep the transmission in N position [car wash mode] P. 379

Message	Condition	Explanation
Gear Unavailable. Try Again After Awhile	• Appears when the transmission system temperature is too high.	 Park in a safe place, and allow the system to cool down sufficiently.
Gear Position is N. Release Accelerator Pedal	\bullet Appears when you depress the accelerator pedal while the transmission is in $\boxed{\textbf{N}}.$	 Release the accelerator pedal. Depress the brake pedal, then select a shift button to start driving.
Door And Trunk Open	 Appears if any door or the trunk is not completely closed. Appears if any door or the trunk is opened while driving. The beeper sounds. 	Goes off when all doors and the trunk are closed.
≣D Headlight Problem	 Appears when there is a problem with the headlights. 	 Appears while driving - The headlights may not be on. When conditions allow you to drive safely, have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer as soon as possible.

Message	Condition	Explanation
Brake Hold Disabled Apply Brake Pedal	 Appears if the automatic brake hold is automatically canceled while it is in operation. The beeper may sound. 	Immediately depress the brake pedal.
Brake Hold Brake Hold System OFF	Appears when the automatic brake hold system is turned off.	▶ Automatic Brake Hold P. 429
To Enable Frake Hold: Seat Belt + Push	Appears when the automatic brake hold button is pressed without wearing the driver's seat belt.	• Fasten the driver's seat belt. ▶ Automatic Brake Hold P. 429
To Disable To Disable To Disable Brake + Push	 Appears when the automatic brake hold button is pressed without depressing the brake pedal while the automatic brake hold is in operation. 	 Press the automatic brake hold button with the brake pedal depressed. Automatic Brake Hold P. 429
Parking Brake	 Appears when the parking brake is applied automatically while it is in operation. 	■ Automatic Brake Hold P. 429■ Parking Brake P. 425
To Release Parking Brake: Brake + Push	Appears when the electric parking brake switch is pressed without depressing the brake pedal while the electric parking brake is in operation.	 Appears while driving - Press the electric parking brake switch with the brake pedal depressed. Parking Brake P. 425
Temperature Is Too Cold For Vehicle To Operate	• Appears when the FC stack, high voltage battery and other system control temperatures are too low to operate (approx. –22°F [–30°C] or below).	 You must wait for an increase in the ambient temperature or move the vehicle to a warmer location. Consult an authorized Honda Clarity Fuel Cell dealer.

Message	Condition	Explanation
BRAKE	Flashes when the system senses a likely collision with a vehicle in front of you.	 Take the appropriate means to prevent a collision (apply the brakes, change lanes, etc.) Collision Mitigation Braking System™ (CMBS™) P. 433 Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
ACC ACC LKAS	Appears when ACC with Low Speed Follow has been automatically canceled.	 You can resume the set speed after the condition that caused ACC with Low Speed Follow to cancel improves. Press the RES/+ or -/SET switch up. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cruise Cancelled: Too Close To Vehicle Ahead	 Appears when the distance between your vehicle and the vehicle ahead of you is too close while ACC with Low Speed Follow is in operation. 	 ACC with Low Speed Follow has been automatically canceled. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cannot Set Cruise: Too Close To Vehicle Ahead	• Appears when pressing the RES/+ or -/SET switch down while the distance between your vehicle and the vehicle ahead of you is too close.	 ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cannot Set Cruise: Fasten Seat Belt	• Appears when pressing the RES/+ or -/SET switch down while the driver's seat belt is unfastened.	 ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389

Message	Condition	Explanation
Cannot Set Cruise: Shift To Drive	• Appears when pressing the RES/+ or -/SET switch down while the transmission is not in D .	 ACC with Low Speed Follow cannot be set. ■ Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cruise Cancelled: Slope Too Steep Cruise Cancelled: Slope Too Steep	 Appears when the vehicle is stopped on a very steep slope while ACC with Low Speed Follow is in operation. 	 ACC with Low Speed Follow has been automatically canceled. ■ Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cannot Set Cruise: Slope Too Steep Cannot Set Cruise: Slope Too Steep	 Appears when pressing the RES/+ or -/SET switch down while the vehicle is stopped on a very steep slope. 	 ACC with Low Speed Follow cannot be set. ■ Adaptive Cruise Control (ACC) with Low Speed Follow P. 389

Message	Condition	Explanation
Cannot Set Cruise: Speed Too High	 Appears when the speed of the vehicle is too high for you to set ACC with Low Speed Follow. 	 Reduce the speed, then set ACC with Low Speed Follow. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cruise Cancelled: Speed Too High	 Appears when ACC with Low Speed Follow is canceled due to excessive vehicle speed. 	 Reduce the speed, then reset ACC with Low Speed Follow. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
To Resume Cruise: Use "RES/+" Switch	 Appears when the vehicle ahead of you resumes driving, after your vehicle has been stopped automatically by ACC with Low Speed Follow. 	 Press the RES/+ or -/SET switch or depress the accelerator pedal to resume. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cannot Set Cruise: BRAKE Parking Brake Is Applied	 Appears when pressing the RES/+ or -/SET switch down while the parking brake is applied. 	 ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389 Parking Brake P. 425
Cannot Set Cruise: Brake Pedal Is Applied	 Appears when pressing the RES/+ or -/SET switch down while the vehicle is moving and the brake pedal is depressed. 	 ACC with Low Speed Follow cannot be set. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389
Cruise Cancelled: Apply Brake Pedal	 Appears if ACC with Low Speed Follow is canceled while your vehicle is automatically stopped by ACC with Low Speed Follow. 	Immediately depress the brake pedal.

Message	Condition	Explanation
Lane Departure	 Lane Keeping Assist System (LKAS) Appears when the vehicle is driving out of a detected lane. The steering wheel vibrates rapidly. Road Departure Mitigation (RDM) System Appears when the vehicle is driving out of a detected lane. When you selected Warning Only The steering wheel vibrates rapidly when the vehicle is drifting out of a detected lane. When you selected Normal or Wide The steering wheel vibrates rapidly when the vehicle is drifting out of a detected lane. The system also steers the vehicle to help you remain within your driving lane. 	 Keep the vehicle within the lane you are driving. ➡ Road Departure Mitigation (RDM) System P. 385 ➡ Lane Keeping Assist System (LKAS) P. 406 You can change the setting for the road departure mitigation system. Normal, Wide, and Warning Only can be selected. ➡ Customized Features P. 300
Steering Required	Blinks when you fail to steer the vehicle. The beeper sounds simultaneously.	Operate the steering wheel to resume the LKAS.
Lane Keeping Assist Cannot Operate	• Appears when the LKAS is in operation, or the LKAS button is pressed, but there is a problem with a system related to the LKAS. The LKAS cancels automatically. The beeper sounds simultaneously.	 If the VSA®, ABS, or brake system indicator or another indicator comes on, take appropriate action. ▶ Indicators P. 86

Message	Condition	Explanation
Some Driver Assist Sortens Convot Operate Convers Temperature Too High	Appears when the temperature inside the camera is too high.	 Use the climate control system to cool down the camera. Goes off - The camera has been cooled down. Pressing the LKAS button can resume the system. Adaptive Cruise Control (ACC) with Low Speed Follow P. 389 Lane Keeping Assist System (LKAS) P. 406 Front Sensor Camera P. 383
Some Driver Assist Systems Cannot Operate: Clean Front Windshield	 Appears when the area around the camera is blocked by dirt, mud, etc. Stop your vehicle in a safe place, and wipe it off with a soft cloth. May appear when driving in bad weather (rain, snow, fog, etc.). 	 Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer if the message does not disappear, even after you clean the area around the camera.

Gauges and Driver Information Interface

Gauges

Gauges include the speedometer, fuel gauge, **POWER/CHARGE** gauge, high voltage battery charge level gauge, and related indicators. They are displayed when the power mode is in ON.

Speedometer

Displays your driving speed in mph or km/h.

■ Fuel Gauge

Displays the approximate amount of fuel left in the fuel tank.

Range

Shows the estimated distance you can travel on the remaining power and fuel. This estimate is based on the fuel economy of your previous trips.

Gauges

Press the (display/information) button repeatedly until the icon is shown on the driver information interface. Press **ENTER**, then press and hold it again. The speedometer reading and the displayed measurements will switch between mph and km/h.

∑Fuel Gauge

NOTICE

You should refuel when the needle approaches **E**.

The actual amount of remaining fuel may differ from the fuel gauge reading.

■ POWER/CHARGE Gauge

■ Electric motor

The degree to which the electric motor is being powered is displayed by the readings on the **POWER** side.



- A: LOW POWER Traveling only by FC STACK.
- B: MEDIUM POWER Traveling by FC STACK, and by assist of the high-voltage battery depending on the situation
- **©**: HIGH POWER Traveling by FC STACK and assist of the high-voltage battery

Electric motor

The power output of the electric motor is restricted when the high voltage battery charge level is running low (2 segments or less on the gauge).

■ Battery charge in progress

The degree to which the High Voltage battery is being charged is displayed by the readings on the **CHARGE** side.

■ High Voltage Battery Charge Level Gauge

Shows the remaining high voltage battery charge level.

When the number of bars displayed on the High Voltage Battery Charge Level Gauge becomes 2, assist by the high-voltage battery is limited and the vehicle output is lowered.

The high voltage battery charge level may decrease under the following conditions:

- When the 12-volt battery has been replaced.
- When the 12-volt battery has been disconnected.
- When the high voltage battery control system corrects its reading.

The charge level reading will be corrected automatically while driving.

Changes in the temperature of the high voltage battery can increase or decrease the battery's charging capacity. If temperature changes cause the battery's capacity to change, the number of indicators in the battery charge level gauge may also change, even if the amount of charging remains the same.

Driver Information Interface

The driver information interface shows the odometer, trip meter, outside temperature indicator, and other gauges. It also displays important messages such as warnings and other helpful information.


Switching the Display

Press the (display/information) button and press or to change the display. Press **ENTER** to see detailed information.

Switching the Display


You can edit, add, or delete the meter contents using the audio/information screen.

Customizing the Meter P. 212

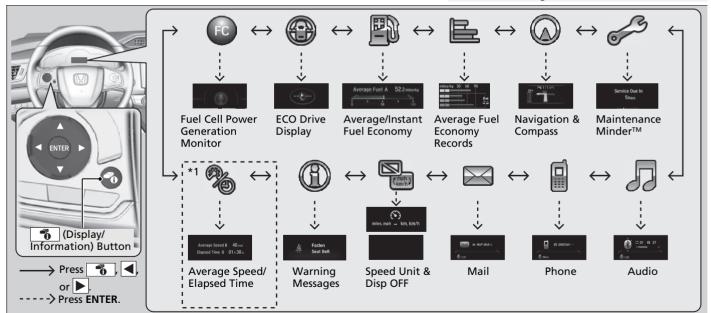

^{*1:}You can add the content using the audio/information screen.

Press the **TRIP** button to change the display.

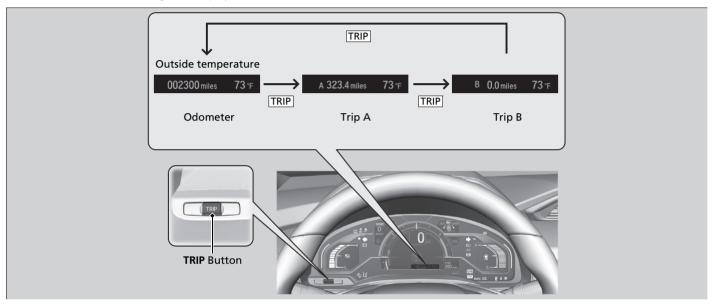

Odometer

Shows the total number of miles or kilometers that your vehicle has accumulated.

■ Trip Meter

Shows the total number of miles or kilometers driven since the last reset. Meters A and B can be used to measure two separate trips.

■ Resetting a trip meter

To reset a trip meter, display it, then press and hold the \mathbf{TRIP} button. The trip meter is reset to $\mathbf{0.0}$

Outside Temperature

Shows the outside temperature in Fahrenheit.

■ Adjusting the outside temperature display

Adjust the temperature reading up to \pm 5°F if the temperature reading seems incorrect.

Average Fuel Economy

Shows the estimated average fuel economy of each trip meter in miles/kg or km/kg. The display is updated at set intervals. When a trip meter is reset, the average fuel economy is also reset.

∑Trip Meter

Switch between trip meter A and trip meter B by pressing the **TRIP** button.

Outside Temperature

The temperature sensor is in the front bumper. Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h).

It may take several minutes for the display to be updated after the temperature reading has stabilized.

Use the audio/information screen's customized features to correct the temperature.

➤ Customized Features P. 300

■ Average Fuel Economy

You can change when to reset the average fuel economy.

■ Customized Features P. 300

■ Instant Fuel Economy

Shows the instant fuel economy as a bar graph in miles/kg or km/kg.

■ Elapsed Time

Shows the time elapsed since Trip A or Trip B was reset.

■ Average Speed

Shows the average speed in mph or km/h since Trip A or Trip B was reset.

■ Turn-by-Turn Directions

Shows you turn-by-turn driving directions to your destination linked with the navigation system.

■ Refer to the Navigation System Manual

You can change when to reset the elapsed time.

Customized Features P. 300

You can change when to reset the average speed.

■ Customized Features P. 300

∑Turn-by-Turn Directions

The driver information interface shows a compass when the route guidance is not used.

You can select whether the turn-by-turn display comes on or not during the route guidance.

Customized Features P. 300

■ Maintenance Minder™

Shows the Maintenance Minder™.

Maintenance Minder™ P. 453

Audio

Shows the current audio information.

▶ Audio System Basic Operation P. 204

■ Mail

Shows the current mail information.


Bluetooth® HandsFreeLink® P. 329

Phone

Shows the current phone information.

Bluetooth® HandsFreeLink® P. 329


■ Fuel Cell Power Generation Monitor

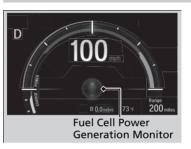

Shows the amount of power generated by the fuel cell.

A circle displayed in the monitor expands and contracts to show how much power is being generated. The larger the circle, the more power that is being generated.

Average Fuel Economy Records

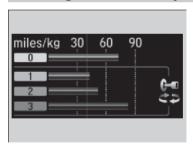


Shows the average fuel economy for the last three driving cycles (1 - 3), and the current driving cycle (0) in miles/kg or km/kg.

Each time you set the power mode to ON, the display is updated, and the oldest record is deleted.

■ Eco Drive Display

The vehicle icon on the display moves forward or backward while driving. The more aggressive the acceleration is, the further the icon moves forward. The more aggressive the deceleration is, the further the icon moves backward. Keep the icon near the center of the circle for better fuel economy while driving.

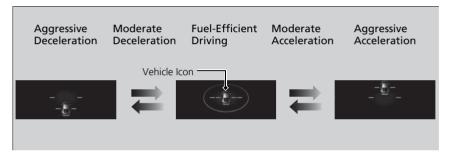

Customized Features

Use the audio/information screen to customize certain features.

Customized Features P. 300

Head-Up Display


Shows the current mode for ACC with Low Speed Follow or turn-by-turn directions along with the vehicle speed. The displayed item changes automatically according to the current state of the vehicle. They are displayed when the power mode is in ON.

To turn the head-up display on and off: Press the HUD button.

The display can be moved up and down to become level with your eyes.

To raise or lower the head-up display: Press and hold the ▲ or ▼ button until the desired position is reached.

When you unlock and open the driver's door with a remote transmitter, or keyless access system, the head-up display adjusts automatically to one of the two preset positions.

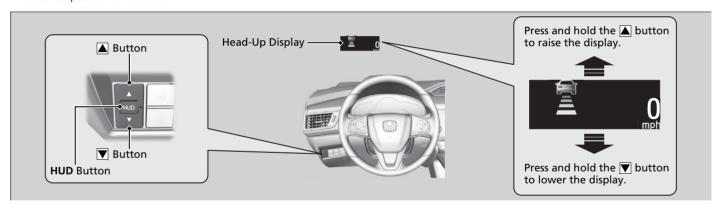



The display also shows the following warnings.

- **System Message Indicator:** Appears when a problem is detected. A system message on the driver information interface appears at the same time.
 - Driver Information Interface Warning and Information Messages P. 102
- Lane Departure Warning: When your vehicle is too close to the traffic lane lines, the lane departure warning appears.
 - **► Lane Keeping Assist System (LKAS)**P. 406
- Head-up Warning Lights:

Flash when the **BRAKE** message appears on the driver information interface.

Collision Mitigation Braking System™ (CMBS™) P. 433

Comes on when the **BRAKE** message appears on the driver information interface.

Adaptive Cruise Control (ACC) with Low Speed Follow P. 389

■ Vehicle Speed

Shows your driving speed in mph or km/h.

■ Current Mode for ACC with Low Speed Follow

Shows the current mode for ACC with Low Speed Follow.

⚠ Adaptive Cruise Control (ACC) with Low Speed Follow P. 389

■ Turn-by-Turn Directions

Shows you turn-by-turn driving directions to your destination linked with the navigation system.

Refer to the Navigation System Manual

Switch between mph and km/h by using the driver information interface or the customized features on the audio/information screen.

B Gauges P. 116

Customized Features P. 300

∑Turn-by-Turn Directions

You can select whether the turn-by-turn display comes on during the route guidance.

Customized Features P. 300

Controls

This chapter explains how to operate the various controls necessary for driving.

Clock	132
Locking and Unlocking the Doors	
Key Types and Functions	133
Low Smart Entry Remote Signal Strength	
Locking/Unlocking the Doors from th	e
Outside	135
Locking/Unlocking the Doors from th	e
Inside	142
Childproof Door Locks	144
Auto Door Locking/Unlocking	
Opening and Closing the Trunk	146
Security System	149
Immobilizer System	149

Security System Alarm Opening and Closing the Windows Operating the Switches Around the Steering Wheel	
POWER Button	154
Turn Signals	157
Light Switches	158
Daytime Running Lights	161
Wipers and Washers	
Brightness Control	164
Rear Defogger/Heated Door Mirror	
Button	166
Driving Position Memory System	167

Adjusting the Steering Wheel	169
Adjusting the Mirrors	170
Interior Rearview Mirror	170
Power Door Mirrors	171
Adjusting the Seats	172
Front Seats	172
nterior Lights/Interior Convenience	:
Items	178
Interior Lights	178
Interior Convenience Items	180
Climate Control System	188
Using Automatic Climate Control	188
Using Automatic Climate Control Automatic Climate Control Sensors	

Adjusting the Clock

The clock is automatically updated through the navigation system, so the time does not need to be adjusted.

You can also adjust the time manually in the audio/information screen, with the power mode in ON.

Adjusting the Time

■ Using the Settings menu on the audio/information screen

- 1. Select Settings.
- 2. Select Clock.
- 3. Select Clock Adjustment.
- **4.** Select **▲** or **▼** to change hour.
- **5.** Select ▲ or ▼ to change minute, then select **OK**.



You can customize the clock display to show the 12 hour clock or 24 hour clock.

Customized Features P. 300

You can turn the clock display in the audio/ information screen on and off.

Customized Features P. 300

You cannot adjust the time while the vehicle is moving.

You can also adjust the clock by touching the clock displayed on the upper right corner of the display.

- 1. Touch the clock on the display.
- 2. Select Clock Adjustment.
- 3. Select ▲ or ▼ to change hour.
- 4. Select **△** or **▼** to change minute, then select **OK**.

Locking and Unlocking the Doors


Key Types and Functions

This vehicle comes with the following keys:



Use the keys to turn on and off the power system, and to lock and unlock the doors and to open the trunk. You can also use the remote transmitter to lock and unlock the doors and trunk

■ Built-in Key

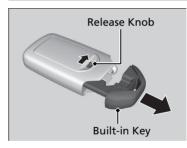

The built-in key can be used to lock/unlock the doors when the smart entry remote battery becomes weak and the power door lock/unlock operation is disabled.

To remove the built-in key, slide the release knob and then pull out the key. To reinstall the built-in key, push the built-in key into the smart entry remote until it clicks.

■ Key Types and Functions ■ Comparison ■ Comparison

All the keys have an immobilizer system. The immobilizer system helps to protect against vehicle theft.

Immobilizer System P. 149

Follow the advice below to prevent damage to the keys:

- Do not leave the keys in direct sunlight, or in locations with high temperature or high humidity.
- Do not drop the keys or set heavy objects on them.
- Keep the keys away from liquids, dust and sand.
- Do not take the keys apart except for replacing the battery.

If the circuits in the keys are damaged, the power system may not activate, and the remote transmitter may not work.

If the keys do not work properly, have them inspected by an authorized Honda Clarity Fuel Cell dealer.

Key Number Tag



Contains a number that you will need if you purchase a replacement key.

Low Smart Entry Remote Signal Strength

The vehicle transmits radio waves to locate the smart entry remote when locking/unlocking the doors, opening the trunk, or to activate the power system.

In the following cases, locking/unlocking the doors, opening the trunk, or activating the power system may be inhibited or operation may be unstable:

- Strong radio waves are being transmitted by nearby equipment.
- You are carrying the smart entry remote together with telecommunications equipment, laptop computers, cell phones, or wireless devices.
- A metallic object is touching or covering the smart entry remote.

Keep the key number tag separate from the key in a safe place outside of your vehicle.

If you wish to purchase an additional key, contact an authorized Honda Clarity Fuel Cell dealer.

If you lose your key and you cannot activate the power system, contact an authorized Honda Clarity Fuel Cell dealer.

∑Low Smart Entry Remote Signal Strength


Communication between the smart entry remote and the vehicle consumes the smart entry remote's battery.

Battery life is about two years, but this varies depending on regularity of use.

The battery is consumed whenever the smart entry remote is receiving strong radio waves. Avoid placing it near electrical appliances such as televisions and personal computers.


Locking/Unlocking the Doors from the Outside

Using the Smart Entry with Push Button Start System

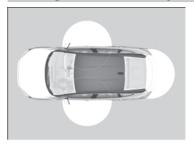

When you carry the smart entry remote, you can lock/unlock the doors and open the trunk. You can lock/unlock the doors within a radius of about 32 inches (80 cm) of the outside door handle or trunk release button.

■ Locking the doors and trunk

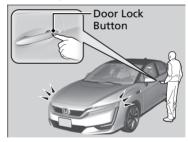

Press the door lock button on the front door.

➤ Some exterior lights flash; the beeper sounds; all the doors lock; and the security system sets.

■ Locking/Unlocking the Doors from the Outside

If the interior light switch is in the door activated position, the interior light comes on when you unlock the doors.


No doors opened: The light fades out after 30 seconds.


Doors relocked: The light goes off immediately. **▶** Interior Lights P. 178

≥ Using the Smart Entry with Push Button Start System

If you do not open a door within 30 seconds of unlocking the vehicle with the smart entry system, the doors will automatically relock.

You can lock or unlock doors using the smart entry system only when the power mode is in VEHICLE OFF.

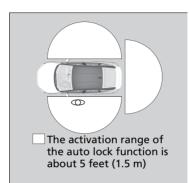

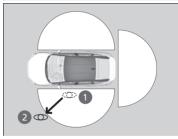

■ Locking the doors and trunk (Walk away auto lock®)

When you walk away from the vehicle while carrying the smart entry remote, the doors will automatically lock.

The auto lock function activates when all doors are closed, and the smart entry remote is within about 5 feet (1.5 m) radius of the outside door handle.

Exit vehicle while carrying smart entry remote and close door(s).

- **1.** While within about 5 feet (1.5 m) radius of the vehicle.
 - ➤ The beeper sounds; the auto lock function will be activated.
- **2.** Carry the smart entry remote beyond about 5 feet (1.5 m) from the vehicle and remain outside this range for 2 or more seconds.
 - ➤ Some exterior lights flash; the beeper sounds; all doors will then lock.

■Locking the doors and trunk (Walk away auto lock®)

The auto lock function is set to OFF as the factory default setting. The auto lock function can be set to ON using the audio/information screen. If you set the auto lock function to ON using the audio/information screen, only the remote transmitter that was used to unlock the driver's door prior to the setting change can activate auto lock.

Customized Features P 300

After the auto lock function has been activated, when you stay within the locking/unlocking operation range, the indicator on the smart entry remote will continue to flash until the doors are locked.

When you stay beside the vehicle within the operation range, the doors will automatically lock approximately 30 seconds after the auto lock function activating beeper sounds.

When you open a door after the auto lock function activating beeper sounds, the auto lock function will be delayed until all doors are closed.

Under the following circumstances, the auto lock function will not activate:

- The remote is inside the vehicle.
 The beeper will not sound.
- The remote is taken out of its operational range before all the doors are closed.
 - ►The beeper will sound.

To temporarily deactivate the function:

- 1. Set the power mode to OFF.
- 2. Open the driver's door.
- **3.** Using the master door lock switch, operate the lock as follows:

 $\mathsf{Lock} \to \mathsf{Unlock} \to \mathsf{Lock} \to \mathsf{Unlock}.$

► The beeper sounds and the function is deactivated.

To restore the function:

- Set the power mode to ON.
- Lock the vehicle without using the auto lock function
- With the smart entry remote on you, move out of the auto lock function operation range.
- Open any door.

■Locking the doors and trunk (Walk away auto lock®)

The auto lock function does not operate when any of the following conditions are met.

- The smart entry remote is inside the vehicle.
- A door or the hood is not closed.
- The power mode is set to any mode other than OFF.
- The smart entry remote is not located within a radius of about 5 feet (1.5 m) from the vehicle when you get out of the vehicle and close the doors.


Auto lock function operation stop beeper

After the auto lock function has been activated, the auto lock operation stop beeper sounds for approximately two seconds in the following cases.

- The smart entry remote is put inside the vehicle through a window.
- You are located too close to the vehicle.
- The smart entry remote is put inside the trunk. If the warning beeper sounds, check that you are carrying the smart entry remote. Then, open/close a door and confirm the auto lock activation beeper sounds once.

■ Unlocking the doors and trunk



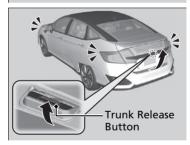

Grab the driver's door handle:

- ► The driver's door unlocks.
- Some exterior lights flash twice and the beeper sounds twice.

Grab the front passenger's door handle:

- ► All doors unlock.
- Some exterior lights flash twice and the beeper sounds twice.

Press the trunk release button:

- ► The trunk unlocks and opens.
- Some exterior lights flash and the beeper sounds
- Using the Trunk Release Button P. 147


≥ Using the Smart Entry with Push Button Start System

- Do not leave the smart entry remote in the vehicle when you get out. Carry it with you.
- Even if you are not carrying the smart entry remote, you can lock/unlock the doors while someone else with the remote is within range.
- The door may be unlocked if the door handle is covered with water in heavy rain or in a car wash if the smart entry remote is within range.
- If you grip a front door handle wearing gloves, the door sensor may be slow to respond or may not respond by unlocking the doors.
- After locking the door, you have up to two seconds during which you can pull the door handle to confirm whether the door is locked. If you need to unlock the door immediately after locking it, wait at least two seconds before gripping the handle, otherwise the door will not unlock.
- The door might not open if you pull it immediately after gripping the door handle. Grip the handle again and confirm that the door is unlocked before pulling the handle.
- Even within the 32 inches (80 cm) radius, you may not be able to lock/unlock the doors with the smart entry remote if it is above or below the outside handle.
- The smart entry remote may not operate if it is too close to the door and door glass.

The light flash, beep and door unlock mode settings can be customized using the audio/information screen.

Customized Features P. 300

Using the Remote Transmitter

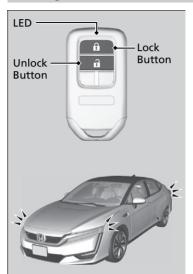

■ Locking the doors

Press the lock button.

Once:

Some exterior lights flash, all the doors lock, and the security system sets.

Twice (within five seconds after the first push):

► The beeper sounds and verifies the security system is set.

■ Unlocking the doors

Press the unlock button.

Once:

Some exterior lights flash twice, and the driver's door unlocks.

Twice:

► The remaining doors unlock.

If you do not open a door within 30 seconds of unlocking the vehicle with the remote transmitter, the doors will automatically relock.

You can change the relock timer setting.

Customized Features P. 300

You can lock or unlock doors using the remote transmitter only when the power mode is in VEHICLE OFF.

The remote transmitter uses low-power signals, so the operating range may vary depending on the surroundings.

The remote will not lock the vehicle when a door is open.

If the distance at which the remote transmitter works varies, the battery is probably low.

If the LED does not come on when you press a button, the battery is dead.

Replacing the Button Battery P. 479

You can customize the door unlock mode setting.

⊇ Customized Features P. 300

■ Locking/Unlocking the Doors Using a Key

If the lock or unlock button of the smart entry remote does not work, use the key instead.

Replacing the Button Battery P. 479



Fully insert the key and turn it.

■ Locking/Unlocking the Doors Using a Key


When you lock the driver's door with a key, all the other doors lock at the same time. When unlocking, the driver's door unlocks first. Turn the key a second time within a few seconds to unlock the remaining doors.

You can customize the door unlock mode setting.

Customized Features P. 300

■ Locking a Door Without Using a Key

If you do not have the key on you, or if for some reason you cannot lock a door using the key, you can lock the door without it.

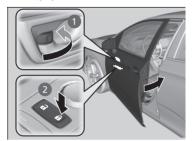

■ Locking the front doors

Push the lock tab forward ① or push the master door lock switch in the lock direction ②, and close the door.

■ Locking the rear doors

Push the lock tab forward and close the door.

■ Lockout prevention system

The doors cannot be locked when the smart entry remote is inside the vehicle.


∑Locking a Door Without Using a Key

When you lock the driver's door, all the other doors lock at the same time.

Before locking a door, make sure that the key is not inside the vehicle.

Locking/Unlocking the Doors from the Inside

■ Using the Lock Tab

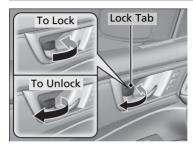

■ Locking a door

Push the lock tab forward.

■ Unlocking a door


Pull the lock tab rearward.

≥Using the Lock Tab

When you lock the door using the lock tab on the driver's door, all of the other doors lock at the same time.

When you unlock the door using the lock tab on the driver's door, only the driver's door will unlock.

Unlocking Using the Front Door Inner Handle

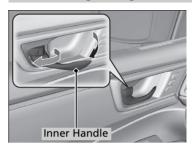

Pull the front door inner handle.

➤ The door unlocks and opens in one motion.

Unlocking and opening the driver's door from the inner handle unlocks all the other doors.

To avoid all the doors to be unlocked, use the lock tab on the driver's door to unlock, then lock again before opening the door.

➤ This setting works for one time only. If you do not want all the doors to be unlocked all the time, customize the **Auto Door Unlock** setting to **Off** using the audio/information screen.

■ Unlocking Using the Front Door Inner Handle


The front door inner handles are designed to allow front seat occupants to open the door in one motion. However, this feature requires that front seat occupants never pull a front door inner handle while the vehicle is in motion.

Children should always ride in a rear seat where childproof door locks are provided.

≧ Childproof Door Locks P. 144

Continued 143

Using the Master Door Lock Switch

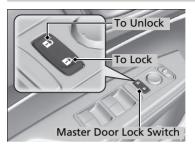

Press the master door lock switch in as shown to lock or unlock all the doors.


>> Using the Master Door Lock Switch

When you lock/unlock either front door using the master door lock switch, all the other doors lock/unlock at the same time.

Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.

Setting the Childproof Door Locks

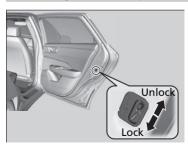

Slide the lever in the rear door to the lock position, and close the door.

■ When opening the door

Open the door using the outside door handle.

■ Childproof Door Locks

To open the door from the inside when the childproof door lock is on, put the lock tab in the unlock position, lower the rear window, put your hand out of the window, and pull the outside door handle

Auto Door Locking/Unlocking

Your vehicle locks or unlocks all doors automatically when a certain condition is met.

Auto Door Locking

■ Drive lock mode

All doors lock when the vehicle's speed reaches about 10 mph (15 km/h).

■ Auto Door Unlocking

■ Driver's door open mode

All doors unlock when the driver's door is opened.

You can turn off or change to another auto door locking/unlocking setting using the audio/ information screen.

Customized Features P. 300

Opening and Closing the Trunk

Precautions for Opening/Closing the Trunk

■ Opening the trunk

Open the trunk all the way.


▶ If it is not fully opened, the trunk lid may begin to close under its own weight.

■ Closing the trunk

Keep the trunk lid closed while driving to:

► Avoid possible damage.


Using the Trunk Opener

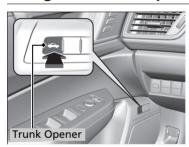

Pressing the trunk opener on the driver's door unlocks and opens the trunk.

When You Cannot Open the Trunk P. 528

Using the Trunk Release Button

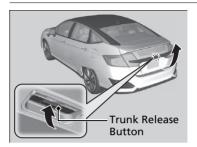


Push up the release button on the trunk lid after the doors are unlocked.

When You Cannot Open the Trunk P. 528 **№**

Even if the trunk is locked, you can open the trunk if you carry the smart entry remote.

Some exterior lights flash and the beeper sounds.

Using the Remote Transmitter

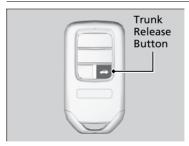

Press the trunk release button for approximately one second to unlock and open the trunk

Substitution States States Substitution States State

- If you forget the remote inside, the beeper will sound and the trunk will not close.
- A person who is not carrying the smart entry remote can unlock the trunk if a person who is carrying it is within range.
- If the beeper sounds after you close the trunk, move the smart entry remote away from the trunk and close again.
- The smart entry remote may not operate if it is too close to the trunk.

If the driver's door is locked, the trunk will automatically lock when you close it. Otherwise, you will have to lock it manually.

Emergency Trunk Opener



The trunk release lever allows you to open the trunk from inside for your safety.

Slide the release lever in the direction of the arrow.

Parents should decide if their children should be shown how to use this feature.

Security System

Immobilizer System

The immobilizer system prevents a key that has not been pre-registered from starting the power system. Each key contains electronic transmitters that use electronic signals to verify the key.

Pay attention to the following when pressing the **POWER** button:

- Do not allow objects that emit strong radio waves near the **POWER** button.
- Make sure the key is not covered by or touching a metal object.
- Do not bring a key from another vehicle's immobilizer system near the POWER button.
- Do not put the key near magnetic items. Electronic devices, such as televisions and audio systems emit strong magnetic fields. Note that even a key chain can become magnetic.

Security System Alarm

The security system alarm activates when the trunk, hood or doors are forcibly opened. The alarm does not activate if the trunk or doors are opened with the key, remote transmitter or smart entry system.

However, the alarm activates if a door is opened with the key and then the hood is opened before the power mode is set to ON.

■ When the security system alarm activates

The horn sounds intermittently and some exterior lights flash.

■ To deactivate the security system alarm

Unlock the vehicle using the key, remote transmitter or smart entry system. The system, along with the horn and flashing lights, is deactivated.

NOTICE

Leaving the key in the vehicle can result in theft or accidental movement of the vehicle.

Always take the key with you whenever you leave the vehicle unattended.

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

Security System Alarm

Do not alter the system or add other devices to it. Doing so may damage the system and make your vehicle inoperable.

The security alarm continues for a maximum of two minutes until the security system alarm deactivates.

Continued 149

■ Setting the security system alarm

The security system alarm automatically sets when the following conditions have been met:

- The power mode is set to VEHICLE OFF (LOCK).
- The hood is closed.
- All doors and the trunk are locked from outside with the key, remote transmitter or smart entry system.

■ When the security system alarm sets

The security system alarm indicator in the instrument panel blinks. When the blinking interval changes after about 15 seconds, the security system alarm is set.

■ To cancel the security system alarm

The security system alarm is canceled when the vehicle is unlocked using the remote transmitter, smart entry system, or the power mode is set to ON. The security system alarm indicator goes off at the same time.

Security System Alarm

Do not set the security system alarm when someone is in the vehicle or a window is open. The system can accidentally activate when:

- Unlocking the door with the lock tab.
- Opening the trunk with the trunk opener or the emergency trunk opener.
- Opening the hood with the hood release.

If the 12-volt battery goes dead after you have set the security system alarm, the security alarm may go off once the 12-volt battery is recharged or replaced. If this occurs, deactivate the security system alarm by unlocking a door using the key, remote transmitter or smart entry system.

■ Panic Mode



■ The panic button on the remote transmitter

If you press the panic button for approximately one second, the following will occur for about 30 seconds:

- The horn sounds.
- Some exterior lights flash.

■ Canceling panic mode

- Press any button on the remote transmitter.
- Set the power mode to ON.

Opening and Closing the Windows


Opening/Closing the Power Windows

The power windows can be opened and closed when the power mode is in ON, using the switches on the doors.

The driver's side switches can be used to open and close all the windows. The power window lock button on the driver's side must be switched off (indicator off) to open and close the windows from anywhere other than the driver's seat.

When the power window lock button is pressed, the indicator comes on and you can only operate the driver's window. Turn the power window lock button on if a child is in the vehicle.

Opening/Closing Windows with Auto-Open/Close Function

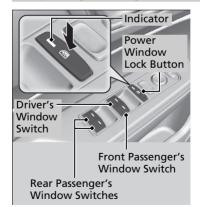

■ Manual operation

To open: Push the switch down lightly, and hold it until the desired position is reached. **To close:** Pull the switch up lightly, and hold it until the desired position is reached.

■ Automatic operation

To open: Push the switch down firmly. **To close:** Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch briefly.

≥Opening/Closing the Power Windows

AWARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

The power windows can be operated for up to 10 minutes after you set the power mode to VEHICLE OFF (LOCK).

Opening either front door cancels this function.

Auto Reverse

If a power window senses resistance when closing automatically, it will stop closing and reverse direction.

The driver's window auto reverse function is disabled when you continuously pull up the switch.

The auto reverse function stops sensing when the window is almost closed to ensure that it fully closes.

Opening the Windows with the Remote



To open: Press the unlock button, and then within 10 seconds, press it again and hold it.

If the windows stop midway, repeat the procedure.

Opening/Closing the Windows with the Key



To open: Unlock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the unlock direction and hold it there.


To close: Lock the driver's door with the key. Within 10 seconds of returning the key to the central position, turn the key in the lock direction and hold it there.

Release the key to stop the windows at the desired position. If you want further adjustment, repeat the same operation.

Operating the Switches Around the Steering Wheel


POWER Button

■ Changing the Power Mode

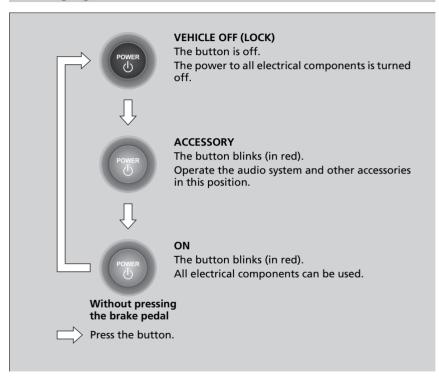

≫POWER Button

POWER Button Operating Range

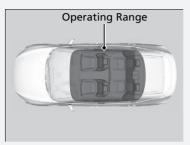

You can start the power system when the smart entry remote is inside the vehicle.

The power system may also start if the smart entry remote is close to the door or window, even if it is outside the vehicle

ON mode:

The **POWER** button is on (in red), if the power system is on.

If the battery of the smart entry remote is getting low, the power system may not start when you press the **POWER** button. If the power system does not start, refer to the following link.

☑ If the Smart Entry Remote Battery is Weak P. 504

Do not leave the power mode in ACCESSORY or ON when you get out.

■ Automatic Power Off


If you leave the vehicle for 30 to 60 minutes with the transmission in $\boxed{\textbf{P}}$ and the power mode in ACCESSORY, the vehicle automatically goes into the mode to VEHICLE OFF (LOCK) to avoid draining the 12-volt battery.

■ Power Mode Reminder

If you open the driver's door when the power mode is set to ACCESSORY, a warning beep sounds.

Continued 155

■ Smart Entry Remote Reminder

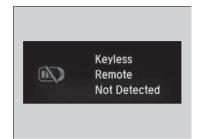

Warning buzzers may sound from inside and/ or outside the vehicle to remind you that the smart entry remote is out of the vehicle. If the buzzer continues even after the remote is put back inside, place it to be within its operational range.

■ When the power mode is in ON

If the smart entry remote is taken out of the vehicle, and the driver's door is closed, a warning buzzer sounds from both inside and outside the vehicle. A warning message on the driver information interface notifies the driver inside that the remote is outside of the vehicle.

■ When the power mode is in ACCESSORY

If the smart entry remote is taken out of the vehicle, and the driver's door is closed, a warning buzzer sounds from outside the vehicle.

Smart Entry Remote Reminder


When the smart entry remote is within the system's operational range, and the driver's door is closed, the warning function cancels.

If the smart entry remote is taken out of the vehicle after the power system has been turned on, you can turn the power system off, but you can no longer use ACCESSORY mode or restart the vehicle. Always make sure if the remote is in your vehicle when you operate the **POWER** button.

Removing the smart entry remote from the vehicle through a window does not activate the warning buzzer.

Do not put the smart entry remote on the dashboard or in the glove box. It may cause the warning buzzer to go off. Under some other conditions that can prevent the vehicle from locating the remote, the warning buzzer may also go off even if the remote is within the system's operational range.

Turn Signals

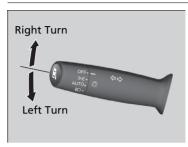

The turn signals can be used when the power mode is in ON.


■ One-touch turn signal

When you lightly push up or down and release the turn signal lever, the exterior turn signals and turn signal indicator blink three times.

This feature can be used when signaling for a lane change.

Light Switches

■ Manual Operation

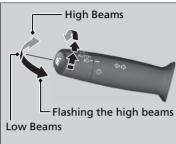

Turns on parking, side marker, tail, and rear license plate lights

≣O

Turns on headlights, parking, side marker, tail, and rear license plate lights

Rotating the light switch turns the lights on and off, regardless of the power mode setting.

■ High beams

Push the lever forward until you hear a click.

■ Low beams

When in high beams, pull the lever back to return to low beams.

■ Flashing the high beams

Pull the lever back, and release it.

∑Light Switches

If you leave the power mode in VEHICLE OFF (LOCK) while the lights are on, a chime sounds when the driver's door is opened.

When the lights are on, the lights on indicator in the instrument panel will be on.

≥ Lights On Indicator P. 96

Do not leave the lights on when the power system is off because it will cause the 12-volt battery to discharge.

If you sense that the level of the headlights is abnormal, have the vehicle inspected by an authorized Honda Clarity Fuel Cell dealer.

Automatic Operation (automatic lighting control)



Automatic lighting control can be used when the power mode is in ON.

When you turn the light switch to **AUTO**, the headlights and other exterior lights will switch on and off automatically depending on the ambient brightness.


The headlights comes on when you unlock a door in dark areas with the headlight switch in **AUTO**

Once you lock the door, the headlights will go off.

■ Automatic Operation (automatic lighting control)

We recommend that you turn on the lights manually when driving at night, in a dense fog, or in dark areas such as long tunnels or parking facilities.

The light sensor is in the location shown below.

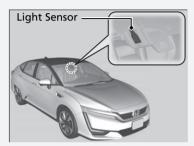

You can adjust the auto light sensitivity as follows:

Setting	The exterior lights come on when the ambient light is at
Max	Bright
High	Bright
Mid	
Low	Dark
Min	23.10

⊇ Customized Features P. 300

Continued 159

Headlight Integration with Wipers

The headlights automatically come on when the wipers are used several times within a certain number of intervals with the headlight switch in **AUTO**.

The headlights automatically go off a few minutes later if the wipers are stopped.

Automatic Lighting Off Feature

The headlights, all other exterior lights, and the instrument panel lights turn off 15 seconds after you set the power mode to VEHICLE OFF (LOCK), take the remote with you, and close the driver's door.

If you set the power mode to VEHICLE OFF (LOCK) with the headlight switch on, but do not open the door, the lights turn off after 10 minutes (3 minutes, if the switch is in the **AUTO** position).

The lights turn on again when you unlock or open the driver's door. If you unlock the door, but do not open it within 15 seconds, the lights go off. If you open the driver's door, you will hear a lights on reminder chime.

This feature activates when the headlights are off in $\boldsymbol{\mathsf{AUTO}}.$

The instrument panel brightness does not change when the headlights come on.

At dark ambient light levels, the automatic lighting control feature turns on the headlights, regardless of the number of wiper sweeps.

You can turn the headlight integration with wipers function on and off.

≧ Customized Features P. 300

You can change the headlight auto off timer setting.

Customized Features P. 300

Daytime Running Lights

The daytime running lights come on when the following conditions have been met:

- The power mode is in ON.
- The headlight switch is **AUTO**, or **OFF**.
- The parking brake is released.

The lights remain on even if you set the parking brake. Setting the power mode to VEHICLE OFF (LOCK) will turn off the daytime running lights.

The daytime running lights are off once the headlight switch is turned on, or when the headlight switch is in **AUTO** and it is getting darker outside.

Wipers and Washers

■ Windshield Wipers/Washers



The windshield wipers and washers can be used when the power mode is in ON.

■ MIST

The wipers run at high speed until you release the lever.

■ Wiper switch (OFF, AUTO, LO, HI)

Move the lever up or down to change the wiper settings.

■ Washer

Sprays while you pull the lever toward you. When you release the lever for more than one second, the spray stops, the wipers sweep two or three more times to clear the windshield, then stop.

NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched, or the rubber blades will get damaged.

Turn the washers off if no washer fluid comes out. The pump may get damaged.

When the wiper motor is kept running under heavy load for extended periods of time, this protection feature is activated, and the wiper speed may decrease or motor operation may stop temporarily. This function will be canceled within a few minutes once the load has been reduced; the wiper operation returns to normal.

NOTICE


In cold weather, the blades may freeze to the windshield.

Operating the wipers in this condition may damage the wipers. Use the defroster to warm the windshield, then turn the wipers on.

If the wipers stop operating due to an obstacle such as the build-up of snow, park the vehicle in a safe place.

Rotate the wiper switch to **OFF**, and set the power mode to ACCESSORY or VEHICLE OFF (LOCK), then remove the obstacle.

Automatic Intermittent Wipers

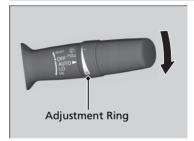

When you push the lever down to **AUTO**, the windshield wipers sweep once, and go into the automatic mode.

The wipers operate intermittently, at low speed, or at high speed and stops in accordance with the amount of rainfall the rainfall sensor detects.

■ AUTO sensitivity adjustment

When the wiper function is set to **AUTO**, you can adjust the sensitivity of the rainfall sensor (using the adjustment ring) so that wipers will operate in accordance with your preference.

Sensor sensitivity




Low sensitivity

High sensitivity

Wipers and Washers

The washer jets are in the location shown below.

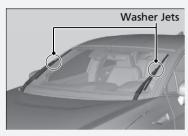

The rainfall sensor is in the location shown below.




NOTICE

AUTO should always be turned **OFF** before the following situations in order to prevent severe damage to the wiper system:

- Cleaning the windshield
- Driving through a car wash
- No rain present

Brightness Control

Adjusting the Instrument Panel Brightness

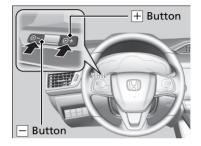

When the power mode is in ON, you can use the + or - button to adjust instrument panel brightness.

Brighten: Press the + button. **Dim:** Press the - button.

You will hear a beep when the brightness reaches minimum or maximum. Several seconds after adjusting the brightness, you will be returned to the previous display.

■ Brightness level indicator

The brightness level is shown on the display while you are adjusting it.


■ Adjusting the Instrument Panel Brightness

Instrument panel brightness varies, depending on whether the exterior lights are on or off. The instrument panel dims to reduce glare when they are on.


When it is bright outside and the headlight integration with the wiper is activated, the instrument panel brightness does not change.

To cancel the reduced instrument panel brightness when the exterior lights are on, press the $\boxed{+}$ button until the brightness display is up to max, the beeper sounds.

The brightness can be set differently for when the exterior lights are on, and when they are off.

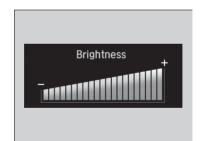

Adjusting the Head-Up Display Brightness

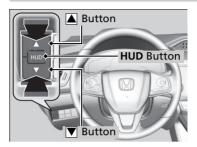

When the head-up display is on, press and hold the **HUD** button until its brightness level indicator on the driver information interface.

Brighten: Press the **b**utton.

Dim: Press the **▼** button.

The driver information interface will return to its original state several seconds after adjusting the brightness.




■ Brightness level indicator

The brightness level is shown on the driver information interface while you are adjusting it.

■ Adjusting the Head-Up Display Brightness

The head-up display automatically adjusts the brightness depending on the ambient light.

Rear Defogger/Heated Door Mirror Button

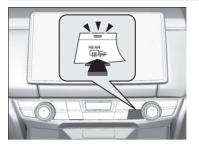

Press the rear defogger and heated door mirror button to defog the rear window and mirrors when the power mode is in ON.

The rear defogger and heated door mirror automatically switches off after 10-30 minutes depending on the outside temperature.

However, if the outside temperature is 32°F (0°C) or below, it does not automatically switch off.

■ Rear Defogger/Heated Door Mirror Button

This system consumes a lot of power, so turn it off when the window has been defogged.

Also, do not use the system for a long time while the power system is stopped. This may weaken the 12-volt battery, making it difficult to turn the power system on.

When the power mode is set to ON and the outside temperature is below 41°F (5°C), the heated door mirror may automatically activate for 10 minutes.

Driving Position Memory System

You can store two driver's seat with the driving position memory system.

When you unlock and open the driver's door with a remote transmitter, or smart entry system, the seat adjusts automatically to one of the two preset positions.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.




□ Driving Position Memory System

Using the audio/information screen, you can disable the automatic seat adjustment function.

Customized Features P. 300

Continued 167

Storing a Position in Memory

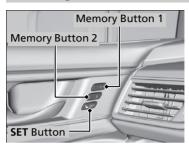


- **1.** Set the power mode to ON. Adjust the driver's seat to the desired position.
- 2. Press the **SET** button.
 - ➤ You will hear the beeper, and the memory button indicator light will blink.
- **3.** Press and hold memory button 1 or 2 within five seconds of pressing the **SET** button.
 - ➤ Once the seat position has been memorized, the indicator light on the button you pressed stays on and you will hear the double-beep.

Storing a Position in Memory

After you press the **SET** button, the storing operation will be canceled when:

- You do not press the memory button within five seconds.
- You readjust the seat position before the doublebeep.
- You set the power mode to any position except ON.

■ Recalling the Stored Position

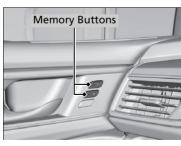

- **1.** Put the transmission into **P**.
- 2. Apply the parking brake.
- **3.** Press a memory button (1 or 2).
 - You will hear the beeper, and the indicator light will blink.

The seat will automatically move to the memorized position. When it has finished moving, you will hear the beeper, and the indicator light stays on.

■ Recalling the Stored Position

The seat will stop moving if you:

- Press the **SET** button or memory button 1 or 2.
- Adjust the seat position.
- Put the transmission into a position other than P.

Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.



- **1.** Push the steering wheel adjustment lever down.
 - ► The steering wheel adjustment lever is under the steering column.
- **2.** Move the steering wheel up or down, and in or out.
 - ► Make sure you can see the instrument panel gauges and indicators.
- **3.** Pull the steering wheel adjustment lever up to lock the steering wheel in position.
 - ➤ After adjusting the position, make sure you have securely locked the steering wheel in place by trying to move it up, down, in, and out.

∑Adjusting the Steering Wheel

AWARNING

Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.


Adjust the steering wheel only when the vehicle is stopped.

Adjusting the Mirrors

Interior Rearview Mirror

Adjust the angle of the rearview mirror when you are sitting in the correct driving position.

■ Automatic Dimming Rearview Mirror

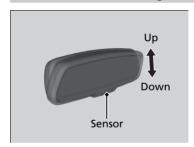

When you are driving after dark, the automatic dimming rearview mirror reduces the glare from headlights behind you, based on inputs from the mirror sensor. This feature is always active.

■ Adjusting the Mirrors

Keep the inside and outside mirrors clean and adjusted for best visibility.


Adjust the mirrors before you start driving.

Front Seats P. 172

■ Automatic Dimming Rearview Mirror

The auto dimming function cancels when the transmission is in $\boxed{\textbf{R}}$.

Power Door Mirrors

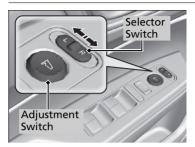

You can adjust the door mirrors when the power mode is in ON.


■ Mirror position adjustment

L/R selector switch: Select the left or right mirror. After adjusting the mirror, return the switch to the center position.

Mirror position adjustment switch: Press the switch left, right, up, or down to move the mirror.

Adjusting the Seats


Front Seats

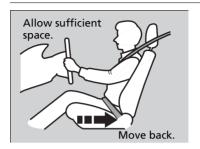

Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright, well back in the seat and be able to adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted in a similar manner, so that it is as far back from the front airbag in the dashboard as possible.

Adjusting the Seat Positions

■ Adjusting the front power seats

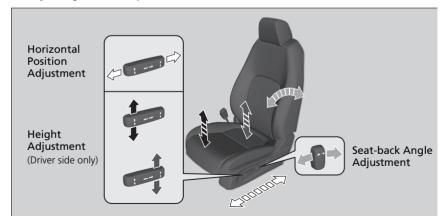

■ Adjusting the Seats

AWARNING


Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.

Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

The National Highway Traffic Safety Administration recommends that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest

Always make seat adjustments before driving.

Adjusting the Seat-Backs

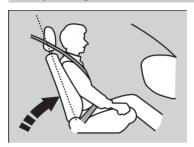

Adjust the driver's seat-back to a comfortable, upright position, leaving ample space between your chest and the airbag cover in the center of the steering wheel.

The front seat passenger should also adjust their seat-back to a comfortable, upright position.

Reclining a seat-back so that the shoulder part of the belt no longer rests against the occupant's chest reduces the protective capability of the belt. It also increases the chance of sliding under the belt in a crash and being seriously injured. The farther a seat-back is reclined, the greater the risk of injury.

∑Adjusting the Seat-Backs

AWARNING

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position, and sit well back in the seat.


Do not put a cushion, or other object, between the seat-back and your back. Doing so may interfere with proper seat belt or airbag operation.

If you cannot get far enough away from the steering wheel and still reach the controls, we recommend that you investigate whether some type of adaptive equipment may help.


Head Restraints

Your vehicle is equipped with head restraints in all seating positions.

Adjusting the Front Head Restraints Positions

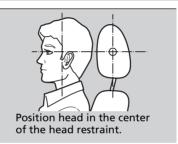

Head restraints are most effective for protection against whiplash and other rearimpact crash injuries when the center of the back of the occupant's head rests against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.

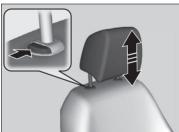

To raise the head restraint: Pull it upward.

To lower the head restraint:

Push it down while pressing the release button.

➤ Head Restraints

AWARNING

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

In order for the head restraint system to work properly:

- Do not hang any items on the head restraints, or from the restraint legs.
- Do not place any objects between an occupant and the seat-back.
- Install each restraint in its proper location.

Changing the Rear Center Seat Head Restraint Positions



A passenger sitting in the center back seating position should adjust the height of their head restraint to an appropriate position before the vehicle begins moving.

To raise the head restraint:

Pull it upward.

To lower the head restraint:

Push it down while pressing the release button.

Front and rear center head restraints

■ Removing and Reinstalling the Head Restraints

Head restraints can be removed for cleaning or repair.

To remove a head restraint:

Pull the restraint up as far as it will go. Then push the release button, and pull the restraint up and out.

To reinstall a head restraint:

Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

■ Removing and Reinstalling the Head Restraints

AWARNING

Failure to reinstall, or correctly reinstall, the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

Maintain a Proper Sitting Position

After all occupants have adjusted their seats and head restraints, and put on their seat belts, it is very important that they continue to sit upright, well back in their seats, with their feet on the floor, until the vehicle is safely parked and the power system is off.

Sitting improperly can increase the chance of injury during a crash. For example, if an occupant slouches, lies down, turns sideways, sits forward, leans forward or sideways, or puts one or both feet up, the chance of injury during a crash is greatly increased.

In addition, an occupant who is out of position in the front seat can be seriously or fatally injured in a crash by striking interior parts of the vehicle or being struck by an inflating front airbag.

Maintain a Proper Sitting Position

AWARNING

Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

Armrest

■ Using the Front Seat Armrest



The console lid can be used as an armrest.

■ Using the Rear Seat Armrest



Pull down the armrest in the center backrest.

Interior Lights/Interior Convenience Items

Interior Lights

■ Interior Light Switches



ON

The interior lights come on regardless of whether the doors are open or closed.

■ Door activated

The interior lights come on in the following situations:

- When any of the doors are opened.
- You unlock the driver's door.
- When the power mode is set to VEHICLE OFF (LOCK).

■ OFF

The interior lights remain off regardless of whether the doors are open or closed.

■Interior Light Switches

In the door activated position, the interior lights fade out and go off about 30 seconds after the doors are closed.

The lights go off after about 30 seconds in the following situations:

- When you unlock the driver's door but do not open it.
- When you set the power mode to VEHICLE OFF (LOCK) but do not open a door.

You can change the interior lights dimming time.

Customized Features P. 300


The interior lights go off immediately in the following situations:

- When you lock the driver's door.
- When you close the driver's door in ACCESSORY mode.
- When you set the power mode to ON.

To avoid draining the 12-volt battery, do not leave the interior light on for an extended length of time when the power system is off.

If you leave any of the doors open in VEHICLE OFF (LOCK) mode, the interior lights go off after about 15 minutes.

■ Map Lights

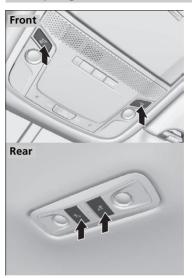

The map lights can be turned on and off by pressing the $\overline{\mathscr{H}}$ (map light) button.

Map Lights

When the interior light switch is in the door activated position and any door is open, the rear map light will not go off when you press the (map light) button.

Interior Convenience Items

■ Glove Box



Press the release button to open the glove box.

Solve Box

AWARNING

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.


Always keep the glove box closed while driving.

The glove box light comes on when the parking lights are on.

■ Console Compartment




Pull the handle to open the console compartment.

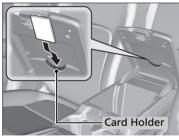

You can use the card holder located in the console compartment lid.


■ Beverage Holders

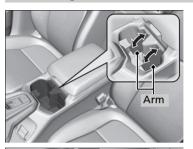

■ Front seat beverage holders

The beverage holders have two bases, an adjustable upper base and a fixed lower base.

For short cups, flip the upper base into position by lowering the arm. For tall cups, reverse the procedure.



Are located on the both of the front and rear door side pockets.



NOTICE

Spilled liquids damage the upholstery, carpeting, and electrical components in the interior.

Be careful when you are using the beverage holders. Hot liquid can scald you.







■ Rear seat beverage holders

Pull down the armrest in the center backrest and open the lid to use it.

Accessory Power Sockets

The accessory power sockets can be used when the power mode is in ACCESSORY or ON.



■ Accessory power socket (console panel)
Open the cover to use it.



■ Accessory power socket (back of the console compartment)

Open the cover to use it.

■ Accessory Power Sockets

NOTICE

Do not insert an automotive type cigarette lighter element. This can overheat the power socket.

The accessory power sockets are designed to supply power for 12-volt DC accessories that are rated 180 watts (15 amps) or less.

To prevent 12-volt battery drain, only use the power socket with the power system on.

■ Coat Hook



There is a coat hook on the rear left grab handle. Pull it down to use it.

■ Under-Floor Storage Area



Pull up the cargo area floor lid.

○ Coat Hook

The coat hook is not designed for large or heavy items.

■ Seat Heaters



The power mode must be in ON to use the seat heaters.



Press the seat heater button:
Once - The HI setting (three indicators on)
Twice - The MID setting (two indicators on)
Three times - The LO setting (one indicator on)
Four times - The OFF setting (no indicators on)

Seat Heaters

AWARNING

Heat induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use seat heaters.

Do not use the seat heaters even in LO when the power system is off. Under such conditions, the 12-volt battery may be weakened, making the power system difficult to start.

After a certain period of time, the strength setting for the seat heaters will automatically be reduced by one level at a time until the seat heaters shuts off. The elapsed time varies according to the interior environment.

■ Sunglasses Holder



To open the sunglasses holder, press and release the indent. To close, press it again until it latches.

You can store eyeglasses and other small items in this holder.

Sunglasses Holder

Keep the holder closed while driving except when accessing stored items.

Climate Control System

Using Automatic Climate Control

The automatic climate control system maintains the interior temperature you select. The system also selects the proper mix of heated or cooled air that raises or lowers the interior temperature to your preference as quickly as possible.

Press the **CLIMATE** button to display **A/C**, **MODE**, fan control information on the audio/information screen to operate manually. Select icon to turn on or off **A/C**, change the vent mode, or change the fan speed.


If any buttons/icons are pressed while using the climate control system in auto, the function of the button/icon that was pressed will take priority. The **AUTO** indicator will go off, but functions unrelated to the button/icon that was pressed will be controlled automatically.

To prevent cold air from blowing in from outside, the fan may operate at low speed for a while after the **AUTO** button has been pressed.

If the interior is very warm, you can cool it down more rapidly by partially opening the windows, turning the system on auto, and setting the temperature to low. Change the fresh air mode to recirculation mode until the temperature cools down.

When you set the temperature to the lower or upper limit, **Lo** or **Hi** is displayed.

Pressing the **SON/OFF** button switches the climate control system between on and off. When turned on, the system returns to your last selection.

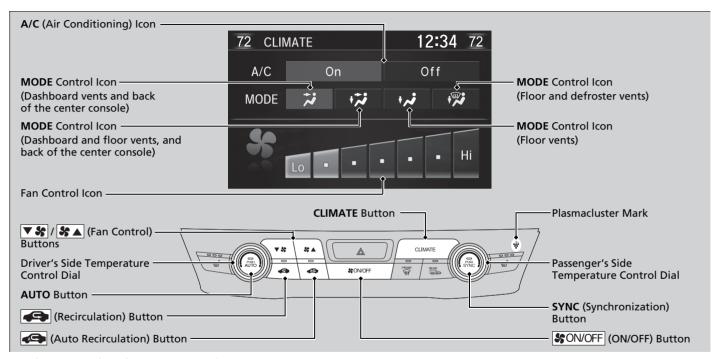

Use the system when the power system is on.

- 1. Press the **AUTO** button.
- **2.** Adjust the interior temperature using the driver's side or passenger's side temperature control dial.
- **3.** Press the **\$ON/OFF** (ON/OFF) button to cancel.

■ Switching the vent mode



- 1. Press the **CLIMATE** button.
- 2. Select a desired vent mode icon.

■ A/C on and off



- 1. Press the **CLIMATE** button.
- 2. Select On or Off.

When you unlock the doors with your remote, the driver's ID (**DRIVER 1** or **DRIVER 2**) is detected, and the climate control settings are turned to the respective mode automatically when you set the power mode to ON.

The High Voltage battery level being low may reduce the climate control system performance.

If any icons are not selected within several seconds after the display is switched, it returns to the previous screen. In this case, press the **CLIMATE** button again.

You can change the length of time the climate control display stays on.

Customized Features P 300

■ Switching between the recirculation and fresh air modes

Press the (recirculation) or (auto recirculation) button to switch the mode depending on environmental conditions.

Recirculation mode (indicator on): Recirculates air from the vehicle's interior through the system.

Auto mode (indicator on): Automatically switch between the recirculation and fresh air modes most suitable to environmental conditions. If the ambient temperature is low, the mode may not change to recirculation to keep the windows from fogging up.


Fresh air mode (indicators of recirculation and auto recirculation off): Maintains outside ventilation. Keep the system in fresh air mode in normal situations.

Switching between the recirculation and fresh air modes

While the climate control system is in auto, indicator comes on.




Defrosting the Windshield and Windows

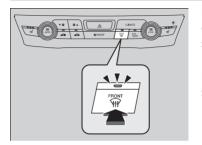

Pressing the witton turns the air conditioning system on and automatically switches the system to fresh air mode.

Press the with button again to turn off, the system returns to the previous settings.

■ To rapidly defrost the windows

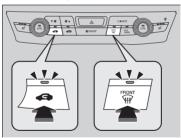

- **1.** Press the button.
- **2.** Press the button.

Defrosting the Windshield and Windows

For your safety, make sure you have a clear view through all the windows before driving.

Do not set the temperature near the upper or lower limit.

When cold air hits the windshield, the outside of the windshield may fog up.


If the side windows fog up, adjust the vents so that the air hits the side windows.

∑To rapidly defrost the windows

After defrosting the windows, switch over to fresh air mode or auto mode.

If you keep the system in recirculation mode, the windows may fog up from humidity. This impedes visibility.

Synchronization Mode

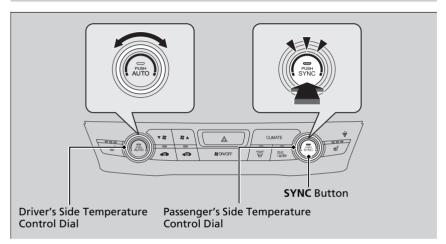

You can set the temperature synchronously for the driver's side and the passenger's side in synchronization mode.

- 1. Press the **SYNC** button.
 - ▶ The system switches to synchronization mode.
- **2.** Adjust the temperature using the driver's side temperature control dial.


To return to dual mode, you can either press the **SYNC** button again or turn the dial of the passenger's side temperature control unit.

Synchronization Mode

When you press the button, the system changes to synchronization mode.

When the system is in dual mode, the driver's side temperature and the passenger's side temperature can be set separately.

■ Plasmacluster Air Purifier

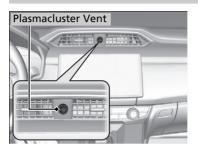

Using air flow generated by the climate control system or the fan blower, the Plasmacluster air purifier helps rid the interior of the vehicle of air-born bacteria and odors as well as inhibit mold growth.


➤ The effectiveness of the purifier is dependent on the condition of the interior and the individuals who use the vehicle.

≫ Plasmacluster Air Purifier

The Plasmacluster name and its mark are registered trademarks of Sharp Inc.

■ Turning the Climate Control System On and Off with the Remote

You can operate the climate control system from outside the vehicle.

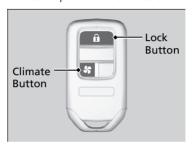

■ To turn on the system

- 1. Press the lock button.
 - ► Some exterior lights flash.
- **2.** Within about five seconds, press and hold the climate button.
 - ► Some exterior lights flash.
 - ➤ After about five seconds, some exterior lights flash six times and the climate control system is turned on.

■ To turn off the system

Press and hold the climate button.

Some exterior lights flash and the climate control system is turned off.

>> Turning the Climate Control System On and Off with the Remote

AWARNING

Make sure that no one is inside the vehicle when you use the remote climate control system. After a certain period of time has elapsed, the system shuts off temporarily. During this time, the interior of the vehicle may heat up or cool down depending on ambient temperatures. If a child is left inside the vehicle, extreme temperature exposure can result in death or serious injury of the child.


The climate control system automatically turned off when any of the following conditions are met.

- The system has been operated for more than 30 minutes
- The High Voltage battery level becomes low.
- A door or the hood is opened.
- The power mode is set to any mode other than OFF.
- The brake pedal is being depressed.


The climate control system does not operate with a remote transmitter when any of the following conditions are met.

- A door or the hood is not closed.
- The power mode is set to any mode other than OFF.
- The brake pedal is being depressed.
- The High Voltage battery level is low.

Automatic Climate Control Sensors

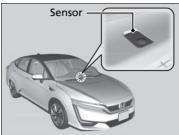

The automatic climate control system is equipped with sensors. Do not cover or spill any liquid on them.

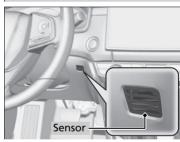



About Your Audio System	198
USB Ports	199
Audio System Theft Protection	200
Audio Remote Controls	201
Audio System Basic Operation	204
Audio/Information Screen	205
Adjusting the Sound	229
Display Setup	230
Voice Control Operation	232
Playing AM/FM Radio	236
Playing SiriusXM® Radio	240

Playing an iPod	248
Song By Voice™ (SBV)	251
Playing Pandora®	
Playing a USB Flash Drive	257
Playing Bluetooth® Audio	260
HondaLink®	262
Wi-Fi Connection	267
Siri® Eyes Free	269
Apple CarPlay™	
Android Auto™	
udio Error Messages	277
-	


General Information on the Audio		
System	281	
Customized Features	.300	
HomeLink® Universal Transceiver	.326	
Bluetooth® HandsFreeLink®	329	

Audio System

About Your Audio System

The audio system features AM/FM radio and SiriusXM® Radio service. It can also play USB flash drives, and iPod®, iPhone® and *Bluetooth*® devices.

You can operate the audio system from the buttons and switches on the panel, the remote controls on the steering wheel, or the icons on the touchscreen interface.

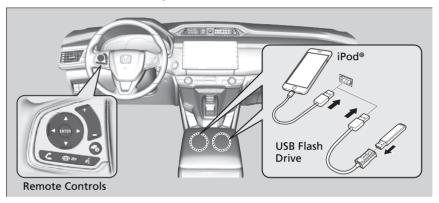

SiriusXM® Radio is available on a subscription basis only. For more information on SiriusXM® Radio, contact an authorized Honda Clarity Fuel Cell dealer.

☑ General Information on the Audio System P. 281


SiriusXM® Radio is available in the United States and Canada, except Hawaii, Alaska, and Puerto Rico.

SiriusXM® is a registered trademark of SiriusXM Radio, Inc.

iPod®, iPhone® and iTunes® are trademarks of Apple Inc.

State or local laws may prohibit the operation of handheld electronic devices while operating a vehicle.

USB Ports

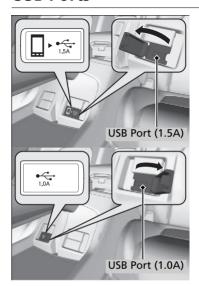

Install the device USB connector or the USB flash drive to the USB port.

- ► The USB port (1.5A) is for charging devices, playing audio files and connecting compatible phones with Apple CarPlay or Android Auto.
- ► The USB port (1.0A) is for playing audio files on the USB flash drive and connecting a cellular phone and charging device.

≫USB Ports

- Do not leave the iPod or USB flash drive in the vehicle. Direct sunlight and high temperatures may damage it.
- We recommend using an extension cable with the USB port.
- Do not connect the iPod or USB flash drive using a hub.
- Do not use a device such as a card reader or hard disk drive, as the device or your files may be damaged.
- We recommend backing up your data before using the device in your vehicle.
- Displayed messages may vary depending on the device model and software version.

If the audio system does not recognize the iPod, try reconnecting it a few times or reboot the device. To reboot, follow the manufacturer's instructions provided with the iPod or visit www.apple.com/ipod.

USB charge

The USB port can supply up to 1.0A or 1.5A of power. It does not output 1.0A or 1.5A unless requested by the device.

For amperage details, read the operating manual of the device that needs to be charged.

Turn the power mode to ACCESSORY or ON first.

Under certain conditions, a device connected to the port may generate noise in the radio you are listening to

Audio System Theft Protection


The audio system is disabled when it is disconnected from the power source, such as when the 12-volt battery is disconnected or goes dead. In certain conditions, the system may display a code entry screen. If this occurs, reactivate the audio system.

■ Reactivating the audio system

- 1. Set the power mode to ON.
- 2. Turn on the audio system.
- **3.** Select and hold the audio system power icon for more than two seconds.
 - ▶ The audio system is reactivated when the audio control unit establishes a connection with the vehicle control unit. If the control unit fails to recognize the audio unit, you must go to an authorized Honda Clarity Fuel Cell dealer and have the audio unit checked.

Audio Remote Controls

Allow you to operate the audio system while driving. The information is shown on the driver information interface.

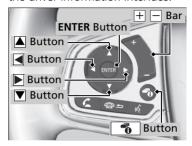

▲ ▼ Buttons

Press or to cycle through the audio mode as follows:

FM—>AM—>SiriusXM®—>USB—>iPod ->Bluetooth® Audio—>Pandora®—>Apple CarPlay/Android Auto

Some modes appear only when an appropriate device or medium is used.

Depending on the *Bluetooth*® device you connect, some functions may not be available.

Press the (Amg-up/back) button to go back to the previous command or cancel a command.

Press the button to switch display. Switching the Display P. 205

ENTER Button

- When listening to the radio and SiriusXM®
- **1.** Press **ENTER** to switch the display to a preset list you stored in the preset buttons.
- **2.** Press \triangle or $\overline{\lor}$ to select a preset, then press **ENTER**.
- When listening to a USB flash drive
- 1. Press ENTER to display the folder list.
- **2.** Press ▲ or ▼ to select a folder.
- **3.** Press **ENTER** to display a list of tracks in that folder.
- **4.** Press ▲ or ▼ to select a track, then press **ENTER**.

- When listening to an iPod
- 1. Press ENTER to display the iPod music list.
- **2.** Press ▲ or ▼ to select a category.
- **3.** Press **ENTER** to display a list of items in the category.
- **4.** Press ▲ or ▼ to select an item, then press **ENTER**.
 - ▶ Press **ENTER** and press ▲ or ▼ repeatedly until the desired mode you want to listen to is displayed.
- When listening to Pandora®
- **1.** Press **ENTER** to display the station list.
- **2.** Press \triangle or $\overline{\lor}$ to select an item, then press **ENTER**.
- When listening to Bluetooth® Audio
- **1.** Press **ENTER** to display the track list.
- **2.** Press ▲ or ▼ to select a track, then press **ENTER**.

+ - (Volume) Bar

Press +: To increase the volume.

Press —: To decrease the volume.

■ Buttons

• When listening to the radio

Press To select the next preset radio station.

Press To select the previous preset radio station.

Press and hold To select the next strong station.

Press and hold : To select the previous strong station.

• When listening to an iPod, USB flash drive, or Bluetooth® Audio

Press To skip to the next song.

Press To go back to the beginning of the current or previous song.

• When listening to a USB flash drive

Press and hold To skip to the next folder.

Press and hold To go back to the previous folder.

• When listening to Pandora®


Press To skip to the next track.

Press and hold To select the next station.

Press and hold To select the previous station.

Audio System Basic Operation

To use the audio system function, the power mode must be in ACCESSORY or ON.

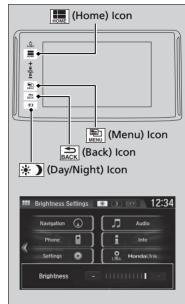

- : Select to go to the home screen.
 - Using the audio/information screen
 P. 206
- Select to display available options including **Sound**, **View Radio Text**, **Music Search**, and playback modes.
- Select to go back to the previous screen when the icon is illuminated.
- (Day/Night): Select to change the audio/information screen brightness.
 Select) once and select or + to make an adjustment.
 - ► Each time you select ※), the mode switches among the daytime mode, nighttime mode and off mode.

Audio Menu Items

- **Station List** P. 237, 238
- Music Search List P. 249, 258
- **Scan** P. 238, 239, 247, 259
- **▶ Play Mode** P. 250, 259


Audio/Information Screen

Displays the audio status and wallpaper. From this display, you can go to various setup options.

■ Switching the Display

■ Using the 🕝 button

Press the (display) button to change the display.

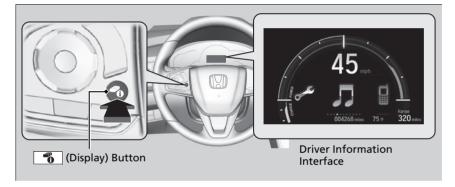


≥ Using the **→** button

You can edit, add, and delete the contents shown on the driver information interface.

Customizing the Meter P. 212

■ Using the audio/information screen

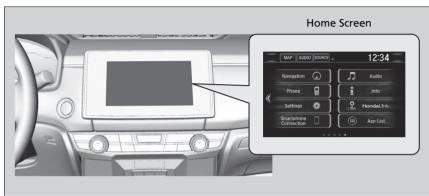

Select to go to the home screen.

Select Phone, Info, Audio, Settings, Navigation, HondaLink, Smartphone Connection (Apple CarPlay, Android Auto), App List, or Instrument Panel.

■ Phone

Displays the HFL information.

Bluetooth® HandsFreeLink® P. 329

■ Info

Displays **Trip Computer** or **Clock/Wallpaper**. Select on the **Info Menu** screen to see all available options: **Trip Computer**, **Voice Info, Clock/Wallpaper**, **System/Device Information** and **Vehicle energy**.

Trip Computer:

- **Current Drive** tab: Displays the current trip information.
- **History of Trip A** tab: Displays information for the three previous drives. The information is stored every time you reset Trip A.

To delete the history manually, select **Delete history** on the **History of Trip A** tab. The confirmation message appears on the screen, then select **Yes**.

Voice Info: Displays a list of all voice commands.

Clock/Wallpaper: Displays the clock and wallpaper.

System/Device Information:

- **System Info**: Displays the software version of the audio system.
- **USB Info**: Displays the memory usage of the USB device.

Vehicle energy:

Displays the energy flow screen.

Energy flow screen P. 209

■ Audio

Displays the current audio information.

Touchscreen operation

- Use simple gestures including touching, swiping and scrolling to operate certain audio functions.
- Some items may be grayed out during driving to reduce the potential for distraction.
- You can select them when the vehicle is stopped or use voice commands.
- Wearing gloves may limit or prevent touchscreen response.

You can change the touchscreen sensitivity setting.

Customized Features P. 300

■ Settings

Enters the customizing menu screen.

■ Customized Features P. 300

■ Navigation

Displays the navigation screen.

≥ Refer to the Navigation System Manual

■ HondaLink®

Displays the Hondalink® screen.

➡ HondaLink® P. 262

■ Smartphone Connection

Displays the Apple CarPlay or Android Auto.

■ Apple CarPlay P. 270

■ Android Auto™ P. 273

■ App List

Adds or removes apps or widgets on the Home screen.


B Home Screen P. 218

■ Instrument Panel

Selects from three customizable settings for the driver information interface.

■ Energy flow screen

The energy flow screen shows the vehicle's power flow, average fuel economy, and range.

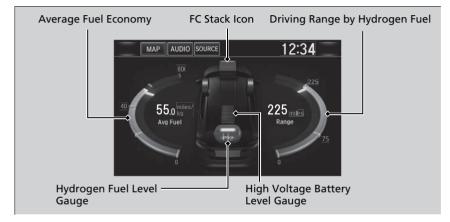

Energy flow screen

While the vehicle is stationary with the FC system operating, the following may appear on the display.



Shows the FC system power flow, indicating what is supplying power to the vehicle and/or charging the battery.

► The indicator for the power transmission appears in blue, and for the battery charging operation, in green.

Display	Color of indicators	Vehicle's Condition
Hiz	Blue	While Driving: Power is being supplied by the FC system.
Hz	Blue	While Driving: Power is being supplied by the High Voltage battery.
Hz	Blue	While Driving: Power is being supplied by the High Voltage battery and FC system.

Display	Color of indicators	Vehicle's Condition
THE STATE OF THE S	Green	While Decelerating: High Voltage battery is being charged by regenerative braking and FC system.
	Blue and Green	While Driving: Power is being supplied and the High Voltage battery is being charged by the FC system.
	Green	When Stopped: The vehicle is idle (standby state) and the High Voltage battery is being charged by the FC system.

■ Changing the Home Screen Icon Layout



- 1. Select .
- 2. Select and hold an icon.
 - ► The screen switches to the customization screen.
- **3.** Drag and drop the icon to where you want it to be.
- 4. Select OK.
 - ► The screen will return to the home screen.

Customizing the Meter

Instrument Panel Configuration 1 12:34

Swap Config

Add

Edit Order

Delete

You can edit, add, or delete the meter contents on the driver information interface.

- 1. HOME
- 2. Settings
- 3. System
- 4. Configuration of Instrument Panel

■ Customizing the Meter


You can store up to three customized configurations. To select or customize a configuration, press **Swap Config.**.

When you select **Swap Config.** during customization, the settings you changed will be saved.

When you select during customization, the settings you changed will not be saved and you will be returned to the **Configuration of Instrument Panel** screen.

■ Editing order

To change the order of the icons on the driver information interface, first select:

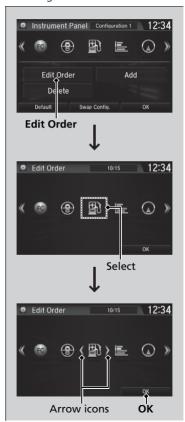

1. Edit Order

- 2. Select the icon you want to move.
 - You will see arrows on both sides of the selected icon.

- **3.** Select the left or right arrow repeatedly to move the icon to your desired position.
- 4. Select OK.
 - ➤ The screen will return to the Configuration of Instrument Panel screen.

Editing order

You can use an alternative method to change the order of the icons. First select:

- 1. Edit Order
- 2. Select and hold the icon you want to move.
- 3. Drag and drop the icon to where you want it to be.
- 4. Select OK.
- The screen will return to the Configuration of Instrument Panel screen.

■ Adding contents

You can add icons to the driver information interface. To add icons, first select:



1. Add

- 2. Select an icon you want to add.
 - You will see a plus mark on the upper right hand corner of the selected icon.

- 3. Select OK.
 - ➤ The screen will return to the Configuration of Instrument Panel screen.


■ Adding contents

Icons that are grayed out cannot be selected.

If an icon has a plus mark in the upper-right corner, it means that the icon has already been added.

■ Deleting contents

To delete contents on the driver information interface, first select:

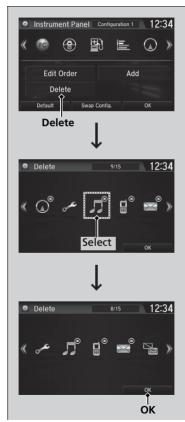

1. Delete

- 2. Select an icon you want to delete.
 - ► The icon with an X on the upper right hand corner can be deleted.

- 3. Select OK.
 - ➤ The screen will return to the Configuration of Instrument Panel screen.

Deleting contents

You can also delete contents by selecting:

- 1. Delete or Edit Order
- 2. Select and hold an icon you want to delete.
- 3. Drag and drop the icon to the trash icon.
- 4. Select **OK**.
- The screen will return to the Configuration of Instrument Panel screen.

12:34

Wallpaper Setup

You can change, store, and delete the wallpaper on the audio/information screen.

■ Import wallpaper

You can import up to five images, one at a time, for wallpaper from a USB flash drive.



1. Connect the USB flash drive to the USB port.

USB Ports P. 199

- 2. Select Settings.
- 3. Select Clock.
- **4.** Select **Clock/Wallpaper Type**, then open the **Wallpaper** tab.
- 5. Select Add New.
 - ▶ The picture name is displayed on the list.
- **6.** Select a desired picture.
 - ➤ The preview is displayed on the left side on the screen.
- **7.** Select **Start Import** to save the data.
 - ► The display will return to the wallpaper list.

≫Wallpaper Setup

The wallpaper you set up on **Clock Wallpaper/Type** cannot be displayed on the driver information interface.

- When importing wallpaper files, the image must be in the USB flash drive's root directory.
 Images in a folder cannot be imported.
- The file name must be fewer than 64 characters.
- The file format of the image that can be imported is BMP (bmp) or JPEG (jpq).
- The individual file size limit is 5 MB.
- The maximum image size is 4,096 × 4,096 pixels. If the image size is less than 800 × 480 pixels, the image is displayed in the middle of the screen with the extra area appearing in black.
- If the USB flash drive does not have any pictures, the **No files detected** message appears.

After changing the screen interface design, you can change the wallpaper by following procedure.

- 1. Select
- 2. Select and hold empty space on the home screen. The pop-up menu appears on the screen.
- 3. Select Change wallpaper.
- 4. Select Gallery, Live wallpapers, or Wallpapers.



Add New Wallpaper

■ Select wallpaper

- 1. Select Settings.
- 2. Select Clock.
- **3.** Select **Clock/Wallpaper Type**, then open the **Wallpaper** tab.
 - ▶ The screen changes to the wallpaper list.
- 4. Select a desired wallpaper.
 - ▶ The preview is displayed on the left side on the screen.
 - ► The pop-up menu appears on the screen.
- 5. Select Set.
 - ► The display will return to the wallpaper list.

■ To view wallpaper once it is set

- 1. Select .
- 2. Select Info.
- 3. Select 🖳
- 4. Select Clock/Wallpaper.

■ Delete wallpaper

- 1. Select Settings.
- 2. Select Clock.
- **3.** Select **Clock/Wallpaper Type**, then open the **Wallpaper** tab.
 - ► The screen changes to the wallpaper list.
- 4. Select a wallpaper that you want to delete.
 - ▶ The preview is displayed on the left side on the screen.
 - ► The pop-up menu appears on the screen.
- 5. Select **Delete**.
 - ► A confirmation message appears on the screen.
- **6.** Select **Yes** to delete completely.
 - ► The display will return to the wallpaper list.

Wallpaper Setup

From the pop-up menu, select **Preview** to see a preview at full-size screen.




To go back to the previous screen, select **OK**, or select $\frac{\mathbf{OK}}{\mathbf{BACK}}$.

When the file size is large, it takes a while to be previewed.

To delete all wallpapers you add, select **Delete All**, then **Yes**.

■ Home Screen

■ To change to a next screen

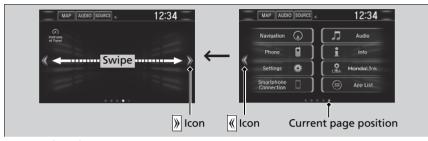

Selecting (or), or swiping the screen left or right changes to the next screen.

The home screen has 5 pages (fixed). You cannot add any more pages.

Select to go directly back to the first page of the home screen from any page.

■ To use apps or widgets



- 1. Select
- 2. Select App List.
 - ► The **App** screen appears.
- 3. Select the app or widget you want to use.

Preinstall app list:

- **Calculator**: Displays Calculator.
- Downloads: Displays the data downloaded from the web browser and so on.
- **App Installer**: Check with a Honda dealer for apps that are available for installation.

∑To use apps or widgets

Select and hold a selected app or widget to add that app's or widget's shortcut on the home screen.

Pre-installed apps may not start up normally. If this occurs, you need to reset the system.

Defaulting All the Settings P. 325

If you perform **Factory Data Reset**, it may reset all the settings to their factory default.

▶ Defaulting All the Settings P. 325 In case those apps still do not startup normally even after Factory Data Reset, contact an authorized Honda Clarity Fuel Cell dealer.

Do not install apps other than those confirmed by a Honda dealer. Installation of unauthorized apps may introduce data corruption risks to your vehicle's information and your privacy.


You can delete user installed apps by the following procedure.

- 1. Select
- 2. Select Settings.
- 3. Select System.
- 4. Select the Others tab.
- 5. Select **Detail Information**.
- 6. Select Apps.
- 7. Select an app that you want to delete.
- 8. Select **Delete**.

Pre-installed apps cannot be deleted.

■ To add app or widget icons on the home screen

App or widget icons can be added on the home screen.

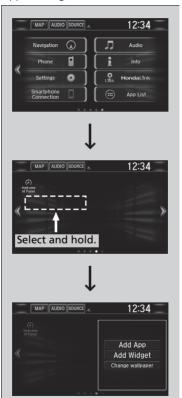


- 1. Select .
- **2.** Select **《**.
- **3.** Select and hold empty space on the home screen.
 - ► The pop-up menu appears on the screen.
- 4. Select Add App or Add Widget.
 - ► The **App/Widget** screen appears.



- **5.** Select and hold an app or widget icon you want to add.
 - ► The screen switches to the customization screen
- **6.** Drag and drop the icon to where you want it to be.
- 7. Select OK.
 - ► The screen will return to the home screen.

■ To move icons on the home screen

You can change location on the home screen.

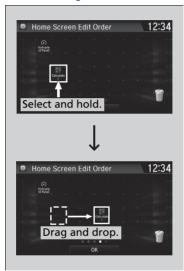

- 1. Select and hold an icon.
 - The screen switches to the customization screen.
- **2.** Drag and drop the icon to where you want it to be.
- 3. Select OK.
 - ► The screen will return to the home screen.

∑To move icons on the home screen

You can also move the **Phone**, **Info**, **Audio**, **Settings**, **Navigation**, **HondaLink**, **Smartphone Connection**, **App List**, and **Instrument Panel** icons in the same manner.

■ To remove icons on the home screen

You can delete the icons on the home screen.



- 1. Select and hold an icon.
 - ► The screen switches to the customization screen.
- **2.** Drag and drop the icon you want to remove to the trash icon.
 - ► The icon is removed from the home screen.
- 3. Select OK.
 - ► The screen will return to the home screen.

∑To remove icons on the home screen

You cannot delete the **Phone**, **Info**, **Audio**, **Settings**, **Navigation**, **HondaLink**, **Smartphone Connection**, **App List**, and **Instrument Panel** icons.

Apps or widgets will not be deleted by deleting the icon on the home screen.

■ To change the home screen wallpaper

You can change a wallpaper of the home screen.




- **1.** Select and hold empty space on the home screen.
 - ► The pop-up menu appears on the screen.
- 2. Select Change wallpaper.
 - ► The pop-up menu appears on the screen.



- 3. Select an app for selecting wallpapers.
- **4.** Select the wallpaper you want to change.
- **5.** Select **Set wallpaper**.
 - ► The wallpaper is changed, then the screen will return to the home screen.

■ Status Area

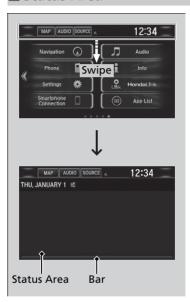

- **1.** Swipe the upper area of the screen.
 - ► The status area appears.
- **2.** Select an item to see the details.
- 3. Select or swipe up the bottom bar to close the area.

■ Changing the Screen Interface

You can change the screen interface design.



- 1. Select .
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Others** tab.
- **5.** Select **Change Skin**.
- **6.** A confirmation message appears on the screen. Select **Yes**.

∑Changing the Screen Interface

After changing the screen interface design, you can change the wallpaper by following procedure.

- 1. Select
- 2. Select and hold empty space on the home screen. The pop-up menu appears on the screen.
- 3. Select Change wallpaper.
- 4. Select Gallery, Live wallpapers, or Wallpapers.

If you change the screen interface, some of the setting items will change.

Customized Features P. 300

■ Menu Customize

You can change menu icons on the right side of **Audio**, **Phone**, and **Info** screen.

12:34 Select and hold Menu Icons To change Menu Icon 12:34 Menu Customize Drag and drop To add 12:34 Menu Customize A Drag and drop

1. Select and hold menu icon.

- **2.** Select **or icon**, then **Audio**, **Phone**, or **Info** from **Menu Customize**.
- **3.** Select and hold the menu icon you want to change, then drag and drop the icon to the bottom.

- **4.** Select and hold the menu icon you want to add, then drag and drop the icon to above.
- **5.** Select **OK**.

You can also use the method below to change menu icon:

Select Settings→System→Home tab→Menu Icon
Position

■ Closing Apps

You can close specific apps running in the background on the system.



- 1. Select and hold
- 2. Select the Active tab.
 - ▶ If you select the **Active/History** tab, you can close the apps that are currently running and delete the app activity history simultaneously.
- **3.** Select an app you want to close.
- 4. Select Clear.
 - ► The display will return to the app list.

○ Closing Apps ○ Cl

If you have a number of apps running in the background and something goes wrong with the audio system, some of those apps may not work properly. If this happens, close all the apps and relaunch the app/apps that you want to use.

To close all apps on the system, select $\mbox{\bf Clear All},$ then $\mbox{\bf Yes}.$

You cannot close the HondaLink® and Garmin apps.

Adjusting the Sound



- 1. Select .
- 2. Select Audio.
- 3. Select 🖳
- 4. Select Sound.



Select a tab from the following choices:

- BAS-MID-TRE: Bass, Middle, Treble
- **FAD-BAL-SUBW:** Fader, Balance, Subwoofer
- **SVC·Neural:** Speed Volume Compensation, DTS Neural Surround™

■ Adjusting the Sound

The SVC has four modes: **Off, Low, Mid,** and **High**. SVC adjusts the volume level based on the vehicle speed. As you go faster, audio volume increases. As you slow down, audio volume decreases.

You can also turn on and off the DTS Neural Surround $^{\text{IM}}$ setting by selecting **Neural** on the audio/information screen.

Display Setup

You can change the brightness or color theme of the audio/information screen.

■ Changing the Screen Brightness



- 1. Select .
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Display** tab.
- 5. Select Display Settings.
- **6.** Select the setting you want.
- 7. Select OK.

■ Changing the Screen's Color Theme




- 1. Select
- 2. Select Settings.
- 3. Select System.
- 4. Select the **Display** tab.
- **5.** Select **Background Color**.
- **6.** Select the setting you want.
- 7. Select OK.

∑Changing the Screen Brightness

You can change the **Contrast** and **Black Level** settings in the same manner.

■ Selecting an Audio Source

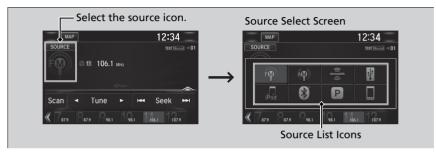

Select the current source icon, then select an icon on the source list to switch the audio source.

■ Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Voice Control Operation

Your vehicle has a voice control system that allows hands-free operation. The voice control system uses the 🖟 (Talk) and 🕿 🗂 (hang-up/back) buttons on the steering wheel and a microphone near the map lights in the ceiling.

■ Voice Recognition

To achieve optimum voice recognition when using the voice control system:

- Make sure the correct screen is displayed for the voice command that you are using.
 - The system recognizes only certain commands. Available voice command P. 233
- Close the windows
- Adjust the dashboard and side vents so air does not blow onto the microphone in the ceiling.
- Speak clearly in a natural speaking voice without pausing between words.
- Reduce any background noise if possible. The system may misinterpret your command if more than one person is speaking at the same time.

When you press the ½ button, a helpful prompt asks what you would like to do. Press and release the ½ button again to bypass this prompt and give a command.

≥ Voice Recognition

The voice control system can only be used from the driver's seat because the microphone unit removes noises from the front passenger's side.

■ Voice Portal Screen



When the [6] (Talk) button is pressed, available voice commands appear on the screen.

For a complete list of commands, say "Voice Help" after the beep or select **Voice Help**.

The system only recognizes the commands on the following pages, at certain screens. Free form voice commands are not recognized.

■ Phone Call

This can be only used when the phone is connected. When the system recognizes the *Phone call* command, the screen will change to the voice recognition screen for phone commands.

- Dial by Number
- Call History
- Redial
- Call <Your contact Name>
- Call <Phone Number>
- Call Police
- Call 911

Phone Call commands are not available if using Apple CarPlay.

■ Music Search

This can be only used when the iPod or USB device is connected.

■ Climate Control

When the system recognizes the *Climate Control* command, the screen will change the dedicated screen to the climate control voice recognition screen.

Climate Control Commands P. 235

■ Audio

When the system recognizes the *Audio* command, the screen will change to the audio voice recognition screen.

- Audio On*1
- Audio Off*1
- Radio FM
- Radio AM
- Radio SXM
- PANDORA
- iPod
- USB
- Other Sources

Pandora® cannot be used while Android Auto is active.

■ Navigation

The screen changes to the navigation screen.

Refer to the Navigation System Manual

■ HondaLink®

This can be only used when the phone is connected.

*1: These commands toggle the function on and off, so the command may not match your intended action.

■ Voice Setting

The screen changes to the **Voice Recog.** tab on the **System Settings** screen.

■ Voice Help

You can see a list of the available commands on the screen.

- Useful Commands
- Phone Commands
- Audio Commands
- On Screen Commands
- Music Search Commands
- General Commands
- Climate Control Commands

Useful Commands

The system accepts these commands on the voice portal top screen.

- Call <Phone Number>
- Call <Your contact Name>
- What time is it?
- What is today's date?

■ Phone Commands

The system accepts these commands on the dedicated screen for the voice recognition of the phone.

- Call by number
- Call by name
- Call <Phone Number>
- Call <Your contact Name>

Audio Commands

The system accepts these commands on the dedicated screen for the voice recognition of the audio.

■ Radio FM Commands

- Radio tune to <87.7-107.9> FM
- Radio tune to <87.7 -107.9> HD <1-8> FM
- Preset <1-12>

■ Radio AM Commands

- Radio tune to <530-1710> AM
- Preset <1-6>

■ Radio SXM Commands

- SXM channel <1-999>
- SXM channel <channel name, category name, traffic and weather city name, sports team name>
- SXM preset <1-12>

■ Pandora Commands

PANDORA play

■ iPod Commands

- iPod play
- iPod play track <1-30>
- Music Search
- What album is this?
- What am I listening to?

■ USB Commands

- USB play
- USB play track <1-30>
- Music Search
- What album is this?
- What am I listening to?

■ Bluetooth® audio Commands

• Bluetooth® audio play

NOTE:

Bluetooth® Audio commands may not work on some phones or Bluetooth® Audio devices.

On Screen Commands

When **On Screen Commands** is selected, the explanation screen is displayed.

Music Search Commands

The system accepts these commands on the **Music Search** screen.

■ Using Song By Voice

Song By VoiceTM is a feature that allows you to select music from your iPod or USB device using Voice Commands. To activate this mode, you must push the talk switch and say: "Music search".

■ Song By Voice Commands

- What am I listening to?
- Who am I listening to?
- Who is this?
- What's playing?
- Who's playing?
- What album is this?

■ Play Commands

- Play artist <Name>
- Play track/song <Name>
- Play album <Name>
- Play genre/category <Name>
- Play playlist <Name>
- Play composer <Name>

■ List Commands

- List artist <Name>
- List album <Name>
- List genre/category <Name>
- List playlist <Name>
- List composer <Name>

General Commands


- What time is it?
- What is today's date?

■ Climate Control Commands

- Climate Control On*1
- Climate Control Off*1
- Fan speed <1-7>
- Temperature max heat
- Temperature max cool
- Temperature <57-87> degrees
- Defrost On*1
- Defrost Off*1
- Air conditioner On*1
- Air conditioner Off*1
- More
- Climate Control Automatic
- Vent
- Dash and floor
- Fan speed up
- Fan speed down
- Floor vents
- Floor and Defrost
- Temperature up
- Temperature down

^{*1:} These commands toggle the function on and off, so the command may not match your intended action.

Playing AM/FM Radio

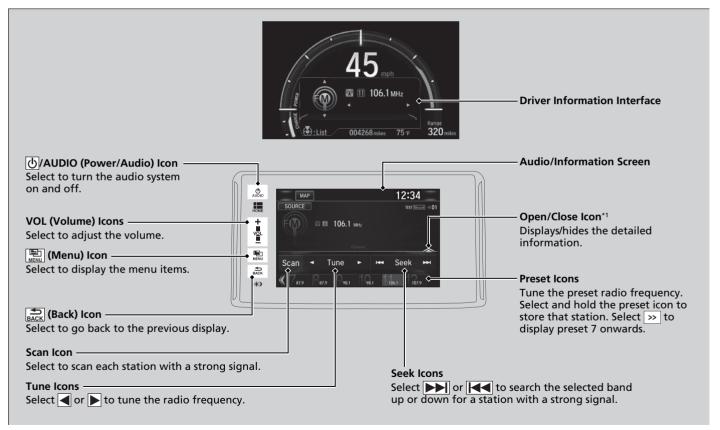

^{*1:}Some or all of the lists may not be displayed.

■ Preset Memory

To store a station:

- 1. Tune to the selected station.
- **2.** Select and hold the preset number for the station you want to store.

You can also store a preset station by the following procedure.

- **1.** Tune to the selected station.
- 2. Select the open/close icon to display a list.
- **3.** Select the **Preset** tab.
- **4.** Select and hold the preset number for the station you want to store.

■ Station List

Lists the strongest stations on the selected band.

- 1. Select the open/close icon to display a list.
- 2. Select the Station List tab.
- **3.** Select the station.

■ Manual update

Updates your available station list at any time.

- 1. Select the open/close icon to display a list.
- 2. Select the Station List tab.
- 3. Select Refresh.

■Playing AM/FM Radio

The **ST** indicator appears on the display indicating stereo FM broadcasts.

Stereo reproduction in AM is not available.

Switching the Audio Mode

Press the or button on the steering wheel or select **SOURCE** on the screen.

Audio Remote Controls P. 201

You can store 6 AM stations and 12 FM stations into preset memory.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.



Scan

Samples each of the strongest stations on the selected band for 10 seconds. To turn off scan, select **Cancel** or ARCK.

HD Subchannel

Displays the subchannel list when an HD Radio $^{\text{TM}}$ station is selected while listening to an FM station.

- 1. Select 🖳
- 2. Select HD Radio Subchannel.
- 3. Select the channel number.

■ Radio Data System (RDS)

Provides text data information related to your selected RDS-capable FM station.

■ To find an RDS station from Station List

- **1.** Select the open/close icon to display a list while listening to an FM station.
- 2. Select the **Station List** tab.
- 3. Select the station.

■ Manual update

Updates your available station list at any time.

- **1.** Select the open/close icon to display a list while listening to an FM station.
- 2. Select the **Station List** tab.
- 3. Select Refresh.

When you select an RDS-capable FM station, the RDS automatically turns on, and the frequency display changes to the station name. However, when the signals of that station become weak, the display changes from the station name to the frequency.

■ Radio text

Displays the radio text information of the selected RDS station.


- 1. Select 🖳
- 2. Select View Radio Text.

■ Scan

Samples each of the strongest stations on the selected band for 10 seconds.

To turn off scan, select **Cancel** or BACK.

Playing SiriusXM® Radio

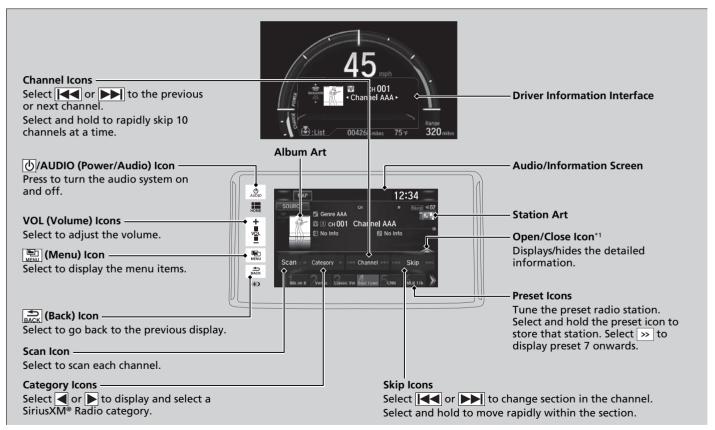

^{*1:}Some or all of the lists may not be displayed.

■ To Change the Tune Mode

- 1. Select
- 2. Select Tune Mode.
- 3. Select Channel Mode or Category Mode.

▶ Playing SiriusXM® Radio

In the channel mode, all available channels are selectable. In the category mode, you can select a channel within a category (Jazz, Rock, Classical, etc.).

There may be instances when SiriusXM® Radio does not broadcast all the data fields (artist name, title). This does not indicate a problem with your audio system.

SiriusXM® Radio stations load in ascending order, which can take about a minute. Once they have loaded you will be able to scroll up or down to make your selections.

Switching the Audio Mode

Press the or button on the steering wheel or select **SOURCE** on the screen.

Audio Remote Controls P. 201

Tune Start:

When you change to a preset channel, a song being played on that channel restarts from the beginning with this function. This can be turned on or off from the **Audio settings** screen.

⊇ Customized Features P. 300

Preset Memory

To store a channel:

- 1. Tune to the selected channel.
- 2. Press and hold the preset number for the station you want to store.
 - ▶ If Multiple Channel Mix Preset setting to On, then select Replace.

You can also store a channel by the following procedure.

- 1. Tune to the selected channel.
- 2. Select the open/close icon to display a list.
- 3. Select the **Preset** tab.
- **4.** Select and hold the preset number for the station you want to store.

■ Multi-channel preset (for music channels only)

You can store up to five of your preferred music channels to preset numbers.



- **1.** Tune a station.
- 2. Select the open/close icon to display a list.
- **3.** Select the **Preset** tab.
- **4.** Select and hold the preset number you want to add a music channel.
 - A message appears if there are no available presets.
- 5. Select Combine.

▶ Playing SiriusXM® Radio

You can store 12 SiriusXM® channels into the preset memory.

Multi-channel preset (for music channels only)

To store a multi-channel preset, you need to setup the **Multiple Channel Mix Preset** setting to **On**.

Customized Features P. 300

■ Listening to Featured Channels

Suggested channel listing received from SiriusXM® can be displayed and selected.

- 1. Select the open/close icon to display a channel list.
- 2. Select the Channel tab.
- **3.** Select the featured channel list title you want to listen to.
 - ▶ The selected channel list of the title is displayed.
- **4.** Select the channel.

∑Listening to Featured Channels

Up to three featured channels by SiriusXM® can be displayed.

Featured channel lists are at the top of the channel list.

Replay Function

The system can record up to the last 60 minutes of your currently tuned channel's broadcast, as well as the last 30 minutes of your preset channel's broadcast, starting from the moment you turn the vehicle on. If you tuned to a preset channel, the system records up to 60 minutes of a broadcast instead of up to 30 minutes. You can rewind and replay the last 30 or 60 minutes of a broadcast.

- 1. Select 🖳
- 2. Select Playback
- **3.** Move the time marker to the position you want to replay.

The following items are available on the pop-up screen:

[44] (Skip Down): Skips to the previously stored channel. Select and hold to fast-rewind the current selection.

[Skip Up): Skips to the next channel. Select and hold to fast-forward the current selection.

(15sec Back): Select to skip back 15 seconds in the current selection. Select and hold to fast-rewind the current selection.

(15sec Skip): Select to skip forward 15 seconds in the current selection. Select and hold to fast-forward the current selection.

▶ Select **OK** to close the pop-up menu. Replay in playback mode continues.

To play or pause on playback mode:

- 1. Select 🖭
- 2. Select Play/Pause.

■ Replay Function

The system starts storing broadcast in memory when the power mode is turned ON. You can go back to the program from that point.

You can no longer replay any program once the power mode is turned off as it erases memory. You can check how long the program has been stored in memory from the audio/information screen.

After 30 or 60 minutes of recording the system will automatically start deleting the oldest data.



(A): Shows how much time the replayed segment is behind the real-time broadcast

(B): Replayed segment

(C): Length stored in memory

When you listen a multi-channel preset while at the playback mode, the replayed segment is not displayed.

■ Returning to real-time broadcast

- 1. Select 🖳
- 2. Select Go to Live.

■ Live Sports Alert

While listening to other channels, you can receive sports alerts such as scores from the games of your favorite teams.

■ To set up a favorite team



- 1. Select
- **2.** Select **Settings**.
- 3. Select Audio.
- 4. Select SportsFlash Setup.
- 5. Select Favorite Team.
- 6. Select a team.

■ To set up an alert message

- 1. Select
- 2. Select Settings.
- 3. Select Audio.
- 4. Select SportsFlash Setup.
- **5.** Select **Interrupt**.
- 6. Select On(One Time) or On(Continue).

∑Live Sports Alert

The sports alert function is available in SiriusXM® mode only.

∑To set up a favorite team

Sports alerts cut in only when SiriusXM® mode is on. Selecting **On(One Time)** from the customized settings disables the alert feature next time you turn the power mode to ON.

Customized Features P. 300

You can also set up a favorite team by the following procedure.

- 1. Select **Audio**.
- 2. Select 🖳
- 3. Select **Setting**.
- 4. Select SportsFlash Setup.

■ To set up an alert beep

- 1. Select HOME.
- 2. Select Settings.
- 3. Select Audio.
- 4. Select SportsFlash Setup.
- 5. Select Interrupt Beep.
- 6. Select On.

■ Receiving a sports alert

- 1. A pop-up appears and notifies you of a sports alert.
- 2. Select Listen.
 - ➤ You can use the same items as the playback mode pop-up screen.
 - Replay Function P. 244

To go back to the previous screen, select **Back**.

■ Listening to a missed sports alert

If you have missed a sports alert:

- 1. Select 🖺.
- 2. Select SportsFlash List.
- 3. Select alert.

∑To set up an alert beep

You can also set up a alert beep by the following procedure.

- 1. Select **Audio**.
- 2. Select 🖳.
- 3. Select **Setting**.
- 4. Select SportsFlash Setup.

■ Traffic and Weather Information

You can receive traffic and weather information.

■ To set up a traffic & weather information

- 1. Select
- 2. Select Settings.
- 3. Select Audio.
- 4. Select Traffic & Weather Setup.
- **5.** Select the region.
 - ▶ When you do not want to receive the information, select **Unregistered**.

■ Listening a traffic and weather information

- 1. Select
- 2. Select Traffic & Weather.
 - ▶ Play mode can also use the any items same as playback mode.
 - Replay Function P. 244

To go back to the previous screen, select **OK**.

■ Scan

Sample each channel on the selected mode for 10 seconds.

- 1. Select Scan.
- 2. Select Scan Channels.
 - You can select the desired channel by songs using **Scan Song in Preset**.

To turn off scan, select Cancel.

∑Traffic and Weather Information

The traffic and weather information function at SiriusXM® mode only.

You can also set up the traffic and weather information by the following procedure.

- 1. Select **Audio**.
- 2. Select 🖳
- 3. Select **Setting**.
- 4. Select Traffic & Weather Setup.

Traffic & Weather Now are registered trademarks of SiriusXM® Radio, Inc.

≫Scan

The "Scan Songs in Preset" function is based on TuneScan™ technology of SiriusXM®.


The "Featured Channels" function is based on Featured Favorites™ technology of SiriusXM®.

TuneScan $^{\text{TM}}$ and Featured Favorites $^{\text{TM}}$ are registered trademarks of SiriusXM $^{\text{®}}$ Radio, Inc.

Playing an iPod

Connect the iPod using your USB connector to the USB port, then select the iPod mode.

USB Ports P. 199

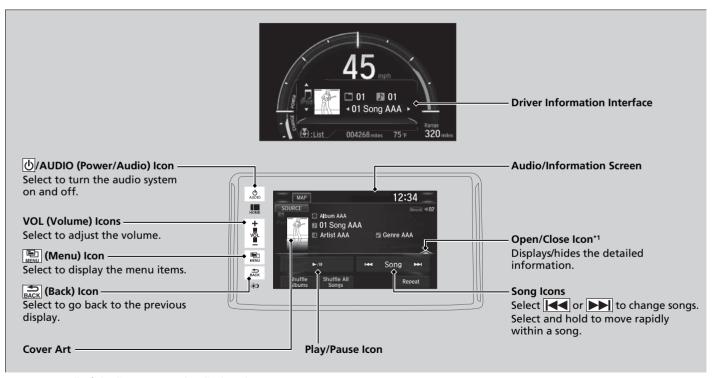

^{*1:}Some or all of the lists may not be displayed.

■ How to Select a Song from the Music Search List



1. Select and select **Music Search**.

2. Select the items on that menu.

Available operating functions vary on models or versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 277

If you operate any music app on your iPhone/iPod while the phone is connected to the audio system, you may no longer be able to operate the same app on the audio/information screen.

Reconnect the device if necessary.

■ How to Select a Play Mode

You can select shuffle and repeat modes when playing a file.

Select a play mode.



■ To turn off a play mode

Select the mode you want to turn off.

Play Mode Menu Items

Shuffle Albums: Plays all available albums in a selected list (playlists, artists, albums, songs, podcasts, genres, composers, or audiobooks) in random order.

Shuffle All Songs: Plays all available files in a selected list (playlists, artists, albums, songs, podcasts, genres, composers, or audiobooks) in random order.

Repeat: Repeats the current track.

Song By Voice™ (SBV)

Use SBV to search for and play music from your USB flash drive or iPod using voice commands.

■ To enable SBV



- 1. Select HOME.
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Voice Recog.** tab.
- **5.** Select **Song by Voice**.
- 6. Select On or Off.

Song By Voice™ (SBV)

Setting options:

- On (factory default): Song By Voice™ commands are available.
- Off: Disable the feature.

■ Searching for music using SBV



- **1.** Set the **Song by Voice** setting to **On**.
- 2. Press the (Talk) button and say "Music Search" to activate the SBV feature for the USB flash drive and iPod.
- **3.** Then, say a next command.
 - ► Example 1: Say "(List) 'Artist A'" to view a list of songs by that artist. Select the desired song to start playing.
 - Example 2: Say "Play 'Artist A'" to start playing songs by that artist.
- **4.** To cancel SBV, press the (hang-up/back) button on the steering wheel. The selected song continues playing.

Once you have canceled this mode, you need to press the 😥 button and say "Music Search" again to re-activate this mode.

Searching for music using SBV

Song By Voice™ Commands List

Song By Voice Commands P. 235

NOTF:

Song By Voice™ commands are available for tracks stored on the USB flash drive or iPod.

You can add phonetic modifications of difficult words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands.

Phonetic Modification P. 253

■ Phonetic Modification

Add phonetic modifications of difficult or foreign words so that it is easier for SBV to recognize artists, songs, albums, and composers in voice commands when searching for music on the USB flash drive or iPod.




- 1. Select .
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Voice Recog.** tab.
- 5. Select Song by Voice Phonetic Modification.
- 6. Select New Modification.
- **7.** Select **USB** or **iPod**.

>> Phonetic Modification

Song by Voice Phonetic Modification function is not available when **Song by Voice** is set to **Off**.

You can store up to 2,000 phonetic modification items.

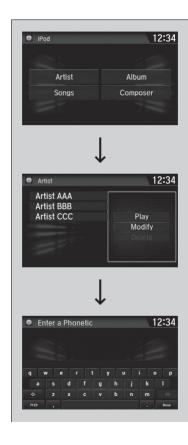


- **8.** Select the item to modify (e.g., **Artist**).
 - ► The list of the selected item appears on the screen.
- 9. Select an entry to modify.
 - ► The pop-up menu appears on the screen.
 - ➤ To listen to the current phonetic modification, select **Play**.
 - ➤ To delete the current phonetic modification, select **Delete**.
- 10. Select Modify.
- **11.** Select the phonetic spelling you want to use (e.g., "Artist A") when prompted.
- 12. Select OK.
 - ► The artist "No Name" is phonetically modified to "Artist A." When in the SBV mode, you can press the [6] (Talk) button and use the voice command "Play 'Artist A'" to play songs by the artist "No Name."

Playing Pandora®

Your audio system allows you to listen to music from the Pandora® app on a compatible smartphone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*[®] HandsFreeLink[®] (HFL) system, or with an iPhone, you can connect using your USB cable to the USB port.

- Phone Setup P. 337
- USB Ports P. 199

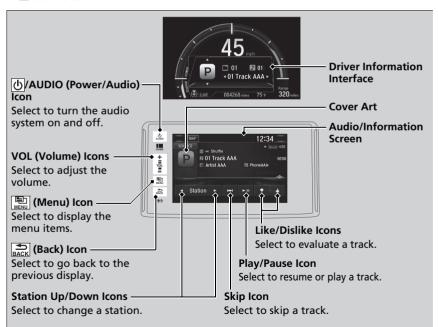

≫Playing Pandora®

Pandora®, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission. Pandora is only available in certain countries. Visit the Pandora website for more information.

To find out if your phone is compatible with this feature, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.

To use this service in your vehicle, the Pandora® app must first be installed on your phone. Visit www.pandora.com. for more information.

Pandora® is free, personalized radio that plays music and comedy you'll love. Just start with the name of one of your favorite artists, tracks, comedians or composers and Pandora® will create a custom station that plays similar tracks. Pandora® also features hundreds of genre stations ranging from Dubstep to Smooth Jazz to Power Workout.

If you cannot operate Pandora® through the audio system, it may be streaming through *Bluetooth*® Audio. Make sure Pandora® mode on your audio system is selected.

If your phone is connected to Android Auto, Pandora® is only available through the Android Auto interface. Visit the Android Auto website to check compatibility.

Pandora® Menu

You can operate some of the Pandora® menu items from your vehicle's audio system. The available items are:

- Bookmark
- Station List
- New Station
- Switch USB device
- Sound
- Setting

■ Operating a menu item



- 1. Select 🖳.
- 2. Select an item.

≫Pandora® Menu

Available operating functions vary on software versions. Some functions may not be available on the vehicle's audio system.

If there is a problem, you may see an error message on the audio/information screen.

Pandora® P. 279

Pandora® may limit the total number of skips allowed on the service. If you dislike a track after the skip limit has been reached, your feedback will be saved but the current track will continue to play.


To change stations, activate the Pandora® menu, select **Station List**, and then select a new station. It also changes stations on the main Pandora® screen.

Playing a USB Flash Drive

Your audio system reads and plays sound files on a USB flash drive in either MP3, WMA, or AAC*1 format.


Connect your USB flash drive to the USB port, then select the USB mode.

USB Ports P. 199

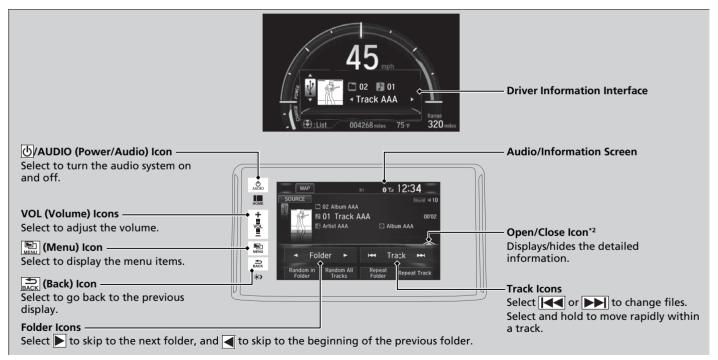

- *1:Only AAC format files recorded with iTunes are playable on this unit.
- *2:Some or all of the lists may not be displayed.

■ How to Select a File from the Music Search List

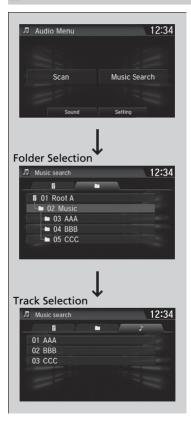

- **1.** Select and select **Music Search**.
- 2. Select Music.

3. Select a folder.

4. Select a track.

▶ Playing a USB Flash Drive

Use the recommended USB flash drives.

☑ General Information on the Audio System P. 281

WMA files protected by digital rights management (DRM) cannot be played.

The audio system displays **Unplayable File**, then skips to the next file.

If there is a problem, you may see an error message on the audio/information screen.

iPod/USB Flash Drive P. 277

■ How to Select a Play Mode

You can select scan, repeat, and random modes when playing a file.



Scan

- 1. Select 🖳
- 2. Select Scan.
- 3. Select a play mode.



■ Random/Repeat

Select a play mode.

■ To turn off a play mode

To turn off Scan, select are or **Cancel**.

To turn off **Random/Repeat**, select the mode again.

Play Mode Menu Items

Scan

Scan Folders: Provides 10-second sampling of the first file in each of the main folders.

Scan Tracks: Provides 10-second sampling of all files

in the current folder.

Random/Repeat

Random in Folder: Plays all files in the current

folder in random order.

Random All Tracks: Plays all files in random order. **Repeat Folder**: Repeats all files in the current folder.


Repeat Track: Repeats the current file.

Playing Bluetooth® Audio

Your audio system allows you to listen to music from your *Bluetooth*-compatible phone.

This function is available when the phone is paired and connected to the vehicle's *Bluetooth*® HandsFreeLink® (HFL) system.

Phone Setup P. 337

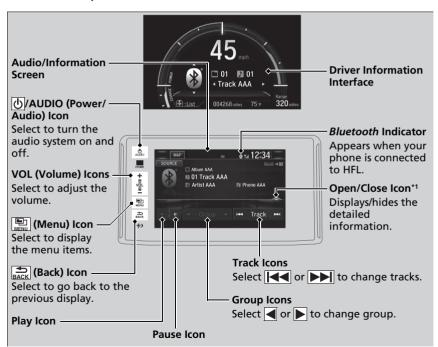

*1:Depending on the *Bluetooth*® device you connect, some or all of the lists may not be displayed.

Not all *Bluetooth*-enabled phones with streaming audio capabilities are compatible.

To check if your phone is compatible, visit automobiles honda com/handsfreelink/

It may be illegal to perform some data device functions while driving.

Only one phone can be used with HFL at a time. When there are more than two paired phones in the vehicle, the first paired phone the system finds is automatically connected.

The connected phone for *Bluetooth*® Audio can be different

If more than one phone is paired to the HFL system, there may be a delay before the system begins to play.

In some cases, the name of the artist, album, or track may not appear correctly.

Some functions may not be available on some devices.

If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth*® Audio from that phone is unavailable. However, a second previously paired phone can stream *Bluetooth*® Audio by selecting **Connect** from the **Bluetooth Device List**.

Phone Setup P. 337

■ To Play *Bluetooth®* Audio Files



1. Make sure that your phone is paired and connected to the system.


Phone Setup P. 337

2. Select the *Bluetooth*® Audio mode.

If the phone is not recognized, another HFL-compatible phone, which is not compatible for *Bluetooth*® Audio, may already be connected.

■ To pause or resume a file Select the play icon or pause icon.

Searching for Music

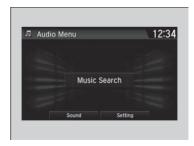

- 1. Select 🖳
- 2. Select Music Search.
- **3.** Select a search category (e.g., Albums).
- **4.** Select an item.
 - ► The selection begins playing.

∑To Play Bluetooth® Audio Files

To play the audio files, you may need to operate your phone. If so, follow the phone maker's operating instructions.

Switching to another mode pauses the music playing from your phone.

You can change the connected phone in the *Bluetooth®* settings on the **Audio Menu** screen by the following procedure.

- 1. Select 🖳.
- 2. Select **Setting**.

Searching for Music

Depending on the *Bluetooth*® device you connect, some or all of the lists may not be displayed.

HondaLink®

HondaLink® connects you to the latest information from Honda. You can connect your phone wirelessly through Wi-Fi or *Bluetooth*®.

- **₩i-Fi Connection** P. 267
- Phone Setup P. 337

■ HondaLink® Menu



■ Places

Displays restaurants, Honda dealer, and so on. You can also navigate to the found locations via the navigation.

■ Vehicle

Displays instruction messages when the vehicle needs service.

■ Help & Support

Displays tips for vehicle usage, and get support via road side or customer service center.

The HondaLink® connect app is compatible with most iPhone and Android phones.

Some cell phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

When Apple CarPlay or Android Auto is connected to the audio system, HondaLink® can be accessed even without a Wi-Fi connection.

■ Messages from Honda

Displays helpful and important information from Honda.

■ Weather

Displays a weekly five-day weather forecast for any location you want. You can change the ZIP Code at any time.

■ To Set Up to Connect HondaLink® Service

Use the following procedure to connect to HondaLink® service.

■ To enable the HondaLink® service



- 1. Select
- Select Settings.
- 3. Select Info.
- 4. Select the HondaLink tab.
- 5. Select Diagnostic & Location Data.
- 6. Select On.

You need to allow the consent of the location service to enable the HondaLink® service.



Enable once: Allows only one time. (Prompt shows again next time.)

Always Enable: Allows anytime. (Prompt

does not show again.)

Cancel: Does not allow this consent.

■ To link with HondaLink®



You can see the **Connection Guide** screen after launching HondaLink®. If you do not need this guide, select check-box and select **OK**.

■ Vehicle Information and Message from Honda Tips

You can check the messages that are received quickly in the shortcut operation.



- **1.** A message appears and notifies you of a new message on the header area.
 - ► When the message is received, a notification ring can be heard.

2. A message icon is continuously displayed in the header area until the new message is read.



3. From the top of the screen, swipe down to see the messages.

4. Select a new message to open.

Wi-Fi Connection

You can connect the Display Audio to the Internet using Wi-Fi and browse websites or use online services on the audio/information screen. If your phone has wireless hotspot capabilities, the system can be tethered to the phone. Use the following steps to setup.

■ Wi-Fi mode (setting for the first time)



- 1. Select
- 2. Select Settings.
- 3. Select Bluetooth/Wi-Fi.
- 4. Select the Wi-Fi tab.
- **5.** Select **Wi-Fi On/Off Status**, then **On**.
- 6. Select Wi-Fi Device List.
 - ► Make sure your phone's Wi-Fi setting is in access point (tethering) mode.
 - Select the phone you want to connect to the system.
 - If you do not find the phone you want to connect in the list, select **Scan**.

7. Select Connect.

- ► If needed, enter a password for your phone and select **OK**.
- ➤ When the connection is successful, the icon is displayed on the top of the screen.
- **8.** Select to go back to the home screen.

Wi-Fi mode (setting for the first time)

You cannot go through the setting procedure while a vehicle is moving. Park in a safe place to setup the Wi-Fi connection.

Some cell phone carriers charge for tethering and smartphone data use. Check your phone's data subscription package.

Check your phone manual to find out if the phone has Wi-Fi connectivity.

You can confirm whether Wi-Fi connection is on or off with the picon on **Wi-Fi Device List**. Network speed will not be displayed on this screen.



■ Wi-Fi mode (after the initial setting has been made)

Make sure your phone's Wi-Fi setting is in access point (tethering) mode.

Wi-Fi mode (after the initial setting has been made)

iPhone users


You may need to go through an initial setup for Wi-Fi connection again after you boot your phone.

Siri® Eyes Free

You can talk to Siri using the [6] (Talk) button on the steering wheel when your iPhone is paired to the *Bluetooth*® HandsFreeLink® (HFL) system.

Phone Setup P. 337

■ Using Siri Eyes Free

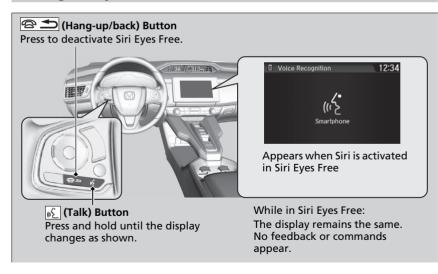

Siri® Eyes Free Siri® Eyes Free

Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

We recommend against using Siri other than in Siri Eyes Free while operating a vehicle.

≥ Using Siri Eyes Free


Some commands work only on specific phone features or apps.

Apple CarPlay™

If you connect an Apple CarPlay-compatible iPhone to the system via the 1.5A USB port, you can use the audio/information screen, instead of the iPhone display, to make a phone call. listen to music, view maps (navigation), and access messages.

USB Ports P. 199

■ Apple CarPlay Menu

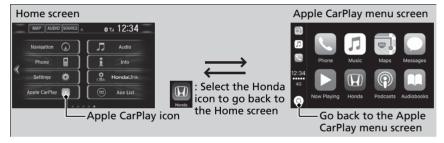

■ Phone

Access the contact list, make phone calls, or listen to voice mail.

■ Messages

Check and reply to text messages, or have messages read to you.

■ Music

Play music stored on your iPhone.

■Apple CarPlayTM

Only iPhone 5 or newer versions with iOS 8.4 or later are compatible with Apple CarPlay.

Park in a safe place before connecting your iPhone to Apple CarPlay and when launching any compatible apps.

To use Apple CarPlay, connect the USB cable to the USB port (1.5A). The USB port (1.0A) will not enable Apple CarPlay operation.

USB Ports P. 199

To directly access the Apple CarPlay phone function, press **Phone** on the home screen. While connected to Apple CarPlay, calls are only made through Apple CarPlay. If you want to make a call with *Bluetooth*[®] HandsFreeLink[®], turn Apple CarPlay OFF or detach the USB cable from your iPhone.

Setting Up Apple CarPlay P. 271

When your iPhone is connected to Apple CarPlay, it is not possible to use the *Bluetooth*® Audio or *Bluetooth*® HandsFreeLink®. However, other previously paired phones can stream audio via *Bluetooth*® while Apple CarPlay is connected.

Phone Setup P. 337

For details on countries and regions where Apple CarPlay is available, as well as information pertaining to function, refer to the Apple homepage.

■ Maps


Display Apple Maps and use the navigation function just as you would on your iPhone

Only one navigation system (pre-installed navigation or Apple CarPlay) can give directions at a time. When you are using one system, directions to any prior destination set on the other system will be canceled, and the system you are currently using will direct you to your destination.

Setting Up Apple CarPlay

After you have connected your iPhone to the system via the 1.5A USB port, use the following procedure to set up Apple CarPlay. Use of Apple CarPlay will result in the transmission of certain user and vehicle information (such as vehicle location, speed, and status) to your iPhone to enhance the Apple CarPlay experience. You will need to consent to the sharing of this information on the Display Audio Screen.

■ Enabling Apple CarPlay

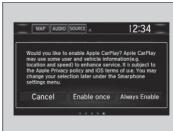

Enable once: Allows only once. (Prompt

shows again next time.)

Always Enable: Allows anytime. (Prompt

does not show again.)

Cancel: Does not allow this consent.

You may change the consent settings under the **Smartphone** settings menu.

Apple CarPlay Operating Requirements & Limitations

Apple CarPlay requires a compatible iPhone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Apple CarPlay functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Apple CarPlay functionality and services. Honda cannot and does not provide any warranty or guarantee of future Apple CarPlay performance or functionality.

It is possible to use 3rd party apps if they are compatible with Apple CarPlay. Refer to the Apple homepage for information on compatible apps.

Setting Up Apple CarPlay

You can also use the method below to set up Apple CarPlay:

Select HOME→Settings→Smartphone→Apple CarPlay

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to /from your iPhone by Apple CarPlay is governed by the Apple iOS terms and conditions and Apple's Privacy Policy.

■ Operating Apple CarPlay with Siri

Press and hold the talk button to activate Siri.



■Operating Apple CarPlay with Siri

Below are examples of questions and commands for Siri.

- What movies are playing today?
- Call dad at work.
- What song is this?
- How's the weather tomorrow?
- Read my latest email.
- Find a table for four tonight in Chicago.

For more information, please visit www.apple.com/ios/siri.

Android Auto™

When you connect an Android phone to the Display Audio system via the 1.5A USB port, Android Auto is automatically initiated. When connected via Android Auto, you can use the audio/information screen to access the Phone, Google Maps (Navigation), Google Play Music, and Google Now functions. When you first use Android Auto, a tutorial will appear on the screen.

We recommend that you complete this tutorial while safely parked before using Android Auto.

- **USB Ports** P. 199
- **▶** Auto Pairing Connection P. 275

To use Android Auto, you need to download the Android Auto app from Google Play to your smartphone.

Only Android 5.0 (Lollipop) or later versions are compatible with Android Auto.

Bluetooth A2DP cannot be used with Android Auto phone.

Park in a safe place before connecting your Android phone to Android Auto and when launching any compatible apps.


To use Android Auto, connect the USB cable to the USB port (1.5A). The USB port (1.0A) will not enable Android Auto operation.

USB Ports P. 199

When your Android phone is connected to Android Auto, it is not possible to use the *Bluetooth*® Audio. However, other previously paired phones can stream audio via *Bluetooth*® while Android Auto is connected.

Phone Setup P. 337

Android Auto Menu

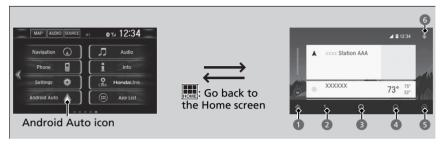

Maps (Navigation)

Display Google Maps and use the navigation function just as you would with your Android phone. When the vehicle is in motion, it is not possible to make keyboard entries. Stop the vehicle in a safe location to undertake a search or provide other inputs.

Only one navigation system (pre-installed navigation or Android Auto) can give directions at a time. When you are using one system, directions to any prior destination set on the other system will be canceled, and the system you are currently using will direct you to your destination.

The audio/information screen shows you turn-by-turn driving directions to your destination.

2 Phone (Communication)

Make and receive phone calls as well as listen to voicemail.

3 Google Now (Home screen)

Display useful information organized by Android Auto into simple cards that appear just when they're needed.

Android Auto™

For details on countries and regions where Android Auto is available, as well as information pertaining to function, refer to the Android Auto homepage.

Android Auto Operating Requirements & Limitations

Android Auto requires a compatible Android phone with an active cellular connection and data plan. Your carrier's rate plans will apply.

Changes in operating systems, hardware, software, and other technology integral to providing Android Auto functionality, as well as new or revised governmental regulations, may result in a decrease or cessation of Android Auto functionality and services. Honda cannot and does not provide any warranty or guarantee of future Android Auto performance or functionality.

It is possible to use 3rd party apps if they are compatible with Android Auto. Refer to the Android Auto homepage for information on compatible apps.

4 Music and audio

Play Google Play Music and music apps that are compatible with Android Auto. To switch between music apps, press this icon.

- **6** Go back to the Home Screen.
- **6** Voice

Operate Android Auto with your voice.

Auto Pairing Connection

When you connect an Android phone to the unit via the 1.5A USB port, Android Auto is automatically initiated.

■ Enabling Android Auto



Enable once: Allows only once. (Prompt

shows again next time.)

Always Enable: Allows anytime. (Prompt

does not show again.)

Cancel: Does not allow this consent.

You may change the consent settings under

the **Smartphone** settings menu.

Enabling Android Auto

Only initialize Android Auto when you safely parked. When Android Auto first detects your phone, you will need to set up your phone so that auto pairing is possible. Refer to the instruction manual that came with your phone.

You can use the method below to change Android Auto settings after you have completed the initial setup:


Select HOME—Settings—Smartphone—Android Auto

Use of user and vehicle information

The use and handling of user and vehicle information transmitted to /from your phone by Android Auto is governed by the Google's Privacy Policy.

Operating Android Auto with Voice Recognition

Press and hold the talk button to operate Android Auto with your voice.

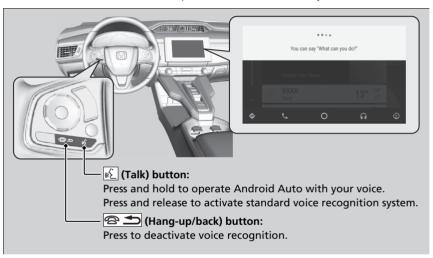

■ Operating Android Auto with Voice Recognition

Below are examples of commands you can give with voice recognition:

- Reply to text.
- Call my wife.
- Navigate to Honda.
- Play my music.
- Send a text message to my wife.
- Call flower shop.

For more information, please refer to the Android Auto homepage.

You can also activate the voice recognition function by pressing the 4 icon in the upper-right corner of the screen.

Audio Error Messages

iPod/USB Flash Drive

If an error occurs while playing an iPod or USB flash drive, you may see the following error messages. If you cannot clear the error message, contact an authorized Honda Clarity Fuel Cell dealer.

Error Message	Solution
USB Error	Appears when there is a problem with the audio system. Check if the device is compatible with the audio system.
A charging error has occurred with the connected USB device. When safe please check the compatibility of the device and USB cable and try again.	Appears when an incompatible device is connected. Disconnect the device. Then turn the audio system off, and turn it on again. Do not reconnect the device that caused the error.
Unsupported Version	Appears when an unsupported iPod is connected. If it appears when a supported iPod is connected, update the iPod software to the newer version.
Connect Retry	Appears when the system does not acknowledge the iPod. Reconnect the iPod.
Unplayable File	Appears when the files in the USB flash drive are copyright protected or an unsupported format. This error message appears for about three seconds, then plays the next song.

Error Message	Solution
No Data	iPod Appears when the iPod is empty.
	USB flash drive Appears when the USB flash drive is empty or there are no MP3, WMA, or AAC files in the USB flash drive.
	iPod and USB flash drive Check that compatible files are stored on the device.
Unsupported	Appears when an unsupported device is connected. If it appears when a supported device is connected, reconnect the device.

Pandora®

If an error occurs while playing Pandora®, you may see the following error messages. If you cannot clear the error message, contact an authorized Honda Clarity Fuel Cell dealer.

Error Message	Solution
To begin listening, select a station from the Stations list.	Appears when there is no station list on the device. Use the device to create a station.
The maximum number of tracks that can be skipped has been reached.	Appears when you try to skip a track or select Like/Dislike over the predetermined number of times in an hour.
Unable to play PANDORA. Please try again later. Unable to rate track. Please try again. Unable to save bookmark.	Appears when the commanded operation fails. Try again later.
No Data	Appears when no data is available with Pandora® activated. Reboot the app and reconnect the device.
PANDORA App version is not supported.	Appears when Pandora® version is not supported. Update Pandora® to the latest version.
PANDORA system maintenance.	Appears when the Pandora® server is in maintenance. Try again later.
Unable to connect to PANDORA. When stopped, check your mobile phone.	Appears when Pandora® is unable to play music. Check your device.
Unable to connect to PANDORA. When stopped, check your mobile phone.	Appears when Pandora® app is not installed on your device. Install Pandora® app to your device.

Android/Apps

If an error occurs while using the audio system or apps, you may see the following error messages. If you cannot clear the error message, contact an authorized Honda Clarity Fuel Cell dealer.

Error Message*1	Solution
Unfortunately, **** has stopped.	Error has occurred within app, select OK on the screen to close the app.
**** is not responding. Would you like to close it?	App is not responding. Select Wait if you can wait for a response from app a little longer. If it does not respond even if you keep waiting, select OK to close the app and restart it. If the error message continues, perform Factory Data Reset . Defaulting All the Settings P. 325

^{*1:****}part is variable characters, and will change depending upon where an error occurs.

General Information on the Audio System

SiriusXM® Radio Service

Subscribing to SiriusXM® Radio

- **1.** You need your radio ID ready before registering for subscription. To see the ID on the screen, select **Channel** 0.
- 2. Have your radio ID ready, and either call SiriusXM® or visit the SiriusXM® website to subscribe.

Receiving SiriusXM® Radio

Switch to the SiriusXM® mode by using the ▲ or ▼ button on the steering wheel, or through the audio/information screen, and stay in this mode for about 30 minutes until the service is activated. Make sure your vehicle is in an open area with good reception.

Subscribing to SiriusXM® Radio

Contact Information for SiriusXM® Radio: SiriusXM® Radio at www.siriusxm.com/subscribenow, or 1-866-635-2349

■ Receiving Sirius XM® Radio

The SiriusXM® satellites are in orbit over the equator; therefore, objects south of the vehicle may cause satellite reception interruptions. Satellite signals are more likely to be blocked by tall buildings and mountains the farther north you travel from the equator.

You may experience reception problems under the following circumstances:

- In a location with an obstruction to the south of your vehicle.
- In tunnels
- On the lower level of a multi-tiered road
- Large items carried on the roof rack

■ SiriusXM® Radio Display Messages

Requested Channel Not Subscribed:

You are not subscribed to the channel selected.

Channel Off Air:

The channel is not currently broadcasting.

Channel unauthorized:

SiriusXM® is loading the audio or program information.

Subscription Updated.:

SiriusXM® radio is receiving information update from the network.

Channel Not Available:

No such channel exists, or the artist or title information is unavailable.

No Signal:

The signal is too weak in the current location.

Check Antenna:

There is a problem with the SiriusXM® antenna. Contact an authorized Honda Clarity Fuel Cell dealer.

Check Tuner:

There is a problem with the SiriusXM® tuner. Contact an authorized Honda Clarity Fuel Cell dealer.

Compatible iPod, iPhone, and USB Flash Drives

■ iPod and iPhone Model Compatibility

Model

iPod (5th generation)

iPod classic 80GB/160GB (launch in 2007)

iPod classic 120GB (launch in 2008)

iPod classic 160GB (launch in 2009)

iPod nano (1st to 7th generation) released between 2005 and 2012

iPod touch (1st to 6th generation) released between 2007 and 2012

iPhone 3G/iPhone 3GS/iPhone 4/iPhone 4s/iPhone 5/iPhone 5/iPhone 5/iPhone 6/iPhone 68/iPhone 68/iPhone 68/iPhone 68/iPhone 7/iPhone 7 Plus/iPhone 8/iPhone 8 Plus/iPhone X

USB Flash Drives

- A USB flash drive of 256 MB or higher is recommended.
- Some digital audio players may not be compatible.
- Some USB flash drives (e.g., a device with security lockout) may not work.
- Some software files may not allow for audio play or text data display.
- Some versions of MP3, WMA, or AAC formats may be unsupported.

This system may not work with all software versions of these devices.

≥ USB Flash Drives

Files on the USB flash drive are played in their stored order. This order may be different from the order displayed on your PC or device.

Honda App License Agreement

■ END USER LICENSE AGREEMENT

PLEASE CAREFULLY READ THIS END USER LICENSE AGREEMENT (THIS "AGREEMENT") WHICH GOVERNS YOUR USE OF THE SOFTWARE INSTALLED ON YOUR HONDA OR ACURA VEHICLE (YOUR "VEHICLE") AS WELL AS THE APPLICATIONS, SERVICES, FUNCTIONS, AND CONTENT PROVIDED THROUGH THE SOFTWARE (COLLECTIVELY, THE "SERVICES"). YOUR USE OF THE SOFTWARE OR SERVICES WILL SERVE AS YOUR CONSENT TO THE TERMS OF THIS AGREEMENT. THE SOFTWARE IS OWNED (OR LICENSED), PROVIDED, AND/OR OPERATED BY AMERICAN HONDA MOTOR CO. INC., ("HONDA," "US," "WE," OR "OUR"), WITH ITS BUSINESS ADDRESS AT 1919 TORRANCE BLVD., TORRANCE, CA 90501. REFERENCE TO "HONDA" IN THIS AGREEMENT INCLUDES HONDA'S PARENT COMPANY AND ITS AFFILIATES AND DESIGNATED AGENTS. THE SERVICES ARE OWNED (OR LICENSED), PROVIDED, AND/OR OPERATED BY HONDA OR A THIRD-PARTY SERVICE PROVIDER (A "PROVIDER"). REFERENCE TO A "PROVIDER" IN THIS AGREEMENT INCLUDES SUCH PROVIDER'S PARENT COMPANY, AFFILIATES, AND DESIGNATED AGENTS.

A. Description of the Software. The SOFTWARE includes the software, firmware and the like, installed and executing on your VEHICLE during manufacture, and thereafter updated from time to time by HONDA, you or an authorized HONDA dealer (a "DEALER"). The SOFTWARE allows you to access and use a variety of SERVICES, including but not limited to: (a) HONDA applications, services, and content provided through the SOFTWARE (together, "HONDA SERVICES"); and (b) PROVIDER applications, services, and content provided through the SOFTWARE (together, "PROVIDER SERVICES"), each of which may provide access to various information, media, content, and services.

B. SOFTWARE Licensing and Intellectual Property.

- **1. SOFTWARE.** This AGREEMENT grants you a non-exclusive, limited, and revocable license to use the SOFTWARE and SERVICES solely (a) as installed on your VEHICLE by HONDA, (b) as updated on your Vehicle by HONDA, you (but only as and when directed by HONDA), or a DEALER and (c) as permitted under the terms of this AGREEMENT.
- **2. HONDA Services.** The SOFTWARE may provide you with access to various HONDA SERVICES. Installation, activation, or use of HONDA SERVICES may require your consent to additional terms, conditions, and privacy policies applicable to those HONDA SERVICES (the "HONDA TERMS"). You acknowledge and agree that any collection, use, sharing of data generated by your VEHICLE or your use of your VEHICLE, and your use of the HONDA SERVICES shall be subject to this AGREEMENT and any additional HONDA TERMS that may be specifically applicable to such HONDA SERVICES or data generation. The HONDA SERVICES may collect, use, and share such data while you are using the SOFTWARE.

- **3. Open-Source Software.** The SOFTWARE and SERVICES may incorporate software licensed to HONDA under free or open-source licenses which govern HONDA's distribution and your use of such software. HONDA and the third-party authors, licensors, and distributors of such software disclaim all warranties and all liability arising from any and all use or distribution of the software. To the extent such software is provided under terms that differ from the applicable free or open-source licenses, those terms are offered by HONDA alone. Additional information regarding free and open-source software incorporated in the SOFTWARE and SERVICES is available in this manual or within the SOFTWARE.
- **4. Provider Services.** The SOFTWARE may provide you with access to various PROVIDER SERVICES. Installation or use of such PROVIDER SERVICES may require your consent to additional terms, conditions, and privacy policies of the applicable PROVIDER (the "PROVIDER TERMS"). This AGREEMENT restricts the manner in which you can install and use PROVIDER SERVICES but does not grant you a license or permission to use such PROVIDER SERVICES. Your permission to use PROVIDER SERVICES is limited and subject to any license grants, conditions, and limitations included in the PROVIDER TERMS. You acknowledge that any collection, use, sharing of your information, targeted advertising practices by PROVIDERS, and your use of the PROVIDER SERVICES shall be subject to both this AGREEMENT and any applicable PROVIDER TERMS. The PROVIDER SERVICES may collect, use, and share such information while you are using the SOFTWARE.

5. License Limitations and Restrictions on Use.

(a) <u>Limited License</u>. You understand and agree that the SOFTWARE and SERVICES are licensed, not sold, to you solely for use in accordance with this AGREEMENT and any applicable PROVIDER TERMS, and any documentation for the VEHICLE made available to you by HONDA (any "DOCUMENTATION"). HONDA and its licensors reserve all rights in the SOFTWARE and HONDA SERVICES not expressly granted to you under this AGREEMENT. PROVIDERS and their licensors reserve all rights in the PROVIDER SERVICES not expressly granted to you under the applicable PROVIDER TERMS.

- (b) <u>Restrictions on Use.</u> The licenses granted under this AGREEMENT do not permit you to use the SOFTWARE or SERVICES on a device other than your VEHICLE. As a condition of using the SOFTWARE and SERVICES, you agree that you may not and will not:
 - (1) copy, download, distribute, modify, publish, sell, rent, lease, lend, license, sublicense, reuse, or create derivative works of the SOFTWARE or SERVICES or any of the content or other material within the SOFTWARE or SERVICES, including without limitation, HONDA or PROVIDER names, logos, or any other trademarks of HONDA or PROVIDERS or used in association with the SOFTWARE or any SERVICES, except as required to use the SOFTWARE or SERVICES in accordance with this AGREEMENT, any applicable PROVIDER TERMS, and the DOCUMENTATION;
 - (2) access or use the SOFTWARE or SERVICES in any manner intended to damage or impair the operation of the SOFTWARE or SERVICES or interfere with anyone else's use and enjoyment of the SOFTWARE or SERVICES;
 - (3) access or attempt to access any system or server on which the SOFTWARE or SERVICES is hosted or modify or alter the SOFTWARE or SERVICES in any way;
 - (4) use the SOFTWARE or SERVICES for any unlawful purpose, or in violation of any third party rights;
 - (5) use the SOFTWARE or SERVICES in violation of any applicable traffic regulations, rules or laws, including but not limited to any driver distraction laws, rules or regulations;
 - (6) violate the terms of this AGREEMENT, any HONDA TERMS, any PROVIDER TERMS or other applicable third-party terms, conditions, and privacy policies; or
 - (7) reverse engineer, decompile, disassemble, attempt to derive the source code of, nor permit others to reverse engineer, decompile, or disassemble, or attempt to derive the source code of the SOFTWARE or SERVICES, except and only to the extent that such activity is expressly permitted (a) by applicable law notwithstanding this limitation or (b) the terms of applicable free or opensource software licenses.
- **6. Intellectual Property Rights.** All title and intellectual property rights in and to the SOFTWARE and SERVICES, the accompanying DOCUMENTATION, and all copies of the SOFTWARE or SERVICES are owned by HONDA, PROVIDERS, or their suppliers or licensors. This AGREEMENT does not grant you any rights in connection with any trademarks or service marks of HONDA, PROVIDERS, or their licensors, affiliates, or suppliers.

7. Export Restrictions: You acknowledge that the SOFTWARE and SERVICES are subject to U.S., European Union, and other export jurisdictions. You agree to comply with all applicable international and national laws that apply to the SOFTWARE and SERVICES, including the U.S. Export Administration Regulations, as well as end-user, end-use, and destination restrictions issued by the U.S. and other governments.

C. SOFTWARE Operation

- **1.** HONDA reserves the right to suspend or terminate your access to and use of the SOFTWARE or SERVICES if you are found to be in violation of this AGREEMENT or as reasonably deemed necessary by HONDA.
- 2. <u>Eligibility/Registration/Activation</u>. The SOFTWARE is intended for and available to individuals who (a) are of legal age of majority in their jurisdiction of residence (and at least 18 years of age), or are younger than 18 years of age and possess a valid driver's license issued by their jurisdiction of residence, and (b) own or have permissive access to a compatible VEHICLE. We do not knowingly collect any information, including personal information, from children under 13. If we learn or are notified that we have collected personal information of a child under 13, we will immediately take steps to delete such information.
- **3.** <u>Use of PROVIDER SERVICES</u> through the <u>SOFTWARE</u>. Certain PROVIDER SERVICES made available through the SOFTWARE may require that you register or otherwise have an account with the PROVIDER and agree to PROVIDER TERMS. Any use of any of such PROVIDER SERVICES within the SOFTWARE is subject to this AGREEMENT and the applicable PROVIDER TERMS. HONDA does not exercise control over such PROVIDER SERVICES and is not responsible or liable for the availability, security, or content of such PROVIDER SERVICES, and the inclusion of any PROVIDER SERVICES does not imply a referral from, the approval of, or the endorsement by HONDA of such PROVIDER SERVICES. HONDA is not responsible or liable, directly or indirectly, for any damage relating to or resulting from your use of the PROVIDER SERVICES.
- **4.** <u>Links to Third Party Sites:</u> The SOFTWARE may provide you with the ability to access third-party sites and content through the use of the SOFTWARE or SERVICES. The third-party sites and content are not under the control of HONDA. HONDA is not responsible or liable, directly or indirectly, for such third-party websites and their content or for any damage relating to or resulting from your access or use of such websites and content.

- **5.** <u>Unauthorized Use and Abuse.</u> You are responsible for ensuring your (and any authorized third parties') use of the SOFTWARE and SERVICES remains in compliance with this AGREEMENT and all other applicable HONDA TERMS and PROVIDER TERMS. You acknowledge and agree that any use of the SOFTWARE or SERVICES occurring through your VEHICLE will be deemed your actions and that HONDA and PROVIDERS may rely upon such actions. You agree to immediately notify us if you suspect fraudulent or abusive activity involving the SOFTWARE or SERVICES. If you so notify us or if we otherwise suspect fraudulent or abusive activity, you agree to cooperate with us in any fraud investigation and to use any fraud prevention measures we prescribe. Your failure to immediately notify us or cooperate to use such measures will result in your liability for all fraudulent usage or abusive activity associated with your VEHICLE.
- **6.** <u>SOFTWARE Updates.</u> The SOFTWARE and SERVICES may be updated when your VEHICLE is serviced by a DEALER or remotely, over-theair, by HONDA from time to time; such updates may occur with or without further notice or your future consent. The SOFTWARE may be updated at HONDA's discretion and for any purpose including, without limitation, to patch or otherwise improve the SOFTWARE or SERVICES functionality, security, or stability. All updates to the SOFTWARE and SERVICES are subject to this AGREEMENT and any other applicable HONDA TERMS and PROVIDER TERMS.
- **7.** <u>Uninstalling, Removing, and Replacing the SOFTWARE.</u> Replacing SOFTWARE or HONDA SERVICES with software or firmware not provided and installed by HONDA or a DEALER will render all representations and warranties for the SOFTWARE, HONDA SERVICES, and VEHICLE functionality reliant upon the SOFTWARE or HONDA SERVICES null and void.

D. SOFTWARE Operational Notices and Warnings

1. Vehicle Geolocation Information. You acknowledge that your VEHICLE may be equipped with certain traffic and map features. The traffic feature will automatically collect and transmit, through GPS technology, your Vehicle's current location (longitude and latitude), travel direction and speed ("VEHICLE GEOLOCATION INFORMATION") to HONDA and PROVIDERS. The VEHICLE GEOLOCATION INFORMATION is used by HONDA and PROVIDERS to provide traffic and navigation-related information to you, but may also be used to provide other SERVICES or offers to you. HONDA will not use such VEHICLE GEOLOCATION INFORMATION for its own marketing efforts, or provide such information to unaffiliated third parties for their own purposes, without your express consent.

- 2. Potential Map Inaccuracy and Route Safety. Maps used by this system may be inaccurate because of changes in roads, traffic controls, routing, or driving conditions. Always use good judgment and common sense when following suggested routes. Do not follow the route suggestions if doing so would result in an unsafe or illegal driving maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. Do not rely on any navigation features included in the system to route you to emergency services. Not all emergency services such as police, fire stations, hospitals, or clinics are likely to be contained in the map database for such navigation features. Ask local authorities or an emergency services operator for such locations and routes. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions. Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Navigation features are not a substitute for your personal judgment. Any route suggestions made by the SOFTWARE or SERVICES should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.
- **3.** Speech Recognition: You acknowledge and understand that HONDA and PROVIDERS may record, retain, and use voices commands when you use the speech recognition components of the SOFTWARE or SERVICES. You and all VEHICLE operators and passengers (a) consent to the recording and retention of voice commands in support of providing speech recognition components and (b) release HONDA and PROVIDERS from all claims, liabilities, and losses that may result from any use of such recorded voice commands. Recognition errors are inherent in speech recognition. It is your responsibility to monitor any speech recognition functions included in the system and address any errors. Neither HONDA nor PROVIDERS will be liable for any damages arising out of errors in the speech recognition process.
- **4.** <u>Distraction Hazards.</u> Navigation features may require manual (non-verbal) input or setup. Attempting to perform such set-up or insert data while driving can seriously distract your attention and could cause a crash or other serious consequences; the ability to undertake such interactions may also be limited by state or local law, which laws you are responsible to know and follow. Even occasional short scans of the screen may be hazardous if your attention has been diverted away from your driving at a critical time. Pull over and stop the vehicle in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could result in a crash.

E. Information Collection and Storage

- 1. Information Collection, Use, Transmission and Storage of Data. Consent to Use of Data: You agree that HONDA and PROVIDERS may collect and use your information gathered in any manner as part of product support services related to the SOFTWARE or related services. HONDA may share such information with third parties, including, without limitation, PROVIDERS, third party software and services suppliers, their affiliates and/or their designated agents, solely to improve their products or to provide services or technologies to you. HONDA, third party software and systems suppliers, their affiliates and/or their designated agent may disclose this information to others, but not in a form that personally identifies you.
- **2.** <u>Information Storage.</u> Depending on the type of multimedia system you have in your VEHICLE, certain information may be stored for ease of use of the SOFTWARE including, without limitation, search history, location history in certain applications, previous and saved destinations, map locations within certain applications, and device numbers and contact information.
- (a) <u>Vehicle Health Information.</u> Your VEHICLE may remotely transmit information regarding the status and health of your VEHICLE ("VEHICLE INFORMATION") to HONDA without notification to you. VEHICLE INFORMATION may contain VEHICLE maintenance and malfunction status that is derived from VEHICLE diagnostic data and includes, but is not limited to, status of powered doors and windows, battery life data, battery charging data, VEHICLE speed, coolant temperature, air compressor revolution, output power, warning codes, diagnostic trouble codes, fuel injection volume, and engine rotations per minute. VEHICLE HEALTH INFORMATION may be used by HONDA for research and development, to deliver HONDA SERVICES and information to you, and to contact you, and is retained only for a period of time necessary to fulfill these goals.
- (b) <u>VEHICLE Geolocation Data (non-navigation/map based)</u>. If you opt-in to geolocation-based SERVICES, your vehicle's geolocation data (latitude and longitude) will be automatically sent from your VEHICLE to HONDA and PROVIDERS.
- (c) You understand that the inputting or uploading of information to your VEHICLE's multimedia system or the SOFTWARE or SERVICES is at your own risk and that HONDA is not responsible for unauthorized access to or use of any personal or other information. All information uploaded to the SOFTWARE and SERVICES may be stored on your VEHICLES's multimedia system and you understand that the security and safety of your VEHICLE's multimedia system is your sole responsibility.

F. NO WARRANTY. You understand and agree that your use of the SOFTWARE and SERVICES are solely at your own risk and that you will be solely responsible for any damage to your VEHICLE's multimedia system or any other equipment or any loss of data that may result from your use of the SOFTWARE or SERVICES. THE SOFTWARE AND SERVICES ARE PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS WITHOUT ANY WARRANTY OF ANY KIND. EXPRESSED. IMPLIED OR STATUTORY. WE SPECIFICALLY DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. HONDA makes no warranties that the SOFTWARE or SERVICES will meet your requirements, or that the SOFTWARE or SERVICES will be uninterrupted, timely, secure, noninfringing or error free. You understand and agree that you are responsible for any and all charges, costs or expenses associated with your use of the SOFTWARE or SERVICES. Advice or information, whether oral or written, obtained by you from us or through the SOFTWARE or SERVICES are provided for informational purposes only and will not create any warranty not expressly made herein. You should not rely on any such information or advice. We assume no liability or responsibility for any errors or omissions in the SOFTWARE or SERVICES. We do not make any warranty or representation that your use of the material displayed on, or obtained through, the SOFTWARE or SERVICES is non-infringing of any rights of any third party. Any decision or action taken by you on the basis of information or content provided via the application is at your sole discretion and risk. HONDA and PROVIDERS are not responsible or liable for any such decision, or for the accuracy, completeness, usefulness, or availability of any content or information displayed, transmitted, or otherwise made available via the SOFTWARE or SERVICES. To the extent jurisdictions do not allow the exclusion of certain warranties, some of the above exclusions may not apply to you.

G. LIMITATIONS ON LIABILITY. You and HONDA are each waiving important rights.

1. <u>Limitations on YOUR liability.</u> HONDA cannot recover from you any consequential, indirect, incidental, or special damages, or attorney's fees in connection with your use of the SOFTWARE or HONDA SERVICES. HONDA WAIVES TO THE FULLEST EXTENT ALLOWED BY LAW ANY CLAIM FOR DAMAGES OTHER THAN DIRECT, COMPENSATORY DAMAGES AS LIMITED IN THIS AGREEMENT.

- 2. Limitation on HONDA and PROVIDER liability. Neither HONDA nor PROVIDERS will be liable to you or any other party for consequential, indirect, incidental, special, or punitive damages (including without limitation lost profits) in connection with your use of the SOFTWARE or SERVICES, even if HONDA or PROVIDERS are aware of the possibility of such damages. These limitations apply to all claims, including, without limitation, claims in contract and tort (such as negligence, product liability and strict liability). To the extent that a jurisdiction does not permit the exclusion or limitation of liability as set forth herein our liability is limited to the maximum extent permitted by law in such states. If HONDA or PROVIDERS are found liable to you for any reason, you agree that the aggregate liability of all these parties to you for any claim is limited to ten U.S. dollars (US \$10.00). Neither HONDA nor any PROVIDER would have agreed to provide the SOFTWARE or SERVICES to you if you did not agree to this limitation. This amount is the sole and exclusive liability of HONDA and PROVIDERS to you, and is payable as liquidated damages and not as a penalty. Except where prohibited by law, you may not bring any claim against HONDA or any third-party beneficiary more than two (2) years after the claim arises. We do not have any liability for SOFTWARE or SERVICES interruptions of any length.
- (a) Release of HONDA and PROVIDERS For yourself and anyone else claiming under you, you agree to release and discharge HONDA, PROVIDERS, their respective officers, directors, and employees, and each third-party beneficiary from all claims, liabilities and losses in connection with the SOFTWARE or SERVICES, including, but not limited to claims for personal injury or property damage arising from the total or partial failure of performance of the SOFTWARE or SERVICES, even if caused by or based upon the negligence, gross negligence, strict products liability, Deceptive Trade Practices Act violations, bad faith, or breach of warranty of us or the malfunction of the SOFTWARE or SOFTWARE SERVICES. YOU AGREE TO WAIVE TO THE FULLEST EXTENT ALLOWED BY LAW, ANY CLAIM FOR DAMAGES OTHER THAN DIRECT, COMPENSATORY DAMAGES AS LIMITED IN THIS AGREEMENT. YOU HEREBY RELEASE AND DISCHARGE HONDA AND ITS LICENSORS AND CONTRACTORS (INCLUDING ANY THIRD PARTIES PROVIDING ALL OR PART OF THE SOFTWARE OR SERVICES) FROM AND AGAINST ANY CLAIMS, DAMAGES, EXPENSES AND LIABILITY ARISING FROM OR RELATED TO ANY INJURIES, DAMAGES, OR LOSSES TO ANY PERSON (INCLUDING DEATH) OR PROPERTY OF ANY KIND RESULTING IN WHOLE OR PART, DIRECTLY OR INDIRECTLY, FROM YOUR USE OF THE SOFTWARE OR SERVICES.
- **H. Survival.** You agree that the limitations of liability and indemnities in this AGREEMENT will survive even after the AGREEMENT has ended. These limitations of liability apply not only to you, but to anyone using the SOFTWARE or SERVICES via your VEHICLE, to anyone making a claim on your behalf, and to any claims made by your family, employees, customers, or others arising out of or relating to your VEHICLE, the SOFTWARE, or SERVICES.

- I. Availability/Interruption. The SOFTWARE and certain SERVICES are made available through your VEHICLE's compatible multimedia system when the VEHICLE is turned on. Certain SERVICES may be available only through your compatible mobile device when it is within the operating range of the VEHICLE and a wireless carrier. The availability of the SOFTWARE and SERVICES may be subject to transmission limitation or interruption, including but not limited to technical obsolesce or sunsetting of the hardware, software or firmware, inside of or external to the Vehicle, required for data transmission or receipt. HONDA does not guarantee that the SOFTWARE, SERVICES, or any portion thereof will be available at all times or in all areas. You acknowledge and agree that HONDA is not responsible for performance degradation, interruption or delays. You acknowledge that HONDA shall not be liable to you if the SOFTWARE or SERVICES in a given location are not available. If the SOFTWARE or SERVICES are not available within your intended location, you agree that your sole remedy shall be to cease using the SOFTWARE and SERVICES.
- **J. PRODUCT SUPPORT:** Product support for the SOFTWARE is provided by HONDA. For product support, please refer to HONDA instructions provided in the DOCUMENTATION. Should you have any questions concerning this AGREEMENT, or if you desire to contact HONDA for any other reason, please refer to the HONDA contact information provided in the DOCUMENTATION.

K. Termination and Transfer.

- **1. Termination.** This AGREEMENT is effective until terminated by you or US. WE may terminate this AGREEMENT for any or no reason, and with or without notice to you. Your rights under this AGREEMENT will terminate automatically without notice from US if you fail to comply with any term of this AGREEMENT. Upon termination of this AGREEMENT, you shall cease all use of the SOFTWARE and SERVICES.
- **2. Transfer:** You may permanently transfer your rights under this AGREEMENT only as part of a sale or transfer of the VEHICLE, provided you retain no copies, you transfer all of the SOFTWARE and HONDA SERVICES (including all component parts, the media and printed materials, and any upgrades), and the recipient agrees to the terms of this AGREEMENT. You agree to notify HONDA upon the sale or transfer of the VEHICLE. To contact HONDA, please refer to the HONDA contact information provided in the DOCUMENTATION.

L. Changes to the SOFTWARE or SERVICES. WE may change, modify, or update the SOFTWARE or SERVICES from time to time. Unless explicitly stated otherwise, any new features or services that augment or enhance the SOFTWARE or SERVICES in the future shall respectively be considered part of the SOFTWARE or SERVICES and subject to this AGREEMENT. WE reserve the right at any time and from time to time to interrupt, restrict, modify, suspend, discontinue, temporarily or permanently, the SOFTWARE or SERVICES (or any portion thereof), with or without notice to you, and you agree that HONDA shall not be liable to you or to any third party for any modification, suspension or discontinuance of the SOFTWARE or SERVICES.

M.ARBITRATION:

PLEASE READ THIS ARBITRATION PROVISION CAREFULLY TO UNDERSTAND YOUR RIGHTS. YOU AGREE THAT ANY CLAIM THAT YOU MAY HAVE IN THE FUTURE MUST BE RESOLVED THROUGH BINDING ARBITRATION. YOU WAIVE THE RIGHT TO HAVE YOUR DISPUTE HEARD IN COURT AND WAIVE THE RIGHT TO BRING CLASS CLAIMS. YOU UNDERSTAND THAT DISCOVERY AND APPEAL RIGHTS ARE MORE LIMITED IN ARBITRATION.

Arbitration is a method of resolving a claim, dispute or controversy without filing a lawsuit. By agreeing to arbitrate, the right to go to court is waived and instead claims, disputes or controversies are submitted to binding arbitration. This provision sets forth the terms and conditions of our agreement. YOU and HONDA agree and acknowledge that this Agreement affects interstate commerce and the Federal Arbitration Act ("FAA") applies. By using the Software, Vehicle, or Services, YOU elect to have disputes resolved by arbitration. YOU, HONDA or any involved third party may pursue a Claim. "Claim" means any dispute between YOU, HONDA, or any involved third party relating to your use of the Software, the Vehicle, or the Services, this Agreement, or our relationship, including any representations, omissions or warranties. "Claim" does not include personal injury or wrongful death claims. YOU or HONDA may seek remedies in small claims court or provisional judicial remedies without arbitrating. In addition, notwithstanding anything herein to the contrary, YOU or HONDA may seek equitable relief in a court of competent jurisdiction.

YOU or HONDA may select arbitration with American Arbitration Association, JAMS or National Arbitration and Mediation. Contact these sponsors for their rules. The hearing will be in the federal district where YOU reside. If agreed, it may be by telephone or written submissions. Filing and arbitrator fees to be paid per the sponsor rules. You may contact the sponsor for a fee waiver. If no fee waivers, HONDA will pay filing and arbitrator fees up to \$5,000, unless law requires more. Each party is responsible for other fees. Arbitrator may award costs or fees to prevailing party, if permitted by law. HONDA will not seek fees, unless the claims are frivolous.

Arbitrator shall be an attorney or current or retired judge familiar with automotive or consumer software. The arbitrator shall follow substantive law, statute of limitations and decide all issues relating to the interpretation, construction, enforceability and applicability of this provision. The arbitrator may order relief permitted by law. This provision is governed and enforceable by the FAA. An award shall include a written opinion and be final, subject to appeal by the FAA.

This provision survives termination of this Agreement or relationship, bankruptcy, assignment or transfer. If part of this provision is unenforceable, the remainder remains in effect. If unenforceability allows arbitration as a class action, then this provision is entirely unenforceable. YOU may opt out within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at Honda Financial Services, P.O. Box 165007, Irving, TX 75016. HONDA reserves the right to make changes to this provision after providing written notice and an opportunity to opt out.

N. Miscellaneous: You may not assign this AGREEMENT without HONDA's prior written consent. This AGREEMENT and any additional HONDA TERMS and PROVIDER TERMS represents the entire agreement between you and US. HONDA may amend the terms of this AGREEMENT by providing you with notices of such updated terms. If you do not consent to be bound by the updated terms, your sole remedy will be to cease using the SOFTWARE and SERVICES. If any part of this AGREEMENT is found invalid, void, or unenforceable, the balance of the AGREEMENT will remain valid and enforceable according to its terms. To the fullest extent permitted by law, and except as explicitly provided otherwise, this AGREEMENT and any disputes arising out of or relating to it will be governed by the laws of the State of California, except that California laws concerning choice of law or conflicts shall not apply if they would cause the substantive law of another jurisdiction to apply. Notwithstanding the foregoing, Section M shall be governed by the Federal Arbitration Act and the laws of the State of California, as applicable, as set forth therein. The failure to enforce any term of this AGREEMENT on one occasion shall not prevent enforcement on any other occasion or the enforcement of any other term. Headings and captions shall not be considered included for purposes of interpretation or application hereof, but are for convenience only.

Legal Information on Apple CarPlay/Android Auto

OWNER'S MANUAL LICENSE/LIABILITY STATEMENTS

USE OF APPLE CARPLAY IS SUBJECT TO YOUR AGREEMENT TO THE CARPLAY TERMS OF USE, WHICH ARE INCLUDED AS PART OF THE APPLE IOS TERMS OF USE. IN SUMMARY, THE CARPLAY TERMS OF USE DISCLAIM APPLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT APPLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY APPLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF CARPLAY, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE APPLE'S PRIVACY POLICY FOR DETAILS REGARDING APPLE'S USE AND HANDLING OF DATA UPLOADED BY CARPLAY.

USE OF ANDROID AUTO IS SUBJECT TO YOUR AGREEMENT TO THE ANDROID AUTO TERMS OF USE WHICH MUST BE AGREED TO WHEN THE ANDROID AUTO APPLICATION IS DOWNLOADED TO YOUR ANDROID PHONE. IN SUMMARY, THE ANDROID AUTO TERMS OF USE DISCLAIM GOOGLE AND ITS SERVICE PROVIDERS' LIABILITY IF THE SERVICES FAIL TO PERFORM CORRECTLY OR ARE DISCONTINUED, STRICTLY LIMIT GOOGLE AND ITS SERVICE PROVIDERS' OTHER LIABILITIES, DESCRIBE THE KINDS OF USER INFORMATION (INCLUDING, FOR EXAMPLE, VEHICLE LOCATION, VEHICLE SPEED, AND VEHICLE STATUS) BEING GATHERED AND STORED BY GOOGLE AND ITS SERVICE PROVIDERS, AND DISCLOSE CERTAIN POSSIBLE RISKS ASSOCIATED WITH THE USE OF ANDROID AUTO, INCLUDING THE POTENTIAL FOR DRIVER DISTRACTION. SEE GOOGLE'S PRIVACY POLICY FOR DETAILS REGARDING GOOGLE'S USE AND HANDLING OF DATA UPLOADED BY ANDROID AUTO.

■ DISCLAIMER OF WARRANTIES; LIMITATION ON LIABILITY

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF APPLE CARPLAY OR ANDROID AUTO ("THE APPLICATIONS") IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, ACCURACY AND EFFORT IS WITH YOU TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. AND THAT THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS IS PROVIDED "AS IS" AND "AS AVAILABLE," WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND HONDA HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE APPLICATIONS AND INFORMATION ON THE APPLICATIONS, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HONDA OR AN AUTHORIZED. REPRESENTATIVE SHALL CREATE A WARRANTY. AS EXAMPLES, AND WITHOUT LIMITATION, HONDA DISCLAIMS ANY WARRANTY REGARDING THE ACCURACY OF DATA PROVIDED BY THE APPLICATIONS, SUCH AS THE ACCURACY OF DIRECTIONS, ESTIMATED TRAVEL TIME, SPEED LIMITS, ROAD CONDITIONS, NEWS, WEATHER, TRAFFIC, OR OTHER CONTENT PROVIDED BY APPLE, GOOGLE, THEIR AFFILIATES. OR THIRD PARTY PROVIDERS: HONDA DOES NOT GUARANTEE AGAINST LOSS OF APPLICATION DATA. WHICH MAY BE LOST AT ANY TIME; HONDA DOES NOT GUARANTEE THAT THE APPLICATIONS OR ANY SERVICES PROVIDED THROUGH THEM WILL BE PROVIDED AT ALL TIMES OR THAT ANY OR ALL SERVICES WILL BE AVAILABLE AT ANY PARTICULAR TIME OR LOCATION. FOR EXAMPLE. SERVICES MAY BE SUSPENDED OR INTERRUPTED WITHOUT NOTICE FOR REPAIR. MAINTENANCE, SECURITY FIXES, UPDATES, ETC., SERVICES MAY BE UNAVAILABLE IN YOUR AREA OR LOCATION, ETC. IN ADDITION, YOU UNDERSTAND THAT CHANGES IN THIRD PARTY TECHNOLOGY OR GOVERNMENT REGULATION MAY RENDER THE SERVICES AND/OR APPLICATIONS OBSOLETE AND/OR UNUSABLE.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL HONDA OR ITS AFFILIATES BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, CORRUPTION OR LOSS OF DATA, FAILURE TO TRANSMIT OR RECEIVE ANY DATA, BUSINESS INTERRUPTION OR ANY OTHER COMMERCIAL DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO THE APPLICATIONS OR YOUR USE OF OR INABILITY TO USE THE APPLICATIONS OR INFORMATION ON THE APPLICATIONS, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF HONDA WERE ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES AND JURISDICTIONS DISALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, SO THESE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. IN NO EVENT SHALL HONDA'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES (OTHER THAN AS MAY BE REQUIRED BY APPLICABLE LAW IN CASES INVOLVING PERSONAL INJURY) EXCEED THE AMOUNT OF FIVE DOLLARS (\$5.00). THE FOREGOING LIMITATIONS WILL APPLY EVEN IF THE ABOVE STATED REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

About Open Source Licenses

To see the open source license information, follow these steps.

- 1. Select .
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Others** tab.
- 5. Select **Detail Information**.
- 6. Select About device.
- **7.** Select **Legal information**.
- 8. Select Open source licenses.

License information

■ DTS

For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Neural Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.




Customized Features

Use the audio/information screen to customize certain features.

■ How to customize

While the vehicle is at a complete stop with the power mode in ON, select , and **Settings**, then select a setting item.

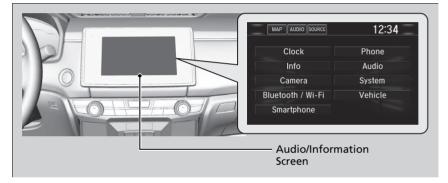


○ Customized Features

When you customize setting, make sure that the vehicle is at a complete stop and [P] is selected.

To customize other features, select **Settings**.


■ List of customizable options P. 308


■ Customization flow

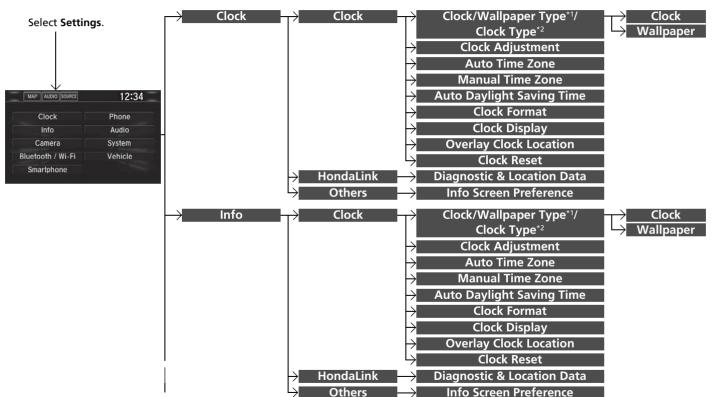

^{*1:} Does not appear when you change the screen interface design.


^{*2:} Appears only when you change the screen interface design.

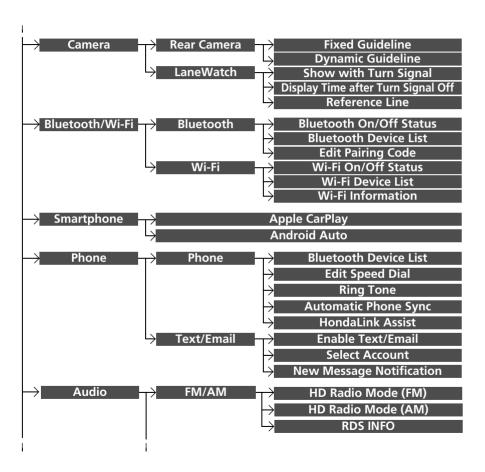


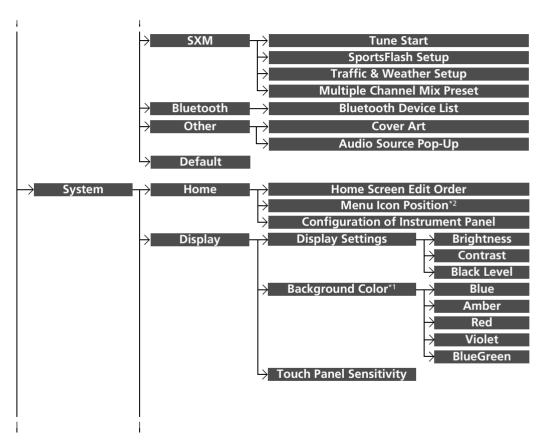

- *1: Does not appear when you change the screen interface design.
- *2: Appears only when you change the screen interface design.

303

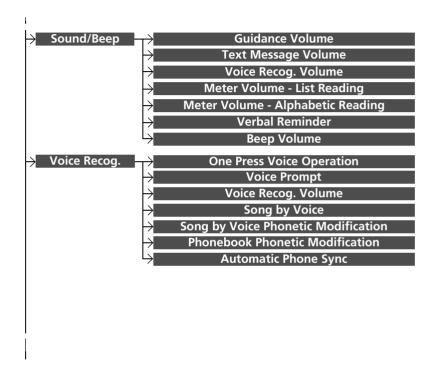


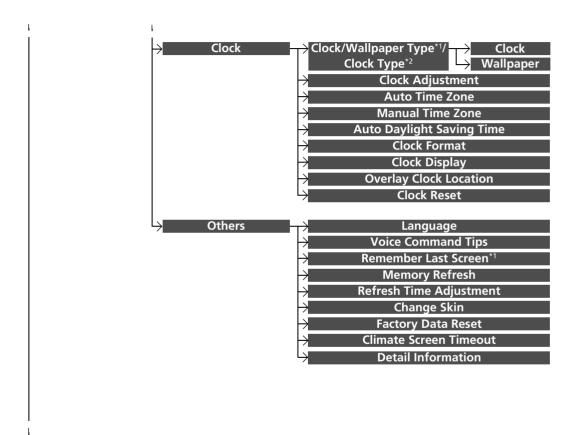


^{*1:} Does not appear when you change the screen interface design.

305

^{*2:} Appears only when you change the screen interface design.

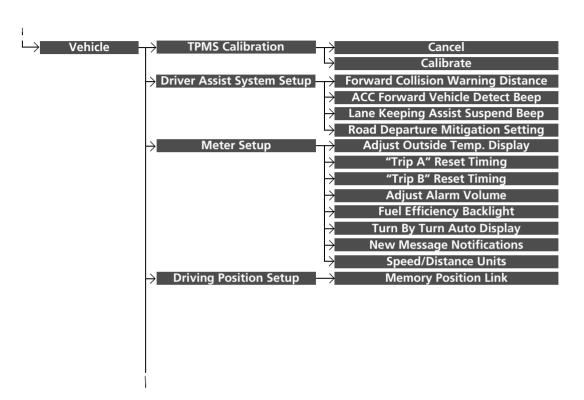

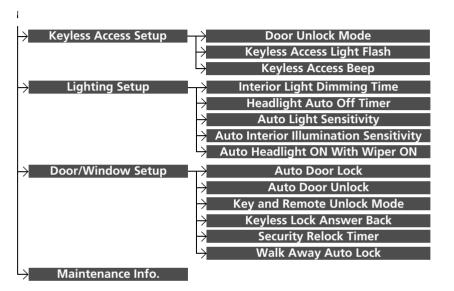

■ List of customizable options

Setup Group	Cu	stomizable Fe	eatures	Description	Selectable Settings
		Clock/	Clock		
		Wallpaper Type*1/ Clock Type*2	Wallpaper		
		Clock Adjustment			
		Auto Time Zone Manual Time Zone			
	Clock				
Clock		Auto Daylig	ght Saving Time	See Info on P. 309	
		Clock Form	at		
		Clock Displa	ау		
		Overlay Clock Location Clock Reset			
	HondaLink	Diagnostic & Location Data			
	Others	Info Screen	Preference		

^{*1:}Does not appear when you change the screen interface design. *2:Appears only when you change the screen interface design.

Setup Group		Customizable Fe	eatures	Description	Selectable Settings
		Clock/ Wallpaper	Clock	Changes the clock display type.	Analog/Digital* ¹ / Small Digital/Off
		Type*2/ Clock Type*3	Wallpaper	 Changes the wallpaper type. Imports an image file for a new wallpaper. Deletes an image file for a wallpaper. 	Blank/Galaxy* ¹ / Metallic/Time Zone
		Clock Adjus	tment	Adjusts Clock.	_
		Auto Time 2	Zone	Automatically adjusts the clock when driving through different time zones.	On*1/Off
Info	Clock	Manual Tim	e Zone	Changes the time zone manually.	_
inio	CIOCK		ht Saving Time	Select On to have the GPS automatically adjust the clock to daylight savings time. Select Off to cancel this function.	On*1/Off
			at	Selects the digital clock display from 12H to 24H.	12H*1/24H
		Clock Display		Selects whether the clock display comes on.	On*1/Off
		Overlay Clo	ck Location	Changes the clock display layout.	Upper Right*1/Upper Left/Lower Right/ Lower Left/Off
		Clock Reset		Resets the clock settings to the factory default.	Yes/No

^{*1:}Default Setting

^{*2:}Does not appear when you change the screen interface design. *3:Appears only when you change the screen interface design.

Setup Group	Cus	stomizable Features	Description	Selectable Settings
	HondaLink	Diagnostic & Location Data	Turns HondaLink® on and off.	On*1/Off
Info	Others	Info Screen Preference	 Selects the top menu when the Info is selected. Info Top- A brief menu pops up. Info Menu- A full menu pops up. Off- A menu does not pop up. 	Info Top/Info Menu*¹/Off

^{*1:}Default Setting

Setup Group	Cus	tomizable Features	Description	Selectable Settings	
	Fixed Guideline		Selects whether the fixed guidelines come on the rear camera monitor. Multi-View Rear Camera P. 443	On*¹/Off	
	Rear Camera	Dynamic Guideline	Selects whether the guidelines adjust to the movement of the steering wheel. Multi-View Rear Camera P. 443	On*¹/Off	
		Default	Cancels/Resets all customized items in the Rear Camera setting group as default.	Yes/No	
Camera	LaneWatch	Show with Turn Signal	Selects whether the LaneWatch display comes on when you move the turn signal lever to indicate a right turn.	On*¹/Off	
		LaneWatch	Display Time after Turn Signal Off	Changes the length of time the LaneWatch display stays on after the turn signal lever returns to the center.	0 second*1/2 seconds
		Reference Line	Selects whether the reference lines come on the LaneWatch monitor.	On*1/Off	
		Default	Cancels/Resets all customized items in the LaneWatch group as default.	Yes/No	

^{*1:}Default Setting

Setup Group	Customizable Features		Description	Selectable Settings
		Bluetooth On/Off Status	Changes the <i>Bluetooth</i> ® status.	On*1/Off
	Bluetooth	Bluetooth Device List	Pairs a new phone to HFL, edits or deletes a paired phone. ▶ Phone Setup P. 337	_
Bluetooth/		Edit Pairing Code	it Pairing Code Edits a pairing code. Document To change the pairing code setting P. 338	
Wi-Fi	Wi-Fi	Wi-Fi On/Off Status	Changes the Wi-Fi mode.	On/Off*1
		Wi-Fi Device List	Connects, disconnects, or deletes the Wi-Fi device.	_
		Wi-Fi Information	Shows the Wi-Fi information of the head unit.	_
	Default		Cancels/Resets all customized items in the Bluetooth/Wi-Fi group as default.	Yes/No
	Apple CarPlay		Sets up the Apple CarPlay connection.	_
Smartphone	Android Auto)	Sets up the Android Auto connection.	_
4,110110	Default		Cancels/Resets all customized items in the Smartphone group as default.	Yes/No

^{*1:}Default Setting

Setup Group	Cu	stomizable Features	Description	Selectable Settings
		Bluetooth Device List	Pairs a new phone to HFL, connects or disconnects a paired phone. ▶ Phone Setup P. 337	_
		Edit Speed Dial	Edits, adds or deletes a speed dial entry. Speed Dial P. 343	_
	Phone	Ring Tone	Selects the ring tone.	Fixed/Mobile Phone*1
		Automatic Phone Sync	Sets a phonebook and call history data to be automatically imported when a phone is paired to HFL.	On*¹/Off
Phone		HondaLink Assist	Turns HondaLink Assist on and off.	On/Off*1
		Enable Text/Email	Turns the text/e-mail message function on and off.	On*1/Off
	Text/Email	Select Account	Selects a text or e-mail message account.	_
		New Message Notification	Selects whether a pop-up alert comes on the screen when HFL receives a new text/e-mail message.	On/Off
	Default		Cancels/Resets all customized items in the Phone settings group as default.	Yes/No

^{*1:}Default Setting

Setup Group	Custo	Customizable Features		Description	Selectable Settings
	FM/AM mode FM/AM	HD Radio Mode		Selects whether the audio system automatically switches to the digital radio waves or receives the analog waves only.	Auto*1/Analog Only
		RDS INFO		Turns on and off the RDS information.	On*1/Off
	SiriusXM® mode SXM	Tune Start		Turns on and off, starts the song from the beginning as you change preset stations.	On*1/Off
Audio			Interrupt	Turns on and off the sports alert function.	Off/On(One Time)/ On(Continue)*1
Audio			Favorite Team	Selects your favorite sports teams. Live Sports Alert P. 245	_
			Interrupt Beep	Causes the system to beep when the sports alert is notified.	On*1/Off
		Traffic & Weather Setup		Selects the region you want to receive the information.	-
		Multiple Channel Mix Preset		Turns multiple channel mix preset on and off.	On/Off*1

^{*1:}Default Setting

Setup Group	Custor	mizable Features	Description	Selectable Settings
	Bluetooth® mode Bluetooth Bluetooth Bluetooth		Pairs a new phone to HFL, edits or deletes a paired phone. Phone Setup P. 337	-
Audio	Other -	iPod or USB mode [Your selected media] Cover Art	Turns the cover art display on and off.	On*¹/Off
		Audio Source Pop-Up	Selects whether the list of selectable audio source comes on when Audio is selected on the home screen.	On/Off*1
	Default		Cancels/Resets all customized items in the Audio settings group as default.	Yes/No
		Home Screen Edit Order	Changes the HOME screen icon layout.	<u> </u>
System	Home -	Menu Icon Position*2	Changes the position of the menu icons on the Audio , Phone , and Info screen.	_
		Configuration of Instrument Panel	Changes the Instrument Panel screen icon layout.	_

^{*1:}Default Setting
*2:Appears only when you change the screen interface design.

Setup Group	Customizable Features			Description	Selectable Settings
			Brightness	Changes the brightness of the audio/information screen.	_
	Display	Display Settings play	Contrast	Changes the contrast of the audio/information screen.	_
			Black Level	Changes the black level of the audio/information screen.	_
System		Background Color*2		Changes the background color of the audio/ information screen.	Blue*1/Amber/Red/ Violet/BlueGreen
		Touch Panel Sensitivity		Sets the sensitivity of the touch panel screen.	High/Low*1
	Sound/	Guidance Volume		Changes the sound volume. Adjusts the guidance volume of the navigation system.	00~06*1~11
	Beep	Text Message Volume		Changes the text/e-mail message reading volume.	01~06*1~11

^{*1:}Default Setting
*2:Does not appear when you change the screen interface design.

Setup Group	Cus	stomizable Features	Description	Selectable Settings
		Voice Recog. Volume	Changes the volume of the voice prompt.	01~06*1~11
		Meter Volume - List Reading	Changes the list reading volume.	01~06*1~11
	Sound/ Beep	Meter Volume - Alphabetic Reading	Changes the alphabetic reading volume.	01~06*1~11
		Verbal Reminder	Turns the verbal reminders on and off.	On*1/Off
		Beep Volume	Changes the beep volume.	Off/1/2*1/3
		One Press Voice Operation	Changes the setting of the 🖟 (Talk) button operation when using the voice operation.	On*1/Off
System		Voice Prompt	Turns the voice prompt on and off.	On*1/Off
		Voice Recog. Volume	Changes the volume of the voice prompt.	01~06*1~11
	Voice	Song by Voice	Turns the Song By Voice™ on and off.	On*1/Off
	Recog.	Song by Voice Phonetic Modification	Modifies a voice command for music stored in the USB flash drive or an iPod/iPhone. ▶ Phonetic Modification P. 253	_
		Phonebook Phonetic Modification	Modifies a voice command for the phonebook. ▶ Phonebook Phonetic Modification P. 346	
		Automatic Phone Sync	Sets phonebook and call history data to be automatically imported when a phone is paired to HFL.	On/Off

^{*1:}Default Setting

317

Setup Group		Customizable Fe	eatures	Description	Selectable Setting
		Clock/	Clock		
		Wallpaper Type*2/ Clock Wallpaper Type*3 Clock Adjustment Auto Time Zone Manual Time Zone Auto Daylight Saving Time Clock Format Clock Display Overlay Clock Location Clock Reset		_	
	Clock			See Info on P. 309	
System					
				_	
	Others	Language		Change the display language.	English (United States)*1/Français/ Español

^{*1:}Default Setting
*2:Does not appear when you change the screen interface design.
*3:Appears only when you change the screen interface design.

Setup Group	(Customizable Features	Description	Selectable Settings
		Voice Command Tips	Alerts you when manual control of the system is disabled to prevent distraction while driving. Only voice commands are available.	On*1/Off
		Remember Last Screen*2	Selects whether the device remembers the last screen.	On/Off*1
System Ot	Others	Memory Refresh	Turns on the audio system automatically and restores the fragmentation of a memory when the power mode is in VEHICLE OFF.	On*1/Off
		Refresh Time Adjustment	Sets the time for Memory Refresh .	_
		Change Skin	Changes the screen interface design.	Yes/No
		Factory Data Reset	Resets all the settings to their factory default. Defaulting All the Settings P. 325	Yes/No

^{*1:}Default Setting
*2:Does not appear when you change the screen interface design.

Setup Group	Customizable Features		Description	Selectable Settings
System	Others	Climate Screen Timeout	Changes the length of time the climate control display stays on when you press the CLIMATE button.	Never/5 Seconds/10 Seconds*1/20 Seconds
		Detail Information	Displays the details of the head unit and operating system information.	
	Default		Cancels /Resets all customized items in the System group as default.	Yes/No
Vehicle	TPMS Calibration		Cancels/Calibrates the TPMS.	Cancel/Calibrate
	Driver Assist System Setup	Forward Collision Warning Distance	Changes the distance at which CMBS™ alerts.	Long/Normal*1/Short
		ACC Forward Vehicle Detect Beep	Causes the system to beep when the system detects a vehicle, or when the vehicle goes out of the ACC with Low Speed Follow range.	On/Off*1
		Lane Keeping Assist Suspend Beep	Causes the system to beep when LKAS is suspended.	On/Off*1
		Road Departure Mitigation Setting	Changes the setting for the road departure mitigation system.	Normal*1/Wide/ Warning Only

^{*1:}Default Setting

Setup Group		Customizable Features	Description	Selectable Settings
		Adjust Outside Temp. Display	Adjusts the temperature reading by a few degrees.	-5°F ~ ±0°F*1 ~ +5°F
		"Trip A" Reset Timing	Changes the setting of how to reset trip meter A, average fuel economy A, average speed A, and elapsed time A.	When Refueled/IGN Off/Manually Reset*1
		"Trip B" Reset Timing	Changes the setting of how to reset trip meter B, average fuel economy B, average speed B, and elapsed time B.	When Refueled/IGN Off/Manually Reset*1
Vehicle	Meter Setup	Adjust Alarm Volume	Changes the alarm volume, such as buzzers, warnings, turn signal sound, and so on.	High/Mid*1/Low
		Fuel Efficiency Backlight	Turns the ambient meter feature on and off.	On*1/Off
		Turn By Turn Auto Display	Selects whether the turn-by-turn display comes on during the route guidance.	On*1/Off
		New Message Notifications	Used to select whether a pop-up alert comes on the screen when HFL receives a new text/e-mail message.	On*¹/Off
		Speed/Distance Units	Selects the trip computer units.	km/h·km/ mph·miles*1

^{*1:}Default Setting

Setup Group	Customizable Features		Description	Selectable Settings
Vehicle	Driving Position Setup	Memory Position Link	Turns the driving position memory system on and off.	On*¹/Off
	Keyless Access Setup	Door Unlock Mode	Changes which doors unlock when you grab the driver's door handle.	Driver Door Only*1/ All Doors
		Keyless Access Light Flash	Causes some exterior lights to flash when you unlock/lock the doors.	On*1/Off
		Keyless Access Beep	Causes the beeper to sound when you unlock/lock the doors.	On*1/Off

^{*1:}Default Setting

Setup Group	Customizable Features		Description	Selectable Settings
Vehicle	Lighting Setup	Interior Light Dimming Time	Changes the length of time the interior lights stay on after you close the doors.	15seconds/ 30seconds* ¹ / 60seconds
		Headlight Auto Off Timer	Changes the length of time the exterior lights stay on after you close the driver's door.	0seconds/ 15seconds*1/ 30seconds/ 60seconds
		Auto Light Sensitivity	Changes the timing for the headlights to come on.	Max/High/Mid*1/ Low/Min
		Auto Interior Illumination Sensitivity	Changes the sensitivity of the brightness of the instrument panel when the headlight switch is in the AUTO position.	Max/High/Mid* ¹ / Low/Min
		Auto Headlight ON With Wiper ON	Changes the settings for the wiper operation when the headlights automatically come on while the headlight switch is in the AUTO position.	On*¹/Off


^{*1:}Default Setting

Setup Group	Customizable Features		Description	Selectable Settings
Vehicle	Door/ Window Setup	Auto Door Lock	Used to change the setting for when the doors automatically lock.	With Vehicle Speed*1/Shift from P/ Off
		Auto Door Unlock	Changes the setting for when the doors unlock automatically.	All Doors When Driver's Door Opens*1/All Doors When Shifted to Park/All Doors When Ignition Switched Off/Off
		Key and Remote Unlock Mode	Sets up the driver's door or all the doors to unlock on the first push of the remote.	Driver Door*1/All Doors
		Keyless Lock Answer Back	LOCK/UNLOCK- The exterior lights flash. LOCK (2nd push)- The beeper sounds.	On*1/Off
		Security Relock Timer	Changes the time it takes for the doors to relock and the security system to set after you unlock the vehicle without opening any door.	90seconds/ 60seconds/ 30seconds*1
		Walk Away Auto Lock	Changes the settings for the auto lock function when you walk away from the vehicle.	On/Off*1
	Maintenance Info.		Resets the Maintenance Minder™ display when you have performed the maintenance service.	_

^{*1:}Default Setting

Defaulting All the Settings

Reset all the menu and customized settings as the factory defaults.

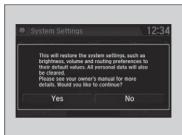

- 1. Select
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Others** tab.
- 5. Select Factory Data Reset.
 - A confirmation message appears on the screen.
- **6.** Select **Yes** to reset the settings.
- **7.** Select **Yes** again to reset the settings.
 - ► A confirmation message appears on the screen. Select **OK**.
 - After selecting **OK**, the system will reboot.

Defaulting All the Settings

When you transfer the vehicle to a third party, reset all settings to default and delete all personal data.

If you perform **Factory Data Reset**, it will reset the preinstalled apps to their factory default.

If you perform **Factory Data Reset**, you cannot use the HondaLink® because it becomes off line.

▶ HondaLink® P. 262

HomeLink® Universal Transceiver

The HomeLink® Universal Transceiver can be programmed to operate up to three remote controlled devices around your home, such as garage doors, lighting, or home security systems.

■ Important Safety Precautions

Refer to the safety information that came with your garage door opener to test that the safety features are functioning properly. If you do not have the safety information, contact the manufacturer.

Before programming HomeLink, make sure that people and objects are out of the way of the garage or gate to prevent potential injury or damage.

When programming a garage door opener, park just outside the garage door's path.

∑HomeLink® Universal Transceiver

Before programming HomeLink to operate a garage door opener, confirm that the opener has an external entrapment protection system, such as an "electronic eye," or other safety and reverse stop features. If it does not, HomeLink may not be able to operate it.

Training HomeLink




If it is necessary to erase a previously entered learned code:

- Press and hold the two outside buttons for about 20 seconds, until the red indicator blinks. Release the buttons, and proceed to step 1.
- If you are training the second or third button, go directly to step 1.

The instructions on the next page should work for most gate or garage openers, but may not work for all. For detailed instructions about your specific remote opener, visit http://www.homelink.com or call (800) 355-3515.

■ Training a Button

- 1. Position the remote transmitter you wish to link 1 to 3 inches (3 8 cm) from the HomeLink button you want to program.
- 2. Press and hold the desired HomeLink button. Hold the button on the remote transmitter. Does the HomeLink indicator (LED) change from slowly blinking to constantly on or rapidly blinking? The process should take less than 60 seconds.

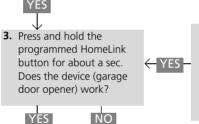

NO

Press and release the HomeLink button. Press and release the button on the remote every 2 secs.

Does the HomeLink indicator (LED) change from slowly blinking to *constantly on or rapidly blinking*? The process should take less than 60 seconds.

Training Complete 4. Press and hold the HomeLink button again.

5. Press and hold the HomeLink

HomeLink LED is

constantly on.

button again. The remote-controlled device should operate.

Training Complete

HomeLink indicator rapidly blinks.

A. The remote has a rolling code. Press the "learn" button on the remote-controlled device (e.g. garage door opener).

B. Within 30 secs, press and hold the programmed HomeLink button for 2 secs.

NO

Retraining a Button

If you want to retrain a programmed button for a new device, you do not have to erase all button memory. You can replace the existing memory code using this procedure:

1. Press and hold the desired HomeLink button until the HomeLink indicator begins to blink.

Standard transmitter Indicator remains on for about 25 secs Rolling code transmitter

about 25 secs.

2. Quickly release the HomeLink button and follow steps 1 - 3 under "Training a Button." You do not need to press and release the HomeLink button again in step 2.

Erasing Codes

To erase all the codes, press and hold the two outside buttons until the HomeLink indicator begins to blink (about 10 to 20 secs). You should erase all codes before selling the vehicle.


If you have any problems, see the device's instructions, visit www.homelink.com, or call HomeLink at (800) 355-3515.

HomeLink® is a registered trademark of Gentex Corporation.

Bluetooth® HandsFreeLink® (HFL) allows you to place and receive phone calls using your vehicle's audio system, without handling your cell phone.

Using HFL

■ HFL Buttons

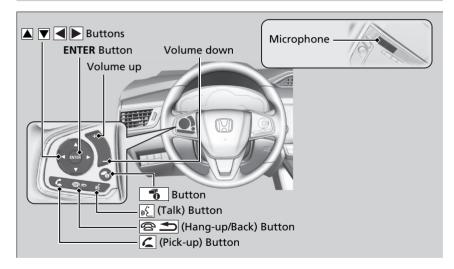

>> Bluetooth® HandsFreeLink®

Place your phone where you can get good reception.

To use HFL, you need a *Bluetooth*-compatible cell phone. For a list of compatible phones, pairing procedures, and special feature capabilities, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.

To use the system, the **Bluetooth On/Off Status** setting must be **On**. If there is an active connection to Apple CarPlay, HFL is unavailable.

How to customize P. 300

Voice control tips

- Aim the vents away from the ceiling and close the windows, as noise coming from them may interfere with the microphone.
- Press the button when you want to call a number using a stored voice tag. Speak clearly and naturally after a beep.
- If the microphone picks up voices other than yours, the command may be misinterpreted.
- To change the volume level, select the audio system's VOL (Volume) or use the remote audio controls on the steering wheel.

Up to five speed dial entries can be displayed among a total of 20 that can be entered.

Speed Dial P. 343

Up to five previous calls can be displayed at a time among a total of 20 that can be entered. If there is no call history, Call History is disabled.

(Pick-up) button: Press to go directly to the phone menu on the driver information interface, or to answer an incoming call.

(Hang-up/back) button: Press to end a call, go back to the previous command, or cancel a command.

(Talk) button: Press to access Voice Portal.

▲ ▼ buttons: Press to select an item displayed on the phone menu in the driver information interface.

ENTER button: Press to call a number listed in the selected item on the phone menu in the driver information interface.

button: Select and press **ENTER** to display **Speed Dial**, **Call History**, or **Phonebook** on the phone menu in the driver information interface.

To go to the **Phone Menu** screen:

- 1. Select
- **2.** Select **Phone** to switch the display to the phone screen.
- 3. Select 🖳.

>> Bluetooth® HandsFreeLink®

Bluetooth® Wireless Technology


The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Honda Motor Co., Ltd., is under license. Other trademarks and trade names are those of their respective owners.

HFL Limitations

An incoming call on HFL will interrupt the audio system when it is playing. It will resume when the call is ended.

■ HFL Status Display

The audio/information screen notifies you when there is an incoming call.

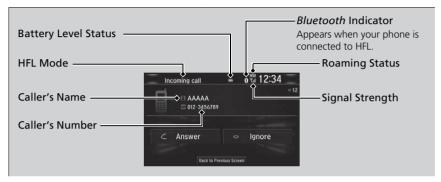

■ Limitations for Manual Operation

Certain manual functions are disabled or inoperable while the vehicle is in motion. You cannot select a grayed-out option until the vehicle is stopped.

Only previously stored speed dial entries with voice tags, phonebook names, or numbers can be called using voice commands while the vehicle is in motion.

Speed Dial P. 343

The information that appears on the audio/information screen varies between phone models.

You can change the system language.

How to customize P. 300

HFL Menus

The power mode must be in ACCESSORY or ON to use HFL.


■ Phone Settings screen





- 1. Select .
- 2. Select Settings.
- 3. Select Phone.

To use HFL, you must first pair your *Bluetooth*-compatible cell phone to the system while the vehicle is parked.

Some functions are limited while driving.

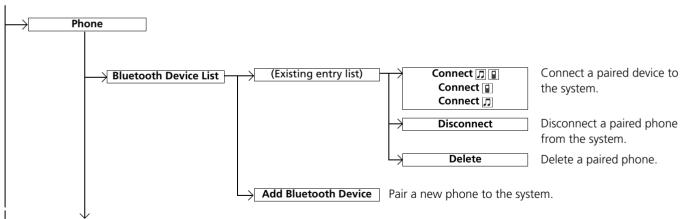

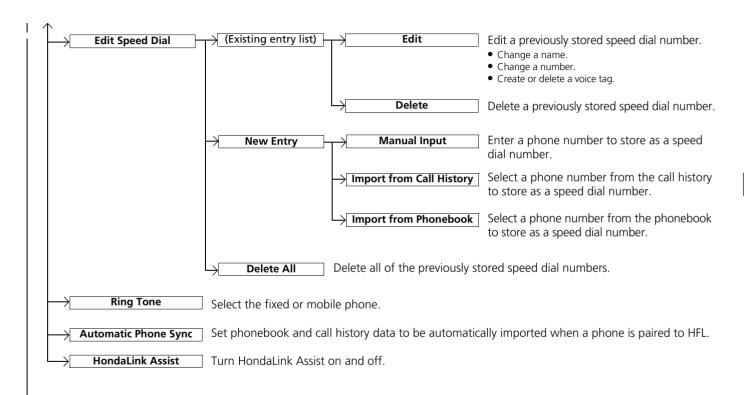


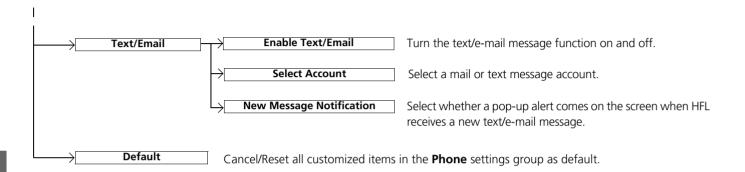


■ Phone Menu screen




- 1. Select
- 2. Select Phone
- 3. Select 🖳

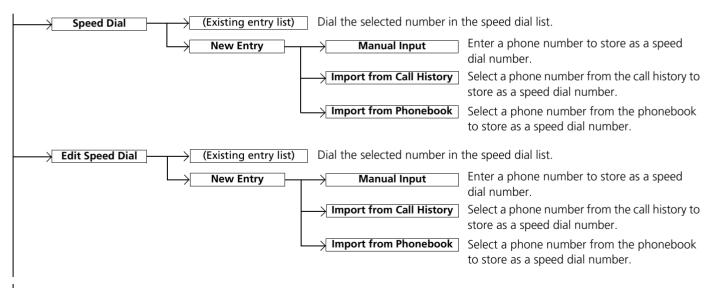

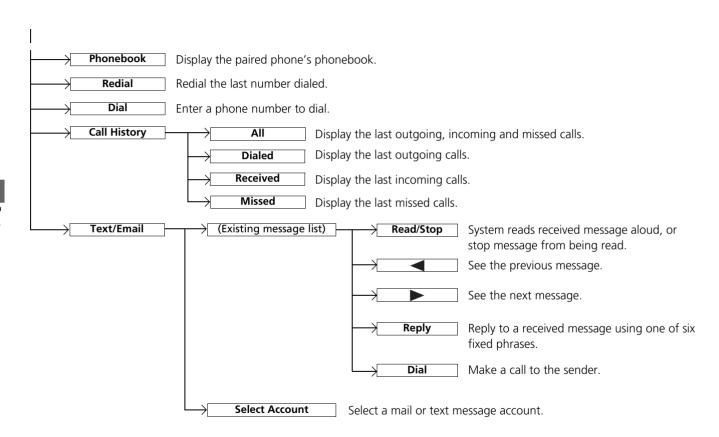

■ Phone Setup

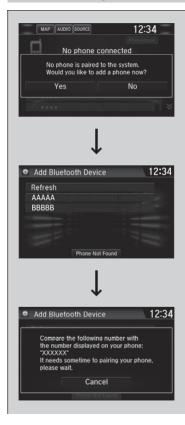

- To pair a cell phone (when there is no phone paired to the system)
- 1. Select Phone
- 2. Select Yes.
- **3.** Make sure your phone is in search or discoverable mode, then select **Continue**.
 - ► HFL automatically searches for a Bluetooth® device.
- **4.** Select your phone when it appears on the list.
 - ► If your phone does not appear, you can select **Refresh** to search again.
 - ▶ If your phone still does not appear, select Phone Not Found and search for Bluetooth® devices using your phone. From your phone, search for HandsFreeLink.
- **5.** The system gives you a pairing code on the audio/information screen.
 - Confirm if the pairing code on the screen and your phone match.This may vary by phone.

∑Phone Setup

Your *Bluetooth*-compatible phone must be paired to the system before you can make and receive handsfree calls.

Phone Pairing Tips:

- You cannot pair your phone while the vehicle is moving.
- Up to six phones can be paired.
- Your phone's battery may drain faster when it is paired to the system.
- If your phone is not ready for pairing or not found by the system within three minutes, the system will time out and return to idle.

Once you have paired a phone, you can see it displayed on the screen with one or two icons on the right side.

These icons indicate the following:

: The phone can be used with HFL.

The phone is compatible with *Bluetooth*® Audio.

If there is an active connection to Apple CarPlay, pairing of additional *Bluetooth*-compatible devices is unavailable and **Add Bluetooth Device** is grayed out from the **Bluetooth Device List** screen.





■ To change the currently paired phone

- **1.** Go to the **Phone Settings** screen.
 - **▶ Phone Settings screen** P. 332
- 2. Select Bluetooth Device List.
- **3.** Select a phone to connect.
 - ► HFL disconnects the connected phone and starts searching for another paired phone.
- 4. Select Connect ☐ ☐, Connect ☐, or Connect ☐
- To change the pairing code setting
- 1. Select .
- 2. Select Settings.
- 3. Select Bluetooth/Wi-Fi.
- **4.** Select the **Bluetooth** tab.
- 5. Select Edit Pairing Code.

6. Select Random or Fixed.

∑To change the currently paired phone

If no other phones are found or paired when trying to switch to another phone, HFL will inform you that the original phone is connected again.

To pair other phones, select **Add Bluetooth Device** from the **Bluetooth Device List** screen.

∑To change the pairing code setting

The default pairing code is **0000** until you change the setting.

To create your own, select **Fixed**, and delete the current code, then enter a new one.

For a randomly generated pairing code each time you pair a phone, select **Random**.




■ To delete a paired phone

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 332
- 2. Select Bluetooth Device List.
- **3.** Select a phone you want to delete.

- 4. Select **Delete**.
- **5.** A confirmation message appears on the screen. Select **Yes**.

■ To Set Up Text/E-mail Message Options



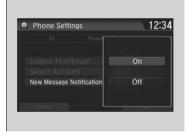

- To turn on or off the text/e-mail message function
- 1. Go to the Phone Settings screen.

 ▶ Phone Settings screen P. 332
- 2. Select the **Text/Email** tab, then **Enable Text/Email**.
 - A pop-up menu appears on the screen.
- 3. Select On or Off.
- To turn on or off the text/e-mail message notice
- 1. Go to the Phone Settings screen.

 ▶ Phone Settings screen P. 332
- 2. Select the **Text/Email** tab, then **New Message Notification**.
 - A pop-up menu appears on the screen.
- 3. Select On or Off.

∑To Set Up Text/E-mail Message Options

To use the text/e-mail message function, it may be necessary to set up on your phone.

Some text/e-mail message features may not be available depending on a cellular phone.

∑To turn on or off the text/e-mail message notice

On: A pop-up notification comes on every time you receive a new message.

Off: The message you receive is stored in the system without notification.

■ Ring Tone

You can change the ring tone setting.



- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 332
- 2. Select Ring Tone.
- **3.** Select **Fixed** or **Mobile Phone**.

Fixed: The fixed ring tone sounds from the speakers. **Mobile Phone**: For certain connected phones, the ring tone stored in the phone sounds from the speakers.

■ Automatic Import of Cellular Phonebook and Call History



12:34

Text/Email

Mobile Phone

On


■ When Automatic Phone Sync is set to On:

When your phone is paired, the contents of its phonebook and call history are automatically imported to the system.



- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 332
- 2. Select Automatic Phone Sync.

3. Select On or Off.



When you select a name from the list in the cellular phonebook, you can see up to three category icons. The icons indicate what types of numbers are stored for that name.



On some phones, it may not be possible to import the category icons to the system.

The phonebook is updated after every connection. Call history is updated after every connection or call.



Phone Settings

Edit Speed Dial

HondaLink Assist

Ring Tone

Bluetooth Device List

Automatic Phone Sync

■ Speed Dial

Up to 20 speed dial numbers can be stored per phone.

O'Tal 12:34 Speed Dial <New Entry> 12:34 New Entry Import from Phonebook Manual Input Import from Call 12:34 * Store Voice Tag To store a voice tag, select Record or push 5 wait for the count down. and say the voice tag you would like to store. Record

To store a speed dial number:

- 1. Go to the **Phone Menu** screen.

 Phone Menu screen P. 335
- 2. Select Speed Dial.
- 3. Select New Entry.
 From Import from Call History:
 - ► Select a number from the call history.

From Manual Input:

Input the number manually.

From **Import from Phonebook**:

- Select a number from the connected cell phone's imported phonebook.
- **4.** When the speed dial is successfully stored, you are asked to create a voice tag for the number. Select **Yes** or **No**.

5. Select **Record**, or use the <u>©</u> button and follow the prompts to complete the voice tag.

Speed Dial

When a voice tag is stored, press the <u>\varepsilon</u> button to call the number using the voice tag. Say the voice tag name.



■ To add a voice tag to a stored speed dial number

- 1. Go to the Phone Settings screen.

 ▶ Phone Settings screen P. 332
- 2. Select Edit Speed Dial.
- **3.** Select an existing speed dial entry.
 - From the pop-up menu, select **Edit**.
- 4. Select Voice Tag.
 - From the pop-up menu, select **Record**.
- **5.** Select **Record**, or use the <u>\(\limes\)</u> button and follow the prompts to complete the voice tag.

Play Phone No. Voice Tag Edit Speed Dial Play Record Clear

■ To delete a voice tag

- 1. Go to the Phone Settings screen. ▶ Phone Settings screen P. 332
- 2. Select Edit Speed Dial.
- 3. Select an existing speed dial entry.
 - From the pop-up menu, select **Edit**.
- **4.** Select **Voice Tag**.
 - From the pop-up menu, select Clear.
- **5.** A confirmation message appears on the screen. Select **Yes**.

Speed Dial

Avoid using duplicate voice tags.

Avoid using "home" as a voice tag.

It is easier for the system to recognize a longer name.

For example, use "John Smith" instead of "John."



■ To edit a speed dial

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 332
- 2. Select Edit Speed Dial.
- **3.** Select an existing speed dial entry.
 - From the pop-up menu, select **Edit**.
- **4.** Select a setting you want.

■ To delete a speed dial

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 332
- 2. Select Edit Speed Dial.
- **3.** Select an existing speed dial entry.

 ▶ From the pop-up menu, select **Delete**.
- **4.** A confirmation message appears on the screen. Select **Yes**

Phonebook Phonetic Modification

Add phonetic modifications or a new voice tag to the phone's contact name so that it is easier for HFL to recognize voice commands.



■ To add a new voice tag

- 1. Select
- 2. Select Settings.
- 3. Select System.
- 4. Select the Voice Recog. tab.
- 5. Select Phonebook Phonetic Modification.
- **6.** Select the phone you want to add phonetic modification to.

∑Phonebook Phonetic Modification

You can store up to 20 phonetic modification items.



- 7. Select New Voice Tag.
- **8.** Select a contact name you want to add to.
 - The pop-up menu appears on the screen.
- 9. Select Modify.
- **10.** Using **Record** or the <u>N</u> button, follow the prompts to complete the voice tag.
- **11.** You will receive a confirmation message on the screen, then select **OK**.



■ To modify a voice tag

- 1. Select
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Voice Recog.** tab.
- 5. Select Phonebook Phonetic Modification.
- **6.** Select the phone you want to modify phonetic modification.
- **7.** Select a contact name you want to modify.
 - ► The pop-up menu appears on the screen.
- **8.** Select **Modify**.
- **9.** Using **Record** or the <u>©</u> button, follow the prompts to complete the voice tag.
- **10.** You will receive a confirmation message on the screen, then select **OK**.

∑Phonebook Phonetic Modification

You can only modify or delete contact names for the currently connected phone.



■ To delete a modified voice tag

- 1. Select
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Voice Recog.** tab.
- 5. Select Phonebook Phonetic Modification
- **6.** Select the phone you want to delete phonetic modification.
- 7. Select a contact name you want to delete.
 - ▶ The pop-up menu appears on the screen.
- 8. Select Delete.
 - ► The selected contact name has been selected.
- 9. Select OK.



■ To delete all modified voice tags

- 1. Select
- 2. Select Settings.
- 3. Select System.
- **4.** Select the **Voice Recog.** tab.
- 5. Select Phonebook Phonetic Modification
- **6.** Select the phone you want to delete phonetic modification.
 - ▶ The contact name list appears.
- 7. Select **Delete All**.
- **8.** You will receive a confirmation message on the screen, then select **Yes**.

Making a Call



You can make calls by inputting any phone number, or by using the imported phonebook, call history, speed dial entries, or redial.

Making a Call

Any voice-tagged speed dial entry can be dialed by voice from most screens.

Press the 🛍 button and say the voice tag name.

Once a call is connected, you can hear the voice of the person you are calling through the audio speakers.

While there is an active connection with Apple CarPlay, phone calls cannot be made with HandsFreeLink® and are only made from Apple CarPlay.





■ To make a call using the imported phonebook

- 1. Go to the **Phone Menu** screen.

 Phone Menu screen P 335
- 2. Select Phonebook
- 3. Select a name.
 - You can also search by letter. Select **Search**.
 - Use the keyboard on the touch screen for entering a name, if multiple numbers exist select a number.
- 4. Select a number.
 - ▶ Dialing starts automatically.

■ To make a call using a phone number

- **1.** Go to the **Phone Menu** screen.
 - **▶ Phone Menu screen** P. 335
- 2. Select Dial.
- 3. Select a number.
 - ► Use the keyboard on the touch screen for entering numbers.
- 4. Select .
 - ▶ Dialing starts automatically.

∑To make a call using the imported phonebook

You can call a stored voice-tagged speed dial number using voice commands.

Speed Dial P. 343

∑To make a call using a phone number


You can call a stored voice-tagged speed dial number using voice commands.

Speed Dial P. 343



■ To make a call using redial

- 1. Go to the **Phone Menu** screen.
- 2. Select Redial.
 - ▶ Dialing starts automatically.

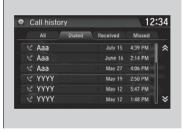

■ To make a call using the Call History Call history is stored by All, Dialed,

Received, and Missed.

- 1. Go to the **Phone Menu** screen.
- 2. Select Call History.
- 3. Select All, Dialed, Received, or Missed.
- **4.** Select a number.
 - ▶ Dialing starts automatically.

■ To make a call using a Speed Dial entry

- 1. Go to the **Phone Menu** screen.

 Phone Menu screen P. 335
- 2. Select Speed Dial.
- 3. Select a number.
 - ▶ Dialing starts automatically.

∑To make a call using the Call History

The call history displays the last 20 all, dialed, received, or missed calls.

(Appears only when a phone is connected to the system.)

∑To make a call using a Speed Dial entry

When a voice tag is stored, press the 🛍 button to call the number using the voice tag.

Speed Dial P. 343

Any voice-tagged speed dial entry can be dialed by voice from any screen.

Press the 🛍 button and follow the prompts.



■ Receiving a Call



When there is an incoming call, an audible notification sounds (if activated) and the **Incoming call** screen appears.

Press the button to answer the call.

Press the button to decline or end the call.

Options During a Call

The following options are available during a call.

Mute: Mute your voice.

Transfer: Transfer a call from the system to your phone.

Touch Tones: Send numbers during a call. This is useful when you call a menu-

driven phone system.



The available options are shown on the lower half of the screen

Select the option.

➤ The mute icon appears when **Mute** is selected. Select **Mute** again to turn it off.

■ Receiving a Call

Call Waiting

Press the <u>L</u> button to put the current call on hold to answer the incoming call.

Press the **\(\subseteq \)** button again to return to the current call.

Select **Ignore** to ignore the incoming call if you do not want to answer it.

Press the sutton if you want to hang up the current call.

You can select the icons on the audio/information screen instead of the 🕜 and 🕾 🗂 buttons.

∑Options During a Call

Touch Tones: Available on some phones.

You can select the icons on the audio/information screen.

Receiving a Text/E-mail Message

HFL can display newly received text or e-mail messages as well as 20 of the most recently received messages on a linked cell phone. Each received message can be read aloud and replied to using a fixed common phrase.



- **1.** A pop-up appears and notifies you of a new text or e-mail message.
- **2.** Select **Read** to listen to the message.
 - ► The text or e-mail message is displayed. The system automatically starts reading out the message.
- **3.** To discontinue the message read-out, select **Stop**.

■ Receiving a Text/E-mail Message

The system does not display any received messages while you are driving. You can only hear them read aloud.

The system can only receive massages that are sent as text (SMS) messages. Messages sent using data services will not be displayed in the list.

With some phones, you may be able to display up to 20 most recent text and e-mail messages.

State or local laws may limit your use of the HFL text/ e-mail message feature. Only use the text/e-mail message feature when conditions allow you to do so safely.

When you receive a text or e-mail message for the first time since the phone is paired to HFL, you are asked to turn the **New Message Notification** setting to **On**.

To turn on or off the text/e-mail message notice P. 340



■ Selecting a Mail Account

If a paired phone has text message or mail accounts, you can select one of them to be active and receive notifications.




- 1. Go to the Phone Settings screen.

 ▶ Phone Settings screen P. 332
- 2. Select the **Text/Email** tab, then **Select** Account.
 - ► A pop-up menu appears on the screen.
- **3.** Select **Text Messages** or an e-mail message account you want.

Selecting a Mail Account

You can also select a mail account from the folder list screen or the message list screen.

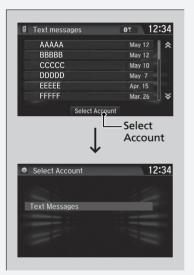

You can only receive notifications from one text message or mail account at a time.

Displaying Messages



■ Displaying text messages


- **1.** Go to the **Phone Menu** screen.
 - Phone Menu screen P. 335
- 2. Select Text/Email.
 - ► Select account if necessary.
- **3.** Select a message.
 - ➤ The text message is displayed. The system automatically starts reading the message aloud.

Displaying Messages

The \square icon appears next to an unread message.

If you delete a message on the phone, the message is also deleted in the system. If you send a message from the system, the message goes to your phone's outbox.

To see the previous or next message, select (previous) or (next) on the message screen.

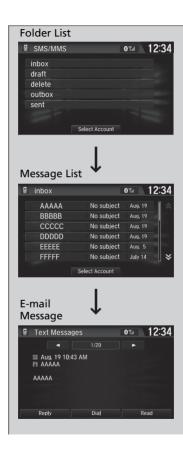

■ Displaying e-mail messages

- **1.** Go to the **Phone Menu** screen.
 - Phone Menu screen P. 335
- 2. Select Text/Email.
 - ► Select **Select Account** if necessary.
- 3. Select a folder.
- **4.** Select a message.
 - ➤ The e-mail message is displayed. The system automatically starts reading the message aloud.





■ Read or Stop reading a message

- **1.** Go to the text or e-mail message screen.
 - ► The system automatically starts reading the message aloud.
 - Displaying Messages P. 356
- **2.** Select **Stop** to stop reading. Select **Read** again to start reading the message from the beginning.

■ Reply to a message

- **1.** Go to the text or e-mail message screen.
 - ► The system automatically starts reading the message aloud.
 - **Displaying Messages** P. 356
- 2. Select Reply.
- **3.** Select the reply message.
 - ► The pop-up menu appears on the screen.
- **4.** Select **Send** to send the message.
 - ► Message sent appears on the screen when the reply message was successfully sent.

≥ Reply to a message

The available fixed reply messages are as follows:

- Talk to you later, I'm driving.
- I'm on my way.
- I'm running late.
- OK
- Yes
- No

You cannot add, edit, or delete reply messages.

Only certain phones receive and send messages when paired and connected. For a list of compatible phones, visit *automobiles.honda.com/handsfreelink/*, or call 1-888-528-7876.




■ Making a call to a sender

- **1.** Go to the text message screen.
- 2. Select Dial.

■ In Case of Emergency

■ Automatic collision notification

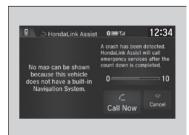

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically will attempt to connect to the HondaLink operator. If connected, information about your vehicle, its location, and its condition can be sent to the operator*1; you also can speak to the operator when connected.

IMPORTANT: For vehicles equipped with HondaLink Assist, owner activation constitutes authorization for Honda to collect information from your vehicle needed to provide the service, and agreement to the Terms of Use at www.hondalink.com/TermsAndConditions. In a crash, HondaLink Assist will attempt to notify emergency services but NEITHER Honda-PRO NOR ITS SERVICE PROVIDERS GUARANTEE THAT SUCH NOTIFICATION WILL OCCUR.

Honda reserves the right to terminate HondaLink Assist services at any time or for any reason, and in the future may not be able to provide services due to changes in, or obsolescence of, technology integral to the service or changes in governmental regulation.

Your vehicle may not be able to connect to the operator if the 12-volt battery level is low, the line is disconnected, or you do not have adequate cellular coverage.

You cannot use this emergency service when:


- You travel outside the HondaLink service coverage areas.
- There is a problem with the connecting devices, such as the microphones, speakers, or the unit itself.

You cannot operate other phone-related functions using the screen while talking to the operator. Select **Hang Up** to terminate the connection to your vehicle

If the unit fails to connect to the operator, it repeatedly tries until it succeeds.

*1: Depending on your phone and adequate cellular coverage, your vehicle's location may not be sent to the operator.

■ To enable notification

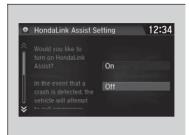

- **1.** Go to the **Phone Settings** screen. **▶ Phone Settings screen** P. 332
- **2.** Select the **Phone** tab, then **HondaLink Assist**.
 - A pop-up menu appears on the screen.
- 3. Select On or Off.

>> To enable notification

Setting options:

- On: Notification is available.
- Off: Disable the feature.



Before Driving	
Driving Preparation	
Maximum Load Limit	367
Towing a Trailer	
Towing Your Vehicle	369
When Driving	
Turning on the Power	370
Precautions While Driving	373
Transmission	374
Shifting	375
SPORT Mode	381
Acoustic Vehicle Alerting System	382
Front Sensor Camera	383
Road Departure Mitigation (RDM) System	385

Adaptive Cruise Control (ACC) with Low Speed Follow	
Electronic Stability Control (ESC), System	

Braking	
Brake System 4	25
Anti-lock Brake System (ABS) 4	31
Brake Assist System 4	
Collision Mitigation Braking System™	
(CMBS™)	33
Parking Your Vehicle	
When Stopped 4	41
Multi-View Rear Camera 4	
Refueling	
Fuel Information 4	45
How to Refuel 4	
Fuel Economy4	
Improving Fuel Economy4	

Before Driving

Driving Preparation

Check the following items before you start driving.

Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
 - Remove any frost, snow, or ice.
 - ► Remove any snow on the roof, as this can slip down and obstruct your field of vision while driving. If frozen solid, remove ice once it has softened.
 - ▶ When removing ice from around the wheels, be sure not to damage the wheel or wheel components.
- Make sure the hood is securely closed.
 - ▶ If the hood opens while driving, your front view will be blocked.
- Make sure the tires are in good condition.
 - ▶ Check air pressures, and check for damage and excessive wear.

≥ Checking and Maintaining Tires P. 468

- Make sure there are no people or objects behind or around the vehicle.
 - ▶ There are blind spots from the inside.

NOTICE

When doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

Do not pour warm water into the key cylinder. You will be unable to insert the key if the water freezes in the hole.

Heat from the power system can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.

■ Interior Checks


- Store or secure all items on board properly.
 - ➤ Carrying too much cargo, or improperly storing it, can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe.
 - Maximum Load Limit P. 367
- Do not pile items higher than the seat height.
 - ► They can block your view and may be thrown forward in the event of sudden braking.
- Do not place anything in the front seat footwells. Make sure to secure the floor mat.
 - An object or unsecured floor mat can interfere with your brake and accelerator pedal operation while driving.
- If you have any animals on board, do not let them move around in the vehicle.
 - ▶ They may interfere with driving and a crash could occur.
- Securely close and lock all doors and the trunk.
 - Locking/Unlocking the Doors from the Inside P. 142
- Adjust your seating position properly.
 - Adjust the head restraint, too.
 - Adjusting the Seats P. 172
 - **Adjusting the Front Head Restraints Positions** P. 174
- Adjust the mirrors and steering wheel properly.
 - Adjust them while sitting in the proper driving position.
 - Adjusting the Mirrors P. 170
 - **Adjusting the Steering Wheel** P. 169

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk, have the aiming readjusted at an authorized Honda Clarity Fuel Cell dealer or by a qualified technician.

- Be sure items placed on the floor behind the front seats cannot roll under the seats.
 - ▶ They can interfere with the driver's ability to operate the pedals, the operation of the seats, or the operation of the sensors under the seats.
- Everyone in the vehicle must fasten their seat belt.
 - Fastening a Seat Belt P. 51
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.
 - Always have an authorized Honda Clarity Fuel Cell dealer check the vehicle if a problem is indicated.
 - **▶ Indicators** P. 86

Maximum Load Limit

The maximum load for your vehicle is 850 lbs (385 kg). See the Tire and Loading Information label attached to the driver's doorjamb.

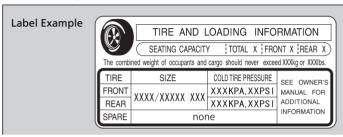

This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer.

Steps for Determining Correct Load Limit -

- (1) Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- (2) Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3) Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4) The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb. passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs.

 $(1,400 - 750 (5 \times 150) = 650 \text{ lbs.})$

Maximum Load Limit

■ Maximum Load Li

AWARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Gross Vehicle Weight Rating (GVWR): The maximum allowable weight of the vehicle, all occupants, all accessories and all cargo.

Specifications P. 530


Gross Axle Weight Rating (GAWR):

The maximum allowable weight of the vehicle axle.

Specifications P. 530

- **(5)** Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
- **(6)** If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

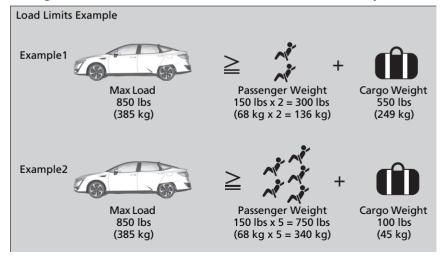

Maximum Load Limit

Towing a Trailer:

See Towing a Trailer to determine whether your vehicle is designed to tow a trailer.

Towing a Trailer P. 369

Towing a Trailer

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

Towing Your Vehicle

Your vehicle is not designed to be towed behind a motor home. If your vehicle needs to be towed in an emergency, refer to the emergency towing information.


Emergency Towing P. 526

When Driving

Turning on the Power



1. Make sure the parking brake is applied.

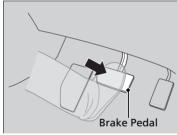

2. Depress the brake pedal.

∑Turning on the Power

Keep your foot firmly on the brake pedal when starting the power system.

When turning on the power system in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce 12-volt battery drain.

It may take a longer time to start in very cold conditions or may not start at all until temperatures rise.

If the temperature of the fuel cell or the High Voltage battery drops below $-4^{\circ}F$ ($-20^{\circ}C$), the fuel cells will not operate and, as a result, the vehicle will not start. Store the vehicle in a garage or take another measure to insure that temperature of the fuel cell and High Voltage battery does not fall below this temperature. If necessary, consult an authorized Honda Clarity Fuel Cell dealer.



- **3.** Without depressing the accelerator pedal, press the **POWER** button while depressing the brake pedal.
- 4. Check the **READY** indicator.
 - ► Keep depressing the brake pedal until the **READY** indicator comes on.
 - ► The **READY** indicator comes on when the power system is on and you can start driving.
 - ▶ If the outside temperature is extremely low, you cannot drive until conditions are improved. In this case, the **READY** indicator does not come on and a warning message appears on the driver information interface.
 - ▶ Driver Information InterfaceWarning and Information MessagesP. 102

Stopping the Power System

You can turn the power system off when the vehicle is completely stopped.

- **1.** Put the transmission into **P**.
- 2. Press the **POWER** button.

∑Turning on the Power

The immobilizer system protects your vehicle from theft.

If an improperly coded device is used, the power system does not activate.

Immobilizer System P. 149

When you set the power mode to ON, you may feel as if the brake pedal is sinking down. This is normal.

Bring the smart entry remote close to the **POWER** button if the battery in the smart entry remote is weak.

▶ If the Smart Entry Remote Battery is Weak P. 504

The power system may not activate if the smart entry remote is subjected to strong radio waves.

Do not hold the **POWER** button to start the power system.

If the power system does not start, wait at least 10 seconds before trying again.

Starting to Drive

- **1.** Keeping your right foot on the brake pedal, check that the **READY** indicator is on, then put the transmission into $\boxed{\mathbf{D}}$. Select $\boxed{\mathbf{R}}$ when reversing.
- **2.** With the parking brake applied, release the brake pedal and gently depress the accelerator pedal.
 - ► Make sure the parking brake and brake system indicator (red) goes off. ▶ Parking Brake P. 425

■ Hill Start Assist System

Hill start assist keeps the brake engaged briefly to help prevent the vehicle from rolling on inclines as you move your foot from the brake pedal to the accelerator.

Change to $\boxed{\mathbf{D}}$ when facing uphill, or $\boxed{\mathbf{R}}$ when facing downhill, then release the brake pedal.

Starting to Drive

You can also release the parking brake by pressing the electric parking brake switch while depressing the brake pedal.

When facing downhill, you can start your vehicle more smoothly by manually releasing it with the electric parking brake switch than by releasing it with the accelerator pedal.

Hill start assist may not prevent the vehicle from rolling downhill on a very steep or slippery slope, and will not operate on small inclines.

Hill start assist is not a replacement for the parking brake.

Precautions While Driving

In Rain

Avoid driving in deep water and on flooded roads. This can damage the power system or driveline, or cause electrical component failure.

▶ Precautions While Driving

NOTICE

Do not select a shift button while pressing the accelerator pedal.

NOTICE

The following can damage the rear frames and rear suspensions. Be careful when driving.

- Backing up the vehicle into a space with a parking block or road shoulder
- Driving up or down to a different surface level (such as a road shoulder)
- Driving on a road with potholes

NOTICE

If you repeatedly turn the steering wheel at an extremely low speed, or hold the steering wheel in the full left or right position for a while, the electric power steering (EPS) system heats up. The system goes into a protective mode, and limits its performance. The steering wheel becomes harder and harder to operate. Once the system cools down, the EPS system is restored.

Repeated operation under these conditions can eventually damage the system.

If the power mode is set to ACCESSORY while driving, the power system will shut down and all steering and brake power assist functions will stop, making it difficult to control the vehicle.

Other Precautions

If there is a strong impact with something under the vehicle, stop in a safe location. Check the underside of the vehicle for damage or any fluid leaks, and contact an authorized Honda Clarity Fuel Cell dealer.

Transmission

Creeping

As with a conventional gasoline-powered vehicle with an automatic transmission, this vehicle will creep.

Keep the brake pedal firmly depressed when stopped.

▶ Precautions While Driving


Do not press the $\boxed{\textbf{N}}$ button, as you will lose regenerative braking (and acceleration) performance.

Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

Shifting

Change the gear position in accordance with your driving needs.

■ Shift button positions

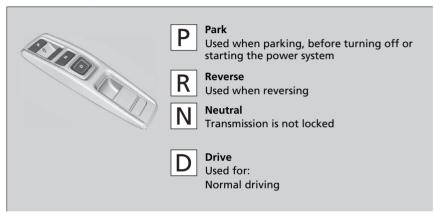

Shifting

AWARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.


A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that P is shown on the gear position indicator.

To prevent malfunction and unintended engagement:

- Do not spill any liquids on or around shift buttons.
- Do not place or drop any objects on or around shift buttons.
- Do not let passengers or children operate the shift buttons.

■ P (parking) button

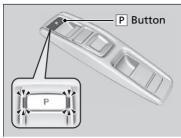


The gear position changes to \boxed{P} when you press the \boxed{P} button while the vehicle is parked with the power mode in ON. The indicators on the sides of the \boxed{P} button come on.

Shifting

The beeper sounds and the message appears on the driver information interface when you depress the accelerator pedal with the gear position in $\boxed{\bf N}$. Change the gear position to $\boxed{\bf D}$ or $\boxed{\bf R}$ with the brake pedal depressed.

■ Shift Operation

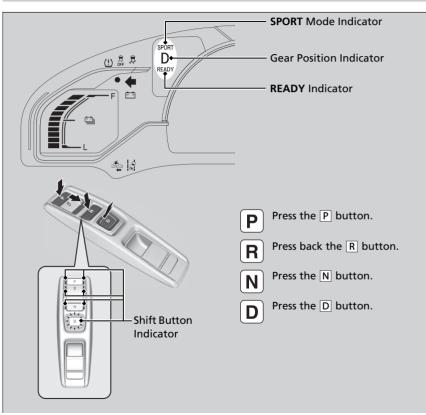

Shift Operation

NOTICE

When you change D to R and vice versa, come to a complete stop and keep the brake pedal depressed. Operating the shift button before the vehicle has come to a complete standstill can damage the transmission.

Use the gear position indicator and the shift button indicator to check the gear position before and after selecting a shift button.

If the indicator of the currently selected gear position, or all the gear position indicators are blinking simultaneously, there is a problem with the transmission.

Avoid sudden acceleration and have the transmission checked by an authorized Honda Clarity Fuel Cell dealer as soon as possible.

The beeper sounds once when you change to **R**.

■ When opening the driver's door

If you open the driver's door under the following conditions, the gear position automatically changes to \boxed{P} .

- The vehicle is in stationary with the power mode in ON, or moving at 1 mph (2 km/h) or slower.
- The transmission is in other than P.
- You have unfastened the driver side seat belt.
 - ▶ If you manually change the gear position from P with the brake pedal depressed, the gear position will automatically return to P once you release the brake pedal.

■ When turning off the power mode

If you turn the power system off while the vehicle is stationary, and the transmission is in other than [P], the gear position automatically changes to [P].

While the system is designed to automatically change the gear position to \boxed{P} under the described conditions, in the interest of safety you should always select \boxed{P} before opening the driver's door. Make sure to park the vehicle in a safe place.


₩hen Stopped P. 441

If you want to drive the vehicle after the gear position has automatically changed to P under the described conditions, close the door, fasten the seat belt, depress the brake pedal, then change the gear position.

If you leave the vehicle, turn off the power system and lock the doors.

■ If you want to keep the transmission in N position [car wash mode] With the power system on:

- 1. Depress the brake pedal.
- 2. Make sure the **READY** indicator is on.
- **3.** Press [N]. Within six seconds press and hold [N] for two seconds.
 - ➤ This puts the vehicle in car wash mode which must be used when your vehicle is pulled through a conveyor type automatic car wash where you or an attendant do not remain in the vehicle.

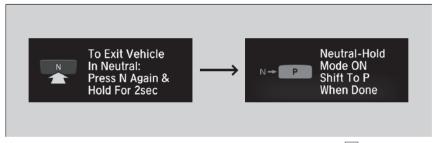

If you want to cancel car wash mode, select a position other than \mathbb{N} .

If you want to reduce fuel consumption in car wash mode:

Press the **POWER** button during car wash mode.

- ► Make sure the **READY** indicator is off.
- ► The gear position remains in N with the power mode in ACCESSORY for 15 minutes, then, it automatically changes to P and the power mode changes to OFF

Manually changing to \boxed{P} cancels ACCESSORY mode. The \boxed{P} indicator comes on and the power mode changes to OFF. You must always shift to \boxed{P} when car wash mode is no longer needed.

■If you want to keep the transmission in

N position [car wash mode]

To keep the vehicle in $\boxed{\mathbf{N}}$ position, you can also follow this procedure:

While the power system is on, select $\overline{\mathbb{N}}$, and then within five seconds, press the **POWER** button. Note that the transmission may not stay in $\overline{\mathbb{N}}$ position while any of the following indicators is on:


- POWER SYSTEM indicator
- Transmission system indicator
- 12-volt battery charging system indicator

■ Restriction on selecting a gear position

You cannot select a gear position under certain circumstances that may lead to a crash.

When the transmission is in:	1. Under the circumstances of that:	2. You cannot select:	3. The gear position remains in/changes to:	How to change the gear position	
P	The brake pedal is not depressed.				
P	The accelerator pedal is depressed.		Р	Release the accelerator	
N	The vehicle is moving at low speed without the brake pedal depressed.	Other gear position	N	pedal and depress the brake pedal.	
N	The vehicle is moving at low speed with the accelerator pedal depressed.				
N or D	The vehicle is moving forward.	R			
R or N	The vehicle is moving backward.	D		Park your vehicle in a safe place.	
R, N, or D	The vehicle is moving.	P			
P or N	The READY indicator is not on.	A gear position other than $\boxed{\textbf{P}}$ or $\boxed{\textbf{N}}$	P or N	Make sure that the READY indicator comes on.	

SPORT Mode

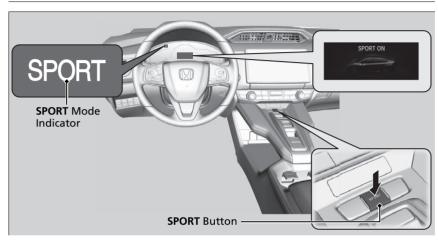

To turn the SPORT mode on and off, press the **SPORT** button.

The SPORT mode delivers increased handling agility and responsiveness. This mode is suitable for driving on hills or through curves on mountain roads.

The SPORT mode is turned off every time you start the power system, even if you turned it on the last time you drove the vehicle.


Acoustic Vehicle Alerting System

Alerts pedestrians when the vehicle transmission is in a position other than \boxed{P} and is traveling at speeds of 22 mph (36 km/h) or less.

Front Sensor Camera

The camera, used in systems such as LKAS, RDM, ACC with Low Speed Follow, and CMBS™, is designed to detect an object that triggers any of the systems to operate its functions.

Camera Location and Handling Tips

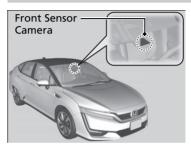

This camera is located behind the rearview mirror.

To help reduce the likelihood that high interior temperatures will cause the camera's sensing system to shut off, when parking, find a shady area or face the front of the vehicle away from the sun. If you use a reflective sun shade, do not allow it to cover the camera housing. Covering the camera can concentrate heat on it.

Never apply a film or attach any objects to the windshield, hood, or front grille that could obstruct the camera's field of vision and cause the system to operate abnormally.

Scratches, nicks, and other damage to the windshield within the camera's field of vision can cause the system to operate abnormally. If this occurs, we recommend that you replace the windshield with a genuine Honda replacement windshield. Making even minor repairs within the camera's field of vision or installing an aftermarket replacement windshield may also cause the system to operate abnormally. After replacing the windshield, have an authorized Honda Clarity Fuel Cell dealer recalibrate the camera. Proper calibration of the camera is necessary for the system to operate properly.

Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.

>> Front Sensor Camera

If the Some Driver Assist Systems Cannot Operate: Camera Temperature Too High message appears:

- Use the climate control system to cool down the interior and, if necessary, also use defroster mode with the airflow directed towards the camera.
- Start driving the vehicle to lower the windshield temperature, which cools down the area around the camera.

If the Some Driver Assist Systems Cannot Operate: Clean Front Windshield message appears:

 Park your vehicle in a safe place, and clean the windshield. If the message does not disappear after you have cleaned the windshield and driven for a while, have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.

Road Departure Mitigation (RDM) System

Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether.

How the System Works



The front camera behind the rearview mirror monitors left and right lane markings (in white or yellow). If your vehicle is getting too close to detected lane markings without a turn signal activated, the system, in addition to a visual alert, applies steering torque and alerts you with rapid vibrations on the steering wheel, to help you remain within the detected lane.

Customized Features P 300

As a visual alert, the **Lane Departure** message appears on the driver information interface.

If the system determines that its steering input is insufficient to keep your vehicle on the roadway, it may apply braking.

► Braking is applied only when the lane markings are solid continuous lines.

The system cancels assisting operations when you turn the steering wheel to avoid crossing over detected lane markings.

If the system operates several times without detecting driver response, the system beeps to alert you.

■ Road Departure Mitigation (RDM) System

Important Safety Reminder

Like all assistance systems, the RDM system has limitations.

Over-reliance on the RDM system may result in a collision. It is always your responsibility to keep the vehicle within your driving lane.

The RDM system only alerts you when lane drift is detected without a turn signal in use. The RDM system may not detect all lane markings or lane or roadway departures; accuracy will vary based on weather, speed and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 383

The RDM system may not work properly or may work improperly under the certain conditions:

RDM Conditions and Limitations P. 387


There are times when you may not notice RDM functions due to your operation of the vehicle, or road surface conditions.

How the System Activates

The system becomes ready to start searching for lane markings when all the following conditions are met:

- The vehicle is traveling between about 45 and 90 mph (72 and 145 km/h).
- The vehicle is on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not depressed.
- The wipers are not in continuous operation.
- The vehicle is not accelerating or braking, and the steering wheel is not being turned.
- The system makes a determination that the driver is not actively accelerating, braking or steering.

RDM On and Off

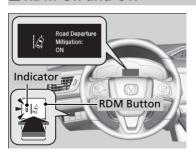

Press the RDM button to turn the system on and off.

➤ The indicator in the button comes on and the message appears on the driver information interface when the system is on.

➤ How the System Activates

The RDM system may automatically shut off and the $||\mathcal{L}||$ indicator comes and stays on.

Indicators P. 86

RDM system function can be impacted when the vehicle is:

- Not driven within a traffic lane.
- Driven on the inside edge of a curve, or outside of a lane.
- Driven in a narrow lane.

When you have selected **Warning Only** from the customized options using the audio/information screen, the system does not operate the steering wheel and braking.

■ Customized Features P. 300

RDM Conditions and Limitations

The system may not properly detect lane markings and the position of your vehicle under certain conditions. Some examples of these conditions are listed below.

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between lane lines and the roadway surface.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Shadows of adjacent objects are parallel to lane markings.
- Roadway objects or structures are misinterpreted as lane markers.
- Reflections on the interior of the windshield.

■ Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.
- The roadway has merging, split, or crossing lines (e.g., such as at an intersection or crosswalk).
- The lane markings are extremely narrow, wide, or changing.
- The vehicle in front of you is driving near the lane lines.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognized as white lines (or yellow lines).
- Driving on roads with double lines.


■ Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windshield is streaked or blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windshield is fogged.
- The camera temperature gets too high.
- An abnormal tire or wheel condition (wrong sized, varied size or construction, improperly inflated tire, etc.).
- The vehicle is tilted due to a heavy load or suspension modifications.
- When tire chains are installed.

Adaptive Cruise Control (ACC) with Low Speed Follow

Helps maintain a constant vehicle speed and a set following-interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle, without you having to keep your foot on the brake or the accelerator.

When ACC with Low Speed Follow slows your vehicle by applying the brakes, your vehicle's brake lights will illuminate.

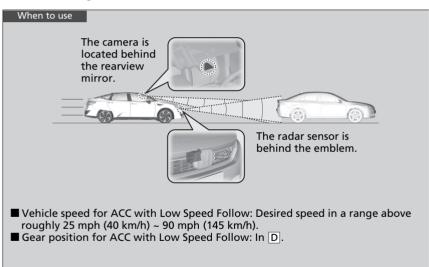

Madaptive Cruise Control (ACC) with Low Speed Follow

AWARNING

Improper use of ACC with Low Speed Follow can lead to a crash.

Use ACC with Low Speed Follow only when driving on expressways or freeways and in good weather conditions.

AWARNING

ACC with Low Speed Follow has limited braking capability and may not stop your vehicle in time to avoid a collision with a vehicle that quickly stops in front of you.


Always be prepared to apply the brake pedal if the conditions require.

Important Reminder

As with any system, there are limits to ACC with Low Speed Follow. Use the brake pedal whenever necessary, and always keep a safe interval between your vehicle and other vehicles.

Be careful not to severely impact the radar sensor cover.

■ How to activate the system

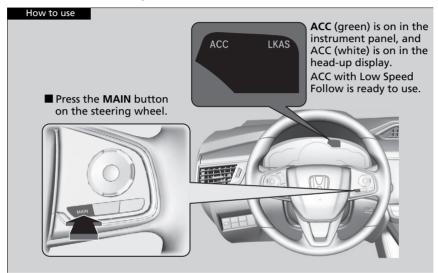

Madaptive Cruise Control (ACC) with Low Speed Follow

When the **MAIN** button is pressed, both ACC with Low Speed Follow and the Lane Keeping Assist System (LKAS) are either turned on or off.

ACC with Low Speed Follow may not work properly under certain conditions.


ACC with Low Speed Follow Conditions and Limitations P. 396

When not using ACC with Low Speed Follow: Turn off adaptive cruise by pressing the **MAIN** button. This also will turn off the Lane Keeping Assist System (LKAS).

Do not use ACC with Low Speed Follow under the following conditions:


- On roads with heavy traffic or while driving in continuous stop and go traffic.
- On roads with sharp turns.
- On roads with steep downhill sections, as the set vehicle speed can be exceeded by coasting. In such cases, ACC with Low Speed Follow will not apply the brakes to maintain the set speed.
- On roads with toll collection facilities or other objects between lanes of traffic, or in parking areas, or facilities with drive through access.

■ To Set the Vehicle Speed

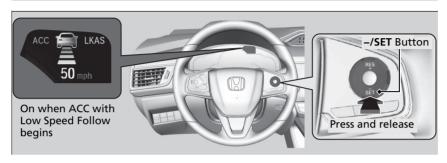

When driving at about 25 mph (40 km/h) or above: Take your foot off the pedal and press the –/SET button when you reach the desired speed. The moment you release the button, the set speed is fixed, and ACC with Low Speed Follow begins.

When driving slower than about 25 mph (40 km/h): If the vehicle is moving and the brake pedal is not depressed, pressing the button fixes the set speed to about 25 mph (40 km/h) regardless of current vehicle speed. If your vehicle is stationary, you can set the vehicle speed even with the brake pedal depressed.

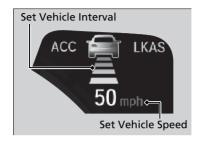

When ACC with Low Speed Follow starts operating, the vehicle icon, interval bars and set speed appear on the driver information interface.


When you use ACC with Low Speed Follow, Straight Driving Assist (a feature of the Electric Power Steering system) is activated. By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.

When in Operation

■ There is a vehicle ahead

ACC with Low Speed Follow monitors if a vehicle ahead of you enters the ACC with Low Speed Follow range. If a vehicle is detected doing so, the ACC with Low Speed Follow system maintains or decelerates your vehicle's set speed in order to keep the vehicle's set following-interval from the vehicle ahead.

▶ To Set or Change Following-Interval P. 399

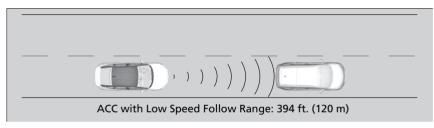



When a vehicle whose speed is slower than your set speed is detected in front of you, your vehicle starts to slow down.

When in Operation

If the vehicle ahead of you slows down abruptly, or if another vehicle is detected cutting in front of you, the beeper sounds, a message appears on the driver information interface, and the head-up warning lights come on.

Depress the brake pedal, and keep an appropriate interval from the vehicle ahead.



Even if the interval between your vehicle and the vehicle detected ahead is short, ACC with Low Speed Follow may start accelerating your vehicle under the following circumstances:

- The vehicle ahead of you is going at almost the same speed as, or faster than, your vehicle.
- A vehicle that cuts in front of you is going faster than your vehicle, gradually increasing the interval between the vehicles.

You can also set the system to beep when a vehicle detected in front of you comes in and goes out of the ACC with Low Speed Follow detecting range. Change the ACC Forward Vehicle Detect Beep setting.

2 Customized Features P 300

■ There is no vehicle ahead



information interface

Your vehicle maintains the set speed without having to keep your foot on the brake or accelerator pedal.

If there previously was a vehicle detected ahead that kept your vehicle from traveling at the set speed, ACC with Low Speed Follow accelerates your vehicle to the set speed, and then maintains it.

■ When you depress the accelerator pedal

You can temporarily increase the vehicle speed. In this case, there is no audible or visual alert even if a vehicle is in the ACC with Low Speed Follow range. ACC with Low Speed Follow stays on unless you cancel it. Once you release the accelerator pedal, the system resumes an appropriate speed for keeping the following-interval while a vehicle ahead is within the ACC with Low Speed Follow range.

When in Operation ■

AWARNING

Exiting a vehicle that has been stopped while the ACC with Low Speed Follow system is operating can result in the vehicle moving without operator control.

A vehicle that moves without operator control can cause a crash, resulting in serious injury or death.

Never exit a vehicle when the vehicle is stopped by ACC with Low Speed Follow.

Limitations

You may need to use the brake to maintain a safe interval when using ACC with Low Speed Follow. Additionally, ACC with Low Speed Follow may not work properly under certain conditions.

ACC with Low Speed Follow Conditions and Limitations P 396

When you depress the accelerator pedal

While the accelerator pedal is depressed, the system does not apply the brakes to keep the following interval, as well as the **BRAKE** message on the driver information interface does not appear.

■ A vehicle detected ahead is within ACC with Low Speed Follow range and slows to a stop



Your vehicle also stops, automatically. The **Stopped** message appears on the driver information interface and the head-up display.

When the vehicle ahead of you starts again, the vehicle icon on the driver information interface blinks. If you press the **RES/+** or **-/SET** button, or depress the accelerator pedal, ACC with Low Speed Follow operates again within the prior set speed.

■ ACC with Low Speed Follow Conditions and Limitations

The system may automatically shut off and the **ACC** indicator will come on under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the ACC functions.

Front Sensor Camera P. 383

■ Environmental conditions

Driving in bad weather (rain, fog, snow, etc.).

■ Roadway conditions

Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).

■ Vehicle conditions

- The outside of the windshield is blocked by dirt, mud, leaves, wet snow, etc.
- An abnormal tire or wheel condition (Wrong sized, varied size or construction, improperly inflated tire, etc.).
- The camera temperature gets too high.
- The parking brake is applied.
- When the front grille is dirty.
- The vehicle is tilted due to a heavy load or suspension modifications.
- When tire chains are installed

■ ACC with Low Speed Follow Conditions and Limitations

The radar sensor for ACC with Low Speed Follow is shared with the collision mitigation braking system TM (CMBS TM).

Collision Mitigation Braking System™ (CMBS™) P. 433

You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 383

Always keep the radar sensor cover clean.

Never use chemical solvents or polishing powder for cleaning the sensor cover. Clean it with water or a mild detergent.

Do not put a sticker on the radar sensor cover or replace the radar sensor cover.

If you need the radar sensor to be repaired, or removed, or the radar sensor cover is strongly impacted, turn off the system by pressing the **MAIN** button and take your vehicle to an authorized Honda Clarity Fuel Cell dealer.

■ Detection limitations

- A vehicle suddenly crosses in front of you.
- The interval between your vehicle and the vehicle ahead of you is too short.
- A vehicle cuts in front of you at a slow speed, and it brakes suddenly.
- When you accelerate rapidly and approach the vehicle ahead of you at high speed.
- The vehicle ahead of you is a motorcycle, bicycle, mobility scooter, or other small vehicle.
- When there are animals in front of your vehicle.
- When you drive on a curved or winding or undulating road that makes it difficult for the sensor to properly detect a vehicle in front of you.
- The speed difference between your vehicle and a vehicle in front of you is significantly large.
- An oncoming vehicle suddenly comes in front of you.
- Your vehicle abruptly crosses over in front of an oncoming vehicle.
- When driving through a narrow iron bridge.
- When the vehicle ahead of you brakes suddenly.
- When the vehicle ahead of you has a unique shape.
- When your vehicle or the vehicle ahead of you is driving on one edge of the lane.

■ACC with Low Speed Follow Conditions and Limitations


Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer if you find any unusual behavior of the system (e.g., the warning message appears too frequently).

If the front of the vehicle is impacted in any of the following situations, the radar sensor may not work properly. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer:

- The vehicle mounted onto a bump, curb, chock, embankment, etc.
- You drive the vehicle where the water is deep.
- Your vehicle has a frontal collision.

■ To Adjust the Vehicle Speed

Increase or decrease the vehicle speed using the **RES/+** or **-/SET** button on the steering wheel.

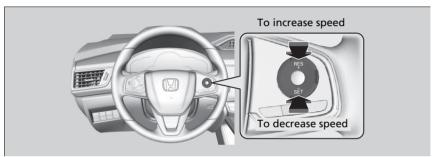

- Each time you press the **RES/+** or **-/SET** button, the vehicle speed is increased or decreased by about 1 mph or 1 km/h accordingly.
- If you press and hold the **RES/+** or **-/SET** button, the vehicle speed increases or decreases by about 5 mph or 5 km/h accordingly.


∑To Adjust the Vehicle Speed

If a vehicle detected ahead is going at a speed slower than your increased set speed, ACC with Low Speed Follow may not accelerate your vehicle. This is to maintain the set interval between your vehicle and the vehicle ahead.

You can switch the displayed set speed measurements on the driver information interface between mph and km/h.

B Gauges P. 116

■ To Set or Change Following-Interval

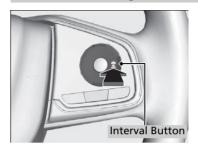

Press the (interval) button to change the ACC with Low Speed Follow following-interval.

Each time you press the button, the followinginterval (the interval behind a vehicle detected ahead of you) setting cycles through extra long, long, middle, and short followingintervals.


Determine the most appropriate followinginterval setting based on your specific driving conditions. Be sure to adhere to any following-interval requirements set by local regulation.

The higher your vehicle's following-speed is, the longer the short, middle, long or extra long following-interval becomes. See the following examples for your reference.

Following-interval		When the Set Speed is:	
		50 mph (80 km/h)	65 mph (104 km/h)
Short		83 feet 25 meters 1.1 sec	100 feet 31 meters 1.1 sec
Middle	皇	110 feet 33 meters 1.5 sec	137 feet 42 meters 1.4 sec
Long	\frac{1}{2}	154 feet 47 meters 2.1 sec	200 feet 61 meters 2.1 sec
Extra Long		204 feet 62 meters 2.8 sec	265 feet 81 meters 2.8 sec

When your vehicle stops automatically because a vehicle detected ahead of you has stopped, the interval between the two vehicles will vary based on the ACC with Low Speed Follow interval setting.

■ To Cancel

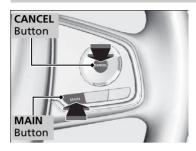

To cancel ACC with Low Speed Follow, do any of the following:

- Press the **CANCEL** button.
- Press the **MAIN** button.
 - ► ACC with Low Speed Follow indicator goes off.
- Depress the brake pedal while the vehicle is moving forward.

∑To Cancel

Resuming the prior set speed: After you have canceled ACC with Low Speed Follow, you can resume the prior set speed while it is still displayed. Press the **RES/+** button.

The set speed cannot be set or resumed when ACC with Low Speed Follow has been turned off using the **MAIN** button. Press the **MAIN** button to activate the system, then set the desired speed.

■ Automatic cancellation

The beeper sounds and a message appears on the driver information interface and the head-up display when ACC with Low Speed Follow is automatically canceled. Any of these conditions may cause the ACC with Low Speed Follow to automatically cancel:


- Bad weather (rain, fog, snow, etc.)
- When the radar sensor in the front grille gets dirty.
- An abnormal tire condition is detected, or the tires are skidding.
- Driving on a mountainous road, or driving off road for extended periods.
- Abrupt steering wheel movement.
- When the ABS, VSA® or CMBS™ is activated.
- When the ABS or VSA® system indicator comes on.
- When the vehicle is stopped on a very steep slope.
- When you manually apply the parking brake.
- When the detected vehicle within the ACC with Low Speed Follow range is too close to your vehicle.
- When a detected vehicle goes out of the ACC with Low Speed Follow range while your vehicle is stationary.
- The camera behind the rearview mirror, or the area around the camera, including the windshield, gets dirty.

The ACC with Low Speed Follow automatic cancellation can be also triggered by the following causes. In these cases, the parking brake will be automatically applied.

- The driver's seat belt is unfastened when the vehicle is stationary.
- The vehicle stops for more than 10 minutes.
- The power system is turned off.

Even though ACC with Low Speed Follow has been automatically canceled, you can still resume the prior set speed. Wait until the condition that caused ACC with Low Speed Follow to cancel improves, then press the **RES/+** button.

■ To Switch ACC with Low Speed Follow to Cruise Control

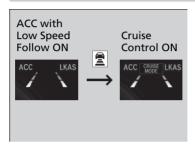

Press and hold the (interval) button for one second. **Cruise Mode Selected** appears on the driver information interface for two seconds, and then the mode switches to Cruise.

To switch back to ACC with Low Speed Follow, press and hold the button again for one second. **ACC Mode Selected** appears on the driver information interface for two seconds.

■ When to use

Desired speed in a range above roughly 25 mph (40 km/h) ~.

■ To Set the Vehicle Speed

Take your foot off the pedal and press the **–/SET** button when you reach the desired speed.

The moment you release the **-/SET** button, the set speed is fixed, and cruise control begins. The **CRUISE CONTROL** indicator comes on.

≥ To Switch ACC with Low Speed Follow to Cruise Control

Always be aware which mode you are in. When you are driving in Cruise mode, the system will not assist you to maintain a following-interval from a vehicle ahead of you.

You can switch the displayed set speed measurements on the driver information interface between mph and km/h.

→ Gauges P. 116

■ To Adjust the Vehicle Speed

Each time you press the **RES/+** or **-/SET** button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h).

If you keep the **RES/+** or **-/SET** button pressed, the vehicle speed increases or decreases until you release it. This speed is then set.

When you use cruise control, Straight Driving Assist (a feature of the Electric Power Steering system) is activated.

By enabling the steering system to automatically compensate for natural steering pull, Straight Driving Assist makes it easier for you to keep your vehicle in a straight line.

■ To Cancel

To cancel cruise control, do any of the following:

- Press the **CANCEL** button.
- Press the **MAIN** button.
- Depress the brake pedal.

The **CRUISE CONTROL** indicator goes off.

∑To Cancel

Resuming the prior set speed:

After cruise control has been canceled, you can still resume the prior set speed by pressing the **RES/+** button while driving at a speed of at least 25 mph (40 km/h) or more.


You cannot set or resume in the following situations:

- When vehicle speed is less than 25 mph (40 km/h).
- When the **MAIN** button is turned off.

At vehicle speeds of 22 mph (35 km/h) or less, cruise control canceled automatically.

Lane Keeping Assist System (LKAS)

Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane.

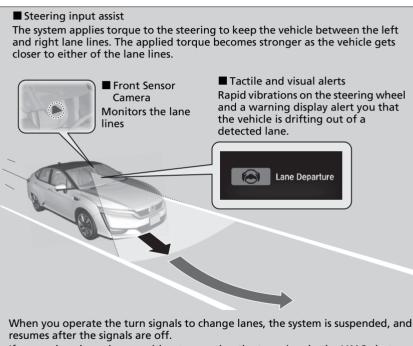

If you make a lane change without operating the turn signals, the LKAS alerts activate, and torque is applied to the steering.

∑Lane Keeping Assist System (LKAS)

Important Safety Reminders

The LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.

Driver Information Interface Warning and Information Messages P. 114

Do not place objects on the instrument panel.

Objects may reflect on the windshield and prevent correct detection of the traffic lanes.

The LKAS only alerts you when lane drift is detected without a turn signal in use. The LKAS may not detect all lane markings or lane departures; accuracy will vary based on weather, speed, and lane marker condition. It is always your responsibility to safely operate the vehicle and avoid collisions.

The LKAS is convenient when it is used on freeways.

The LKAS may not work properly or may work improperly under the certain conditions:

LKAS Conditions and Limitations P. 411


You can read about handling information for the camera equipped with this system.

Front Sensor Camera P. 383

The LKAS may not function as designed while driving in frequent stop and go traffic, or on roads with sharp curves.


■ Lane Keep Support Function

Provides assistance to keep the vehicle in the center of the lane, when the vehicle nears a white or yellow line, steering force of the electric power steering will become stronger.

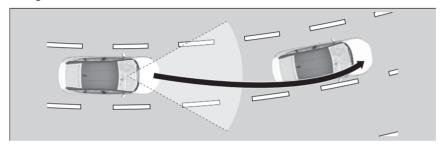

■ Lane Departure Warning Function

When the vehicle enters the warning area, the LKAS alerts you with slight steering wheel vibration as well as a warning display.

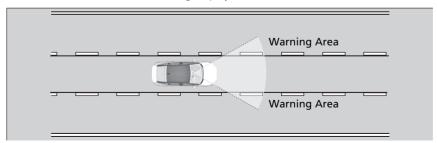

∑Lane Keeping Assist System (LKAS)

When it fails to detect lanes, the system will temporarily be canceled. When a lane is detected, the system will recover automatically.

■ When the System can be Used

The system can be used when the following conditions are met.

- The lane in which you are driving has detectable lane markers on both sides, and your vehicle is in the center of the lane.
- The vehicle speed is between 45 and 90 mph (72 and 145 km/h).
- You are driving on a straight or slightly curved road.
- The turn signals are off.
- The brake pedal is not depressed.
- The wipers are not in continuous operation.

■ How to activate the system



- 1. Press the MAIN button.
 - ➤ The LKAS (green) is on in the driver information interface, and the LKAS (white) is on in the head-up display. The system is ready to use.

- 2. Press the LKAS button.
 - Lane outlines appear on the driver information interface and the head-up display.

The system is activated.

If the vehicle drifts toward either left or right lane line due to the system applying torque, turn off the LKAS and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.



- **3.** Keep your vehicle near the center of the lane while driving.
 - ➤ The dotted outer lines change to solid ones once the system starts operating after detecting the left and right lane markings.

To Cancel



To cancel the LKAS:

Press the **MAIN** or LKAS button.

The LKAS is turned off every time you turn the power system off, even if you turned it on the last time you drove the vehicle.

▼To Cancel

Pressing the **MAIN** button also turns ACC with Low Speed Follow on and off.



When the LKAS is suspended, the lane lines on the driver information interface and the head-up display change to contour lines, and the beeper sounds (if activated).

■ The system operation is suspended if you:

- Set the wipers to continuous operation.
 - Turning the wipers off resumes the LKAS.
- Set the wiper switch to **AUTO** and the wipers operate continuously.
 - ► The LKAS resumes when the wipers stop or operate intermittently.
- Decrease the vehicle speed to about 40 mph (64 km/h) or less.
 - ► Increasing the vehicle speed to about 45 mph (72 km/h) or more resumes the LKAS.
- Depress the brake pedal.
 - ► The LKAS resumes and starts detecting the lane lines again once you release the brake pedal.

■ The LKAS may automatically be suspended when:

- The system fails to detect lane lines.
- The steering wheel is quickly turned.
- You fail to steer the vehicle.
- Driving through a sharp curve.
- Driving at a speed in excess of approximately 90 mph (145 km/h).

Once these conditions no longer exist, the LKAS automatically resumes.

■ The LKAS may automatically be canceled when:

- The camera temperature gets extremely high or low.
- The camera behind the rearview mirror, or the area around the camera, including the windshield, gets dirty.
- The ABS or VSA® system engages.

The beeper sounds if the LKAS is automatically canceled.

LKAS Conditions and Limitations

The system may not detect lane markings and therefore may not keep the vehicle in the middle of a lane under certain conditions, including the following:

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between lane lines and the roadway surface.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Shadows of adjacent objects are parallel to lane markings.
- Roadway objects or structures are misinterpreted as lane markers.
- Reflections on the interior of the windshield.

■ Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on a road with temporary lane markings.
- Faint, multiple, or varied lane markings are visible on the roadway due to road repairs or old lane markings.
- The roadway has merging, split, or crossing lines (e.g., such as at an intersection or crosswalk).
- The lane markings are extremely narrow, wide, or changing.
- The vehicle in front of you is driving near the lane lines.
- The road is hilly or the vehicle is approaching the crest of a hill.
- Driving on rough or unpaved roads, or over bumpy surfaces.
- When objects on the road (curb, guard rail, pylons, etc.) are recognized as white lines (or yellow lines).
- Driving on roads with double lines.

■ Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windshield is streaked or blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windshield is fogged.
- The camera temperature gets too high.
- An abnormal tire or wheel condition (wrong sized, varied size or construction, improperly inflated tire, etc.).
- The vehicle is tilted due to a heavy load or suspension modifications.

Vehicle Stability Assist™ (VSA®), aka Electronic Stability Control (ESC), System

VSA® helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It also assists in maintaining traction on slippery surfaces. It does so by regulating motor output and selectively applying the brakes.

■ VSA® Operation



When VSA® activates, you may notice that the motor does not respond to the accelerator. You may also notice some noise from the hydraulic system. You will also see the indicator blink.

Wehicle Stability Assist™ (VSA®), aka Electronic Stability Control (ESC), System


The VSA® may not function properly if tire type and size are mixed. Make sure to use the same size and type of tire, and the air pressures as specified.

When the VSA® system indicator comes on and stays on while driving, there may be a problem with the system. While this may not interfere with normal driving, have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

VSA® cannot enhance stability in all driving situations and does not control the entire braking system. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

The main function of the VSA® system is generally known as Electronic Stability Control (ESC). The system also includes a traction control function.

■ VSA® On and Off

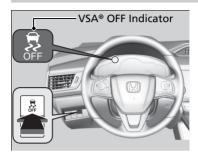

This button is on the driver side control panel. To partially disable VSA® functionality/ features, press and hold it until you hear a beep.

Your vehicle will have normal braking and cornering ability, but traction control function will be less effective.

To restore VSA® functionality/features, press the ((VSA® OFF) button until you hear a beep.

VSA® is turned on every time you turn the power system on, even if you turned it off the last time you drove the vehicle.

Nehicle Stability Assist™ (VSA®), aka Electronic Stability Control
(ESC), System

Output

Description

In certain unusual conditions when your vehicle gets stuck in shallow mud or fresh snow, it may be easier to free it with the VSA® temporarily switched off.

When the Button is pressed, the traction control function becomes less effective. This allows for the wheels to spin more freely at low speed. You should only attempt to free your vehicle with the VSA® off if you are not able to free it when the VSA® is on.

Immediately after freeing your vehicle, be sure to switch VSA® on again. We do not recommend driving your vehicle with the VSA® system switched off.

You may hear a motor sound coming from the motor compartment while system checks are being performed immediately after turning the power system on or while driving. This is normal.

Agile Handling Assist

Lightly brakes each of the front and rear wheels, as needed, when you turn the steering wheel, and helps support the vehicle's stability and performance during cornering.

■ Agile Handling Assist

The agile handling assist cannot enhance stability in all driving situations. You still need to drive and corner at speeds appropriate for the conditions and always leave a sufficient margin of safety.

When the VSA® system indicator comes on and stays on while driving, the agile handling assist does not activate.

You may hear a sound coming from the motor compartment while the agile handling assist is activated. This is normal.

Tire Pressure Monitoring System (TPMS)

Instead of directly measuring the pressure in each tire, the TPMS on this vehicle monitors and compares the rolling radius and rotational characteristics of each wheel and tire while you are driving to determine if one or more tires are significantly under-inflated.



This will cause the low tire pressure/TPMS indicator to come on and a message to appear on the driver information interface.

■ TPMS Calibration

You must start TPMS calibration every time you:

- Adjust the pressure in one or more tires.
- Rotate the tires.
- Replace one or more tires.

Before calibrating the TPMS:

- Set the cold tire pressure in all four tires.
 - **⊇** Checking Tires P. 468

Make sure:

- The vehicle is at a complete stop.
- The gear position is in **P**.
- The power mode is in ON.

∑Tire Pressure Monitoring System (TPMS)

The system does not monitor the tires when driving at low speed.

Conditions such as low ambient temperature and altitude change directly affect tire pressure and can trigger the low tire pressure/TPMS indicator to come on.

Tire pressure checked and inflated in:

- Warm weather can become under-inflated in colder weather.
- Cold weather can become over-inflated in warmer weather.

The low tire pressure/TPMS indicator will not come on as a result of over inflation.

The TPMS may not function properly if tire type and size are mixed. Make sure to use the same size and type of tire.

⊇ Checking and Maintaining Tires P. 468

The low tire pressure/TPMS indicator may come on with a delay or may not come on at all when:

- You rapidly accelerate, decelerate, or turn the steering wheel.
- You drive on snowy or slippery roads.
- Tire chains are used.

The low tire pressure/TPMS indicator may come on under the following conditions:

- There is a heavier and uneven load on the tires than the condition at calibration.
- Tire chains are used.



You can calibrate the system from the customized feature on the audio/information screen.

- 1. Set the power mode to ON.
- 2. Select .
- 3. Select Settings.
- 4. Select Vehicle.
- **5.** Select **TPMS Calibration**.
- **6.** Select **Cancel** or **Calibrate**.
 - When the calibration is complete, the display returns to the customization menu screen.
- If the Calibration Failed To Start. message appears, repeat steps 4-6.
- The calibration process finishes automatically.

™TPMS Calibration

- The calibration process requires approximately 30 minutes of cumulative driving at speeds between 30-65 mph (48-105 km/h).
- During this period, if the power system is turned on and the vehicle is not moved within 45 seconds, you may notice the low tire pressure/TPMS indicator comes on briefly. This is normal and indicates that the calibration process is not yet complete.

If tire chains are installed, remove them before calibrating the TPMS.

If the low tire pressure/TPMS indicator comes on even when the properly inflated specified regular tires are installed, have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.

We recommend that the tires be replaced with the same brand, model, and size as the originals. Ask an authorized Honda Clarity Fuel Cell dealer for details.

Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale



when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

High Voltage Battery

Because electricity generated by the fuel cells and through regenerative braking recharges the High Voltage battery, the battery does not need to be recharged from an outside source; however, the High Voltage battery gradually discharges when the vehicle is not in use. If allowed to discharge too much, the battery may become damaged.

If your vehicle is parked for an extended period of time, during storage for example, periodically recharge the battery to maintain sufficient charge levels. At least once every three months, turn on the power system, and keep it on for more than 30 minutes to allow the battery to recharge.

Excessive heat can also damage the battery. On hot, sunny days, try to avoid parking your vehicle under direct sunlight.

If the High Voltage battery becomes fully discharged or damaged and you are unable to start the FC system as a result, consult an authorized Honda Clarity Fuel Cell dealer

FC System in Extreme Cold-weather Conditions



The FC system may behave differently on cold days. It may operate a special process to improve start-up performance and durability. Operation noises, purge process while parked, etc., differ from usual. However, this is not a malfunction.

On cold days, the power output may be temporarily limited if the vehicle is driven at high vehicle speeds or accelerated suddenly before the FC system warm-up is completed. Operate the vehicle looking out for the surrounding traffic until the FC system reaches full operating temperature.

If the exhaust pipe is blocked, the power system may stop. In especially cold weather, freezing prevention process while parked may not be able to be performed. Also, the process cannot be carry out if the 12-volt battery terminals are disconnected; consequently, the FC stack (fuel cell body) may deteriorate.

On cold days, the hydrogen gas may be consumed faster than usual.

On cold days, when the power system operates starting/stopping processes or freezing prevention process while parked, water vapor in the exhaust may appear as a white mist emitted from the exhaust pipe. This is not a malfunction.

∑FC System in Extreme Cold-weather Conditions

ACAUTION

When the power system operates stopping process or freezing prevention process while parked in cold weather, a puddle of discharged water may form on the ground and become frozen. Be careful not to slip on it.

On cold days, you may get sprayed with exhaust water if standing behind the vehicle when:

- The FC system is idling until the **READY** indicator comes on at power system start-up.
- The FC system is in the shutdown process after it was stopped before warm-up is completed.

High Voltage battery is warmed up using the air inside the vehicle. If the air conditioner is not used or a window is open, it may take time to complete warm-up. As a result, the power output may be limited or the **READY** indicator may take longer than usual to turn on.

When the power system is turned on in extremely cold temperatures (-4°F [-20°C]), its standby operation noise may become louder than in normal low temperatures.


∑FC System in Extreme Cold-weather Conditions

It may take a longer time to start in very cold conditions or may not start at all until temperatures rise.

If the temperature of the fuel cell or the High Voltage battery drops below $-4^{\circ}F$ ($-20^{\circ}C$), the fuel cells will not operate and, as a result, the vehicle will not start.

LaneWatch™

LaneWatch is an assistance system that allows you to check the passenger side rear areas displayed on the audio/information screen when the turn signal is activated to the passenger's side. A camera in the passenger side door mirror monitors these areas and allows you to check for vehicles, in addition to your visual check and use of the passenger door mirror. You can also keep the system on for your convenience while driving.

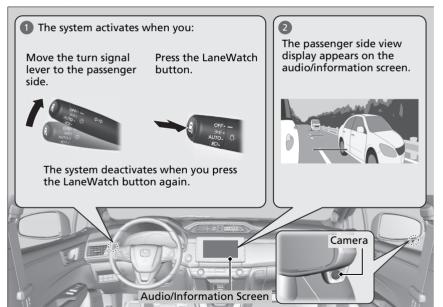

LaneWatch™

AWARNING

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death.

Do not rely only on LaneWatch while driving.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

Important Safety Reminder

Like all assistance systems, LaneWatch has limitations. Over reliance on LaneWatch may result in a collision.

The LaneWatch function can be affected by weather, lighting (including headlights and low sun angle), ambient darkness, camera condition, and loading.

The LaneWatch may not provide the intended display of traffic to the side and rear under the following conditions:

- Your vehicle's suspension has been altered, changing the height of the vehicle.
- Your tires are over or under inflated.
- Your tires or wheels are of varied size or construction.

■ Customizing the LaneWatch settings

You can customize the following items using the audio/information screen.

- **Show with Turn Signal**: Selects whether LaneWatch monitor comes on when you operate the turn signal lever.
- **Display Time after Turn Signal Off**: Changes the length of time the LaneWatch display stays on after you pull the turn signal lever back.
- **Reference Line**: Selects whether the reference lines appear on the LaneWatch monitor.
- **Display**: Allows for display adjustments of items, such as brightness, contrast and black level. This setting is part of the **System** setup group.
 - **Customized Features** P. 300

■ Reference Lines



Three lines that appear on the screen can give an idea of how far the vehicles or objects on the screen are from your vehicle, respectively. If an object is near line 1 (in red), it indicates that it is close to your vehicle whereas an object near line 3 is farther away.

LaneWatch™

The LaneWatch camera view is restricted. Its unique lens makes objects on the screen slightly look different from what they are.

LaneWatch display does not come on when the gear position is in $\boxed{\mathbf{R}}$.

For proper LaneWatch operation:

- The camera is located in the passenger side door mirror. Always keep this area clean. If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.
- Do not cover the camera lens with labels or stickers of any kind.
- Do not touch the camera lens.

■ Reference Lines

The area around the reference line 1 (red) is very close to your vehicle. As always, make sure to visually confirm the safety of a lane change before changing lanes.

The distance between your vehicle and lines 1, 2 and 3 on the screen vary depending on road conditions and vehicle loading. For example, the reference lines on the screen may seem to appear closer than the actual distances when the rear of your vehicle is more heavily loaded.

Consult an authorized Honda Clarity Fuel Cell dealer if:

- The passenger side door mirror, or area around it is severely impacted, resulting in changing the camera angle.
- The LaneWatch display does not come on at all.

Braking

Brake System

■ Parking Brake

Use the parking brake to keep the vehicle stationary when parked. When the parking brake is applied, you can manually or automatically release it.



■ To apply

The electric parking brake can be applied any time the vehicle has battery, no matter which position the power mode is in.

Pull the electric parking brake switch up gently and securely.

➤ The parking brake and brake system indicator (red) comes on.

■Brake System

When you depress the brake pedal, you may hear a whirring sound from the motor compartment. This is because the brake system is in operation, and it is normal.

▶ Parking Brake

You may hear the electric parking brake system motor operating from the rear wheel area when you apply or release the parking brake. This is normal.

The brake pedal may slightly move due to the electric parking brake system operation when you apply or release the parking brake. This is normal.

You cannot apply or release the parking brake if the 12-volt battery goes dead.

▶ Jump Starting P. 506

If you pull up and hold the electric parking brake switch while driving, the brakes on all four wheels are applied by the VSA® system until the vehicle comes to a stop. The electric parking brake then applies, and the switch should be released.



■ To release

The power mode must be in ON in order to release the electric parking brake.

- **1.** Depress the brake pedal.
- 2. Press the electric parking brake switch.
 - ► The parking brake and brake system indicator (red) goes off.

Manually releasing the parking brake using the switch helps your vehicle start slowly and smoothly when facing down hill on steep hills.


▶ Parking Brake

In the following situations, the parking brake automatically operates.

- When the vehicle stops more than 10 minutes while ACC with Low Speed Follow is activated.
- When the driver's seat belt is unfastened while your vehicle is stopped automatically by ACC with Low Speed Follow.
- When the power system is turned off while ACC with Low Speed Follow is activated.
- When the vehicle stops with the automatic brake hold system activated for more than 10 minutes.
- When the driver's seat belt is unfastened while your vehicle is stopped and automatic brake hold is applied.
- When the power system is turned off while automatic brake hold is applied.
- When there is a problem with the Automatic Brake Hold System while brake hold is applied.

■ To release automatically

Depressing the accelerator pedal releases the parking brake. Use the accelerator pedal to release the brake when you are starting the vehicle facing uphill, or in a traffic jam.

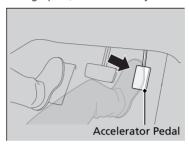

Gently depress the accelerator pedal. When on a hill, it may require more accelerator input to release.

➤ The parking brake and brake system indicator (red) goes off.

You can release the parking brake automatically when:

- You are wearing the driver's seat belt.
- The power system is on.
- The transmission is not in P or N.

▶ Parking Brake

If the parking brake cannot be released automatically, release it manually.

When the vehicle is traveling uphill, the accelerator pedal may need to be pressed farther to automatically release the electric parking brake.

The parking brake may not be released automatically while the following indicators are on:

- POWER SYSTEM indicator
- Transmission system indicator
- Parking brake and brake system indicator (amber)
- VSA® system indicator
- **ABS** indicator
- Supplemental restraint system indicator

■ Foot Brake

Your vehicle is equipped with disc brakes at all four wheels. The brake assist system increases the stopping force when you depress the brake pedal hard in an emergency situation. The anti-lock brake system (ABS) helps you retain steering control when braking very hard.

Brake Assist System P. 432

▶ Anti-lock Brake System (ABS) P. 431

≫ Foot Brake

Check the brakes after driving through deep water, or if there is a buildup of road surface water. If necessary, dry the brakes by lightly depressing the pedal several times.

If you hear a continuous metallic friction sound when applying the brakes, this is caused by the brake wear indicator rubbing on the brake rotor and indicates that the brake pads need to be replaced. Have the vehicle checked by an authorized Honda Clarity Fuel Cell dealer. If you hear only an occasional squeak or squeal when you initially apply the brake pedal, this may be normal and caused by high frequency vibration of the brake pads against the rotating brake disc.

Constantly using the brake pedal while going down a long hill builds up heat, which reduces the brake effectiveness.

To help reduce heat build-up in the brakes when descending a long slope, use regenerative braking to slow the vehicle down.

When the high voltage battery has fully recharged, regenerative braking may not be possible.


▶ POWER/CHARGE Gauge P. 117

► High Voltage Battery Charge Level Gauge
P. 118

Do not rest your foot on the brake pedal while driving, as it will lightly apply the brakes and cause them to lose effectiveness over time and reduce pad life. It will also confuse drivers behind you.

Automatic Brake Hold

Keeps the brake applied after releasing the brake pedal until the accelerator pedal is pressed. You can use this system while the vehicle is temporarily stopped, like at traffic lights and in heavy traffic.



Fasten your seat belt properly, then start the power system. Press the automatic brake hold button.

 The automatic brake hold system indicator comes on. The system is turned on. Depress the brake pedal to come to a complete stop. The transmission must be in D or N.

- The automatic brake hold indicator comes on. Braking is kept for up to 10 minutes.
- Release the brake pedal after the automatic brake hold indicator comes on.

Depress the accelerator pedal while the transmission is in D. The system is canceled and the vehicle starts to move.

 The automatic brake hold indicator goes off. The system continues to be on. ■ Automatic Brake Hold

AWARNING

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never activate the automatic brake hold system or rely on it to keep a vehicle from moving when stopped on a steep hill or slippery roads.

AWARNING

Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle moves unexpectedly, it may cause a crash, resulting in serious injury or death.

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in P and applying the parking brake.


■ The system automatically cancels when:

- You depress the brake pedal and change to P or R.
- You engage the parking brake.

■ The system automatically cancels and the parking brake is applied when:

- Braking is kept for more than 10 minutes.
- The driver's seat belt is unfastened.
- The power system is turned off.
- Brake Hold System Problem appears on the driver information interface.

■ Turning off the automatic brake hold system

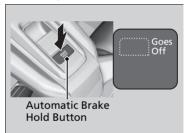

While the system is on, press the automatic brake hold button again.

► The automatic brake hold system indicator goes off.

If you want to turn off automatic brake hold while the system is in operation, press the automatic brake hold button with the brake pedal depressed.

While the system is activated, you can turn off the power system or park the vehicle through the same procedure as you normally do.

When Stopped P. 441

Whether the system is on, or the system is activated, the automatic brake hold turns off once the power system is off.

∑Turning off the automatic brake hold system

Make sure to turn off the automatic brake hold system before using an automated car wash.

You may hear an operating noise if the vehicle moves while the automatic brake hold system is in operation.

Anti-lock Brake System (ABS)

ABS

Helps prevent the wheels from locking up, and helps you retain steering control by pumping the brakes rapidly, much faster than you.

The electronic brake distribution (EBD) system, which is part of the ABS, also balances the front-to-rear braking distribution according to vehicle loading.

You should never pump the brake pedal. Let the ABS work for you by always keeping firm, steady pressure on the brake pedal. This is sometimes referred to as "stomp and steer."

■ ABS operation

You may hear an operating noise when the ABS is working. Depress the brake pedal and keep holding the pedal firmly down. On dry pavement, you will need to press on the brake pedal very hard before the ABS activates. However, you may feel the ABS activate immediately if you are trying to stop on snow or ice.

ABS may activate when you depress the brake pedal when driving on:

- Wet or snow covered roads.
- Roads paved with stone.
- Roads with uneven surfaces, such as potholes, cracks, manholes, etc.

When the vehicle speed goes under 6 mph (10 km/h), the ABS stops.

Manti-lock Brake System (ABS)

Market System (

NOTICE

The ABS may not function correctly if you use a tire of the wrong size or type.

If the **ABS** indicator comes on while driving, there may be a problem with the system.

While normal braking will not be affected, there is a possibility that the ABS will not be operating. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

The ABS is not designed for the purpose of reducing the time or distance it takes for a vehicle to stop: It is designed to limit brake lockup which can lead to skidding and loss of steering control.

In the following cases, your vehicle may need more distance to stop than a vehicle without the ABS:

- You are driving on rough or uneven road surfaces, such as gravel or snow.
- The tires are equipped with tire chains.

The following may be observed with the ABS system:

- Motor sounds coming from the motor compartment when the brakes are applied, or when system checks are being performed after the power system has been turned on and while the vehicle accelerates.
- Brake pedal and/or the vehicle body vibration when ABS activates.

These vibrations and sounds are normal to ABS systems and are no cause for concern.

Brake Assist System

Designed to assist the driver by generating greater braking force when you depress the brake pedal hard during emergency braking.


■ Brake assist system operation

Press the brake pedal firmly for more powerful braking.

Collision Mitigation Braking System™ (CMBS™)

Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours. The CMBS™ is designed to alert you when a potential collision is determined, as well as to reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

■ How the system works

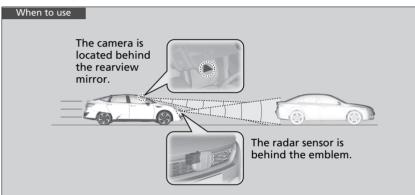

The system starts monitoring the roadway ahead when your vehicle speed is about 3 mph (5 km/h) and there is a vehicle in front of you.

The CMBS™ activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you becomes about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and there is a chance of a collision with an oncoming detected vehicle or a pedestrian in front of you.

Important Safety Reminder

The CMBSTM is designed to reduce the severity of an unavoidable collision. It does not prevent a collision nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.

The CMBS™ may not activate or may not detect a vehicle in front of your vehicle under certain conditions:

≧ CMBS[™] Conditions and Limitations P. 437

You can read about handling information for the camera equipped with this system.

▶ Front Sensor Camera P. 383

Be careful not to severely impact the radar sensor cover.

Rapid vibrations on the steering wheel alert you when the your vehicle speed is between 19 and 62 mph (30 and 100 km/h) with an oncoming vehicle detected in front of you.


When the CMBS™ activates, it may automatically apply the brake. It will be canceled when your vehicle stops or a potential collision is not determined.

Continued 433

■ When the system activates

The system provides visual, audible and tactile alerts of a possible collision, and stops if the collision is avoided.

► Take appropriate action to prevent a collision (apply the brakes, change lanes, etc.)

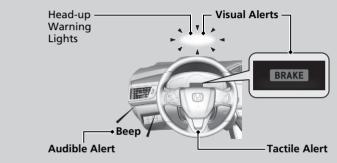

At system's earliest collision alert stage, you can change the distance (**Long/Normal/Short**) between vehicles at which alerts will come on through audio/information screen setting options.

■ Customized Features P. 300

■ Vibration alert on the steering wheel

When a potential collision to an oncoming detected vehicle is determined, the system alerts you with rapid vibration on the steering wheel, in addition to visual and audible alerts.

► Take appropriate action to prevent a collision (apply the brakes, operate the steering wheel, etc.).

When the system activates

The camera in the CMBS™ is also designed to detect pedestrians.


However, this pedestrian detection feature may not activate or may not detect a pedestrian in front of your vehicle under certain conditions.

Refer to the ones indicating the pedestrian detection limitations from the list

EXECUTE: Conditions and Limitations P. 437

The head-up warning uses a lens located at the front end of the dashboard.

Do not cover the lens or spill any liquid on it.

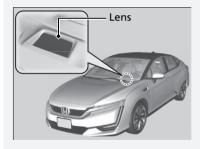

Vibration alert function is disabled when the electric power steering (EPS) system indicator comes on.

Electric Power Steering (EPS) System Indicator P. 93

■ Collision Alert Stages

The system has three alert stages for a possible collision. However, depending on circumstances, the CMBS $^{\text{TM}}$ may not go through all of the stages before initiating the last stage.

Distance between vehicles		CMBS TM				
		The sensor detects a vehicle	Audible & Visual WARNINGS	Steering Wheel	Braking	
Stage one	Normal Long Short Ahead Your Vehicle	There is a risk of a collision with the vehicle ahead of you.	When in Long , visual and audible alerts come on at a longer distance from a vehicle ahead than in Normal setting, and in Short , at a shorter distance than in Normal .	In case of an oncoming vehicle detected, rapid vibration is provided.	_	
Stage two	Your Vehicle Vehicle Ahead	The risk of a collision has increased, time to respond is reduced.	Versal and and the above	_	Lightly applied	
Stage three	Your Vehicle Vehicle Ahead →	The CMBS™ determines that a collision is unavoidable.	Visual and audible alerts.		Forcefully applied	

CMBS™ On and Off



Press and hold the button until the beeper sounds to switch the system on or off.

When the CMBS™ is off:

- The CMBS™ indicator in the instrument panel comes on.
- A message on the driver information interface reminds you that the system is off.

The CMBS™ is in the previously selected ON or OFF setting each time you start the power system.

™Collision Mitigation Braking System™ (CMBS™)

The CMBS™ may automatically shut off, and the CMBS™ indicator will come and stay on under certain conditions:

► CMBS™ Conditions and Limitations P. 437

CMBS™ Conditions and Limitations

The system may automatically shut off and the CMBSTM indicator will come on under certain conditions. Some examples of these conditions are listed below. Other conditions may reduce some of the CMBSTM functions.

Front Sensor Camera P. 383

■ Environmental conditions

- Driving in bad weather (rain, fog, snow, etc.).
- Sudden changes between light and dark, such as an entrance or exit of a tunnel.
- There is little contrast between objects and the background.
- Driving into low sunlight (e.g., at dawn or dusk).
- Strong light is reflected onto the roadway.
- Driving in the shadows of trees, buildings, etc.
- Roadway objects or structures are misinterpreted as vehicles and pedestrians.
- Reflections on the interior of the windshield.
- Driving at night or in a dark condition such as a tunnel.

■ Roadway conditions

- Driving on a snowy or wet roadway (obscured lane marking, vehicle tracks, reflected lights, road spray, high contrast).
- Driving on curvy, winding, or undulating roads.
- The road is hilly or the vehicle is approaching the crest of a hill.

CMBS™ Conditions and Limitations

If you need the radar sensor to be repaired, or removed, or the radar sensor cover is strongly impacted, turn off the system by pressing the CMBS™ off button and take your vehicle to an authorized Honda Clarity Fuel Cell dealer.

Continued 437

■ Vehicle conditions

- Headlight lenses are dirty or the headlights are not properly adjusted.
- The outside of the windshield is blocked by dirt, mud, leaves, wet snow, etc.
- The inside of the windshield is fogged.
- An abnormal tire or wheel condition (wrong sized, varied size or construction, improperly inflated tire, etc.).
- When tire chains are installed.
- The vehicle is tilted due to a heavy load or suspension modifications.
- The camera temperature gets too high.
- Driving with the parking brake applied.
- When the radar sensor in the front grille gets dirty.

■ Detection limitations

- A vehicle or pedestrian suddenly crosses in front of you.
- The distance between your vehicle and the vehicle or pedestrian ahead of you is too short.
- A vehicle cuts in front of you at a slow speed, and it brakes suddenly.
- When you accelerate rapidly and approach the vehicle or pedestrian ahead of you at high speed.
- The vehicle ahead of you is a motorcycle, bicycle, mobility scooter or other small vehicle.
- When there are animals in front of your vehicle.
- When you drive on a curved, winding or undulating road that makes it difficult for the sensor to properly detect a vehicle in front of you.
- The speed difference between your vehicle and a vehicle or pedestrian in front of you is significantly large.
- An oncoming vehicle suddenly comes in front of you.
- Another vehicle suddenly comes in front of you at an intersection, etc.
- Your vehicle abruptly crosses over in front of an oncoming vehicle.
- When driving through a narrow iron bridge.
- When the lead vehicle suddenly slows down.

Limitations applicable to pedestrian detection only

- When there is a group of people in front of your vehicle walking together side by side.
- Surrounding conditions or belongings of the pedestrian alter the pedestrian's shape, preventing the system from recognizing that the person is a pedestrian.
- When the pedestrian is shorter than about 3.3 feet (1 meter) or taller than about 6.6 feet (2 meters) in height.
- When a pedestrian blends in with the background.
- When a pedestrian is bent over or squatting, or when their hands are raised or they are running.
- When several pedestrians are walking ahead in a group.
- When the camera cannot correctly identify that a pedestrian is present due to an unusual shape (holding luggage, body position, size).

■ Automatic shutoff

The CMBS™ may automatically shut itself off and the CMBS™ indicator comes and stays on when:

- The temperature inside the system is high.
- You drive off-road or on a mountain road, or curved and winding road for an extended period.
- An abnormal tire condition is detected (wrong tire size, flat tire, etc.).
- The camera behind the rearview mirror, or the area around the camera, including the windshield, gets dirty.

Once the conditions that caused the CMBS™ to shut off improve or are addressed (e.g., cleaning), the system comes back on.

■ With Little Chance of a Collision

The CMBS™ may activate even when you are aware of a vehicle ahead of you, or when there is no vehicle ahead. Some examples of this are:

■ When Passing

Your vehicle approaches another vehicle ahead of you and you change lanes to pass.

■ At an intersection

Your vehicle approaches or passes another vehicle that is making a left or right turn.

■ On a curve

When driving through curves, your vehicle comes to a point where an oncoming vehicle is right in front of you.

■ Through a low bridge at high speed

You drive under a low or narrow bridge at high speed.

■ Speed bumps, road work sites, train tracks, roadside objects, etc.

You drive over speed bumps, steel road plates, etc., or your vehicle approaches train tracks or roadside objects [such as a traffic sign and guard rail] on a curve or, when parking, stationary vehicles and walls.

For the CMBS™ to work properly:

Always keep the radar sensor cover clean.

Never use chemical solvents or polishing powder for cleaning the sensor cover. Clean it with water or a mild detergent.

Do not paint, or apply any coverings or paint to radar sensor area. This can impact CMBSTM operation.

Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer if you find any unusual behavior of the system (e.g., the warning message appears too frequently).

If the front of the vehicle is impacted in any of the following situations, the radar sensor may not work properly. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer:

- The vehicle mounted onto a bump, curb, chock, embankment, etc.
- You drive the vehicle where the water is deep.
- Your vehicle has a frontal collision.

Parking Your Vehicle

When Stopped

- **1.** Depress the brake pedal firmly.
- 2. With the brake pedal depressed, pull up the electric parking brake switch slowly, but fully.
- **3.** Change the gear position to **P**.
- **4.** Turn off the power system.

▶ Parking Your Vehicle

AWARNING

The vehicle can roll away if left unattended without confirming that Park is engaged.

A vehicle that rolls away could cause a crash resulting in serious injury or death.

Always keep your foot on the brake pedal until you have confirmed that \boxed{P} is shown on the gear position indicator.

™When Stopped

NOTICE

The following can damage the driveline:

- Depressing the accelerator and brake pedals simultaneously.
- Changing to P before the vehicle stops completely.

When facing uphill, do not hold the vehicle by depressing the accelerator pedal.

Doing so may cause the power system to overheat and fail.

Continued 441

Always confirm the electric parking brake is set, in particular if you are parked on an incline.

When Stopped


In extremely cold temperatures, the parking brake may freeze up if applied. If such temperatures are expected, do not apply the parking brake but, if parking on a slope, either turn the front wheels so they will contact the curb if the vehicle rolls down the slope or block the wheels to keep the vehicle from moving. If you do not take either precaution, the vehicle may roll unexpectedly, leading to a crash.

About Your Multi-View Rear Camera

Multi-View Rear Camera

The audio/information screen can display your vehicle's rear view. The display automatically changes to the rear view when the transmission is put into ${\bf R}$.

■ Multi-View Rear Camera Display Area

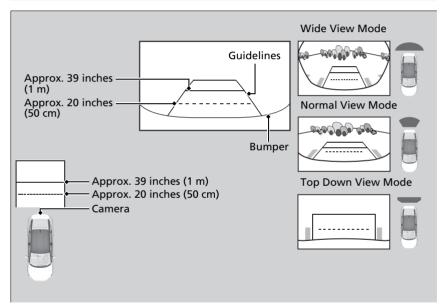

The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are.

Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display which does not give you all information about conditions at the back of your vehicle.

If the camera lens is covered with dirt or moisture, use a soft, moist cloth to keep the lens clean and free of debris.

You can change the **Fixed Guideline** and **Dynamic Guideline** settings.

≧ Customized Features P. 300

Fixed Guideline

On: Guidelines appear when you put the transmission into $\boxed{\mathbf{R}}$.

Off: Guidelines do not appear.

Dynamic Guideline

On: Guidelines move according to the steering wheel direction.

Off: Guidelines do not move.

Continued 443

You can view three different camera modes on the rearview display. Touch the appropriate icon to switch the mode.

- : Wide view mode
- : Normal view mode
- : Top down view mode
- If the last used viewing mode was Wide or Normal view mode, the same mode is selected the next time you put the transmission into R.
- If Top down view mode was last used before you turned off the power system, Wide view mode is selected next time you turn the power on and put the transmission into R.
- If Top down view mode was last used more than 10 seconds after you change from $\boxed{\mathbf{R}}$, Wide view mode is selected the next time you put the transmission into $\boxed{\mathbf{R}}$.

Refueling

Fuel Information

The hydrogen fuel receptacle is located on the passenger's rear side of the vehicle.

■ Fuel requirement

Compressed hydrogen gas

- Hydrogen supply pressure: 70 MPa (10,153 psig) (at 59°F [15°C])
- Hydrogen filling amount*1: Approximately 11 lbs (5 kg) (at 70 MPa [10,153 psig])
- *1: A measured value when refueled at a hydrogen station with 70 MPa (10,153 psig) of supply pressure compliant with the SAE (J2601) fueling protocol.
- Hydrogen tanks capacity: 37.3 US gal (141.3 L) (at 70 MPa [10,153 psig])

■ Hydrogen filling station

To completely fill the hydrogen tank, you need to use a hydrogen filling station that has an H70 dispenser, which is capable of supplying pressures of up to 10,153 psig (70 MPa).

Refueling the vehicle is only possible if the pressure inside the hydrogen tank of the vehicle does not exceed the supply pressure of the filling station.

If you use an H35 dispenser, you will be able to fill only half of the tank.

■ Refueling

AWARNING

When refueling hydrogen gas, keep sources of fire, such as a lit cigarette, away from the vehicle. As hydrogen gas is highly flammable, it may cause a fire or explosion. Be sure to turn the power system to OFF to stop the FC stack operation.

NOTICE

If improper hydrogen gas is used, the FC stack will be damaged. Always refuel at authorized hydrogen filling stations.

Refer to the Navigation System Manual

Hydrogen gas is colorless, odorless, very light and flammable. Also, its burning flame is difficult to detect by sight.

How to Refuel



- **1.** Stop the vehicle with the hydrogen station dispenser on the left side of the vehicle.
- **2.** Change the gear position to \boxed{P} .
- 3. Set the power mode to OFF.
- **4.** Press the hydrogen fuel lid release button on the driver's door to open the hydrogen fuel lid.



- **5.** Remove the dust cap from the hydrogen fuel receptacle inside the hydrogen fuel lid.
- **6.** Make sure to put the dust cap back on the receptacle to prevent contamination.
 - ► How to Close the Dust Cap and the Fuel Lid P. 447

AWARNING

Hydrogen is flammable and explosive. You can be burned or seriously injured.

- Stop the motor, and keep sparks and flames away.
- Refuel only outdoors.

AWARNING

When refueling, touch something metal of the vehicle, etc. to discharge static-buildup from your body before opening the fuel lid. Refueler must be a person who has discharged static electricity from his/her body.

If you re-enter the vehicle while refueling, your body may become recharged; you have to discharge the static-buildup from your body again.

The hydrogen fuel lid opens only when the power mode is in OFF and the gear position is in $\boxed{\mathbf{P}}$.

When You Cannot Unlock the Hydrogen Fuel Lid P. 527

■ How to Close the Dust Cap and the Fuel Lid

- **1.** Put the dust cap back on the hydrogen fuel receptacle.
- 2. Shut the hydrogen fuel lid by hand.

NOTICE


Do not touch the hydrogen fuel receptacle other than when refueling. Touching it carelessly may cause damage.

The filling amount may depend on ambient temperature.

It is normal to hear a whooshing sound during refueling.

■ How to Close the Dust Cap and the Fuel Lid

If the hydrogen fuel lid is left open, the gear position cannot be shifted from \boxed{P} , and **Close Hydrogen Fuel Lid** message appears on the driver information interface.

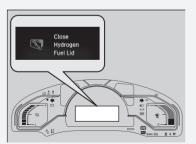

Driver Information Interface Warning and Information Messages P. 102

Fuel Economy

Improving Fuel Economy


Achieving fuel economy is dependent on several factors, including driving conditions, load weight, standby time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

Maintenance and Fuel Economy

You can optimize your fuel economy with proper maintenance of your vehicle. Always maintain your vehicle in accordance with the messages displayed on the driver information interface.

- Maintain the specified tire pressure.
- Do not load the vehicle with excess cargo.
- Keep your vehicle clean. A buildup of snow or mud on your vehicle's underside adds weight and increases wind resistance.

Direct calculation is the recommended method to determine actual fuel consumed while driving.



Maintenance

This chapter discusses basic maintenance.

Before Performing Maintenance	
Inspection and Maintenance	. 450
Safety When Performing Maintenance	45
Parts and Fluids Used in Maintenanc	e
Service	. 452
Maintenance Minder™	453
Maintenance Under the Hood	
Maintenance Items Under the Hood	45
Opening the Hood	. 458
Inverter Coolant	. 459
Transmission Fluid	.46
Brake Fluid	46

Refilling Window Washer Fluid Replacing Light Bulbs Checking and Maintaining Wiper	. 463
Blades	465
Checking and Maintaining Tires	
Checking Tires	. 468
Tire and Loading Information Label.	. 469
Tire Labeling	. 469
DOT Tire Quality Grading (U.S. Vehicles)	471
Wear Indicators	. 473
Tire Service Life	. 473
Tire and Wheel Replacement	474

Tire Rotation	475
Winter Tires	476
12-Volt Battery	477
Remote Transmitter Care	
Replacing the Button Battery	479
Climate Control System Maintena	nce 480
Cleaning	
Interior Care	481
Exterior Care	483
Accessories and Modifications.	487

Before Performing Maintenance

Inspection and Maintenance

For your safety, perform all listed inspections and maintenance to keep your vehicle in good condition. If you become aware of any abnormality (noise, smell, insufficient brake fluid, oil residue on the ground, etc.), have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer. (Note, however, that service at an authorized Honda Clarity Fuel Cell dealer is not mandatory to keep your warranties in effect.)

■ Types of Inspection and Maintenance

■ Daily inspections

Perform inspections before long distance trips, when washing the vehicle, or when refueling.

■ Periodic inspections

- Check the brake fluid level monthly.
 - **Brake Fluid** P. 461
- Check the tire pressure monthly. Examine the tread for wear and foreign objects.
 Checking and Maintaining Tires P. 468
- Check the operation of the exterior lights monthly.
 - Replacing Light Bulbs P. 463
- Check the condition of the wiper blades at least every six months.
 - **≧** Checking and Maintaining Wiper Blades P. 465

∑Inspection and Maintenance

All maintenance services should be performed in accordance with the intervals indicated by the driver information interface.

Maintenance Service Items P. 455

If you want to perform complex maintenance tasks that require more skills and tools, you can purchase a subscription to the Service Express website at www.techinfo.honda.com.

Authorized Manuals P. 537

If you want to perform maintenance yourself, make sure that you have the necessary tools and skills first. After performing maintenance, update the records in the separate maintenance booklet.

Safety When Performing Maintenance

Some of the most important safety precautions are given here. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether you should perform a given task.

■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the 12-volt battery, all High Voltage system, and all fuel related parts.
- Never leave rags, towels, or other flammable objects under the hood.
 Heat from the motor or the surrounding parts can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the 12-volt battery or compressed air.

Vehicle Safety

- The vehicle must be in a stationary condition.
 - ▶ Make sure your vehicle is parked on level ground, the parking brake is set, and the power system is turned off.
- Be aware that hot parts can burn you.
 - ▶ Make sure to let the power system cool thoroughly before touching vehicle parts.
- Be aware that moving parts can injure you.
 - ▶ Do not activate the power system unless instructed to do so. Keep your hands and limbs away from moving parts.

≥ Safety When Performing Maintenance

AWARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations according to the schedules in this owner's manual.

AWARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Parts and Fluids Used in Maintenance Service


The use of Honda genuine parts and fluids is recommended when maintaining and servicing your vehicle. Honda genuine parts are manufactured according to the same high quality standards used in Honda vehicles.

If the vehicle has maintenance items due within 30 days, you will see the Maintenance Minder messages appear on the driver information interface every time you set the power mode to ON. The messages notify you when to bring your vehicle to an authorized Honda Clarity Fuel Cell dealer for indicated maintenance services.

To Use Maintenance Minder™

Displaying the Maintenance Minder Information

- 1. Set the power mode to ON.
- **2.** Press the **(display/ information) button.**
- **3.** Press the ◀ / ▶ button to select the ✓ icon, and press the **ENTER** button.

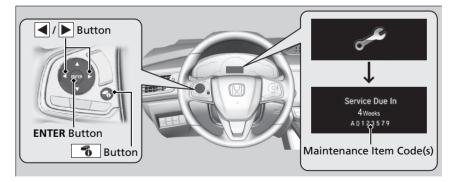

Displaying the Maintenance Minder Information

Based on the vehicle operation hours, remaining ion exchanger life is calculated.

There is a list of maintenance service items you can view on the driver information interface.

Maintenance Service Items P. 455

Continued 453

■ Indicator, Warning Message and Maintenance Minder Information on the Driver Information Interface


Indicator	Warning Message	Maintenance Minder Information	Explanation	Information
_	Service Due Soon Service Due Soon A 01 2 3 5 7 9	Service Due In 4weeks A 0 1 2 3 5 7 9	One or more of the service items are required in less than 30 days. Press the button to switch to another display.	The remaining days will be counted down per day.
_	Service Due Now Service Due Now A0123579	Service Due Now A 0 1 2 3 5 7 9	One or more of the service items are required in less than 10 days. Press the button to switch to another display.	Have the indicated service performed as soon as possible.
– POWER *1 SYSTEM	Service Past Due Service Past Due 12 Days A 0 1 2 3 5 7 9 Check Power System. Power Reduced. See Your Dealer *2	Service Past Due 12 bays A 0 1 2 3 5 7 9	The indicated maintenance service is still not done after the remaining time reaches 0. Press the button to switch to another display.	Your vehicle has passed the service required point. Immediately have the service performed and make sure to reset the Maintenance Minder TM .

The system message indicator (①) comes on along with the Maintenance Minder message.

^{*1:} The power system indicator comes on when an ion exchanger replacement is past due.

^{*2:} The messages appear alternately when an ion exchanger replacement is past due.

■ Maintenance Service Items

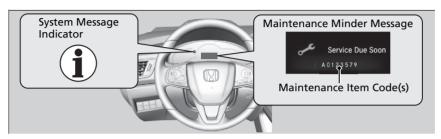

Maintenance Service Items ■ Maintenanc

- At each maintenance interval, check Fuel Cell Insulating Fluid level and top up (to "Max" fill line) with "Fuel Cell Insulating Fluid - 20% prediluted formulation"
- Replace hydrogen ventilation duct and drain, hydrogen tank every 15 years without the maintenance minder.

CODE Maintenance Items

- A Replace ion exchange filter
- Inspect front and rear brakes
 - Check expiry date for Temporary Tire Repair Kit
 - Inspect these items:
 - Tie rod ends, steering gear box, and boots
 - Suspension components
 - Driveshaft boots
 - Brake hoses and lines (including ABS/VSA®)
 - All fluid levels and condition of fluids
 - Stay RR, RR Subframe
 - Exhaust Diluter
- 1 Rotate tires
- Replace dust and pollen filter*1
- Replace transmission fluid*2
- Replace Fuel Cell Insulating Fluid 50% prediluted formulation*³

CODE Maintenance Items


- Replace brake fluid*4
 - Replace air cleaner element*4
- Inspect these items:
 - Hydrogen tank
 - Hydrogen ventilation duct and drain
 - Exhaust system
 - Fuel lines and connections
- *1: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles.
- *2: Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 31,250 miles.
- *3: If a Maintenance Minder message does not appear more than 12 year after the display for item 5 is reset, change Fuel Cell Insulating Fluid with "Fuel Cell Insulating Fluid - 50% prediluted formulation" every 12 years.
- *4: If a Maintenance Minder message does not appear more than 3 years after the display for item 7 is reset, change the brake fluid and replace air cleaner element every 3 years.

Continued 455

Resetting the Display

Reset the maintenance minder information display if you have performed the maintenance service.

Have an authorized Honda Clarity Fuel Cell dealer reset the maintenance item code for ion exchanger replacement as it is not possible to do this on your own.

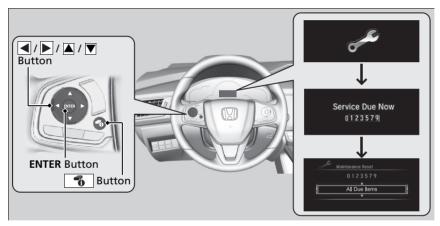

- 1. Set the power mode to ON.
- **2.** Press the (display/information) button.
- **3.** Press the **◄** / **▶** button to select the **▶** icon, and press the **ENTER** button.
- **4.** Press and hold the **ENTER** button for about 10 seconds to enter the reset mode.
- 5. Press ▲ / ▼ to select a maintenance item to reset, or to select All Due Items (You can also select Cancel to end the process).
- **6.** Press the **ENTER** button to reset the selected item.
- 7. Repeat from step 4 for other items you wish to reset.

■ Resetting the Display

NOTICE


Failure to reset the Maintenance Minder™ display after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

The authorized Honda Clarity Fuel Cell dealer will reset the Maintenance Minder™ display after completing the required maintenance service. If someone other than an authorized Honda Clarity Fuel Cell dealer performs maintenance service, reset the Maintenance Minder™ display yourself.

You can also reset the Maintenance Minder™ display using the audio/information touch screen.

■ Customized Features P. 300

Maintenance Items Under the Hood

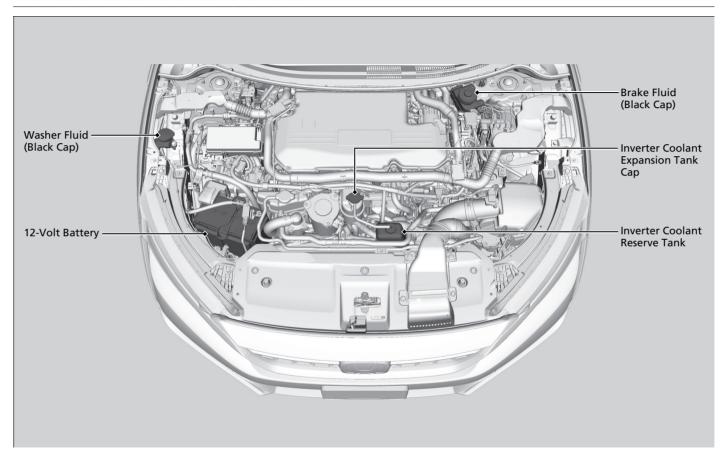


Opening the Hood



- **1.** Park the vehicle on a level surface, and set the parking brake.
- 2. Pull the hood release handle under the driver's side lower corner of the dashboard.The hood will pop up slightly.

Lever

3. Push the hood latch lever (located under the front edge of the hood to the center) to the side and raise the hood. Once you have raised the hood slightly, you can release the lever.

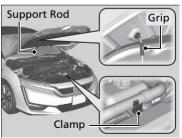

4. Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

When closing, remove the support rod, and stow it in the clamp, then gently lower the hood. Remove your hand at a height of approximately 12 inches (30 cm) and let the hood close.

Opening the Hood

NOTICE

Do not open the hood when the wiper arms are raised. The hood will strike the wipers, resulting in possible damage to the hood and/or the wipers.

When closing the hood, check that the hood is securely latched.

If the hood latch lever moves stiffly, or if you can open the hood without lifting the lever, the latch mechanism should be cleaned and lubricated


Inverter Coolant

Specified coolant: Honda Long Life Antifreeze/Coolant Type 2

This coolant is premixed with 50% antifreeze and 50% water. Do not add any straight antifreeze or water.

We recommend you check the inverter coolant level every time you refuel. Check the reserve tank. Add the inverter coolant accordingly.

Reserve Tank

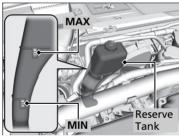



- 1. Make sure the motor and radiator are cool.
- 2. Check the amount of coolant in the reserve tank
 - ▶ If the coolant level is below the MIN mark, add the specified coolant until it reaches the **MAX** mark
- **3.** Inspect the cooling system for leaks.

AWARNING

Removing the expansion tank cap while the motor is hot can cause the coolant to spray out, seriously scalding you.


Always let the motor and radiator cool down before removing the expansion tank cap.


NOTIC<u>E</u>

Genuine Honda inverter coolant is a 50/50 mixture of antifreeze and water that can withstand freezing at temperatures as low as about -31°F (-35°C). If your vehicle is consistently subjected to temperatures below this, the concentration of antifreeze in the coolant should be increased. Consult an authorized Honda Clarity Fuel Cell dealer for details.

If Honda antifreeze/coolant is not available, you may use another major brand of non-silicate coolant as a temporary replacement. Check that it is a high quality coolant recommended for aluminum motors. Continued use of any non-Honda coolant can result in corrosion, causing the cooling system to malfunction or fail. Have the cooling system flushed and refilled with Honda antifreeze/coolant as soon as possible.

Radiator

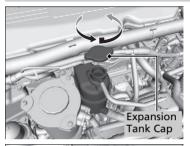

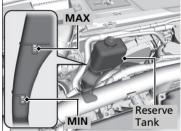

- 1. Make sure the motor and radiator are
- **2.** Turn the expansion tank cap 1/8 turn counterclockwise and relieve any pressure in the cooling system.
- **3.** Push down and turn the expansion tank cap counterclockwise to remove it.
- **4.** Pour coolant into the expansion tank until it reaches the **MAX** mark.
- **5.** Put the expansion tank cap back on, and tighten it fully.

Do not add rust inhibitors or other additives to your vehicle's cooling system. They may not be compatible with the coolant or with the motor components.

NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the motor compartment.

Transmission Fluid

■ Transmission Fluid

Specified fluid: Honda ATF DW-1 (automatic transmission fluid)


Have an authorized Honda Clarity Fuel Cell dealer check the fluid level and replace if necessary.

Do not attempt to check or change the transmission fluid yourself.

Brake Fluid

Specified fluid: Honda Heavy Duty Brake Fluid DOT 3

■ Checking the Brake Fluid

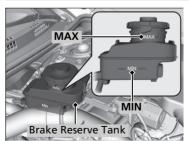

The fluid level should be between the **MIN** and **MAX** marks on the side of the reserve tank.

∑Transmission Fluid

NOTICE

Do not mix Honda ATF DW-1 with other transmission fluids.

Using a transmission fluid other than Honda ATF DW-1 may adversely affect the operation and durability of your vehicle's transmission, and damage the transmission.

Any damage caused by using a transmission fluid that is not equivalent to Honda ATF DW-1 is not covered by Honda's new vehicle limited warranty.

≥ Brake Fluid

NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.


If the specified brake fluid is not available, you should use only DOT 3 or DOT 4 fluid from a sealed container as a temporary replacement.

Using any non-Honda brake fluid can cause corrosion and decrease the longevity of the system. Have the brake system flushed and refilled with Honda Heavy Duty Brake Fluid DOT 3 as soon as possible.

If the brake fluid level is at or below the **MIN** mark, have an authorized Honda Clarity Fuel Cell dealer inspect the vehicle for leaks or worn brake pads as soon as possible.

Refilling Window Washer Fluid

Check the amount of window washer fluid using the washer fluid level gauge on the cap.

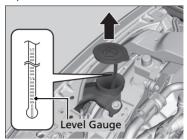

If the level is low, fill the washer reservoir.

Pour the washer fluid carefully. Do not overflow the reservoir.

■ Refilling Window Washer Fluid

NOTICE

Do not use motor antifreeze or a vinegar/water solution in the windshield washer reservoir.

Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.

Use only commercially available windshield washer fluid.

Avoid prolonged use of hard water to prevent lime scale build up.

Replacing Light Bulbs

Headlights

Headlights are LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

Front Turn Signal and Front Side Marker Lights

Front turn signal and front side marker lights are LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

Parking/Daytime Running Lights

Parking/daytime running lights are LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

The headlight aim is set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk, have the aiming readjusted at an authorized Honda Clarity Fuel Cell dealer or by a qualified technician.

Taillights/Rear Side Marker, Brake and Rear Turn Signal Lights

Taillights/rear side marker, brake and rear turn signal lights are LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

Taillights and Back-Up Lights

Taillights and back-up lights are LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

Rear License Plate Light

Rear license plate light is LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

High-Mount Brake Light

High-mount brake light is LED type. Have an authorized Honda Clarity Fuel Cell dealer inspect and replace the light assembly.

Checking and Maintaining Wiper Blades

Checking Wiper Blades

If the wiper blade rubber has deteriorated, it will leave streaks and the hard surfaces of the blade may scratch the window glass.

Changing the Wiper Blade Rubber



- **1.** Set the power mode to VEHICLE OFF (LOCK).
- **2.** While holding the wiper switch in the **MIST** position, set the power mode to ON, then to VEHICLE OFF (LOCK).
 - ▶ Both wiper arms are set to the maintenance position as shown in the image.
- 3. Lift both wiper arms.

∑Changing the Wiper Blade Rubber


NOTICE

Avoid dropping the wiper arm onto the windshield, it may damage the wiper arm and/or the windshield.


When you raise a wiper arm, you may inadvertently alter the position of the arm by applying undue force. If you notice that an arm is not in its proper return position, active the wipers once and they will automatically reset.

Wipers and Washers P. 162


Continued 465

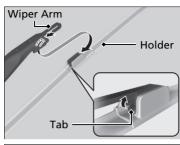


4. Press up on and hold the tab, then slide the holder off the wiper arm.

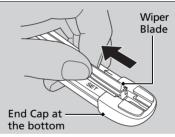

5. Pull the end of the wiper blade in the direction of the arrow in the image until it is out of the holder's end cap.

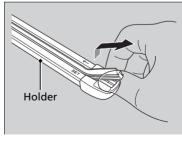

6. Pull the wiper blade in the opposite direction to slide it out of the holder.

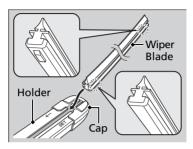

- **7.** Insert the flat side of the new wiper blade onto the bottom part of the holder. Insert the blade all the way.
- **8.** Install the end of the wiper blade into the cap.
- **9.** Slide the holder onto the wiper arm until it locks.
- **10.** Lower both wiper arms.
- **11.** Set the power mode to ON and hold the wiper switch in the **MIST** position until both wiper arms return to the standard position.

Checking and Maintaining Tires

Checking Tires

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

■ Inflation guidelines

Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or specifications page for the specified pressure.

Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.

Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.

Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.

At least once a month or before long trips, use a gauge to measure the pressure in all tires. Even tires in good condition can lose 1–2 psi (10–20 kPa, 0.1–0.2 kgf/cm²) per month.

■ Inspection guidelines

Every time you check inflation, also examine the tires and valve stems. Look for:

- Bumps or bulges on the side or in the tread. Replace the tire if you find any cuts, splits, or cracks in the side of the tire. Replace it if you see fabric or cord.
- Remove any foreign objects and inspect for air leaks.
- Uneven tread wear. Have an authorized Honda Clarity Fuel Cell dealer check the wheel alignment.
- Excessive tread wear.
 - **Wear Indicators** P. 473
- Cracks or other damage around valve stem.

○ Checking Tires

AWARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

Measure the air pressure when tires are cold. This means the vehicle has been parked for at least three hours, or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached.

If checked when hot, tire pressure can be as much as 4–6 psi (30–40 kPa, 0.3–0.4 kgf/cm²) higher than if checked when cold.


Whenever tire pressure is adjusted, you must calibrate the TPMS

₹ TPMS Calibration P. 416


Have an authorized Honda Clarity Fuel Cell dealer check the tires if you feel a consistent vibration while driving. New tires and any that have been removed and reinstalled should be properly balanced.

Tire and Loading Information Label

The label attached to the driver's doorjamb provides necessary tire and loading information

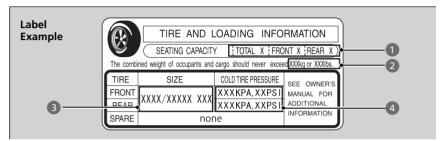

Tire Labeling

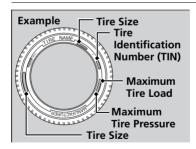

The tires that came on your vehicle have a number of markings. Those you should be aware of are described as shown.

■ Tire Sizes

Whenever tires are replaced, they should be replaced with tires of the same size.

∑Tire and Loading Information Label

The tire and loading information label attached to the driver's doorjamb contains:

- 1 The number of people your vehicle can carry.
- 2 The total weight your vehicle can carry. Do not exceed this weight.
- 3 The original tire sizes for front, rear, and spare, if equipped.
- The proper cold tire pressure for front, rear, and spare, if equipped.

∑Tire Sizes ☐

Following is an example of tire size with an explanation of what each component means.

235/45R18 94V

235: Tire width in millimeters.

45: Aspect ratio (the tire's section height as a percentage of its width).

R: Tire construction code (R indicates radial).

18: Rim diameter in inches.

94: Load index (a numerical code associated with the maximum load the tire can carry).

V: Speed symbol (an alphabetical code indicating the maximum speed rating).

■ Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example in the side column. TIN is located on the sidewall of the tire.

■ Glossary of Tire Terminology

Cold Tire Pressure – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

Load Rating – Means the maximum load that a tire is rated to carry for a given inflation pressure.

Maximum Inflation Pressure – The maximum tire air pressure that the tire can hold.

Maximum Load Rating – Means the load rating for a tire at the maximum permissible inflation pressure for that tire.

Recommended Inflation Pressure – The cold tire inflation pressure recommended by the manufacturer.

Treadwear Indicators (TWI) – Means the projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

∑Tire Identification Number (TIN)

DOT B97R FW6X 2209

DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.

B97R: Manufacturer's identification mark.

FW6X: Tire type code. 22 09: Date of manufacture.

> Year Week

DOT Tire Quality Grading (U.S. Vehicles)

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

■ Uniform Tire Quality Grading

For example:

Treadwear 200 Traction AA Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

■ Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

Temperature

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.


∑Traction

Warning: The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

∑Temperature

Warning: The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Wear Indicators

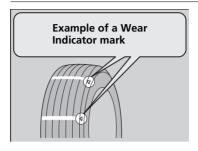

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so that the indicator is exposed, replace the tire. Worn out tires have poor traction on wet roads.

Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

Tire and Wheel Replacement

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems such as the ABS and Vehicle Stability Assist $^{\text{TM}}$ (VSA®) system to work incorrectly.

It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

Make sure that the wheel's specifications match those of the original wheels.

∑Tire and Wheel Replacement

AWARNING


Installing improper tires on your vehicle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

Tire Rotation


Rotating tires according to the maintenance messages on the driver information interface helps to distribute wear more evenly and increase tire life.

■ Tires without rotation marks

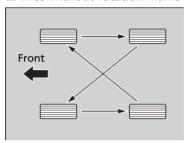

Rotate the tires as shown here.


■ Tires with rotation marks

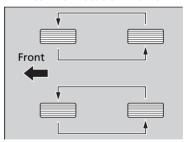

Rotate the tires as shown here.

∑Tire Rotation

Tires with directional tread patterns should only be rotated front to back (not from one side to the other). Directional tires should be mounted with the rotation indication mark facing forward, as shown below.

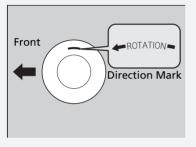

Whenever tires are rotated, you must calibrate the TPMS.

TPMS Calibration P. 416

Winter Tires

If driving on snowy or frozen roads, mount all season marked **M+S** tires, snow tires, or tire chains; reduce speed; and maintain sufficient distance between vehicles when driving.

Be particularly careful when operating the steering wheel or brakes to prevent skidding.

Use tire chains, snow tires, or all season tires when necessary or according to the law.

When mounting, refer to the following points.

For winter tires:

- Select the size and load ranges that are the same as the original tires.
- Mount the tires to all four wheels.

For tire chains:

- Install them on the front tires only.
- Because your vehicle has limited tire clearance, we strongly recommend using the chains listed below:

Cable-type: SCC Radial Chain SC1040

- Follow the chain manufacturer's instruction when installing. Mount them as tightly as you can.
- Check that the chains do not touch the brake lines or suspension.
- Drive slowly.

Winter Tires

AWARNING

Using the wrong chains, or not properly installing chains, can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this owner's manual regarding the selection and use of tire chains.


NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle's brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

When tire chains are mounted, follow the chain manufacturer's instructions regarding vehicle operational limits.

If your vehicle is equipped with summer tires, be aware that these tires are not designed for winter driving conditions. For more information, contact an authorized Honda Clarity Fuel Cell dealer.

Checking the 12-Volt Battery

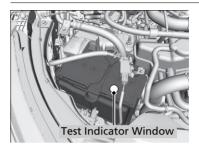

Check the battery condition monthly. Look at the test indicator window and check the terminals for corrosion.

The battery condition is monitored by the sensor on the negative terminal. If there is a problem with the sensor, the warning message on the driver information interface will let you know. Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer

If your vehicle's battery is disconnected or goes dead:

- The audio system is disabled.
 - Reactivating the audio system P. 200
- The clock resets.
 - **⊇ Clock** P. 132

≥ 12-Volt Battery

AWARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

WARNING: Battery post, terminals, and related accessories contain lead and lead compounds.

Wash your hands after handling.

The test indicator's color information is on the battery.

When you find corrosion, clean the battery terminals by applying a baking powder and water solution. Clean the terminals with a damp towel. Cloth/towel dry the battery. Coat the terminals with grease to help prevent future corrosion.

Charging the 12-Volt Battery

Disconnect both battery cables to prevent damaging your vehicle's electrical system. Always disconnect the negative (–) cable first, and reconnect it last.

≥ 12-Volt Battery

When replacing the battery, the replacement must be of the same specifications.

Consult an authorized Honda Clarity Fuel Cell dealer for more information.

Remote Transmitter Care


Replacing the Button Battery

If the indicator does not come on when the button is pressed, replace the battery.



Battery type: CR2032

1. Remove the built-in key.

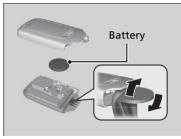

- **2.** Remove the upper half of the cover by carefully prying on the edge with a coin.
 - ► Remove carefully to avoid losing the buttons.
 - ➤ Wrap a coin with a cloth to prevent scratching the smart entry remote.
- **3.** Make sure to replace the battery with the correct polarity.

■ Replacing the Button Battery

AWARNING

CHEMICAL BURN HAZARD

The battery that powers the remote transmitter can cause severe internal burns and can even lead to death if swallowed. Keep new and used batteries away from children.

If you suspect that a child has swallowed the battery, seek medical attention immediately.

NOTICE

An improperly disposed of battery can damage the environment. Always confirm local regulations for battery disposal.

Replacement batteries are commercially available or at an authorized Honda Clarity Fuel Cell dealer.

Climate Control System Maintenance

Air Conditioning

To ensure proper and safe operation, the Society of Automotive Engineers (SAE J2845) recommends that the refrigerant system only be serviced by trained and certified technicians.

Never repair or replace the air conditioning evaporator (cooling coil) with one removed from a used or salvaged vehicle.

New replacement mobile air conditioning evaporators must be certified (and labeled) as meeting SAE Standard J2842.

Dust and Pollen Filter

The climate control system is equipped with a dust and pollen filter that collects pollen, dust, and other debris in the air. The Maintenance Minder messages will let you know when to replace the filter.

We recommend that you replace the dust and pollen filter sooner when using your vehicle in areas with high concentrations of dust.

NOTICE

Vented refrigerant is harmful to the environment. To avoid refrigerant from venting, never replace the evaporator with one removed from a used or salvaged vehicle.

Refrigerant in your vehicle's air conditioning system is flammable and can be ignited during servicing if proper procedures are not followed.

The air conditioner label is found under the hood:

Safety Labels P. 83 **Specifications** P. 530

Dust and Pollen Filter

Using an air freshener may reduce the deodorizing effect of the dust and pollen filter, and may reduce its life.

If the airflow from the climate control system deteriorates noticeably, and the windows fog up easily, the filter may need to be replaced. Please contact an authorized Honda Clarity Fuel Cell dealer for replacement.

The allerfree high retention deodorization filter collects pollen and dust, has allergen treatment ability and reduces exhaust gas odor that may be present in the air.

Cleaning

Interior Care

Use a damp cloth with a mixture of mild detergent and warm water to remove dirt. Use a clean cloth to remove detergent residue.

Cleaning Seat Belts

Use a soft brush with a mixture of mild soap and warm water to clean the seat belts. Let the belts air dry. Wipe the openings of the seat belt anchors using a clean cloth.



■ Cleaning the Window

Wipe using a glass cleaner.

Do not spill liquids inside the vehicle. Electrical devices and systems may malfunction if liquids are splashed on them.

Do not use silicone based sprays on electrical devices such as audio devices and switches. Doing so may cause the items to malfunction or cause a fire inside the vehicle.

If a silicone based spray is inadvertently used on electrical devices, consult an authorized Honda Clarity Fuel Cell dealer.

Depending on their composition, chemicals and liquid aromatics may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Do not use alkali solvents or organic solvents such as benzene or gasoline.

After using chemicals, make sure to gently wipe them away using a dry cloth.


Do not place used cloths on top of resin based parts or textiles for long periods of time without washing.

∑Cleaning the Window

Wires are mounted to the inside of the rear window. Wipe along the same direction as the wires with a soft cloth so as not to damage them.

Be careful not to spill fluids, such as water or glass cleaner, on or around the cover of both the front sensor camera and the rainfall/light sensor.

■ Floor Mats

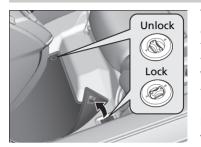

The front and rear floor mats hook over floor anchors, which keep them from sliding forward. To remove a mat for cleaning, turn the anchor knobs to the unlock position. When reinstalling the mat after cleaning, turn the knobs to the lock position.

Do not put additional floor mats on top of the anchored mats.

Maintaining Genuine Leather

To properly clean leather:

- 1. Use a vacuum or soft dry cloth first to remove any dirt or dust.
- **2.** Clean the leather with a soft cloth dampened with a solution comprised of 90% water and 10% neutral soap.
- **3.** Wipe away any soap residue with a clean damp cloth.
- **4.** Wipe away residual water and allow leather to air dry in the shade.

∑Floor Mats

If you use any floor mats that were not originally provided with your vehicle, make sure they are designed for your specific vehicle, fit correctly, and are securely anchored by the floor anchors. Position the rear seat floor mats properly. If they are not properly positioned, the floor mats can interfere with the front seat functions.

Maintaining Genuine Leather Maintainin

It is important to clean or wipe away dirt or dust as soon as possible. Spills can soak into leather resulting in stains. Dirt or dust can cause abrasions in the leather. In addition, please note that some dark colored clothing can rub onto the leather seats resulting in discoloration or stains.

Exterior Care

Dust off the vehicle body after you drive.

Regularly inspect your vehicle for scratches on painted surfaces. A scratch on a painted surface can result in body rust. If you find a scratch, promptly repair it.

■ Washing the Vehicle

Wash the vehicle regularly. Wash more frequently when driving in the following conditions:


- If driving on roads with road salt.
- If driving in coastal areas.
- If tar, soot, bird droppings, insects, or tree sap are stuck to painted surfaces.

Using an Automated Car Wash

- Make sure to follow the instructions indicated on the automated car wash.
- Fold in the door mirrors.
- For models equipped with automatic intermittent wipers, turn the wipers off.

≥ Washing the Vehicle

Do not spray water into the air intake vents. It can cause a malfunction.

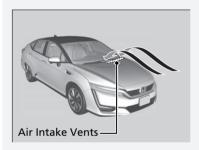

If you need to lift the wiper arms away from the windshield, first set the wiper arms to the maintenance position.

≧ Changing the Wiper Blade Rubber P. 465

∑Using an Automated Car Wash

When using an automated car wash that pulls the vehicle through with a conveyor, make sure vehicle is in car wash mode.

If you want to keep the transmission in N position [car wash mode] P. 379

Using High Pressure Cleaners

- Keep sufficient distance between the cleaning nozzle and the vehicle body.
- Take particular care around the windows. Standing too close may cause water to enter the vehicle interior.
- Do not spray high pressure water directly into the motor compartment. Instead, use low pressure water.
- Do not spray high pressure water directly around the hydrogen fuel lid and ventilation duct.

Applying Wax

A good coat of automotive body wax helps protect your vehicle's paint from the elements. Wax will wear off over time and expose your vehicle's paint to the elements, so reapply as necessary.

■ Maintaining the Bumpers and Other Resin Coated Parts

If you get inverter coolant or battery fluid on resin coated parts, they may be stained or the coating may peel. Promptly wipe it away using a soft cloth and clean water.

Cleaning the Window

Wipe using a glass cleaner.

NOTICE

Chemical solvents and strong cleaners can damage the paint, metal, and plastic on your vehicle. Wipe away spills immediately.

Maintaining the Bumpers and Other Resin Coated Parts

Ask an authorized Honda Clarity Fuel Cell dealer about the correct coating material when you want to repair the painted surface of the parts made of resin.

○ Cleaning the Window

When you raise a wiper arm, you may inadvertently alter the position of the arm by applying undue force. If you notice that an arm is not in its proper return position, active the wipers once and they will automatically reset.

₩ Wipers and Washers P. 162

Maintaining Aluminum Wheels

Aluminum is susceptible to deterioration caused by salt and other road contaminants. When necessary, as early as possible use a sponge and mild detergent to wipe away these contaminants. Do not use a stiff brush or harsh chemicals (including some commercial wheel cleaners). These can damage the protective finish on aluminum alloy wheels, resulting in corrosion. Depending on the type of finish, the wheels also may lose their luster or appear burnished. To avoid water stains, wipe the wheels dry with a cloth while they are still wet.

■ Fogged Exterior Light Lenses

The inside lenses of exterior lights (headlights, brake lights, etc.) may fog temporarily if you have driven in the rain, or after the vehicle has been run through a car wash. Dew condensation also may build up inside the lenses when there is a significant enough difference between the ambient and inside lens temperatures (similar to vehicle windows fogging up in rainy conditions). These conditions are natural processes, not structural design problems in the exterior lights.


Lens design characteristics may result in moisture developing on the light lens frame surfaces. This also is not a malfunction.

However, if you see large amounts of water accumulation, or large water drops building up inside the lenses, have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer.

■ Painting the Vehicle

Refer to the temperature notice label affixed to the driver's doorjamb before painting the vehicle.

▶ Painting the Vehicle

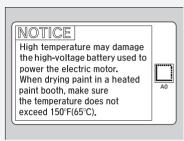

Accessories and Modifications

Accessories

When installing accessories, check the following:

- Do not install accessories on the windshield. They can obstruct your view and delay your reaction to driving conditions.
- Do not install any accessories over areas marked SRS Airbag, on the sides or backs of the front seats, on front or side pillars, or near the side windows. Accessories installed in these areas may interfere with proper operation of the vehicle's airbags or may be propelled into you or another occupant if the airbags deploy.
- Be sure electronic accessories do not overload electrical circuits or interfere with proper operation of your vehicle.

► Fuses P. 518

• Before installing any electronic accessory, have the installer contact an authorized Honda Clarity Fuel Cell dealer for assistance. If possible, have an authorized Honda Clarity Fuel Cell dealer inspect the final installation.

>> Accessories and Modifications

AWARNING

Improper accessories or modifications can affect your vehicle's handling, stability, and performance, and cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

AWARNING

Use of improperly designed, engineered or manufactured high-voltage battery assemblies could cause a fire in your vehicle.

A vehicle fire could result in a crash or injury.

Only use a genuine Honda high-voltage battery assembly, or its equivalent, in your vehicle.

Honda Genuine accessories are recommended to ensure proper operation on your vehicle.

Modifications

Do not modify your vehicle in a manner that may affect its handling, stability, or reliability, or install non-genuine Honda parts or accessories that may have a similar effect.

Even minor modifications to vehicle systems can affect overall vehicle performance. Always make sure all equipment is properly installed and maintained, and do not make any modification to your vehicle or its systems that might cause your vehicle to no longer meet federal, state, province, territory, and local regulations.

The on-board diagnostic port (OBD-II/SAE J1962 connector) installed on this vehicle is intended to be used with automobile system diagnostic devices or with other devices that Honda has approved. Use of any other type of device may adversely affect the vehicle's electronic systems or allow them to be compromised, possibly resulting in a system malfunction, drained battery, or other unexpected problems.

Do not modify or attempt to repair your vehicle's high-voltage hybrid power system or otherwise modify vehicle electrical systems. Disassembling or modifying electrical equipment can result in a crash or a fire.

If you ever need to replace your vehicle's high-voltage battery assembly outside of warranty coverage, we highly recommend that you only use a genuine Honda high-voltage battery assembly. Genuine Honda high-voltage battery assemblies are designed to work with your vehicle's hybrid power system and have been designed, engineered and manufactured to avoid overcharging situations. Non-genuine high-voltage battery assemblies may not have been similarly designed, engineered and manufactured, and installation of such assemblies could result in overcharging, fires, loss of power, or other conditions that may increase the likelihood of a crash or injury.

Handling the Unexpected

This chapter explains how to handle unexpected troubles.

If a Tire Goes Flat	
Temporarily Repairing a Flat Tire	. 490
Handling of the Jack	. 502
Power System Won't Start	
Checking the Procedure	. 503
If the Smart Entry Remote Battery	is
Weak	.504
Emergency Power System Off	. 505
Jump Starting	. 506
Overheating	
How to Handle Overheating	. 509
If Hydrogen Gas is Leaking	511

When the Brake System Indicator (Amber) Comes On515

If the Low Tire Pressure/TPMS Indicat	tor
Comes On or Blinks	516
If the Transmission System Indicator E	Blinks
along with the Warning Message	517
uses	
Fuse Locations	518
Inspecting and Changing Fuses	525
mergency Towing	526
When You Cannot Unlock the Hydro	ogen
Fuel Lid	527
When You Cannot Open the Trunk	528

If a Tire Goes Flat

Temporarily Repairing a Flat Tire

If the tire has a large cut or is otherwise severely damaged, you will need to have the vehicle towed. If the tire only has a small puncture, from a nail for instance, you can use the temporary tire repair kit so that you can drive to the nearest service station for a more permanent repair.


If a tire goes flat while driving, grasp the steering wheel firmly, and brake gradually to reduce speed. Then stop in a safe place.

- **1.** Park the vehicle on a firm, level, and non-slippery surface and apply the parking brake.
- **2.** Change the gear position to **P**.
- **3.** Turn on the hazard warning lights and set the power mode to VEHICLE OFF (LOCK).

∑Temporarily Repairing a Flat Tire

The kit should not be used in the following situations. Instead, contact an authorized Honda Clarity Fuel Cell dealer or a roadside assistance to have the vehicle towed.


- The tire sealant has expired.
- More than one tire is punctured.
- The puncture or cut is larger than 3/16 inch (4 mm).
- The tire side wall is damaged or the puncture is outside the contact area.



- Damage has been caused by driving with the tires extremely under inflated.
- The tire bead is no longer seated.
- The rim is damaged.

Do not remove a nail or screw that punctured the tire. If you remove it from the tire, you may not be able to repair the puncture using the kit.


■ Getting Ready to Temporarily Repair the Flat Tire

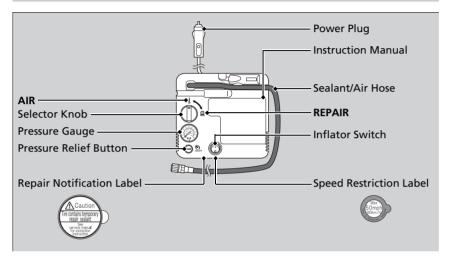

■ Getting Ready to Temporarily Repair the Flat Tire


Repair notification label and speed restriction label are applied to the side of temporary tire repair kit.

When making a temporary repair, carefully read the instruction manual provided with the kit.

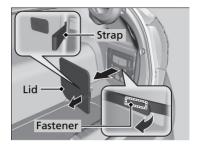

- **1.** Pull the strap on the right side of the trunk and open the lid.
- **2.** Open the fastener and take the kit out of the trunk.
- **3.** Place the kit face up, on flat ground near the flat tire, and away from traffic. Do not place the kit on its side.


■ Injecting Sealant and Air

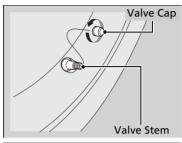

1. Remove the valve cap from the tire valve stem.



2. Remove the sealant/air hose from the packaging.

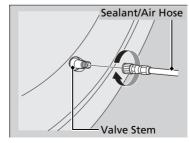

3. Attach the sealant/air hose onto the tire valve stem. Screw it until it is tight.

Injecting Sealant and Air

AWARNING


Tire sealant contains substances that are harmful and can be fatal if swallowed.


If accidentally swallowed, do not induce vomiting. Drink plenty of water and get medical attention immediately.

For skin or eye contact, flush with cool water and get medical attention if necessary.

In cold temperatures, the sealant may not flow easily. In this situation, warm it up for five minutes before using.

The sealant can permanently stain clothing and other materials. Be careful during handling and wipe away any spills immediately.

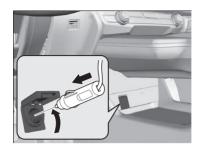

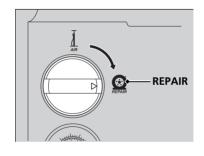

- **4.** Plug in the compressor to the accessory power socket.
 - ► Be careful not to pinch the cord in a door or window.
 - ▶ Do not plug any other electric devices into other accessory power sockets.
 - **≥** Accessory Power Sockets P. 184
- **5.** Turn the power system on.
 - ► Keep the power system on while injecting sealant and air.
- **6.** Turn the selector knob to **REPAIR**.

∑Injecting Sealant and Air

AWARNING


Do not use the compressor in garages, warehouses or poorly ventilated places. There is danger of lack of oxygen.


NOTICE

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

There are two accessory power sockets:

- In the back of the console compartment
- In the console panel
 - **▶ Accessory Power Sockets** P. 184

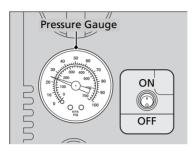

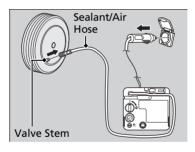


- **7.** Press the inflator switch to turn on the compressor.
 - ► The compressor starts injecting sealant and air into the tire.
 - ► When the sealant injection is complete, continue to add air.
- **8.** After the air pressure reaches 36 psi (250 kPa), turn off the kit.
 - ➤ To check the pressure, occasionally turn off the compressor, and read the gauge.
- **9.** Unplug the power plug from the accessory power socket.
- **10.** Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
- **11.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).

Until the sealant injection is complete, the pressure shown on the pressure gauge will appear higher than actual. After the sealant injection is complete the pressure will drop and then begin to rise again as the tire is inflated with air. This is normal. To accurately measure the air pressure using the gauge, turn the air compressor off only after the sealant injection is complete.

If the required air pressure is not reached within 10 minutes, the tire may be too severely damaged for the kit to provide the necessary seal, and your vehicle will need to be towed.

See an authorized Honda Clarity Fuel Cell dealer for a replacement sealant bottle and proper disposal of an empty bottle.

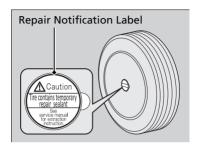


- **12.** Apply the repair notification label to the flat surface of the wheel.
 - ➤ The wheel surface must be clean to ensure the label adheres properly.

■ Distributing the Sealant in the Tire



- **1.** Apply the speed restriction label to the location as shown.
- **2.** Drive the vehicle for about 10 minutes.
 - ▶ Do not exceed 50 mph (80 km/h).
- **3.** Stop the vehicle in a safe place.

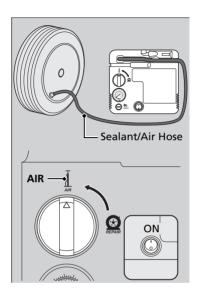

- **4.** Recheck the air pressure using the sealant/ air hose on the compressor.
- **5.** Turn the selector knob to **AIR**.
 - ▶ Do not turn the air compressor on to check the pressure.
 - **▶ Inflating an Under-inflated Tire** P. 499
- **6.** If the air pressure is
 - Less than 25 psi (175 kPa):


Do not add air or continue driving. The leak is too severe. Call for help and have your vehicle towed.

- **Emergency Towing** P. 526
- 36 psi (250 kPa) or more:

Continue driving for another 10 minutes or until you reach the nearest service station, whichever is sooner. Do not exceed 50 mph (80 km/h). If you have not reached a service station, stop and check the tire pressure.

▶ If the air pressure does not go down after the 10 minute driving, you do not need to check the pressure any more.





Turn the air compressor on to inflate the tire until the tire pressure reaches 36 psi (250 kPa).


■ Inflating an Under-inflated Tire P. 499
Then drive carefully for 10 more minutes or until you reach the nearest service station, whichever is sooner. Do not exceed 50 mph (80 km/h). If you have not reached a service station, stop and check the tire pressure.

- ➤ You should repeat this procedure as long as the air pressure is within this range.
- **7.** Unscrew the sealant/air hose from the tire valve stem. Reinstall the valve cap.
- **8.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- 9. Repackage and properly stow the kit.




AWARNING

Do not use the compressor in garages, warehouses or poorly ventilated places. There is danger of lack of oxygen.

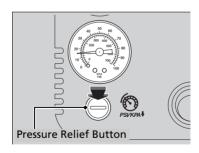



■ Inflating an Under-inflated Tire

You can use the kit to inflate a non-punctured under-inflated tire.

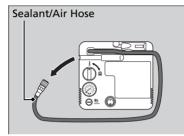

- 1. Open the trunk floor lid.
 - **■** Getting Ready to Temporarily Repair the Flat Tire P. 491
- 2. Remove the kit from the case.
- **3.** Place the kit, face up, on flat ground near the flat tire, away from traffic. Do not place the kit on its side.
- **4.** Remove the air only hose from the kit.
- **5.** Remove the valve cap.

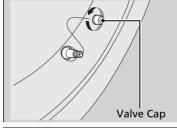


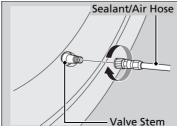


6. Attach the air only hose onto the tire valve stem. Screw it until it is tight.

NOTICE

Do not operate the temporary tire repair kit compressor for more than 15 minutes. The compressor can overheat and become permanently damaged.

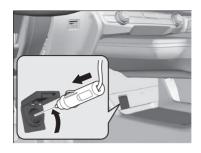


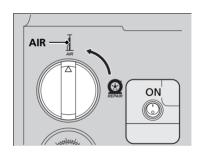

- **7.** Plug in the kit to the accessory power socket.
 - ▶ Be careful not to pinch the cord in a door or window.
 - Do not plug any other electronic devices into other accessory power sockets.
 - **▶** Accessory Power Sockets P. 184
- **8.** Turn the power system on.
 - ➤ Keep the power system on while injecting air.
- 9. Turn the selector knob to AIR.
- **10.** Press the inflator switch to turn on the kit.
 - ► The compressor starts to inject air into the tire.
- **11.** Inflate the tire to the specified air pressure.

AWARNING


Do not use the compressor in garages, warehouses or poorly ventilated places. There is danger of lack of oxygen.

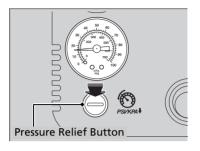

- 12. Turn off the kit.
 - ► Check the pressure gauge on the air compressor.
 - ► If overinflated, press the pressure relief button.
- **13.** Unplug the kit from the accessory power socket.
- **14.** Unscrew the air only hose from the tire valve stem. Reinstall the valve cap.
- **15.** Press the pressure relief button until the gauge returns to 0 psi (0 kPa).
- **16.** Repackage and properly stow the kit.

Handling of the Jack

Your vehicle has jacking points as shown. When replacing your tires, consult an authorized Honda Clarity Fuel Cell dealer.

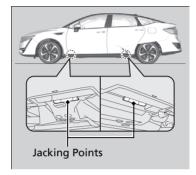

Power System Won't Start

Checking the Procedure

When the **READY** indicator does not come on and the **Ready To Drive** message does not appear on the driver information interface, check the following items and take appropriate action.

∑Checking the Procedure

If you must start the vehicle immediately, use an assisting vehicle or booster battery to jump start it.

▶ Jump Starting P. 506

Checklist	Condition	What to Do
Check if the related indicator or driver	The Temperature Is Too Cold For Vehicle To Operate message appears.	Driver Information Interface Warning and Information Messages P. 102
information interface messages come on.	The To Start, Hold Remote Near Start Button message appears. ▶ Make sure the smart entry remote is in its operating range. ▶ POWER Button Operating Range P. 154	▶ If the Smart Entry Remote Battery is Weak P. 504
	The POWER SYSTEM indicator comes on.	Have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer.
	The transmission system indicator blinks and Transmission Problem Apply Parking Brake When Parked message appears.	The power system can be activated as a temporary measure. ☑ If the Transmission System Indicator Blinks along with the Warning Message P. 517
Check the brightness of the interior lights.	The interior lights are dim or do not come on at all.	Have the 12-volt battery checked by an authorized Honda Clarity Fuel Cell dealer.
	The interior lights come on normally.	Check all fuses, or have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer. Inspecting and Changing Fuses P. 525
Check the Security System Alarm indicator.	When the Security System Alarm indicator is blinking, the power system cannot be turned on.	Security System Alarm P. 149

If the Smart Entry Remote Battery is Weak

If the beeper sounds, the **To Start, Hold Remote Near Start Button** message appears on the driver information interface, and the **POWER** button flashes, and the power system won't start, start the power system as follows:





- **1.** Touch the center of the **POWER** button with the **H** logo on the smart entry remote while the indicator on the **POWER** button is flashing. The buttons on the smart entry remote should be facing you.
 - ► The **POWER** button flashes for about 30 seconds
- **2.** Depress the brake pedal and press the **POWER** button within 10 seconds after the beeper sounds and the **POWER** button changes from flashing to on.
 - ► If you do not depress the pedal, the mode will change to ACCESSORY.

Emergency Power System Off

The **POWER** button may be used to turn the power system off due to an emergency situation even while driving. If you must turn the power system off, do either of the following operations:

- Press and hold the **POWER** button for about two seconds.
- Firmly press the **POWER** button three times.

The steering wheel will not lock. However, because turning off the power system disables the power assist the power system provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake pedal to slow down the vehicle and stop immediately in a safe place.


The gear position automatically changes to $\boxed{\textbf{P}}$ after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.

≥ Emergency Power System Off

Do not press the button while driving unless it is absolutely necessary for the power system to be turned off

Jump Starting Procedure

Turn off the power to electric devices, such as audio and lights. Turn off the power system, then open the hood.

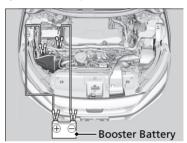

- **1.** Connect the first jumper cable to your vehicle's 12-volt battery \oplus terminal.
- **2.** Connect the other end of the first jumper cable to the booster battery \oplus terminal.
 - ► If you use a booster battery, only use a 12-volt booster battery.
 - ➤ When using an automotive battery charger, select a charging voltage lower than 15-volt. Check the charger manual for the proper setting.
- **3.** Connect the second jumper cable to the booster battery \bigcirc terminal.


AWARNING

A 12-volt battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the 12-volt battery.

Securely attach the jumper cables clips so that they do not come off when the power system vibrates. Also be careful not to tangle the jumper cables or allow the cable ends to touch each other while attaching or detaching the jumper cables.

12-volt Battery performance degrades in cold conditions and may prevent the power system from starting.

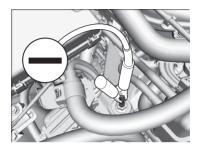

- **4.** Connect the other end of the second jumper cable to the power system mounting bolt as shown. Do not connect this jumper cable to any other part of the vehicle.
- **5.** If your vehicle is connected to another vehicle, start the assisting vehicle's engine, and increase its rpm slightly.
- **6.** Attempt to start your vehicle's power system. If it starts up slowly, check that the jumper cables have good metal-to-metal contact.

■ What to Do After the Power System Starts

Once your vehicle's power system has started, remove the jumper cables in the following order.

- **1.** Disconnect the jumper cable from your vehicle's ground.
- **2.** Disconnect the other end of the jumper cable from the booster battery \bigcirc terminal.
- **3.** Disconnect the jumper cable from your vehicle's 12-volt battery \oplus terminal.
- **4.** Disconnect the other end of the jumper cable from the booster battery \oplus terminal.

Have your vehicle inspected by a nearby service station or an authorized Honda Clarity Fuel Cell dealer.

Overheating

How to Handle Overheating

If you notice any of the following signs, it is possible that the vehicle is overheating.

- The power system warning indicator has come on and the message Power System Problem. Stop Driving When Safe has appeared in the driver information interface.
- Steam is coming out from the motor room.

■ First thing to do

- 1. Immediately park the vehicle in a safe place.
 - ► Change the gear position to P and set the parking brake.
- 2. Turn off all accessories and turn on the hazard warning lights.
 - ▶ **No steam or spray present**: Turn off the power system, then open the hood.
 - ➤ Steam or spray is present: Turn off the power system and wait until it subsides. Then open the hood.


AWARNING

Steam and spray from an overheated power system can seriously scald you.

Do not open the hood if steam is coming out.

Continued 509

■ Next thing to do

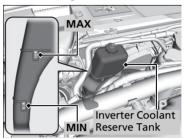

Inspect the coolant level, and check the cooling system components for leaks.

- ► If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark.
- ▶ If there is no coolant in the reserve tank, check that the radiator is cool. Cover the expansion tank cap with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck, and put the cap back on.

■ Last thing to do

Turn the power system on, if the message **Power System Problem. Stop Driving When Safe** disappears from the driver information interface after you have started the power system, resume driving.

If the message does not disappear, contact an authorized Honda Clarity Fuel Cell dealer.

AWARNING

Removing the expansion tank cap while the power system is hot can cause the coolant to spray out, seriously scalding you.

Always let the motor and radiator cool down before removing the expansion tank cap.

If the coolant is leaking, contact an authorized Honda Clarity Fuel Cell dealer for repairs.


ACAUTION

Never pour water or other commercial coolants into the inverter coolant reserve tank. Doing so will cause damage to the motor.

Continuing to drive with the **Power System Problem. Stop Driving When Safe** message on the driver information interface may damage the motor.

How to Handle Leaked Hydrogen Gas

■ When Hydrogen Gas Leak or Other Malfunction is Detected

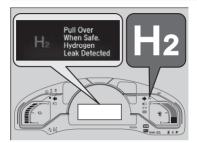

When the hydrogen leak indicator comes on, hydrogen gas is leaking.

When a hydrogen gas leak is detected, the warning buzzer sounds, and warning indicator comes on. Follow the message displayed on the driver information interface and contact an authorized Honda Clarity Fuel Cell dealer.

▶ Hydrogen Leak Indicator P. 90

Even when the warning indicator does not come on, if you notice gas leaking noises or any other malfunction, immediately stop the vehicle in a safe, well-ventilated place, turn the power system off, and immediately contact an authorized Honda Clarity Fuel Cell dealer.

AWARNING

Since hydrogen gas is highly flammable, a hydrogen gas leak is extremely dangerous as the leaked gas, which is dispersed into the atmosphere, can ignite, resulting in a fire in which you or someone else can be serious injured or killed. Keep flammable materials and liquids away from the vehicle at all times, especially if a hydrogen gas leak is detected.

In the case of a hydrogen gas leak, a buzzer will sound and the hydrogen gas leak indicator will come on. If you are driving the vehicle, stop in a safe, well-ventilated place. Then turn the power mode to OFF and contact an authorized Honda Clarity Fuel Cell dealer at once. You should also display signs warning of the danger and be aware of and keep away anything that could ignite the gas.

The system is designed so that in the event that the vehicle catches fire, the gas inside the tanks will be released through the tank valves, thereby ensuring that pressure (due to heat from the fire) within the tanks does not build up.

Continued 511

∑How to Handle Leaked Hydrogen Gas

AWARNING

This gas is released toward the rear of the vehicle in a downward direction. Do not attempt to extinguish the fire from behind the vehicle as the exiting gas may ignite into a flame.

NOTICE

Hydrogen gas is colorless, odorless, very light, and flammable. Also, its burning flame is difficult to detect by sight.

If a vehicle fire occurs, leaked hydrogen gas may be ignited. Stay far away from the vehicle call the local fire department, and report that the vehicle has hydrogen tanks.

To extinguish a vehicle fire, use a large amount of water, a dry chemical fire extinguisher (Class A, B, or C), or a carbon dioxide fire extinguisher. With an inadequate amounts of water, a fire cannot be put out completely. Never attempt to extinguish a vehicle fire with a small amounts of water.

Indicator, Coming On/Blinking

If the 12-Volt Battery Charging System Indicator Comes On



■ Reasons for the indicator to come on

Comes on when the 12-volt battery is not being charged.

■ What to do when the indicator comes on

Turn off the climate control system, rear defogger, and other electrical systems, and immediately contact an authorized Honda Clarity Fuel Cell dealer for repairs.

≥ If the 12-Volt Battery Charging System Indicator Comes On

If you need to stop temporarily, do not turn off the power system. Restarting the power system may rapidly discharge the battery.

If the Brake System Indicator (Red) Comes On or Blinks



■ Reasons for the indicator to come on

- The brake fluid is low.
- There is a malfunction in the brake system.

■ What to do when the indicator comes on while driving

Depress the brake pedal lightly to check pedal pressure.

- If normal, check the brake fluid level the next time you stop.
- If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using regenerative braking.

■ Reason for the indicator to blink

- There is a problem with the electric parking brake system.
- What to do when the indicator blinks

Avoid using the parking brake and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

If the Electric Power Steering (EPS) System Indicator Comes On



- Reasons for the indicator to come on
- Comes on when there is a problem with the EPS system.
- What to do when the indicator comes on

Stop the vehicle in a safe place, turn off the power system, and turn on the power system again.

If the indicator re-appears and stays on, immediately have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer.

≥ If the Brake System Indicator (Red) Comes On or Blinks

Have your vehicle repaired immediately. It is dangerous to drive with low brake fluid. If there is no resistance from the brake pedal, stop immediately in a safe place. If necessary, downshift the gears.

If the brake system indicator and **ABS** indicator come on simultaneously, the electronic brake distribution system is not working. This can result in vehicle instability under sudden braking.

Have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer immediately.

If the brake system indicator (red) blinks at the same time when the brake system indicator (amber) comes on, the parking brake may not work.

Avoid using the parking brake and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

☑ If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On P. 515

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On

BRAKE

BRAKE SYSTEM

- If the brake system indicator (red) comes on or blinks at the same time when the brake system indicator (amber) comes on, release the parking brake manually or automatically.

 ▶ Parking Brake P. 425
- If the brake system indicator (red) continuously illuminates or blinks at the same time when the brake system indicator (amber) comes on, stop the vehicle in a safe place, and have it inspected by an authorized Honda Clarity Fuel Cell dealer immediately.
 - Prevents the vehicle from moving gear position to P.
- If only the Brake System Indicator (Red) is turned off, avoid using the parking brake, and have your vehicle checked by an authorized Honda Clarity Fuel Cell dealer immediately.

If the Brake System Indicator (Red) Comes On or Blinks at the Same Time When the Brake System Indicator (Amber) Comes On

If you apply the parking brake, you may not be able to release it.

If the brake system indicator (red) and the brake system indicator (amber) come on at the same time, the parking brake is working.

If the brake system indicator (red) blinks at the same time the brake system indicator (amber) comes on, the parking brake may not work because it is checking the system.

If the Low Tire Pressure/TPMS Indicator Comes On or Blinks



■ Reasons for the indicator to come on or blink

A tire pressure is significantly low. If there is a problem with the TPMS, the indicator blinks for about one minute, and then stay on.

■ What to do when the indicator comes on

Drive carefully and avoid abrupt cornering and hard braking. Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level. The specified tire pressure is on a label on the driver side doorjamb.

Calibrate the TPMS after the tire pressure is adjusted.

■ What to do when the indicator blinks, then remains on

Have the tire inspected by an authorized Honda Clarity Fuel Cell dealer as soon as possible.

≥ If the Low Tire Pressure/TPMS Indicator Comes On or Blinks

NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the prescribed level.

If the Transmission System Indicator Blinks along with the Warning Message



Transmission
Problem Apply
Parking Brake
When Parked

■ Reasons for the indicator to blink The transmission is malfunctioning.

■ What to do when the indicator blinks

- Immediately have your vehicle inspected by an authorized Honda Clarity Fuel Cell dealer.
- Change the gear position to **N** after turning the power system on.
 - ► Check if the N position on the instrument panel is lit and if the indicator on the N button is lit or blinking.
 - ► The power system cannot be turned on unless the parking brake is set.
 - Turning on the Power P. 370

If the Transmission System Indicator Blinks along with the Warning Message

You may not be able to turn on the power system.

Make sure to set the parking brake when parking your vehicle.

Call a professional towing service if you need to tow your vehicle.

Emergency Towing P. 526

Fuse Locations


If any electrical devices are not working, set the power mode to VEHICLE OFF (LOCK), and check to see if any applicable fuse is blown.

■ Motor Compartment Fuse Box

There are two fuse boxes in the motor compartment.

Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number.


Located near the windshield washer reservoir. Push the tabs to open the box.

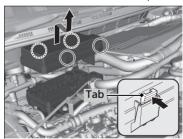


	Circuit Protected	Amps
1	BATTERY	200 A
_	EPS	70 A
	ESB	40 A
	ABS/VSA_FSR	20 A
2	SUB FUSE BOX 4	40 A
	P-ACT	30 A
	=	-
	H/L LO MAIN	30 A
	WIPER MOTOR 1	30 A
3	WIPER MOTOR 2	30 A
3	IG MAIN 1	30 A
	IG MAIN 2	30 A
4	HAZARD	10 A
5	IGB	15 A
6	IG CRASH	10 A
7	IGA	7.5 A
8	P-ACT_DRV	7.5 A
9	SHIFTER	7.5 A
10	STOP LIGHT	7.5 A
11	VBU	7.5 A

	Circuit Protected	Amps
	RFC	60 A
	FUSE BOX MAIN 3	50 A
	FUSE BOX MAIN 1	60 A
	H/L HI MAIN	40 A
12	PREMIUM AUDIO	30 A
12	FUSE BOX MAIN 2	40 A
	ABS/VSA MOTOR	40 A
	-	_
	SMALL MAIN	20 A
	SUB FUSE BOX 2-1	40 A
13	HEATER MOTOR	40 A
14	REAR DEFROSTER	40 A
15	BATT FAN	15 A
16	BATT SNSR	7.5 A
17	H2 PMP	30 A
18	A/C MAIN/DRL	10 A
19	EGR PMP	20 A
20	BATT SNSR (IR)	10 A
21	BACK UP	10 A
22	AUDIO	15 A
23	IGB LEAK SNSR	5 A
24	R H/L LO	7.5 A
25	L H/L LO	7.5 A
26	IGB ECU	5 A

■ Fuse box B

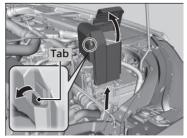

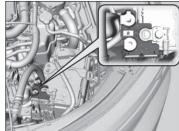



Pull up the cover on the ① terminal, then remove it while pulling out the tab as shown.


Replacement of motor compartment fuses should be done by an authorized Honda Clarity Fuel Cell dealer.

	Circuit Protected	Amps
а	-	-
b	FC WP	70 A
С	-	-
d	SUB FUSE BOX 1	60 A

■ Driver's Side Interior Fuse Box

There are five fuse boxes on the driver's side.

■ Fuse Box A Located under the dashboard.

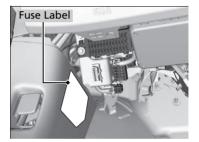


Fuse locations are shown on the label on the under panel.

Locate the fuse in question by the fuse number and label number.

Circuit Protected Amp		Amps
1	ACC	7.5 A
2	=	_
3	_	_
4	SHIFTER	7.5 A
5	OPTION MAIN	7.5 A
6	SRS OPTION	7.5 A
7	METER	10 A
8	FUEL PUMP	7.5 A
9	OPTION	7.5 A
10	CTR ACC SOCKET	20 A
11	_	_
12	R SIDE DOOR LOCK	10 A
13	L SIDE DOOR UNLOCK	10 A
14	RR L P/W	20 A
15	AS P/W	20 A
16	DOOR LOCK	20 A
17	P-DRV	7.5 A
18	IGIR	7.5 A
19	WASHER	15 A
20	ESB	7.5 A

	Circuit Protected	Amps
21	ACG	7.5 A
22	DRL	7.5 A
23	IGFC3	7.5 A
24	FR SENSOR CAMERA	5 A
25	DR DOOR LOCK	10 A
26	R SIDE DOOR UNLOCK	10 A
27	RR R P/W	20 A
28	DR P/W	20 A
29	FR ACC SOCKET	20 A
30	INTERIOR LIGHT	7.5 A
31	DR P/SEAT REC	20 A
32	FR SEAT HEATER	20 A
33	DR P/SEAT SLI	20 A
34	ABS/VSA	7.5 A
35	SRS	10 A
36	_	_
37	LID ACT	10 A
38	L SIDE DOOR LOCK	10 A
39	DR DOOR UNLOCK	10 A

■ Fuse Box B Located under the dashboard.

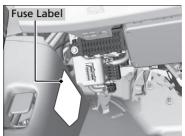


Fuse locations are shown on the label on the under panel.

Locate the fuse in question by the fuse number and label number.

	Circuit Protected	Amps
а	IGB SRS	5 A
b	_	_

■ Fuse Box C Located under the fuse box A.

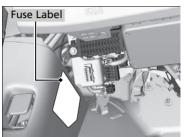


Fuse locations are shown on the label on the under panel.

Locate the fuse in question by the fuse number and label number.

	Circuit Protected	Amps
С	IGFC2	15 A
d	R H/L HI	7.5 A
е	L H/L HI	7.5 A
f	HORN	10 A
g	SMALL	7.5 A
h	ILLUMI	7.5 A
i	-	-
j	=	-

■ Fuse Box D
Located on the left side of fuse box C.

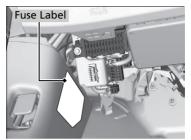


Fuse locations are shown on the label on the under panel.

Locate the fuse in question by the fuse number and label number.

	Circuit Protected	Amps
k	IGFC 1	15 A
I	IGDTWP	20 A
m	IGMG	7.5 A
n	SMART	10 A


■ Fuse Box E Located inside the driver's side outer panel.

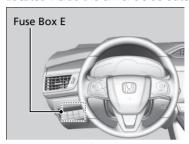



Replacement of fuses in the driver's side outer panel should be done by an authorized Honda Clarity Fuel Cell dealer.

	Circuit Protected	Amps
р	-	-
q	=	-
r	-	-
S	_	_
t	-	-
u	_	_
V	AS P/SEAT REC	20 A
W	AS P/SEAT SLI	20 A

Inspecting and Changing Fuses

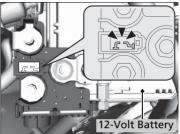

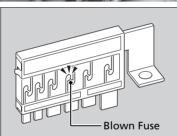

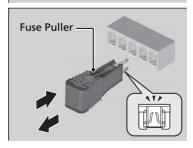

- Set the power mode to VEHICLE OFF (LOCK). Turn headlights and all accessories off.
- **2.** Check the fuses on the battery in the motor compartment.
 - ▶ If the fuse is blown, have it replaced by an authorized Honda Clarity Fuel Cell dealer.
- 3. Remove the fuse box cover.
- **4.** Check the large fuse in the motor compartment.
 - ▶ If the fuse is blown, use a Phillips-head screwdriver to remove the screw, and replace it with a new one.

- **5.** Inspect the small fuses in the motor compartment and the vehicle interior.
 - ▶ If there is a blown fuse, remove it with the fuse puller, and replace it with a new one.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

Replace fuse with a spare fuse of the same specified amperage.

Use the charts to locate the fuse in question and confirm the specified amperage on the fuse label.

Fuse Locations P. 518

There is a fuse puller on the back of the cover of the motor compartment fuse box A.

Emergency Towing

Call a professional towing service if you need to tow your vehicle.

■ Flat bed equipment

The operator loads your vehicle on the back of a truck.

This is the only way you can safely transport your vehicle.

Any other towing method will damage the vehicle's drive system.

Emergency Towing

NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.


NOTICE

Improper towing, such as towing behind a motorhome or other motor vehicle can damage the transmission.

Never tow your vehicle with just a rope or chain. It is very dangerous, since ropes or chains may shift from side to side or break.

Do not use the hook on the rear of your vehicle for the towing of other vehicles or emergency removal of your vehicle. The hook may break.

If your vehicle needs to be towed backward, contact an authorized Honda Clarity Fuel Cell dealer or a professional towing service.

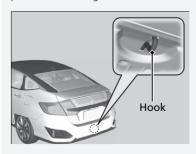



When You Cannot Unlock the Hydrogen Fuel Lid

■ What to Do When Unable to Unlock the Hydrogen Fuel Lid

If you cannot unlock the hydrogen fuel lid, use the following procedure.

1. Open the trunk and remove the cover.

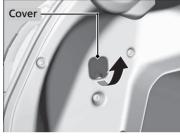




➤ The release lever opens the hydrogen fuel lid when it is pulled.



After taking these steps, contact an authorized Honda Clarity Fuel Cell dealer to have your vehicle checked.

When You Cannot Unlock the Hydrogen Fuel Lid

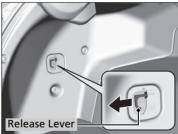

When You Cannot Open the Trunk

■ What to Do When Unable to Open the Trunk

If you cannot open the trunk, use the following procedure.



- **1.** Insert the built-in key into the cylinder and turn the key clockwise (as shown).
 - ► The trunk unlocks and opens.

≫When You Cannot Open the Trunk

Following up:

After taking these steps, contact an authorized Honda Clarity Fuel Cell dealer to have your vehicle checked.

Information

This chapter includes your vehicle's specifications, locations of identification numbers, and other information required by regulation.

Specifications
Identification Numbers
Vehicle Identification Number (VIN), Motor
Number, and Transmission Number 532
Devices that Emit Radio Waves 533
Reporting Safety Defects 534
Warranty Coverages 535
Authorized Manuals 537
Customer Service Information 538

Specifications

■ Vehicle Specifications

Model	CLARITY FUEL CELL
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle Weight Rating	See the certification label on the driver's doorjamb
Gross Axle Weight Rating (Front)	See the certification label on the driver's doorjamb
Gross Axle Weight Rating (Rear)	See the certification label on the driver's dooriamb

■ Air Conditioning

Refrigerant Type	HFO-1234yf (R-1234yf)
Charge Quantity	13.9 - 15.7 oz (395 - 445 g)
Lubricant Type	SE-A2 (POE)
Quantity	7.63 – 9.46 cu-in (125 – 155 cc)

■ Fuel

Fuel requirement	Compressed hydrogen gas
Hydrogen supply pressure	70 MPa (10,153 psig) (at 59°F [15°C])
Hydrogen filling amount*1	Approximately 11 lbs (5 kg) (at 70 MPa [10,153 psig])
Hydrogen tanks capacity	37.3 US gal (141.3 L) (at 70 MPa [10,153 psig])

^{*1:} A measured value when refueled at a hydrogen station with 70 MPa (10,153 psig) of supply pressure compliant with the SAE (J2601) fueling protocol.

■ Washer Fluid

Tank Capacity	1.43 US qt (1.35 L)	

■ Light Bulbs

= Light baibs	
Headlights (Low Beam)	LED
Headlights (High Beam)	LED
Front Turn Signal Lights	LED
Front Side Marker Lights	LED
Parking/Daytime Running Lights	LED
Taillights/Rear Side Marker Lights	LED
Brake Lights	LED
Taillights	LED
Back-Up Lights	LED
Rear Turn Signal Lights	LED
High-Mount Brake Light	LED
Rear License Plate Light	LED
Interior Lights	
Front and Rear Map Lights	LED
Front and Rear Ambient Lights	LED
Vanity Mirror Lights	1.4 W
Center Console Light	LED
Glove Box Light	LED
Front Foot Lights	LED
Trunk Light	LED

■ Brake Fluid

Specified	Honda Heavy Duty Brake Fluid DOT 3

■ Transmission Fluid

Specified	Honda Automatic Transmission Fluid ATF DW-1	
Capacity	Change	1.85 US qt (1.75 L)

■ Inverter Coolant

Specified	Honda Long Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	0.81 US gal (3.05 L) (change including the remaining 0.21 US gal (0.80 L) in the reserve tank)

■ Tire


	Size	235/45R18 94V
Regular	Pressure psi (kPa [kgf/cm²])	36 (250 [2.5])
Wheel Size	Regular	18 x 8J

Identification Numbers

Vehicle Identification Number (VIN), Motor Number, and Transmission Number


Your vehicle has a 17-digit vehicle identification number (VIN) used to register your vehicle for warranty purposes, for licensing, and insuring your vehicle.

The locations of your vehicle's VIN, motor number, and transmission number are shown as follows:

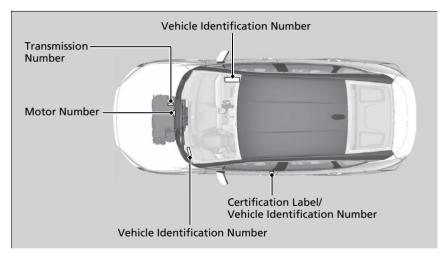

■Vehicle Identification Number (VIN), Motor Number, and Transmission Number

The vehicle identification number (VIN) is located under the cover.

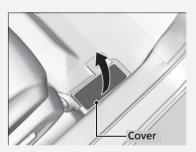

Devices that Emit Radio Waves

Each radio frequency device installed in the vehicle conforms to the requirements and standards of the regulation listed below:

As required by the FCC:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Reporting Safety Defects

In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to http://www.safercar.gov; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from http://www.safercar.gov.

Warranty Coverages

■ U.S. Owners

Your new vehicle is covered by these warranties:

New Vehicle Limited Warranty – covers your new vehicle, except for the emissions control systems and accessories, against defects in materials and workmanship.

Seat Belt Limited Warranty – a seat belt that fails to function properly is covered by a limited warranty. Please read your warranty booklet for details.

Rust Perforation Limited Warranty – all exterior body panels are covered against rusting from the inside out for the specified time period, regardless of mileage.

Accessory Limited Warranty – Honda accessories are covered under this warranty. Time and mileage limits depend on the type of accessory and other factors. Please read your warranty booklet for details.

Replacement Parts Limited Warranty – covers all Honda replacement parts against defects in materials and workmanship.

Continued 535

Replacement 12-Volt Battery Limited Warranty – provides prorated coverage for a replacement battery purchased from an authorized Honda Clarity Fuel Cell dealer.

Replacement Exhaust Components Lifetime Limited Warranty – provides coverage for as long as the purchaser of the exhaust components owns the vehicle.

Restrictions and exclusions apply to all these warranties. Please read the Honda warranty information booklet that came with your vehicle for precise information on warranty coverages. Your vehicle's original tires are covered by their manufacturer. Tire warranty information is in a separate booklet.

■ EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

Director,
Light-Duty Vehicle Center,
U.S. Environmental Protection Agency,
Attention: Warranty Claim
2000 Traverwood Drive,
Ann Arbor, MI 48105;
complianceinfo@epa.gov

Authorized Manuals

■ Service Express

For electronic copies of service publications, you can purchase a subscription to Service Express. Visit www.techinfo.honda.com for pricing and options.

For U.S. Owners

Manuals can be purchased from Helm Incorporated. You can order a manual by phone at 1 (800) 782-4356 (credit card orders only), or online at www.helminc.com.

Customer Service Information

Honda dealership personnel are trained professionals who should be able to deal with any problems you may encounter with your vehicle. If, however, you are faced with a problem that they cannot resolve to your satisfaction, contact Honda Customer Services.

U.S. Owners

American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A 1919 Torrance Blvd. Torrance, CA 90501-2746 Tel: 1 (800) 999-1009

When you call or write, please give us the following information:

- Vehicle Identification Number
 - Vehicle Identification Number (VIN), Motor Number, and Transmission Number P. 532
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

Disclaimer of Pandora®

Requirements to access Pandora®

- Latest version of the Pandora app installed on your Android, Blackberry, or iPhone.
- Registered Pandora account (you can create a free account at www.pandora.com <http:// www.pandora.com/> or on your smartphone)
- Connection to the internet via Wi-Fi or cellular data network.

Limitations

- Access to Pandora requires an active internet connection
- Ability to access Pandora through this system is subject to change without notice
- Certain functionality of Pandora service is not available when accessing the service through this system including, but not limited to, creating new stations, deleting stations, emailing current stations, buying tracks, viewing additional text information, logging in to Pandora, and adjusting Cell Network Audio Quality. Pandora internet radio is a music service not affiliated with HONDA More information is available at http:// www.pandora.com <http:// www.pandora.com/>. Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc., used with permission.
- Mobile access requires a smartphone with an active data plan. Standard data rates may apply.
- Pandora is only available in the United States.

Numbers Using Automatic Climate Control 188 Limitations for Manual Operation............ 231 12-Volt Battery Charging System Indicator 90 MP3/WMA/AAC 257 Airbags...... 55 ABS (Anti-lock Brake System)...... 431 Event Data Recorder 0 Accessories and Modifications 487 Accessory Power Sockets 184 Indicator...... 67, 93 Status Area 225 Acoustic Vehicle Alerting System 382 Passenger Front Airbag Off Indicator 68 Adaptive Cruise Control (ACC) with USB Flash Drives 283 Side Airbags 64 Additives AM/FM Radio 236 Android Auto™ 273 Authorized Manuals 537 Adjusting Anti-lock Brake System (ABS) 431 Auto Door Locking/Unlocking 145 Indicator 87, 429 Head Restraints 174 Armrest 177 Automatic Brake Hold System Audio Remote Controls 201 Automatic Lighting...... 159 Average Fuel Economy 121 Agile Handling Assist...... 415 Audio/Information Screen..... Average Fuel Economy Records 124 Air Conditioning System (Climate Control Changing the Home Screen Icon Layout.. 212 Average Speed 122 Changing the Screen Interface 226 Changing the Mode 190 В Defrosting the Windshield and Windows 192 Display Setup 230 Battery Plasmacluster 194

Sensors 196

12-Volt Battery Charging System	
Indicator 90, 513	
Charging (12-Volt Battery) 478	
High Voltage 420	
Jump Starting 506	
Maintenance (Checking the 12-Volt	
Battery)	
Maintenance (Replacing)	
Belts (Seat)	
Beverage Holders 182	
Bluetooth® Audio 260	
Bluetooth® HandsFreeLink® 329	
Booster Seats (For Children) 82	
Brake System	
Anti-lock Brake System (ABS) 431	
Automatic Brake Hold	
Brake Assist System	
Fluid 461	
Foot Brake	
Indicator (Red) 515	
Parking Brake	
Brake System (Amber)	
Indicator 88	
Brake System (Red)	
Indicator	
Brightness Control (Head-Up Display) 165	
Brightness Control (Instrument Panel) 164	
Bulb Replacement	
Brake/Taillights and Rear Side Marker	
Lights	

Front Turn Signal and Front Side Marker
Lights 463
Headlights463
High-Mount Brake Light 464
Parking/Daytime Running Lights 463
Rear License Plate Lights
Taillights and Back-Up Lights
Taillights/Rear Side Marker, Brake and Rear
Turn Signal Lights
Bulb Specifications
build appecifications
C
Carrying Cargo 365, 367
Certification Label
Changing Bulbs
Characteristics of Fuel Cell Vehicles 11
Charging System Indicator 513
Child Safety
Childproof Door Locks
Child Seat
Booster Seats
Child Seat for Infants
Child Seat for Small Children
Installing a Child Seat with a Lap/Shoulder
Seat Belt
Larger Children81
Rear-facing Child Seat
Selecting a Child Seat
Using a Tether
Childproof Door Locks
Ciliapiooi Dooi Locks 144

Cleaning the Exterior	483
Cleaning the Interior	481
Climate Control System	188
Changing the Mode	190
Defrosting the Windshield and	
Windows	192
Dust and Pollen Filter	480
Sensors	196
Using Automatic Climate Control	188
Clock	132
CMBS™ (Collision Mitigation Braking	
System [™])	433
Coat Hook	185
Collision Mitigation Braking System™	
(CMBS TM)	433
Console Compartment	181
Controls	131
	459
Adding to the Radiator	460
Adding to the Reserve Tank	459
Overheating	509
	374
Cup Holders	182
Customer Service Information	538
Customized Features 126,	300
D	

Defrosting the Windshield and Windows
Devices that Emit Radio Waves 533
Dimming
Headlights
Rearview Mirror
Directional Signals (Turn Signal) 157
Display Button 205
Door Mirrors 171
Doors
Auto Door Locking 145
Auto Door Unlocking 145
Door Open Message 47
Keys 133
Locking/Unlocking the Doors from the
Inside
Locking/Unlocking the Doors from the
Outside
Lockout Prevention System 141
DOT Tire Quality Grading 471
Driver Information Interface 119
Driver's Knee Airbag 62
Driving
Braking
Shifting Gear
Transmission
Turning on the Power
Driving Position Memory System
Dust and Pollen Filter
Past and Folicii Fitter 400

E
Eco Assist® System
Eco Drive Display 125
Elapsed Time
Electric Power Steering (EPS) System
Indicator 93, 514
Electronic Stability Control (ESC) 413
Emergency 526
EPS (Electric Power Steering) System 93
Exterior Care (Cleaning) 483
Exterior Mirrors
F
FC System in Extreme Cold-weather
Conditions 421
Features
Filters
Dust and Pollen
Flat Tire
Floor Mats
Fluids
Brake 461
Coolant
Transmission
Windshield Washer
FM/AM Radio
Foot Brake
Front Airbags (SRS) 58
Front Seat Heaters 186

Front Seats	172
Adjusting	172
Front Sensor Camera	383
Fuel 35, 4	
Economy	448
Gauge	116
How to Handle Leaked Hydrogen Gas	511
Hydrogen Leak Indicator	90
Instant Fuel Economy	122
Low Fuel Indicator	90
Range	116
Refueling	445
Requirement	530
Fuel Cell Power Generation Monitor	124
Fuel Cell Vehicle Precautions	14
Fuel Economy	448
Fuel Fill Door	35
Fuses	518
Inspecting and Changing	
Locations 518, !	520
G	
Gauges	116
Gear Position Indicator 91, 1	
Gear Shift Positions	
Transmission	375
Glass (care) 481, 4	484
Glove Box	180

Н	
Handling the Unexpected	489
HandsFreeLink® (HFL)	329
Automatic Import of Cellular Phonebook	
and Call History	342
Displaying Messages	356
HFL Buttons	329
HFL Menus	332
HFL Status Display	331
In Case of Emergency	
Limitations for Manual Operation	331
Making a Call	350
Options During a Call	353
Phone Setup	337
Phonebook Phonetic Modification	346
Receiving a Call	353
Receiving a Text Message/E-mail	354
Ring Tone	
Selecting a Mail Account	355
Speed Dial	343
To Set Up Text Message/E-mail Options	340
Hazard Warning Button	6
HD Radio™	236
Head Restraints	174
Headlights	158
Aiming	463
Automatic Operation	159
Dimming 158	, 161
Operating	158
Head-Up Display	127
Brightness Control	165

Heated Door Mirror
Heaters (Seat)
HFL (HandsFreeLink®) 329
High Beam Indicator 96
High Voltage Battery 420
Hill Start Assist System 372
HomeLink® Universal Transceiver
Honda App License Agreement 284
Honda Sensing®36
HondaLink® 262
ſ
Identification Numbers
Motor, and Transmission 532
Vehicle Identification 532
Illumination Control
Buttons 164, 165
Immobilizer System 149
Indicator
Indicators 86
12-Volt Battery Charging System 90, 513
Adaptive Cruise Control (ACC) with
Low Speed Follow
Anti-lock Brake System (ABS)
Automatic Brake Hold
Automatic Brake Hold System
Collision Mitigation Braking System [™] (CMBS [™])100, 101
Electric Power Steering (EPS) System 93, 514
Gear Position

High Beam 96
Hydrogen Leak 90
Immobilizer System
Lane Keeping Assist System (LKAS) 100, 408
Lights On 96
Low Fuel 90
Low Tire Pressure/TPMS 94, 416, 418
Parking Brake and Brake System (Amber) 88
Parking Brake and Brake
System (Red)
POWER SYSTEM 89
READY 90
Road Departure Mitigation (RDM) 98
Seat Belt Reminder 50, 92
Security System Alarm 97
SPORT Mode 97, 381
Supplemental Restraint System 67, 93
System Message
Transmission System 91
Turn Signal and Hazard Warning 96
Vehicle Stability Assist [™] (VSA®)
System 93, 413
VSA® OFF 93, 414
Information 529
Instant Fuel Economy 122
Instrument Panel 85
Brightness Control
Interior Lights
Interior Rearview Mirror 170

Inverter Coolant	High Beam Indicator	96	Remote Transmitter	479
Adding to the Radiator 460) Interior	178	Replacing Light Bulbs	463
Adding to the Reserve Tank 459	Eight Switches	158	Safety	451
Overheating 509	D Lights On Indicator	96	Service Items	455
iPod248	Turn Signals	157	Tires	468
	Load Limits		Transmission Fluid	461
	Locking/Unlocking	133	Under the Hood	457
,	Auto Door Locking/Unlocking	145	Map Lights	179
Jacking Points 502	Childproof Door Locks	144	Maximum Load Limit	367
Jump Starting 506			Meters, Gauges	116
	From Outside	135	Mirrors	170
K	Keys	133	Adjusting	170
N.	Using a Key	140	Door	171
Key Number Tag 134	Lockout Prevention System	141	Exterior	171
Keyless Lockout Prevention 147	Low Battery Charge (12-Volt)	513	Interior Rearview	170
Keys 133	Low Smart Entry Remote Signal		Modifications (and Accessories)	487
Lockout Prevention	Strength	134	Motor	532
Number Tag 134		75	Coolant	459
Rear Door Won't Open144	Luggage (Maximum Load Limit)	367	Jump Starting	506
Remote Transmitter	9		MP3	257
Types and Functions	M		Multi-View Rear Camera	443
1	Maintenance	449	N	
-	12-Volt Battery	477	N	
Lane Keeping Assist System (LKAS) 406		461	Numbers (Identification)	532
LaneWatch™423	Cleaning	481		
Language (HFL)	Climate Control System	480	0	
LATCH (Child Seats) 75	Coolant	459	0	
Lights 158, 463	³ Maintenance Minder [™]	453	Odometer	121
Automatic	Precautions	450	Open Source Licenses	298
Bulb Replacement	Radiator	460		
Daytime Running Lights 16	1			

Opening	Puncture (Tire)	490	S	
Trunk 528			Safe Driving	13
Opening/Closing	R		Safety Checklist	
Hood 458	N		Safety Labels	
Power Windows 152	Radiator	460	,	
Trunk	Radio (FM/AM)	236	Safety Message	
Operating the Switches Around the	Radio (SiriusXM®)	240	Seat Belts	
Steering Wheel	Radio Data System (RDS)	238	Adjusting the Shoulder Anchor	
Outside Temperature Display 121	Range	116	Automatic Seat Belt Tensioners	
Overheating 509	RDS (Radio Data System)	238	Checking	
	READY Indicator	90	Fastening	
D	Rear Defogger Button	166	Installing a Child Seat with a Lap/Sh	
P	Rearview Mirror	170	Seat Belt	
Pandora®	Refueling	445	Pregnant Women	
Panic Mode 151	Fuel	445, 530	Reminder	
Parking 441	Fuel Gauge	116	Warning Indicator	•
Parking Brake 425	Regenerative Energy and Rege	enerative	Seat Heaters	
Parking Brake and Brake System	Braking	23	Seats	
Indicator (Red) 515	Regulations	418, 471, 533	Adjusting	
Passenger Front Airbag Off Indicator 68	Remote Transmitter		Front Seats	
Passing Indicators	Replacement		Seat Heaters	
Plasmacluster	Battery	479	Security System	149
Playing Bluetooth® Audio 260	Bulbs		Immobilizer System Indicator	96
POWER Button 154	Fuses	518, 520	Security System Alarm Indicator	
Power System	Tires	474	Selecting a Child Seat	74
Turning on	Wiper Blade Rubber		Setting the Clock	132
POWER SYSTEM Indicator	Reporting Safety Defects		Shift Button	34, 375
Power Windows	Resetting a Trip Meter		Operation	377
Precautions While Driving	Road Departure Mitigation (RI		Shifting (Transmission)	34, 375
Rain 373	On and Off		Shoulder Anchor	52
Pregnant Women 53	on and on		Side Airbags	64
Tregnane Women			Side Curtain Airbags	66

Siri® Eyes Free 269	Chains 476	Noise When Braking 41
SiriusXM® Radio 240	Checking and Maintaining	Overheating509
Smart Entry System 135	Flat Tire (Puncture)	
Snow Tires 476	Inspection	Rear Door Won't Open 39, 144
Song By Voice™ (SBV) 251	Labeling 469	Warning Indicators 86
Spare Tire (Optional)531	Regulations 471	Trunk 146
Specifications 530	Rotation 475	Lid 146
Specified Fuel 445, 530	Spare (Optional) 531	Light Bulbs530
SPORT Mode 381	Summer 476	Unable to Open 528
SPORT Mode Indicator 97, 381	Temporary Tire Repair Kit	Turn Signals 157
SRS Airbags (Airbags) 58	Wear Indicators 473	Indicators (Instrument Panel)
Steering Wheel	Winter 476	Turn-by-Turn Directions 122, 129
Adjusting 169	Towing a Trailer 369	Turning on the Power 370
Stopping 441	Towing Your Vehicle	Does Not Activate 503
Summer Tires 476	Emergency 526	Jump Starting 506
Supplemental Restraint System (SRS) 58	TPMS (Tire Pressure Monitoring	
Switches (Around the Steering	System) 416	U
Wheel) 6, 7, 154	Transmission 34, 374, 375	U
Synchronization Mode 193	Creeping 374	Under-Floor Storage Area 185
System Message Indicator	Fluid 461	Unlocking the Doors
	Gear Position Indicator 91, 377	Unlocking the Front Doors from the
т	Number 532	Inside 28, 142
•	Operating the Shift Button 34, 377	USB Flash Drives 257, 283
Temperature Sensor 196	Shifting 375	USB Ports
Temporary Tire Repair Kit 491	Trip Meter121	Using the Smart Entry with Push Button
Time (Setting) 132	Troubleshooting	Start System
Tire Pressure Monitoring System	Blown Fuse 518, 520	
(TPMS)	Brake Pedal Vibrates 39	V
Indicator	Buzzer Sounds When Opening Door 39	•
Tires	Emergency Towing 526	Vanity Mirrors
Air Pressure 469, 531	Flat Tire/Puncture 490	Vehicle Identification Number 532

Vehicle Monitoring System	2	Switch 162
Vehicle Speed	129	Windows (Opening and Closing) 152
Vehicle Stability Assist [™] (VSA®)	413	Windshield
Off Button	414	Cleaning 481, 484
Off Indicator 93	, 414	Defrosting/Defogging 192
System Indicator 93	, 413	Washer Fluid
Voice Control Operation	232	Wiper Blades 465
Audio Commands	234	Wipers and Washers
Climate Control Commands		Winter Tires
General Commands	235	Snow Tires 476
Music Search Commands	235	Tire Chains 476
On Screen Commands	235	Wipers and Washers 162
Phone Commands	234	Checking and Replacing Wiper Blades 465
Useful Commands	234	WMA 257
Voice Portal Screen	233	Worn Tires
Voice Recognition		
VSA® (Vehicle Stability Assist™)	413	
W		
Wallpaper	216	
Warning and Information Messages	102	
Warning Indicator On/Blinking	513	
Warning Labels	83	
Warranties (Warranty Manual provided		
separately)	535	
Watts	530	
Wear Indicators (Tire)	473	
Wi-Fi Connection	267	
Window Washers	162	
Adding/Refilling Fluid	462	



owners.honda.com