

# *ACCORD*

**HONDA**  
The Power of Dreams

**2018**  
**OWNER'S GUIDE**

# DISCLOSURES

## ■ Devices That Emit Radio Waves

The following products and systems on your vehicle emit radio waves when in operation:

- Audio system
- Bluetooth® Audio
- Bluetooth® HandsFreeLink®
- Blind Spot Information System\*
- HomeLink® Universal Transceiver
- Immobilizer system
- Remote transmitter
- Smart entry system\*
- Wireless charger\*
- Collision Mitigation Braking System™

Each of the above complies with the appropriate requirements or the required standards of the FCC (Federal Communications Commission) and Industry Canada, described below:

*As required by the FCC:*

*This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

*Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

*As required by Industry Canada:*

*This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.*

## ■ Disclaimer

The information and data contained herein are believed to be accurate and reliable. American Honda Motor Co., Inc. makes no warranty of any kind and accepts no responsibility for the results obtained through application of this information.

## ■ Privacy Notice

This vehicle may share location and usage information. To manage this setting, visit [www.hondalink.com/vehicle-data-choices](http://www.hondalink.com/vehicle-data-choices) (US) or [honda.ca/hondalinkassist](http://honda.ca/hondalinkassist) (Canada).

## ■ Event Data Recorders

**This vehicle is equipped with an event data recorder (EDR).** The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. **The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:**

- **How various systems in your vehicle were operating;**
- **Whether or not the driver and passenger safety belts were buckled/ fastened;**
- **How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,**
- **How fast the vehicle was traveling.**

These data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties such as law enforcement that have the special equipment can read the information if they have access to the vehicle or the EDR.

The data belong to the vehicle owner and may not be accessed by anyone else except as legally required or with the permission of the vehicle owner.

## ■ Service Diagnostic Recorders

This vehicle is equipped with service-related devices that record information about powertrain performance. The data can be used to verify emissions law requirements and/or help technicians diagnose and solve service problems. It may also be combined with data from other sources for research purposes, but it remains confidential.

Some diagnostic and maintenance information is uploaded to Honda upon vehicle start up.

*\*if equipped*



# INTRODUCTION

This Owner’s Guide is intended to help you quickly get acquainted with your **2018 Honda Accord**. It provides basic information and instructions on technology and convenience features, as well as emergency procedures and how to get assistance.

This guide is for vehicles sold in the United States and Canada. It covers all Accord models, so you may find descriptions of features and equipment that are not in your vehicle. Images throughout this guide are from U.S. vehicles and represent features and equipment that are available on some, but not all, models.

This guide is not intended to be a substitute for the Owner’s Manual at *owners.honda.com* (U.S.) or *myhonda.ca* (Canada). The Warranty Information CD enclosed in your glove box kit includes the vehicle and tire warranties in electronic format. This information can be viewed on a computer (PC or Mac platform) and saved or printed for your reference. You can also visit *owners.honda.com* (U.S.) or *myhonda.ca* (Canada) to view the complete and most current information.

If you are the first registered owner of your vehicle, you may request a complimentary printed copy of the Owner’s Manual, Navigation Manual, or Vehicle Warranty within the first six months of vehicle purchase. To request a copy, visit *owners.honda.com* (U.S.) and create or log in to your account. In Canada, please request a copy from your Honda dealer.

American Honda Motor Co., Inc. strives to be proactive in protecting our environment and natural resources. By using electronic delivery for a considerable portion of the information typically found in a vehicle owner’s manual, we are further reducing our impact on the environment.

## Honda Automobile Customer Service

Your authorized Honda dealer should be able to answer any questions you have about your vehicle. However, if you are dissatisfied with the information you receive, you can call Honda Automobile Customer Service (see page 155).

**Call (800) 999-1009 (U.S.) or (888) 946-6329 (Canada)**

## Honda Roadside Assistance

24-hour emergency road service is available to you in the United States and Canada throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply).

**Call (866) 864-5211 (U.S.) or (800) 465-7587 (Canada)**

# TABLE OF CONTENTS

<b>VISUAL INDEX</b> .....	1
Steering Wheel and Nearby Controls ....	1
Dashboard and Other Controls.....	2
Dashboard and Other Controls.....	3
<b>SAFETY INFORMATION</b> .....	4
Important Safety Information .....	4
Seat Belts.....	5
Airbags .....	8
Child Safety.....	14
Safety Label Locations.....	22
Reporting Safety Defects .....	22
<b>INSTRUMENT PANEL</b> .....	23
Malfunction Indicators .....	23
Condition Indicators.....	25
On/Off Indicators.....	26
Driver Information Interface (DII) .....	26
Safety Support.....	27
<b>VEHICLE CONTROLS</b> .....	28
Using the Key or Remote Transmitter*.....	28
Smart Entry System* .....	29
Door Operation.....	30
Power Window Operation.....	32
Interior and Exterior Lights.....	33
Auto High-Beam System .....	34
Wiper Operation.....	35
One-Touch Turn Signal .....	37
Adjusting the Seats .....	37
Adjusting the Steering Wheel .....	41
Driving Position Memory System*.....	42
HomeLink® Universal Transceiver* .....	42
Climate Control System .....	44
Seat Heaters* and Ventilation* .....	45
Heated Windshield** .....	45
Heated Steering Wheel* ** .....	46
Setting the Clock.....	46
Customized Features.....	47
<b>AUDIO AND CONNECTIVITY</b> .....	48
Basic Audio Operation.....	48
Color Audio Operation.....	53
Touchscreen Operation .....	54
Managing Apps.....	55
HondaLink®* .....	56
HondaLink® Assist* .....	57
Near Field Communication (NFC)*.....	57
Apple CarPlay™ .....	58
Android Auto™ .....	60
Wi-Fi Connection .....	61
System Updates .....	62
FM/AM Radio.....	64
SiriusXM® Radio* .....	66
iPod® .....	67
USB Flash Drive .....	69
<b>Bluetooth®</b> Audio .....	71
Pandora® .....	73
<b>BLUETOOTH® HANDSFREELINK® (HFL)</b> .....	74
Basic HFL Operation.....	74
Pairing a Phone.....	77
Making a Call.....	79
SMS Text Messaging* .....	82
Siri® Eyes Free.....	83
<b>NAVIGATION*</b> .....	84
Basic Navigation Operation.....	84
Entering a Destination.....	86
Routing.....	88


\*if equipped

\*\* Canadian models, if equipped

# VISUAL INDEX

Quickly locate items in the vehicle's interior.

## Steering Wheel and Nearby Controls

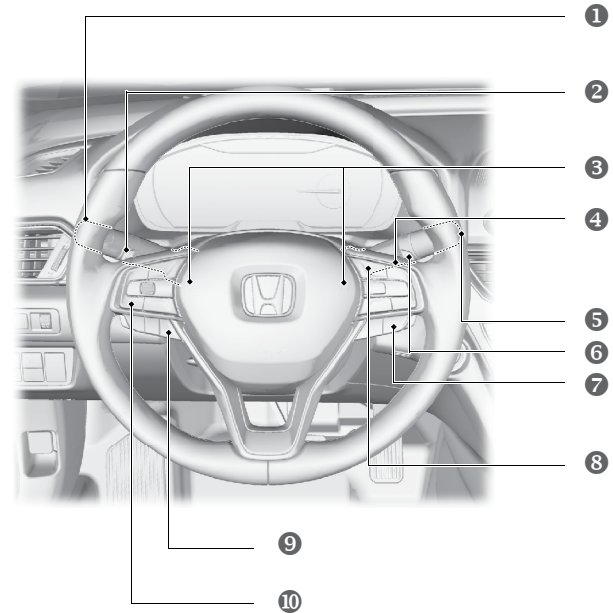

- ① Lights/turn signals p. 33  
Fog lights\* p. 33  
LaneWatch\*\* p. 110
- ② Paddle shifter\* p. 99
- ③ Horn
- ④ Adaptive Cruise Control (ACC) buttons\* p. 106  
Adaptive Cruise Control (ACC) with Low Speed Follow (LSF) buttons\* p. 106
- ⑤ Wipers/washers p. 35
- ⑥ Paddle shifter\* p. 99
- ⑦ Lane Keeping Assist System (LKAS) buttons p. 109
- ⑧ Head up display buttons\*
- ⑨ *Bluetooth* HandsFreeLink buttons  
Voice control buttons\* p. 74
- ⑩ Audio remote controls p. 51


\*if equipped

\*if equipped  
\*\*Canadian models, if equipped

<b>DRIVING</b> .....	90
Before Driving .....	90
Maximum Load Limit .....	91
Towing a Trailer.....	93
Turbocharger* Precautions .....	95
Remote Engine Start*.....	95
Starting to Drive .....	96
Shifting.....	97
Braking .....	101
Eco Assist System .....	104
Vehicle Stability Assist (VSA®) .....	104
Honda Sensing™*.....	105
Adaptive Cruise Control (ACC)* and Adaptive Cruise Control with Low Speed Follow (ACC with LSF)* .....	106
Lane Keeping Assist System (LKAS)*.....	109
LaneWatch™* .....	110
Road Departure Mitigation (RDM)*.....	111
Traffic Sign Recognition System .....	112
Collision Mitigation Braking System™ (CMBS™)* .....	113
Parking Sensor System*.....	115
Multi-View Rear Camera .....	116
Blind Spot Information (BSI)* .....	117
Refueling .....	118
Improving Fuel Economy and Reducing CO2 Emissions .....	119
<b>HANDLING THE UNEXPECTED</b> .....	120
Smart Entry Remote* Battery Strength....	120
Shift Lever* Does Not Move .....	120
Jump Starting .....	121
Overheating .....	122
Emergency Engine Stop*.....	123
Emergency Towing .....	124
Tire Pressure Monitoring System (TPMS) 124	
Changing a Flat Tire.....	127
Fuse Locations .....	130

<b>MAINTENANCE</b> .....	131
Safety Precautions .....	131
Maintenance Minder™ .....	132
Under the Hood .....	135
Engine Oil .....	136
Engine Coolant.....	139
Clutch*/Brake Fluid .....	141
Checking the Battery.....	141
Window Washer Fluid.....	142
Changing Wiper Blades.....	142
Tire Information.....	143
Tire Labeling .....	147
DOT Tire Quality Grading .....	148
Air Conditioning.....	149
Testing of Readiness Codes .....	150
<b>SPECIFICATIONS</b> .....	151
<b>CUSTOMER INFORMATION</b> .....	154
Frequently Asked Questions/ Troubleshooting .....	154
Contact Us.....	155
Honda Roadside Assistance.....	156
Warranty Coverages .....	156
EPA Contact Information .....	157
<b>VOICE COMMAND INDEX</b> .....	158
<b>INDEX</b> .....	161
<b>DISCLOSURES</b> .....	165


## Dashboard and Other Controls

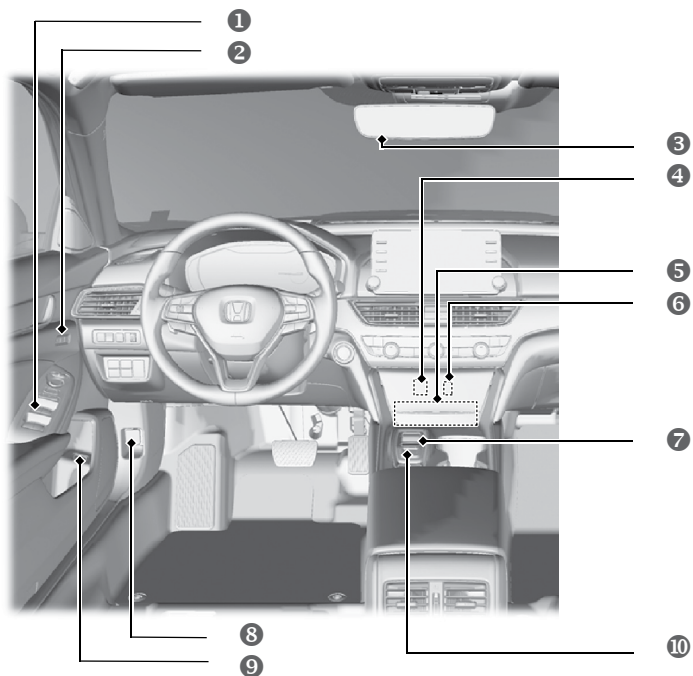

- ① Power window switches p. 32  
Door lock switches p. 30  
Door mirror controls
- ② Memory buttons\* p. 42
- ③ HomeLink buttons\* p. 42
- ④ Accessory power socket
- ⑤ Wireless charger\* p. 49
- ⑥ USB port p. 48
- ⑦ Shift lever p. 97
- ⑧ Hood release handle p. 136
- ⑨ Trunk opener p. 31
- ⑩ Electric Parking Brake p. 102  
ECON button p. 104  
Automatic Brake Hold p. 103

\*if equipped

## Dashboard and Other Controls

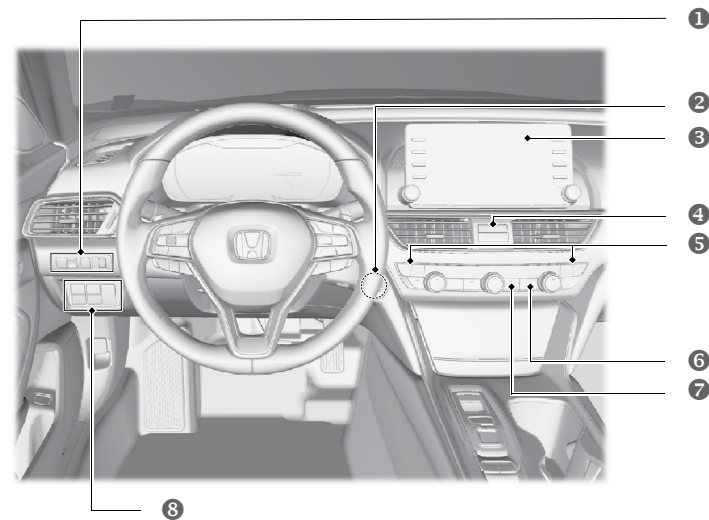

- ① Brightness control p. 33  
Head-Up Display (HUD) buttons\* p. 112
- ② Engine START/STOP button p. 96
- ③ Audio system p. 48  
Navigation system\* p. 84
- ④ Hazard warning button
- ⑤ Front seat heater\* and ventilation\* buttons p. 45
- ⑥ Climate control system p. 44
- ⑦ Rear window defogger  
Heated door mirror button\*
- ⑧ Vehicle Stability Assist (VSA) system OFF button p. 104  
Safety Support switch p. 113, p. 111  
Parking Sensor System button\* p. 115  
Heated windshield button\* p. 45

\*if equipped

## SAFETY INFORMATION

Your safety—and the safety of others—is very important and operating this vehicle safely is an important responsibility. While we strive to help you make informed decisions about safety, it is not practical or possible to warn you about all the hazards associated with operating or maintaining your vehicle. Therefore, you must use your own good judgment.

### Important Safety Information

This guide explains many of your vehicle's safety features and how to use them. Please read this information carefully. Following the instructions below will also help to keep you and your passengers safe.

#### ■ Important Safety Precautions

- Always wear your seat belt.
- Secure all children in the proper restraint system.
- Be aware of airbag hazards.
- Don't drink and drive.
- Pay appropriate attention to the task of driving safely.
- Control your speed.
- Keep your vehicle in safe condition.

Engaging in cell phone conversation or other activities that keep you from paying close attention to the road, other vehicles, and pedestrians could lead to a crash. Remember, situations can change quickly and only you can decide when it is safe to divert some attention away from driving.

#### ■ Safety Messages

When you see the following messages throughout this guide, pay close attention.

##### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

##### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

##### **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.

##### **NOTICE**

This information is intended to help you avoid damage to your vehicle, other property, or the environment.


#### ■ Carbon Monoxide Gas

The engine exhaust from this vehicle contains carbon monoxide, a colorless, odorless, and highly toxic gas. As long as you properly maintain your vehicle and follow the instructions set forth below, you will not accumulate dangerous levels of carbon monoxide gas in the vehicle interior.

Have the exhaust system inspected for leaks whenever:

- The exhaust system is making an unusual noise.
- The exhaust system may have been damaged.
- The vehicle is raised for an oil change.

When you operate a vehicle with the trunk open, airflow can pull exhaust gas into the interior and create a hazardous condition. If you must drive with the trunk open, open all the windows and set the climate control system as shown below:

1. Select the fresh air mode.
2. Select the  mode.
3. Set the fan speed to high.
4. Set the temperature control to a comfortable setting.

Adjust the climate control system in the same manner if you sit in your parked vehicle with the engine running.

#### **WARNING**

Carbon monoxide gas is toxic. Breathing it can cause unconsciousness and even kill you.

Avoid any enclosed areas or activities that expose you to carbon monoxide.

An enclosed area such as a garage can quickly fill up with carbon monoxide gas. Do not run the engine with the garage door closed. Even when the garage door is open, drive out of the garage immediately after starting the engine.

#### Seat Belts

A seat belt is your best protection in all types of collisions. Airbags are designed to supplement seat belts, not replace them. So even though your vehicle is equipped with airbags, make sure you and your passengers always wear your seat belts and wear them properly.

#### ■ Lap/Shoulder Seat Belts

All five seating positions are equipped with lap/shoulder seat belts with emergency locking retractors. In normal driving, the retractor lets you move

freely while keeping some tension on the belt. During a collision or sudden stop, the retractor locks to restrain your body. The rear seat belts also have a lockable retractor for use with child seats.

The front seats are equipped with automatic seat belt tensioners to enhance safety. The tensioners automatically tighten the front seat belts during a moderate to severe frontal collision, sometimes even if the collision is not severe enough to inflate the front airbags.

### ■ Proper Use of Seat Belts

Follow these guidelines for proper use:

- All occupants should sit upright, well back in the seat, and remain in that position for the duration of the trip. Slouching and leaning reduce the effectiveness of the belt and can increase the chance of serious injury in a crash.
- Never place the shoulder part of a lap/shoulder seat belt under your arm or behind your back. This could cause very serious injuries in a crash.
- Two people should never use the same seat belt. If they do, they could be very seriously injured in a crash.
- Do not put any accessories on the seat belts. Devices intended to improve comfort or reposition the shoulder part of a seat belt can reduce the protective capability and increase the chance of serious injury in a crash.
- No one should sit in a seat with an inoperative seat belt or one that does not appear to be working correctly. Using a seat belt that is not working properly may not protect the occupant in a crash. Have a dealer check the belt as soon as possible.

### ⚠ WARNING

Not wearing a seat belt properly increases the chance of a serious injury or death in a crash, even though your vehicle has airbags.

Be sure you and your passengers always wear seat belts and wear them properly.

### ■ Seat Belt Inspection

Regularly check the condition of your seat belts as follows:

- Pull each belt out fully and look for frays, cuts, burns, and wear.
- Check that the latches and buckles work smoothly and the belts retract easily. If a belt does not retract easily, cleaning the belt may correct the problem. Use only mild soap and warm water. Do not use bleach or cleaning solvents. Make sure the belt is completely dry before allowing it to retract.

Any belt that is not in good condition or working properly will not provide proper protection and should be replaced as soon as possible.

A belt that has been worn during a crash may not provide the same level of protection in a subsequent crash. Have your seat belts inspected by a dealer after any collision.

### ⚠ WARNING

Not checking or maintaining seat belts can result in serious injury or death if the seat belts do not work properly when needed.

Check your seat belts regularly and have any problem corrected as soon as possible.


### ■ Fastening a Seat Belt

Adjust your seat to the proper position (see page 37) and then follow the below steps:

1. Pull the seat belt out slowly.



2. Insert the latch plate into the buckle, then tug on the belt to make sure the buckle is secure. Make sure that the belt is not twisted or caught on anything.

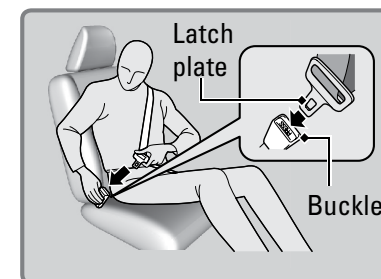

3. Position the lap part of the belt as low as possible across your hips, then pull up on the shoulder part of the belt so the lap part fits snugly. This lets your strong pelvic bones take the force of a crash and reduces the chance of internal injuries.





- If necessary, pull up on the belt again to remove any slack, then make sure that the belt rests across the center of your chest and over your shoulder. This spreads the forces of a crash over the strongest bones in your upper body.

To release the belt, push the red PRESS button then guide the belt by hand until it has retracted completely.

### ⚠ WARNING


Improperly positioning the seat belts can cause serious injury or death in a crash.

Make sure all seat belts are properly positioned before driving.

#### ■ Adjusting the Shoulder Anchor

The front seats have adjustable shoulder anchors to accommodate taller and shorter occupants.

- Move the anchor up and down while holding the release button.
- Position the anchor so that the belt rests across the center of your chest and over your shoulder.

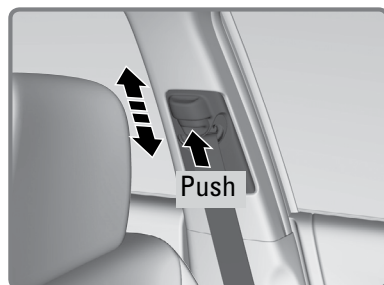

### Airbags

Your vehicle is equipped with four types of airbags: front airbags, front knee airbags, side airbags, and side curtain airbags.


#### ■ Front Airbags (SRS)

The front SRS airbags inflate in a moderate-to-severe frontal collision to help protect the head and chest of the driver and/or front passenger. They are housed in the center of the steering wheel for the driver and in the dashboard for the front passenger. Both airbags are marked **SRS AIRBAG**.


SRS (Supplemental Restraint System) indicates that the airbags are designed to supplement seat belts, not replace them. Seat belts are the occupant's primary restraint system.

#### ■ Advanced Airbags

The front airbags have advanced features to help reduce the likelihood of airbag-related injuries to smaller occupants.

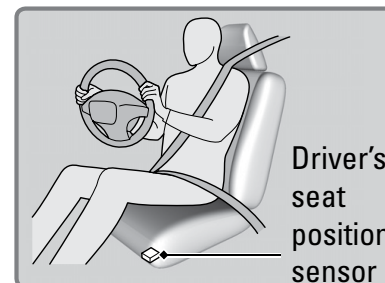

Driver's seat position sensor

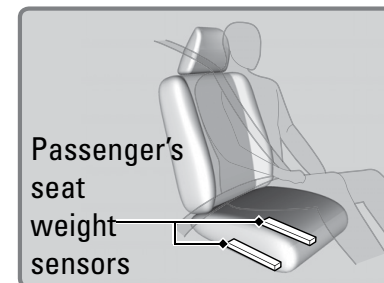

Passenger's seat weight sensors

The driver's advanced front airbag system includes a seat position sensor. Based on information from this sensor and the severity of the impact, the advanced airbag system determines the optimal deployment of the driver's airbag.

The front passenger's advanced airbag system has weight sensors.

We advise against allowing a child age 12 or under to ride in the front passenger's seat. However, if you do allow a child age 12 or under to ride in the front passenger's seat, note that the system will automatically turn off the front passenger's airbag if the sensors detect that the child is approximately 65 lbs (29 kg) or less.

For both advanced front airbags to work properly:


- Do not spill any liquid on or under the seats.
- Do not put any object under the passenger's seat.
- Make sure any objects are positioned properly on the floor. Improperly positioned objects can interfere with the advanced airbag sensors.
- All occupants should sit upright and wear their seat belts properly.
- Do not cover the passenger's side dashboard with a cloth, towel, cover, etc.
- Make sure the floor mat behind the front passenger's seat is hooked to the floor mat anchor. An improperly placed mat can interfere with the advanced airbag sensors.

#### ■ Side Airbags

The side airbags help protect the upper torso and pelvis of the driver or a front passenger during a moderate-to-severe side impact. They are housed in the outside edge of the driver's and front passenger's seat-backs. Both are marked **SIDE AIRBAG**.

## ■ Side Curtain Airbags

Side curtain airbags help protect the heads of the driver and passengers in outer seating positions during a moderate-to-severe side impact. The side curtain airbags equipped in this vehicle are also designed to help reduce the likelihood of partial and complete ejection of vehicle occupants through side windows in crashes, particularly rollover crashes.

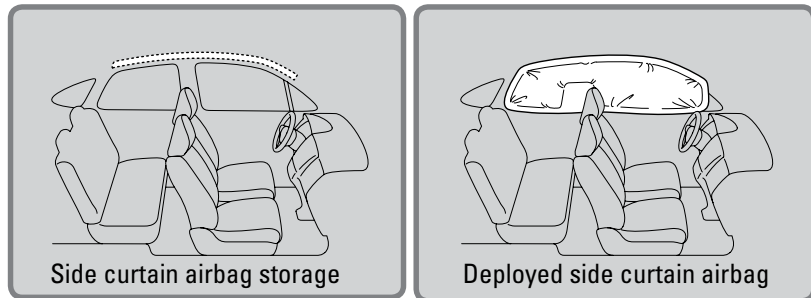

The side curtain airbags are located in the ceiling above the side windows on both sides of the vehicle.

The side curtain airbags are designed to deploy in a rollover or moderate-to-severe side impact. If the SRS control unit senses that your vehicle is about to roll over, it immediately deploys both side curtain airbags and activates both front seat belt tensioners. If the impact is on the passenger's side, the passenger's side curtain airbag will inflate even if there are no occupants on that side of the vehicle.

To get the best protection from the side curtain airbags, occupants should wear their seat belts properly and sit upright and well back in their seats.

Do not attach any objects to the side windows or roof pillars, as they can interfere with the proper operation of the side curtain airbags.

### When side curtain airbags deploy in a frontal collision

One or both side curtain airbags may inflate in a moderate-to-severe angled frontal collision.

## ■ Driver and Front Passenger Knee Airbag

The knee SRS airbags inflate in a moderate-to-severe frontal collision to help keep the driver and/or front passenger in the proper position and to help maximize the benefit provided by the vehicle's other safety features.

## ■ Important Facts About Your Airbags

Always wear your seat belt properly, sit upright, and as far back from the steering wheel as possible while allowing full control of the vehicle. A front passenger should move their seat as far back from the dashboard as possible.

### Do not place hard or sharp objects between yourself and a front airbag.

Carrying or driving with a pipe, hard, or sharp objects in either your lap or mouth, can result in injuries if your front airbag inflates.

**Do not attach or place objects on the front airbag covers.** Objects on the covers marked **SRS AIRBAG** could interfere with the proper operation of the airbags or be propelled inside the vehicle and hurt someone if the airbags inflate.

**Do not attach accessories on or near the side airbags.** They can interfere with the proper operation of the airbags or hurt someone if an airbag inflates.

**Do not attach any objects to the side windows or roof pillars.** They can interfere with the proper operation of the side curtain airbags.

**Do not cover or replace the front seat-back covers.** This can prevent your side airbags from properly deploying during a side impact.

### **WARNING**

An open glove box can cause serious injury to your passenger in a crash, even if the passenger is wearing the seat belt.

Always keep the glove box closed while driving.


## ■ Airbag System Indicators

If a problem occurs in the airbag system, the SRS indicator comes on and a message appears on the Driver Information Interface.

### SRS (Supplemental Restraint System indicator)

If the indicator comes on at any other time besides vehicle start-up or does not come on at all, have the

system checked by a dealer as soon as possible. If you don't, your airbags and seat belt tensioners may not work properly when they are needed.

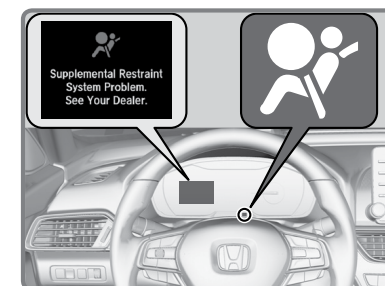

**⚠ WARNING**


Ignoring the SRS indicator can result in serious injury or death if the airbag systems or tensioners do not work properly.

Have your vehicle checked by a dealer as soon as possible if the SRS indicator alerts you to a possible problem.

**Passenger airbag off indicator**

The indicator comes on to alert you that the passenger's front airbag has been turned off. This occurs when the weight sensors detect about 65 lbs (29 kg) or less, the weight of an infant or small child, on the seat.

Children age 12 or under should always ride properly restrained in a back seat.

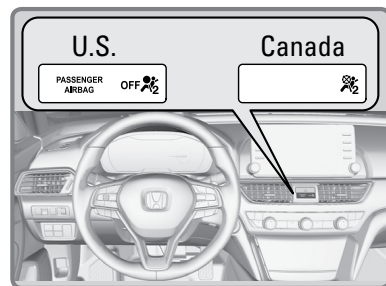

If the front passenger's seat is empty, the indicator will come on and, in the event of a crash, the front passenger's airbag will not deploy. If your vehicle is equipped with a front passenger's knee airbag, this airbag will not deploy either.

To ensure the passenger is detected properly, confirm that:


- There is no child seat or other object pressing against the rear of the seat-back.
- There is no rear passenger pushing or pulling on the back of the front passenger's seat.
- The front seat or seat-back is not forced back against an object on the seat or floor behind it.
- There is no object placed under or beside the front passenger's seat.
- The occupant is sitting in an upright position and the seat back is not excessively reclined.
- The occupant is not leaning against the door or center console.
- The occupant's feet are placed on the floor in front of them.
- There are no objects hanging from the front passenger's seat.
- Only small, lightweight objects are in the seat-back pocket.

The passenger airbag off indicator may come on and go off periodically if the total weight on the seat is near the airbag cutoff threshold.

Have your vehicle checked by a dealer as soon as possible if:

- All of the above conditions are met, and the indicator comes on with an adult seated in the front passenger seat.
- The seat is empty and the indicator is off.

Do not allow an adult passenger to ride in the front seat when the indicator is on.

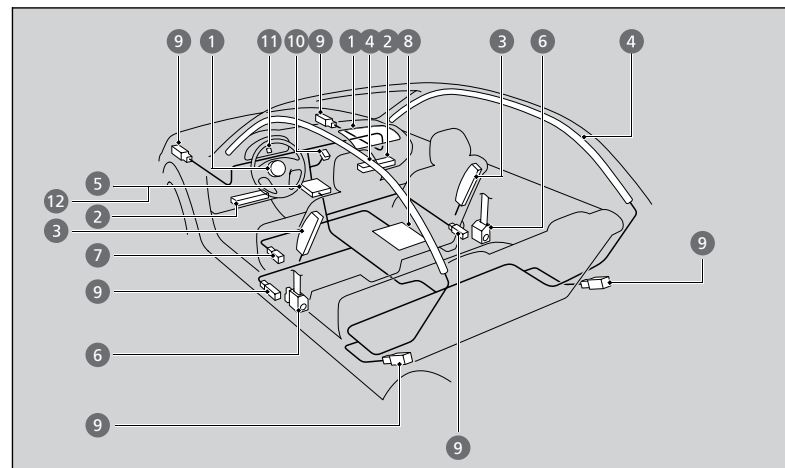**■ Airbag System Components**

1. Two SRS (Supplemental Restraint System) front airbags. The driver's airbag is stored in the center of the steering wheel; the front passenger's airbag is stored in the dashboard. Both are marked **SRS AIRBAG**.
2. Two knee airbags. The driver's knee airbag is stored under the steering column; the front passenger's knee airbag is stored under the glove box. Both are marked **SRS AIRBAG**.
3. Two side airbags, one for the driver and one for a front passenger. The airbags are stored in the outer edges of the seat-backs. Both are marked **SIDE AIRBAG**.
4. Two side curtain airbags, one for each side of the vehicle. The airbags are stored in the ceiling, above the side windows. The front and rear pillars are marked **SIDE CURTAIN AIRBAG**.
5. An electronic control unit that, when the vehicle is on, continually monitors information about the various impact sensors, seat and buckle sensors, rollover sensor, airbag activators, seat belt tensioners, and other vehicle information. During a crash event the unit can record such information.
6. Automatic front seat belt tensioners. In addition, the driver's and front passenger's seat belt buckles incorporate sensors that detect whether or not the belts are fastened.
7. A driver's seat position sensor. If the seat is too far forward, the airbag will inflate with less force.
8. Weight sensors in the front passenger's seat. The front passenger's airbag will be turned off if the weight on the seat is approximately 65 lbs (29 kg) or less (the weight of an infant or small child).
9. Impact sensors that can detect a moderate-to-severe front or side impact.



10. An indicator on the dashboard that alerts you that the front passenger's front airbag has been turned off.
11. An indicator on the instrument panel that alerts you to a possible problem with your airbag system or seat belt tensioners.
12. A rollover sensor that detects whether the vehicle is about to roll over and signal the control unit to deploy both side curtain airbags.

### Airbag Care

You do not need to, and should not, perform any maintenance on or replace any airbag system components yourself. However, you should have your vehicle inspected by a dealer in the following situations:

#### When the airbags have deployed

If an airbag has inflated, the control unit and other related parts must be replaced. Similarly, once an automatic seat belt tensioner has been activated, it must be replaced.

#### When the vehicle has been in a moderate-to-severe collision

Even if the airbags did not inflate, have your dealer inspect the following: the driver's seat position sensor, weight sensors in the passenger's seat, front seat belt tensioners, and each seat belt that was worn during the crash.

#### Do not remove or modify a front seat without first consulting a dealer

This would likely disable the driver's seat position sensor or the weight sensors in the passenger's seat. If it is necessary to remove or modify a front seat to accommodate a person with disabilities, contact a Honda dealer. For U.S. vehicles, call Honda Automobile Customer Service at (800) 999-1009. For Canadian vehicles, call Honda Canada Customer Relations at (888) 946-6329.

### Child Safety

Each year, many children are injured or killed in vehicle crashes because they are either unrestrained or not properly restrained. In fact, vehicle collisions are the number one cause of death of children ages 12 and under.

The National Highway Traffic Safety Administration and Transport Canada recommend that all children ages 12 and under be properly restrained in a rear seat. Some states, provinces, and territories have laws restricting where children may ride.

To reduce the number of child deaths and injuries, every state and Canadian province and territory requires that infants and children be properly restrained when they ride in a vehicle.

### Protecting Child Passengers

- An inflating front or side airbag can injure or kill a child sitting in the front seat.
- A child in the front seat is more likely to interfere with the driver's ability to safely control the vehicle.
- Statistics show that children of all sizes and ages are safer when they are properly restrained in a rear seat.
- Any child who is too small to wear a seat belt correctly must be restrained in an approved child seat that is properly secured to the vehicle using either the lap belt portion of the lap/shoulder belt or the lower anchors of the LATCH system.
- Never put a seat belt over yourself and a child. During a crash, the belt would likely press deep into the child and cause serious or fatal injuries.
- Never let two children use the same seat belt. Both children could be very seriously injured in a crash.
- Do not allow children to operate the doors, windows, or seat adjusters.
- Do not leave children in the vehicle unattended, especially in hot weather when the inside of the vehicle can get hot enough to kill them. They could also activate vehicle controls, causing it to move unexpectedly.

#### ⚠ WARNING

Children who are unrestrained or improperly restrained can be seriously injured or killed in a crash.

Any child too small for a seat belt should be properly restrained in a child seat. A larger child should be properly restrained with a seat belt, using a booster seat if necessary.

#### ⚠ WARNING

Allowing a child to play with a seat belt or wrap one around their neck can result in serious injury or death.

Instruct children not to play with any seat belt and make sure any unused seat belt a child can reach is buckled, fully retracted, and locked.


### Protecting Infants

An infant must be properly restrained in a rear-facing, reclining child seat until the infant reaches the manufacturer's weight or height limit for the seat and the infant is at least one year old. Many experts recommend use of a rear-facing seat for a child up to two years old if the child's height and weight are appropriate for a rear-facing seat.

Child seats must be placed and secured in a rear seating position. Rear-facing child seats should never be installed in a forward-facing position.

When properly installed, a rear-facing child seat may prevent the driver or a front passenger from moving their seat all the way back or from locking their seat-back in the desired position.

Make sure that there is no contact between the child seat and the seat in front of it. It can also interfere with proper operation of the front passenger's advanced front airbag system. If this occurs, we recommend that you install the child seat directly behind the front passenger's seat, move the seat as far forward as needed and leave it unoccupied. Or you may wish to get a smaller rear-facing child seat.

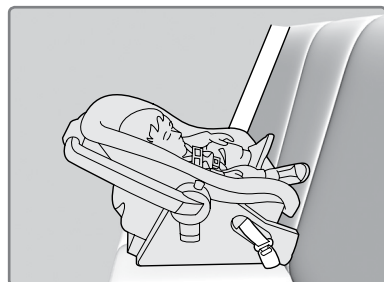

### ⚠️ WARNING

Placing a rear-facing child seat in the front seat can result in serious injury or death during a crash.


Always place a rear-facing child seat in the rear seat, not the front.

## ■ Protecting Smaller Children

If a child is at least one year old and within the weight range indicated by the child seat manufacturer, the child should be properly restrained in a firmly secured forward-facing child seat.

We strongly recommend placing a forward-facing child seat in a rear seating position.

Placing a forward-facing child seat in the front seat can be hazardous, even with advanced front airbags that automatically turn the passenger's front airbag off. A rear seat is the safest place for a child.

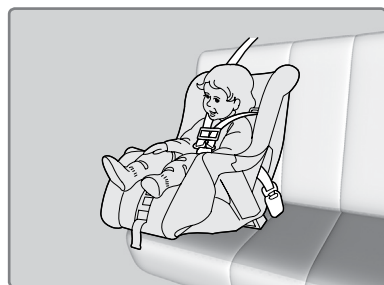

### ⚠️ WARNING

Placing a forward-facing child seat in the front seat can result in serious injury or death if the front airbag inflates.

If you must place a forward-facing child seat in front, move the vehicle seat as far back as possible and properly restrain the child.

## ■ Selecting a Child Seat

Most child seats are LATCH-compatible (Lower Anchors and Tethers for Children). Some have a rigid-type connector, while others have a flexible-type connector. Both are equally easy to use. Some existing and previously owned child seats can only be installed using the seat belt. Whichever type you choose, follow the child seat manufacturer's use and care instructions as well as the instructions in this manual. Proper installation is key to maximizing your child's safety.

In seating positions and vehicles not equipped with LATCH, a LATCH-compatible child seat can be installed using the seat belt and a top tether for added security. This is because all child seats are required to be designed so that they can be secured with a lap belt or the lap part of a lap/shoulder belt. In addition, the child seat manufacturer may advise that a seat belt be used to attach a LATCH-compatible seat once a child reaches a specified weight. Please read the child seat owner's manual for proper installation instructions.

### Important considerations when selecting a child seat



Make sure the child seat meets the following three requirements:

- The child seat is the correct type and size for the child.
- The child seat is the correct type for the seating position.
- The child seat is compliant with Federal Motor Vehicle Safety Standard 213 or Canadian Motor Vehicle Safety Standard 213.


## ■ Installing a LATCH-Compatible Child Seat

A LATCH-compatible child seat can be installed in either of the two outer rear seats. A child seat is attached to the lower anchors with either the rigid or flexible type of connectors.



1. Locate the lower anchors under the marks.
2. Place the child seat on the vehicle seat, then attach the child seat to the lower anchors according to the instructions that came with the child seat. Make sure that the lower anchors are not obstructed by the seat belt or any other object.

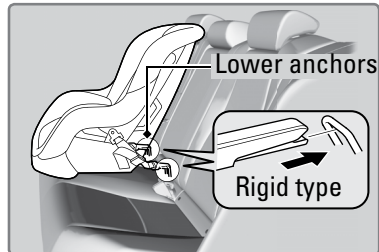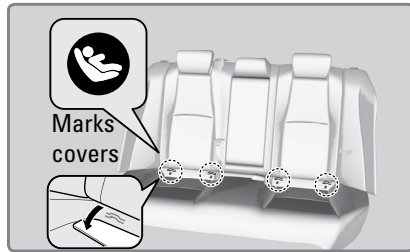



- Open the tether anchor cover behind the head restraint.
- Raise the head restraint to its highest position (if adjustable), then route the tether strap between the head restraint legs and secure the tether strap hook to the anchor.

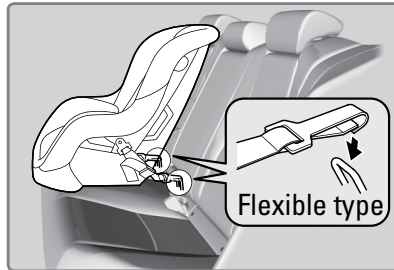

- Tighten the tether strap according to the manufacturer's instructions.

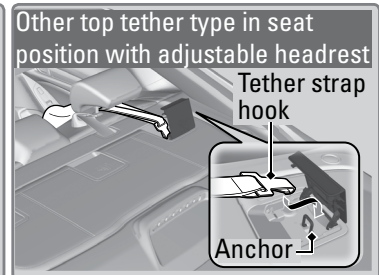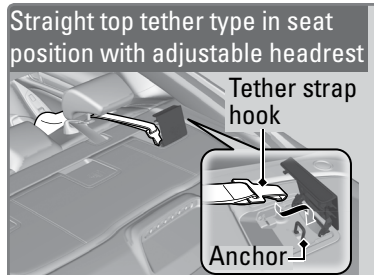

- Make sure the child seat is firmly secured by rocking it forward and back and side to side; little movement should be felt.
- Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

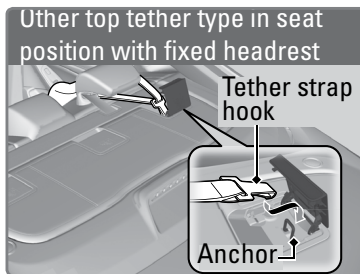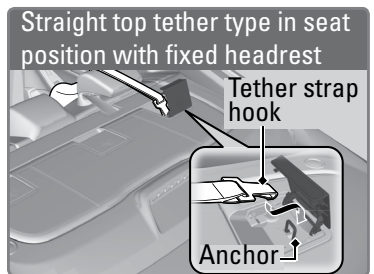


## ■ Installing a Child Seat with a Lap/Shoulder Seat Belt

A child seat can be installed with a lap/shoulder belt in any rear seat or, if absolutely necessary, the front passenger seat.


- Place the child seat on the vehicle seat.
- Route the seat belt through the child seat according to the seat manufacturer's instructions and insert the latch plate into the buckle. Insert the latch plate fully until it clicks.



- Slowly pull the shoulder part of the belt all the way out until it stops. This activates the lockable retractor.
- Let the seat belt retract a few inches, then try to pull it out to make sure the retractor is locked. If you are able to pull the shoulder belt out, the lockable retractor is not activated. Pull the seat belt all the way out and repeat steps 3 – 4.

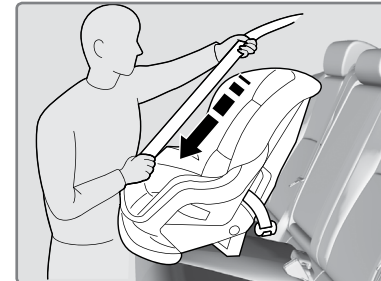

- Grab the shoulder part of the seat belt near the buckle and pull up to remove any slack from the lap part of the belt. When doing this, place your weight on the child seat and push it into the vehicle seat.
- Make sure the child seat is firmly secured by rocking it forward and back and side to side; less than one inch of movement should occur near the seat belt.

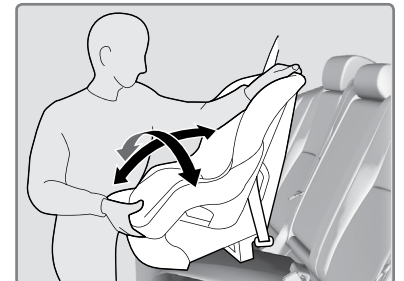


7. Make sure any unused seat belt that a child can reach is buckled, the lockable retractor is activated, and the belt is fully retracted and locked.

To deactivate a lockable retractor, release the buckle and allow the seat belt to wind up all the way.



#### ■ Adding Security with a Tether

A tether anchorage point is provided behind each rear seating position. A child seat that is installed with a seat belt and comes with a tether to use for additional security.



1. Locate the appropriate tether anchorage point and lift the cover.

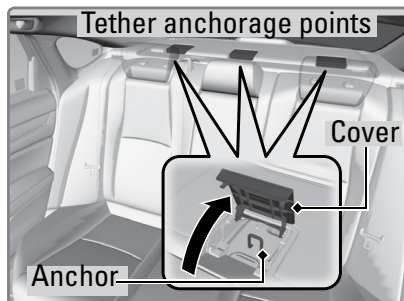

2. Raise the head restraint to its highest position (if adjustable), then route the tether strap through the head restraint legs. Make sure the strap is not twisted.
3. Secure the tether strap hook onto the anchor.

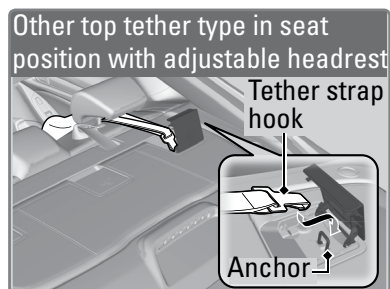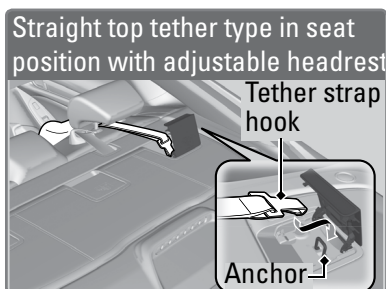

4. Tighten the tether strap according to the seat manufacturer's instructions.

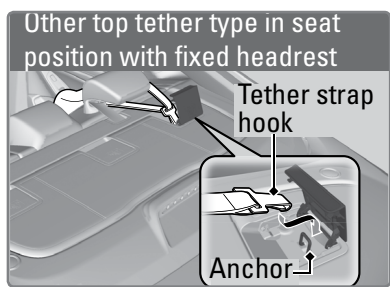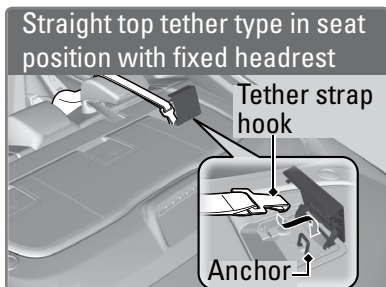

#### ■ Protecting Larger Children

When a child is too big for a child seat, secure the child in a rear seat using the lap/shoulder seat belt.

Have the child sit upright and all the way back, then ensure the following:

- The child's knees bend comfortably over the edge of the seat.
- The shoulder belt crosses between the child's neck and arm.
- The lap part of the seat belt is as low as possible, touching the child's thighs.
- The child can stay seated for the whole trip.



If a lap/shoulder belt cannot be used properly, position the child in a booster seat in a rear seating position. For the child's safety, check that the child meets the booster seat manufacturer's recommendations.

Some U.S. states and Canadian provinces/territories require children to use a booster seat until they reach a given age or weight (e.g., 6 years or 60 lbs/27kg). Be sure to check current laws in the state or province/territory where you intend to drive.

#### **⚠ WARNING**


Allowing a child age 12 or under to sit in the front can result in injury or death if the passenger's front airbag inflates.

If a larger child must ride in front, move the vehicle seat as far to the rear as possible, then have the child sit up properly and wear the seat belt properly, using a booster seat if needed.



## Safety Label Locations

Safety labels are in the locations shown. They warn you of potential hazards that can cause serious injury or death. Read these labels carefully.

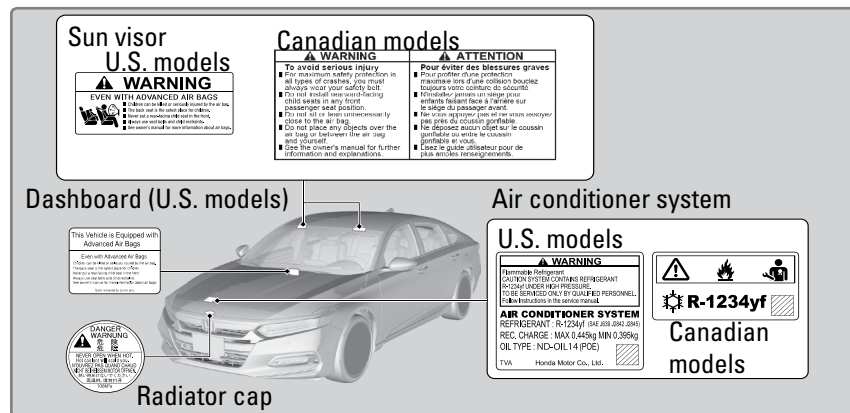

## Reporting Safety Defects In the U.S.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>, or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE., Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

## In Canada

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Honda Canada, Inc., and you may also inform Transport Canada.

If Transport Canada receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may lead to a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer, or Honda Canada, Inc.

To contact Transport Canada's Defect Investigations and Recalls Division, you may call 1-800-333-0510. For more information on reporting safety defects or about motor vehicle safety, go to <http://www.tc.gc.ca/roadsafety>.

## INSTRUMENT PANEL

Learn about the indicators, gauges, and displays related to driving the vehicle.



Indicators briefly appear with each engine start and then go out. Red and amber indicators are most critical. Blue and green indicators are used for general information.

## Malfunction Indicators

These are the most critical indicators. If they come on and stay lit while driving or at any other time, there may be a problem. See your dealer if necessary.

## Brake system

U.S.



Canada

- Brake fluid is low.
- The brake system has a problem.

Press the brake pedal lightly to check pedal pressure. If normal, check the brake fluid level when you stop. If abnormal, take immediate action. If necessary, downshift the transmission to slow the vehicle using engine braking. Have your vehicle repaired immediately.



## Charging system

The battery is not charging. Turn off all electrical items, but do not turn off the vehicle to prevent further battery discharge. Have your vehicle repaired immediately.



## Supplemental Restraint System (SRS)

There is a problem with one of the airbag systems or seat belt tensioners.



**Malfunction indicator lamp (check engine light)**

- The emissions control system may have a problem or the fuel cap is loose or missing.
- (Blinks) A misfire in the engine's cylinders is detected. Stop in a safe place and wait for the engine to cool down.



**Anti-lock Brake System (ABS)**

There is a problem with the anti-lock brake system. Your vehicle still has normal braking ability, but no anti-lock function.



**Tire Pressure Monitoring System (TPMS)**

There is a problem with the tire pressure monitoring system or the vehicle is fitted with the compact spare tire.



**Vehicle Stability Assist (VSA)**

There is a problem with the VSA system.



**Brake system**

There is a problem with the brake system.



U.S.  
Canada



**Electric Power Steering (EPS)**

There is a problem with the EPS system.



**Adaptive Cruise Control (ACC)\* with Low Speed Follow (LSF)\***

There is a problem with the system, the temperature is too high, or the radar sensor is blocked.



**Lane Keeping Assist System (LKAS)**

There is a problem with the system, the temperature is too high, or the camera is blocked.



**Safety Support System**

There is a problem with the Road Departure Mitigation, Collision Mitigation Braking System or Blind Spot Information\* systems. Have your vehicle checked by a dealer.

*\*if equipped*

**Condition Indicators**

These indicators may require you to perform an action.



U.S.



Canada

**Parking brake**

Release the parking brake before driving. You will hear a beep if you drive with it not fully released.



**Seat belt reminder**

Make sure seat belts are fastened for you and all passengers. The indicator blinks and beeps sound continuously if you and/or your front passenger has not fastened your seat belts when you begin driving. If the indicator remains on after seat belts are fastened, see your dealer.



**Low fuel**

Refuel as soon as possible. If the indicator blinks, there is a problem with the fuel gauge. See your dealer.



**Low tire pressure**

Stop in a safe place, check tire pressures, and inflate tire(s) if necessary. Recalibrate the TPMS after adjusting air pressure. The indicator also appears if your vehicle is fitted with the compact spare tire\*. Have your regular tire repaired or replaced as soon as possible.



**System message\***

When a condition or malfunction indicator comes on, a message also appears in the driver information interface\*. Check the display for more information.



**Immobilizer**


Your key or remote transmitter cannot be recognized by the vehicle. If the indicator blinks, you may not be able to start the engine. Turn the vehicle off and then on again. If it continues to blink, there may be a problem with the system. See your dealer.

*\*if equipped*

## INSTRUMENT PANEL


## On/Off Indicators

These indicators remind you when an item is on or off.

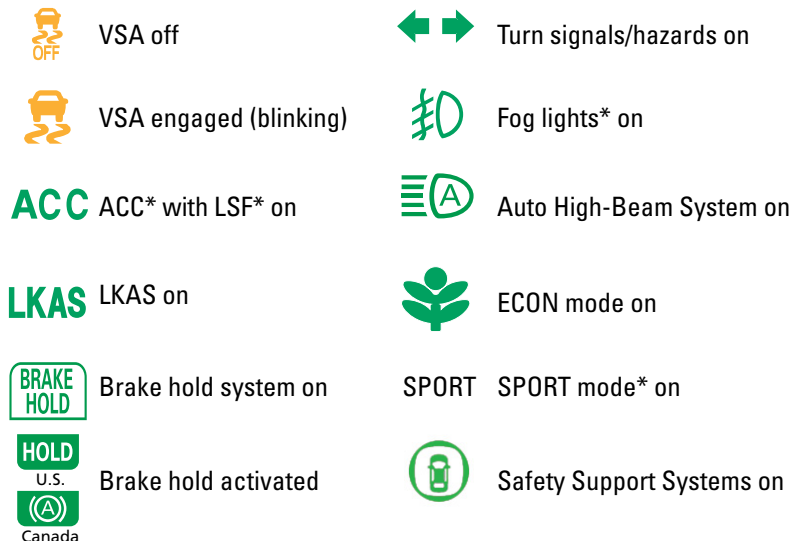

## Driver Information Interface (DII)

Consists of several displays that provide you with useful information.

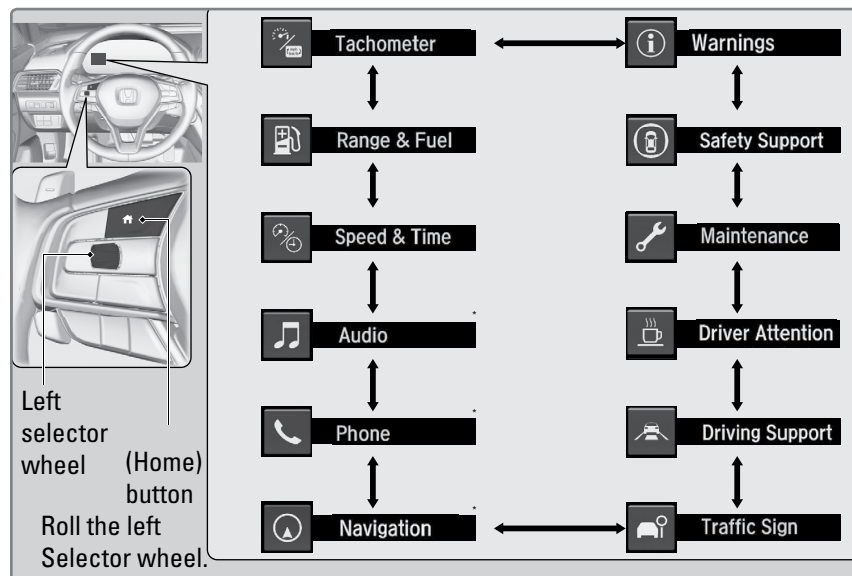

*\*if equipped*

## INSTRUMENT PANEL


## Safety Support

Indicates the state of RDM, CMBS™, and BSI\* (for example, On, Off, or Failure) by color and letters.

## ■ How It Works

The following colors indicate the state of any of the above mention systems:

- Green: The system is on.
- Gray: The system is off.
- Amber: There is a problem with the system.

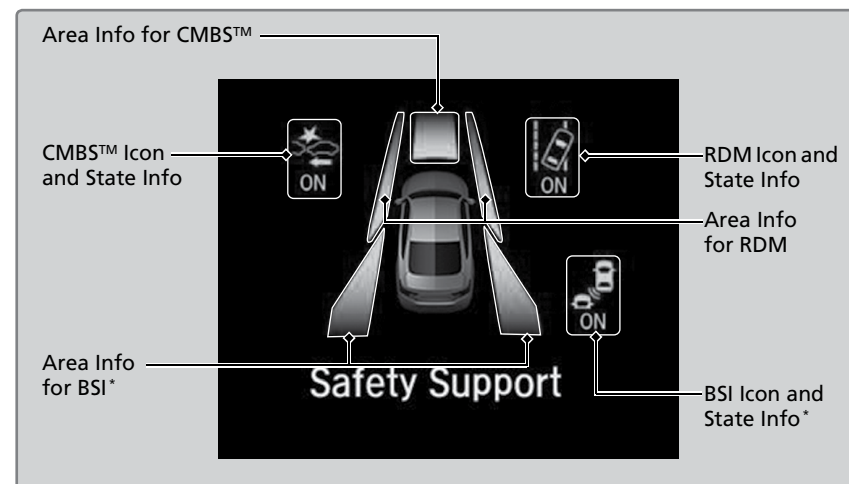

To turn the system on or off, first rotate the left selector wheel to switch displays. From the next display you can select which system to turn on or off. If the system is indicated by the amber color, have your vehicle checked by a dealer immediately. You may also confirm the state of each function by the color of the safety support indicator.

*\*if equipped*

# VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

## Using the Key or Remote Transmitter\*


Lock or unlock the doors and trunk.

Models without remote engine starter

**Unlock button:** Press once to unlock the driver's door. Press again to unlock all doors and the fuel fill door.

**Panic button:** Press to sound the alarm for 30 seconds. Press again to cancel.


**Engine button\*:** Press and hold to remotely start the engine (see page 95).

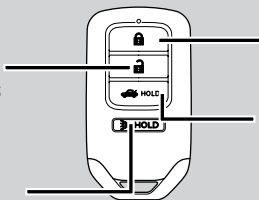

**Lock button:** Press to lock the doors and the fuel fill door. Press again for audible verification.

**Trunk button:** Press and hold to unlock and open the trunk.

LED

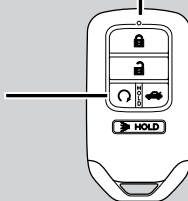

Models with remote engine starter

### NOTICE

Leaving the key or remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.


\*if equipped

## Smart Entry System\*


When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors and trunk without handling the transmitter.

### Unlocking/Locking the Doors

**To unlock:** Grab the driver's door handle when the vehicle is off to unlock the driver's door. Grab the front passenger's door handle to unlock all doors.

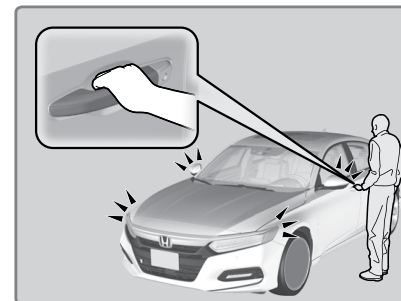


**To lock:** Press the door lock button on the front door handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.

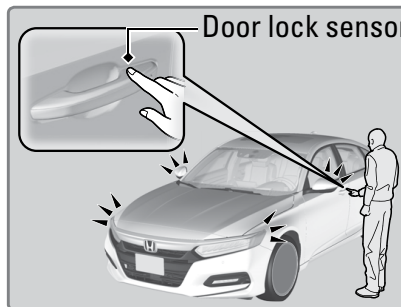

### Unlocking the Trunk

Press the trunk release button to unlock and open the trunk.

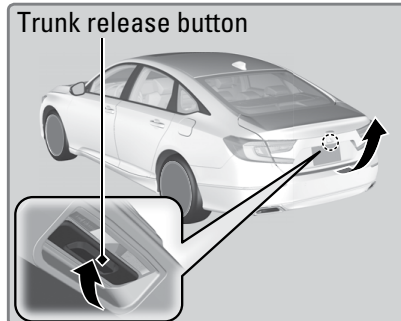

You can customize door locking and unlocking settings. See page 47.

\*if equipped




## Walk Away Auto Lock

When you walk away from the vehicle while carrying the remote transmitter, the doors can automatically lock if the following conditions are met:

- The remote transmitter is within a range of 5 feet (1.5 m).
- All doors and the hood are closed.
- There is not an additional remote transmitter inside the vehicle.

Follow these steps (see diagram):

1. Carry the remote transmitter while you exit the vehicle. Close all the doors and stay near the vehicle. Listen for a beep. The system is activated.
2. Walk at least 5 feet (1.5 m) away.
3. Listen for a beep and look for the lights to flash. The doors lock.

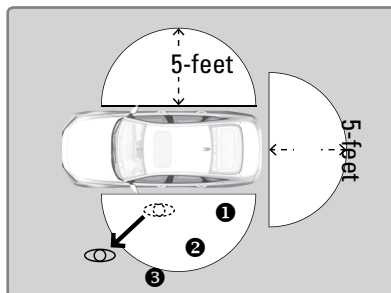

To turn on this feature, follow these steps with vehicle stopped and the power mode set to ON:

1. From the HOME screen, select Settings.
2. Select Vehicle.
3. Select Door/Window Setup.
4. Select Walk Away Auto Lock.
5. Select On.


## Door Operation

Use several methods to lock or unlock the doors.

### Using the Lock Tab


**To unlock:** Pull the lock tab rearward. When you unlock the door using the lock tab on the driver's door, only the driver's door unlocks.

**To lock:** Push the lock tab forward. When you lock the door using the lock tab on the driver's door, all the other doors lock at the same time.

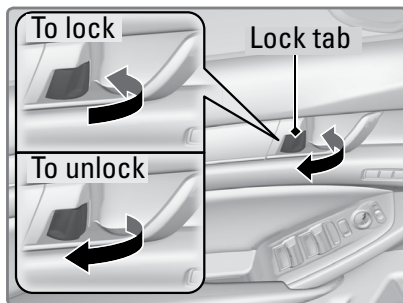

### Using the Front Door Inner Handle


When you pull either front door inner handle, the door unlocks and opens. On vehicles with smart entry, pulling the driver's door inner handle unlocks all other doors.

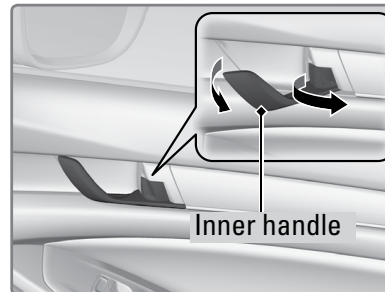

### Childproof Door Locks

The childproof door locks prevent the rear doors from being opened from the inside regardless of the position of the lock tab.


Slide the lever in the rear door to the lock position and close the door. Open the door using the outer door handle.

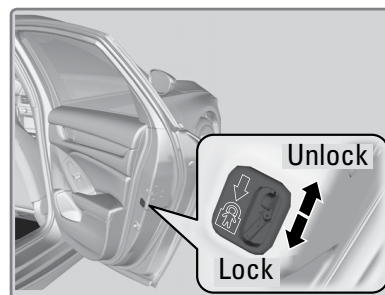

### Using the Master Door Lock Switch


**To unlock:** Press the unlock side of the switch to unlock all doors.

**To lock:** Press the lock side of the switch to lock all doors.

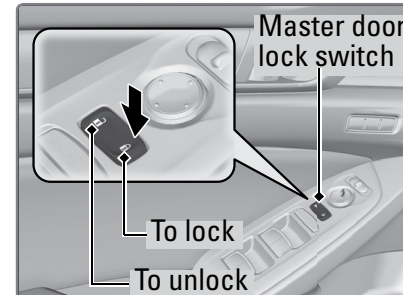

### Using the Trunk Opener


Push and hold the trunk opener to unlock and open the trunk.

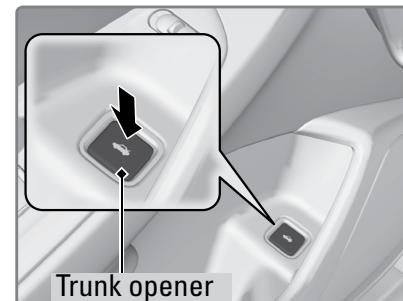

### ■ Trunk Main Switch

Disable the trunk release button on the remote transmitter, the trunk release button on the trunk lid, and the trunk opener on the driver's door to protect items located in the trunk of the vehicle.

1. Make sure the rear seat back is not folded down.
2. Turn off the trunk main switch located in the glove box.
3. Lock the glove box.

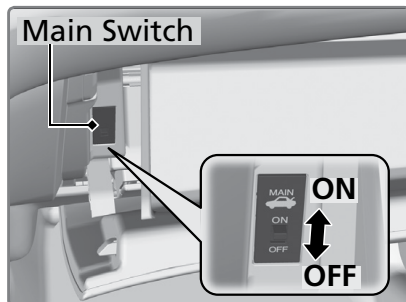

### Power Window Operation


The power windows can be opened and closed when the vehicle is on by using the switches on the doors. The switches on the driver's side can be used to open and close all the windows.

#### ■ Automatic Operation

**To open:** Push the switch down firmly.

**To close:** Pull the switch up firmly.

The window opens or closes completely. To stop the window at any time, push or pull the switch again briefly.

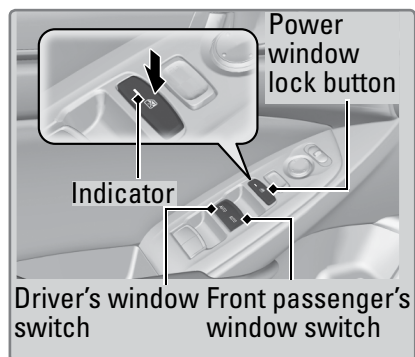

#### ■ Manual Operation

**To open:** Push the switch down lightly.

**To close:** Pull the switch up lightly.

Release the switch when the window reaches the desired position.

#### ■ Power Window Lock

Push in the power window lock button so only the driver's window can be operated.

### ⚠ WARNING

Closing a power window on someone's hands or fingers can cause serious injury.

Make sure your passengers are away from the windows before closing them.

### Interior and Exterior Lights

Operate interior and exterior lights when the vehicle is on or off.


#### ■ Brightness Control

Adjust instrument panel brightness when the vehicle is on.

**To brighten:** Turn the wheel upward.

**To dim:** Turn the wheel downward.

A beep sounds when the brightness reaches its minimum or maximum.

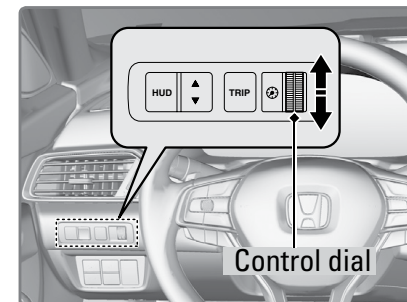


#### ■ Exterior Lights

Rotate the switches on the headlight lever to operate the exterior lights.

**OFF:** All exterior lights are off.

☞☞: Turn on exterior lights except headlights.

**AUTO:** Turn on the automatic lighting feature. Headlights turn on or off depending on ambient brightness when the vehicle is on.

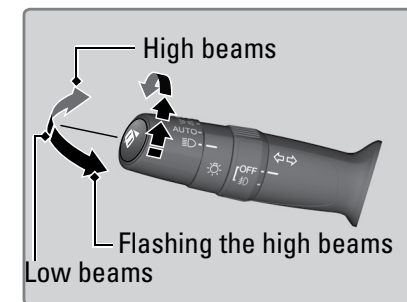

Headlights automatically\* come on after the wipers are engaged for a certain time. The headlights come on when you unlock a door in dark areas with the headlight switch in AUTO.

☞☞: Turn on all exterior lights including headlights.


☞☞: Turn fog lights\* on or off.

## Auto High-Beam System

Automatically changes the low beam headlights to high beam headlights when necessary.

### How It Works

When you are driving at night above 25 mph (40 km/h) and the headlight lever is in the low beam position with the switch rotated to AUTO, the system changes between low and high beams depending on the surrounding conditions.

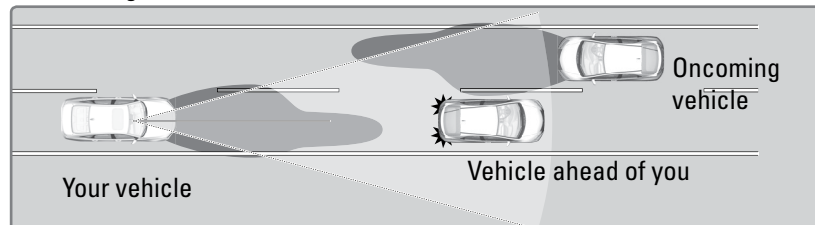

If a vehicle is detected ahead of you, the headlights stay in low beams. If the system does not detect any vehicles ahead of you, the headlights change to high beams.


Certain conditions, such as weather and brightness of other vehicles' lights, can affect system operation.

### Turning the System On or Off

Make sure the headlight lever is in the low beam position with the switch rotated to the AUTO position. The auto high-beam system indicator comes on.

The system is canceled temporarily when you drive at speeds below 15 mph (24 km/h), the vehicle speed is below 6 mph (10 km/h), or the windshield wipers run at high speed for more than a few seconds.

The system operation resumes once the conditions that caused it to cancel improves.

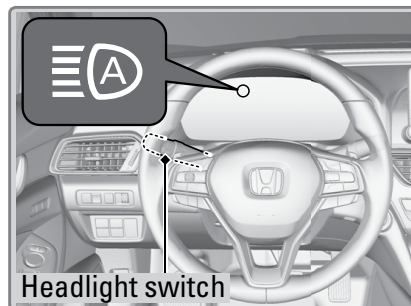

*\*if equipped*

*To disable the system:* Pull and hold the headlight lever toward you until the indicator flashes twice.

*To re-enable the system:* Pull and hold the headlight lever toward you until the indicator flashes once.

*To manually cancel the system (temporarily):* You can cancel the operation when you manually change the headlights to high beams. Push the lever forward until you hear a click, or lightly pull the lever towards you to flash high beams. The auto high-beam system indicator goes off.

If you want the auto high-beam system operation to resume at once, pull the lever towards you.

### Using the Auto High-Beam System

If you find the timing of beam changes inconvenient for driving, change the headlight beams manually.

If the Can Not Operate: message appears, park your vehicle in a safe place. Wipe away debris blocking the windshield, then start driving again. If the message remains on even after driving for a while with the clean windshield, have your vehicle checked by a dealer.


For the auto high-beam system to work properly:

- Do not place an object that reflects light on the dashboard.
- Keep the windshield around the camera clean.
- When cleaning the windshield, be careful not to apply the windshield cleanser to the camera lens.
- Do not attach an object, sticker, or film in the area around the camera.
- Do not touch the camera lens.
- If the camera receives a strong impact or repairs near the camera are required, consult a dealer.

## Wiper Operation

The windshield wipers and washers can be used when the vehicle is on.

Move the wiper lever up or down to the desired position.

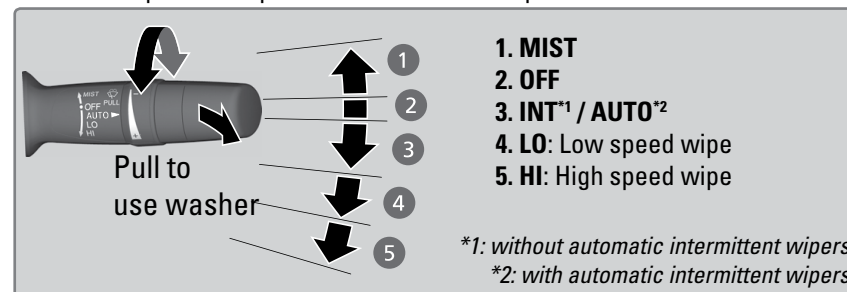


### Headlight-Wiper Integration\*

When the headlights are in the AUTO position, they automatically turn on when the front wipers operate several times within a certain interval. The headlights turn off shortly after the wipers are turned off or if there is enough ambient light.

### Intermittent (INT) Wipers\*

When you move the lever to the INT position, the wipers operate based on the delay adjustment.

Rotate the adjustment ring to adjust the wiper delay.

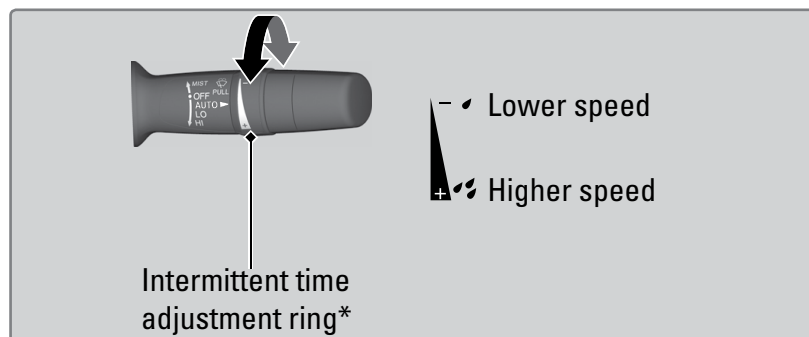

### Automatic Intermittent Wipers\*

When you move the lever to the AUTO position while driving in rainy weather, the wipers operate based on the amount of detected rainfall.

Put the lever in the AUTO position only when driving in rainy weather. Rotate the adjustment ring to adjust the rainfall sensor sensitivity.

Return the lever to the OFF position when rain stops.



### NOTICE

To prevent severe damage to the windshield wiper system, ensure the wiper lever is in the OFF position before entering a car wash or cleaning the windshield.

### NOTICE

Do not use the wipers when the windshield is dry. The windshield will get scratched or the rubber blades will get damaged.

In cold weather, the blades may freeze to the windshield, becoming stuck. Operating the wipers in this condition may damage the wipers. Use the defroster or heated windshield\* to warm the windshield, or manually clear the windshield of ice and snow before turning on the wipers.

### NOTICE

AUTO should always be turned OFF in order to prevent severe damage to the wiper system before the following situations:


- Cleaning the windshield
- Driving through a car wash
- No rain present

### One-Touch Turn Signal

Use this quick and convenient method to signal a lane change.

Lightly push the turn signal lever up or down for a three-blink sequence.

For a continuous signal, push the lever up or down until it locks into place.

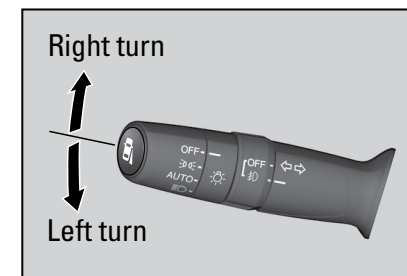

### Adjusting the Seats


Make seat adjustments before driving to ensure the best comfort and safety.

\*if equipped



## ■ Adjusting the Front Seats


Adjust the driver's seat as far back as possible while allowing you to maintain full control of the vehicle. You should be able to sit upright and well back in the seat, adequately press the pedals without leaning forward, and grip the steering wheel comfortably. The passenger's seat should be adjusted so that it is as far back from the front airbag in the dashboard as possible.

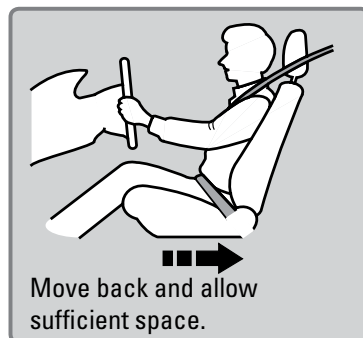

The National Highway Traffic Safety Administration and Transport Canada recommend that drivers allow at least 10 inches (25 cm) between the center of the steering wheel and the chest.

## ■ Power Seats\*

*\*if equipped*

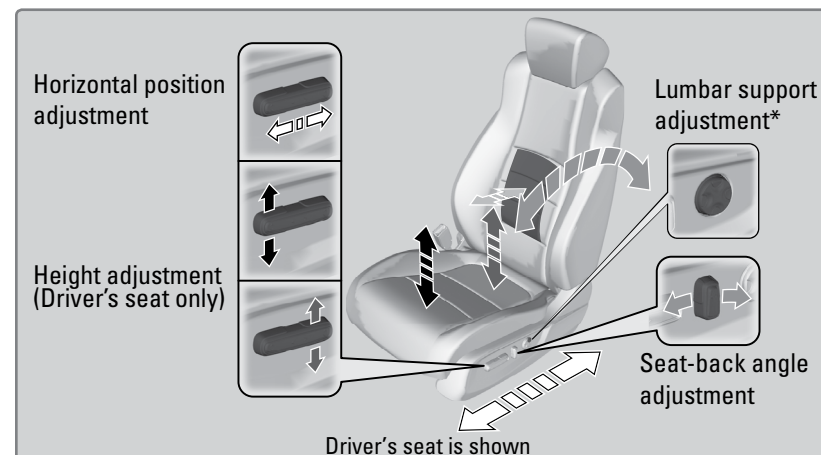

### ⚠ WARNING

Reclining the seat-back too far can result in serious injury or death in a crash.

Adjust the seat-back to an upright position and sit well back in the seat.

### ⚠ WARNING

Sitting too close to a front airbag can result in serious injury or death if the front airbags inflate.



Always sit as far back from the front airbags as possible while maintaining control of the vehicle.

## ■ Manual Seats\*

### Height adjustment

(Driver side only)

Pull up or push down the lever to raise or lower the seat.

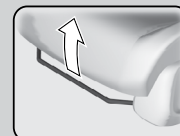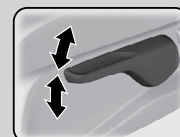

Horizontal position adjustment

Pull up on the bar to move the seat, then release the bar.

Driver's seat is shown.



Seat-back angle adjustment  
Pull up the lever to change the angle.

### ⚠ WARNING


Sitting improperly or out of position can result in serious injury or death in a crash.

Always sit upright, well back in the seat, with your feet on the floor.

## ■ Floor Mats

Position the front- and rear-seat floor mats properly and anchor them. If they are not properly positioned, the floor mats can interfere with the front seat functions.

**Do not put additional floor mats on top of the anchored mats.**

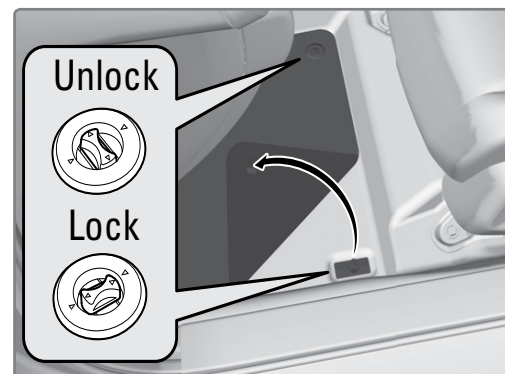


*\*if equipped*

## ■ Adjusting the Front and Rear Outer\* Head Restraints

Your vehicle is equipped with head restraints in all seating positions. Head restraints are most effective for protection against whiplash and other rear-impact crash injuries.

The center of the back of the occupant's head should rest against the center of the restraint. The tops of the occupant's ears should be level with the center height of the restraint.


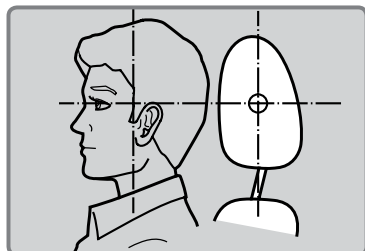


**To raise the head restraint:** Pull it upward.

**To lower the head restraint:** Push it down while pressing the release button.

**To remove the head restraint:** Pull the restraint up as far as it will go. Then push the release button and pull the restraint up and out.

**To reinstall a head restraint:** Insert the legs back in place, then adjust the head restraint to an appropriate height while pressing the release button. Pull up on the restraint to make sure it is locked in position.

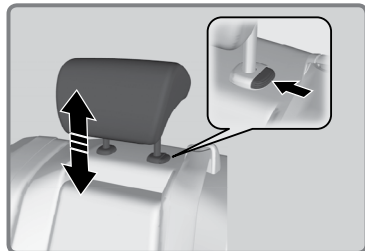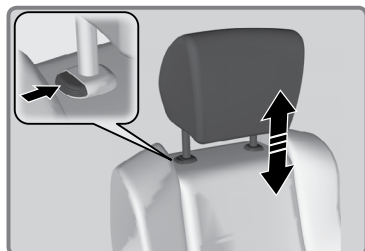

For a head restraint system to work properly:

- Do not hang any items on the head restraints or from the restraint legs.
- Do not place any object between an occupant and the seat-back.
- Install each restraint in its proper location.

### ⚠ WARNING

Improperly positioning head restraints reduces their effectiveness and increases the likelihood of serious injury in a crash.

Make sure head restraints are in place and positioned properly before driving.

*\*Not adjustable on all models*

### ⚠ WARNING



Failure to reinstall or correctly reinstall the head restraints can result in severe injury during a crash.

Always replace the head restraints before driving.

## ■ Folding Down the Rear Seats


The rear seat-back(s\*) can be folded down to make room for large items in the trunk.

1. Remove the center shoulder belt from the guide.
2. Pull the release lever in the trunk to release the lock.

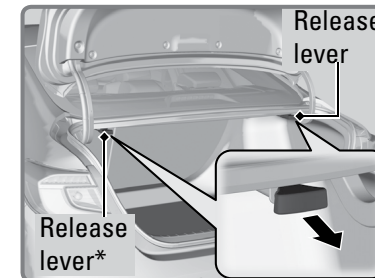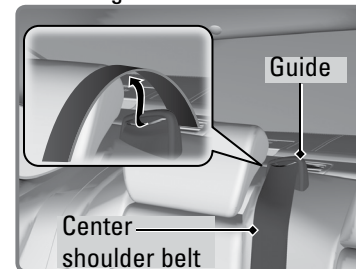

3. Push the seat-back up firmly until it locks into place to return it to its original position. Reposition the seat belts as necessary.

Make sure all items in the trunk or items extending through the opening into the rear seats are properly secured. Loose items can fly forward if you have to brake hard.

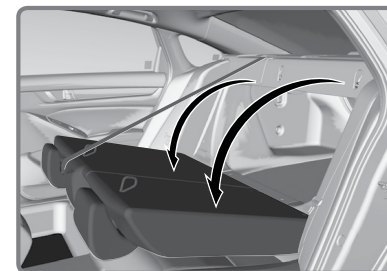


## Adjusting the Steering Wheel

The steering wheel height and distance from your body can be adjusted so that you can comfortably grip the steering wheel in an appropriate driving posture.

*\*if equipped*

## VEHICLE CONTROLS

1. Push down on the steering wheel adjustment lever.
2. Move the steering wheel up or down and in or out.
3. Pull up the steering wheel adjustment lever to lock the steering wheel in position.

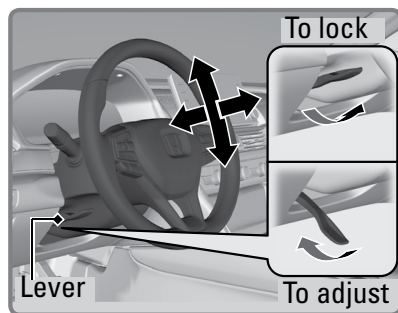**WARNING**



Adjusting the steering wheel position while driving may cause you to lose control of the vehicle and be seriously injured in a crash.

Adjust the steering wheel only when the vehicle is stopped.

**Driving Position Memory System\***

Store two driver's seat positions into memory using the buttons on the driver's door while the vehicle is ON.



1. Adjust the seat to your preferred position.
2. Press SET. You will hear one beep and the indicator will blink.
3. Press and hold memory button 1 or 2. You will hear two beeps when the memory is set and the indicator light will stay lit.
4. Press one of the memory buttons to recall previously stored positions.  
*Lumbar positions cannot be stored.*

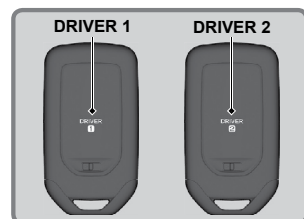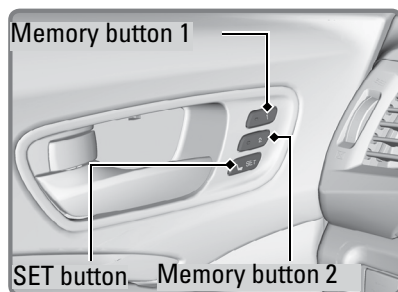**HomeLink® Universal Transceiver\***

Program your vehicle to operate up to three remote-controlled devices around your home—such as garage doors, lighting, or home security systems—using the buttons on the ceiling.

*\*if equipped*

## VEHICLE CONTROLS

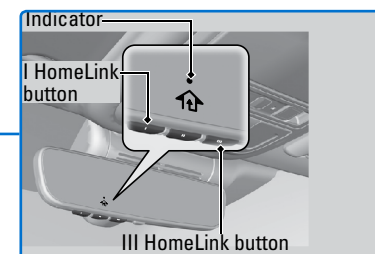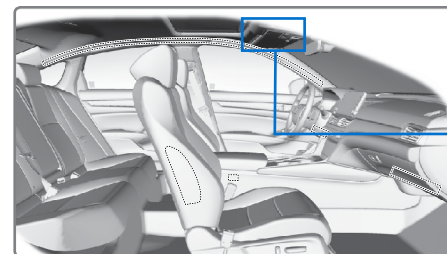**Training a Button**

Park near the system you want to program and follow the instructions in the flowchart below:

1. Position the remote transmitter you wish to link 1 to 3 inches (3 - 8 cm) from the HomeLink button you want to program



2. Press and release the desired HomeLink button. Is the HomeLink indicator (LED) *slowly flashing orange*?

YES

NO



3a. Hold the button on the remote transmitter. Does HomeLink indicator (LED) change from *slowly flashing orange to rapidly flashing green or continuously on green*? The process should take less than 60 seconds.

Canadian Garage Door Opener  
3b. Press and release the HomeLink button. Press, hold and release the button on the remote every 2 secs. Does the HomeLink indicator (LED) change from *slowly flashing orange to rapidly flashing or continuously on green*? The process should take less than 60 seconds.



4. Press and hold the programmed HomeLink button for about a second. Does the device (garage door opener) work?

YES

NO

Training Complete

5. Press and hold the HomeLink button again.

HomeLink LED is *continuously on green*.

HomeLink indicator is *rapidly flashes green*.

6. Press and hold the HomeLink button again. The remote-controlled device should operate.  
**Training Complete**


5a. The remote has rolling code. Press the "learn" button on the remote-controlled device (e.g. garage door opener).

5b. Within 30 secs, press and hold the programmed HomeLink button for 2 secs.

To retrain a button or erase codes, see the Owner's Manual at [owners.honda.com](http://owners.honda.com) (U.S.) or [www.myhonda.ca](http://www.myhonda.ca) (Canada). If you need help, visit [www.homelink.com](http://www.homelink.com) or call (800) 355-3515.

## Climate Control System

The automatic climate control system can maintain your preferred interior temperature by selecting the proper mix of heated or cooled air and fan speed. Use the controls on the dashboard to control the system.

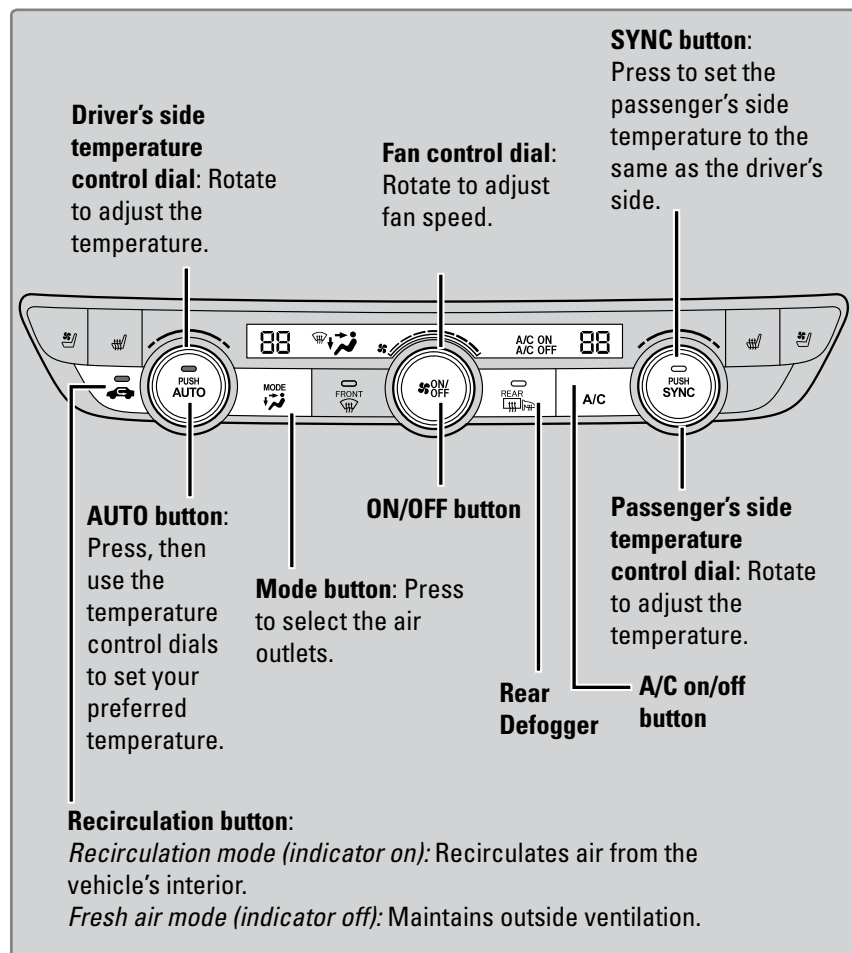


## Seat Heaters\* and Ventilation\*

Quickly warm the seats when the vehicle is on.

Press the seat heater switch to cycle through the heat settings. An indicator appears for the selected setting.

The switches for the rear seat heaters\* are located on the rear doors. The rear middle seat does not have heating.

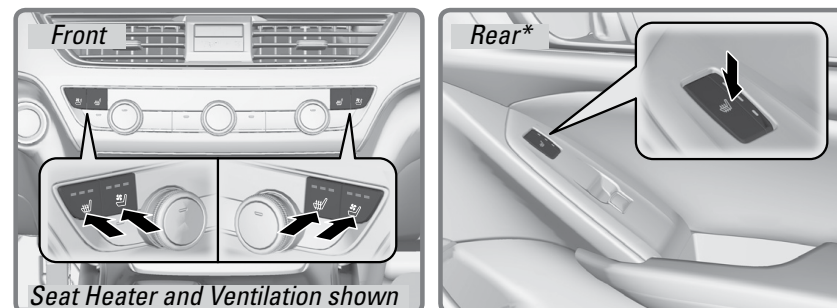


### WARNING

Heat-induced burns are possible when using seat heaters.

Persons with a diminished ability to sense temperature (e.g., persons with diabetes, lower-limb nerve damage, or paralysis) or with sensitive skin should not use the seat heaters.

## Heated Windshield\*\*

Press the heated windshield button to deice the windshield when the vehicle is in ON.

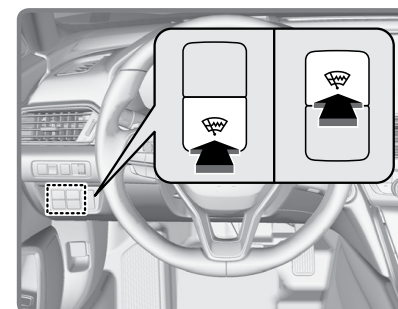

### NOTICE


This system consumes a lot of power. Turning off the feature once windows have been defogged or deiced, will avoid weakening the battery, as will not using the feature for extended periods while the engine is idling.

\*if equipped  
 \*\*Canadian models



## Heated Steering Wheel\* \*\*

Quickly warm the steering wheel. With the power mode ON, press the button on the lower side of the steering wheel. Press again to turn it off once a comfortable temperature has been reached. The heated steering wheel is turned off each time you start the engine, even if it was on the last time the vehicle was driven. Do not use the heated steering wheel continuously when the engine is off. This can weaken the battery, making it difficult to start the engine.

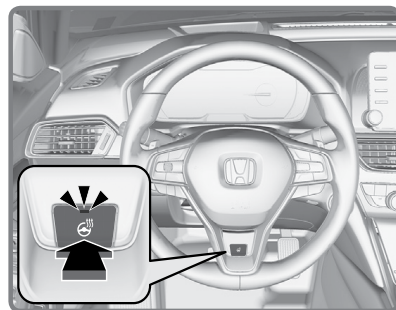


\*if equipped  
\*\*Canadian models

## Setting the Clock

### Models with color audio

Rotate the selector knob to choose an option, then press it to make the selection.

1. Press and hold the MENU/CLOCK button.
2. Select Adjust Clock.
3. Rotate to adjust the hours, then press.
4. Rotate to adjust the minutes, then press.
5. Press to switch to Set, then press again.

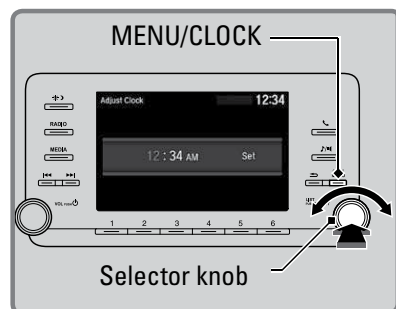

### Models with Display Audio

Use the touchscreen to make selections and adjust settings.

1. Press Home, then select Settings.
2. Select System, then Date & Time.
3. Select Automatic Date & Time, then Off.
4. Select Set Tim or Set Date.
5. Adjust the setting using the arrows.
6. Select Save.



### Models with navigation


The time is automatically set using GPS signals.

## Customized Features

Use the Settings menu to customize certain features when the vehicle is stopped and the power mode is ON.

### Models with color audio

Press the MENU/CLOCK button, then Settings. To customize phone settings, press the Phone button, then select Phone Setup.

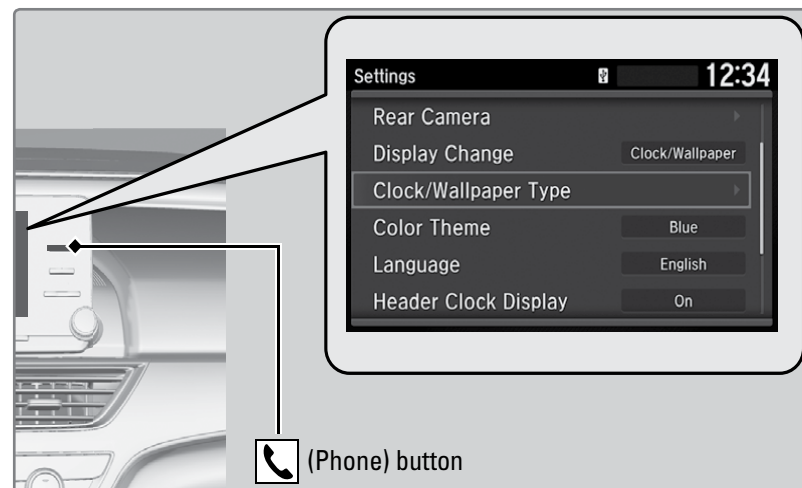

### Models with Display Audio

Select Settings, then select an item.



# AUDIO AND CONNECTIVITY

Learn how to operate the vehicle's audio system.

## Basic Audio Operation

Connect audio devices and operate buttons and displays for the audio system.

### ■ USB Port


Connect a USB flash drive or other audio device, such as an iPod or iPhone®. Install the flash drive or cable connector to the USB port.

#### Models with color audio

The USB port (1.0 A) in the center pocket is for playing audio and charging devices.


#### Models with Display Audio

The USB port (2.5 A) in the center pocket is for playing audio, charging devices, and connecting to Apple CarPlay (see page 58) or Android Auto (see page 60).

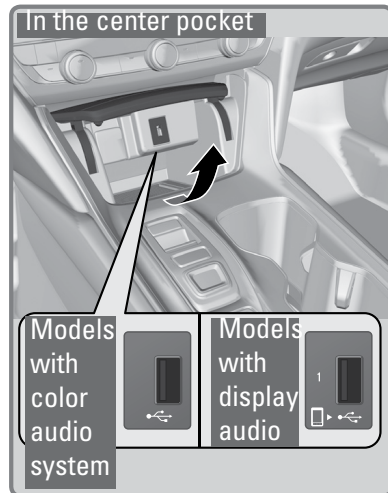


#### Canadian models, if equipped

The rear USB ports (2.5A) are only for charging devices.

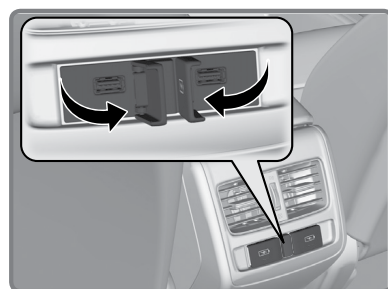


The USB port (2.5 A) in the center center console is for playing audio, charging devices, and connecting to Apple CarPlay (see page 58) or Android Auto (see page 60).

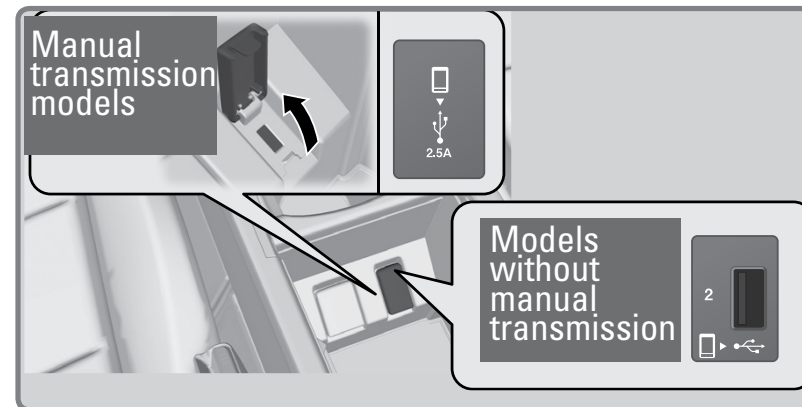

### ■ Wireless Charger\*

#### Canadian models

1. Charge your Qi®-compatible device when the vehicle is on.
2. Press and hold the power button. A green indicator appears when the charger is on.
3. Place the chargeable side of the device on the charge area. The system begins charging the device when the amber indicator appears.
4. The green indicator appears when charging is complete. On some devices, the amber indicator may stay on even when charging is complete.

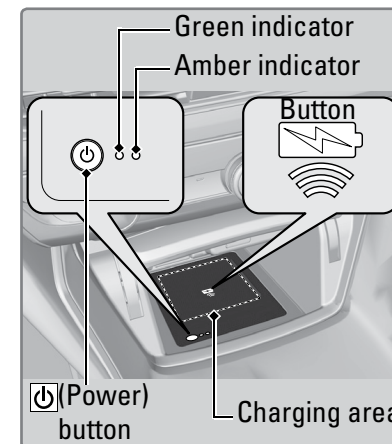

#### Notes:

- This system consumes a lot of power. It is best to charge your device when the engine is running.

\*if equipped

Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.  
iPod and iPhone are trademarks of Apple, Inc.

- If the indicator light is blinking, there may be an obstacle between the device and charging area, the device may have moved, or the charger is malfunctioning.
- The device may not charge if you are near strong electromagnetic waves, such as at a gas station.
- The device and charging area may get warm during charging. This is normal.

### CAUTION

Metal objects between the charge pad and the device to be charged will get hot and can burn you.

Always remove foreign objects from the charge pad before charging the device.

Be sure the surface is clear of dust and other debris before charging.

### NOTICE

- Do not place any magnetic devices, credit cards, or watches within the charge area while charging. The data on credit cards can be lost, and watches may stop working.
- Do not spill liquids (i. e. water, drinks, etc.) on the charger and the device.
- Do not use oil, grease, alcohol, benzine or thinner for cleaning the charge pad.
- Do not cover the system with towels, clothing, or other objects while charging etc.
- Avoid spraying aerosols which may contact the charge pad surface.


*\*If equipped.*

*Qi is a registered trademark of the Wireless Power Consortium.*


## Steering Wheel Controls

You can operate certain functions of the audio system using the steering wheel controls.

### Models with color audio

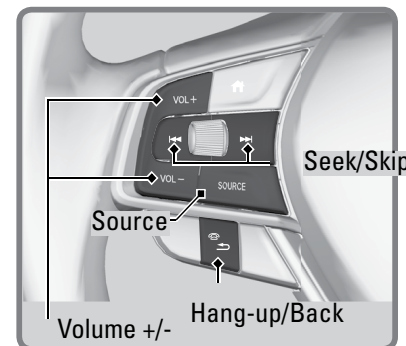

### Models with Display Audio

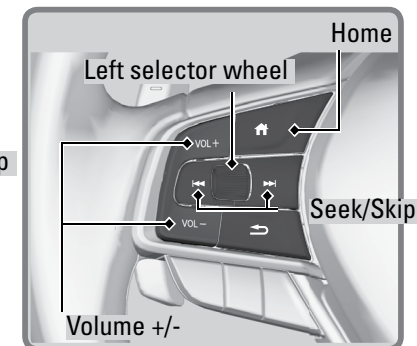

**SOURCE button:** Cycle through available audio modes.

**◀ / ▶ buttons:** Change presets, tracks, albums, or folders.

**VOL + / VOL - buttons:** Adjust audio volume.

**Hang-up/Back button:** Press to go back to the previous command or cancel a command.

### FM/AM/SiriusXM Radio

Press ▶ or ◀ for the next or previous station.

Press and hold ▶ or ◀ for the next or previous strong station.

### CD/iPod/USB/Bluetooth Audio

Press ▶ or ◀ for the next or previous track.

Press and hold ▶ or ◀ for the next or previous folder (CD/USB).

### Pandora (U.S. only)

Press ▶ for the next song.


Press and hold ▶ or ◀ for the next or previous station.

## ■ Adjusting the Sound

Adjust various sound settings.

### Models with color audio


Press the sound button. Rotate it to scroll through the choices. Press to select.

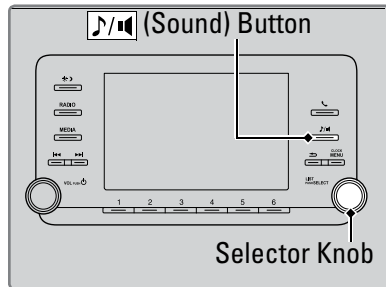

### Models with Display Audio

Touch items on the screen to make and enter selections.

1. From the HOME screen, select an audio source.
2. Select Sound.
3. Select an item to change and adjust the setting.
4. Select Save when complete.

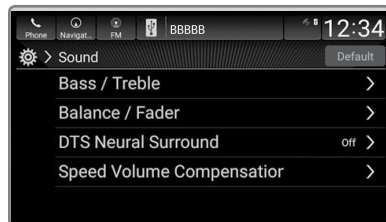


*\*if equipped*

## Models with color audio

### Color Audio Operation

Control audio operation using the buttons on the audio unit.

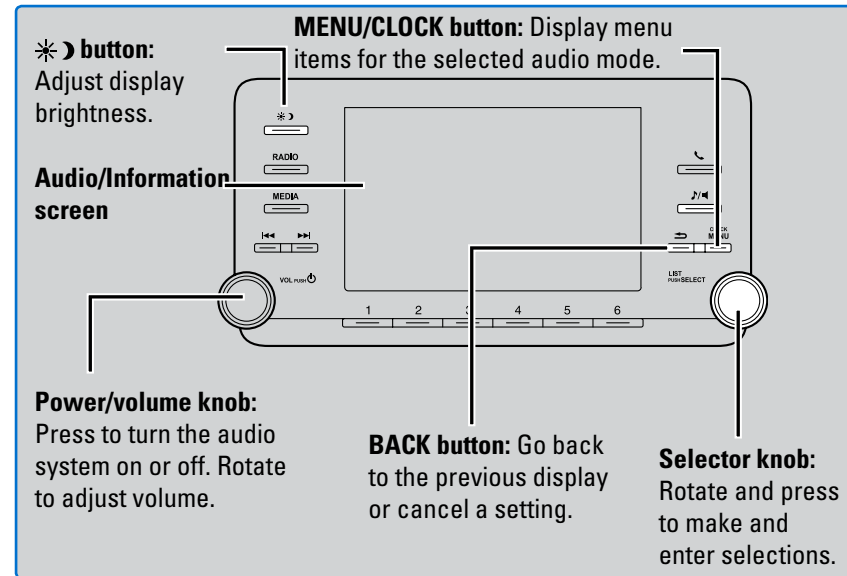


## Models with Display Audio

## Touchscreen Operation

Use simple gestures—including touching, swiping, and scrolling—to operate certain audio functions.

Some items may be grayed out during driving to reduce the potential for distraction. You can select them when the vehicle is stopped or use voice commands\* (see p. 74).

Wearing gloves may limit or prevent touchscreen response.

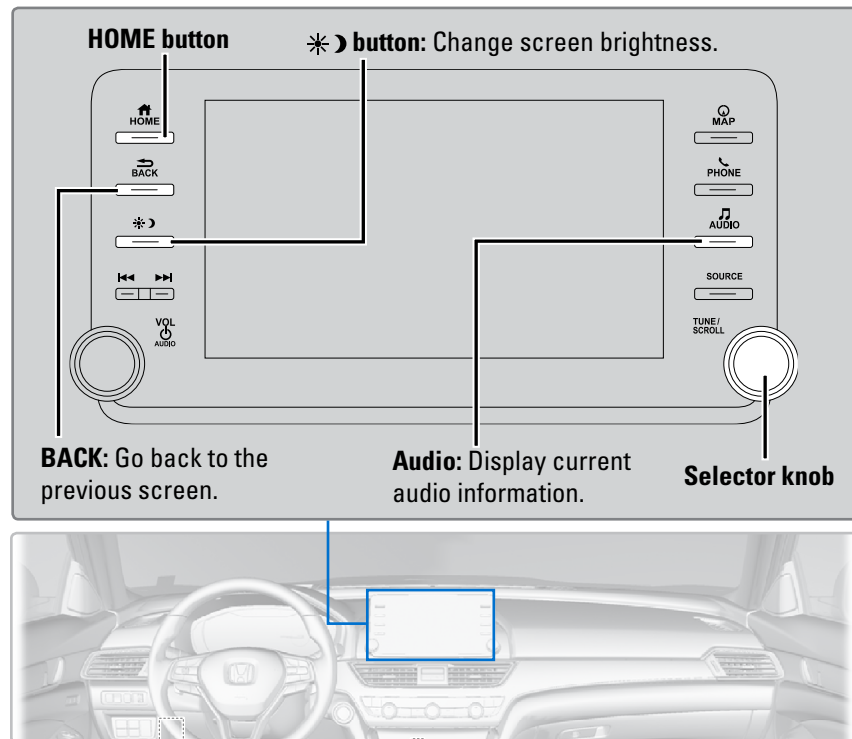

## ■ Setting Touchscreen Sensitivity

You can adjust the touchscreen's sensitivity to your fingertip.

1. From the HOME screen, select Settings, then System.
2. Select Others, then Touch Panel Sensitivity.
3. Make your selection.

## Models with Display Audio

## Managing Apps

Customize the Home screens by adding, moving, and hiding apps. Use presets to keep frequently used apps at your fingertips.


## ■ Add Apps to a Home screen

1. On the Home screen, Select and hold the home screen.
2. Select Add.
3. Drag and drop the icon to where you want it to be, Select Done.



## ■ Move Apps

1. On the Home screen, select and hold an icon.
2. Drag and drop it where you would like it.
3. Select Done

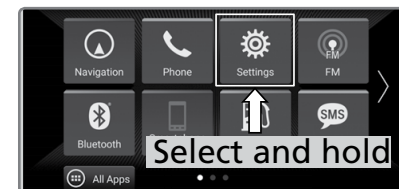



## ■ Hide Apps

1. On the Home screen, select and hold an icon.
2. Drag and drop it on the Hide icon.
3. Select Done.



## ■ Set Shortcuts

1. On the Home screen, select and hold an icon.
2. Drag and drop it the upper-left corner of the screen.
3. Select Done.



## Models with Display Audio

### HondaLink®\*

Provides you with useful information about your vehicle directly from Honda.


To check phone compatibility, visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or call (888) 528-7876 (Canada). Standard data rates may apply with your phone service provider.

To get more information on HondaLink, visit [www.hondalink.com](http://www.hondalink.com) (U.S.) or [honda.ca/hondalink](http://honda.ca/hondalink) (Canada).

## ■ HondaLink Connection

Follow the steps below to connect to HondaLink and use its features.

1. Download the HondaLink Connect app to your compatible smartphone.
2. Pair your phone to *Bluetooth HandsFreeLink* (see page 78).
3. From the HOME screen, select HondaLink.

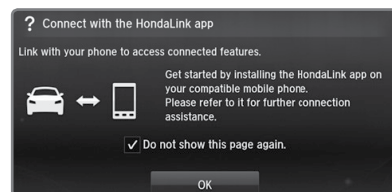

*\*if equipped*

*Do not install apps other than those confirmed by a Honda dealer. Unauthorized apps may have privacy and data corruption risks.*

4. Certain features require you to send vehicle information to Honda. Select Enable Once, Always Enable, or Disable.

## ■ HondaLink Menu

Select a menu option.

**Connect:** Displays instruction messages when the vehicle needs service.  
**Help & Support:** Display tips for vehicle usage, get roadside assistance, or contact customer service.


**Messages from Honda:** Display helpful and important information from Honda. If you have a new message, a yellow envelope icon appears at the top of the screen and a beep sounds. Swipe down to view the message.

## ■ Operator Assistance\*

Connect to a HondaLink operator for roadside assistance or help finding a destination.

**To place a call:** Press the Link button.

**To end a call:** Select Hang Up on the audio/information screen or press the hang-up button on the steering wheel.

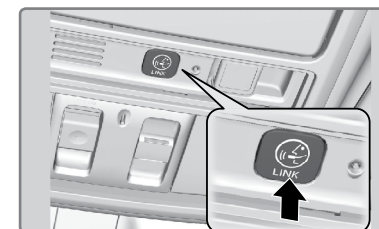

## Models with Display Audio

### HondaLink® Assist\*

If your vehicle's airbags deploy or if the unit detects that the vehicle is severely impacted, your vehicle automatically attempts to connect to an operator. Your phone must be paired to the system and have good cellular connection. Visit [www.hondalink.com](http://www.hondalink.com) (U.S.) or [honda.ca/hondalinkassist](http://honda.ca/hondalinkassist) (Canada) for more information.\*\*

## Models with Display Audio

### Near Field Communication (NFC)\*

Near Field Communication (NFC) allows you to connect select Android phones to the audio system via *Bluetooth*.

1. From the Home screen, Select Settings.
2. Select Connections.
3. Select NFC, then ON.
4. Select Android Beam, then ON.

*\*if equipped*

*\*\*Depending on your phone and cellular signal capability, your vehicle's location may not be sent to the operator.*

### Bluetooth Setup

1. From the Home screen, select NFC Manager. Or touch the NFC logo near the glove box with the NFC tag of your phone. The NFC Manager screen is displayed.
2. Select Connect Device to Vehicle Bluetooth.
3. Touch the NFC logo near the glove box with the NFC tag of your phone.
4. A notification appears on the screen if pairing is successful. Confirm if the pairing code on the screen and your phone match.
5. This may vary by phone.

### Wallpaper Image Transfer

1. From the Home screen, select NFC Manager or touch the NFC logo near the glove box with the NFC tag of your phone.
2. Select Transfer Image.
3. Open the photo you want to transfer on your phone, then select Next.
4. Touch the NFC logo near the glove box with the NFC tag of your phone.
5. Select the photo on your phone.
6. A confirmation message appears on the screen. Select Wallpaper.

### Models with Display Audio



#### Apple CarPlay™

Connect an Apple CarPlay-compatible iPhone to the system. You can use the touchscreen to make a phone call, listen to music, and more. Visit the Apple CarPlay website for more information.

When your iPhone is connected to Apple CarPlay, it is not possible to use the *Bluetooth* Audio or *Bluetooth* HandsFreeLink. However, other previously paired phones can stream audio via *Bluetooth* while Apple CarPlay is connected.

Park in a safe place before connecting your iPhone and launching any compatible apps.

1. Connect the iPhone to the USB port (2.5A) in the center pocket or console compartment\*.
2. Apple CarPlay requires you to send vehicle information to Honda. Select Enable to continue. Your phone may prompt you to allow access for CarPlay to be launched.
3. From the HOME screen, select Apple CarPlay.
4. Select a menu option.
5. **Phone:** Access your contacts, make phone calls, or listen to voicemail. While connected to Apple CarPlay, calls can only be made through Apple CarPlay, not through Bluetooth HandsFreeLink.
6. **Music:** Play music stored on your iPhone.

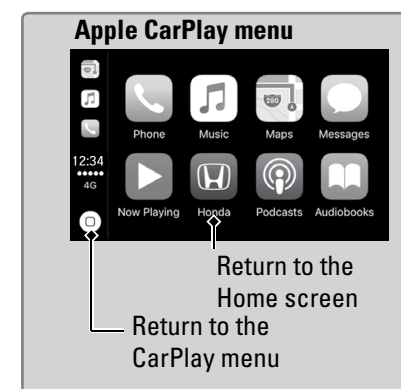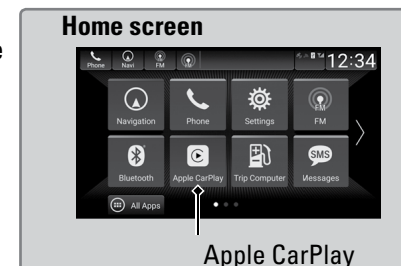

**Maps:** View a map and operate navigation. You can only use Apple Maps or the pre-installed navigation system to set a destination with routing guidance.

**Messages:** View and reply to text messages, or have messages read to you aloud by the system.

Once connected, press and hold the Talk button on the steering wheel (see p. 74) to operate the system using voice commands with Siri.

*Depending on use, Apple CarPlay can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with the connected iPhone. See Apple's privacy policy for details regarding Apple's use and handling of data uploaded by CarPlay. Use of CarPlay is at user's own risk, and is subject to agreement to the CarPlay terms of use, which are included as part of the Apple iOS terms of use. CarPlay vehicle integration is provided "as is," and Honda cannot guarantee CarPlay operability or functionality now or in the future due to, among other conditions, changes in CarPlay software/Apple iOS, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Only use CarPlay when conditions allow you to do so safely. See your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for further license and warranty terms.*

\*if equipped

## Models with Display Audio

## Android Auto™

Connect a compatible Android phone to the system. You can use the touchscreen to make a phone call, listen to music, and more. Visit the Android Auto website for more information.

When your Android phone is connected to Android Auto, it is not possible to use the *Bluetooth* Audio. However, other previously paired phones can stream audio via *Bluetooth* while Android Auto is connected.


Park in a safe place before connecting your Android smartphone and launching any compatible apps.

1. Connect the phone to the USB port (2.5A) in the center pocket or console compartment\*. Compatible Android phones will prompt you to download any required apps.

2. Select Enable or Disable
3. Follow any prompts shown on your phone.
4. The phone will be automatically paired. A tutorial will appear on the vehicle screen.

5. Select a menu option

1. **Maps (Navigation):** View Google Maps and operate navigation. You can only use this system or the pre-installed navigation system to set a destination with routing guidance. You cannot enter destinations using the keyboard while the vehicle is moving.
2. **Phone (Communication):** Make or receive phone calls or listen to voicemail.
3. **Google Now (Home screen):** Display useful information organized by Android Auto into simple cards that appear only when needed.
4. **Music and audio:** Play music from compatible apps. Select this icon to switch between music apps.
5. **Go back to the Home Screen:** Select this icon to return to the HOME screen.
6. **Voice:** Use voice commands to operate Android Auto. You can also press and hold the Talk button on the steering wheel (see p. 74) to say voice commands.

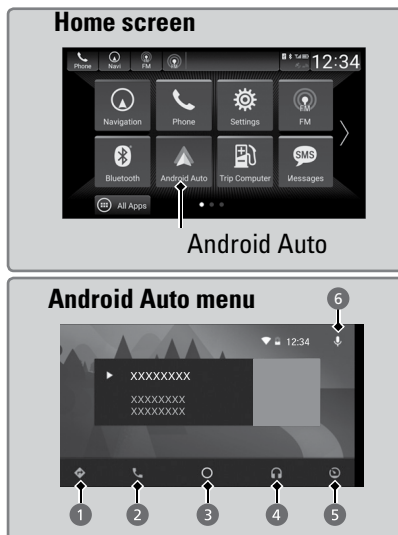



Depending on use, Android Auto can share certain vehicle information (e.g., vehicle location, speed, and other operating conditions) with Google and its service providers. See Google privacy policy for details regarding Google's use and handling of data uploaded by Android Auto. Use of Android Auto is at user's own risk, and is subject to agreement to the Android Auto terms of use, which are presented to the user when the Android Auto application is downloaded to the user's Android phone. Android Auto vehicle integration is provided "as is," and Honda cannot guarantee Android Auto operability or functionality now or in the future due to, among other conditions, changes in Android Auto software/Android operating system, service interruptions, or incompatibility or obsolescence of vehicle-integrated hardware or software. See dealer for details. Only use Android Auto when conditions allow you to do so safely. See your Owner's Manual at owners.honda.com (U.S.) or myhonda.ca (Canada) for further license and warranty terms.

## Models with Display Audio

## Wi-Fi Connection

You can connect the audio system to the internet using Wi-Fi. If your compatible phone has hotspot capabilities, the system can be tethered to the phone. Follow the steps below to set up Wi-Fi when the vehicle is stopped. Standard data rates apply with your phone service provider.

1. From Home, select Settings
2. Select Connections, then Wi-Fi.
3. Select Change Mode.
4. Select Network, then Save.
5. Select an available network from the list.
6. If required, enter a password, then select Connect.

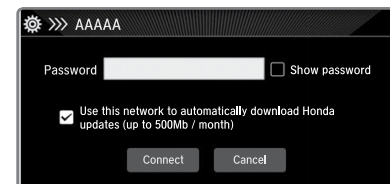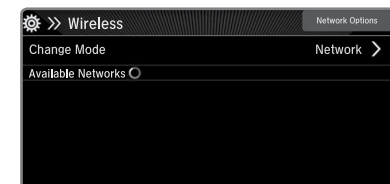

The connected network will be displayed at the top of the list when the connection is successful.



## Models with Display Audio



## System Updates

Install authorized updates to the Display Audio system software. Install via a WiFi connection or a USB storage device.

## ■ Wireless Connection Setup


These steps are required only for updating via Wi-Fi.

1. From the Home screen, select System Updates, then Settings.
2. Select Connection Setup.
3. Select Wi-Fi, then Change Mode.
4. Select Network, then Confirm.
5. Select an access point.
6. Ensure Use this network... is checked, then select Connect.

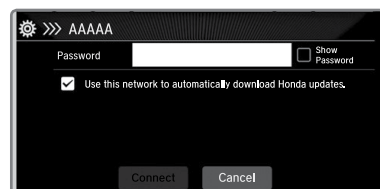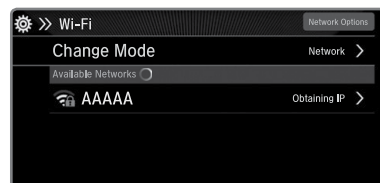

## ■ Wireless Updating



1. From the Home screen, select System Updates.
2. Select via Wireless
3. Select Download Now.
4. Select Install Now or Install While Vehicle OFF.

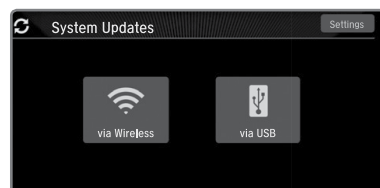

## ■ USB Updating

Download the update

1. From the Home screen, select System Updates, then via USB.
2. Connect a flash drive to the USB port in the center pocket or console compartment\*. (see p. 48).
3. Once the system finishes copying to the flash drive, disconnect the drive and connect it to your computer.
4. Follow the link to download the update files. See [usb.honda.com](https://usb.honda.com) for more details.

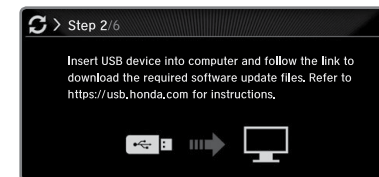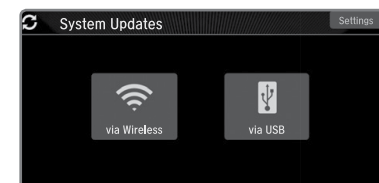

## Install the update

1. From the Home screen, select System Updates, then via USB.
2. Connect the USB device containing the update files to the USB port in the center pocket or console compartment\*.
3. Select Install Now.

Notes


- Honda recommends using a flash drive with 8GB capacity or higher.

\*if equipped

## Models with color audio

## FM/AM Radio


Play FM or AM radio stations.

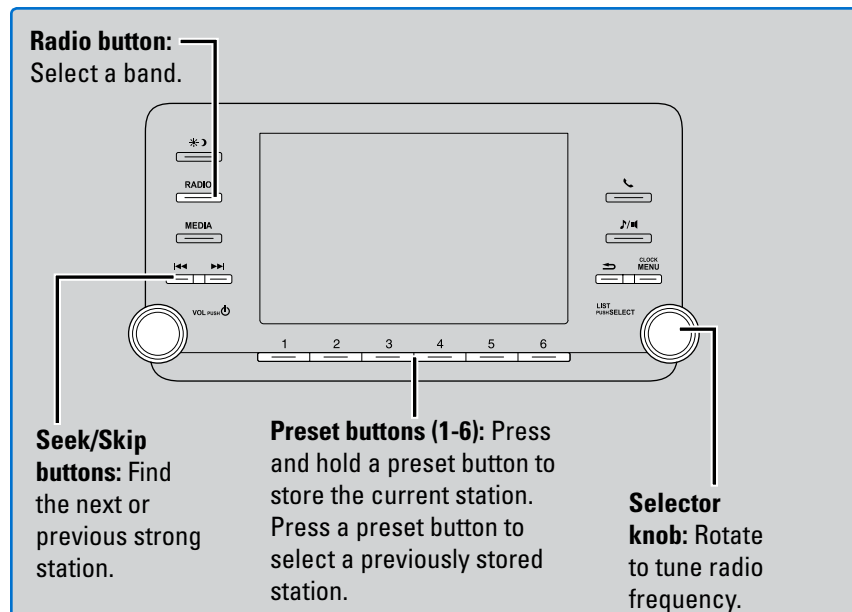

## Models with Display Audio

## FM/AM Radio

Play FM or AM radio stations.

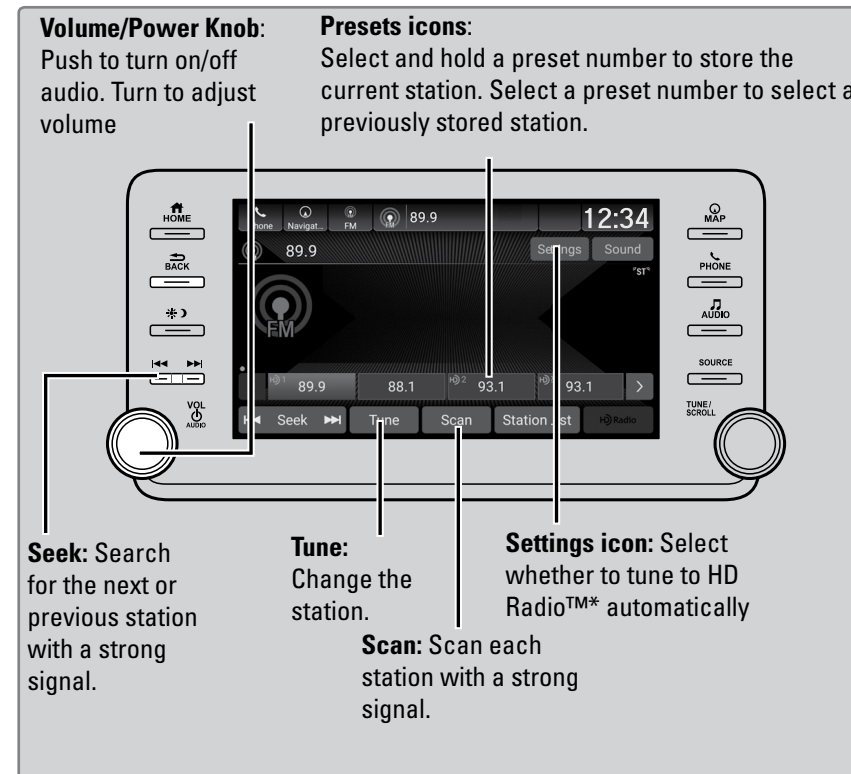


\*if equipped

## Models with Display Audio

## SiriusXM® Radio\*

Available on a subscription basis only. For more information or to subscribe, contact your dealer, or visit [www.sirius.com/subscribe-now](http://www.sirius.com/subscribe-now) (U.S.) or [www.sirius.ca/subscribe-now](http://www.sirius.ca/subscribe-now) (Canada).

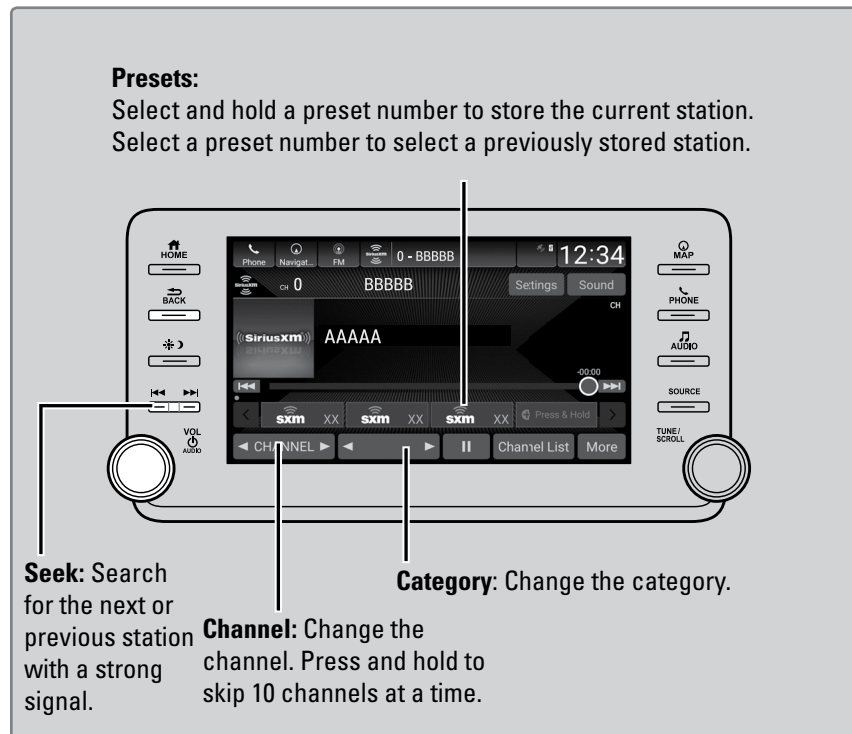

To learn about additional features—such as multi-channel preset, replay, or SportsFlash—see your Owner's Manual at [owners.honda.com](http://owners.honda.com) (U.S.) or [myhonda.ca](http://myhonda.ca) (Canada).


*Available in the U.S. and Canada, except Hawaii, Alaska, and Puerto Rico.  
XM® is a registered trademark of Sirius XM Radio, Inc.*

*\*if equipped*

## Models with color audio

## iPod®

Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see p. 48).

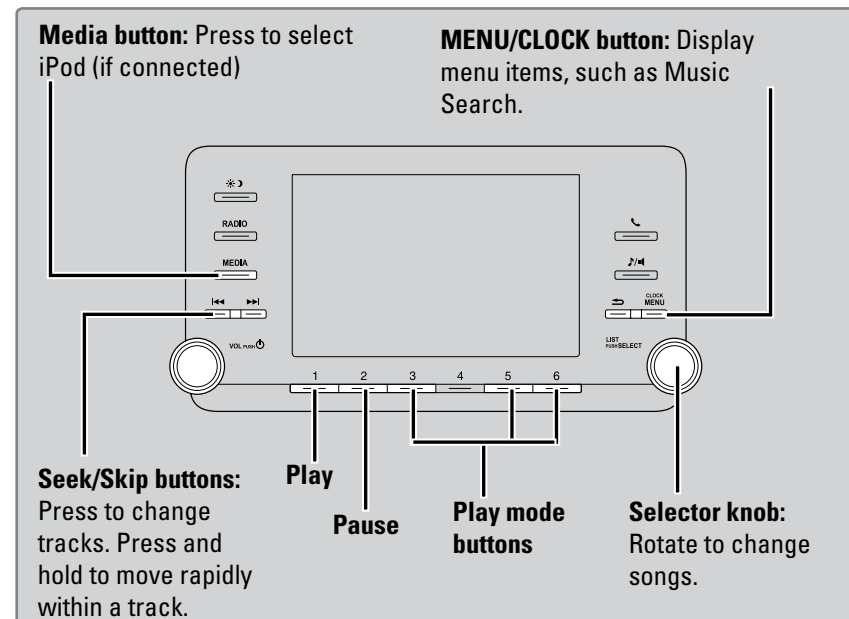

## ■ Searching for Music


Use the selector knob to search for tracks stored on the iPod.

1. From the audio screen, press the Selector Knob.
2. Select a category to display a list of items.
3. Select the track you want to play.

## Models with Display Audio

## iPod®


Play and operate an iPod through the vehicle's audio system. Connect your device to the USB port (see p. 48).

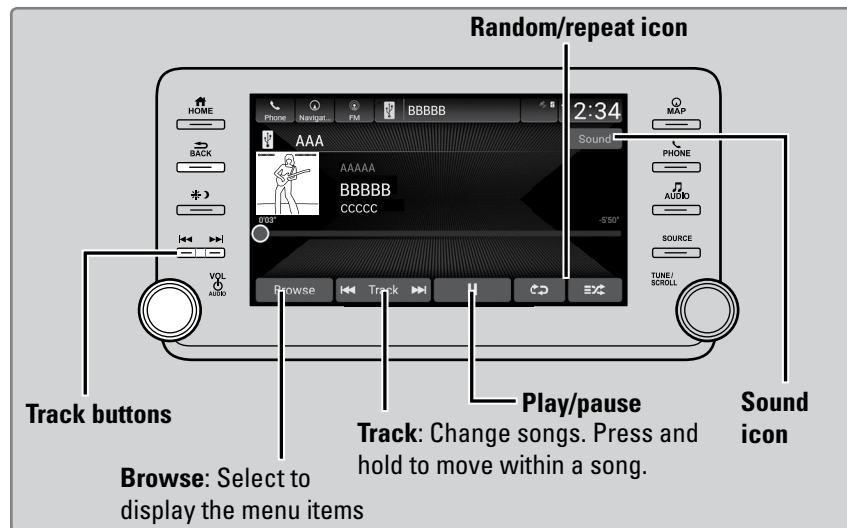

## ■ Searching for Music

Use the touchscreen to search for tracks stored on the iPod.


1. Select Browse.
2. Select the items on that menu.

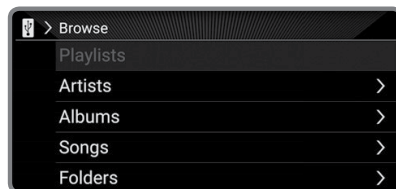

## Models with color audio

## USB Flash Drive

Play and operate a USB flash drive through the vehicle's audio system. Only MP3, WMA, or AAC formats are supported. Connect your device to the USB port (see p. 48).

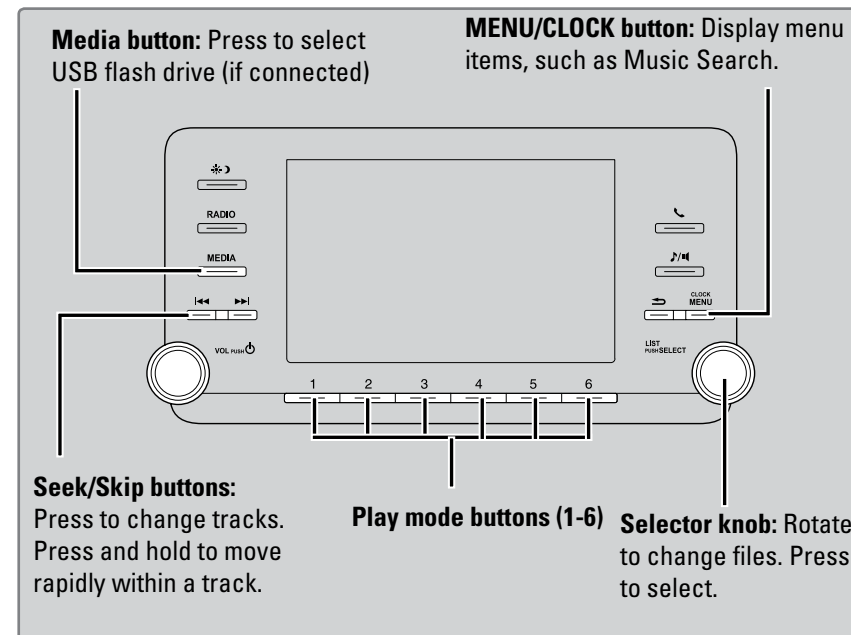

## ■ Searching for Music


Use the selector knob to search for tracks stored on the flash drive.

1. From the audio screen, press the Selector Knob.
2. Select a folder to display a list of files in the folder.
3. Select the track you want to play.

## Models with Display Audio

## USB Flash Drive


Play and operate a USB flash drive through the vehicle's audio system. Only MP3, WMA, or AAC formats are supported. Connect your device to the USB port (see p. 48).

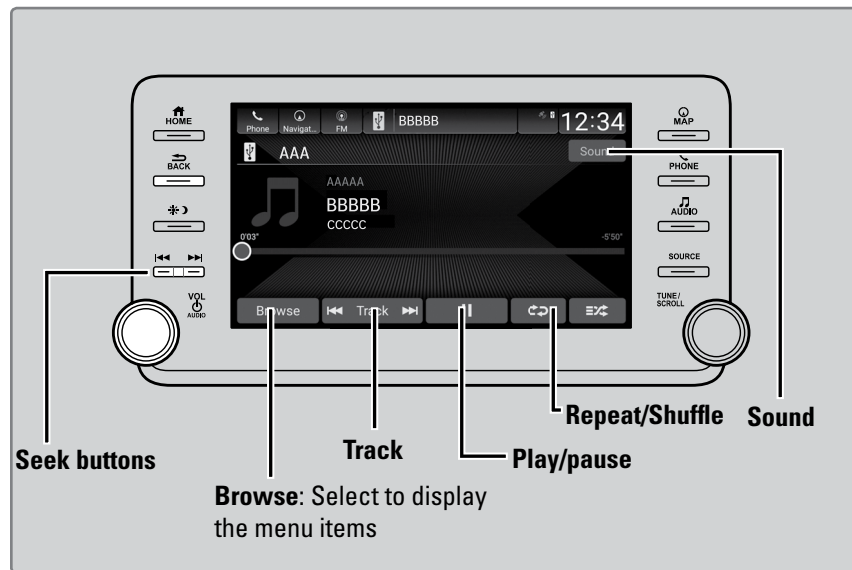

## ■ Searching for Music

Use the touchscreen to search for tracks stored on the USB flash drive.


1. Select Browse.
2. Select the items on that menu.

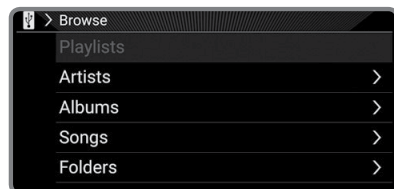

## Models with color audio

## Bluetooth® Audio

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Connect your phone to *Bluetooth* HandsFreeLink (see page 77). Visit [automobiles.honda.com/handsfreelink/\(U.S.\)](http://automobiles.honda.com/handsfreelink/(U.S.)) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates apply.

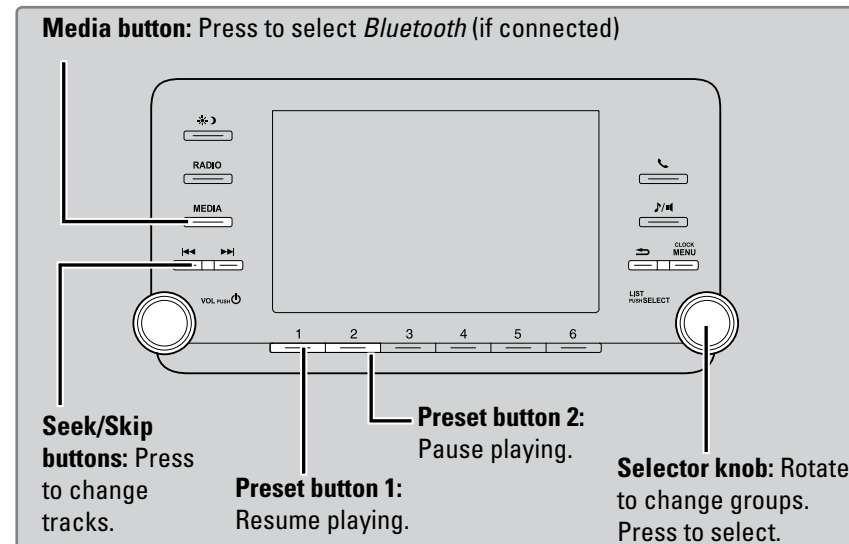

## Notes:

- Make sure the volume on your phone is properly adjusted.
- You may need to enable additional settings on your phone for playback.
- The resume/pause function and remote audio controls are not supported on all phones.

## ■ Searching for Music

Use the selector knob to search for tracks stored on the device.

1. From the audio screen, press the Selector Knob.
2. Select a category to display a list of items.
3. Select the track you want to play.


*Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.*



## Models with Display Audio

**Bluetooth® Audio**

Play streaming or stored audio from your compatible phone through the vehicle's audio system. Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility. Standard data rates apply with your phone service provider. Connect your phone to *Bluetooth* HandsFreeLink (see page 74).

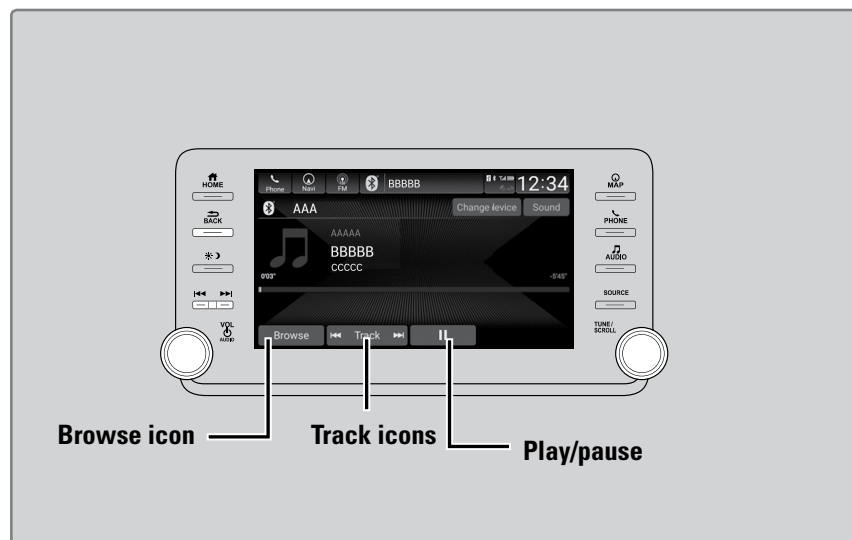■ **Searching for Music**

Use the touchscreen to search for tracks stored on the device.

1. Select Browse.
2. Select a search category.
3. Select an item. The selection begins playing.

**Notes:**

- If a phone is currently connected via Apple CarPlay or Android Auto, *Bluetooth* Audio from that phone is unavailable.
- You may need to enable additional settings on your phone for playback.

*Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.*

## Models with color audio

**Pandora®\***

Play and operate Pandora from your phone through the vehicle's audio system. Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) to check phone compatibility. Standard data rates apply.

**Available in the U.S. only.**

Connect your phone when the vehicle is stopped.


**For iPhone:**

- Connect via *Bluetooth* HandsFreeLink (see page 77) or USB port (see p. 48).
- A pop-up may appear on your phone requesting you to allow access for Pandora to be launched.
- If you cannot operate Pandora through the audio system, it may be streaming through *Bluetooth* Audio. Make sure Pandora is selected on the audio system.
- If Pandora still does not operate, try rebooting the phone and reconnecting the cable if necessary.

**For Android or BlackBerry:**

- Connect via *Bluetooth* HandsFreeLink (see page 77).

**Media button:** Press to select Pandora (if connected)

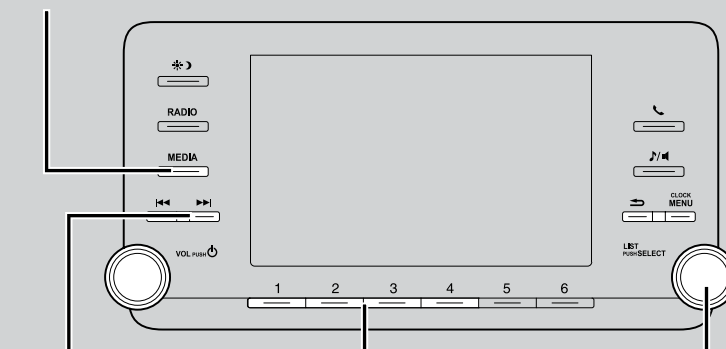

**Skip button:** Go to the next song.

**Preset buttons:** Press the button for each function.  
 (1) Pause/resume  
 (2) Dislike song  
 (3) Like song  
 (4) Bookmark track

**Selector knob:** Rotate to change the station.

*\* if equipped. Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle. Launch streaming audio on your phone only when safe to do so.*

# BLUETOOTH® HANDSFREELINK® (HFL)

Learn how to operate the vehicle's hands-free calling system.

## Basic HFL Operation


### Models with color audio

Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function.**

### HFL Controls

Use the controls to enter information and make selections.

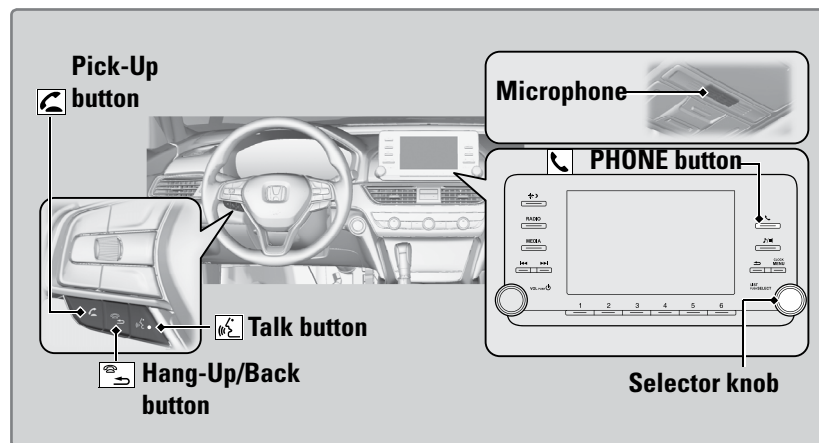

**Pick-Up button:** Answer an incoming call or press to go to the phone screen.

**Hang-Up/Back button:** End or decline a call, or cancel an operation.

**Talk button:** Make a call using a stored voice tag.

**PHONE button:** Display the phone screen.

**Selector knob:** Rotate and press to make selections.

## Models with Display Audio


Make and receive phone calls using the vehicle's audio system, without handling your phone. Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or call (888) 528-7876 (Canada) to check phone compatibility.

If your iPhone is connected to Apple CarPlay or Android Auto, calls can only be made through Apple CarPlay or Android Auto, not through *Bluetooth HandsFreeLink*.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Stop or pull over to perform the function. Voice commands are also available.**

### HFL Controls

Use the controls to enter information and make selections.

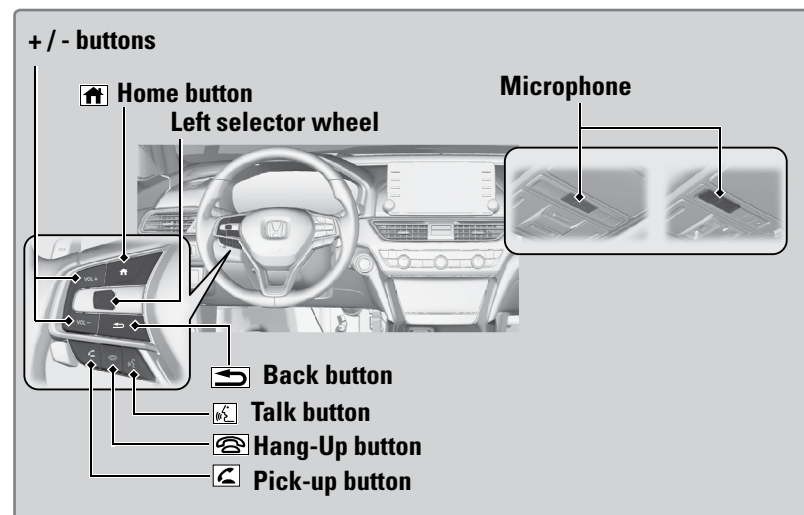

**+ / - buttons:** Scroll the list.

**Pick-Up button:** Press to go directly to the phone menu on the driver information interface or to answer an incoming call.


**Hang-up button:** Press to end a call.

**Back button:** Press to go back to the previous screen or cancel a command.

**Talk button:** Press to access Voice Portal.

**Left Selector Wheel:** Press the (home) button, then roll up or down to select Phone on the driver information interface, and then press the left selector wheel.

**Home button:** Press to go back to the home screen of the driver information interface.

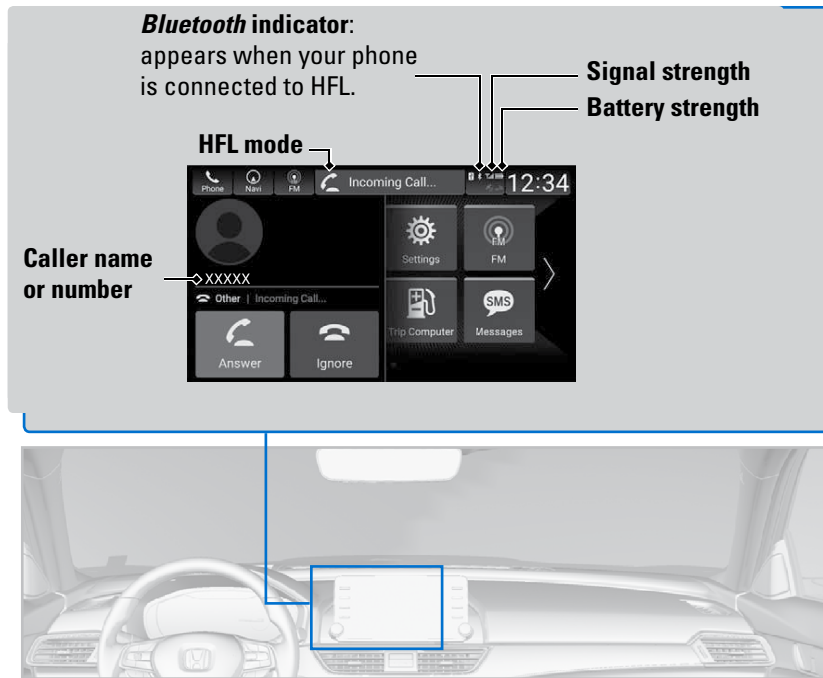

### Talk Button Tips

- When using the Talk button, wait for a beep before saying a command.
- The system recognizes only those commands in the Voice Command Index (see page 158).
- Speak in a clear, natural voice.
- Reduce all background noise.
- Close the windows and moonroof.

## Pairing a Phone



### Models with color audio

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the selector knob or interface dial to make and enter selections.


1. Press the Phone button to go to the Phone screen.
2. A prompt appears. Select Yes.
3. Make sure your phone is in search or discoverable mode. Select OK.
4. When your phone appears on the list, select it by pressing the selector knob.

*If your phone doesn't appear:*

Select Phone Not Found? and search for *Bluetooth®* devices using your phone. From your phone, select HandsFreeLink.

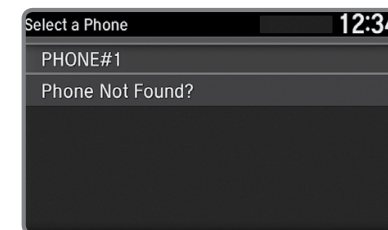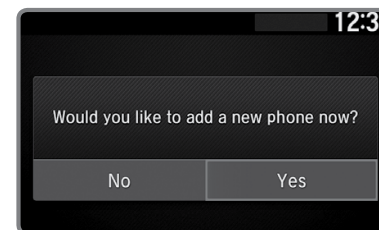

5. The system gives you a pairing code on the audio/information screen. Confirm if the pairing code on the screen and your phone match.
6. A notification appears on the screen if pairing is successful.

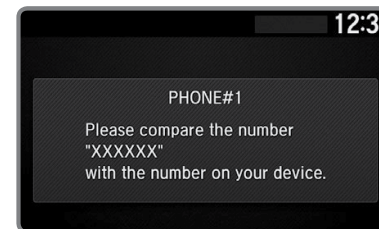



*Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.*

## Models with Display Audio

To use hands-free phone and streaming audio functions, you must first pair your phone to the system. This can only be done when the vehicle is stopped. Use the touchscreen to make and enter selections.

If there is an active connection to Apple CarPlay (see page 58) or Android Auto (see page 60), pairing of additional *Bluetooth*-compatible devices is unavailable and Add *Bluetooth* Device is grayed out from the *Bluetooth* Device List screen.

1. From the Home screen, select Phone.
2. Select Connect Phone.
3. Make sure your phone is in discovery mode, then select Connect New Device.
4. The system searches for your phone. Select your phone when it appears on the list.  
*If your phone does not appear:* search for HandsFreeLink from your phone. Connect to HFL.

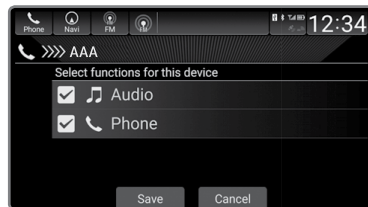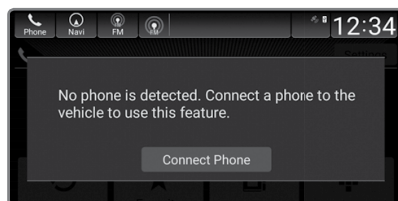

5. The system gives you a pairing code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
6. Select your desired options, then select Save.

*Applicable laws may prohibit the operation of handheld electronic devices while operating a vehicle.*

## Making a Call

### Models with color audio

You can make a call using several methods.


#### ■ Dialing a Number

Enter a 10-digit phone number to call.

#### Using voice commands

Press the Talk button before you say each command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-1-2-3-4."
3. The system begins to dial.

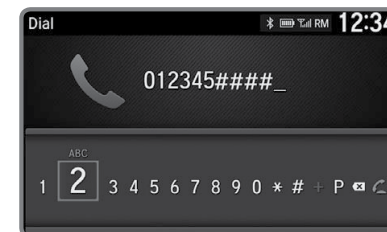

#### Using the menu


Use the selector knob or interface dial to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the PHONE button.
2. Select Dial.
3. Enter the phone number. Select the phone icon to call.

#### ■ Storing Speed Dial Entries

Store up to 20 numbers for quick dialing. Use the selector knob or interface dial to make and enter selections.

1. Press the PHONE button.
2. Select Speed Dial.
3. Select Add New .
4. Select an entry method.
5. If desired, you can create a voice tag for the number. Follow the prompts.

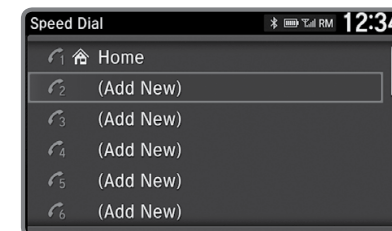

When a voice tag is created, you can press the Talk button and say "Call" and the stored voice tag to quickly call the number.

## ■ Using Speed Dial and Call History


Make calls quickly using stored speed dial entries or call history numbers.

### Using voice commands

1. Press the Talk button before you say each command.
2. Say *"Dial by voice tag."*
3. Say the stored voice tag name.  
For example, *"John Smith."*

### Using the menu

1. Press the PHONE button.
2. Select Call History.
3. Scroll through the list to find the entry you want to call, and select it to call.

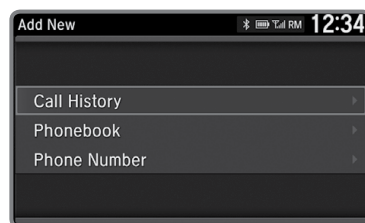


## ■ Using the Phonebook

When your phone is paired, its entire phonebook can be automatically imported to the system. Automatic Phone Sync must be turned on.

### Using voice commands


1. Press the Talk button before you say each command.
2. Say *"Dial by name."*
3. Say the phonebook name and phone type. For example, *"John Smith mobile."*

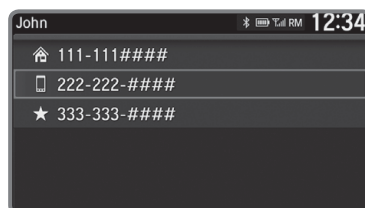

### Using the menu

Use the selector knob or interface dial to make and enter selections. This method is inoperable while the vehicle is moving.

1. Press the PHONE button.
2. Select Phonebook.
3. Scroll through the list to find the name and number you want to call, and select it to call.

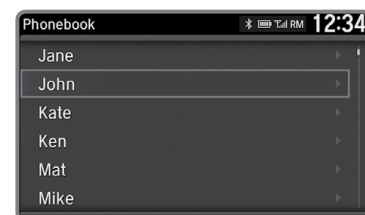

## Models with Display Audio

You can make a call using several methods.

## ■ Dialing a Number

Enter a 10-digit phone number to call.

1. From the Home screen, select Phone.
2. Select Keypad.
3. Enter the phone number.
4. Select Call.



## ■ Using Contacts

When your phone is paired, its entire phonebook can be automatically imported to the system. Phone synchronization must be turned on.


1. From the Home screen, select Phone.
2. Select Contacts.
3. Scroll through the list to find the name
4. Select a number.



## ■ Storing Favorite Contacts

Store contact entries for quick dialing.

1. From the Home screen, select Phone.
2. Select Recent Calls, Contacts, or Keypad.
3. Select the star icon.

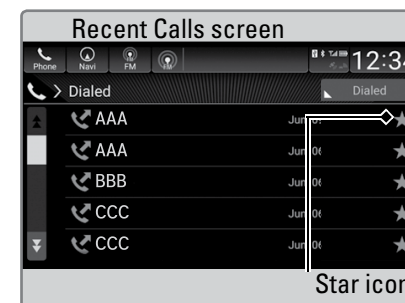




## Models with Display Audio

### Siri® Eyes Free

Activate Siri through your vehicle when an iPhone is paired to the system. Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or [honda.ca/siri](http://honda.ca/siri) (Canada) to check phone compatibility.

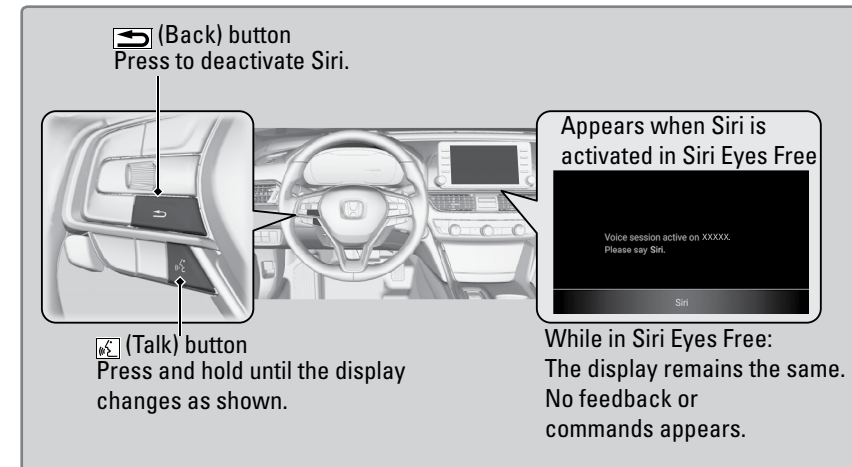

Here are some examples of Siri commands:

- "Call John Smith"
- "Read my new text message"
- "Find a nearby sushi restaurant"
- "Remind me to pick up dinner"
- "Set up a meeting today at 3 p.m."
- "Play song XYZ"


#### Notes:

- Any requests that include visual feedback from Siri on your phone are not displayed in the vehicle.
- Certain commands rely on the iPhone's features and existing apps.
- To hear turn-by-turn directions or songs through the vehicle, set the audio source to *Bluetooth* Audio.
- While using Apple CarPlay (see page 58), use the Talk button to activate Siri.

## Using Favorite Contacts

Make calls quickly using stored favorite contact entries.

- From the Home screen, select Phone
- Select Favorite Contacts
- Select a number

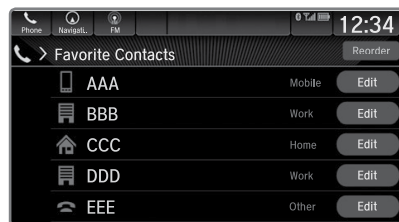

## Models with Display Audio

### SMS Text Messaging\*

Certain phones can receive and send messages when paired and connected. Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or phone (888) 528-7876 (Canada) to check phone compatibility. Standard message rates apply with your phone service provider. This feature is limited while the vehicle is moving.

Text messaging is not available while using Apple CarPlay. Use Apple Messages instead.



## Receiving and Responding to Messages

When you receive a new message, a pop-up appears on the touchscreen. You can view the message when the vehicle is stopped. You can also reply to it using fixed phrases or call the sender.

- When the prompt appears, select Open. The message displays.
- Select Play to listen to the message.

*To reply:* With the message open, select Reply, and choose one of the available responses. Select Send to send the message.

*To call the sender:* With the message open, select Call.

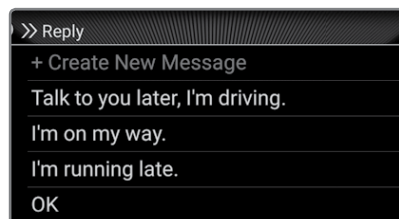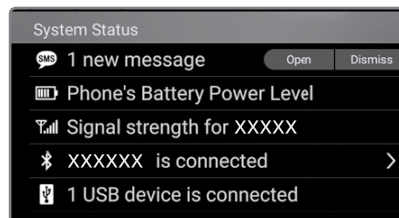

\*if equipped

Siri and iPhone are trademarks of Apple, Inc.

# NAVIGATION\*

Learn how to enter a destination and operate the navigation system.


## Basic Navigation Operation

A real-time navigation system uses GPS and a map database to show your current location and help guide you to a desired destination. You can operate the system using voice commands or the system controls.

**To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.**

### Steering Wheel Controls

Use the steering wheel controls to say voice commands.

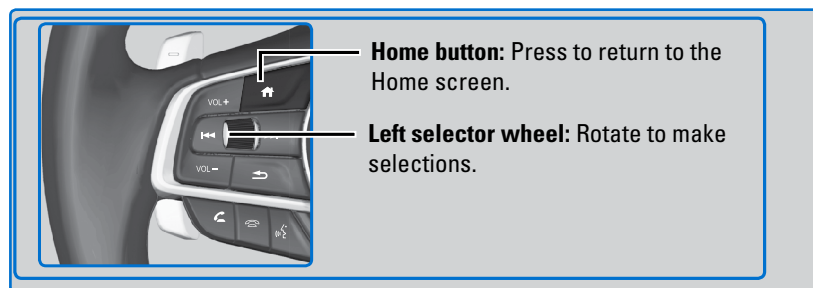

### Talk Button Tips


For a list of available navigation commands, see page 61. The system recognizes only the commands on the list.

- When using the Talk button, wait for a beep before saying a command.
- To bypass the system prompts, simply press the Talk button again to say your command.
- Speak in a clear, natural voice.
- Reduce all background noise.
- Adjust the dashboard vents away from the microphone in the ceiling.
- Close the windows and moonroof.

### System Guidance Volume



Adjust the navigation system volume.

1. From the HOME screen, select Navigation.
2. Select Map Tools, then Guidance Volume.
3. Select + or – to adjust the volume, or select Mute.
4. Press BACK to exit the menus.

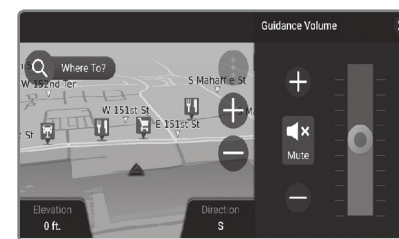

### Navigation Display and Controls

Touch icons on the screen to enter information and make selections.

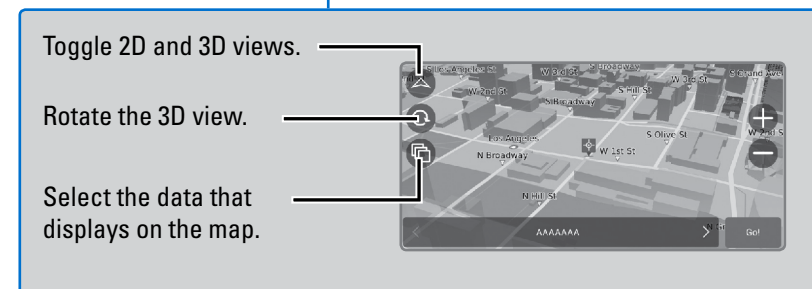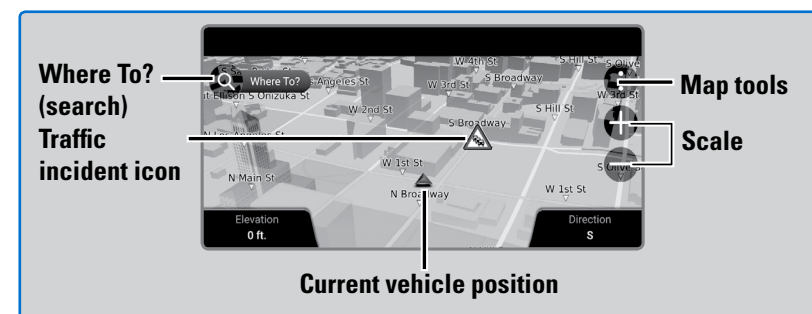

## ■ Setting Touchscreen Sensitivity

You can adjust the touchscreen's sensitivity to your fingertip.


1. From the HOME screen, select Settings, then System.
2. Select Touch Panel Sensitivity .
3. Make your selection.



## Entering a Destination

Use several methods to enter a destination.

### ■ Home Address

Store your home address in the system so you can easily route to it.

1. From the map screen, select the Search icon, then select .
2. Select Set Home Location.
3. Select Enter My Address.
4. Enter the house number and street name.
5. Select Done or a suggestion.
6. Select the address from the list. A map of the address is shown. Select Select.

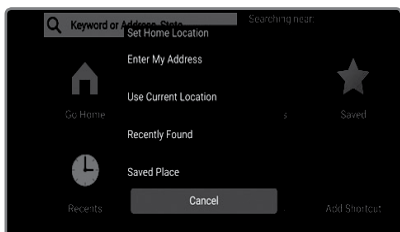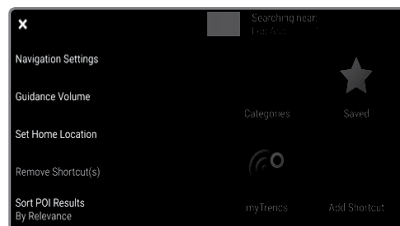

When your home address is stored, you can press the Talk button and say "Navigation" and then "Go home" at any time. You can also select Go Home from the Where To? menu.

### ■ Street Address

Enter a street address.

1. From the map screen, select the Search icon.
2. Select Search Tools.
3. Select Address.
4. Enter the house number and street name.
5. Select Done or a suggestion.
6. Select the address from the list.
7. Select Go!.



You can also enter a street address using voice commands. Press the Talk button and say "Navigation" and then "Find Address." Follow the prompts.

### ■ Place Category


Enter a destination using a point of interest or landmark.

1. From the map screen, select the Search icon.
2. Select Categories.
3. Select a category (and a subcategory if necessary).
4. Select a place from the list.
5. Select Go!.

### ■ Recent Places

Select an address from a list of your 50 most recent destinations.

1. From the map screen, select the Search icon.
2. Select Recents.
3. Select a place from the list.
4. Select Go!.

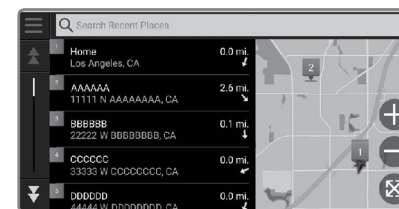


### ■ Saved Places

Save locations so you can quickly route to them.

#### Saving a location


1. From the map screen, select the Search icon.
2. Select a search method.
3. Find the location using that method.
4. Select Info.
5. Select Save (enter a name and select Done (if needed)).

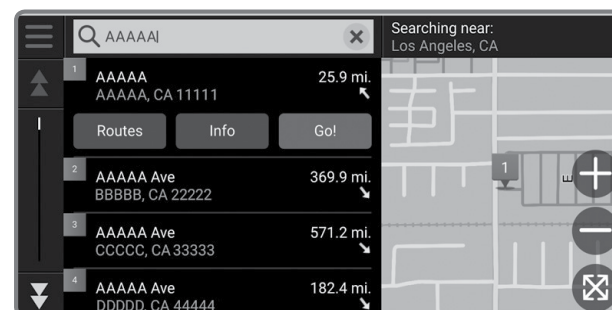

You can also save your current location. From the map screen, select the vehicle icon. Select Save. Enter a name for the location. Select Done.

Routing to a saved location

- 1. From the map screen, select the Search icon.
- 2. Select Saved.
- 3. Select the destination from the list.
- 4. Select Go!.

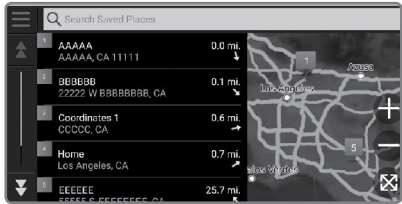


Routing

After a destination is set, you can alter or cancel your route.

Map Legend

During route guidance

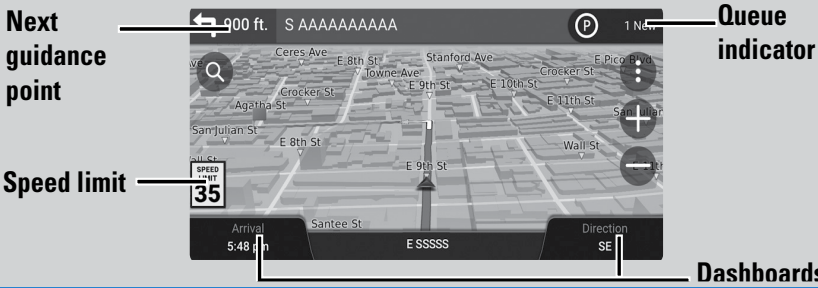

WARNING


Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.


Operate system controls only when the conditions permit you to safely do so.

Traffic


The system calculates routes taking current traffic into account. If traffic conditions change during routing, the system may alter the route if it finds a faster way. Traffic information in Canada is limited.


Viewing traffic

- 1. From the map screen, select  (Map Tools).
- 2. Select Traffic. Localized traffic reports will display.
- 3. Select Traffic Map. Traffic reports display in a list. Select a traffic report in the list to see a map view of that item.

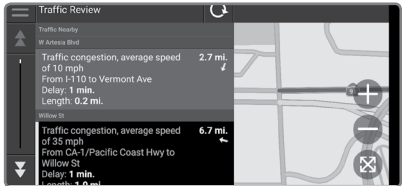

Detouring on your route

- 1. From the map screen, select  (Map Tools).
- 2. Select Detour.
- 3. Select the length of the detour.

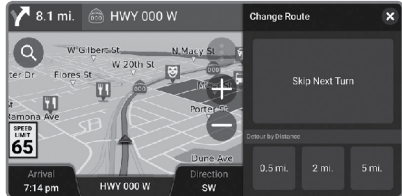

# DRIVING

Learn about preparation for driving, as well as other features.

## Before Driving

Check the following items before you begin driving.

### Exterior Checks

- Make sure there are no obstructions on the windows, door mirrors, exterior lights, or other parts of the vehicle.
- Remove any frost, snow, or ice.
- Make sure the hood is securely closed.
- Heat from the engine and exhaust can ignite flammable materials left under the hood, causing a fire. If you've parked your vehicle for an extended period, inspect and remove any debris that may have collected, such as dried grass and leaves that have fallen or have been carried in for use as a nest by a small animal. Also check under the hood for leftover flammable materials after you or someone else has performed maintenance on your vehicle.
- Make sure the tires are in good condition.
- Make sure there are no people or objects behind or around the vehicle.

### NOTICE

If the doors are frozen shut, use warm water around the door edges to melt any ice. Do not try to force them open, as this can damage the rubber trim around the doors. When done, wipe dry to avoid further freezing.

### Interior Checks

- Store or secure all items on board properly.
- Do not pile items higher in the cargo area than the seat-back height.
- Do not place anything in the front seat footwells. Make sure to secure the floor mats.
- If you have any animals on board, do not let them move freely around in the vehicle.
- Securely close and lock all doors and the trunk.
- Adjust your seating position, mirrors, and steering wheel properly.
- Make sure items placed on the floor behind the front seats cannot roll under the seats.

- Everyone in the vehicle must fasten their seat belt.
- Make sure that the indicators in the instrument panel come on when you start the vehicle, and go off soon after.

In addition:

- During the first 600 miles (1,000 km) of operation, avoid sudden acceleration or full throttle operation so as not to damage the engine or powertrain.
- Avoid hard braking for the first 200 miles (300 km). You should also follow this when the brake pads are replaced.

### WARNING

Improper accessories or modifications can affect your vehicle's handling, and stability, and performance, and cause a crash in which you can be seriously hurt or killed.


Follow all instructions in the vehicle owner's manual regarding accessories and modifications.

## Maximum Load Limit

Carrying too much cargo or improperly storing it can affect your vehicle's handling, stability, stopping distance, and tires, and make it unsafe.

The maximum load for your vehicle is 850 lbs (385 kg). See the Tire and Loading Information label on the driver's doorjamb.

Label example



### TIRE AND LOADING INFORMATION

SEATING CAPACITY

TOTAL 5 FRONT 2 REAR 3

The combined weight of occupants and cargo should never exceed 385kg or 850lbs.

TIRE	SIZE	COLD TIRE PRESSURE
FRONT	XXXX/XXXXX XXX	XXXKPA, XXPSI
REAR	XXXX/XXXXX XXX	XXXKPA, XXPSI
SPARE	XXXX/XXXXX XXX	XXXKPA, XXPSI

SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION



This figure includes the total weight of all occupants, cargo, and accessories, and the tongue load if you are towing a trailer. Below are the steps for determining the correct load limit:

1. Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
2. Determine the combined weight of the driver and passengers that will be riding in your vehicle.
3. Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
4. The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. (635 kg) and there will be five 150 lbs. (68 kg) passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400 - 750 (5 x 150) = 650 lbs.) or 295 kg (635 - (5 x 68) = 295 kg).
5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in step 4.
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the Owner's Manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.

In addition, the total weight of the vehicle, all occupants, accessories, cargo, and trailer tongue load must not exceed the Gross Vehicle Weight Rating (GVWR) or the Gross Axle Weight Rating (GAWR). Both are on a label on the driver's doorjamb.

Load limits example

Example1

Max load  
850 lbs  
(385 kg)

Passenger weight  
150 lbs x 2 = 300 lbs  
(68 kg x 2 = 136 kg)

+

Cargo weight  
550 lbs  
(249 kg)

Example2

Max load  
850 lbs  
(385 kg)

Passenger weight  
150 lbs x 5 = 750 lbs  
(68 kg x 5 = 340 kg)

+

Cargo weight  
100 lbs  
(45 kg)

## WARNING

Overloading or improper loading can affect handling and stability and cause a crash in which you can be hurt or killed. Follow all load limits and other loading guidelines in this guide.

The headlight aim on your vehicle was set by the factory, and does not need to be adjusted. However, if you regularly carry heavy items in the trunk or tow a trailer, have the aiming readjusted at your dealer or by a qualified technician.

### Towing a Trailer

Your vehicle can tow a trailer if you carefully observe the load limits, use the proper equipment, and follow the towing guidelines. See the Owner's Manual at [owners.honda.com](http://owners.honda.com) (U.S.) or [myhonda.ca](http://myhonda.ca) (Canada) for more information.


#### 1.5 L engine models:

Your vehicle is not designed to tow a trailer. Attempting to do so can void your warranties.

#### 2.0 L engine models:

##### Total Trailer Weight


Maximum allowable weight of the trailer, cargo, and everything in or on it must not exceed 1,000 lbs (450 kg). Towing loads in excess of this can seriously affect vehicle handling and performance and can damage the engine and drivetrain.

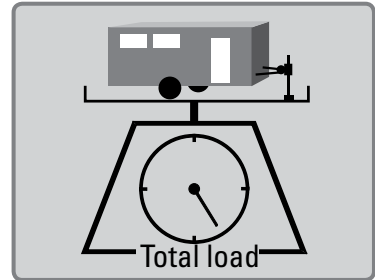

##### Tongue Load

The weight of the tongue with a fully loaded trailer on the hitch should be approximately 10% of the total trailer weight.

- Excessive tongue load reduces front tire traction and steering control. Too little tongue load can make the trailer unstable and cause it to sway.
- To achieve a proper tongue load, start by loading 60% of the load toward the front of the trailer and 40% toward the rear. Readjust the load as needed.

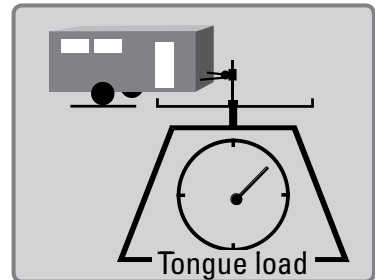

**⚠ WARNING**

Exceeding any load limit or improperly loading your vehicle and trailer can cause a crash in which you can be seriously hurt or killed. Check the loading of your vehicle and trailer carefully before starting to drive.

**■ Pre-tow Checklist**

When preparing to tow, and before driving away, ensure the following:

- The vehicle has been properly serviced, and the suspension and the cooling system are in good operating condition.
- Avoid towing a trailer during your vehicle's first 600 miles (1,000 km).
- The trailer has been properly serviced and is in good condition.
- All weights and loads are within limits. Never exceed the gross weight ratings.
- Check if all loads are within limits at a public scale. If a public scale is not available, add the estimated weight of your cargo load to the weight of your trailer (as quoted by the manufacturer) and the tongue load.
- The hitch, safety chains, and any other attachments are secure.
- All items in or on the trailer are properly secured and cannot shift while you drive.
- Trailer lights and brakes work properly.
- Trailer tire pressures (including spare tire) are correct.

**⚠ WARNING**

Exceeding any load limit or improperly loading your vehicle and trailer can cause a crash in which you can be seriously hurt or killed.

Check the loading of your vehicle and trailer carefully before starting to drive.

**Models with automatic transmission or CVT**

Your vehicle is not designed to be towed behind a motor home. If your vehicle needs to be towed in an emergency, refer to the emergency towing information.

**Manual transmission models**

Your vehicle can be towed behind a motorhome.


**Turbocharger\* Precautions**

The engine uses an exhaust-driven turbocharger to generate extra power. The turbocharger is a precision device that can spin at over 100,000 rpm and reach temperatures over 1,292F (700C). It is lubricated and cooled by engine oil. Be sure to follow these precautions to help prevent turbocharger damage.

1. Always change the engine oil according to the Maintenance Minder.
2. Always allow the engine to warm before revving it or accelerating in a spirited way.

**Remote Engine Start\***

Start your vehicle's engine using the remote transmitter before you enter the vehicle.

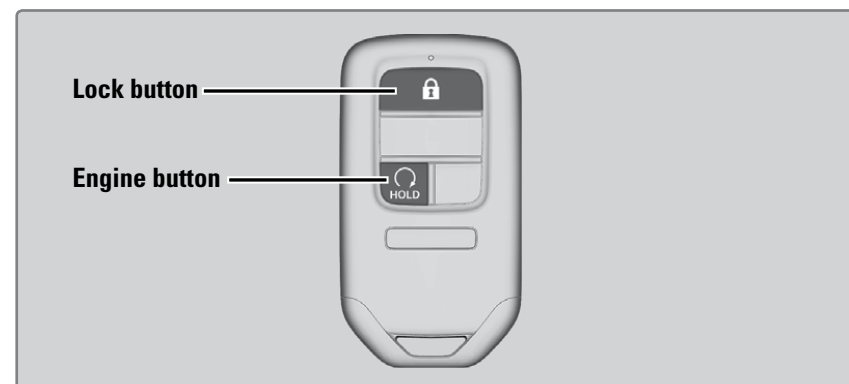

Make sure the vehicle is in a safe location when using remote engine start (i.e., a well-ventilated area, away from any flammable materials).

**■ Starting the Engine**

Press the Lock button, then press and hold the Engine button within 5 seconds to remotely start the engine.

The engine runs for up to 10 minutes. To extend the run time for another 10 minutes, repeat the procedure during the initial 10 minutes.

While the engine is running, the climate control system adjusts the cabin temperature, the security system remains on, and lights and accessories remain off.

**■ Stopping the Engine**

Press and hold the Engine button.

The engine will also stop if it has been running for more than 10 minutes, or if any door is opened without using the remote or smart entry.

*\*if equipped*

**⚠ WARNING**

Engine exhaust contains toxic carbon monoxide gas.

Breathing carbon monoxide can kill you or cause unconsciousness.


Never use the remote engine starter when the vehicle is parked in a garage or other area with limited ventilation.

**Starting to Drive**

Turn on the vehicle and start the engine to begin driving.

**■ Before Starting the Engine****Manual transmission**

Ensure the parking brake is applied. Check that the shift lever is in Neutral (N), then press the brake pedal with your right foot and the clutch pedal with your left foot. The clutch must be fully pressed to start the engine.

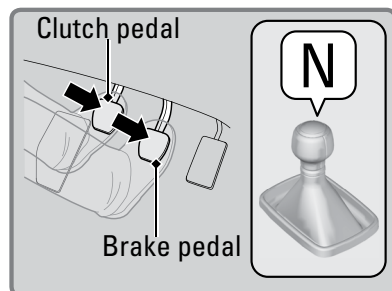**Continuously Variable Transmission (CVT)/Automatic Transmission (AT)**

Ensure the parking brake is applied. Check that the transmission is in Park (P). Depress the brake pedal, then press the ENGINE START/STOP button. Keep your foot firmly on the brake pedal when starting the engine.

**Cold Weather**

The engine is harder to start in cold weather and in thinner air found at altitudes above 8,000 feet (2,400 m).

When starting the engine in cold weather, turn off all electrical accessories such as the lights, climate control system, and rear defogger in order to reduce battery drain.

**■ Changing the Power Mode**


Use the ENGINE START/STOP button to cycle through power modes or start the engine.

*\*if equipped*

**Accessory or On mode:** Press the ENGINE START/STOP button once without pressing the brake pedal for Accessory mode. Press it again for On mode.

**Starting the engine:** Press and hold the brake pedal or clutch, then press the ENGINE START/STOP button. Keep your foot firmly on the brake pedal when starting the engine.

**Turning the vehicle off:** Shift to Park (P) or apply the parking brake, then press the ENGINE START/STOP button. If you press the button and the shift lever is not in Park (P), the vehicle goes into Accessory mode.

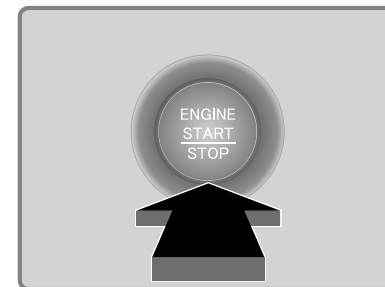**Shifting**

Change the shift position based on your driving needs.

**■ Continuously Variable Transmission (CVT)\***

**Park (P):** Used for parking or starting/stopping the engine. Press the brake pedal, then press the release button to shift.

**Reverse (R):** Used for reversing.

**Neutral (N):** Used for idling.

**Drive (D):** Used for normal driving.


**Drive (S):** Used for better acceleration, increased engine braking, driving in hilly terrain, or paddle shifting\*.

**Low (L)\*:** Used for stronger engine power and braking when driving in hilly terrain.

**NOTICE**

When you change the shift lever from D to R and vice versa, come to a complete stop and keep the brake pedal depressed. Operating the shift lever before the vehicle has come to a complete standstill can damage the transmission.

Do not operate the shift lever while pressing the accelerator pedal. You could damage the transmission.

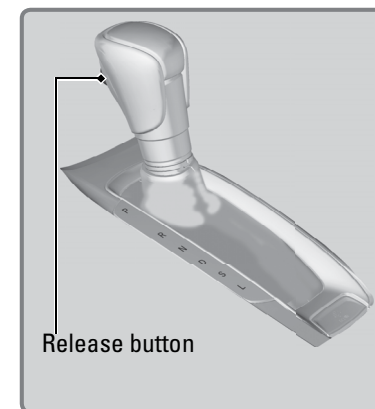

*\*if equipped*


## ■ Automatic Transmission\*

**Park (P):** Used for parking or starting/stopping the engine. Press the brake pedal, then press the release button to shift.

**Reverse (R):** Used for reversing.

**Neutral (N):** Used for idling.

**Drive (D):** Used for normal driving.

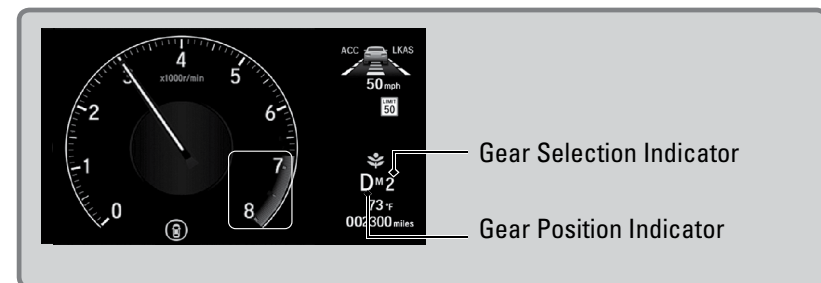

### NOTICE

When you change from D to R and vice versa, press the brake pedal and come to a complete stop, then select the intended gear position while maintaining brake pressure.

### Auto park mode

For your convenience, Park (P) is automatically selected when all of the following conditions are met:

- The vehicle is stopped.
- The driver's seatbelt is unbuckled.
- The driver's door is opened.

If you manually put the transmission from (P with the brake pedal depressed, the transmission will automatically return to (P once you release the brake pedal.

*\*if equipped*

## Car wash mode

If you are driving through a conveyor-style car wash where you or the attendant do not remain in the vehicle, follow these steps while the engine is on:

1. Press and hold the brake pedal.
2. Press then release the Neutral (N) button. Neutral-hold mode will display in the driver information interface.
3. Press and hold N again for two seconds. This puts the vehicle in car wash mode. You can exit the vehicle without it shifting to Park.


If the ENGINE STOP/START button is pressed after car wash mode has been activated, the power mode will change to ACCESSORY and a message will be displayed on the driver information interface. After 15 minutes, the gear position changes to Park and the power mode changes to OFF.

### NOTICE

When the transmission is too hot, car wash mode may not be available. Let the engine idle to cool the transmission.

## ■ Paddle Shifters\*

Use the paddle shifters to change gears without removing your hands from the steering wheel.

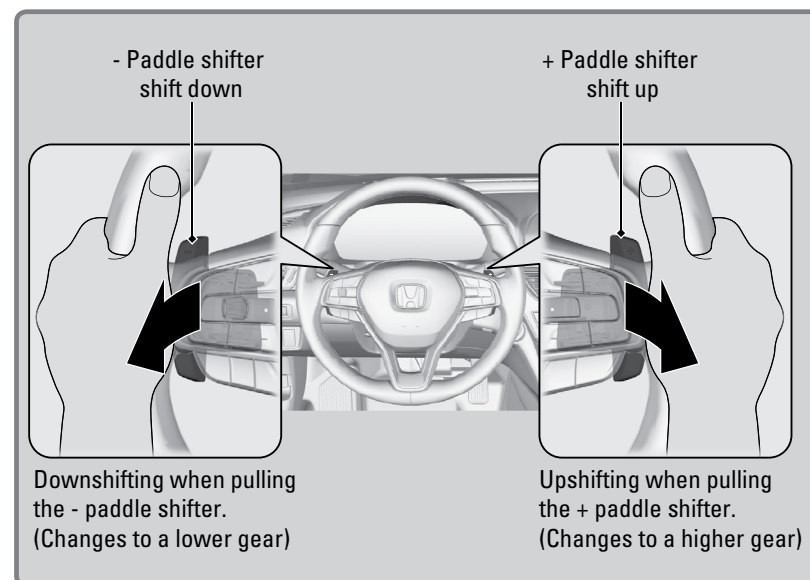

*\*if equipped*

### Automatic Transmissions

Use the paddle shifters to change between 1st and 10th gears without removing your hands from the steering wheel.

**When the transmission is in (D):** The vehicle goes into sequential shift mode momentarily, and the gear selection indicator comes on. When you start traveling at a constant speed, sequential mode and the gear position indicator automatically switch off.

Hold the + paddle shifter for two seconds to return to normal drive.

**When the transmission is in (D) with SPORT mode:** The vehicle will go into the sequential mode, and the M (sequential mode) indicator and gear selection indicator will come on.

You can cancel this mode by holding the + paddle shifter for two seconds. When the sequential mode is canceled, the sequential mode indicator and gear selection indicator go off.

### CVT Transmissions

Use the paddle shifters to change between 1st and 7th speeds without releasing your hands from the steering wheel.


**When the shift lever is in (D):** The vehicle goes into sequential shift mode temporarily, and the gear selection indicator comes on. When you start traveling at a constant speed, sequential mode and the gear position indicator automatically switch off.

**When the shift lever is in (D) with SPORT mode:** The vehicle goes into sequential mode, and the M (sequential mode) indicator and gear selection indicator come on. Use the paddle shifters to change gears.

To cancel this mode, press the SPORT button. The M indicator and gear selection indicator switch off.

### Manual Transmission\*

Fully press the clutch pedal to operate the shift lever and change gears.

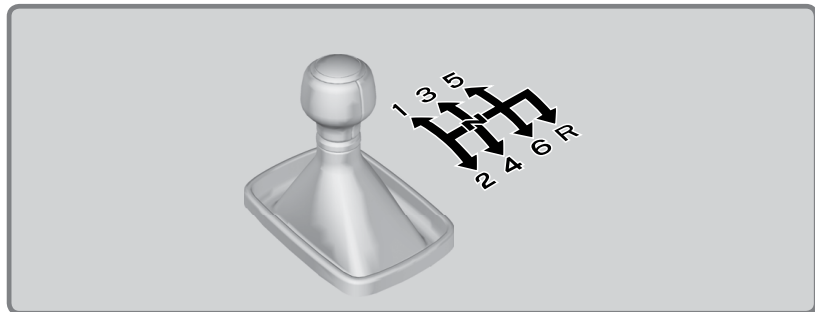

*\*if equipped*

### NOTICE

Do not shift to Reverse (R) before the vehicle comes to a complete stop. This can damage the transmission.

### NOTICE

Before downshifting, make sure the engine will not go into the tachometer's red zone. This can severely damage your engine.

### Braking

Slow down or stop your vehicle, and keep it from moving when parked.

#### ■ Foot Brake

Press the brake pedal to slow down or stop your vehicle from moving.

#### ■ Brake Assist System

During hard or emergency braking, the system increases braking force. The brake pedal may move slightly or make a noise; this is normal. Continue to hold the brake pedal firmly down.

#### ■ Anti-Lock Brake System (ABS)



During hard or emergency braking, the system rapidly pumps the brakes to prevent wheel lockup and help you maintain steering control. Do not pump the brake pedal, rather continue to hold it firmly down.

When ABS activates, you may notice vibrations through the brake pedal or the vehicle body, the brake pedal depressing further than usual, or hear a motor noise from the engine compartment. These are all normal.

In normal use, the ABS system will occasionally cause a motor sound from the engine compartment, especially when the engine is first started or after repeated use of the brakes.

### NOTICE

The ABS may not function correctly if you use an incorrect tire type and size.

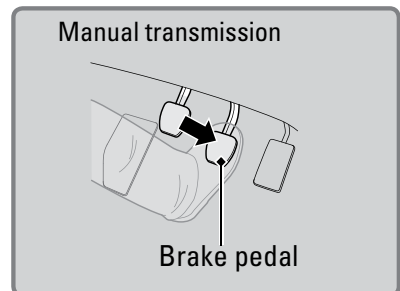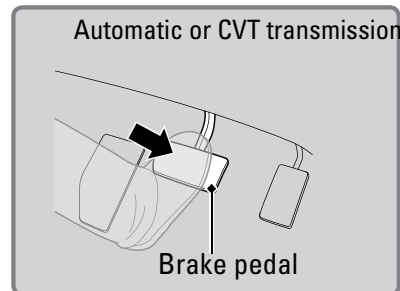



## ■ Electric Parking Brake

Keep the vehicle from moving when it is parked.

**To apply:** Pull up the switch. The parking brake indicator appears in the instrument panel. Hold the switch up for emergency braking while moving.

**To release:** Hold the brake pedal down and make sure your seat belt is fastened. Press the switch down to release. The parking brake indicator disappears from the instrument panel.

**To release automatically:** Lightly press the accelerator pedal after you have turned the vehicle on, fastened your seat belt, and changed the shift position to either Drive (D) or Reverse (R).


*If the parking brake does not release automatically, simply release it manually.*



Pull Up to Apply



Press to Release

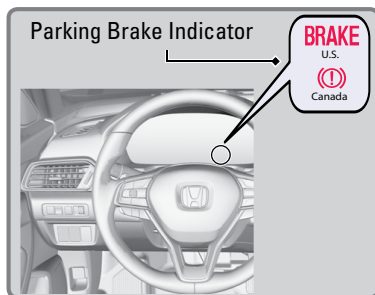

### NOTICE

Release the parking brake fully before driving. The rear brakes and axle can be damaged if you drive with the parking brake applied.

## ■ Automatic Brake Hold

Use brake hold to make stop-and-go driving easier. It maintains rear brake hold even after the brake pedal is released. Make sure the vehicle is on and your seat belt is fastened when operating this feature.

1. Press the BRAKE HOLD button behind the gear selector. The BRAKE HOLD indicator appears in the instrument panel.
2. With the shift lever in Drive (D) or Neutral (N), press the brake pedal and come to a complete stop. The HOLD indicator appears, and brake hold is applied. Release the brake pedal.
3. Press the BRAKE HOLD button behind the gear selector. The BRAKE HOLD indicator appears in the instrument panel.
4. With the shift lever in Drive (D) or Neutral (N), press the brake pedal and come to a complete stop. The HOLD indicator appears, and brake hold is applied. Release the brake pedal.



Press the accelerator pedal (or shift into a gear and release the clutch pedal for manual transmission) to cancel brake hold and start moving.

**To turn off brake hold:** Press the brake pedal and press the BRAKE HOLD button again.

Automatic brake hold cancels when:

- Braking is applied for more than 10 minutes.
- The electric parking brake is engaged.
- The foot brake is pressed and the shift lever is moved to Park or Reverse.
- The driver's seat belt is unfastened.
- The engine stalls (manual transmission models) or is turned off.
- There is a problem with the automatic brake hold system.

### ⚠ WARNING

Activating the automatic brake hold system on steep hills or slippery roads may still allow the vehicle to move if you remove your foot from the brake pedal.

Using the automatic brake hold system to park the vehicle may result in the vehicle unexpectedly moving.

If a vehicle unexpectedly moves, it may cause a crash resulting in serious injury or death.

Never leave the vehicle when braking is temporarily kept by automatic brake hold and always park the vehicle by putting the transmission in Park (P) and applying the parking brake.


## Eco Assist System

Can help improve fuel economy by adjusting the performance of the engine, transmission, climate control system, and cruise control.

### ■ ECON Button

Press the ECON button to turn the system on or off. The ECON Mode indicator and a message appears when the system is turned on.

(Appearances vary with vehicle equipment.)

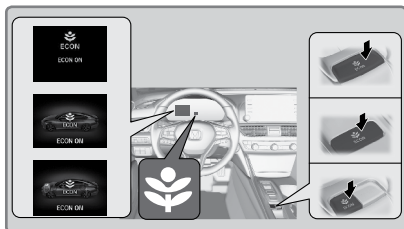

## Vehicle Stability Assist (VSA®)


Also known as Electronic Stability Control (ESC), VSA helps to stabilize the vehicle during cornering if the vehicle turns more or less than what was intended. It assists in maintaining traction on slippery surfaces by regulating engine output and selectively applying the brakes.

### ■ Turning VSA On or Off

VSA is turned on every time you start the engine, even if you previously turned it off. If you turn VSA off, your vehicle has normal braking and cornering ability, but VSA traction and stability enhancement become less effective.

Press and hold the VSA OFF button until you hear a beep to turn VSA on or off. The VSA OFF indicator appears when the system is off.


Traction control becomes less effective, which may make it easier when trying to free your vehicle if it is stuck in mud or snow.

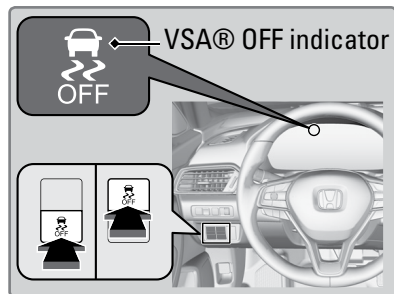


## Honda Sensing™\*

Honda Sensing is a driver support system which employs the use of two distinctly different kinds of sensors, a radar sensor located at the lower part of the front bumper and a front sensor camera mounted to the interior side of the windshield, behind the rear view mirror.

- Do not change the position of the radar sensor or any of the surrounding parts.
- Do not apply paint, stickers, or attach nongenuine accessories to the front part of the radar sensor or the surrounding area.
- Be particularly careful that any custom license plate frame or other accessory does not block any part of the radar beam path (see illustration below).

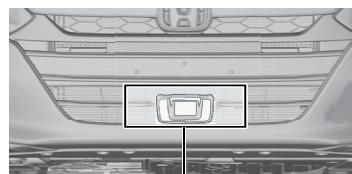

Do not apply paint, stickers, or attach accessories to the front part of the radar sensor or the surrounding area.

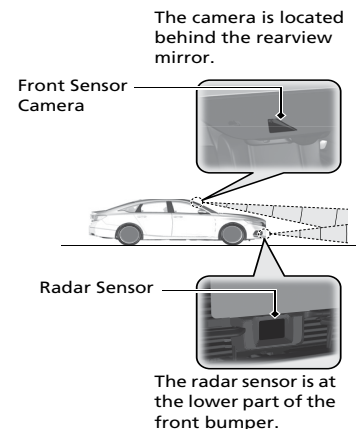

These are the components of Honda Sensing:

**Adaptive Cruise Control (ACC) with Low Speed Follow (LSF)\*:** Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours and, if the detected vehicle comes to a stop, can decelerate and stop your vehicle (see page 106).

**Adaptive Cruise Control (ACC)\*:** Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours (see page 106).

**Lane Keeping Assist System (LKAS):** Provides steering input to help keep the vehicle in the middle of a detected lane and provides tactile and visual alerts if the vehicle is detected drifting out of its lane (see page 109).

**Traffic Sign Recognition System:** Reminds you of road sign information, such as the current speed limit and that overtaking is prohibited (see page 112).


**Road Departure Mitigation (RDM) System:** Alerts and helps to assist you when the system detects a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether (see page 111).

**Collision Mitigation Braking System (CMBS):** Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours (see page 113).

\*if equipped

Adaptive Cruise Control (ACC)\* and Adaptive Cruise Control with Low Speed Follow (ACC with LSF)\*


Helps maintain a constant vehicle speed and a set following interval behind a vehicle detected ahead of yours. ACC works at speeds above 25 mph (40 km/h); ACC with LSF also works at speeds below 25 mph (40 km/h).

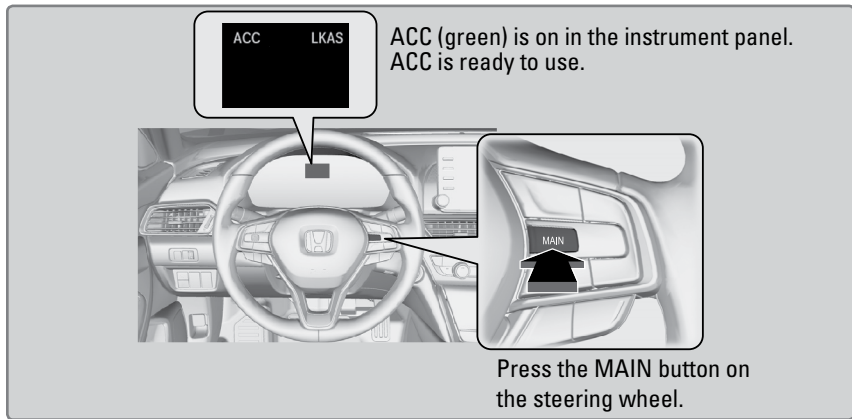

■ Activating and Setting the Vehicle Speed

Press the MAIN button. The ACC indicator appears in the multi-information display.


Accelerate to the desired speed (above 25 mph/40 km/h). Take your foot off the pedal and press the SET/- button to set the speed.

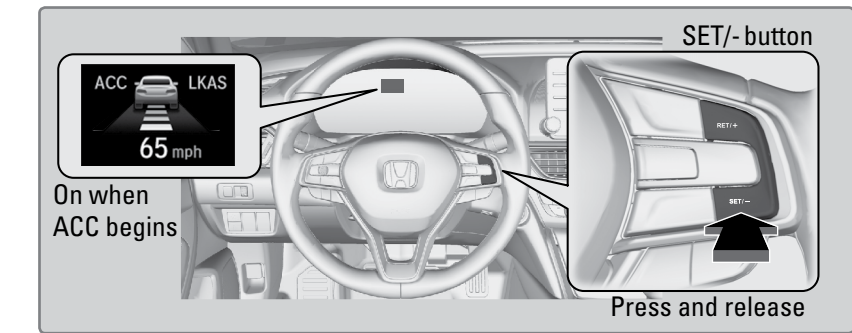

■ Adjusting the Vehicle Speed


Press the RES/+ button to increase speed or the SET/- button to decrease speed.

Each time you press the button, the vehicle speed is increased or decreased by about 1 mph (1.6 km/h). If you keep the button pressed, the vehicle speed increases or decreases by 5 mph or 5 km/h until you release it.

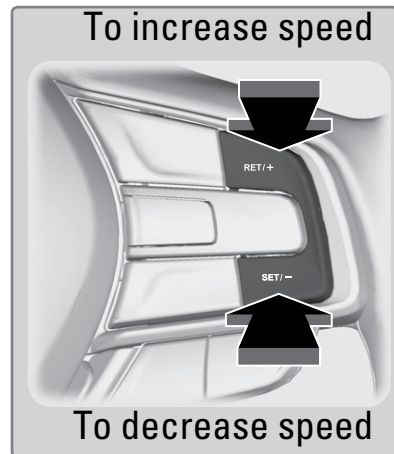

■ Adjusting the Following Interval

Press the Interval button to change the following interval. Each time you press the button, the setting cycles through extra long, long, middle, and short.

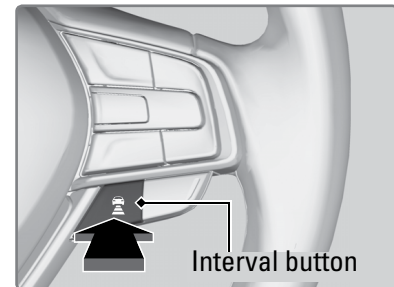


Interval	Short	Middle	Long	Extra Long
Approx. Gap (seconds)	1.1	1.5	2.1	2.9

■ During Operation

If a vehicle is detected ahead of you when ACC is turned on, the system maintains, accelerates, or decelerates your vehicle's set speed to keep the vehicle's set following interval from the vehicle ahead.

\*if equipped

You can temporarily increase the vehicle speed when you press the accelerator pedal. ACC stays on unless you cancel it. When you release the accelerator pedal, the system resumes the set speed or a sufficient speed to maintain the following interval.

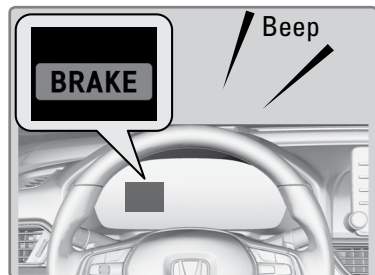

If a vehicle detected ahead of you slows down abruptly, or if another vehicle cuts in front of you, a beep sounds and BRAKE appears on the multi-information display to alert you.

### ⚠ WARNING

ACC has limited braking capability.


When your vehicle speed drops below 22 mph (35 km/h), ACC will automatically cancel and no longer will apply your vehicle's brakes.

Always be prepared to apply the brake pedal when conditions require.

#### ■ Canceling ACC

Press the CANCEL or MAIN button, or press the brake pedal. The ACC indicator goes off.

Certain conditions may cause ACC to cancel automatically. When this happens, the amber ACC indicator appears on the multi-information display (see page 23).

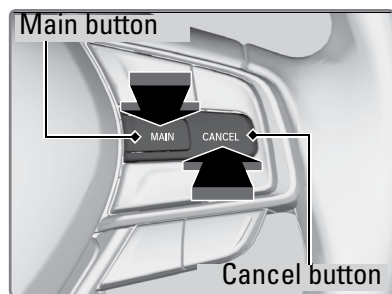

After adaptive cruise control has been canceled, you can still resume the prior set speed by pressing RES/+ when your vehicle speed is over 25 mph (40 km/h).

### ⚠ WARNING

Improper use of ACC can lead to a crash.

Use ACC only when traveling on open highways in good weather.

#### ■ Switching to Cruise Mode

To turn off the adaptive speed function of ACC, press and hold the Interval button for 1 second. Press and hold the Interval button again to restart the adaptive speed feature.

### Lane Keeping Assist System (LKAS)\*

Provides steering input to help keep the vehicle in the middle of a detected lane and provides audible and visual alerts if the vehicle is detected drifting out of its lane while driving between 45–90 mph (72–145 km/h).

If your vehicle is getting too close to detected left or right side lane markings without a turn signal activated, the system provides visual and tactile alerts.


A Lane Departure message appears on the multi-information display, and the steering wheel vibrates. Steering torque is also applied to help keep your vehicle within your driving lane. Take appropriate action to stay within your driving lane.

#### ■ Turning the System On or Off

Press the MAIN button. LKAS appears in the multi-information display.

Press the LKAS button. Lane outlines appear in the multi-information display. Dotted lane lines turn solid when the system activates.

Press the MAIN button or the LKAS button to turn the system off.

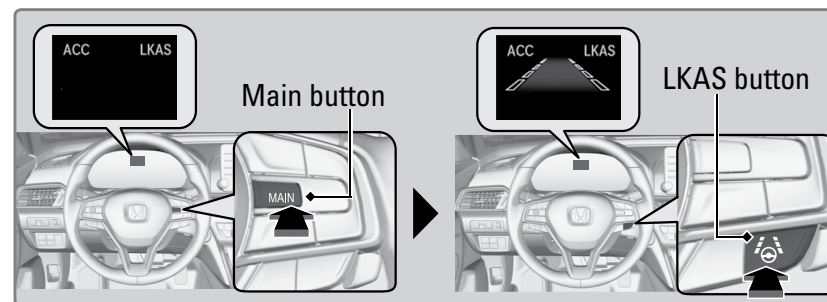

#### Important Safety Reminder

LKAS is for your convenience only. It is not a substitute for your vehicle control. The system does not work if you take your hands off the steering wheel or fail to steer the vehicle.


Do not place an object on the top of the instrument panel. It may reflect onto the windshield and prevent the system from detecting lane lines properly.

\*if equipped



## LaneWatch™\*

Check the passenger-side rear areas in the display when the right turn signal is activated.

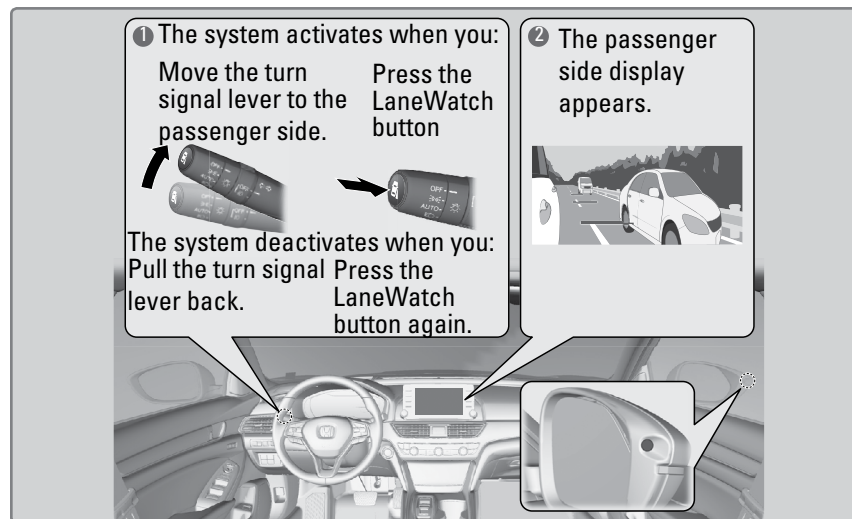

### ■ Activating LaneWatch

Activate the right turn signal. The LaneWatch display appears. Check the display for blind spots, and visually confirm that it is safe to change lanes.

You can also press the LaneWatch button on the end of the turn signal switch to view a constant real-time display. Press it again to turn the display off.

### ■ Changing Settings

Customize the display and how and when the display appears.

1. From the Home screen, select Settings.
2. Select Camera.
3. Select LaneWatch.
4. Select an option and make the preferred changes.
5. Press BACK to exit the menu.

#### Important Safety Reminder

Like all assistance systems, LaneWatch has limitations. Over-reliance on the system may result in a collision.

*\*Canadian models, if equipped*

## Road Departure Mitigation (RDM)\*

Alerts and helps to assist you if the system determines a possibility of your vehicle unintentionally crossing over detected lane markings and/or leaving the roadway altogether while driving between 45-90 mph (72-145km/h).


If your vehicle is getting too close to detected lane markings without a turn signal activated, a message appears in the multi-information display. Steering wheel torque and vibrations are applied to help your vehicle stay in the lane.

Braking may also be applied if the lane lines are solid and continuous.

If the system operates several times without detecting driver response, the system beeps to alert you.

### ■ Turning the System On or Off

Press the safety support switch, Roll the left selector wheel to the RDM symbol and push it.

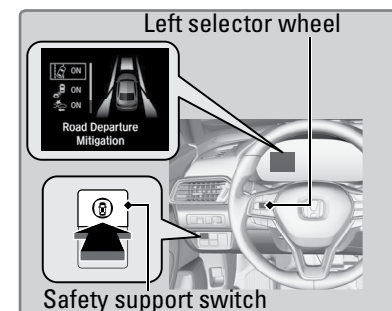

### ■ Changing Settings

Determine the warning timing. The vehicle must be in Park (P).

1. From the HOME screen, select Settings.
2. Select Vehicle.
3. Select Driver Assist System Setup.
4. Select Road Departure Mitigation Setting.
5. Select from the options.
6. Press Save.

#### Important Safety Reminder

The RDM system has limitations. Over-reliance on it may result in a collision. It is always your responsibility to keep your vehicle within the driving lane.

*\*if equipped*




**⚠ WARNING**

Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death.

Do not rely only on LaneWatch while driving. Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

**Traffic Sign Recognition System**

Reminds you of road sign information, such as the current speed limit, your vehicle has just passed through, showing it on the driver information interface and the head-up display \*.

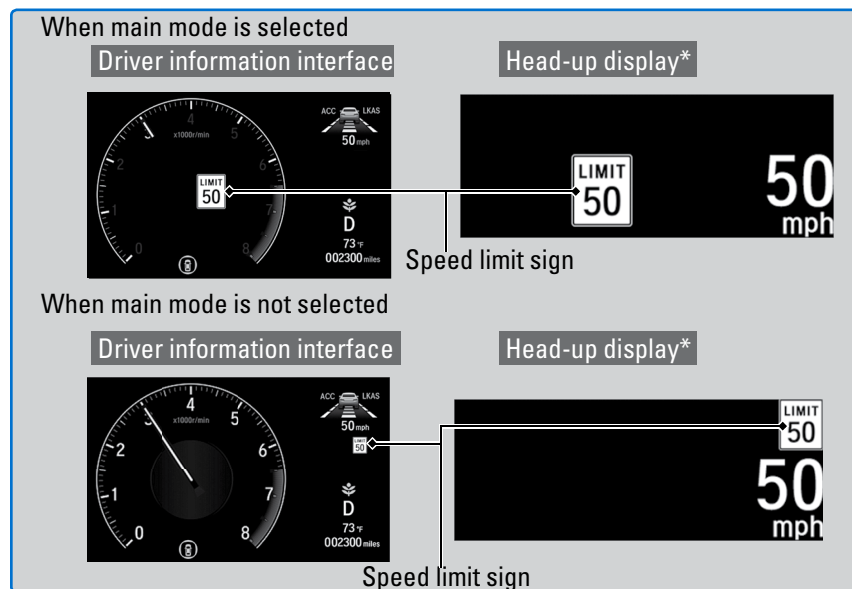

**Limitations:** Several vehicle and environmental conditions can cause the system not to recognize signs.

Not all signs may be displayed, but any signs posted on roadsides should not be ignored. The system does not work on the designated traffic signs of all the countries you travel, nor in all situations.

Do not rely too much on the system. Always drive at speeds appropriate for the road conditions.

For Further information about the limitations of this system, see your Owner's Manual at [owners.honda.com](http://owners.honda.com).

*\*if equipped*

**Collision Mitigation Braking System™ (CMBS™)\***


Can assist you when there is a possibility of your vehicle colliding with a vehicle or a pedestrian detected in front of yours.

The system can give you visual, audible, and tactile alerts when a potential collision is determined, and reduce your vehicle speed to help minimize collision severity when a collision is deemed unavoidable.

When a potential collision with a detected oncoming vehicle is determined, a BRAKE message appears, the head-up warning lights flash, a beep sounds, and the steering wheel vibrates.

The system activates when:

- The speed difference between your vehicle and a vehicle or pedestrian detected in front of you is about 3 mph (5 km/h) and over with a chance of a collision.
- Your vehicle speed is about 62 mph (100 km/h) or less and there is a chance of a collision with an oncoming detected vehicle or a pedestrian in front of you.

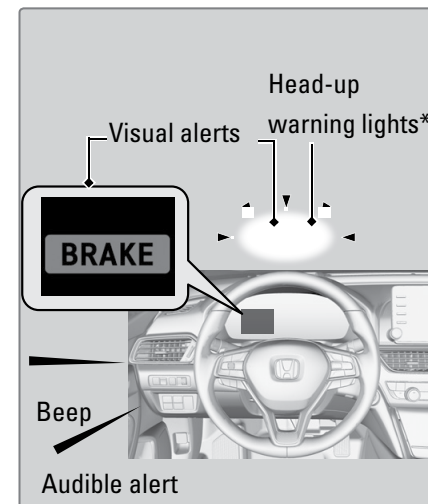**■ Alert Stages**

The system has three alert stages for a possible collision. Depending on the circumstances or CMBS settings, CMBS may not go through all of the stages before initiating the last stage.

**Stage 1:** Visual and audible warning

**Stage 2:** Visual and audible warning, light brake application

**Stage 3:** Visual and audible warning, strong brake application

*\*if equipped*

### Important Safety Reminder

CMBS is designed to reduce the severity of an unavoidable collision. It does not prevent collisions nor stop the vehicle automatically. It is still your responsibility to operate the brake pedal and steering wheel appropriately according to the driving conditions.


### ■ Changing Settings

Determine the warning timing. The vehicle must be in Park (P).

1. From the HOME screen, select Settings.
2. Select Vehicle.
3. Select Driver Assist System Setup.
4. Select Forward Collision Warning Distance.
5. Select Long, Normal, or Short.
6. Press BACK to exit the menu.



### ■ Turning CMBS On or Off

Press the safety support switch and Roll the left selector wheel to the CMBS symbol and select it. A beep sounds and a message appears in the multi-information display. The CMBS indicator appears when the system is off.

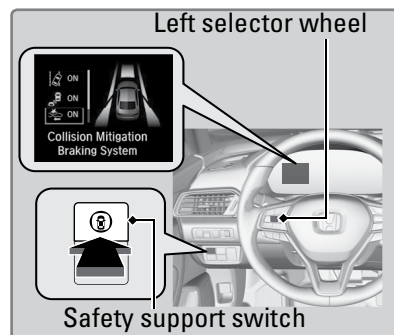


### Parking Sensor System\*

When the system senses an object when you are parking or backing up, indicators appear on the upper display and a series of beeps will sound.

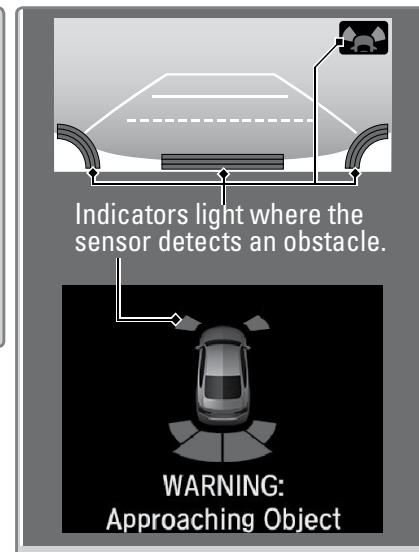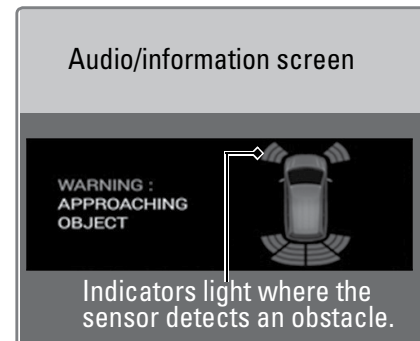


### ■ Turning the System On or Off

Press the parking sensor button to turn the system on or off. A green indicator light appears on the button when the system is on.

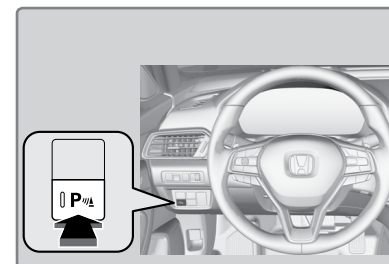

## Multi-View Rear Camera

When you shift into Reverse (R), a real-time image of the area behind your vehicle is shown in the upper display, along with helpful parking guidelines.

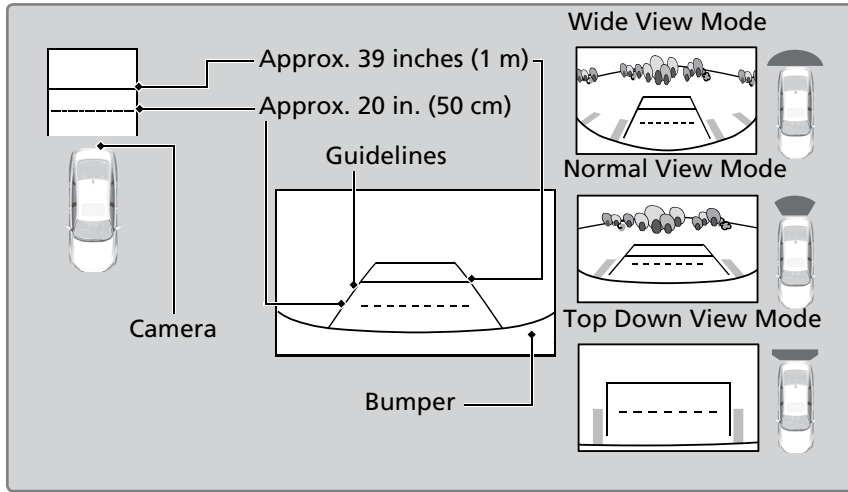

### Changing Camera Settings

Turn the guidelines on or off.

1. From the HOME screen, select Settings.
2. Select Camera.
3. Select Rear Camera.
4. Select an option.  
*Fixed Guidelines:* Guidelines appear when you shift into Reverse.  
*Dynamic Guidelines:* Guidelines move as you turn the steering wheel.
5. Select On or Off.
6. Press BACK to exit the menu.


*The rear camera view is restricted. You cannot see the corner ends of the bumper or what is underneath the bumper. Its unique lens also makes objects appear closer or farther than they actually are. Visually confirm that it is safe to drive before backing up. Certain conditions (such as weather, lighting, and high temperatures) may also restrict the rear view. Do not rely on the rearview display, which does not give you all information about conditions at the rear of your vehicle.*

## Blind Spot Information (BSI)\*

Alerts you to a detected vehicle in your left or right blind spot while driving 20 mph (32 km/h) or higher.

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear.

When your turn signal is on and a vehicle is detected, the blind spot indicator blinks and a beep sounds three times.

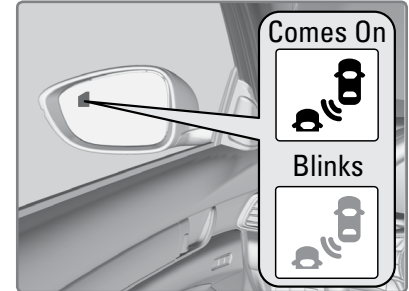

### Changing Settings

Determine the warning type, or turn the system off.

1. From the Home screen, select Settings.
2. Select Vehicle. The vehicle must be in Park (P).
3. Select Driver Assist System Setup.
4. Select Blind Spot Info.
5. Select an alert type, or turn the system off.
6. Press Save.

### Important Safety Reminder

Like all assistance systems, BSI has limitations. Over-reliance on the system may result in a collision. The system is for your convenience only.

### WARNING


Failure to visually confirm that it is safe to change lanes before doing so may result in a crash and serious injury or death. Do not rely only on the blind spot information system when changing lanes.

Always look in your mirrors, to either side of your vehicle, and behind you for other vehicles before changing lanes.

## Cross Traffic Monitor\*

Alerts you if a detected vehicle is approaching from a rear corner when your vehicle is in Reverse (R) at speeds of 3 mph (5 km/h) or lower, which can be helpful when backing out of parking spaces.

\*if equipped

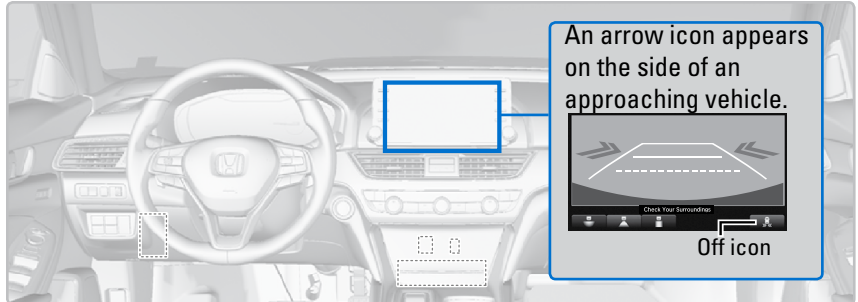

The system does not provide alerts for a vehicle that is moving away from your vehicle, and it may not detect pedestrians, bicycles, or stationary objects.

### ■ Turning the System On or Off

1. From the HOME screen, select Settings.
2. Select Settings.
3. Select Camera.
4. Select Cross Traffic Monitor.
5. Select On or Off.

## ⚠ CAUTION

This system cannot detect all approaching vehicles and may not detect an approaching vehicle at all.

Failure to visually confirm that it is safe to back up the vehicle before doing so may result in a collision.

Do not solely rely on the system when reversing; always also use your mirrors, and look behind and to the sides of your vehicle before reversing.

### Refueling

Use the proper fuel and refueling procedure to ensure the best performance and safety of your vehicle.

### ■ Fuel Information

**Use of unleaded gasoline of 87 octane or higher is recommended.**

- Honda recommends TOP TIER Detergent Gasoline where available.
- Do NOT use gasoline containing more than 15% ethanol.
- Do NOT use gasoline containing methanol.
- Do NOT use gasoline containing MMT.

## NOTICE

We recommend quality gasoline containing detergent additives that help prevent fuel system and engine deposits. In addition, in order to maintain good performance, fuel economy, and emissions control, we strongly recommend the use of gasoline that does NOT contain harmful manganese-based fuel additives such as MMT, if such gasoline is available.



### Improving Fuel Economy and Reducing CO2 Emissions

Achieving fuel economy and reducing CO2 emissions is dependent on several factors, including driving conditions, load weight, idling time, driving habits, and vehicle condition. Depending on these and other factors, you may not achieve the rated fuel economy of this vehicle.

### ■ How to Refuel

The fuel fill door is located at the left rear of the vehicle. Park next to the service pump that is most accessible.

1. Turn off the engine.
2. Unlock the fuel-fill door by pressing the Unlock side of the master door-lock switch.
3. Press the area indicated by the arrow in the image to open the fuel fill door. The vehicle must be unlocked for the fuel fill door to open.
4. Insert the filler nozzle fully. When the tank is full, the nozzle clicks off automatically. Wait about 5 seconds before removing the filler nozzle.
5. Close the fuel fill door.

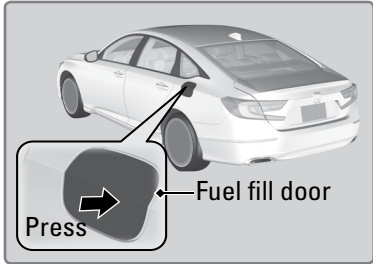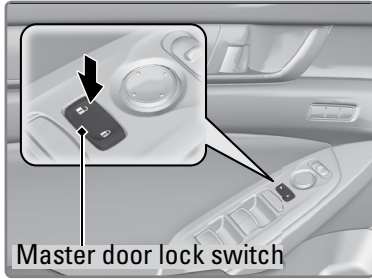

## ⚠ WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

Stop the engine, and keep heat, sparks, and flame away.

Handle fuel only outdoors.

Wipe up spills immediately.




# HANDLING THE UNEXPECTED

Learn about what to do in critical or emergency situations.

## Smart Entry Remote\* Battery Strength

If the battery life in your remote transmitter is weak, a beep sounds and the ENGINE START/STOP button indicator flashes. A message appears in the driver information interface with information on how to start the engine.



1. Touch the back of the remote transmitter to the ENGINE START/STOP button while the indicator is flashing.
2. With the brake pedal or clutch pedal pressed, press the ENGINE START/STOP button within 10 seconds.

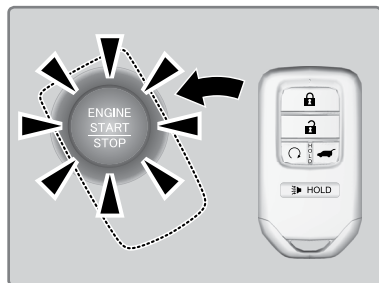

## Shift Lever\* Does Not Move


For CVT models, follow the procedure below if you cannot move the shift lever out of Park (P).

1. Set the parking brake.
2. Set the power mode to OFF.
3. Wrap a cloth around the tip of a small flat-tip screwdriver. Put it into the shift lock release slot (as shown) and remove the cover.
4. Insert the key into the shift lock release slot.

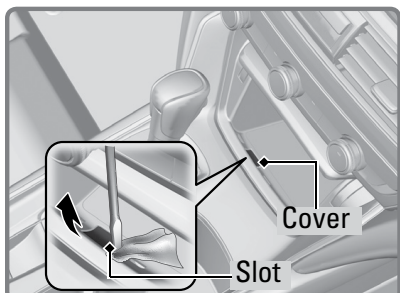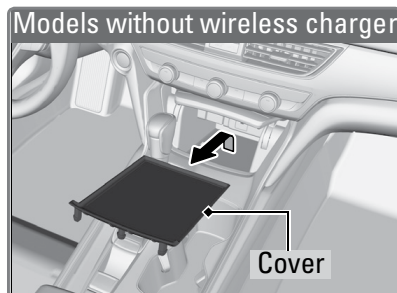

*\*if equipped*



5. While pushing the key down, press the shift lever release button and place the shift lever into Neutral (N). The lock is now released. Have the shift lever checked by a dealer as soon as possible.

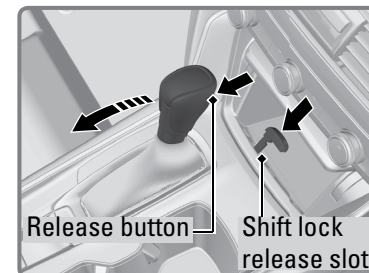



## Jump Starting

Turn off the power to electric devices, such as audio and lights. Turn off the engine, then open the hood.

1. Connect the first jumper cable to your vehicle's battery (+) terminal.
2. Connect the other end of the first jumper cable to the booster battery (+) terminal. Use a 12-volt booster battery only.
3. Connect the second jumper cable to the booster battery (-) terminal.

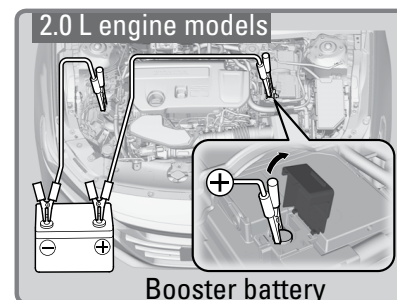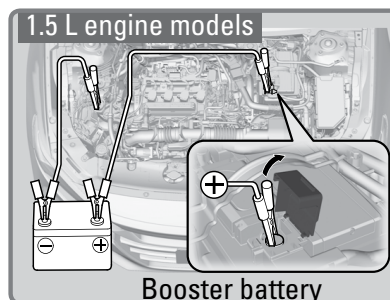

4. Connect the other end of the second jumper cable to the engine mounting bolt (as shown). Do not connect this jumper cable to any other part.
5. If your vehicle is connected to another vehicle, start the assisting vehicle's engine and increase its rpm slightly.
6. Attempt to start your vehicle's engine. If it turns over slowly, make sure that the jumper cables have good metal-to-metal contact.

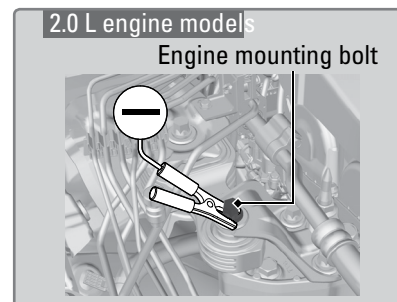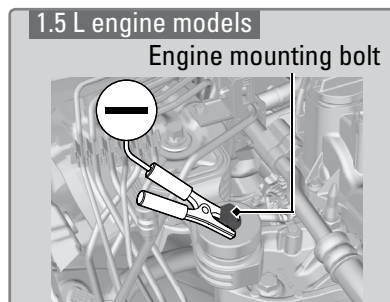



**⚠ WARNING**

A battery can explode if you do not follow the correct procedure, seriously injuring anyone nearby.

Keep all sparks, open flames, and smoking materials away from the battery.

**■ After the Engine Starts**


Once your vehicle's engine has started, remove the jumper cables in the following order:

1. Disconnect the jumper cable from your vehicle's ground.
2. Disconnect the other end of the jumper cable from the booster battery's (-) terminal.
3. Disconnect the jumper cable from your vehicle battery's (+) terminal.
4. Disconnect the other end of the jumper cable from the booster battery's (+) terminal.
5. Have your vehicle inspected by a nearby service station or a dealer.

**Overheating**

If the temperature gauge pointer is at the H mark, the engine suddenly loses power, the Engine Temperature Too Hot. Do Not Drive. Allow Engine To Cool. message appears on the driver information interface, or steam or spray comes out from under the hood, your engine is overheating.

1. Immediately park the vehicle in a safe place. Turn off all accessories and turn on the hazard warning lights.
2. *If steam or spray is not present:* Keep the engine running and open the hood.  
*If steam or spray is present:* Turn off the engine and wait until it subsides. Then open the hood.

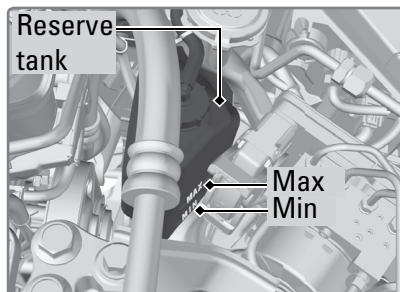

3. Check that the cooling fan is operating and stop the engine once the temperature gauge pointer goes down. If the cooling fan is not operating, immediately stop the engine.
4. Once the engine has cooled down, inspect the coolant level and check the cooling system components for leaks. If the coolant level in the reserve tank is low, add coolant until it reaches the MAX mark. If there is no coolant in the reserve tank, make sure the radiator is cool, then cover the radiator cap

with a heavy cloth and open the cap. If necessary, add coolant up to the base of the filler neck and put the cap back on.

Once the engine has cooled sufficiently, restart it and check the temperature gauge. If the temperature gauge needle has gone down, resume driving. If it has not gone down, contact a dealer for repairs.

**⚠ WARNING**

Steam and spray from an overheated engine can seriously scald you.

Do not open the hood if steam is coming out.

**⚠ WARNING**

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

**NOTICE**

Continuing to drive with the temperature gauge pointer at the H mark may damage the engine.


**Emergency Engine Stop\***

The ENGINE START/STOP button may be used to stop the engine due to an emergency situation even while driving. If you must stop the engine, choose one of the following operations:

- Press and hold the ENGINE START/STOP button for two seconds, or
- Firmly press the ENGINE START/STOP button three times.

The steering wheel will not lock. However, because turning off the power system disables the power assist the power system provides to the steering and braking systems, it will require significantly more physical effort and time to steer and slow the vehicle. Use both feet on the brake

pedal to slow down the vehicle and stop immediately in a safe place. With manual transmission models you can also downshift the transmission to utilize engine braking.

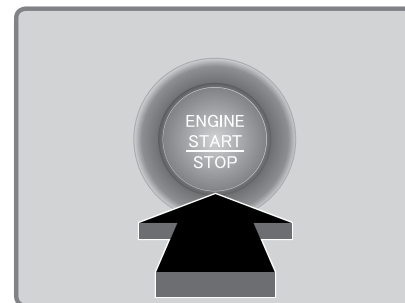

*\*if equipped*

**Automatic transmission models:** The transmission automatically changes to P after the vehicle comes to a complete stop. Then, the power mode changes to VEHICLE OFF.

**CVT models:** The power mode is in ACCESSORY when the engine is stopped. To change the mode to VEHICLE OFF, put the transmission into P after the vehicle comes to a complete stop.

**Canadian CVT models:** Then press the ENGINE START/STOP button twice without depressing the brake pedal.

**Manual transmission models:** The power mode changes to VEHICLE OFF.

### NOTICE

Do not press the button while driving unless it is absolutely necessary for the engine to be switched off.

### Emergency Towing

Call a professional towing service if you need to tow your vehicle.

Flat bed equipment: The operator loads your vehicle on the back of a truck.

**This is the best way to transport your vehicle.**

Wheel lift equipment: The tow truck uses two pivoting arms that go under the front tires and lift them off the ground. The rear tires remain on the ground.

**This is an acceptable way to tow your vehicle.**

### NOTICE

Trying to lift or tow your vehicle by the bumpers will cause serious damage. The bumpers are not designed to support the vehicle's weight.

Improper towing such as towing behind a motorhome or other motor vehicle can damage CVT and automatic transmissions.


### Tire Pressure Monitoring System (TPMS)

Monitors the tire pressure while you are driving.

If your vehicle's tire pressure becomes significantly low, the low tire pressure indicator comes on and a message appears on the driver information interface.

#### What to Do

Stop your vehicle in a safe place. Check the tire pressure and adjust the pressure to the specified level on the label on the driver's doorjamb.

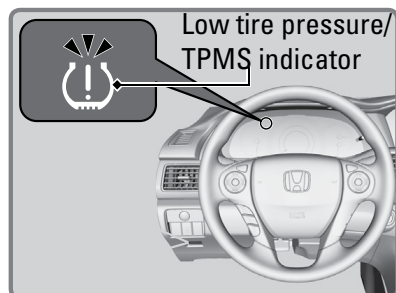

### TPMS Calibration

Any time you inflate, change, or rotate one or more of the tires, you must recalibrate the system. The calibration process requires approximately 30 minutes of cumulative driving at speeds between 30–60 mph (48–97 km/h). The vehicle must be stopped to begin calibration and the process finishes automatically.


#### Models with color audio

Use the selector knob and the audio/information screen to calibrate the system.

1. Press MENU/CLOCK
2. Select Settings, then Vehicle Settings
3. Select TPMS Calibration
4. Select Calibrate

If the Calibration failed to start, message appears, repeat steps 3-4

The calibration process finishes automatically.

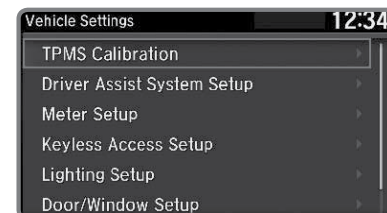


#### Models with Display Audio

Use the touchscreen to make and enter selections.

1. Press HOME.
2. Select Settings, then Vehicle
3. Select TPMS Calibration
4. Select Calibrate.

If the Calibration failed to start, message appears, repeat steps 3-4

The calibration process finishes automatically.

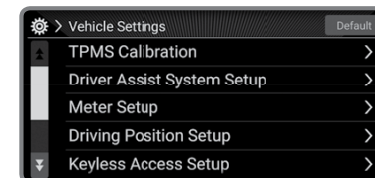

### NOTICE

Driving on an extremely underinflated tire can cause it to overheat. An overheated tire can fail. Always inflate your tires to the specified pressure.

If the low pressure indicator remains on after recalibration, it may indicate a fault in the system. Have your vehicle checked by a dealer.

*\*if equipped*

## ■ Tire Pressure Monitoring System (TPMS) - Required Federal Explanation

### U.S. models

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label.

(If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS)



that illuminates a low tire pressure telltale when one or more of your tires is significantly underinflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly underinflated tire causes the tire to overheat and can lead to tire failure. Underinflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if underinflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.



## Changing a Flat Tire

If a tire goes flat while driving, grasp the steering wheel firmly and brake gradually to reduce speed. Then stop in a safe place. Replace the flat tire with the compact spare tire. Go to a dealer as soon as possible to have the full-size tire repaired or replaced.


### ■ Getting Ready to Change the Tire

Park the vehicle on a firm, level, and non-slippery surface. Apply the parking brake, shift to Park (P) for CVT models or Reverse (R) for Manual Transmission models, and turn the vehicle off. Turn on the hazard warning lights.

1. Open the trunk floor lid.
2. Take the tool case out of the trunk. Take the jack and wheel nut wrench out of the tool case.
3. Unscrew the wing bolt, then remove the spacer cone. Remove the spare tire.

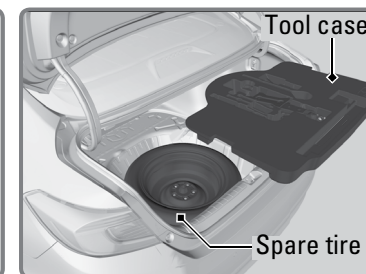
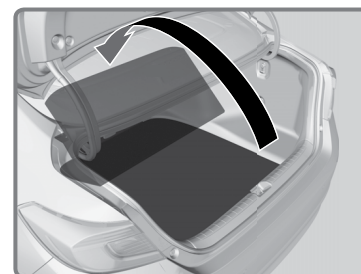


4. Place the compact spare tire (wheel side up) under the vehicle body, near the tire that needs to be replaced.
5. Loosen each wheel nut about one turn using the wheel nut wrench.

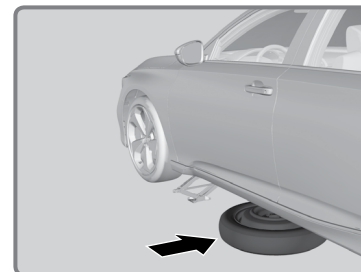


## ■ Setting Up the Jack

1. Place the jack under the jacking point closest to the tire to be changed.
2. Turn the end bracket clockwise (as shown in the image) until the top of the jack contacts the jacking point. Make sure that the jacking point tab is resting in the jack notch.

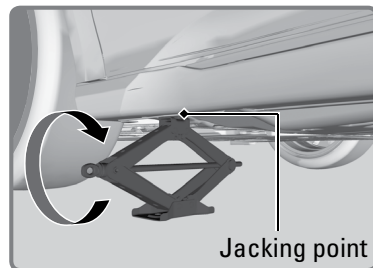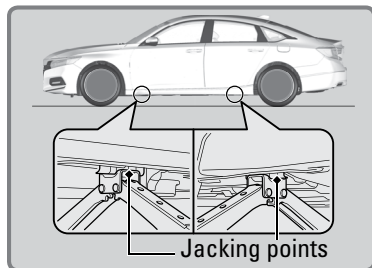

3. Raise the vehicle, using the jack handle bar and the jack handle, until the tire is off the ground.

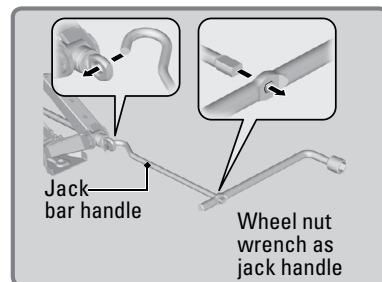

### ⚠ WARNING

The vehicle can easily roll off the jack, seriously injuring anyone underneath.



Follow the directions for changing a tire exactly, and never get under the vehicle when it is supported only by the jack.

The following instructions must be followed to use the jack safely:

- Do not use the jack with people or luggage in the vehicle.
- Use the jack provided in your vehicle. Other jacks may not support the weight ("load") or fit the jacking point.
- Do not use while the engine is running.
- Use only where the ground is firm and level.
- Use only at the jacking points.
- Do not get in the vehicle while using the jack.
- Do not put anything on top of or underneath the jack.


## ■ Replacing the Flat Tire

1. Remove the wheel nuts and flat tire.
2. Mount the compact spare tire. Replace the wheel nuts and lightly tighten them.
3. Lower the vehicle and remove the jack. Tighten the wheel nuts in the order indicated in the image. Go around, tightening the nuts, two to three times in this order. Do not overtighten the wheel nuts.  
If you drive with the spare tire installed, the low tire pressure/TPMS indicator appears. The indicator stays on until a regular tire is installed and the TPMS system is recalibrated.

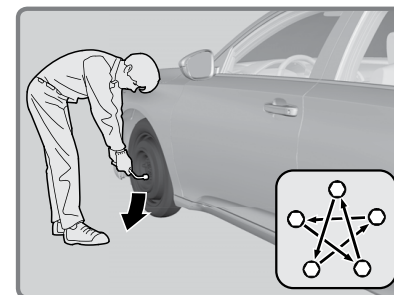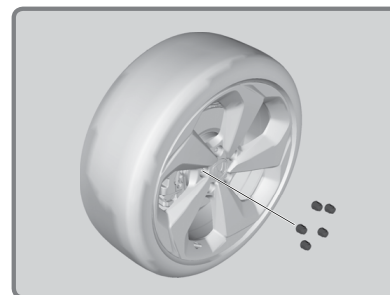

## ■ Storing the Flat Tire

1. Remove the center cap.
2. Open the trunk. Place the flat tire face down in the spare tire well.
3. Remove the spacer cone from the wing bolt, flip it over, and insert it back on the bolt. Secure the flat tire with the wing bolt.
4. Securely put the jack and wheel nut wrench back in the tool case. Store the case in the trunk.

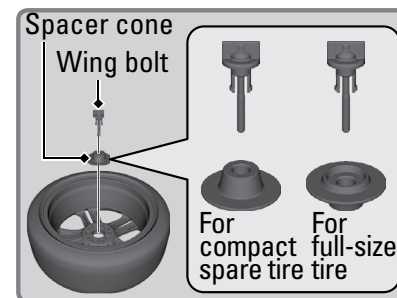

### ⚠ WARNING

Loose items can fly around the interior in a crash and can seriously injure the occupants.

Store the wheel, jack, and tools securely before driving.




## Fuse Locations

If any electrical devices are not working, turn the vehicle off and check to see if any applicable fuse is blown. Fuse locations are shown on the fuse box cover. Locate the fuse in question by the fuse number and box cover number. Refer to the Owner's Manual at [owners.honda.com](http://owners.honda.com) for a complete fuse chart.


### ■ Engine Compartment Fuse Box

Located under the hood near the brake fluid reservoir. Push the tabs to open the box.

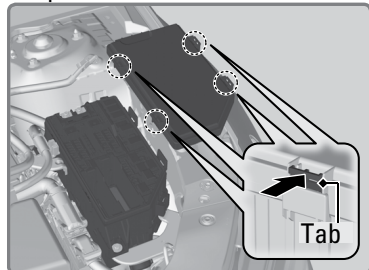



### ■ Interior Fuse Box

Located under the dashboard on the driver's side.

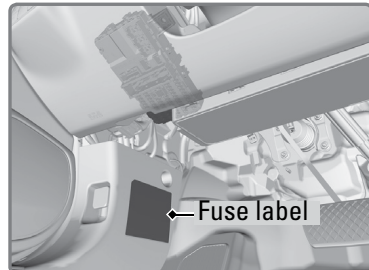

### ■ Inspecting and Changing Fuses

1. Turn the vehicle off, including all lights and accessories.
2. Remove the engine compartment fuse box cover.
3. Check the large fuse in the engine compartment.  
If the fuse is blown, use a Phillips-head screwdriver to remove the screws and replace the fuse with a new one. Reinstall the screws.
4. Inspect the small fuses in the engine compartment and the vehicle interior.  
If there is a blown fuse, remove it with the fuse puller and replace it with a new one.

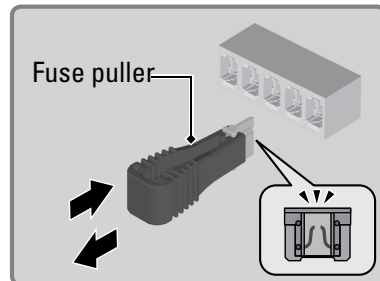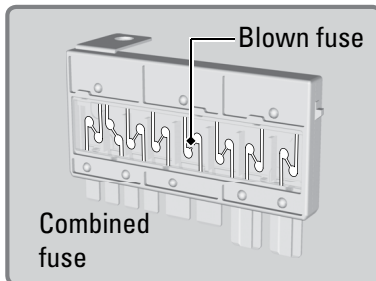

#### NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chances of damaging the electrical system.

*\*if equipped*

## MAINTENANCE

Learn about basic maintenance that you can perform on the vehicle yourself, as well as information about how to best maintain the vehicle.

### Safety Precautions

Some of the most important safety precautions are listed below; however, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

#### ■ Maintenance Safety

- To reduce the possibility of fire or explosion, keep cigarettes, sparks, and flames away from the battery and all fuel-related parts.
- Never leave rags, towels, or other flammable objects under the hood. Heat from the engine and exhaust can ignite them, causing a fire.
- To clean parts, use a commercially available degreaser or parts cleaner, not gasoline.
- Wear eye protection and protective clothing when working with the battery or compressed air.
- Do not run the engine in confined spaces where carbon monoxide gas can accumulate.

#### ■ Vehicle Safety

- The vehicle must be stationary and parked on level ground with the parking brake set and the engine off.
- Be aware that hot parts can burn you.
- Be aware that moving parts can injure you.

#### ⚠ WARNING

Improperly maintaining this vehicle or failing to correct a problem before driving can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations according to the schedules in this guide.

#### ⚠ WARNING


Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this guide.



## Maintenance Minder™

When maintenance is due, the Maintenance Minder indicator comes on and a message appears on the display every time you turn the vehicle on. Press the left selector wheel to change displays.

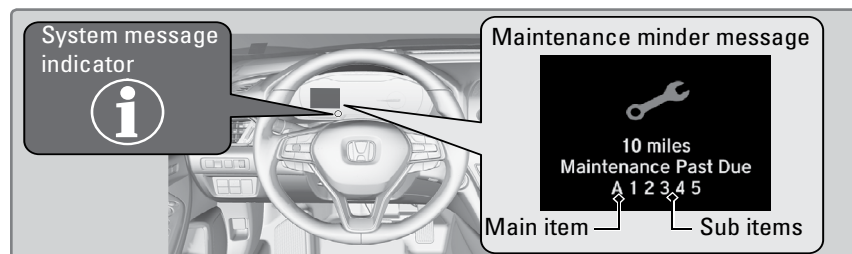

- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

### U.S. models

**Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.**

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the display.

## Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

### U.S. models

CODE	Maintenance Main Items
A	Replace engine oil* <sup>1</sup>
B	Replace engine oil* <sup>1</sup> and oil filter Inspect front and rear brakes Inspect tie rod ends, steering gearbox, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (Including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system # Inspect fuel lines and connections #

CODE	Maintenance Sub Items
1	Rotate tires
2	Replace air cleaner element* <sup>2</sup> Replace dust and pollen filter* <sup>3</sup> Inspect drive belt
3	Replace transmission fluid* <sup>4</sup>
4	Replace spark plugs Inspect valve clearance
5	Replace engine coolant
7	Replace brake fluid* <sup>5</sup>

#: See information on maintenance and emissions warranty on your Warranty CD.

- If a Maintenance Minder message does not appear more than 12 months after the display is reset, change the engine oil every year.
- If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).
- If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).
- Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km).
- If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

Canadian models

CODE	Maintenance Main Items
A	Replace engine oil* <sup>1</sup>
0	Replace engine oil* <sup>1</sup> and oil filter


CODE	Maintenance Sub Items
1	Rotate tires
2	Replace air cleaner element* <sup>2</sup> Replace dust and pollen filter* <sup>3</sup> Inspect drive belt
3	Replace transmission fluid* <sup>4</sup>
4	Replace spark plugs Inspect valve clearance
5	Replace engine coolant
7	Replace brake fluid* <sup>5</sup>
9	Service front and rear brakes Inspect tie rod ends, steering gear box, and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines (including ABS/VSA) Inspect all fluid levels and condition of fluids Inspect exhaust system # Inspect fuel lines and connections #

#: See information on maintenance and emissions warranty on your Warranty CD.


1. If a Maintenance Minder message does not appear more than 12 months after the display is reset,change the engine oil every year.
2. If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).
3. If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).
4. Driving in mountainous areas at very low vehicle speeds results in higher transmission temperatures. This requires transmission fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 25,000 miles (40,000 km).
5. If a Maintenance Minder message does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

Under the Hood

1.5 L engine models

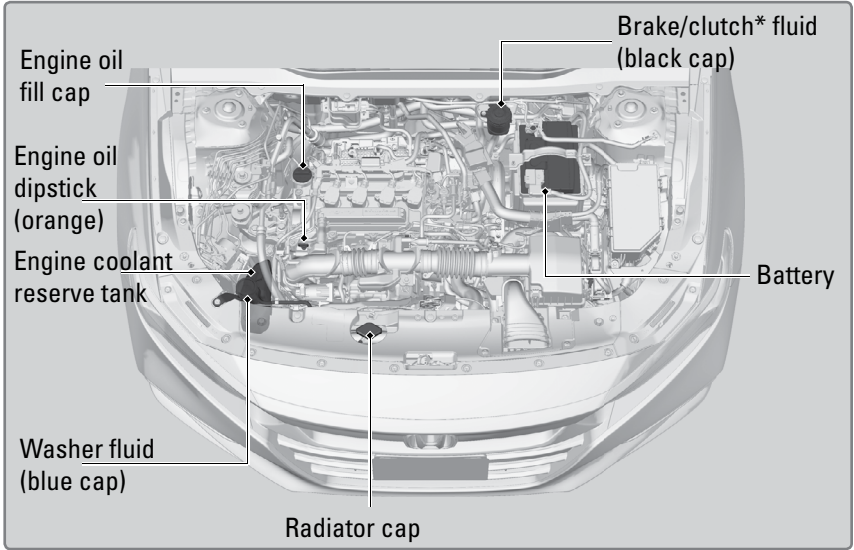



2.0 L engine models

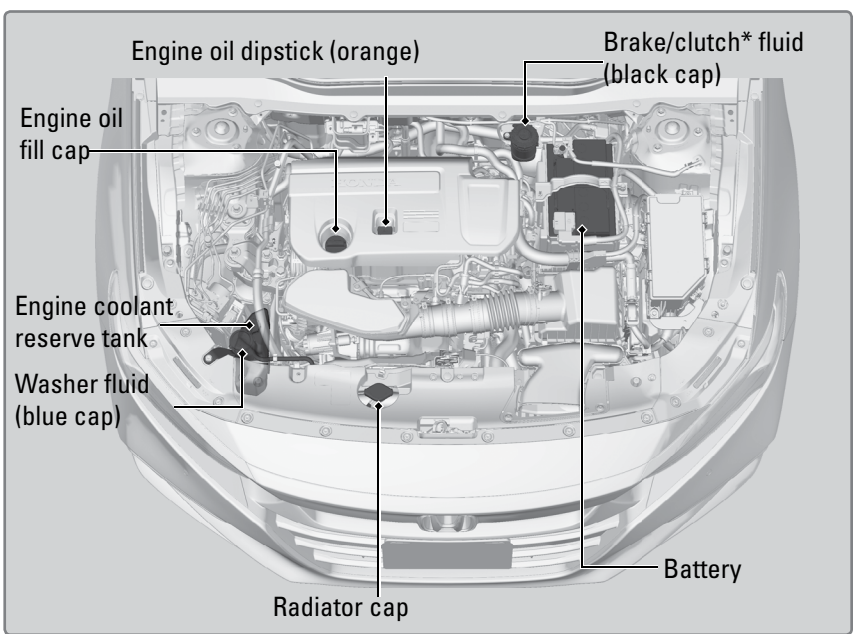

\*if equipped


## Opening the Hood

1. Park the vehicle on a level surface and set the parking brake.
2. Pull the hood release handle under the lower left corner of the dashboard.
3. Push up the hood latch lever in the center of the hood to release the lock mechanism, then open the hood.

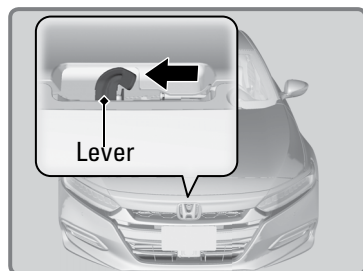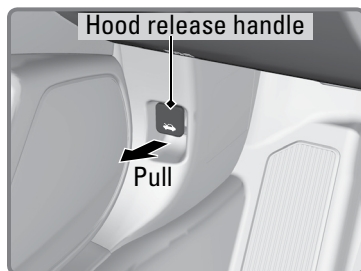

Remove the support rod from the clamp using the grip. Mount the support rod in the hood.

When closing, remove the support rod, and stow it in the clamp, then gently lower the hood. Remove your hand at a height of approximately 12 inches (30 cm) and let the hood close.

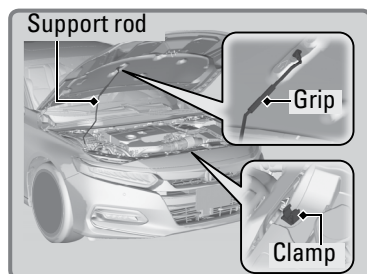

### 2.0-L engine models

Do not press the engine cover forcibly. This may damage the engine cover and component parts.

## NOTICE



Do not open the hood when the wiper arms are raised. The hood will strike the wipers and may damage either the hood or the wipers.

## Engine Oil



Park the vehicle on level ground and wait approximately three minutes after turning the engine off before you check the oil.

## Checking the Oil

1. Remove the dipstick (orange).
2. Wipe the dipstick with a clean cloth or paper towel.

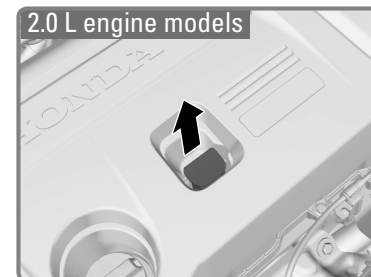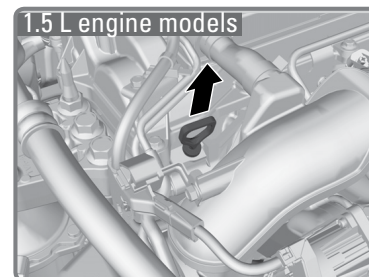

3. Insert the dipstick back all the way into its hole.
4. Remove the dipstick again and check the level. It should be between the upper and lower marks. Add oil if necessary.

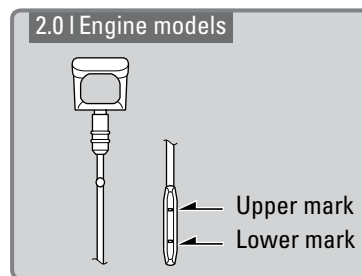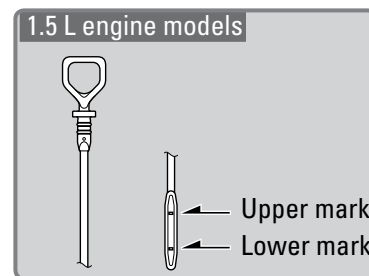


## Recommended Engine Oil

- **Honda Genuine Motor Oil**
- **Premium-grade 0W-20 detergent oil with an API Certification Seal on the container**

This seal indicates the oil is energy conserving and that it meets the American Petroleum Institute's latest requirements.



Use Honda Genuine Motor Oil or another commercial engine oil of suitable viscosity for the ambient temperature as shown.

You may also use synthetic motor oil if it is labeled with the API Certification Seal and is of the specified viscosity grade.

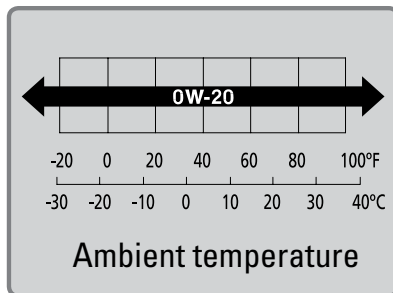

## Adding Oil

1. Unscrew and remove the engine oil fill cap.
2. Add oil slowly.
3. Reinstall the engine oil fill cap and tighten it securely.
4. Wait for three minutes and recheck the engine oil dipstick.

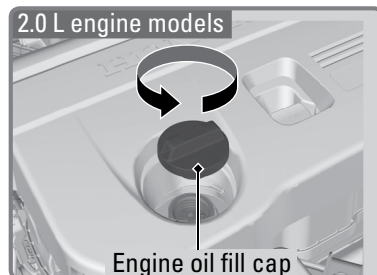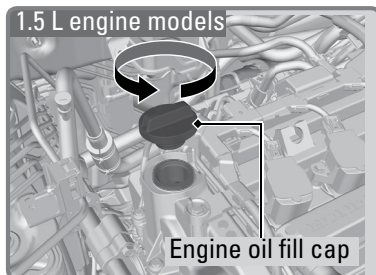


## NOTICE

Do not fill the engine oil above the upper mark. Overfilling the engine oil can result in leaks and engine damage.

## Resetting the Engine Oil Life

Roll the left selector wheel to choose an item, then press to select the item. If you change or replace the vehicle's engine oil yourself, you must reset the engine oil life.

1. Press the Home button.
2. Roll to display the wrench, then press to select.
3. Press to enter the reset mode.
4. Roll to select an item, or to select all items, then press.
5. Press to reset the selected item.

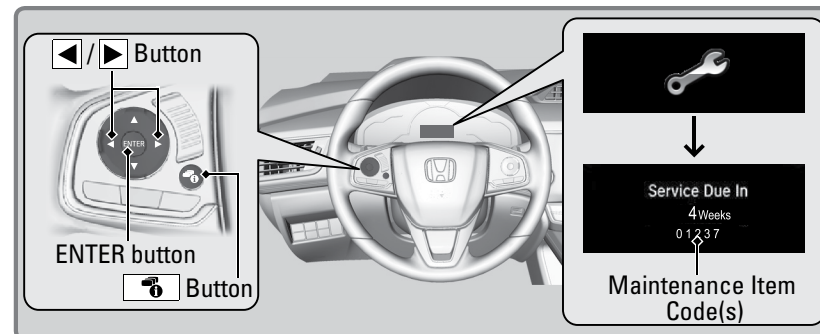

## NOTICE


Failure to reset the Maintenance Minder display after a maintenance service results in the system showing incorrect maintenance intervals, which can lead to serious mechanical problems.

## Engine Coolant

Park the vehicle on level ground. Check the reserve tank and the coolant level in the radiator. **We recommend Honda Long Life Antifreeze/Coolant Type 2.**

## Checking the Reserve Tank

1. Check the amount of coolant in the reserve tank.
2. If the coolant level is below the MIN mark, add the specified coolant until it reaches the MAX mark.
3. Inspect the cooling system for leaks.

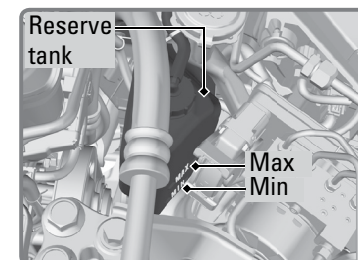



## NOTICE

Pour the fluid slowly and carefully so you do not spill any. Clean up any spills immediately; they can damage components in the engine compartment.



## ■ Adding Coolant

1. Make sure the engine and radiator are cool.
2. Turn the radiator cap counterclockwise and relieve any pressure in the coolant system. Do not push the cap down when turning.
3. Push down and turn the radiator cap counterclockwise to remove it.
4. The coolant level should be up to the base of the filler neck. Add coolant if it is low.
5. Put the radiator cap back on, and tighten it fully.
6. Pour coolant into the reserve tank until it reaches the MAX mark. Put the cap back on the reserve tank.

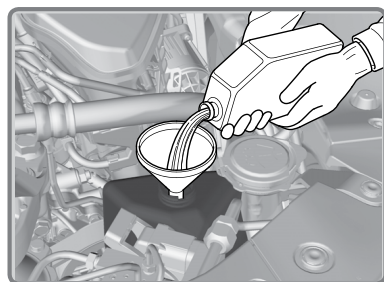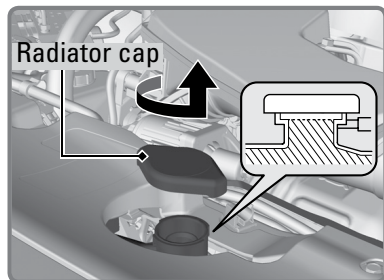

### ⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

### NOTICE

If temperatures consistently below  $-22^{\circ}\text{F}$  ( $-30^{\circ}\text{C}$ ) are expected, the coolant mixture should be changed to a higher concentration. Consult a dealer for details for more information.


## Clutch\*/Brake Fluid

The fluid level should be between the MIN and MAX marks on the side of the reserve tank. **We recommend using Honda Heavy Duty Brake Fluid DOT 3.**

The brake fluid reserve tank is also used for your vehicle's clutch fluid. As long as you keep the brake fluid level as instructed above, there is no need for checking the clutch fluid level.

Pour the fluid carefully.

If the fluid level is at or below the MIN mark, have a dealer inspect for leaks or worn brake pads as soon as possible.

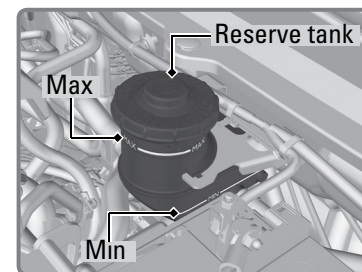


### NOTICE

Brake fluid marked DOT 5 is not compatible with your vehicle's braking system and can cause extensive damage.

## Checking the Battery

Check the battery terminals for corrosion monthly.

The battery condition is monitored by a sensor on the negative terminal. If there is a problem with this sensor, the driver information interface will display a warning message. Have your vehicle checked by a dealer.

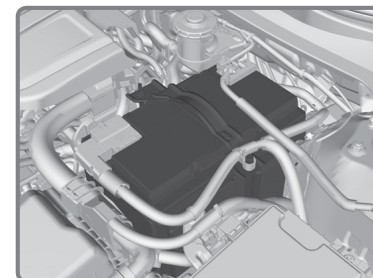

### ⚠ WARNING

The battery gives off explosive hydrogen gas during normal operation.

A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

When conducting any battery maintenance, wear protective clothing and a face shield, or have a skilled technician do it.

**WARNING:** Battery posts, terminals, and related accessories contain lead and lead compounds. **Wash your hands after handling.**

*\*if equipped*




## Window Washer Fluid

If the washer fluid level is low, fill the washer reservoir. Pour the washer fluid carefully. Do not overflow the reservoir.

### Canadian models

If the washer fluid level is low, a message appears on the driver information interface.

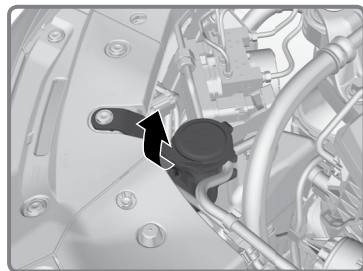



### NOTICE

Do not use engine antifreeze or a vinegar/water solution in the windshield washer reservoir. Antifreeze can damage your vehicle's paint. A vinegar/water solution can damage the windshield washer pump.



## Changing Wiper Blades

If the wiper blades leave streaks across the windshield, try cleaning them first with a paper towel or soft cloth and wiper fluid. If the wiper blade rubber has deteriorated, you should change the wiper blades.



1. Lift the driver side wiper arm first, then the passenger side.
2. Press and hold the tab, then slide the holder from the wiper arm.

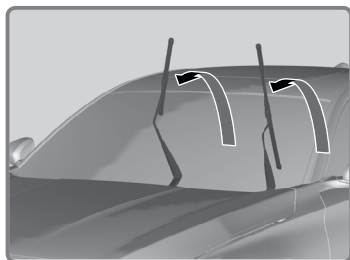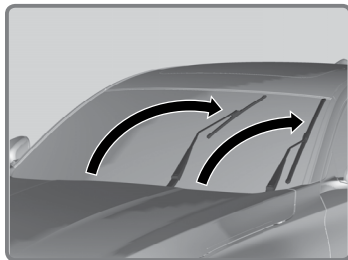

3. Slide the wiper blade out from its holder by pulling the tabbed end out.
4. Remove the retainers from the rubber blade that has been removed and mount to a new rubber blade. Correctly align the rubber protrusion and the retainer grooves.

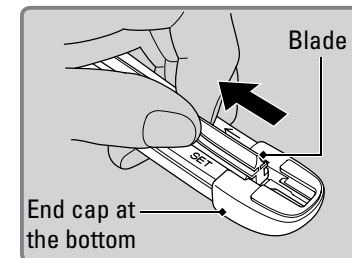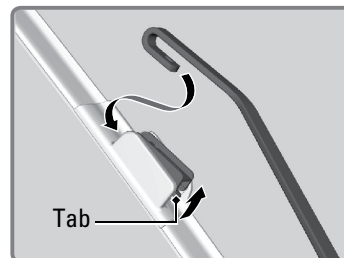

5. Slide the new wiper blade onto the holder from the bottom end. The tab on the holder should fit in the indent of the wiper blade.
6. Slide the wiper holder onto the wiper arm, then push down the lock tab.
7. Lower the passenger side wiper arm first, then the driver side.

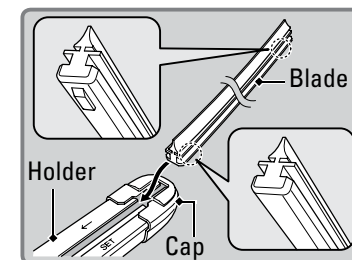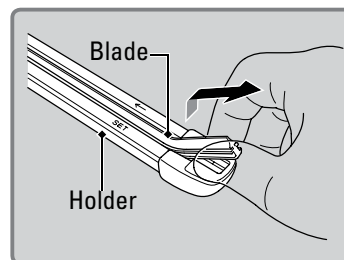

### NOTICE

Avoid dropping the wiper arm, as it may damage the windshield.

## Tire Information

To safely operate your vehicle, your tires must be of the proper type and size, in good condition with adequate tread, and properly inflated.

### Inflation Guidelines

- Properly inflated tires provide the best combination of handling, tread life, and comfort. Refer to the driver's doorjamb label or the specifications (see page 151) for the specified pressure.
- Underinflated tires wear unevenly, adversely affect handling and fuel economy, and are more likely to fail from overheating.
- Overinflated tires make your vehicle ride harshly, are more prone to road hazards, and wear unevenly.
- Every day before you drive, look at each of the tires. If one looks lower than the others, check the pressure with a tire gauge.


- Measure the air pressure when tires are cold. This means the vehicle has been parked for at least 3 hours or driven less than 1 mile (1.6 km). If necessary, add or release air until the specified pressure is reached, and then calibrate the system (see page 124). If checked when hot, tire pressure can be as much as 4–6 psi (30–40 kPa, 0.3–0.5 kgf/cm<sup>2</sup>) higher than checked when cold.
- At least once a month or before long trips, use a gauge to measure the pressure in all tires, including the spare. Even tires in good condition can lose 1–2 psi (10–20 kPa, 0.1–0.2 kgf/cm<sup>2</sup>) per month.

### ■ Inspection Guidelines

- Every time you inflate the tires, check for the following:
- Any damage to tires, including bumps, bulges, cuts, splits, or cracks in the side or tread. Remove any foreign objects and inspect for air leaks. Replace tires if you see fabric or cord.
- Uneven or excessive tread wear. Have a dealer check the wheel alignment.
- Cracks or other damage around the valve stems.

### ■ Wear Indicators

The groove where the wear indicator is located is 1/16 inch (1.6 mm) shallower than elsewhere on the tire. If the tread has worn so low that the indicator is exposed, replace the tire. **Worn out tires have poor traction on wet roads.**

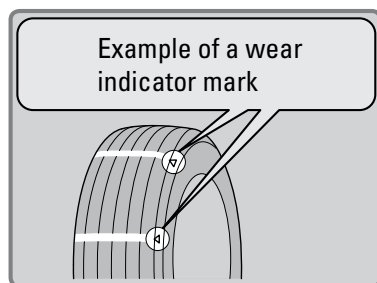


### ⚠ WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

### ■ Tire and Loading Information Label

The label attached to the driver's doorjamb provides necessary tire and loading information.

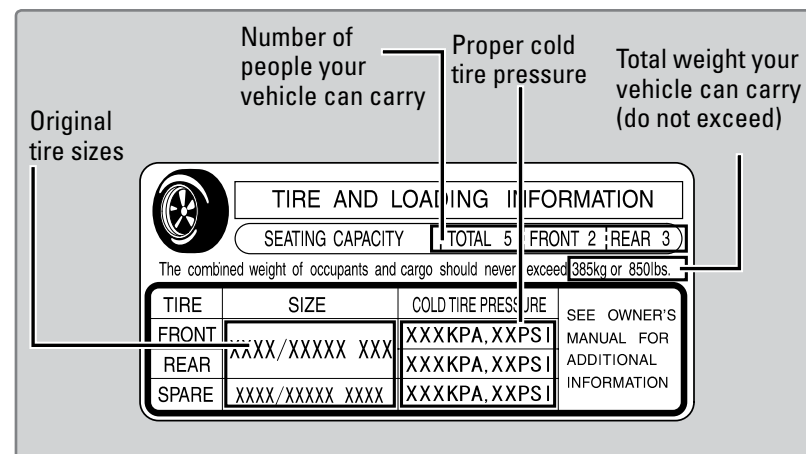

### ■ Tire and Wheel Replacement

Replace your tires with radials of the same size, load range, speed rating, and maximum cold tire pressure rating (as shown on the tire's sidewall). Using tires of a different size or construction can cause certain vehicle systems to work incorrectly. It is best to replace all four tires at the same time. If that isn't possible, replace the front or rear tires in pairs.

If you change or replace a wheel, make sure that the wheel's specifications match those of the original wheels.

### ⚠ WARNING

Installing improper tires on your vehicle can affect handling and stability.

This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in the Owner's Manual.

### ■ Tire Service Life

The life of your tires is dependent on many factors, including driving habits, road conditions, vehicle loading, inflation pressure, maintenance history, speed, and environmental conditions (even when the tires are not in use).

In addition to regular inspections and inflation pressure maintenance, it is recommended that you have annual inspections performed once the tires reach five years old. All tires, including the spare, should be removed from service after 10 years from the date of manufacture, regardless of their condition or state of wear.

## Winter Tires

If driving on snowy or frozen roads, mount all season tires marked “M+S”, snow tires, or tire chains; reduce speed and maintain sufficient distance between vehicles when driving. For winter tires, select the size and load ranges that are the same as the original tires and mount them to all four wheels.

## Tire Chains

Install tire chains on the front tires only. Because your vehicle has limited tire clearance, we strongly recommend using the following chains:

### For 215/50R17 tires:

Cable-type: SCC Radial Chain SC1036

### For 235/40R19 tires:

Chains not recommended.

Mount chains as tightly as you can and make sure that they do not touch the brake lines or suspension.

## NOTICE

Traction devices that are the wrong size or improperly installed can damage your vehicle’s brake lines, suspension, body, and wheels. Stop driving if they are hitting any part of the vehicle.

## WARNING

Using the wrong chains or not properly installing chains can damage the brake lines and cause a crash in which you can be seriously injured or killed.

Follow all instructions in this guide regarding the selection and use of tire chains.

## Tire Labeling

The tires that came on your vehicle have a number of markings. Those you should be aware of are described below.

Here is an example of what each marking means:

### P215/55R17 94V

P: vehicle type (passenger vehicle)

215: tire width in millimeters


55: aspect ratio (tire section height as a percentage of its width)

R: tire construction code (radial)

17: rim diameter in inches

94: load index (code indicating maximum load tire can carry)

V: speed symbol (code indicating maximum speed rating)

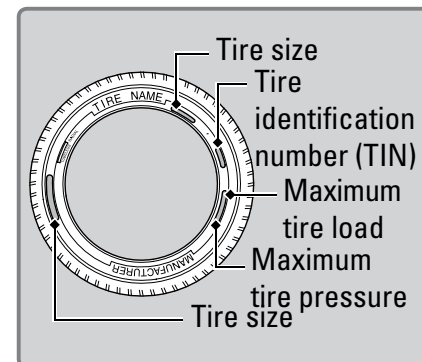

## Tire Identification Number (TIN)

The tire identification number (TIN) is a group of numbers and letters that look like the example shown. TIN is located on the sidewall of the tire.

DOT B97R FW6X 2209

DOT: This indicates that the tire meets all requirements of the U.S. Department of Transportation.

B97R: Manufacturer’s identification mark

FW6X: Tire type code

22 09: Date of Transportation

Year  
Week

## Glossary of Tire Terminology

**Cold Tire Pressure** – The tire air pressure when the vehicle has been parked for at least three hours or driven less than 1 mile (1.6 km).

**Load Rating** – The maximum load that a tire is rated to carry for a given inflation pressure.

**Maximum Inflation Pressure** – The maximum tire air pressure that the tire can hold.

**Maximum Load Rating** – The load rating for a tire at the maximum permissible inflation pressure for that tire.

**Recommended Inflation Pressure** – The cold tire inflation pressure recommended by the manufacturer.

**Treadwear Indicators (TWI)** – The projections within the principal grooves designed to give a visual indication of the degrees of wear of the tread.

DOT Tire Quality Grading

The tires on your vehicle meet all U.S. Federal Safety Requirements. All tires are also graded for treadwear, traction, and temperature performance according to Department of Transportation (DOT) standards. The following explains these gradings.

■ Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200

Traction AA

Temperature A

All passenger car tires must conform to Federal Safety Requirements in addition to these grades.

■ Treadwear

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices, and differences in road characteristics and climate.

■ Traction

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire’s ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

**WARNING:** The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics.

■ Temperature

The temperature grades are A (the highest), B, and C, representing the tire’s resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

**WARNING:** The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Air Conditioning

To ensure proper and safe operation, the Society of Automotive Engineers (SAE J2845) recommends that the refrigerant system only be serviced by trained and certified technicians.

Never repair or replace the air conditioning evaporator (cooling coil) with one removed from a used or salvaged vehicle.

New replacement mobile air conditioning evaporators must be certified (and labeled) as meeting SAE Standard J2842.

NOTICE

Vented refrigerant is harmful to the environment. To avoid refrigerant from venting, never replace the evaporator with one removed from a used or salvaged vehicle. Refrigerant in your vehicle’s air conditioning system is flammable and can be ignited during servicing if proper procedures are not followed.

Testing of Readiness Codes

Your vehicle has readiness codes as part of the onboard self-diagnostic system. Some states use these codes for testing to verify whether your vehicle's emissions components are working properly. The codes may not be read if you go through the testing just after the battery has gone dead or been disconnected.

To check if they are set, turn the vehicle on without starting the engine. The malfunction indicator lamp will come on for several seconds. If it goes off, the readiness codes are set. If it blinks five times, the readiness codes are not set.

If you are required to have your vehicle tested before the readiness codes are set, prepare the vehicle for retesting by doing the following:

1. Fill the gas tank to approximately 3/4 full.
2. Park the vehicle and leave the engine off for 6 hours or more.
3. Make sure the ambient temperature is between 40°F and 95°F (4°C and 35°C).
4. Start the engine without touching the accelerator pedal and let it idle for 20 seconds.
5. Keep the vehicle in Park (P) or Neutral for manual transmission. Increase the engine speed to 2,000 rpm and hold it there for about 3 minutes.
6. Let the engine idle with your foot off the accelerator for 20 seconds.
7. Select a nearby, lightly traveled major highway where you can maintain a speed of 50 to 60 mph (80 to 97 km/h) for at least 20 minutes. Drive on the highway with the vehicle in Drive (D) or 5th gear. Do not use cruise control. When traffic allows, drive for 90 seconds without using the accelerator pedal. (vehicle speed may vary slightly; this is okay). If you cannot do this for a continuous 90 seconds because of traffic conditions, drive for at least 30 seconds, then repeat two more times (for a total of 90 seconds).
8. Drive in city or suburban traffic for at least 10 minutes. When traffic conditions allow, let the vehicle coast for several seconds without using the accelerator pedal or the brake pedal.
9. Park the vehicle and leave the engine off for 30 minutes.

The readiness codes are erased when the battery is disconnected and set again only after several days of driving under a variety of conditions.

If a testing facility determines that the readiness codes are not set, you may be requested to return at a later date to complete the test, or see your dealer.

SPECIFICATIONS

1.5-liter models

Vehicle

Model	Honda Accord Sedan	
No. of Passengers:		
Front	2	
Rear	3	
Total	5	
Weights:		
Gross Vehicle Weight Rating	U.S.:	4,299 lbs (1,950 kg) <sup>*1</sup>
	Canada:	4,475 lbs (2,030 kg) <sup>*2</sup>
		1,950 kg <sup>*1</sup>
		2,030 kg <sup>*2</sup>
Gross Axle Weight Rating (Front)	U.S.:	2,359 lbs (1,070 kg) <sup>*3</sup>
		2,403 lbs (1,090 kg) <sup>*4</sup>
	Canada:	1,070 kg <sup>*3</sup>
		1,090 kg <sup>*4</sup>
Gross Axle Weight Rating (Rear)	U.S.:	2,116 lbs (960 kg) <sup>*3</sup>
		2,094 lbs (950 kg) <sup>*4</sup>
	Canada:	960 kg <sup>*3</sup>
		950 kg <sup>*4</sup>

Air Conditioning:

Refrigerant Type	HFO-1234yf (R-1234yf)
Charge Quantity	13.9 – 15.7 oz (395 – 445 g)
Lubricant Type	ND-OIL 14
Quantity	5.6 – 6.5 cu-in (92 – 107 cm <sup>3</sup> )

\*1: Models with 225/50R17

\*2: Models with 235/40R19

\*3: Continuously variable transmission models

\*4: Manual transmission models

Engine and Fuel

Engine	
Displacement	91.26 cu-in (1,496 cm <sup>3</sup> )
Spark Plugs	NGK DILKAR8P8SY
Fuel	
Fuel Type:	Unleaded gasoline, Pump octane number of 87 or higher
Fuel Tank Capacity	14.8 US gal (56 L)

Tires

Regular	Size	225/50R17 94V <sup>*1</sup>
		235/40R19 96V <sup>*2</sup>
	Pressure psi (kPa [kgf/cm <sup>2</sup> ])	
	Front	32 (220 [2.2]) <sup>*1</sup>
Rear		33 (225 [2.25]) <sup>*2</sup>
		32 (220 [2.2]) <sup>*1</sup>
Rear		33 (225 [2.25]) <sup>*2</sup>
		T135/90D16 102M <sup>*1</sup>
Compact Spare	Size	T135/80D17 103M <sup>*2</sup>
	Pressure psi (kPa [kgf/cm <sup>2</sup> ])	60 (420 [4.2])
Wheel Size	Regular	17 x 7 1/2J <sup>*1</sup>
		19 x 8 1/2J <sup>*2</sup>
	Compact Spare	16 x 4T <sup>*1</sup>
		17 x 4T <sup>*2</sup>

\*1: U.S. LX, EX, EX-L, EX-LN models and Canadian LX, SE, EX-L models

\*2: U.S. Sport, Touring models and Canadian Sport, Touring models

Light Bulbs

Headlights (Low Beam)	LED
Headlights (High Beam)	60W (HB3) <sup>*1</sup>
	LED <sup>*2</sup>
Fog Lights*	LED
Parking/Daytime Running Lights	LED
Front Turn Signal Lights	LED
Front Side Marker Lights	LED
Side Turn Signal Lights (on Door Mirrors)*	LED
Brake Lights	LED
Rear Turn Signal Lights	21W (Amber)
Rear Side Marker Lights	LED
Taillights	LED
Back-Up Lights	16W
High-Mount Brake Light	LED
Rear License Plate Light	LED
Interior Lights	
Map Lights	8W
Ceiling Light	8W
Ambient Lights	LED
Vanity Mirror Lights	1.4W
Center Pocket Light	LED
Door Courtesy Lights*	2CP
Door Inner Handle Lights*	LED
Trunk Light	5W
Console Compartment Light*	LED

\*1: Models with halogen high beam headlights

\*2: Models with LED high beam headlights

\*if equipped



SPECIFICATIONS

1.5-liter models (continued)

Fluids

Engine Oil

Recommended	-Genuine Honda Motor Oil 0W-20
	-API Premium-grade 0W-20 detergent oil
Capacity	Change 3.4 US qt (3.2 L)
	Change including filter 3.7 US qt (3.5 L)

Engine Coolant

Specified	Honda Long-Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	1.59 US gal (6.03 L)*1
	1.56 US gal (5.90 L) *2
	(change including the remaining 0.17 US gal (0.66 L) in the reserve tank)

\*1: Continuously variable transmission models  
\*2: Manual transmission models

Brake/Clutch\* Fluid

Specified	Honda Heavy Duty Brake Fluid DOT 3
-----------	------------------------------------

Continuously Variable Transmission Fluid\*

Specified	Honda HCF-2 Transmission Fluid
Capacity	Change 3.9 US qt (3.7 L)

Manual Transmission Fluid\*

Specified	Honda Manual Transmission Fluid (MTF)
Capacity	Change 2.0 US qt (1.9 L)

Washer Fluid

Tank Capacity	U.S.: 2.6 US qt (2.5 L)
	Canada: 4.8 US qt (4.5 L)

2.0-liter models

Vehicle

Model	Honda Accord Sedan
No. of Passengers:	
Front	2
Rear	3
Total	5
Weights:	
Gross Vehicle	U.S.: 4,475 lbs (2,030 kg)
Weight Rating	Canada: 2,030 kg
Gross Axle Weight Rating (Front)	U.S.: 2,403 lbs (1,090 kg)
	Canada: 1,090 kg
Gross Axle Weight Rating (Rear)	U.S.: 2,094 lbs (950 kg)
	Canada: 950 kg
Air Conditioning:	
Refrigerant Type	HFO-1234yf (R-1234yf)
Charge Quantity	13.9 – 15.7 oz (395 – 445 g)
Lubricant Type	ND-OIL 14
Quantity	5.6 – 6.5 cu-in (92 – 107 cm³)

Engine and Fuel Engine

Displacement	121.76 cu-in (1,996 cm³)
Spark Plugs	NGK DILKAR8P85Y

Fuel

Fuel:	Unleaded gasoline, Pump octane number of 87 or higher
Type	
Fuel Tank Capacity	14.8 US gal (56 L)

Tires

Regular	Size	225/50R17 94V*1
		235/40R19 96V*2
	Pressure	
	psi (kPa [kgf/cm²])	32 (220 [2.2])*1
Front		33 (225 [2.25])*2
Rear		32 (220 [2.2])*1
		33 (225 [2.25])*2
Compact Spare	Size	T135/80D17 103M
Spare	Pressure	
	psi (kPa [kgf/cm²])	60 (420 [4.2])
Wheel Size	Regular	17 x 7 1/2J*1
		19 x 8 1/2J*2
	Compact Spare	17 x 4T

\*1: U.S. EX-L, EX-LN models

\*2: U.S. Sport, Touring models and Canadian Sport, Touring models

SPECIFICATIONS

Fluids

Engine Oil

Recommended	-Genuine Honda Motor Oil 0W-20
	-API Premium-grade 0W-20 detergent oil
Capacity	Change 4.6 US qt (4.4 L)
	Change including filter 5.0 US qt (4.8 L)

Engine Coolant

Specified	Honda Long-Life Antifreeze/Coolant Type2
Ratio	50/50 with distilled water
Capacity	1.34 US gal (5.06 L)
	(change including the remaining 0.17 US gal (0.66 L) in the reserve tank)

Brake/Clutch\* Fluid

Specified	Honda Heavy Duty Brake Fluid DOT 3
-----------	------------------------------------

Automatic Transmission Fluid\*

Specified	Honda Automatic Transmission Fluid ATF-Type 2.0
Capacity	Change 4.5 US qt (4.3 L)

Manual Transmission Fluid\*

Specified	Honda Manual Transmission Fluid (MTF)
Capacity	Change 2.27 US qt (2.15 L)

Washer Fluid

Tank Capacity	U.S.: 2.6 US qt (2.5 L)
	Canada: 4.8 US qt (4.5 L)

Light Bulbs

Headlights (Low Beam)	LED
Headlights (High Beam)	60W (HB3)*1
	LED*2
Fog Lights	LED
Parking/Daytime Running Lights	LED
Front Turn Signal Lights	LED
Front Side Marker Lights	LED
Side Turn Signal Lights (on Door Mirrors)	LED
Brake Lights	LED
Rear Turn Signal Lights	21W (Amber)
Rear Side Marker Lights	LED
Taillights	LED
Back-Up Lights	16W
High-Mount Brake Light	LED
Rear License Plate Light	LED
Interior Lights	
Map Lights	8W
Ceiling Light	8W
Ambient Lights	LED
Vanity Mirror Lights	1.4W
Center Pocket Light	LED
Door Courtesy Lights*	2CP
Door Inner Handle Lights*	LED
Trunk Light	5W
Console Compartment Light*	LED

\*1: Models with halogen headlights

\*2: Models with LED headlights

## CUSTOMER INFORMATION

Learn about information specific to you as a Honda customer and how to get help.

### Frequently Asked Questions/Troubleshooting

Below are some frequently asked questions and troubleshooting items that you may have about the vehicle.

**Q:** *How do I set the vehicle clock?*

**A:** For vehicles without navigation, see p. 46. For vehicles with navigation, the time is automatically set using GPS signals.

**Q:** *Why doesn't the vehicle start when I press the ENGINE START/STOP button\*?*

**A:** The brake pedal (and/or clutch pedal\*) must be pressed to start the engine.

**Q:** *What is the AUTO setting on my headlight lever?*

**A:** When in the AUTO position, the vehicle's exterior lights will automatically turn on or off depending on the ambient lighting.

**Q:** *Why won't the driver's door unlock when I grab the door handle, even though the keyless access remote\* is within range?*

**A:** If you pull the handle too quickly, the system may not have time to confirm the door is unlocked. Wait to hear a beep to confirm the door is unlocked. If you are wearing gloves, the system may be slow to respond.

**Q:** *After my battery was disconnected or went dead, the audio system is asking for a code. Where do I find this?*

**A:** In most cases, you do not need to enter a code. Turn on the vehicle and the audio system, and press and hold the power button until the system reactivates.

**Q:** *Why can't I operate Pandora\* through the audio system?*

**A:** Audio may be streaming through *Bluetooth* Audio. Make sure Pandora mode is selected and the phone cable is properly connected to the USB adapter cable (if using). Some phones may prompt you to "Allow" a connection.

*\*if equipped*

**Q:** *Is my phone compatible with Bluetooth features?*

**A:** Visit [automobiles.honda.com/handsfreelink/](http://automobiles.honda.com/handsfreelink/) (U.S.) or phone (888) 528-7876 (Canada) to check phone compatibility for *Bluetooth Audio*, *Bluetooth HandsFreeLink*, and SMS text messaging.

**Q:** *The amber indicator with a tire and exclamation mark is on. What does it mean?*

**A:** Your tire pressure is low or you are driving on the spare tire. See page 124.

### Contact Us

Honda dealer personnel are trained professionals. They should be able to answer all your questions. If you encounter a problem that your dealership does not solve to your satisfaction, please discuss it with the dealership's service manager or general manager. If you are dissatisfied with the decision made by the dealership's management, contact Honda Automobile Customer Service.

#### U.S. owners

American Honda Motor Co., Inc.  
Honda Automobile Customer Service  
1919 Torrance Blvd.  
Mail Stop 100-5E-8A  
Torrance, CA 90501-2746  
Tel: (800) 999-1009

#### In Puerto Rico and the U.S. Virgin Islands

Bella International  
P.O. Box 190816  
San Juan, PR 00919-0816  
Tel: (787) 620-7546

When you call or write, please give us the following information:

- Vehicle Identification Number
- Date of purchase
- Odometer reading of your vehicle
- Your name, address, and telephone number
- A detailed description of the problem
- Name of the dealer who sold the vehicle to you

#### Canadian owners

Honda Canada, Inc.  
Customer Relations  
180 Honda Blvd.  
Markham, ON  
L6C 0H9  
Tel: (888) 946-6329  
Fax: (877) 939-0909  
e-mail: [honda\\_cr@ch.honda.com](mailto:honda_cr@ch.honda.com)

Honda Roadside Assistance

24-hour emergency road service is available to you in the United States and Canada throughout your 3-year/36,000-mile warranty term. Services include jump starting, flat tire and lockout assistance, towing, and more (limitations apply).  
Call (866) 864-5211 (U.S.) or (800) 465-7587 (Canada).

Warranty Coverages

Below is a brief summary of the warranties covering your new vehicle.

- New Vehicle Limited Warranty:** Covers your new vehicle, except for the emissions control system and accessories, against defects in materials and workmanship.
- Emissions Control Systems Defects Warranty and Emissions Performance Warranty:** Covers your vehicle’s emissions control systems. Time, mileage, and coverage are conditional.
- Seat Belt Limited Warranty:** Covers seat belts that fail to function properly.
- Rust Perforation Limited Warranty:** Covers all exterior body panels that rust through from the inside.
- Accessory Limited Warranty:** Covers Honda accessories.
- Replacement Parts Limited Warranty:** Covers all Honda replacement parts against defects in materials and workmanship.
- Replacement Battery Limited Warranty:** Provides prorated coverage for a replacement battery purchased from a Honda dealer.
- Replacement Muffler Lifetime Limited Warranty:** Covers a replacement muffler for the duration of the ownership.
- Restrictions and exclusions apply to all these warranties. See the Warranty Manual at *owners.honda.com* (U.S.) or *myhonda.ca* (Canada) for complete descriptions of each warranty, including time, mileage, and other conditional limitations.
- Your vehicle’s original tires are covered by their manufacturer. Tire warranty information can be found on the Warranty CD or at *owners.honda.com* (U.S.) or *myhonda.ca* (Canada).

EPA Contact Information

An owner may obtain further information concerning emission warranties or report violations of the terms of the emission warranties by contacting:

U.S. Environmental Protection Agency  
Office of Transportation and Air Quality  
Compliance Division,  
Light-Duty Vehicles Group  
Attn: Warranty Complaints  
2000 Traverwood Drive  
Ann Arbor, MI 48105  
Email: [complianceinfo@epa.gov](mailto:complianceinfo@epa.gov)

# VOICE COMMAND INDEX

Available on vehicles with touchscreen. Learn about the available voice commands to help you operate the vehicle. The system recognizes only those commands shown here. Press the Talk button before you say a command.

## Voice Portal Commands

When you press the Talk button, the Voice Portal screen appears. Say one of the options, and follow the system prompts.

- Phone call
- Music search
- Audio
- Climate control
- Navigation\*
- Voice setting
- Voice help
- What is today's date?
- What time is it?

## Navigation Commands\*

The system accepts these commands on most screens. You only need to press the Talk button once for navigation commands.

- View map
- Find place
- Find category
- Find intersection
- Recently found
- Go home
- Find address
- Find city
- Find saved places
- Detour
- Stop route

## Climate Control Commands

The system accepts these commands on most screens.

- Climate control on\*\*
- Climate control off\*\*
- Air conditioner on\*\*
- Air conditioner off\*\*
- Defrost on\*\*
- Defrost off\*\*
- Fan speed # (#: 1 to 7)
- Temperature # degrees (#: 57 to 87°F)
- Temperature max heat
- Temperature max cool

*\*models with navigation*

*\*\*These commands toggle the function on and off, so the command may not match your intended action.*

## Phone Commands

The system accepts these commands on most screens. Not available during use of Apple CarPlay or Android Auto.

- Call by number
- Call by name
- Call (number)
- Call (name)

## Audio Commands\*

The system accepts these commands on most screens. Audio volume levels cannot be controlled using voice commands.

### FM/AM Radio Commands

- Audio on\*\*
- Audio off\*\*
- Radio FM
- Radio AM
- Radio tune to # FM (#: frequency, e.g., 95.5)
- Radio tune to # AM (#: frequency, e.g., 1020)
- Radio FM preset # (#: 1 to 12)
- Radio AM preset # (#: 1 to 6)

### SiriusXM Radio Commands

- Radio SXM
- SXM channel # (#: 0 to 255)
- SXM channel (channel name)
- Radio SXM preset # (#: 1 to 12)

### Pandora Commands (U.S. only)\*\*\*

- Pandora
- Pandora play

### Disc (CD) Commands

- Disc
- Disc play
- Disc play track # (#: 1 to 30)

### USB Commands\*\*\*

- USB
- USB play
- USB play track # (#: 1 to 30)

### iPod Commands\*\*\*

- iPod
- iPod play
- iPod play track # (#: 1-30)

### Bluetooth Audio Commands

- *Bluetooth* audio play (may not work on all phones)
- AUX Commands
- Aux audio play

## Song By Voice Commands\*\*\*

Available for tracks stored on an iPod or USB device.

- Music search
- List album (specify album)
- List artist (specify artist)
- List composer (specify composer)
- List genre (specify genre)
- List playlist (specify playlist)
- Play album (specify album)
- Play artist (specify artist)
- Play composer (specify composer)
- Play genre (specify genre)
- Play playlist (specify playlist)
- Play song (specify song)
- What/Who am I listening to?
- Who is this?
- What's playing?
- Who's playing?
- What album is this?

*\*models with navigation*

*\*\*These commands toggle the function on and off, so the command may not match your intended action.*

*\*\*\*Not available during use of Apple CarPlay.*

## INDEX

ABS.....	24	Brake system.....	23
ACC.....	24, 26	Braking.....	101
Adaptive Cruise Control (ACC).....	106	Brightness Control.....	33
Address.....	86	Call History.....	80
Advanced Airbags.....	9	Carbon Monoxide Gas.....	5
Airbags.....	8	Changing a Flat Tire.....	127
Airbag Care.....	14	Changing Settings.....	47
Airbag System Indicators.....	11	Charging system.....	23
Android Auto.....	60	Child Safety.....	14
Anti-Lock Brake System (ABS).....	101	Child Seat.....	17
Apple CarPlay.....	58	Adding Security with a Tether.....	20
Apps.....		LATCH-Compatible Child Seat.....	17
Add Apps.....	55	Climate Control System.....	44
Hide Apps.....	56	Collision Mitigation Braking System™.....	113
Managing Apps.....	55	Compact Disc (CD) Commands.....	159
Move Apps.....	55	Condition Indicators.....	25
Audio Commands.....	159	Contact Us.....	155
Audio operation.....		Continuously Variable	
Android Auto.....	60	Transmission (CVT).....	97, 98
Apple CarPlay.....	58	CUSTOMER Information.....	154
HondaLink.....	56	Customized Features.....	47
System Updates.....	62	Dashboard and Other Controls.....	2, 3
Audio Operation.....	48	Destination.....	86
Bluetooth® Audio.....	71, 72	Door Operation.....	30
FM/AM Radio.....	64	Doors.....	29
iPod®.....	67, 68	DOT Tire Quality Grading.....	148
Pandora®.....	73	Driver Information Interface (DII).....	26, 27
Sound.....	52	Driving.....	90
Touchscreen Operation.....	54	Adaptive Cruise Control (ACC).....	106
USB Flash Drive.....	69	Braking.....	101
Auto High-Beam System.....	26, 34	Collision Mitigation Braking System.....	113
Automatic Brake Hold.....	103	Continuously Variable	
Automatic Intermittent Wipers.....	36	Transmission (CVT).....	97, 98
AUX Commands.....	159	Eco Assist System.....	104
Battery.....	141	ENGINE START/STOP button.....	96
Bluetooth® Audio.....	71, 72	Forward Collision	
Bluetooth® Audio Commands.....	159	Warning (FCW).....	109, 111, 113
Bluetooth Handsfreelink (HFL)		Lane Keeping Assist System (LKAS).....	109
Making a Call.....	81	LaneWatch™.....	110
Pairing a Phone.....	78	Maximum Load Limit.....	91
SMS Text Messaging.....	82	Multi-View Rear Camera.....	116
Bluetooth® Handsfreelink® (HFL).....	74	Paddle Shifters.....	99
Call History.....	80	Parking Sensor System.....	115
HFL Controls.....	74, 75	Power Mode.....	96
Pairing a Phone.....	77	Refueling.....	118
Phonebook.....	80	Remote Engine Start.....	95
Speed Dial.....	79	Road Departure Mitigation (RDM).....	111
Brake Assist System.....	101	Shifting.....	97, 98
Brake Fluid.....	141	Towing a Trailer.....	93
Brake Hold.....	26, 103	Traffic Sign Recognition System.....	112



Turbocharger Precautions.....	95
Vehicle Stability Assist (VSA®).....	104
Wiper Blades.....	142
Driving Position Memory System.....	42
Eco Assist System.....	104
ECON Button.....	104
ECON mode.....	26
Emergency Engine Stop.....	123
Emergency Towing.....	124
Engine and Fuel.....	152
Engine Coolant.....	139
Engine Oil.....	136
ENGINE START/STOP button.....	96
Exterior Lights.....	33
Fastening a Seat Belt.....	7
Flat Tire.....	127
Fluids.....	152
FM/AM Radio.....	64
FM/AM Radio Commands.....	159
Fog lights.....	26
Foot Brake.....	101
Frequently Asked Questions.....	154
Front Door Inner Handle.....	31
Fuel Information.....	118
Fuse Locations.....	130
Garage Opener.....	42
Hazards.....	26
Headlight-Wiper Integration.....	35, 36
Heated Steering Wheel.....	46
Heated Windshield.....	45
Home Address.....	86
HomeLink® Universal Transceiver.....	42
HondaLink.....	56
HondaLink Assist.....	57
Honda Roadside Assistance.....	156
Hood.....	135
Immobilizer.....	25
Instrument Panel.....	23
Intermittent Wipers.....	36
iPod®.....	67, 68
iPod® Commands.....	159
Jump Starting.....	121
Key.....	28
Keyless Access System.....	30
Lane Keeping Assist System (LKAS).....	109
LaneWatch™.....	110
Lap/Shoulder Seat Belts.....	5
LATCH-Compatible Child Seat.....	17
Light Bulbs.....	151
Lights.....	33
LKAS.....	24, 26
Lock Tab.....	30

Low fuel.....	25
Low tire pressure.....	25
Maintenance.....	131
Battery.....	141
Brake Fluid.....	141
Engine Coolant.....	139
Engine Oil.....	136
Maintenance Minder™.....	132
Service Codes.....	133
Under the Hood.....	135
Window Washer Fluid.....	142
Making a Call.....	79, 81
Malfunction Indicators.....	23
Managing Apps.....	55
Map Legend.....	88
Master Door Lock Switch.....	31
Maximum Load Limit.....	91
Multi-View Rear Camera.....	116
Music search.....	160
Navigation.....	84
Display and Controls.....	85
Entering a Destination.....	86
Home Address.....	86
Map Legend.....	88
Place Category.....	87
Recent Places.....	87
Routing.....	88
Saved Places.....	87
Steering Wheel Controls.....	84
Street Address.....	86
System Guidance Volume.....	85
Traffic.....	89
One-Touch Turn Signal.....	37
On/Off Indicators.....	26
Opening the Hood.....	136
Overheating.....	122
Paddle Shifters.....	99
Pairing a Phone.....	77, 78
Pandora®.....	73
Pandora® Commands.....	159
Parking Brake.....	25, 102
Parking Sensor System.....	115
Passenger Airbag Off Indicator.....	12
Phone.....	77
Phonebook.....	80
Power Mode.....	96
Power Window Operation.....	32
Radio.....	65
Readiness Codes.....	150
Rear Camera.....	116
Rear Seats.....	41
Recent Places.....	87

Refueling.....	118
Remote Battery Strength.....	120
Remote Engine Start.....	95
Remote Transmitter.....	28
Reporting Safety Defects.....	22
Road Departure Mitigation (RDM).....	111
Roadside Assistance.....	156
Routing.....	88
Safety Information.....	4
Airbags.....	8
Child Safety.....	14
Reporting Safety Defects.....	22
Safety Label Locations.....	22
Safety Messages.....	4
Seat Belts.....	5
Safety Support.....	27
Saved Places.....	87
Seat belt reminder.....	25
Seat Belts.....	5
Fastening a Seat Belt.....	7
Seat Belt Inspection.....	6
Shoulder Anchor.....	8
Seat Heaters.....	45
Seats.....	37
Service Codes.....	133
Shifting.....	97, 98
Shift Lever Does Not Move.....	120
Shoulder Anchor.....	8
Side Airbags.....	9
Side Curtain Airbags.....	10
Siri Eyes Free.....	83
SiriusXM® Radio Commands.....	159
Smart Entry System.....	29
SMS Text Messaging.....	82
Song By Voice™ Commands.....	160
Sound.....	52
Specifications.....	151
Speed Dial.....	79
SRS (Supplemental Restraint) Indicator.....	11
Steering Wheel.....	41
Steering Wheel and Nearby Controls.....	1
Steering Wheel Controls.....	84
Steering Wheel, heated.....	46
Street Address.....	86
Supplemental Restraint System (SRS).....	23
System message.....	25
System Updates.....	62
Text Messaging.....	82
Tire Information.....	143
DOT Tire Quality Grading.....	148
Inflation Guidelines.....	143
Tire and Loading Information Label.....	145

Tire and Wheel Replacement.....	145
Tire Labeling.....	147
Tire Terminology.....	147
Wear Indicators.....	144
Winter Tires.....	146
Tire Pressure Monitoring System (TPMS).....	124
Touchscreen Operation.....	54
Touchscreen Sensitivity.....	86
Towing.....	124
Towing a Trailer.....	93
TPMS.....	24, 124, 126
Traffic.....	89
Traffic Sign Recognition System.....	112
Troubleshooting.....	154
Trunk.....	29
Trunk Opener.....	31
Turbocharger Precautions.....	95
Turn signals.....	26, 37
Under the Hood.....	135
USB Commands.....	159
USB Flash Drive.....	69
Vehicle.....	151
Vehicle Controls.....	28
Vehicle Stability Assist (VSA®).....	24, 104
Visual Index.....	1
Voice Command Index.....	158
Voice Portal Commands.....	158
VSA®.....	24, 26
Walk Away Auto Lock.....	30
Warranty Coverages.....	156
Wear Indicators.....	144
Wi-Fi Connection.....	61
Window.....	32
Window Washer Fluid.....	142
Windshield, heated.....	45
Winter Tires.....	146
Wiper Blades.....	142
Wiper Operation.....	35

## DISCLOSURES

### ■ California Proposition 65 Warning

**⚠ WARNING:** Operating, servicing and maintaining a passenger vehicle or offroad vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to

*[www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).*

### ■ California Perchlorate Contamination Prevention Act

The airbags, seat belt tensioners, and CR-type batteries in this vehicle may contain perchlorate materials—special handling may apply.


See *[www.dtsc.ca.gov/hazardouswaste/perchlorate/](http://www.dtsc.ca.gov/hazardouswaste/perchlorate/)* for more information.

### ■ End User License Agreement

Your vehicle comes equipped with software, which is governed by the End User License Agreement in this vehicle's Owner's Manual, and which contains a binding arbitration clause. Please refer to the End User License Agreement for the terms and conditions governing your use of the installed software, as well as the applications, services, functions, and content provided through the software. Your use of the installed software will serve as your consent to the terms and conditions of the End User License Agreement.

You may opt out of the arbitration provisions within 30 days of your initial use of the Software by sending a signed, written notice to HONDA at American Honda Motor Co., Inc. Honda Automobile Customer Services Mail Stop 100-5E-8A, 1919 Torrance Blvd. Torrance, CA 90501-2746

This page intentionally left blank.

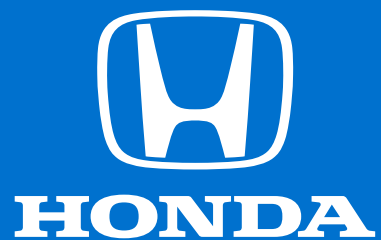

31TVAG02  
OG-07589  
00X31-TVA-G020

**owners.honda.com (U.S.)**  
**myhonda.ca (Canada)**

2018 Honda Accord Sedan Owner's Guide  
©2017 Honda Motor Co., Ltd. — All Rights Reserved

Printed in U.S.A.